 
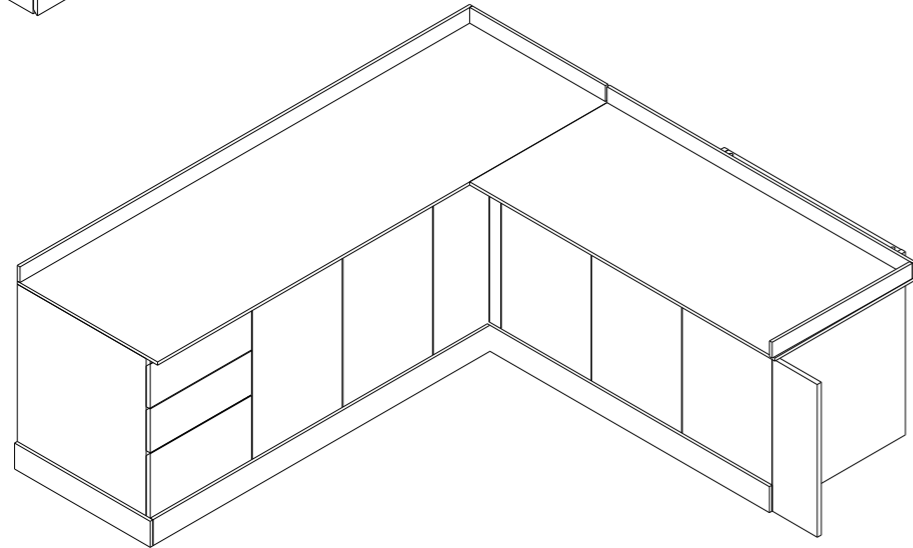 




# BB KITCHEN SET TYPE L-1

350005534


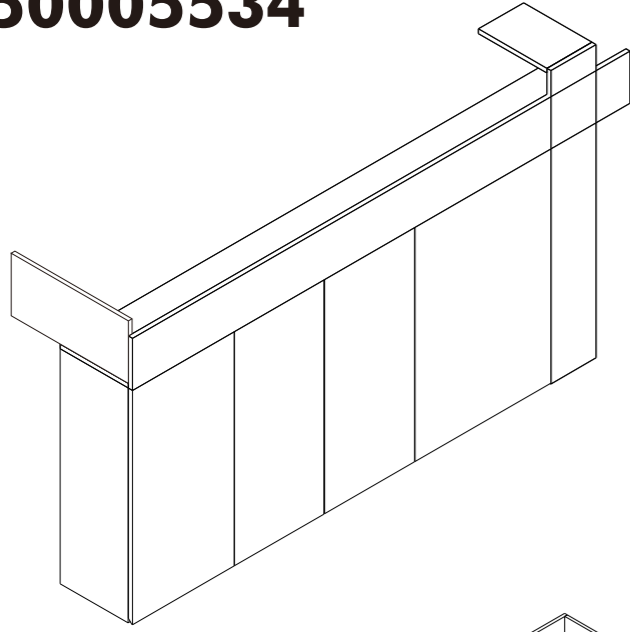


## Assembly

  -DBD453-0

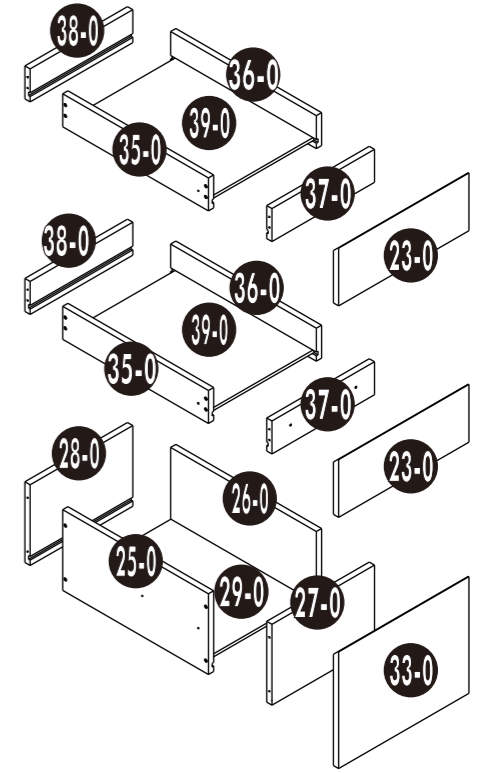
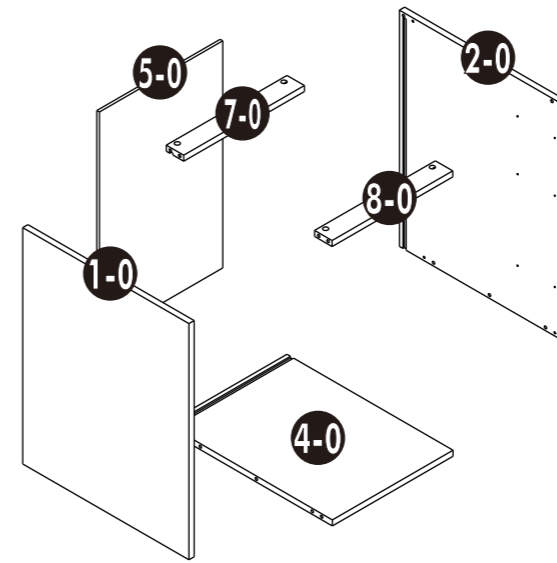


-DBS80-1

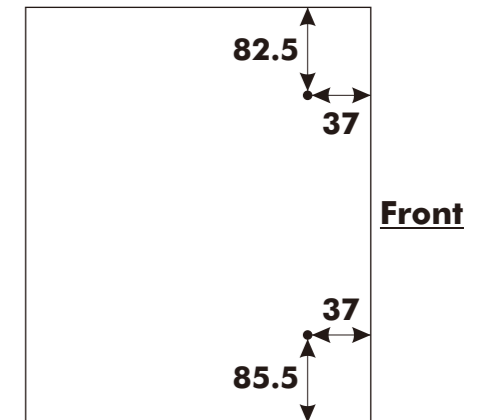 
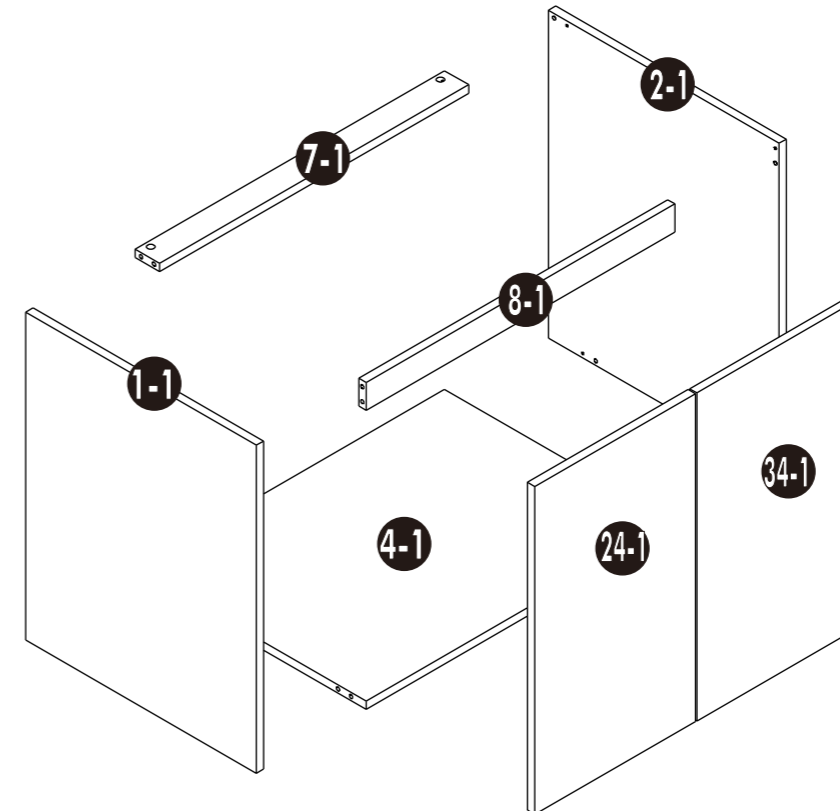 


# Assembly

 
 
-DB25R-2

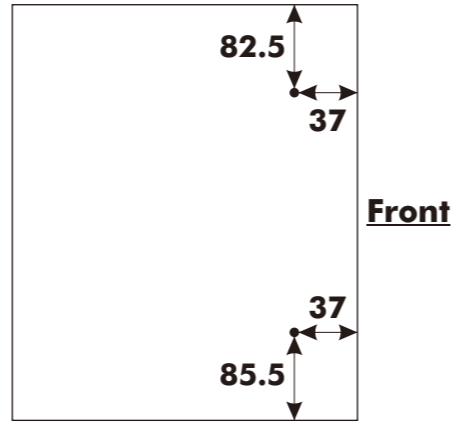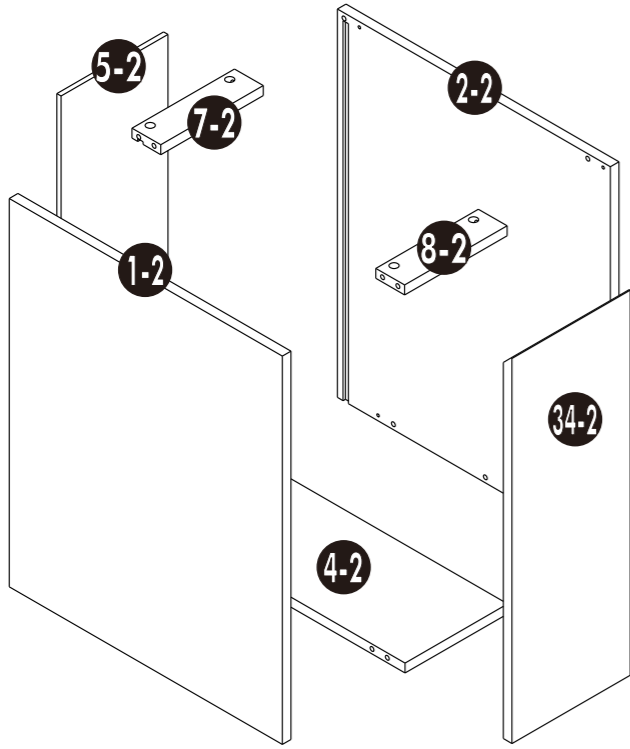



-DB80-4

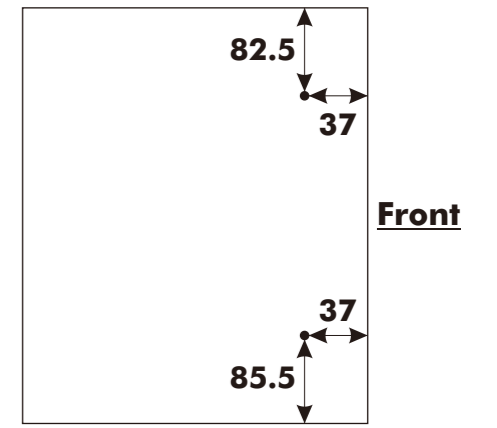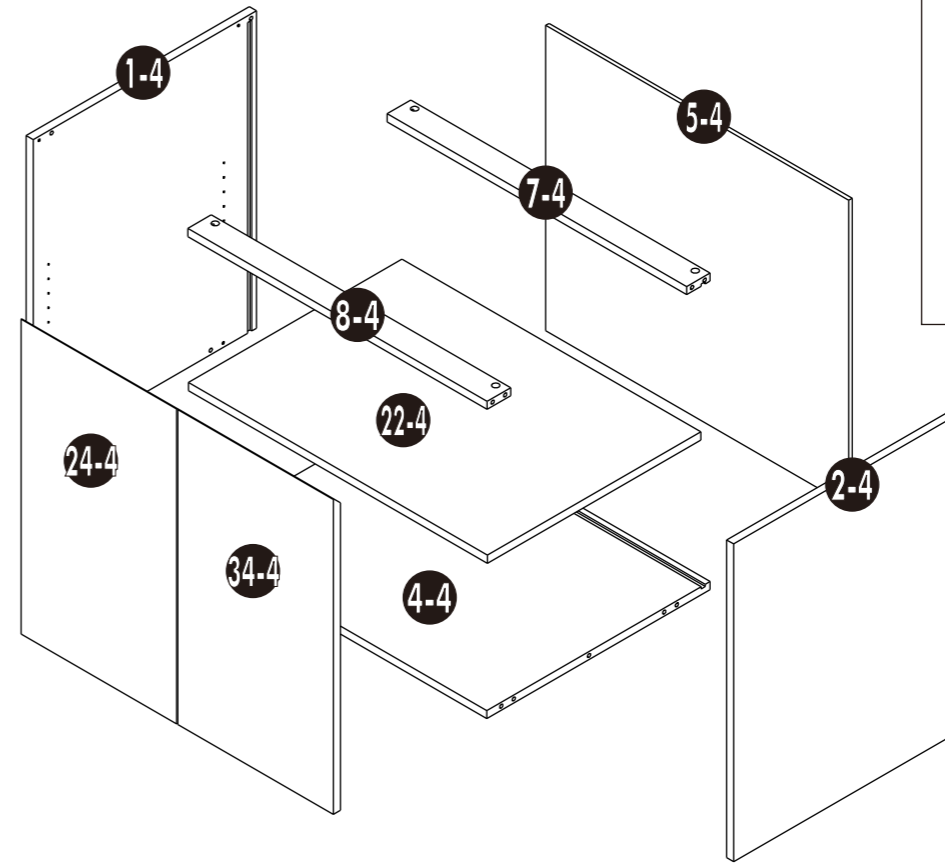  

-DBC80R-3

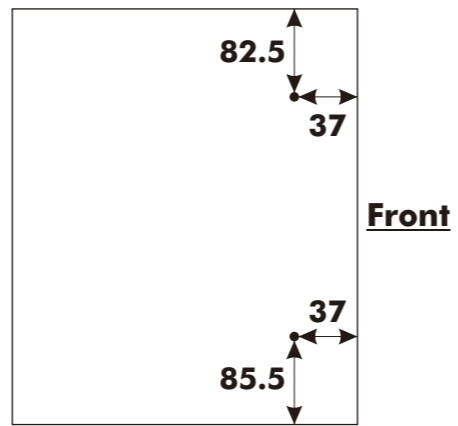 
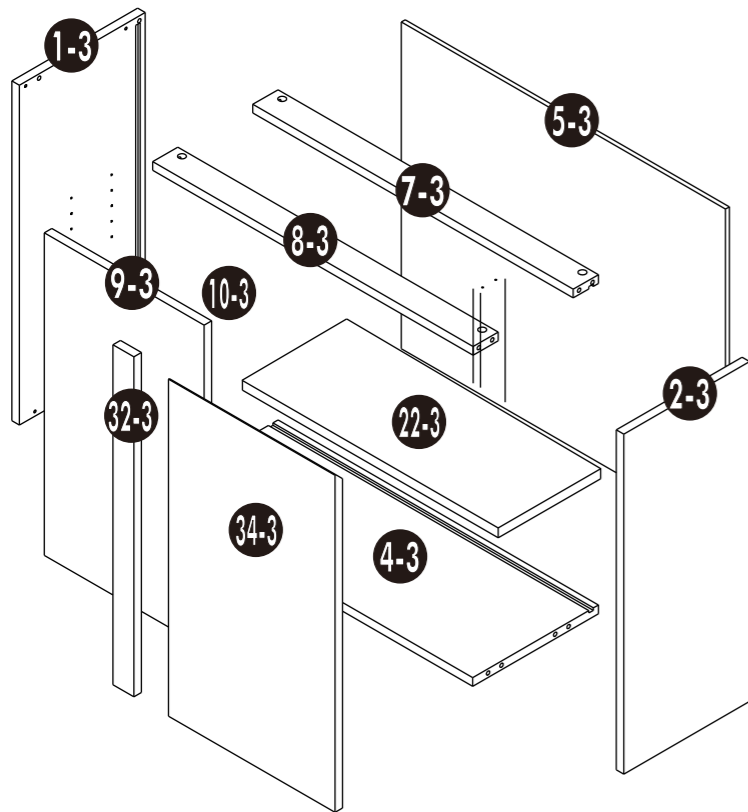 


-DL45L-5

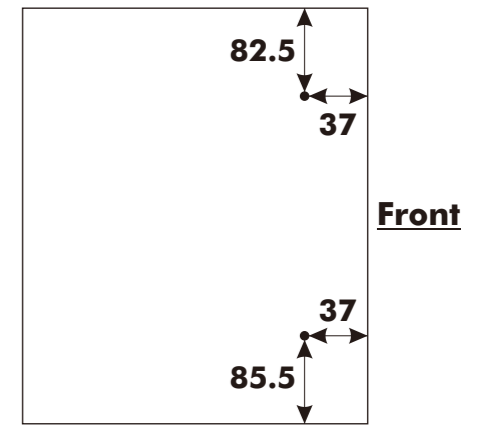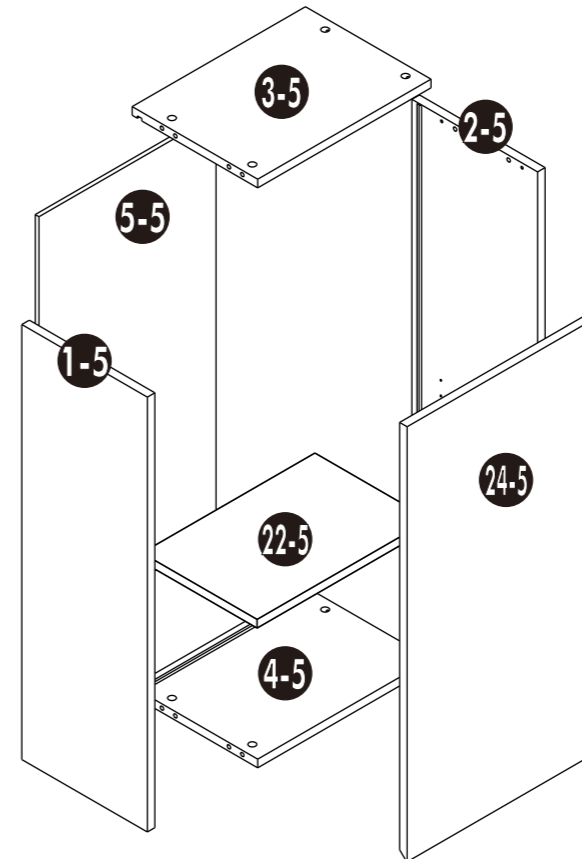  


# Assembly

 
 
-DL80-6

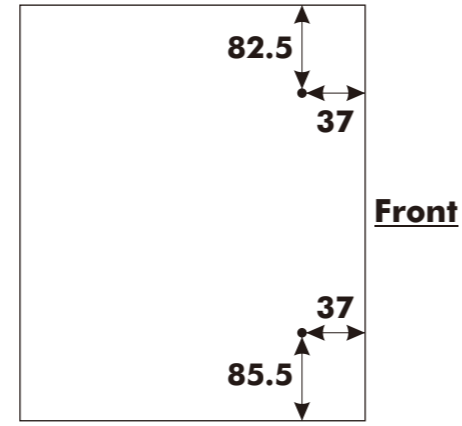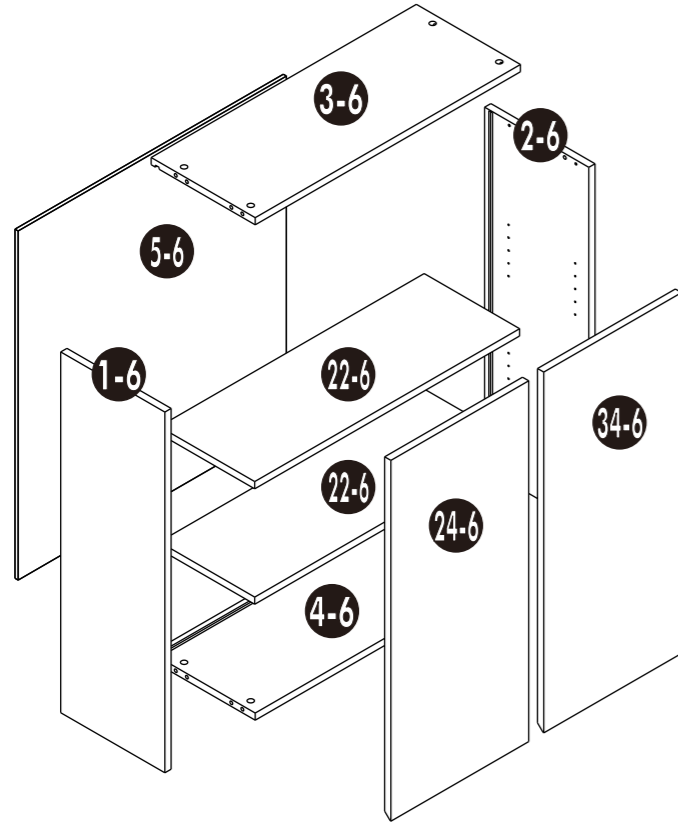


- DF-CL-8
- DF-L-9
- DF-B-10

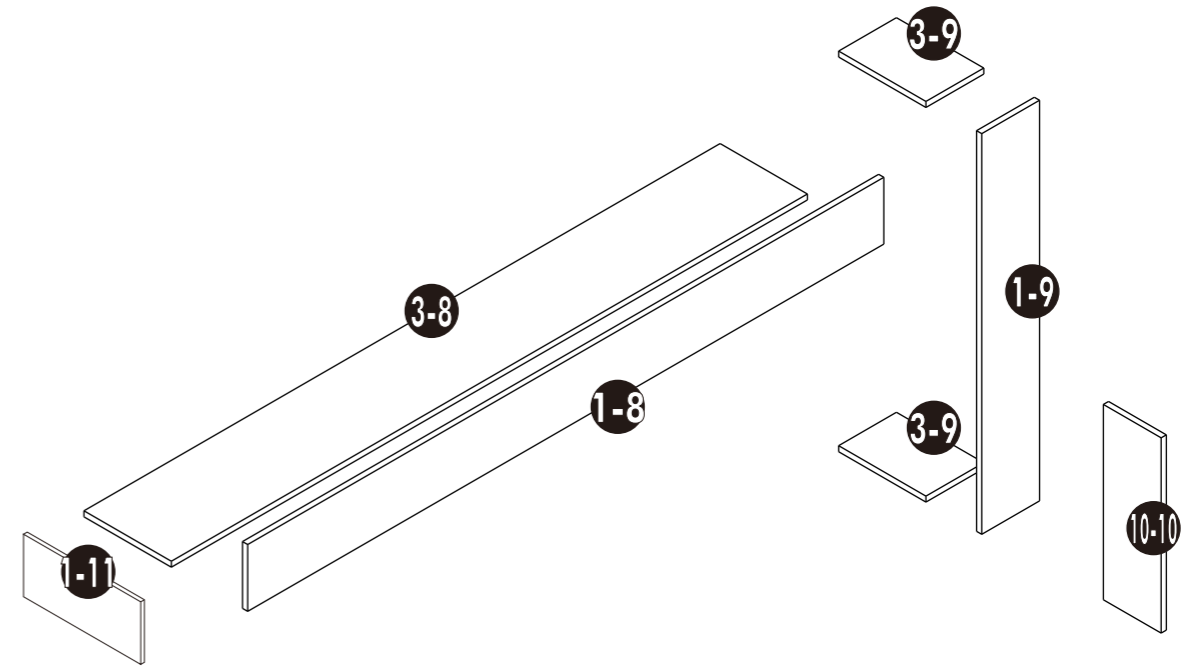 

-DL60R-7

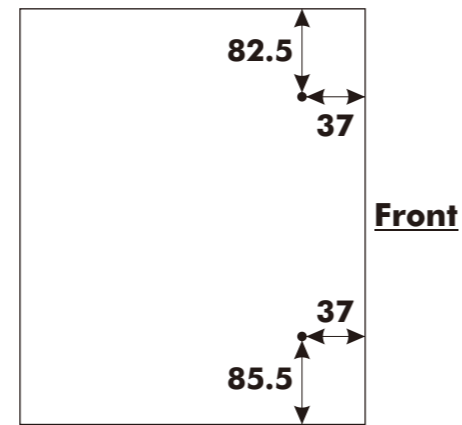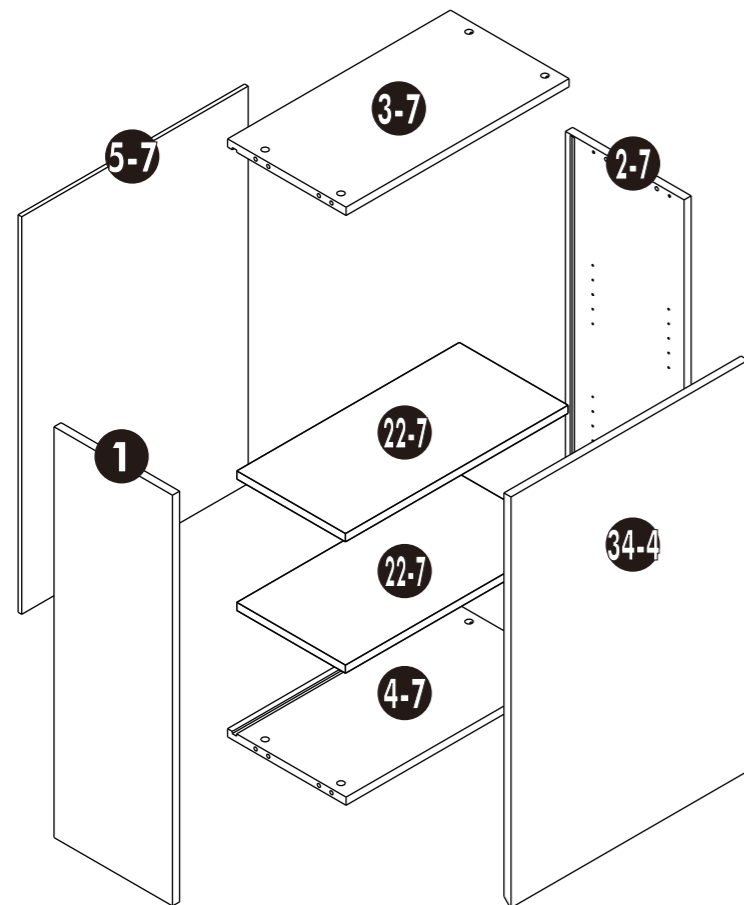  

 - TOP 2000
- TOP 1350
- UPS2000
- UPS1350
- UPS700
- UPS600

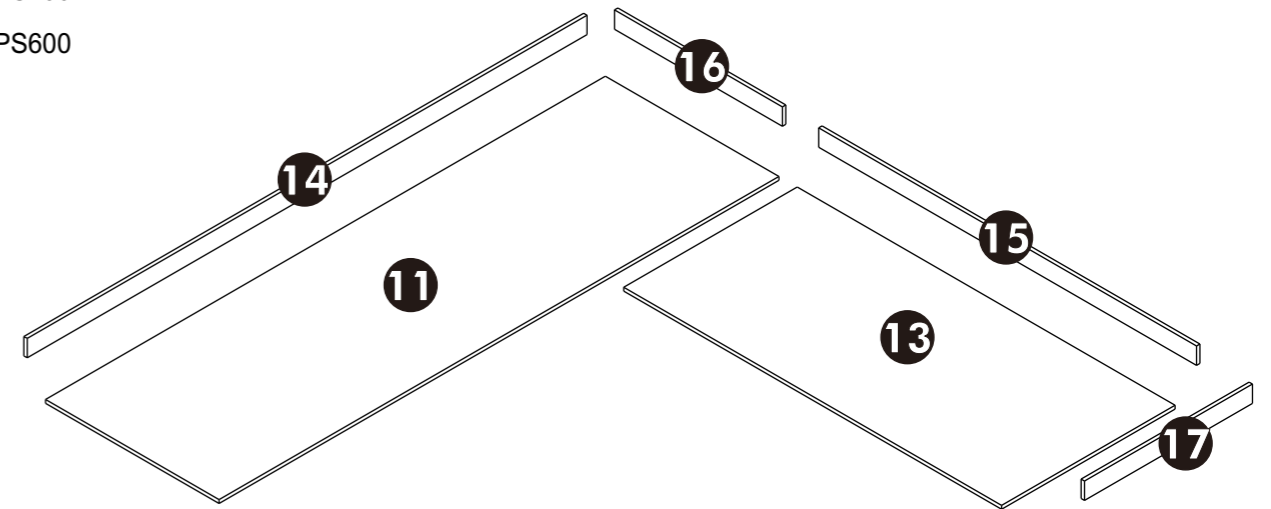

## Assembly

- PLINT 18-12
- PLINT 15-18
- PLINT 60-19
- PLINT 60-20

