 
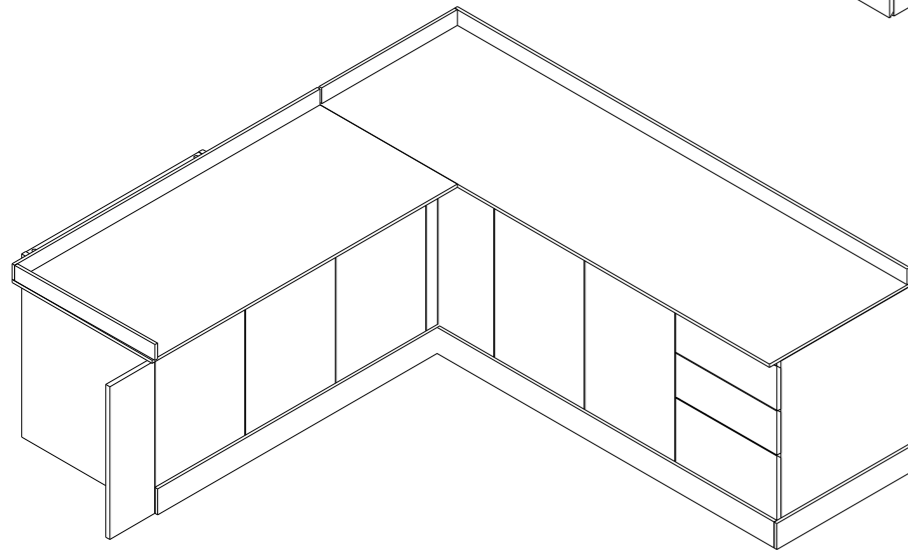 



BB KITCHEN SET TYPE L-2

350005546


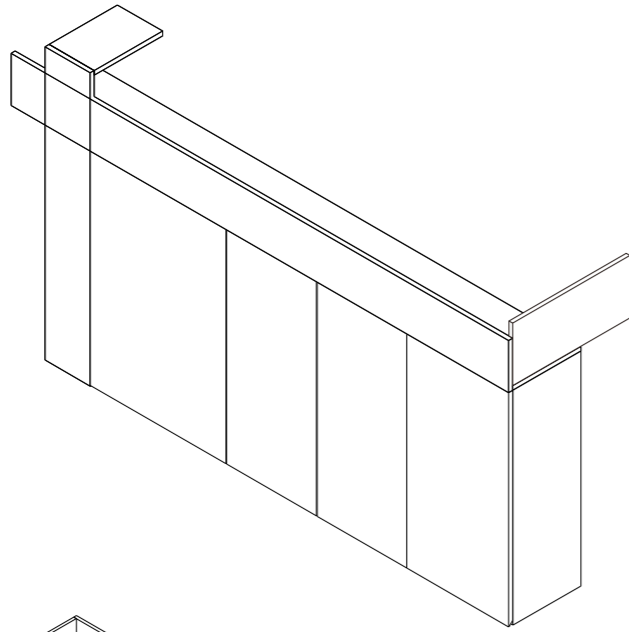


Assembly

 -DBD453-3


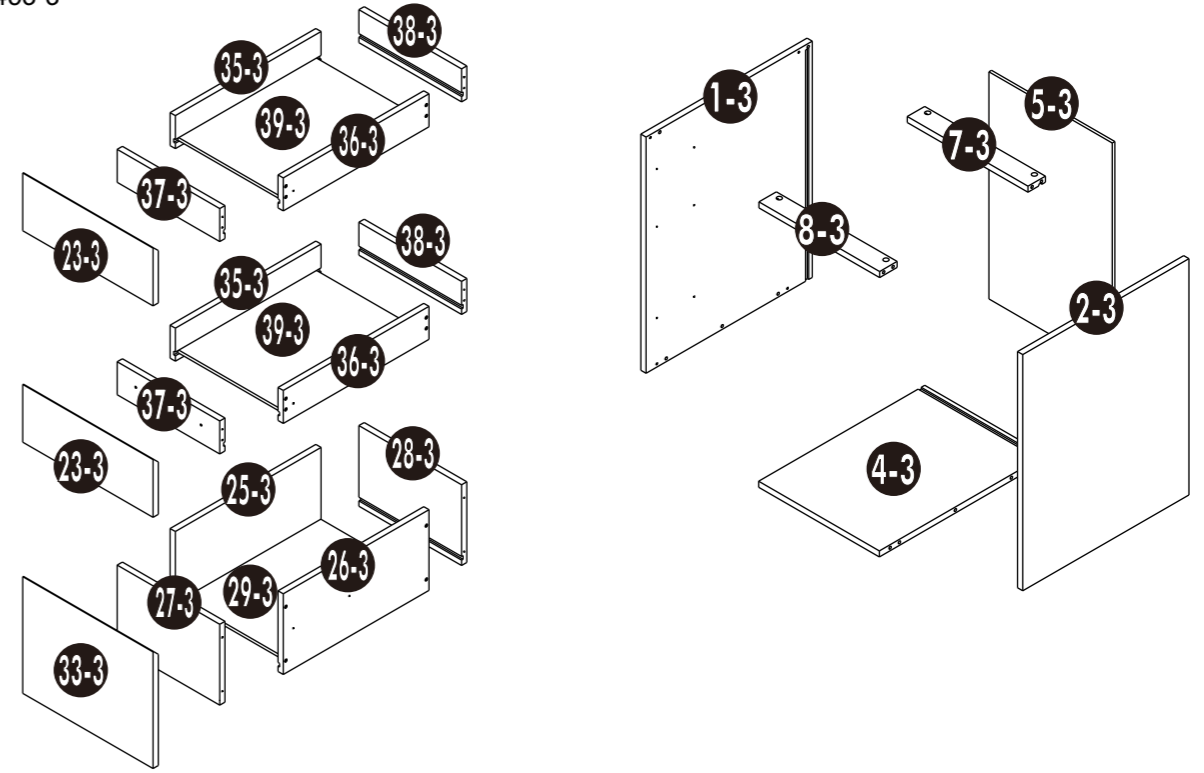


-DBS80-4

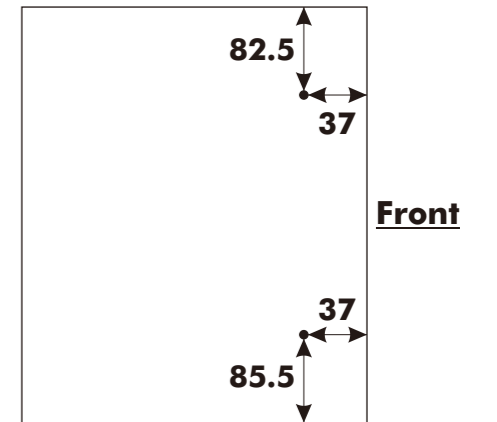 
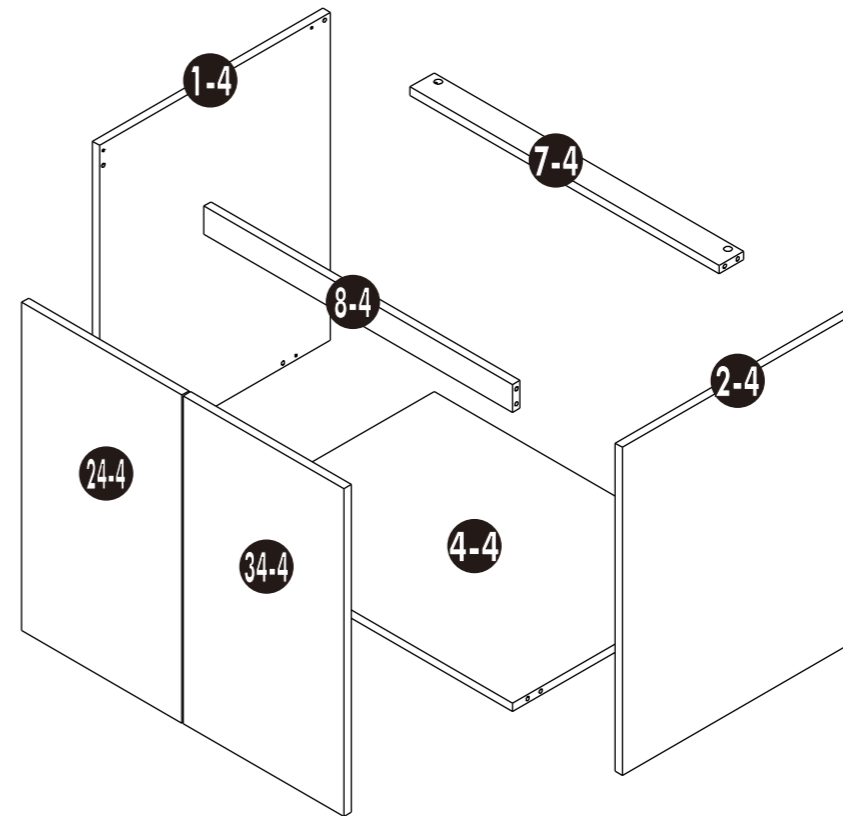 


Assembly

 
 
-DB25L-5

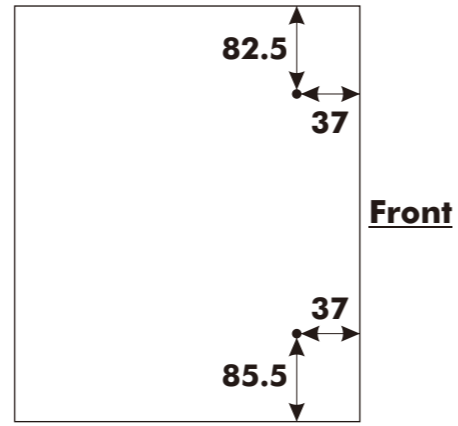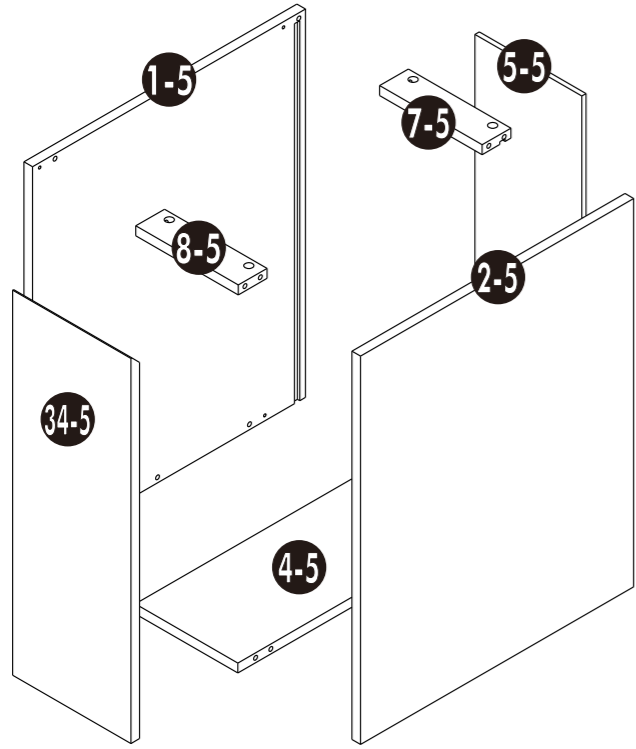



-DB80-7

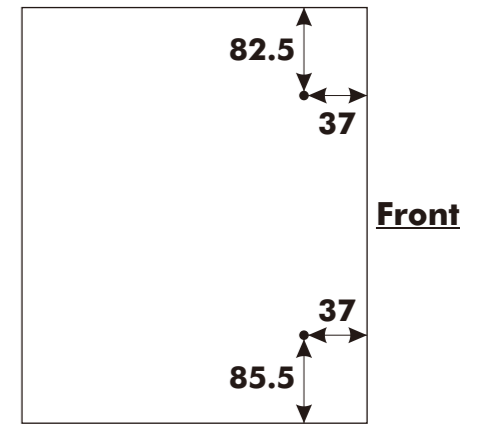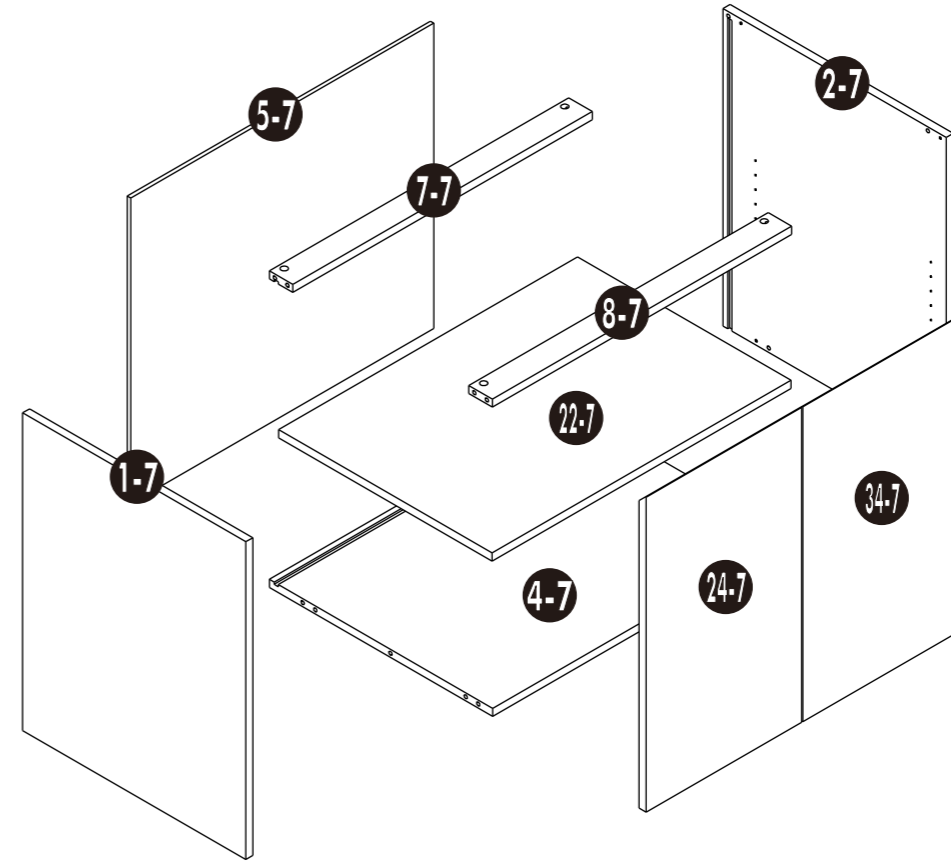  

-DBC80L-6

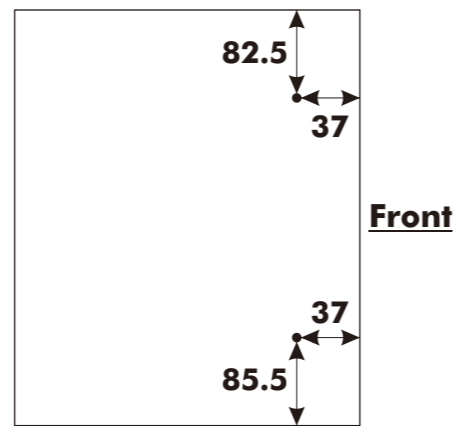 
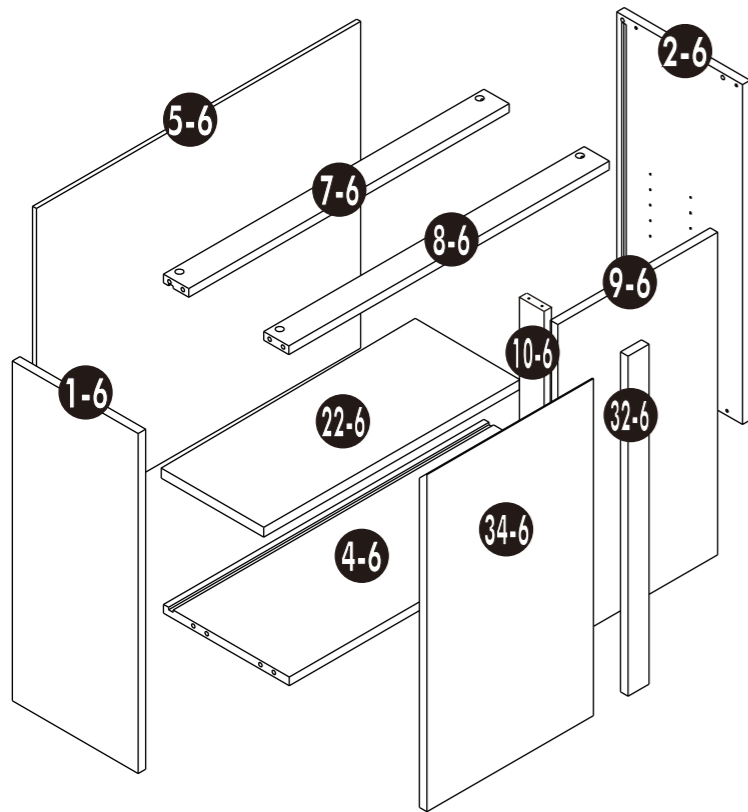 


-DL45R-0

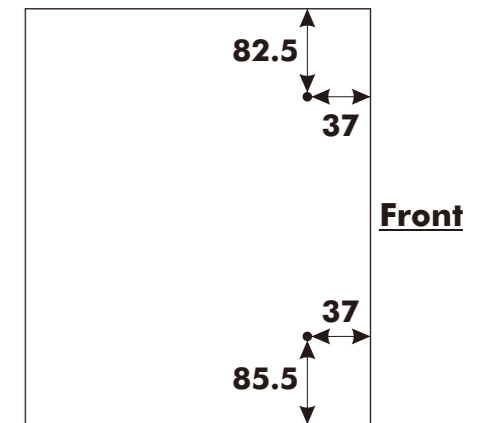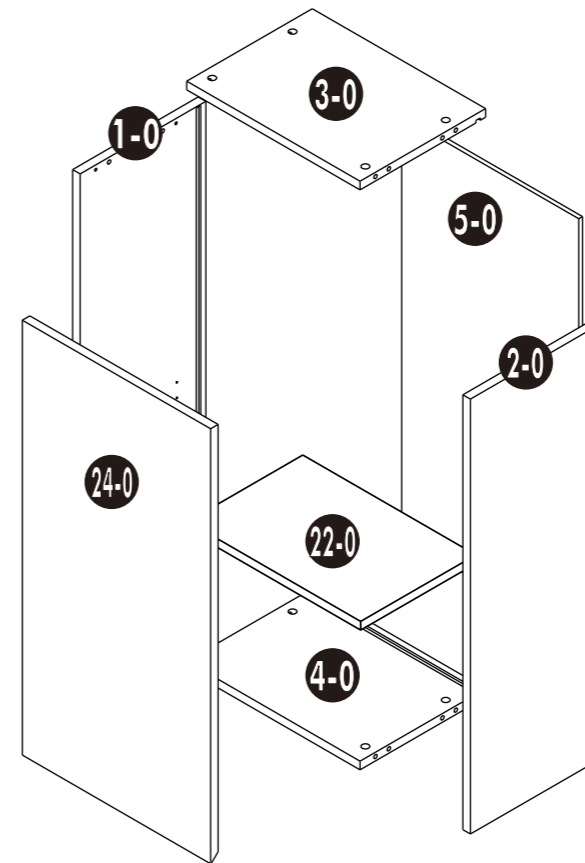  

Assembly

  
-DL80-1

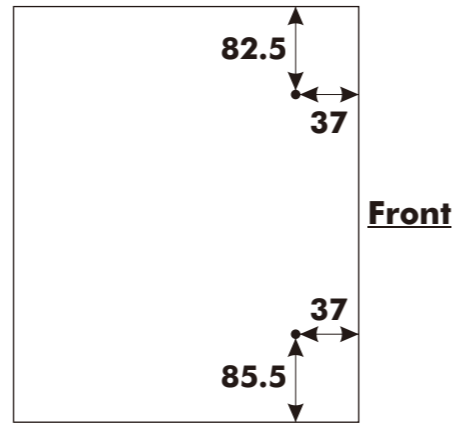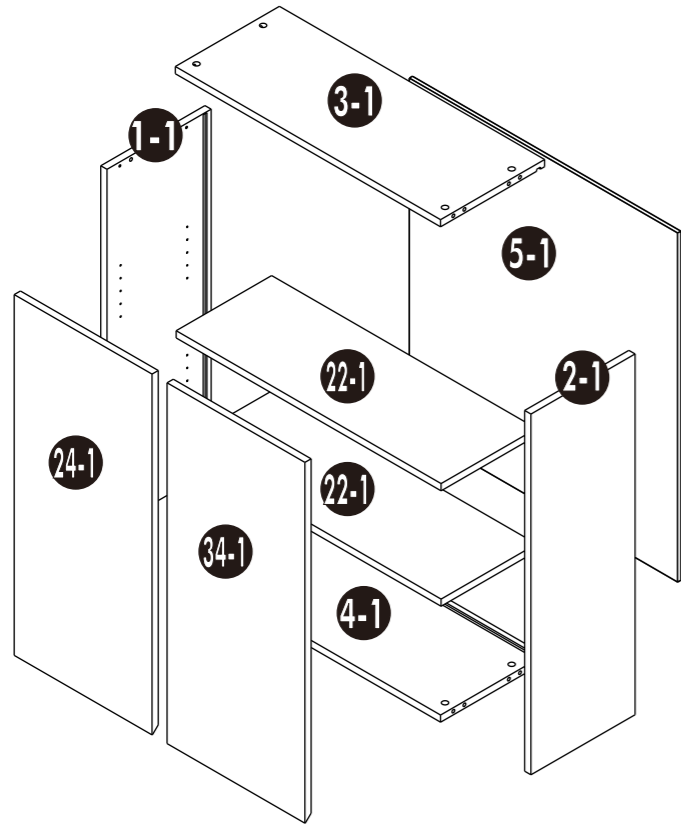



-DF-CL-18

-DF-L-19

 -DF-B-20

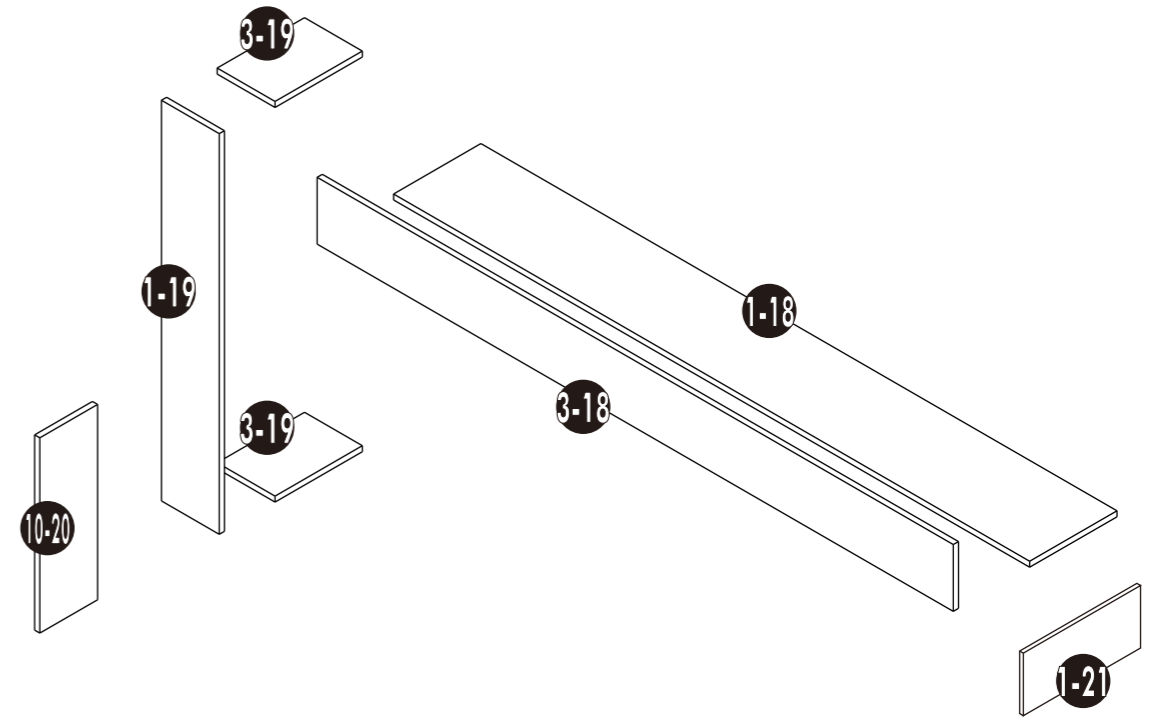

-DL60L-2

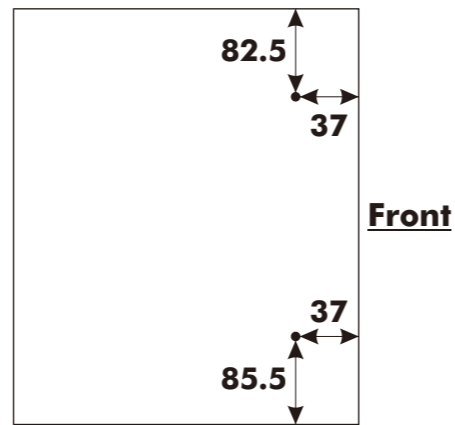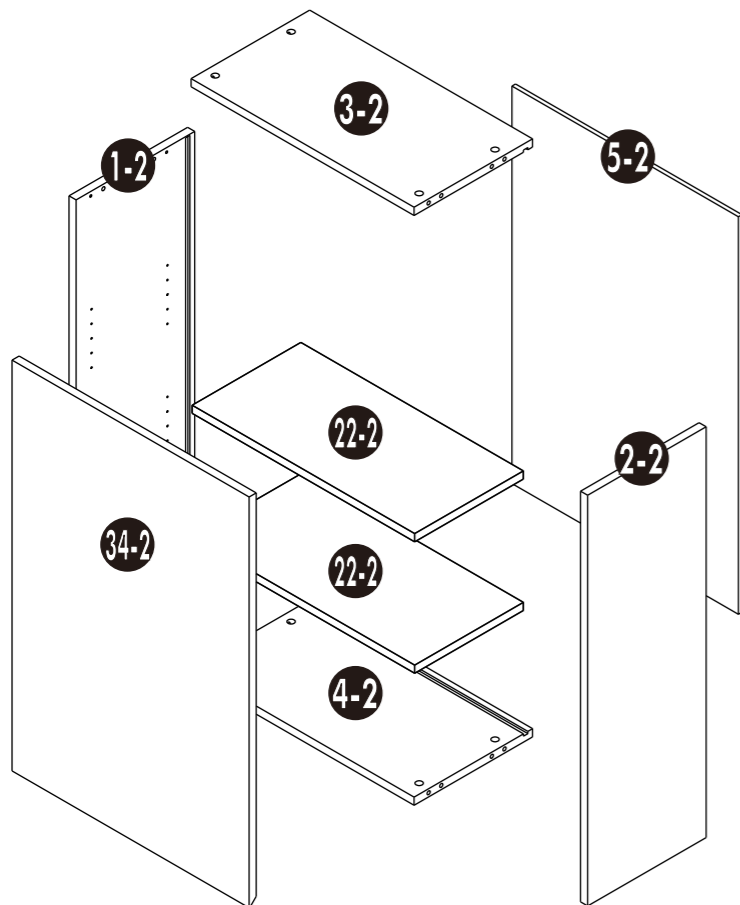  

-TOP 2000-8

 
-TOP 1350-13

-UPS2000-10

-UPS1350-11

-UPS700-11

-UPS600-13

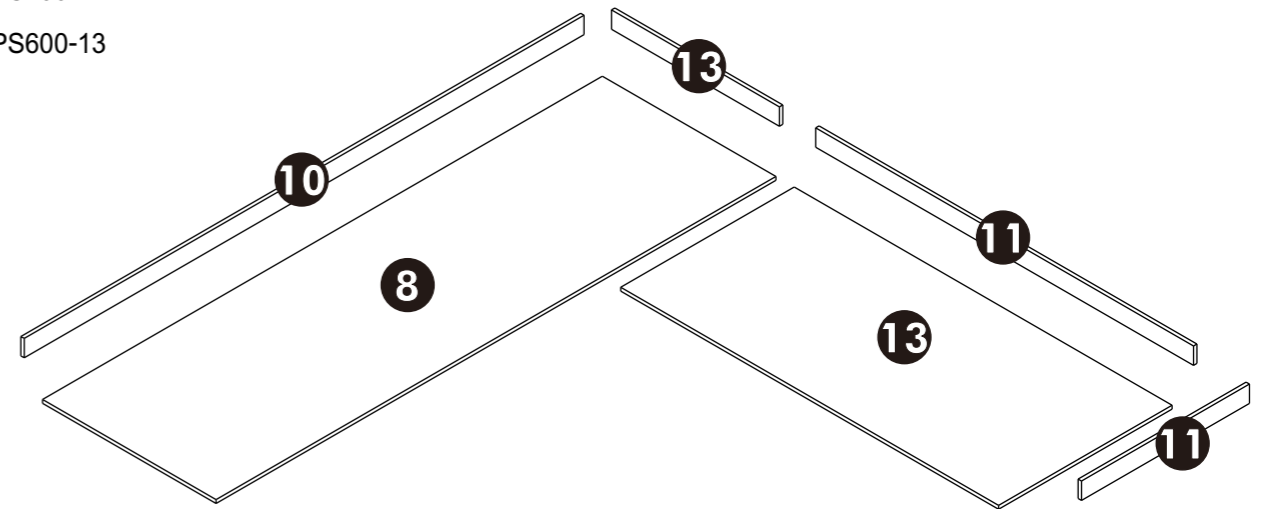

Assembly

- PLINT 18-14
- PLINT 15-15
- PLINT 60-16
- PLINT 60-17

