


STYLO

Working table 150 cm.

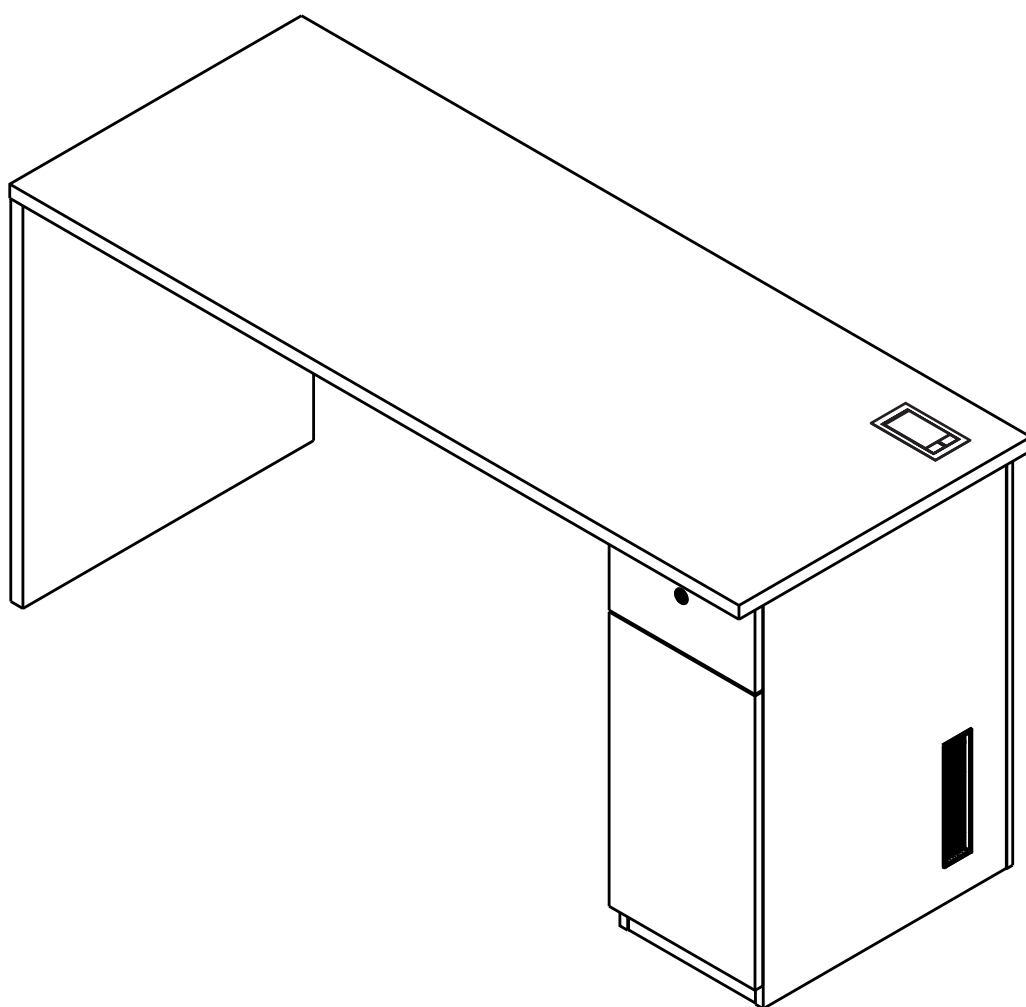

CONNECT SYSTEM

1

2

(Connecting bolts)

3

WHEN FITTING CAMS
 ENSURE STARTING POSITION IS CORRECT
 BEFORE YOU INSERT CONNECTING BOLT
 TURN CLOCKWISE UNTIL SECURE

✓

CORRECT

✗

WRONG

EQ

EQ

1 Pc.

≤ 190mm.

40mm.

40mm.

EQ

EQ

2 Pcs.

≥ 191-850mm.

100mm.

EQ

EQ

100mm.

EQ

EQ

3 Pcs.

> 850-2000mm.

100mm.

EQ

EQ

EQ

100mm.

EQ

EQ

4 Pcs.

> 2001mm.

100mm.

EQ

EQ

EQ

100mm.

M4x16mm.

i

40mm.

☹

✗


EQ

☺

✓

M4x16mm.

DOOR PANEL

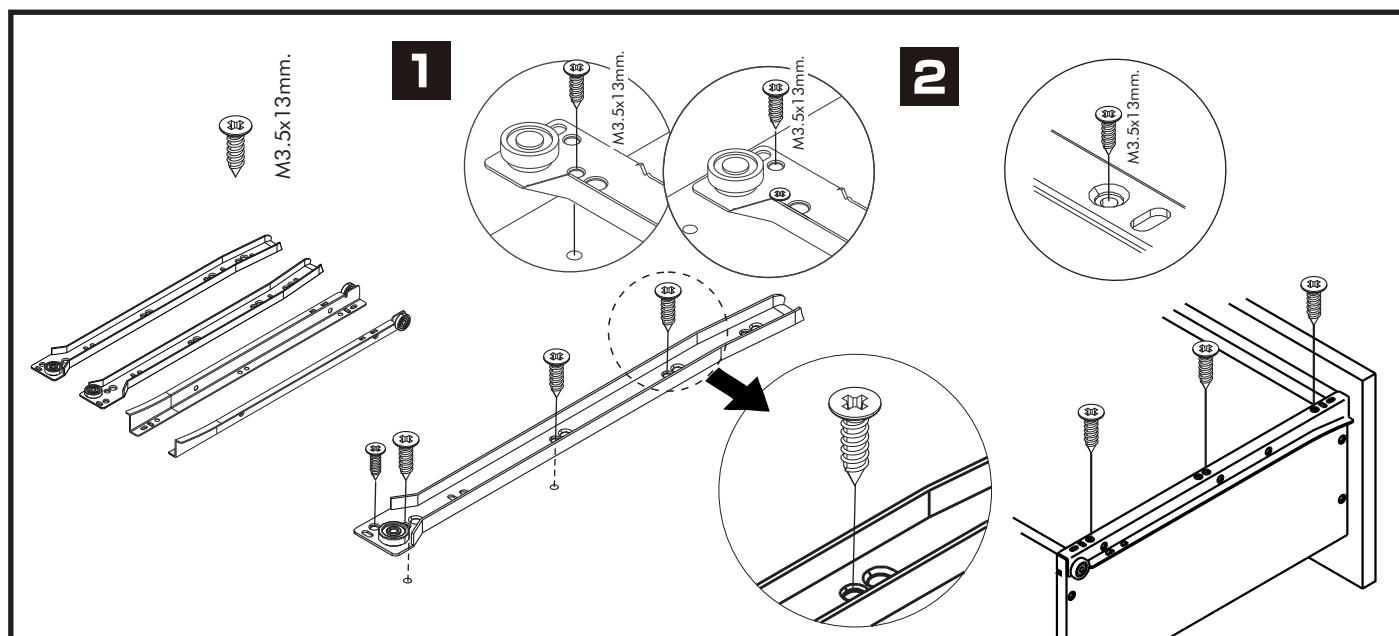


HARDWARE




#19 mm.

x 24




x 24




Ø 8x35mm.

x 24

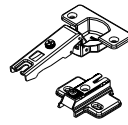

x 2




#M4x16 mm. (F)

x 16




x 1



#M3.5x20 mm. (F)

x 4




x 1




#M3.5x13 mm. (P)

x 2

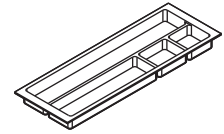


x 1



x 1SET



x 2




F+M3.5X13

x 14




#5*18

x 3



x 4



#M6x23mm.

x 2



x 4




x 7



#M4x35mm. (F)


x 4



x 2



x 1



#M4

x 1




#M4x30mm. (P)

x 4




#M4x40mm. (F)


x 10



x 6




x 2




M4x25mm.

x 4


1.

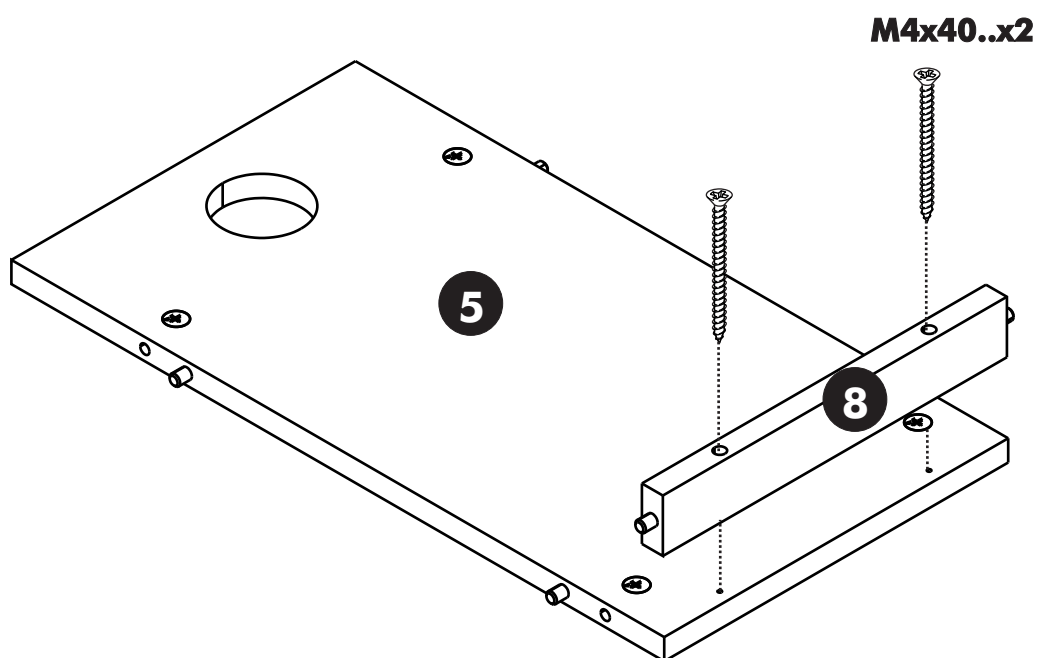


2.

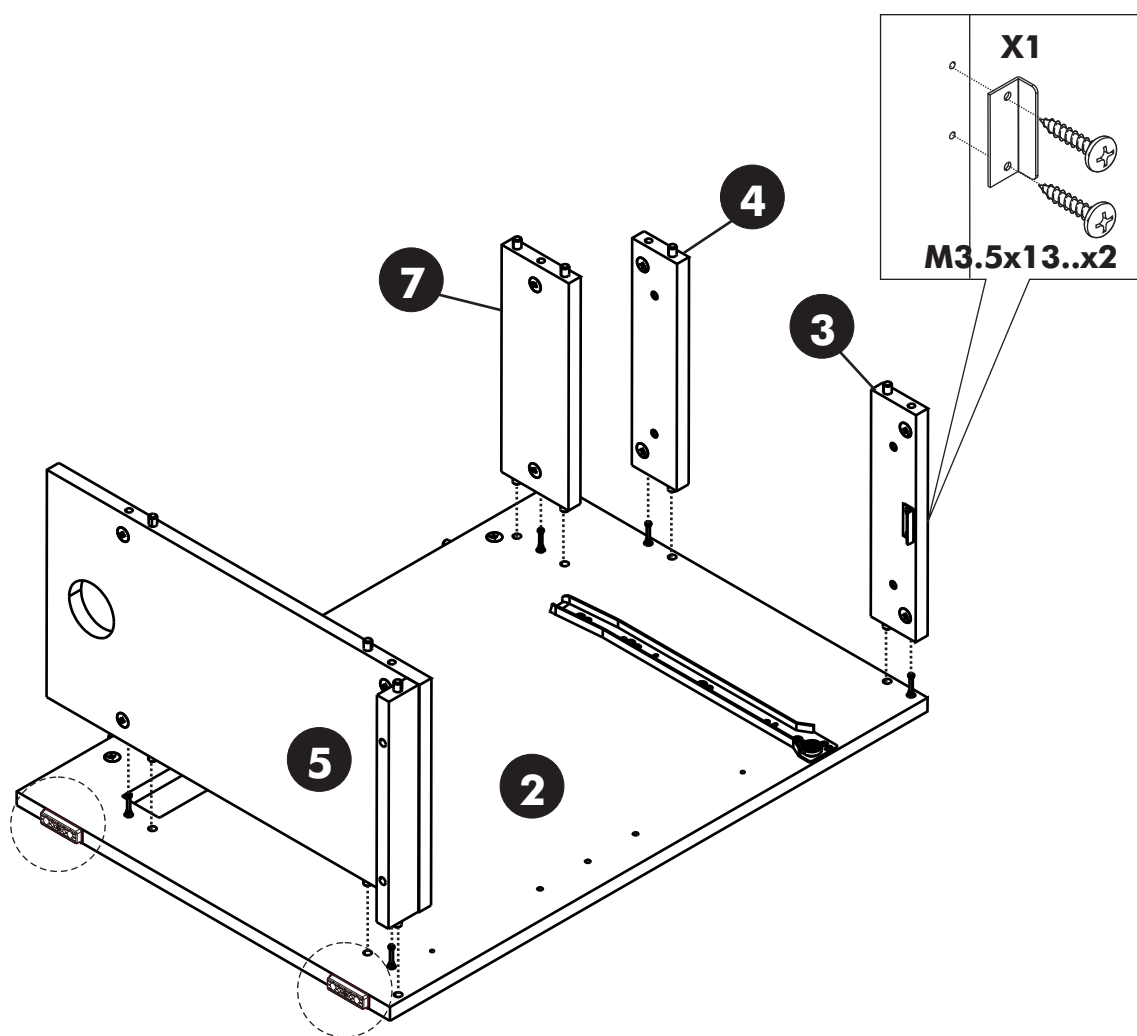


3.

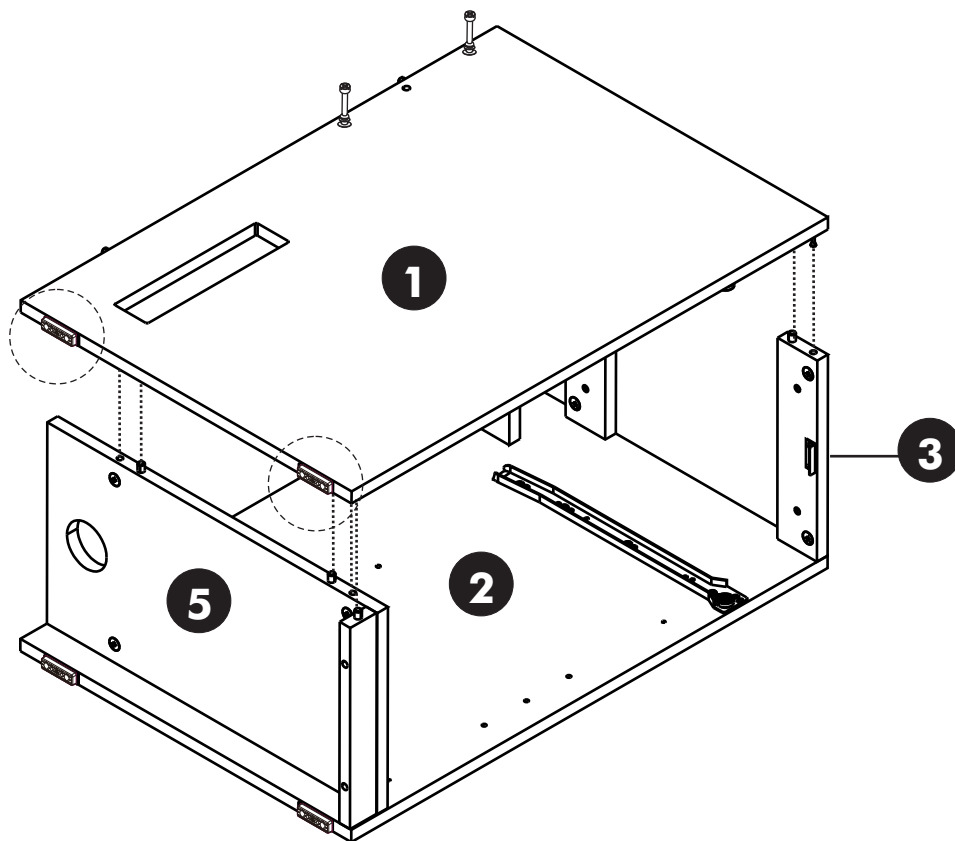


4.

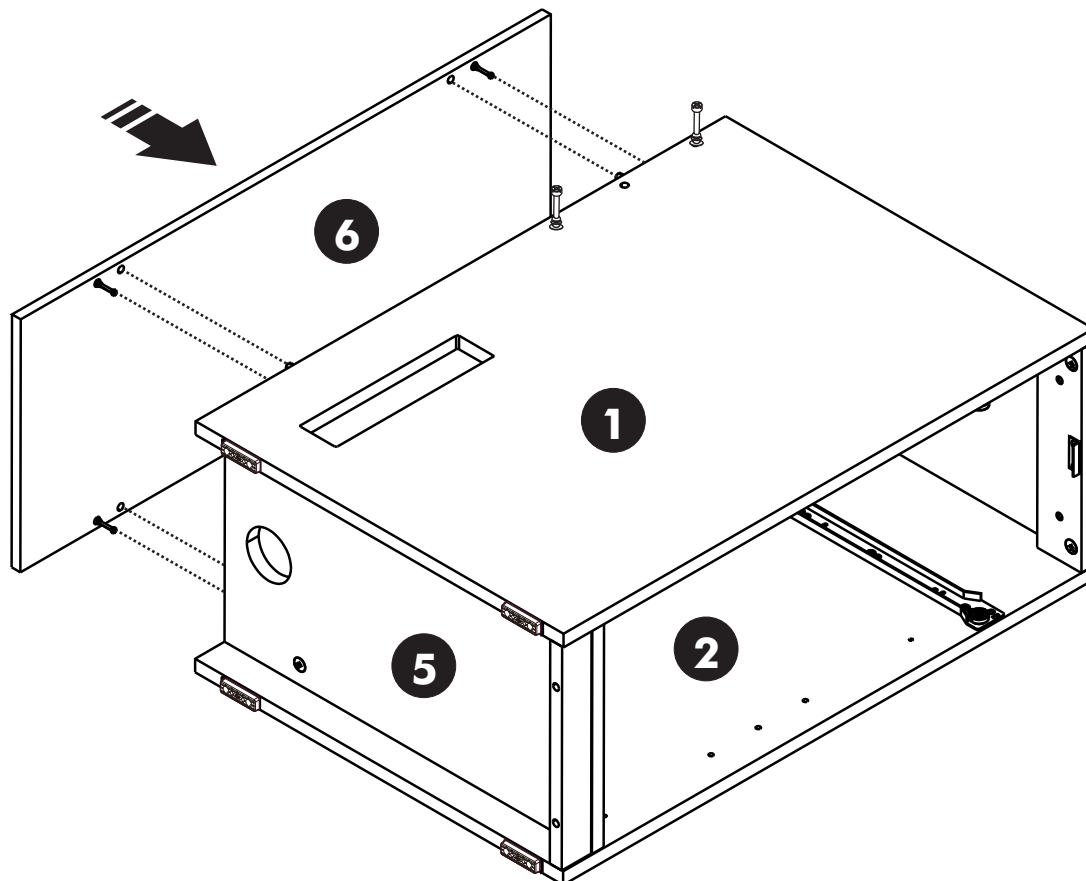


5.

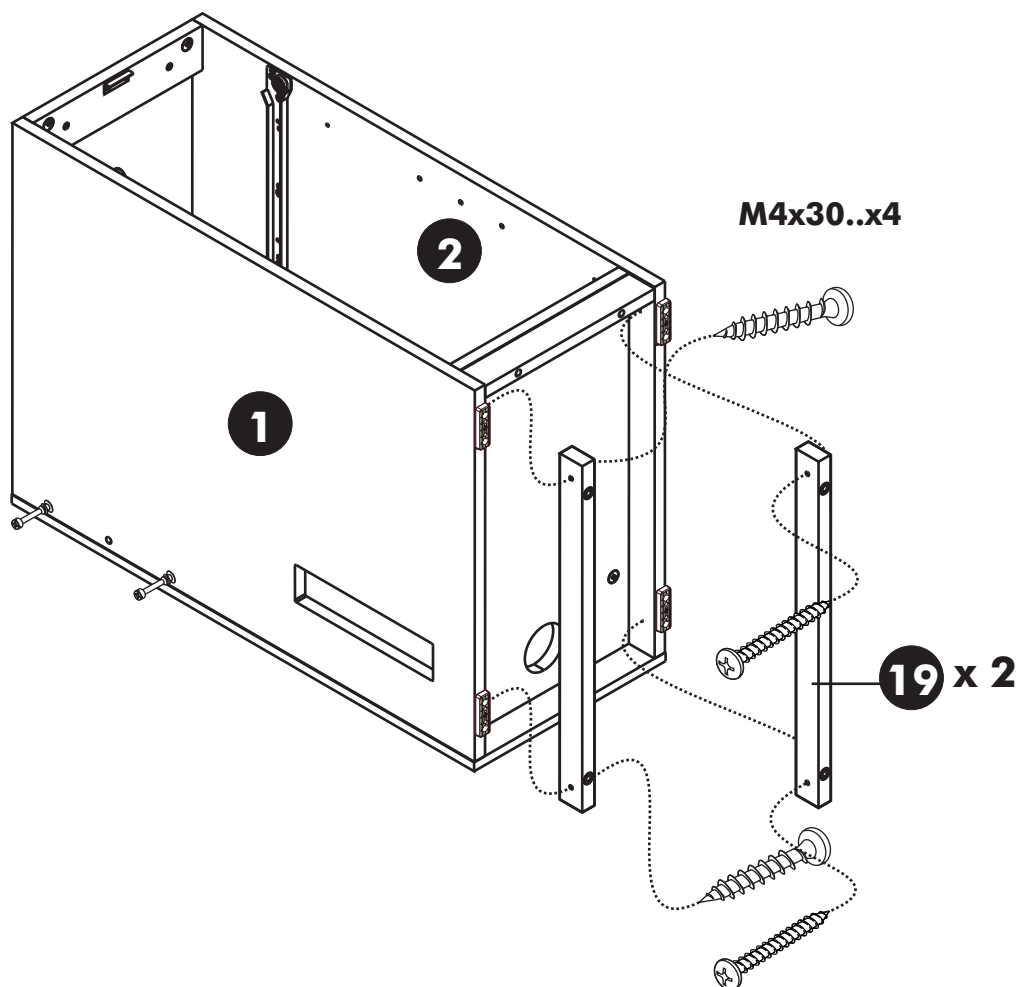


6.

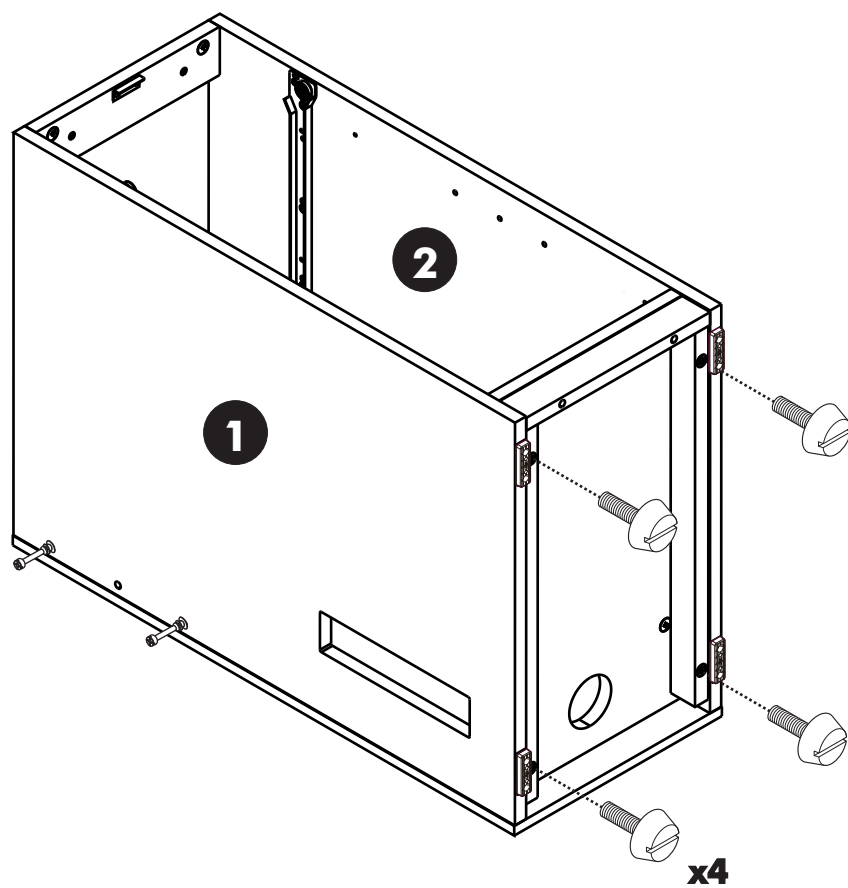


7.

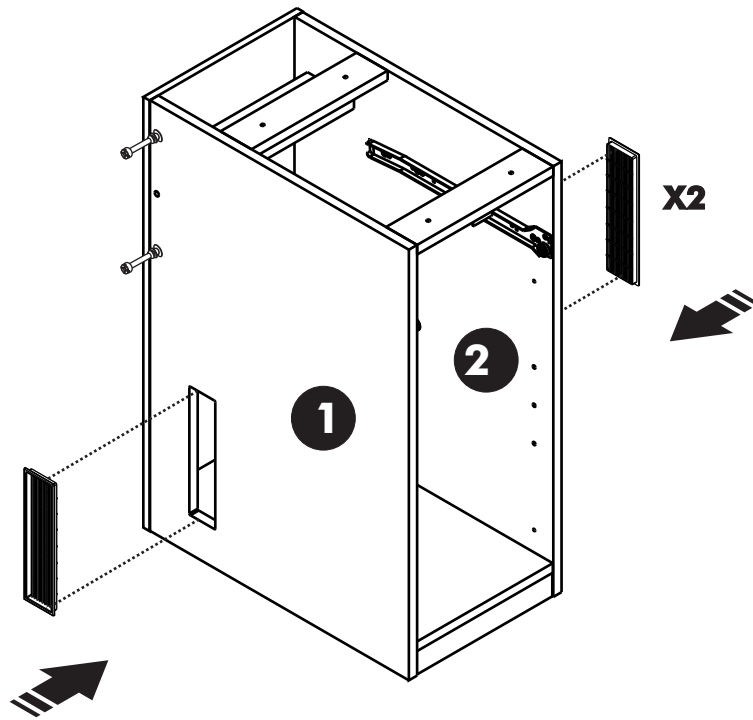


8.

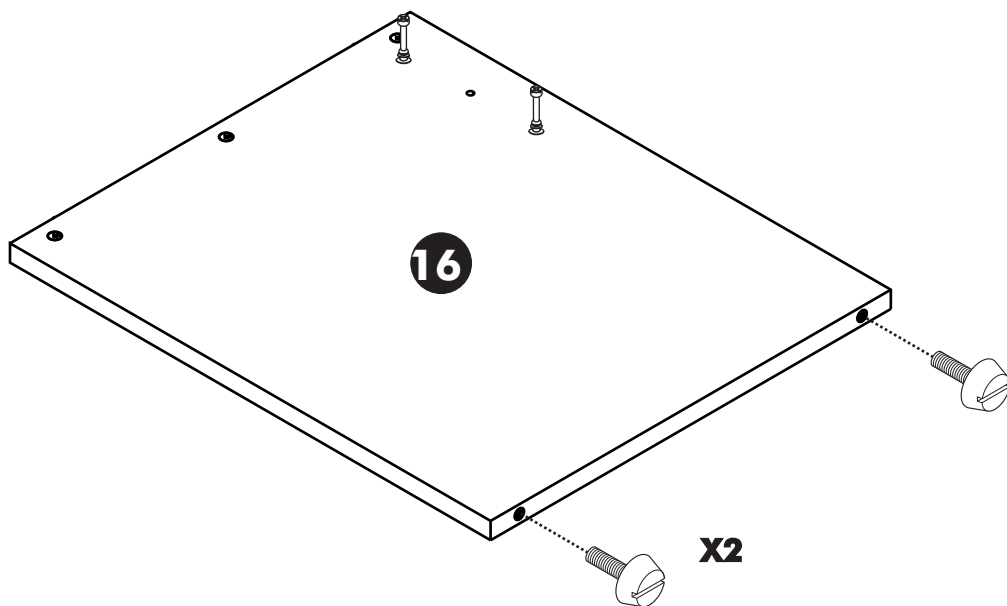

9.


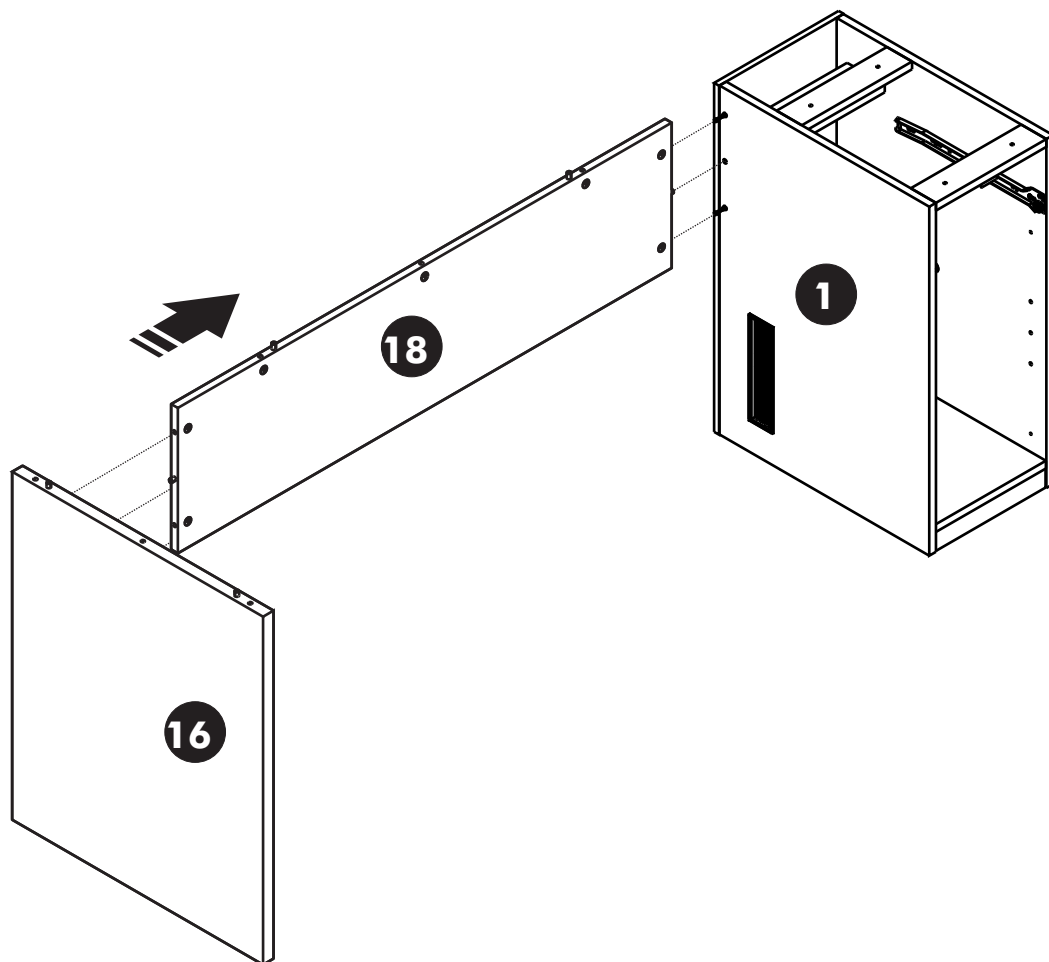


10.


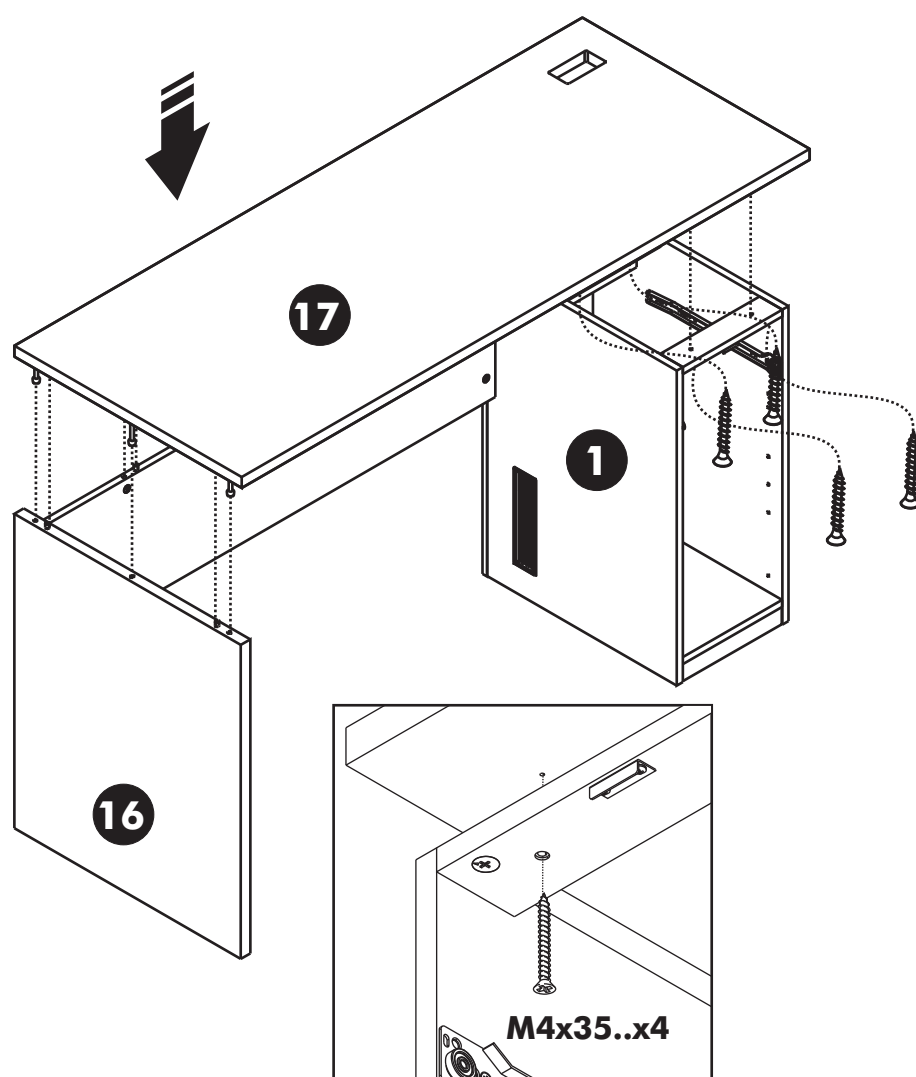


11.


M4x40..x8

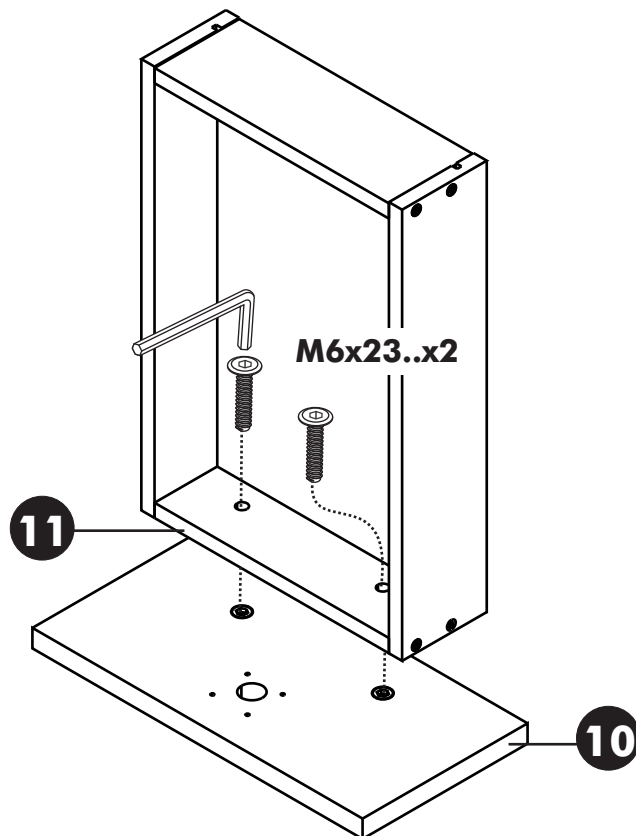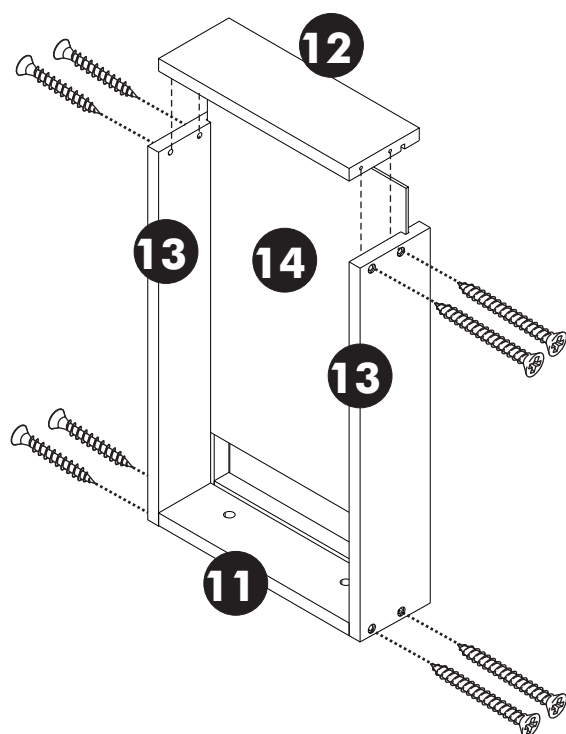



12.

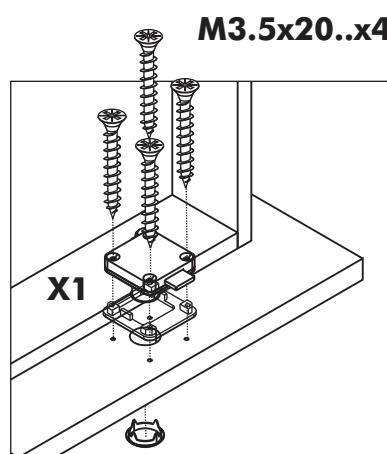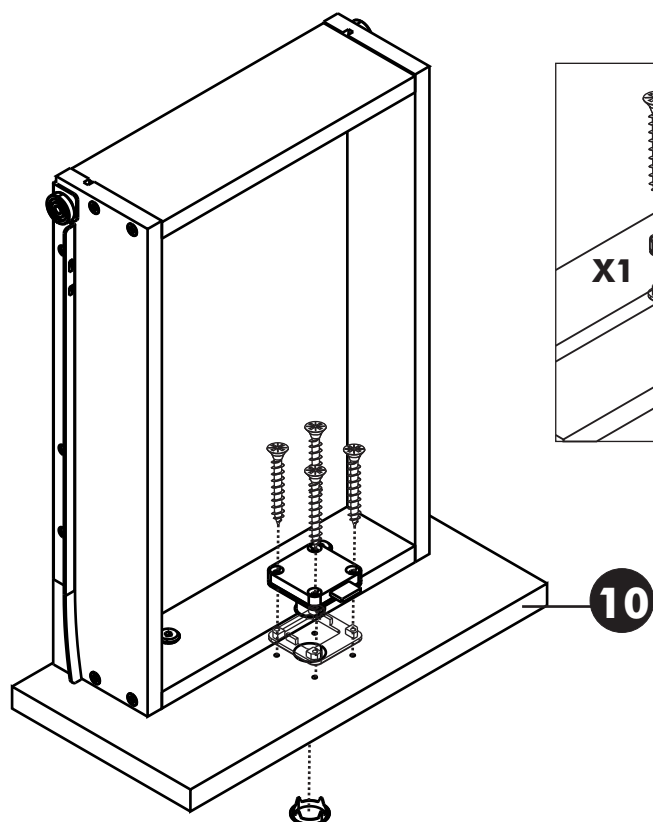


13.

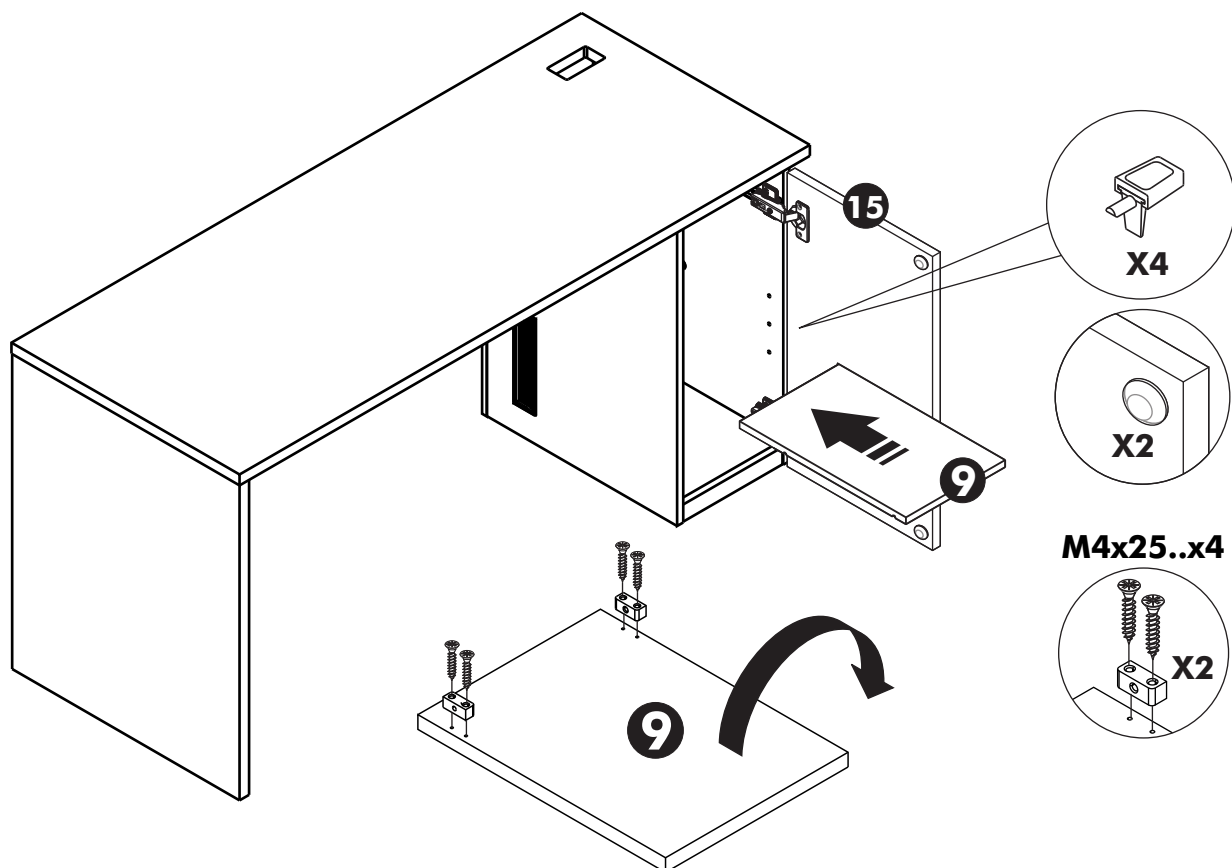



14.

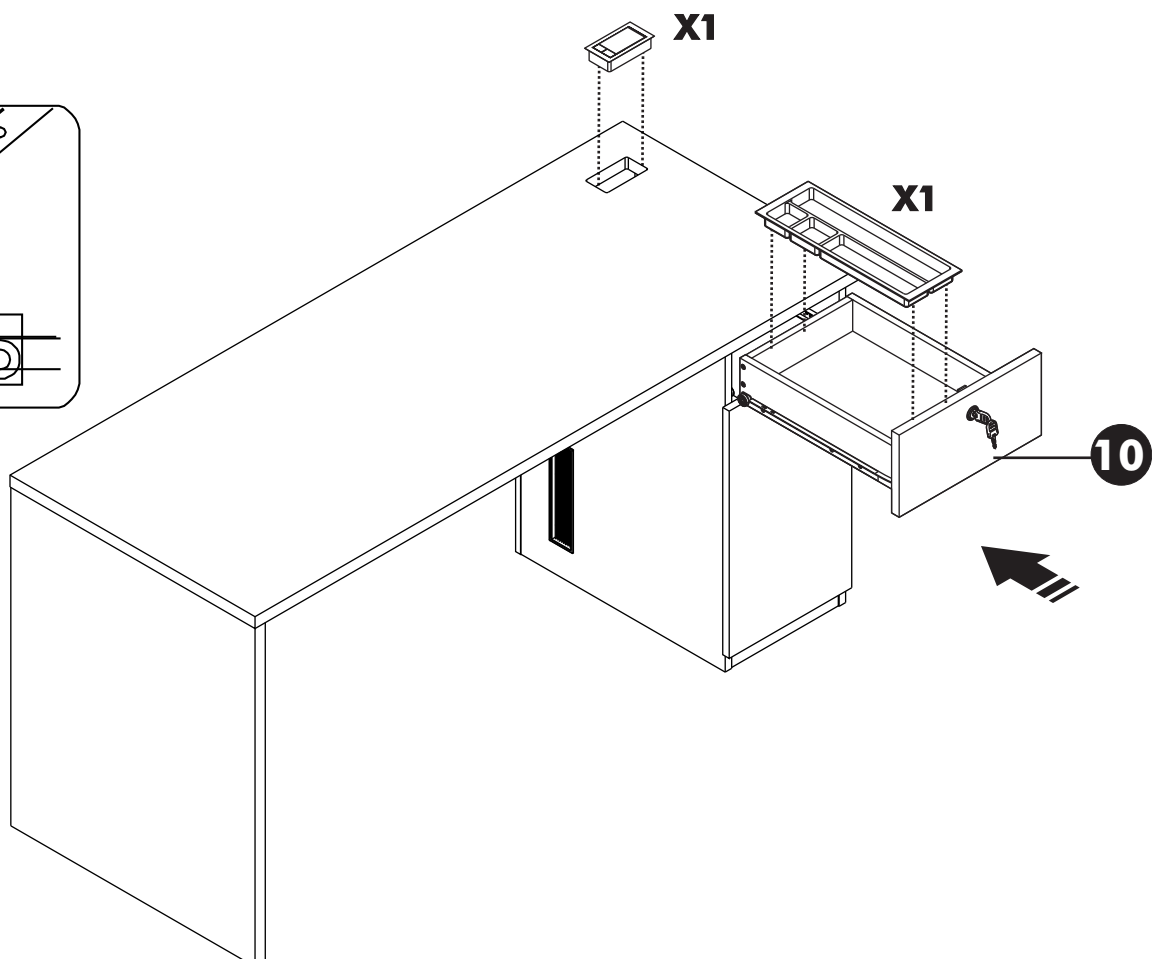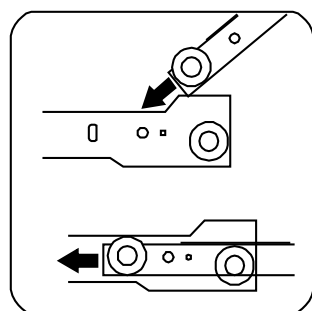

15.

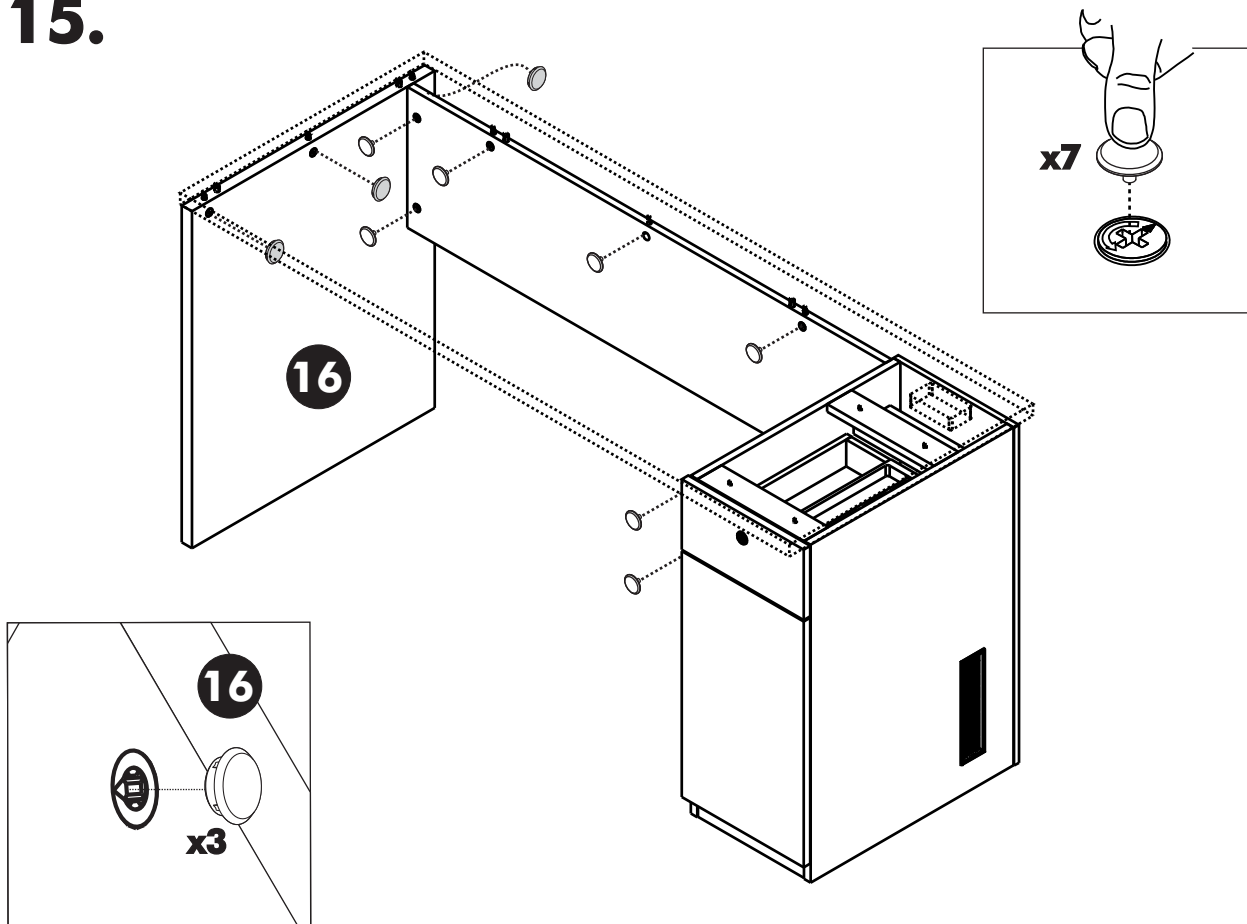

16.

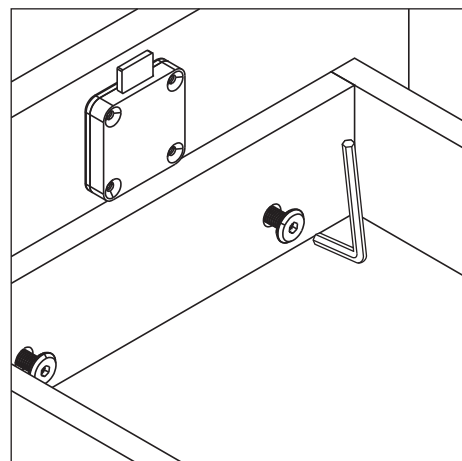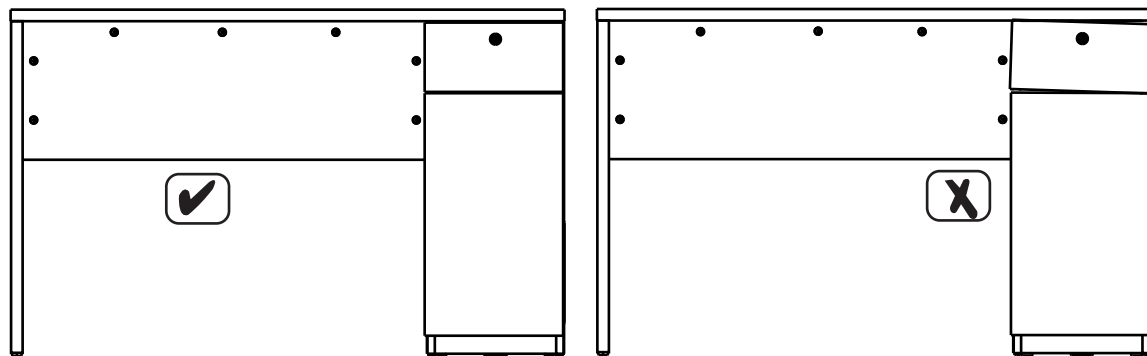

AFTER FINISHED ASSEMBLY
 INCASE OF GAP BETWEEN DRAWERS ARE NOT ALIGN
 PLEASE ADJUST AS BELOW
 1.LOOSE SCREW A LITTLE BIT
 2THEN MOVE FRONT DRAWER TO ALINGNMENT POSITION
 3TIGHTEN SCREW