

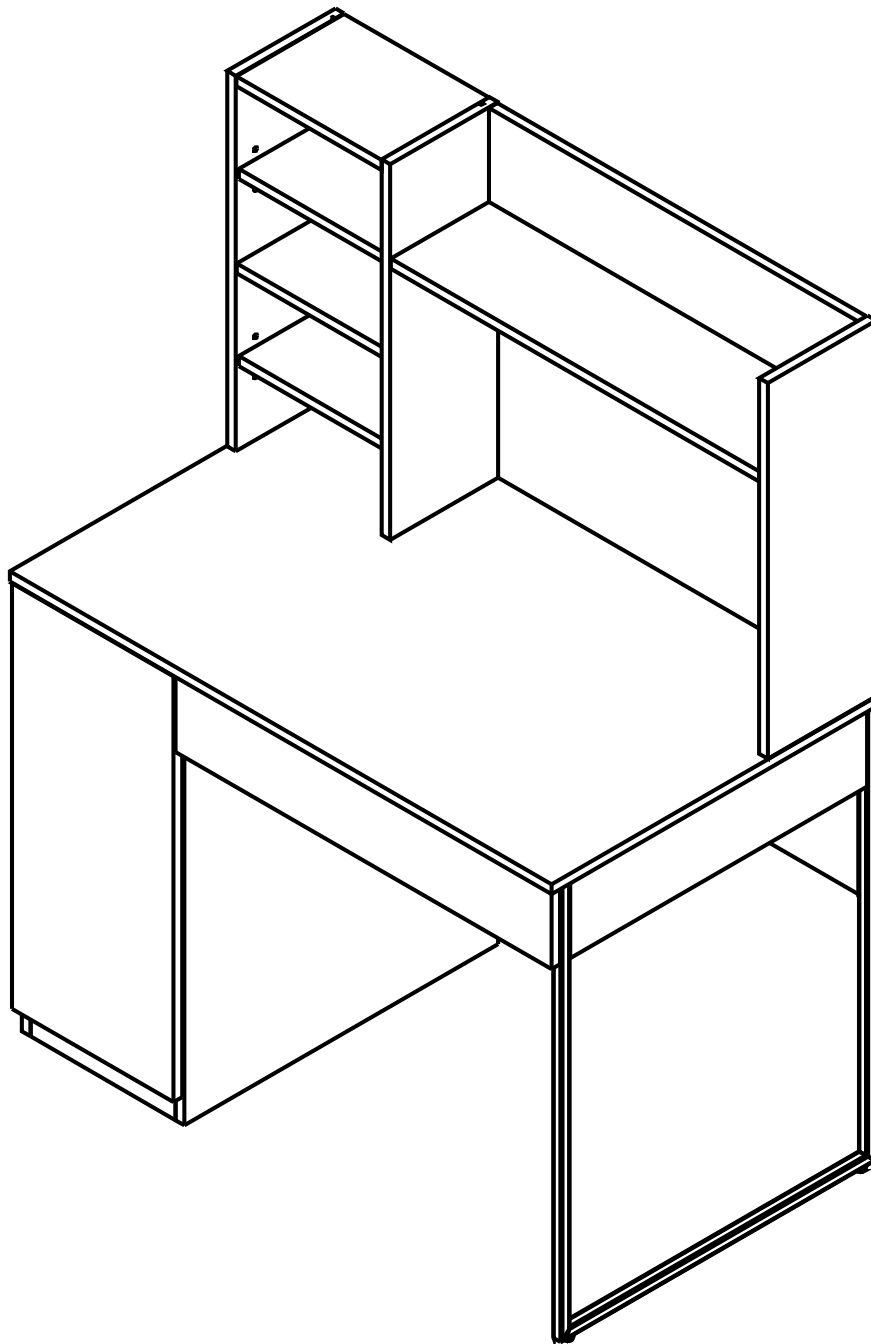
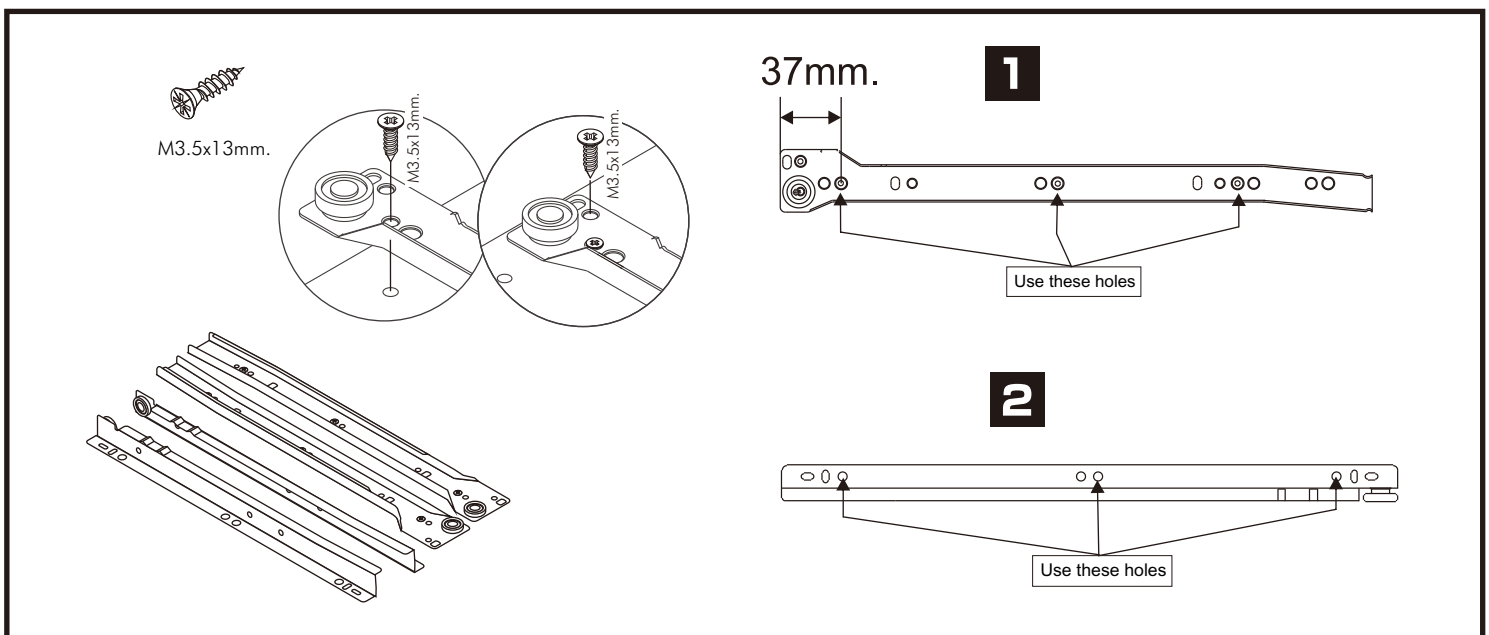


CLEVERO-P






Working table 100 cm.

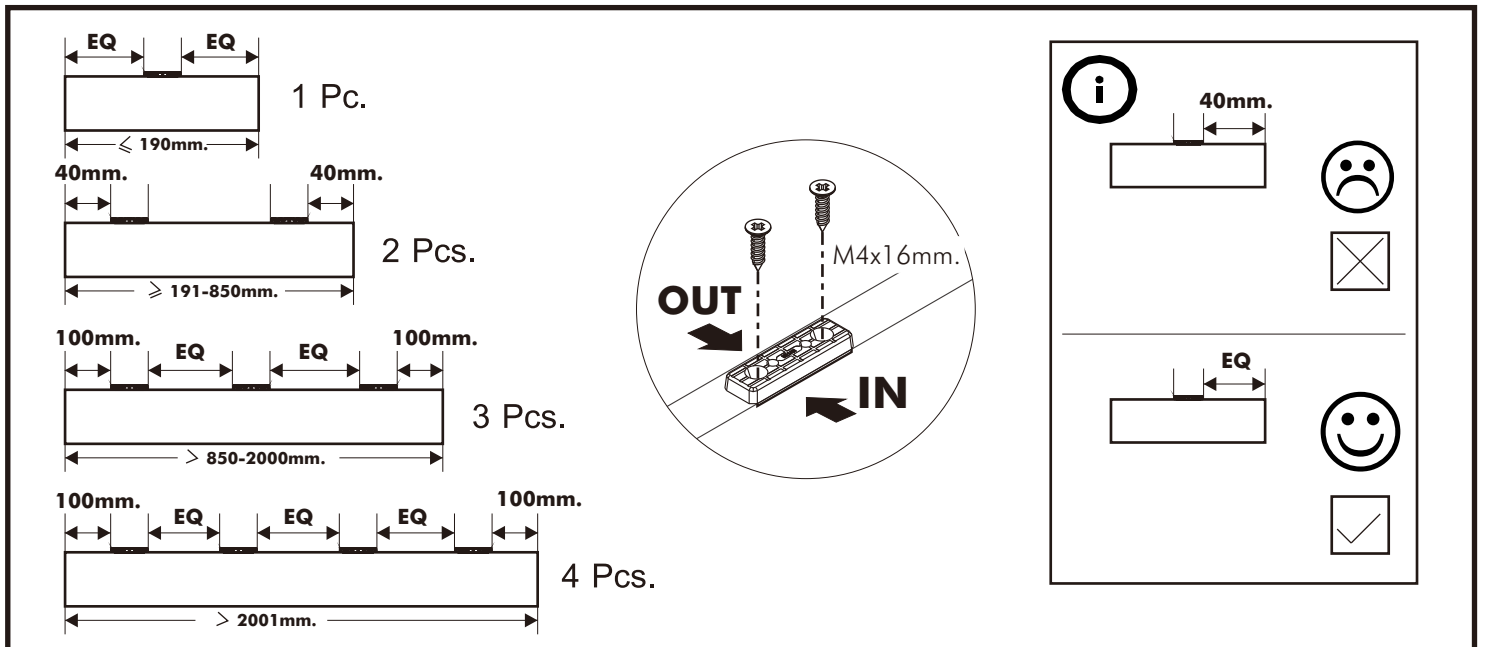

CONNECT SYSTEM

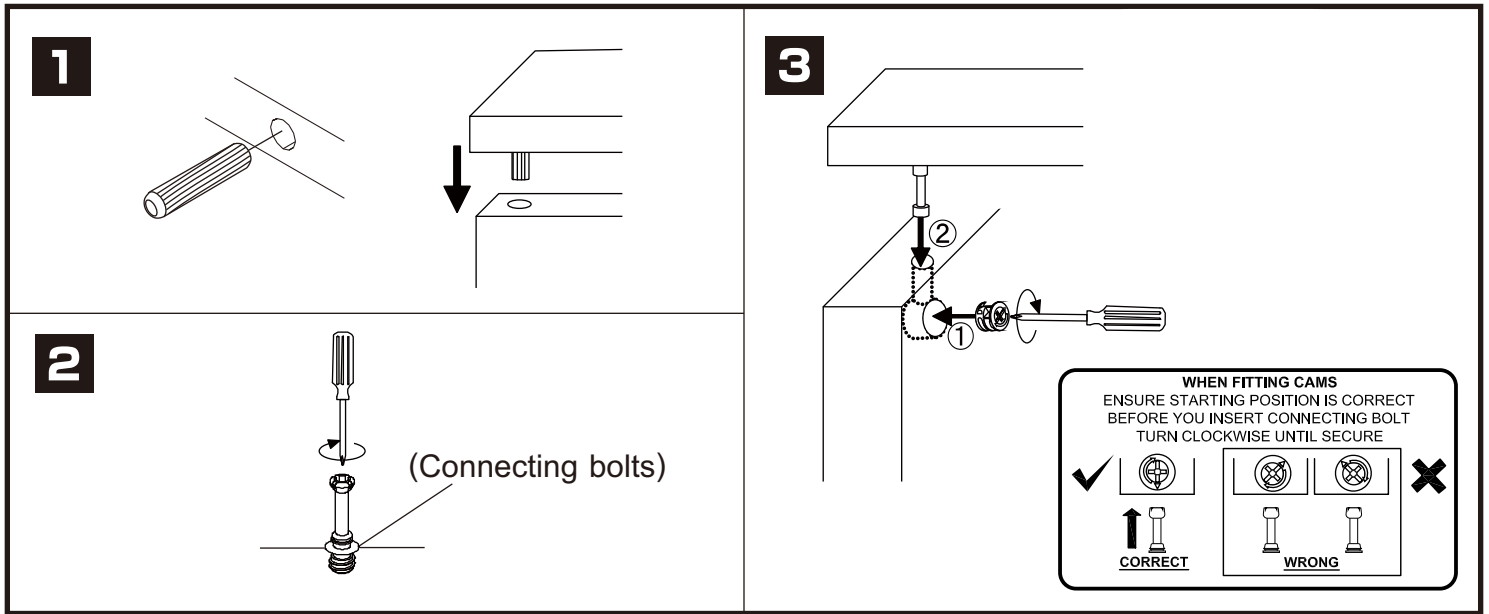


CONNECT SYSTEM

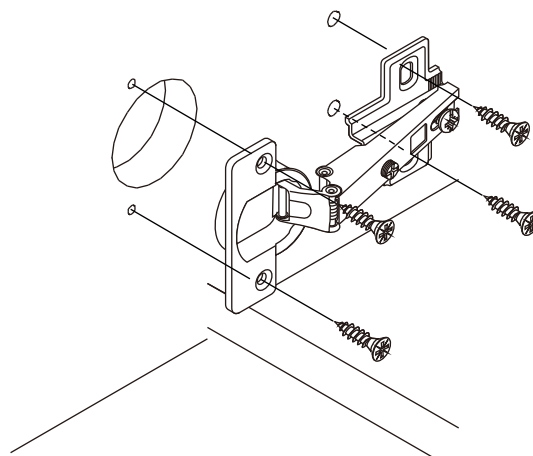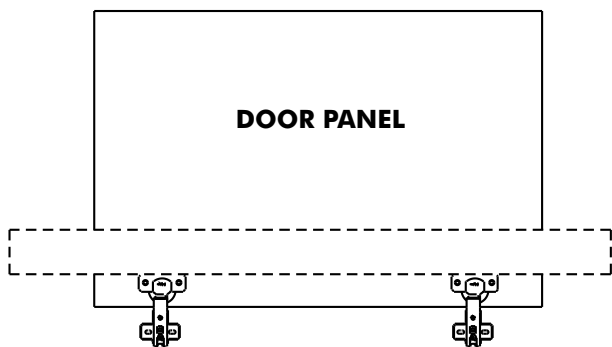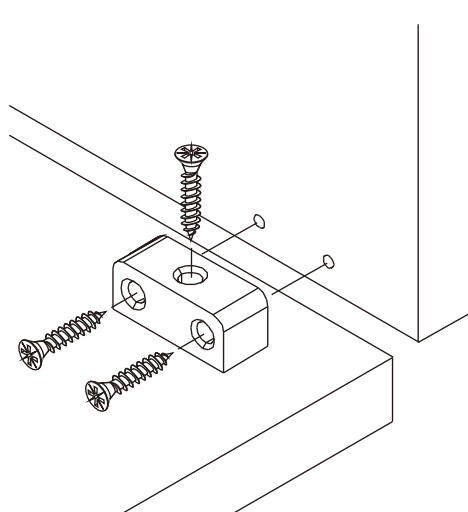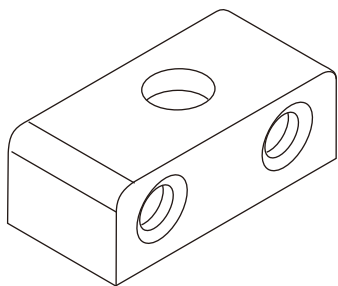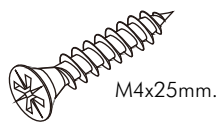


HARDWARE


-BODY SET




x 33




x 35



x 56



x 4




x 2




x 15



x 4



x 15




x 4




x 2




x 19




x 12



x 1

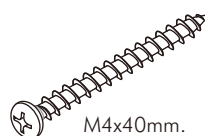

x 4

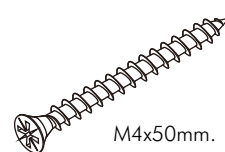


x 9



x 6


-DRAWER SET

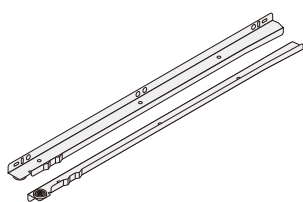

x 1



x 12

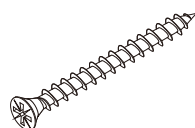


x 12



x 3

-DOOR SET



x 2




x 8




x 3


1.

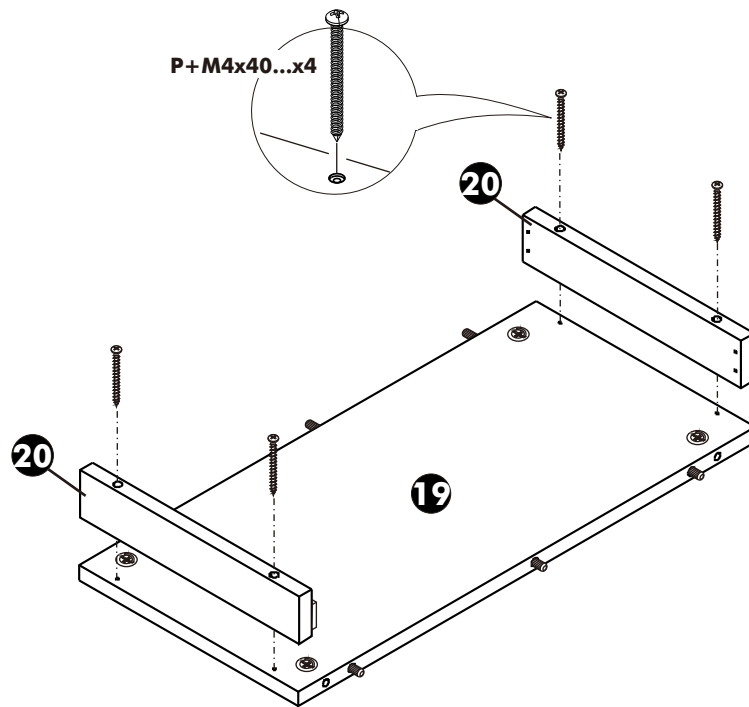


2.

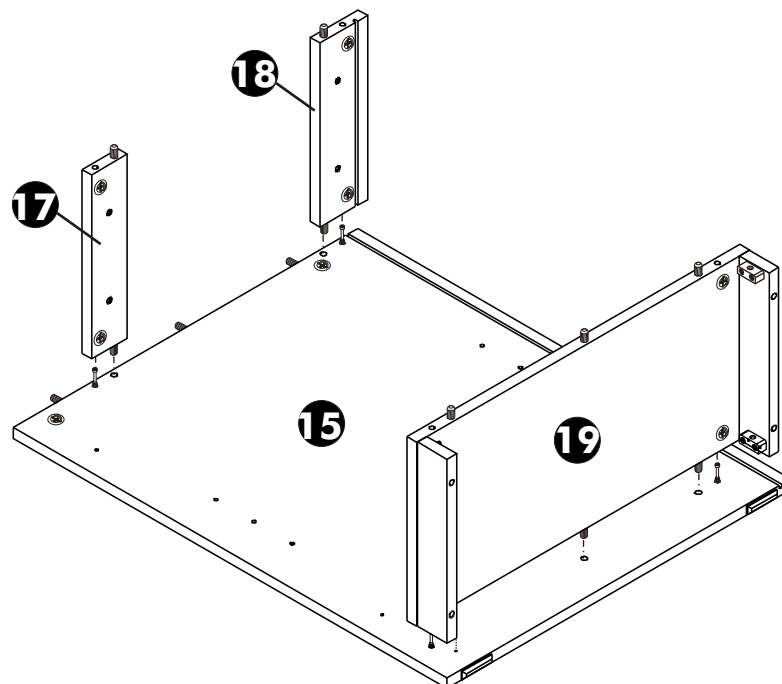


3.

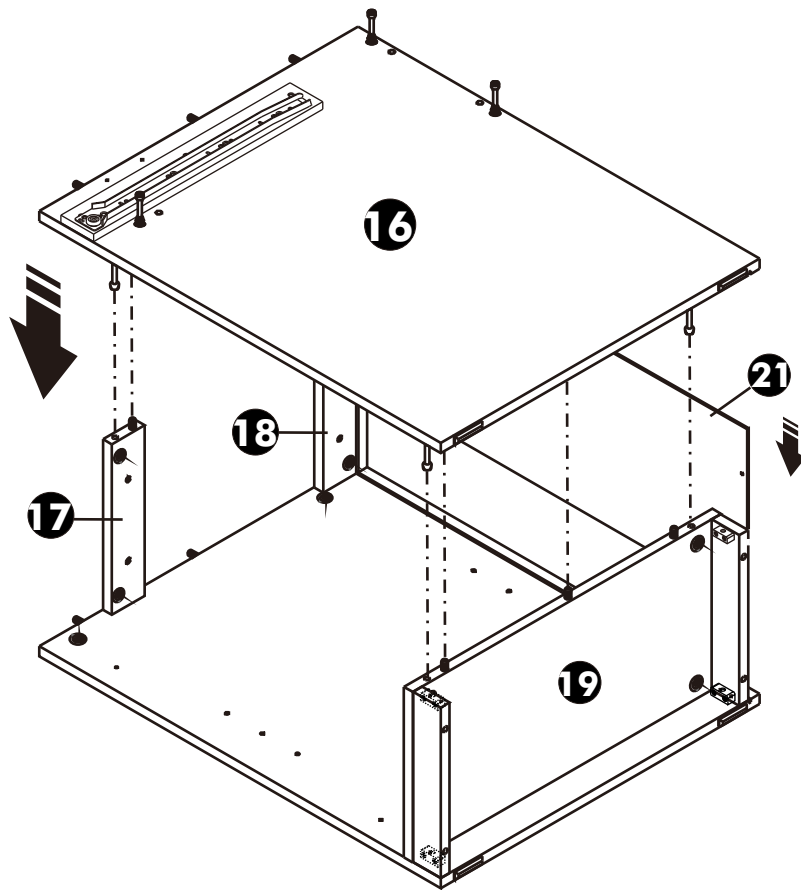


4.

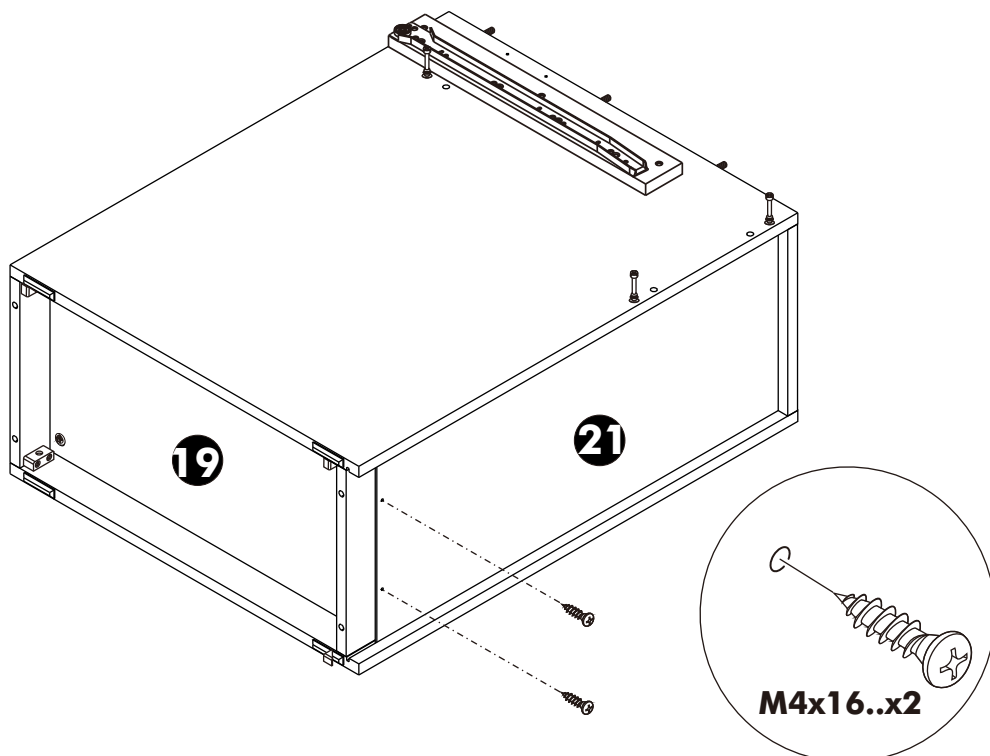


5.

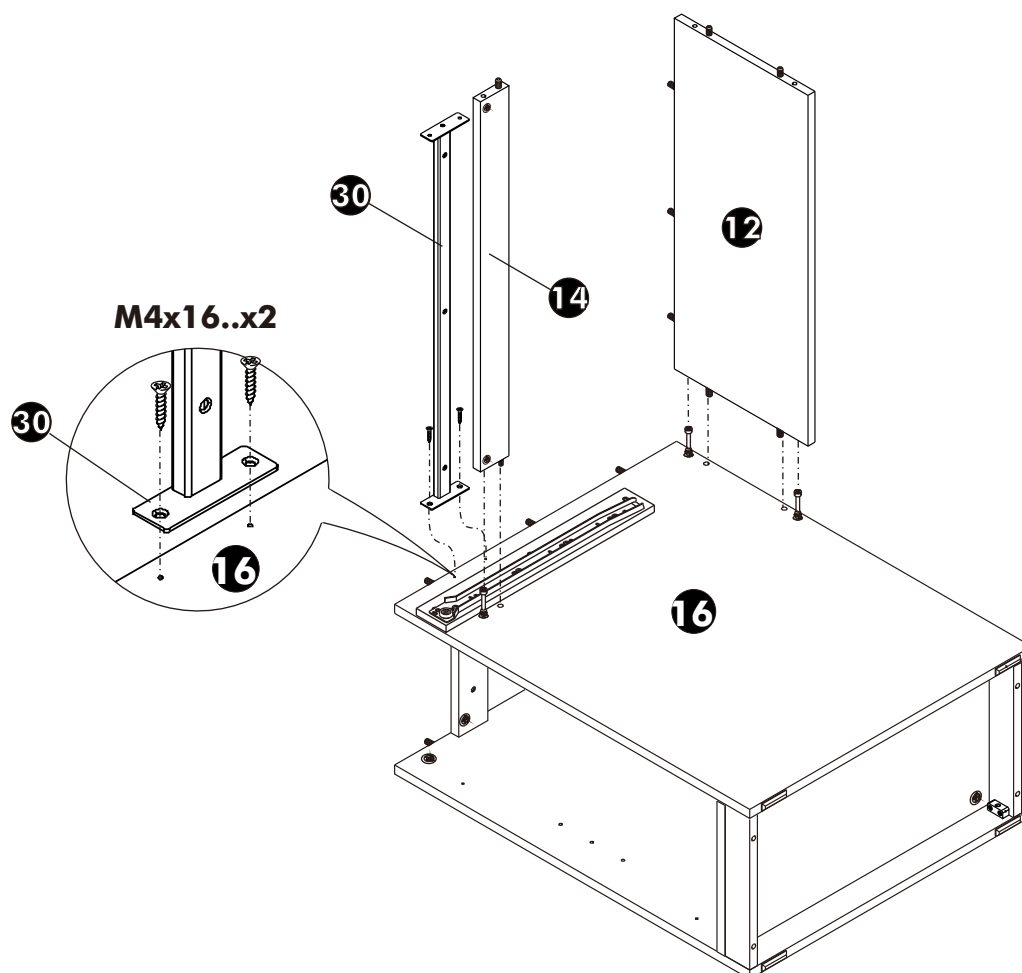


6.

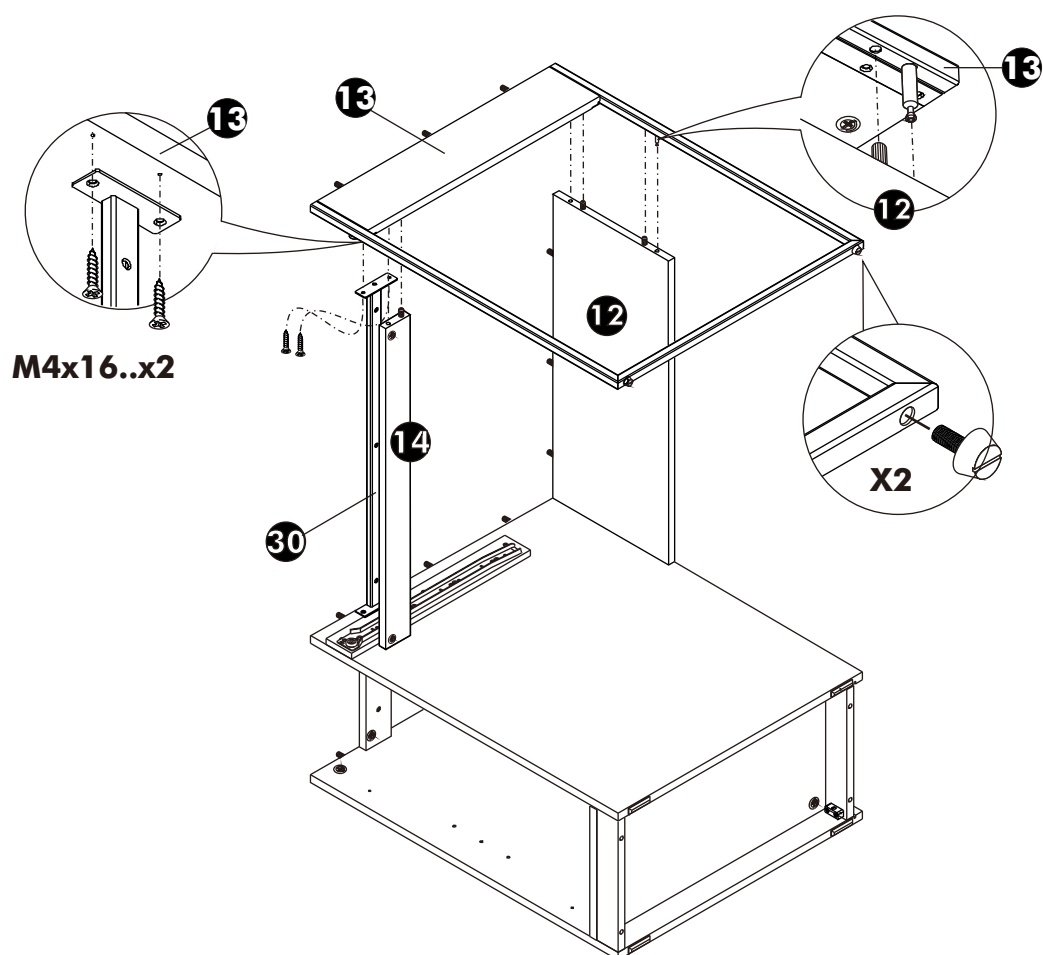


7.

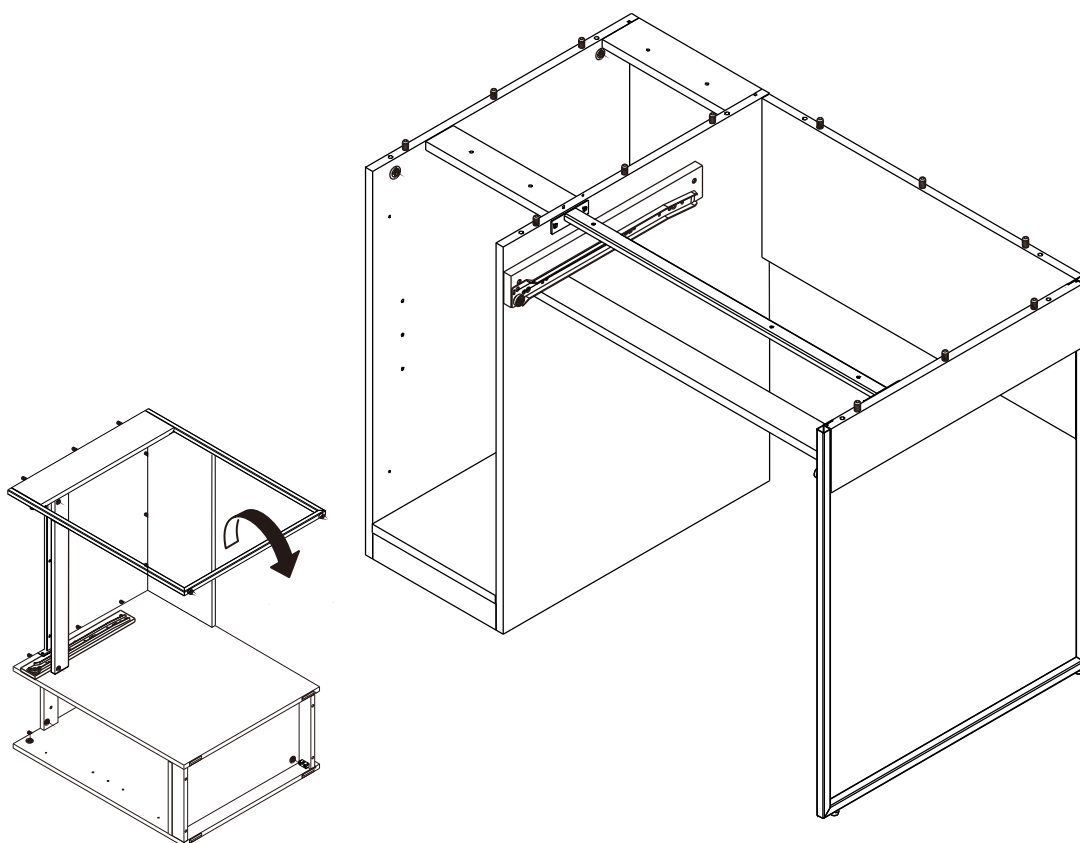


8.

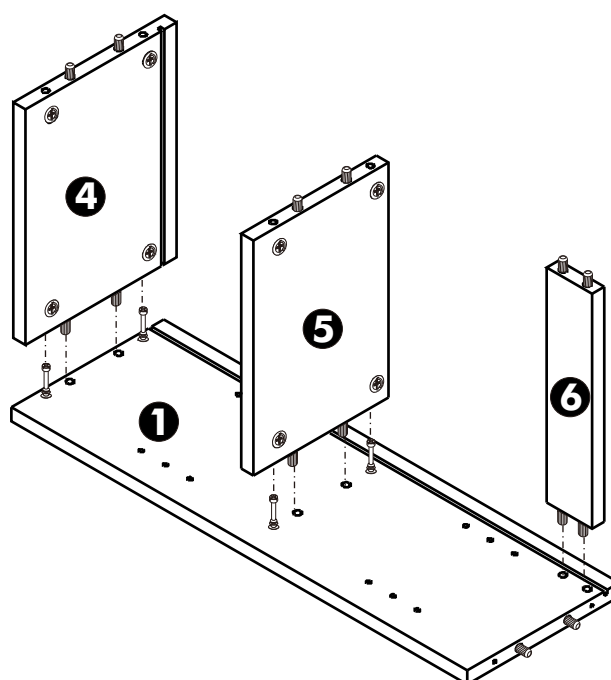


9.

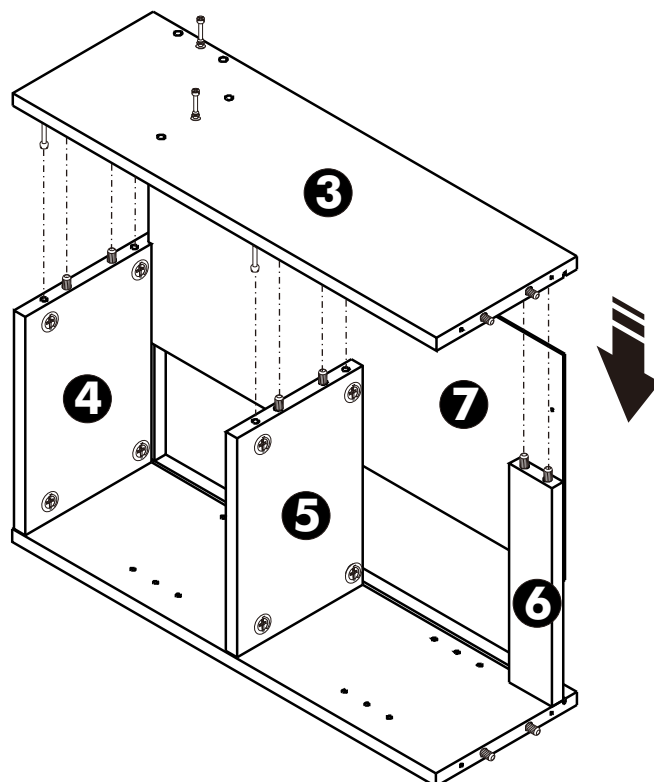


10.

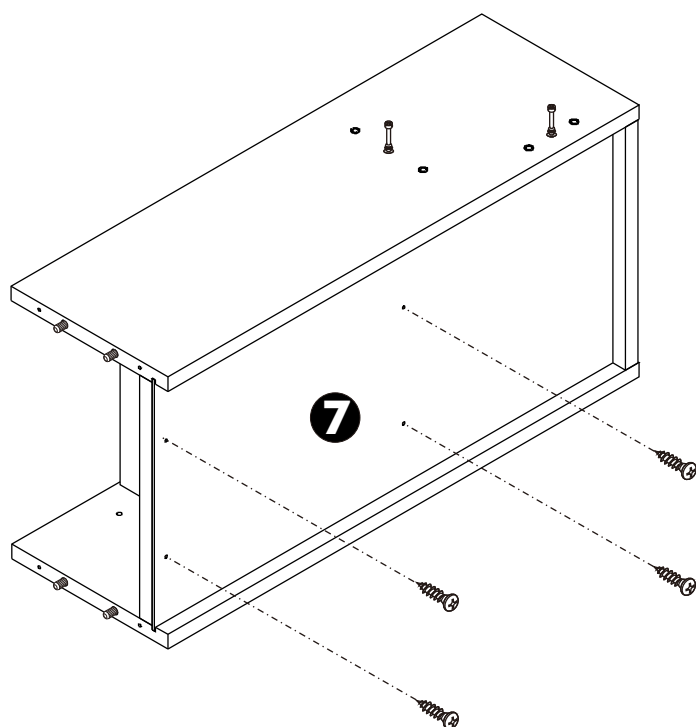


11.

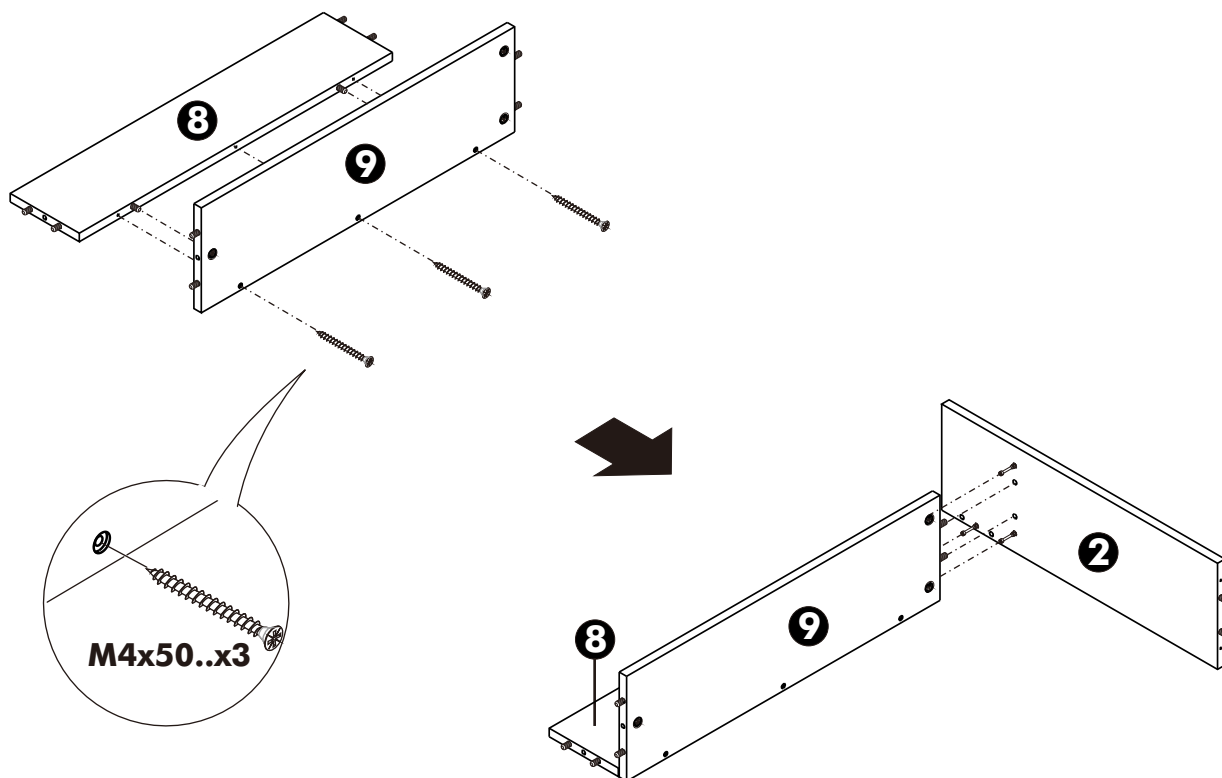


12.

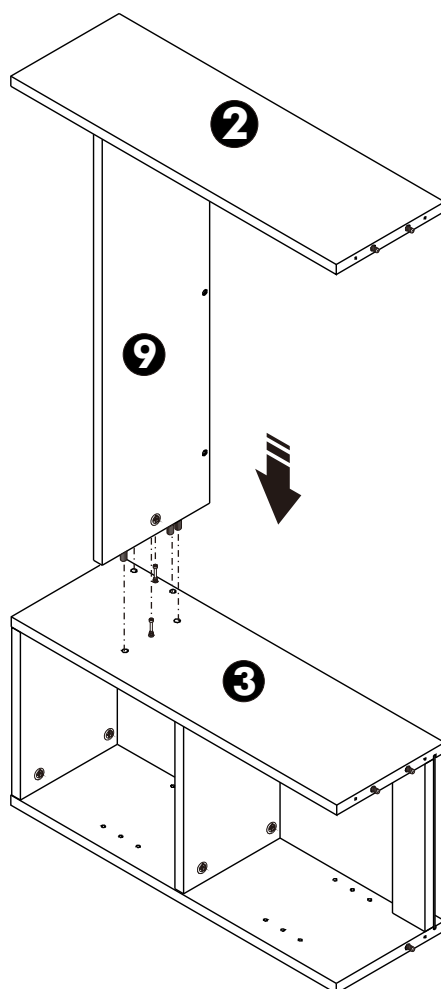


13.

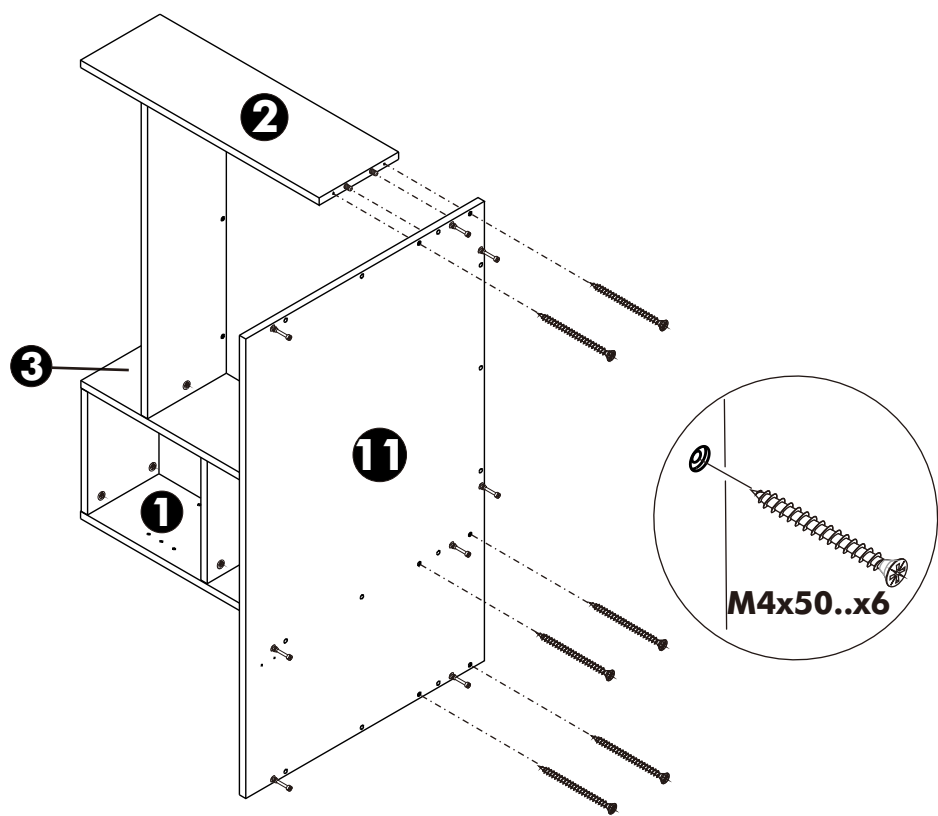


14.

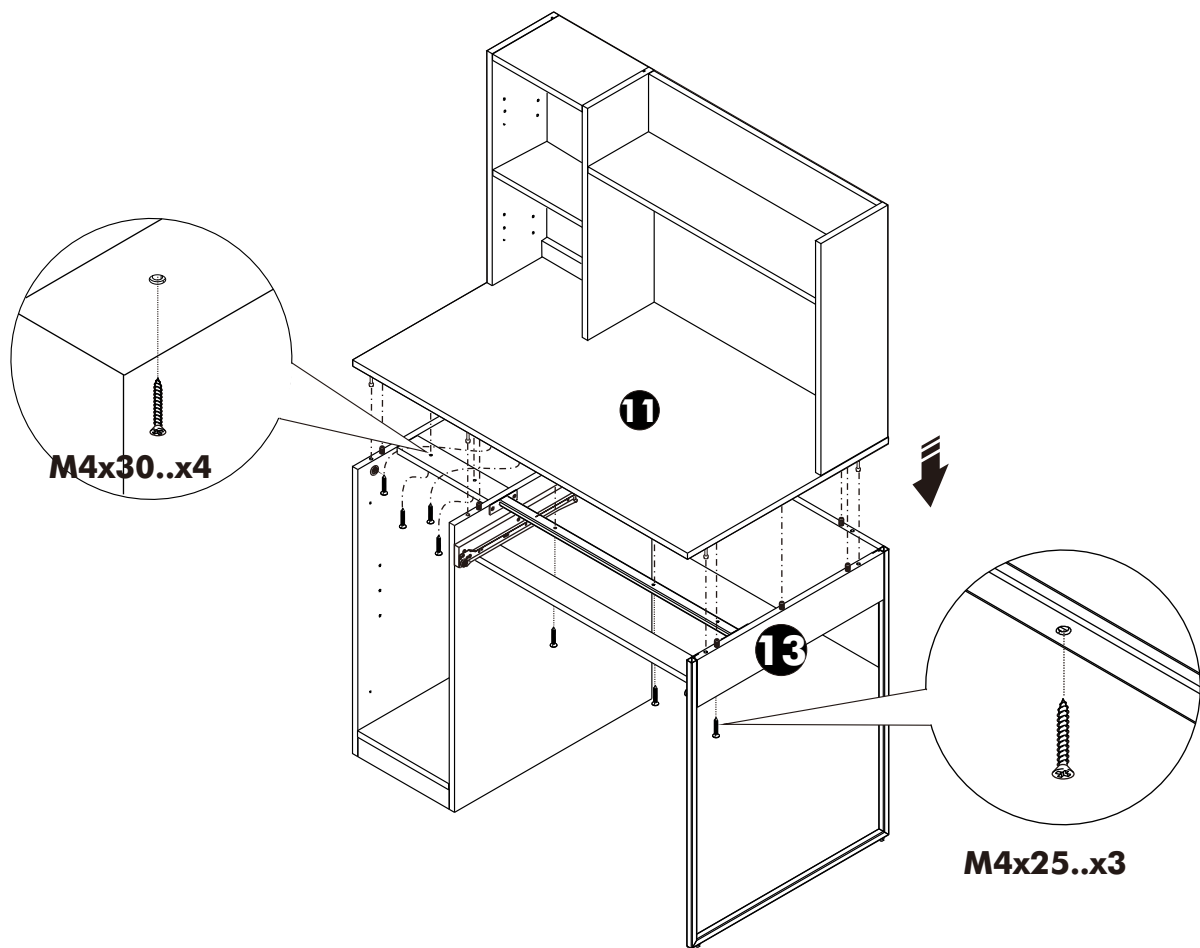


15.

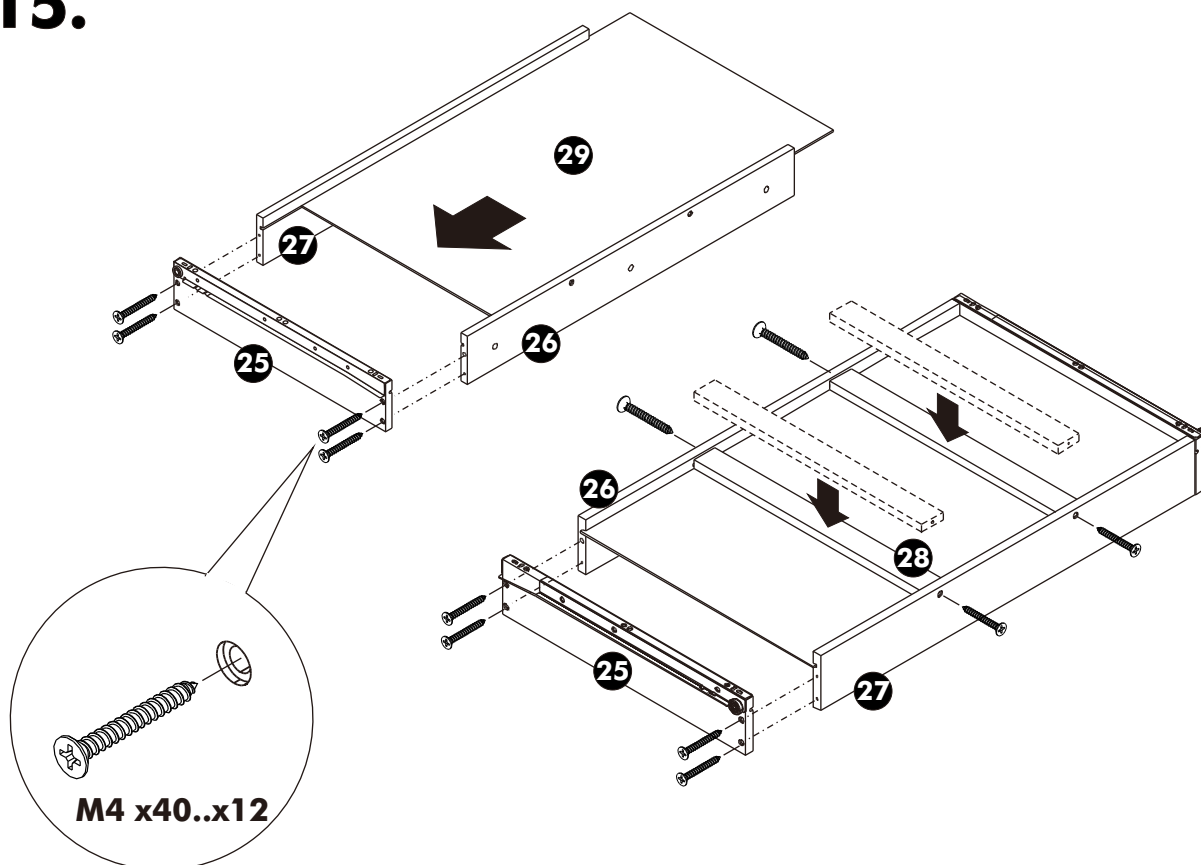


16.

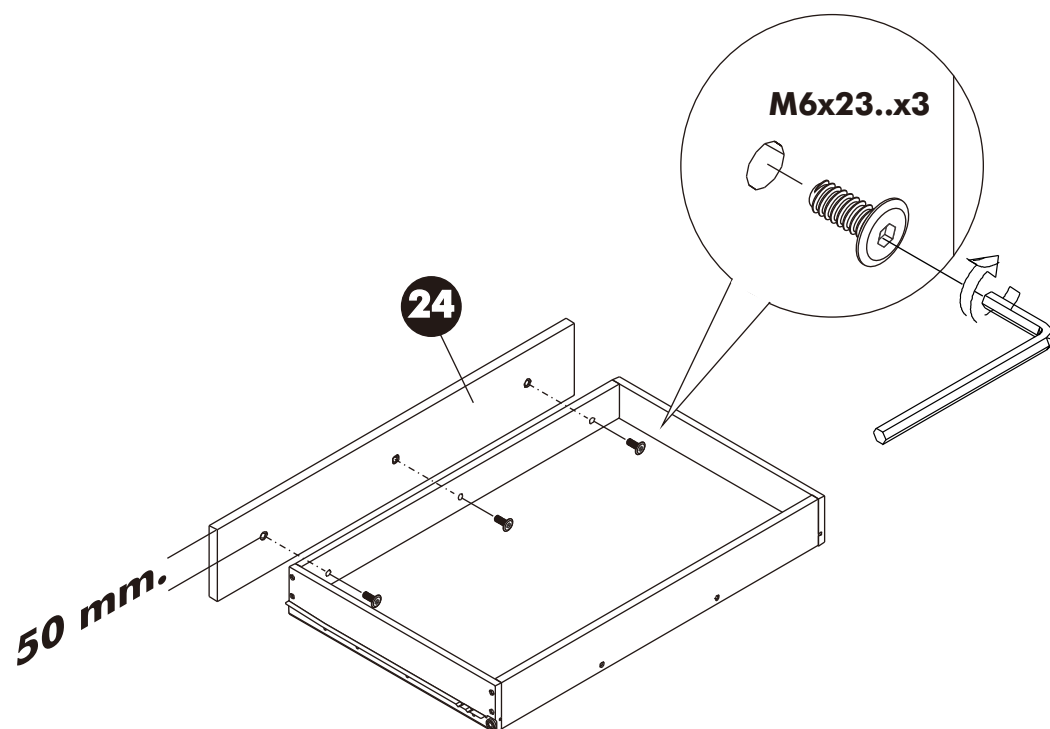


17.

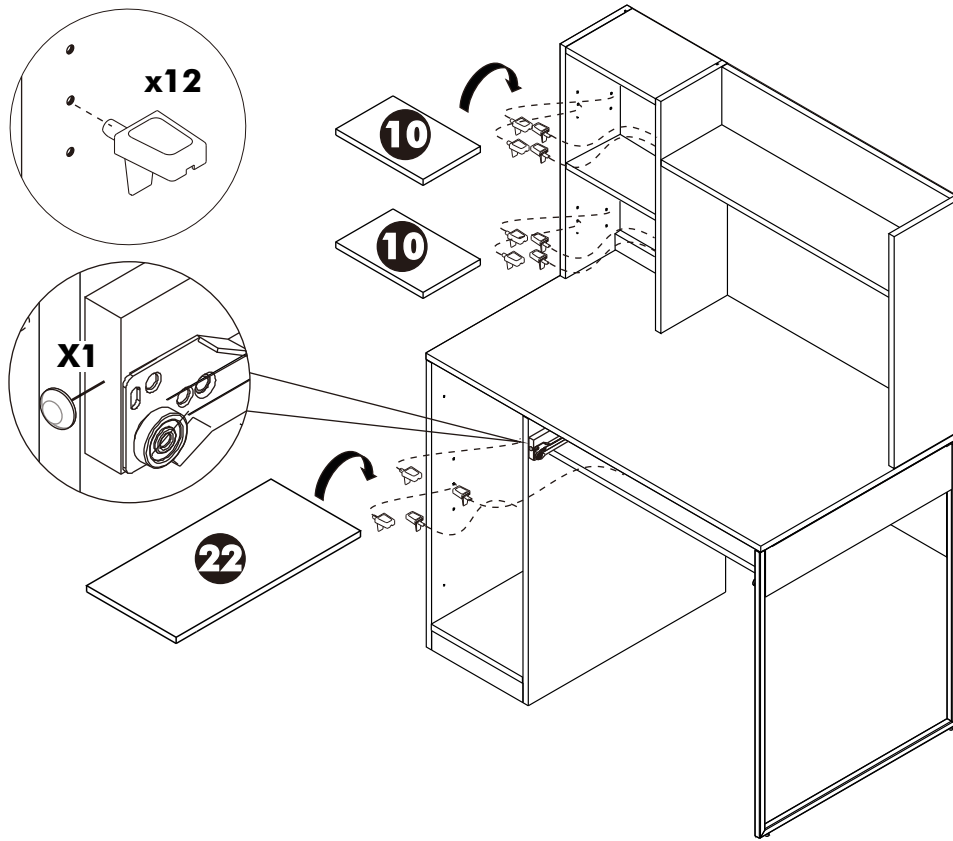


18.


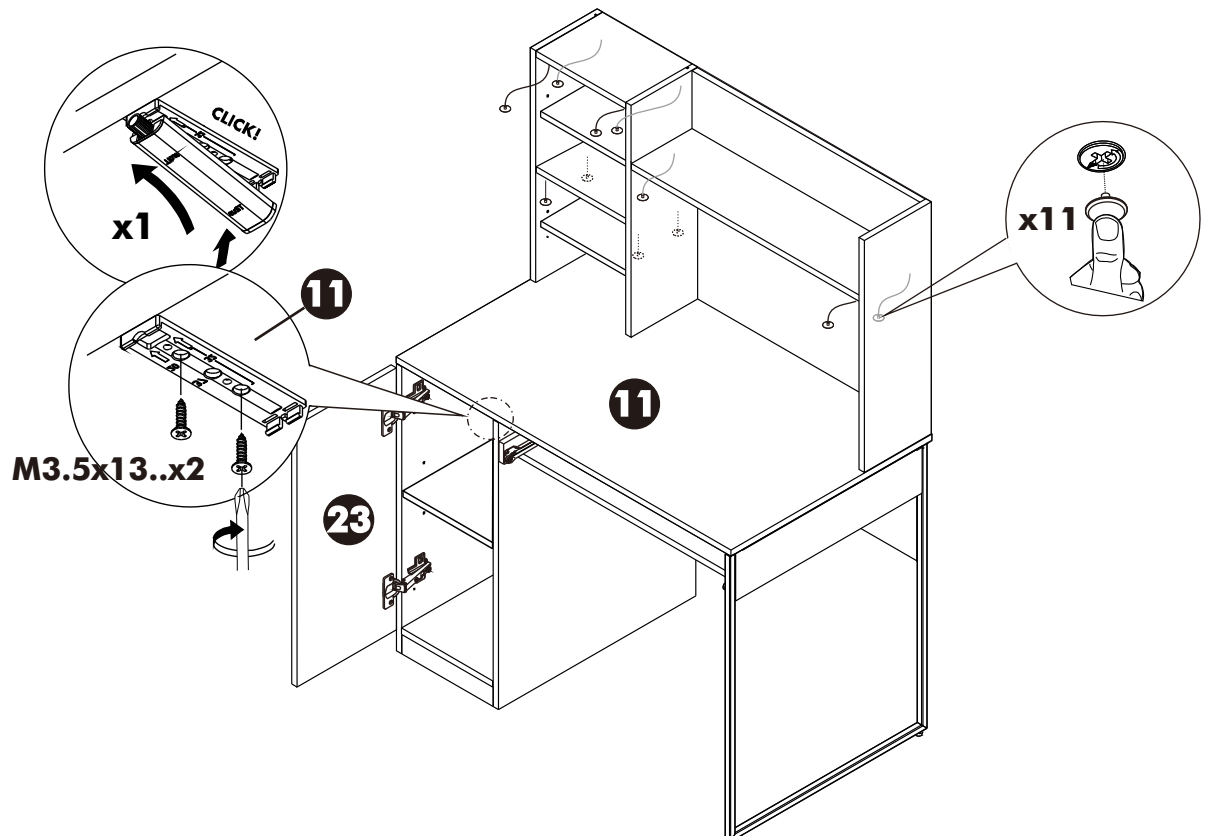


19.

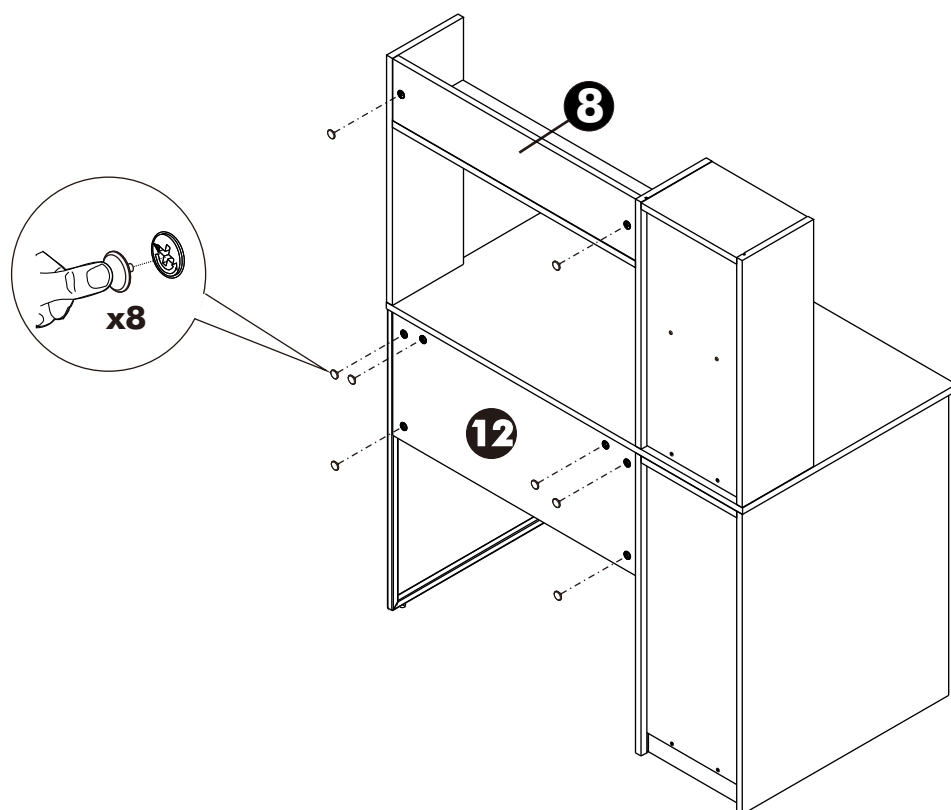

20.

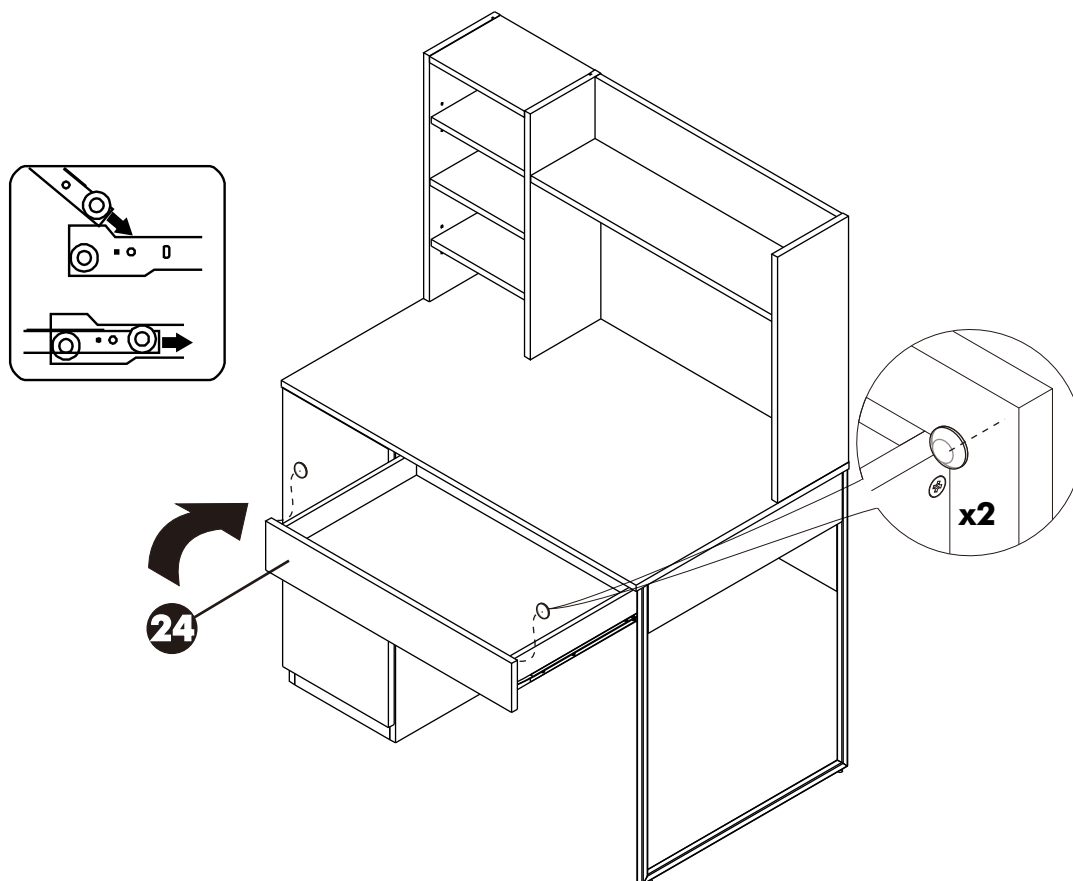

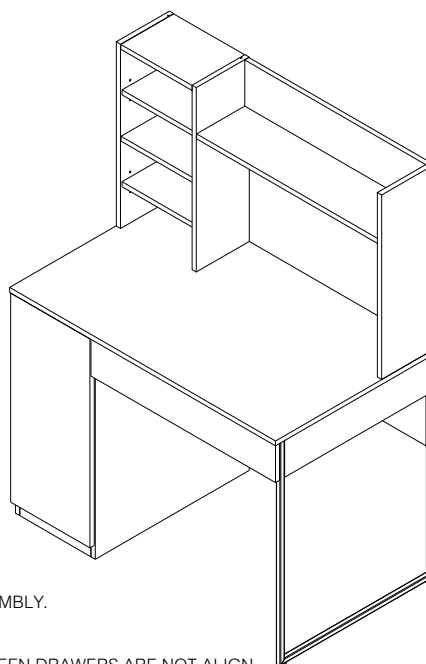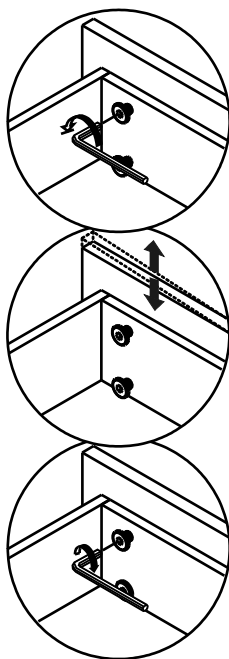

AFTER FINISHED ASSEMBLY.

INCASE OF GAP BETWEEN DRAWERS ARE NOT ALIGN.
PLEASE ADJUST AS BELOW.

1. LOOSE SCREW A LITTLE BIT.
2. THEN MOVE FRONT DRAWER TO ALINGNMENT POSITION.
3. TIGHTEN SCREW.

