



BB BOX

Bed frame for drawers 5ft.
Bed frame for drawers 6ft.

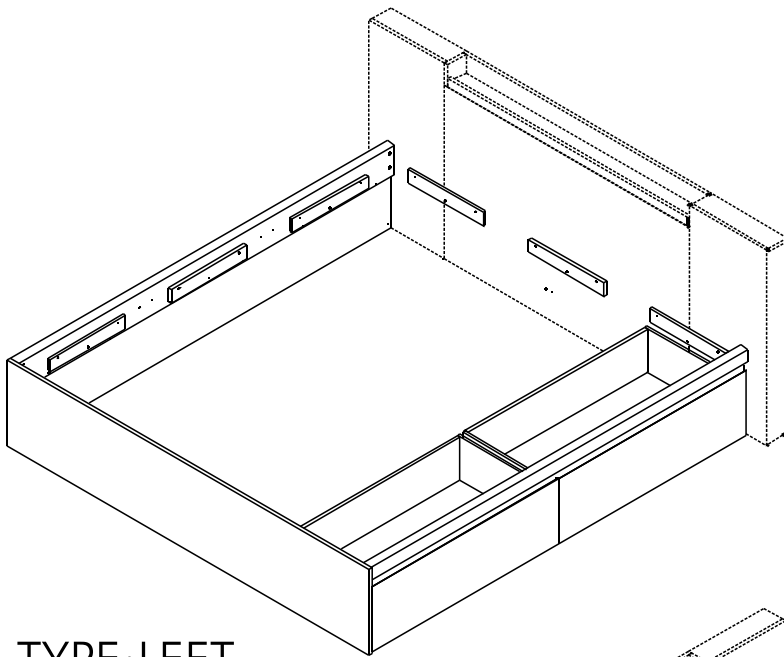


TYPE:LEFT

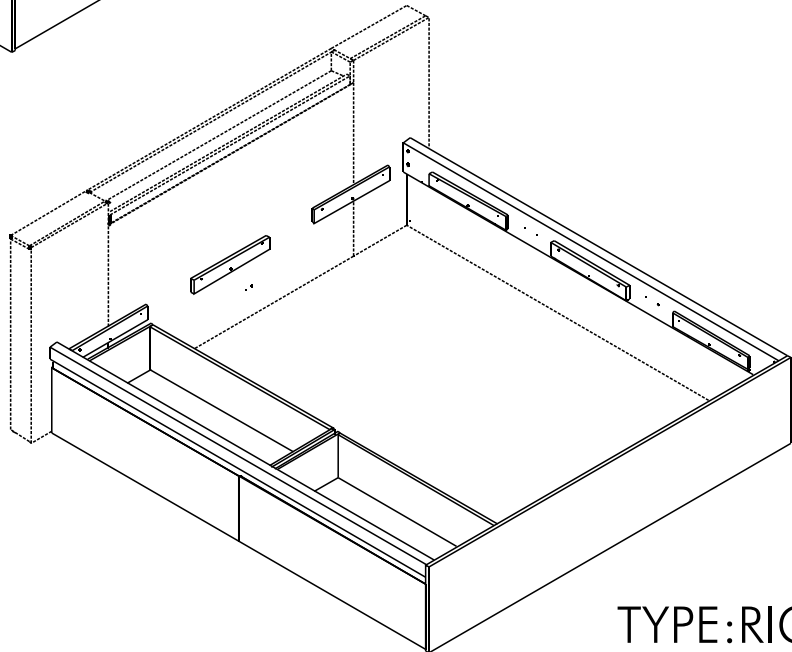


TYPE:RIGHT

CONNECT SYSTEM


1

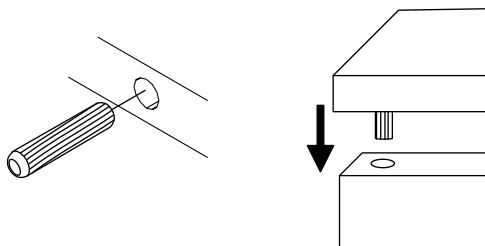





2

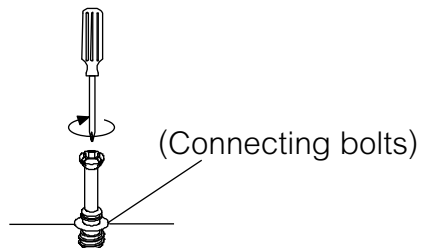

3

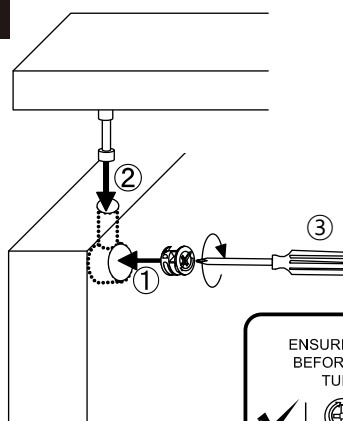


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

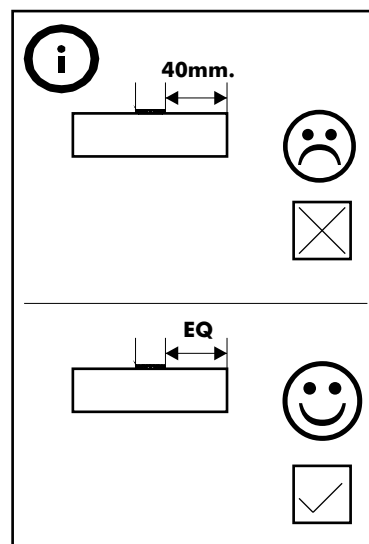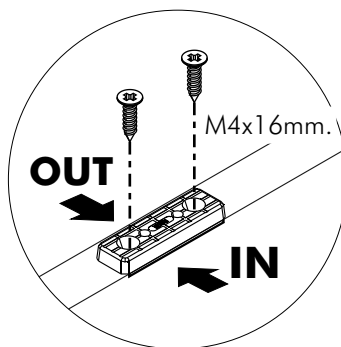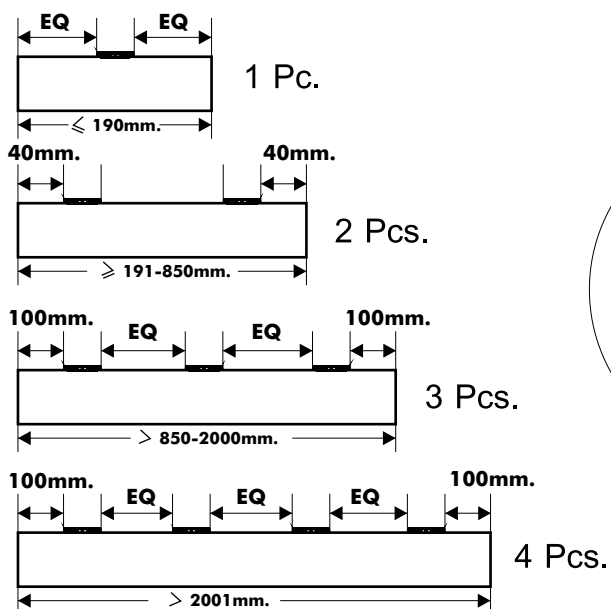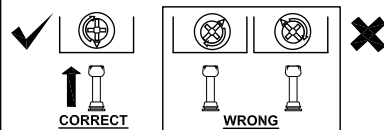

HARDWARE

-BODY SET




x 4




19 mm.

x 4



8x35

x 4

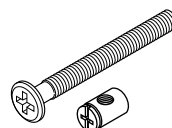

JBC+M6x60

x 4



TF+M6x45

x 4



#M6

x 4



#M6

x 4



C/B F+M4x30

x 23




C/B P+M4x16

x 10




C/B F+M4x25

x 36



No.10

x 1



x 4




C/B F+M4x16

x 32




x 8

1.

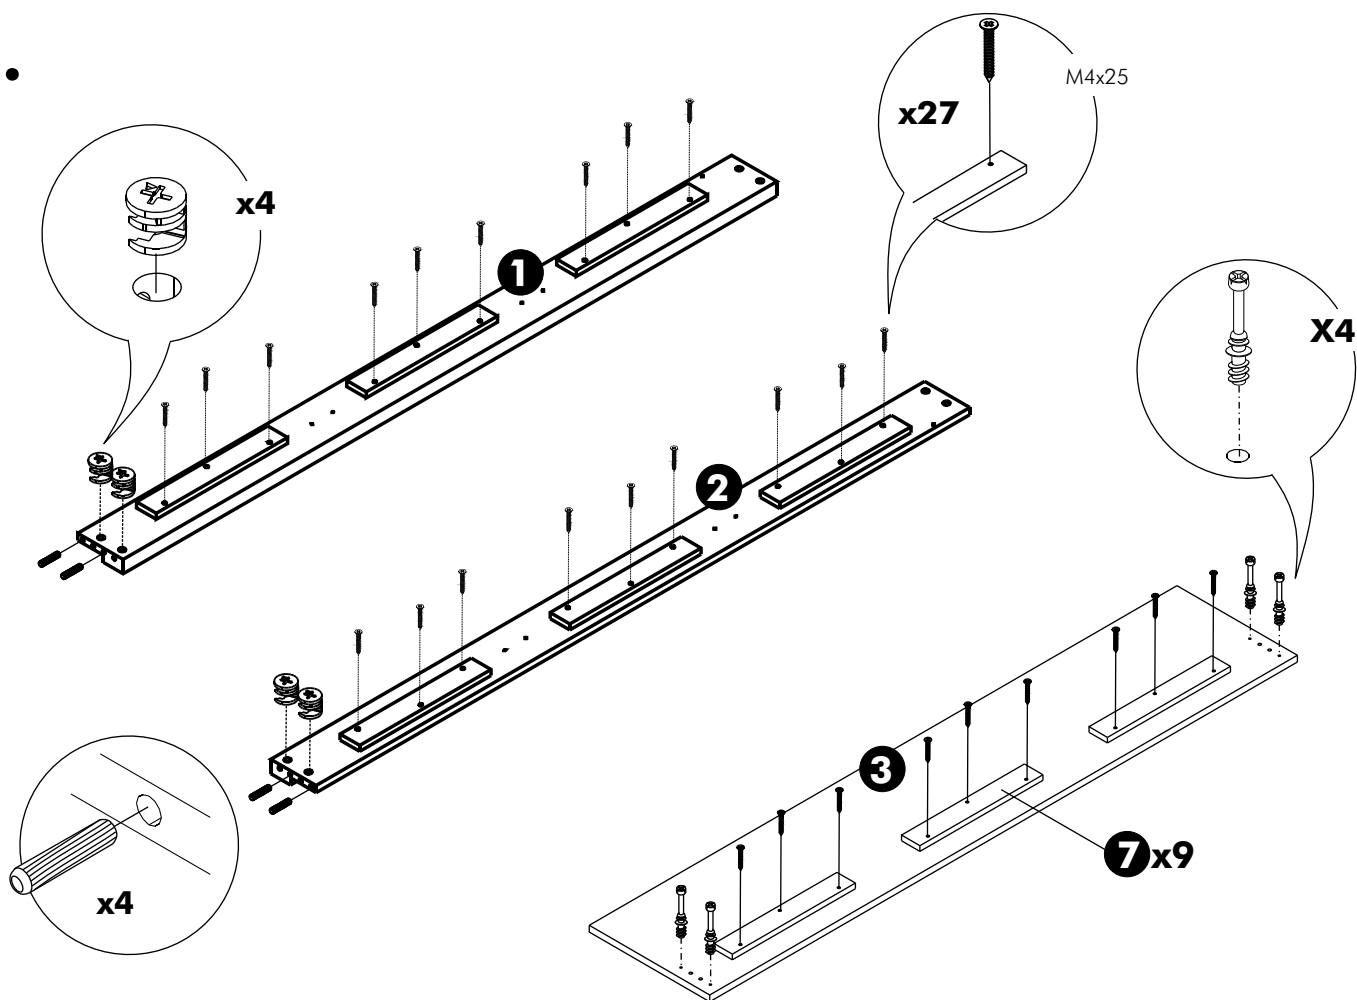


2.

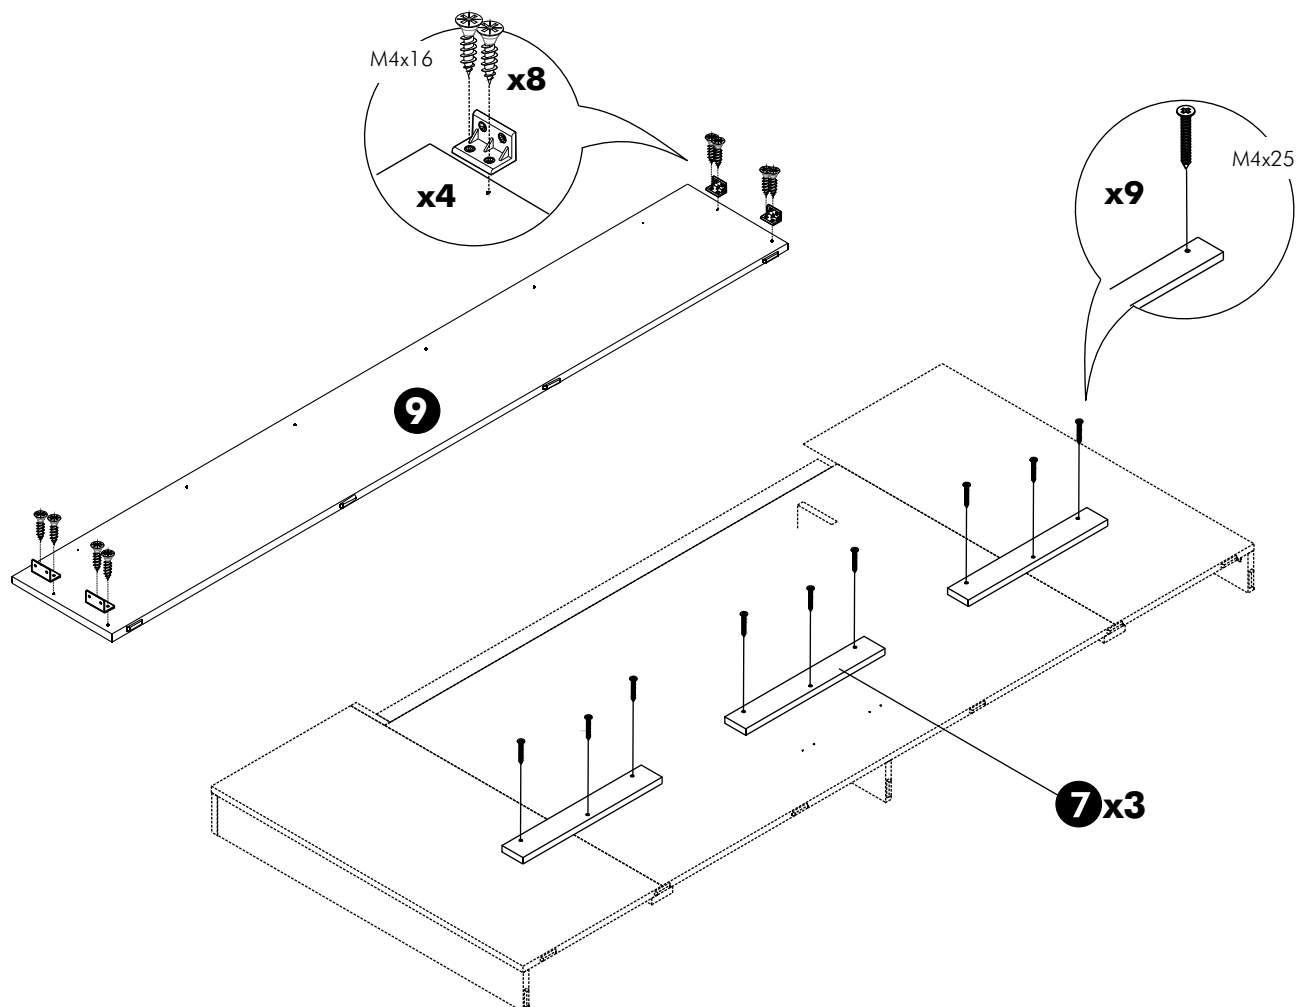


This diagram illustrates the assembly of the three main frame rails. Rail 1 is the front rail, Rail 2 is the right side rail, and Rail 3 is the left side rail. They are connected by a central cross-member. A circular inset shows a screw being tightened into a hole in the frame.


5.

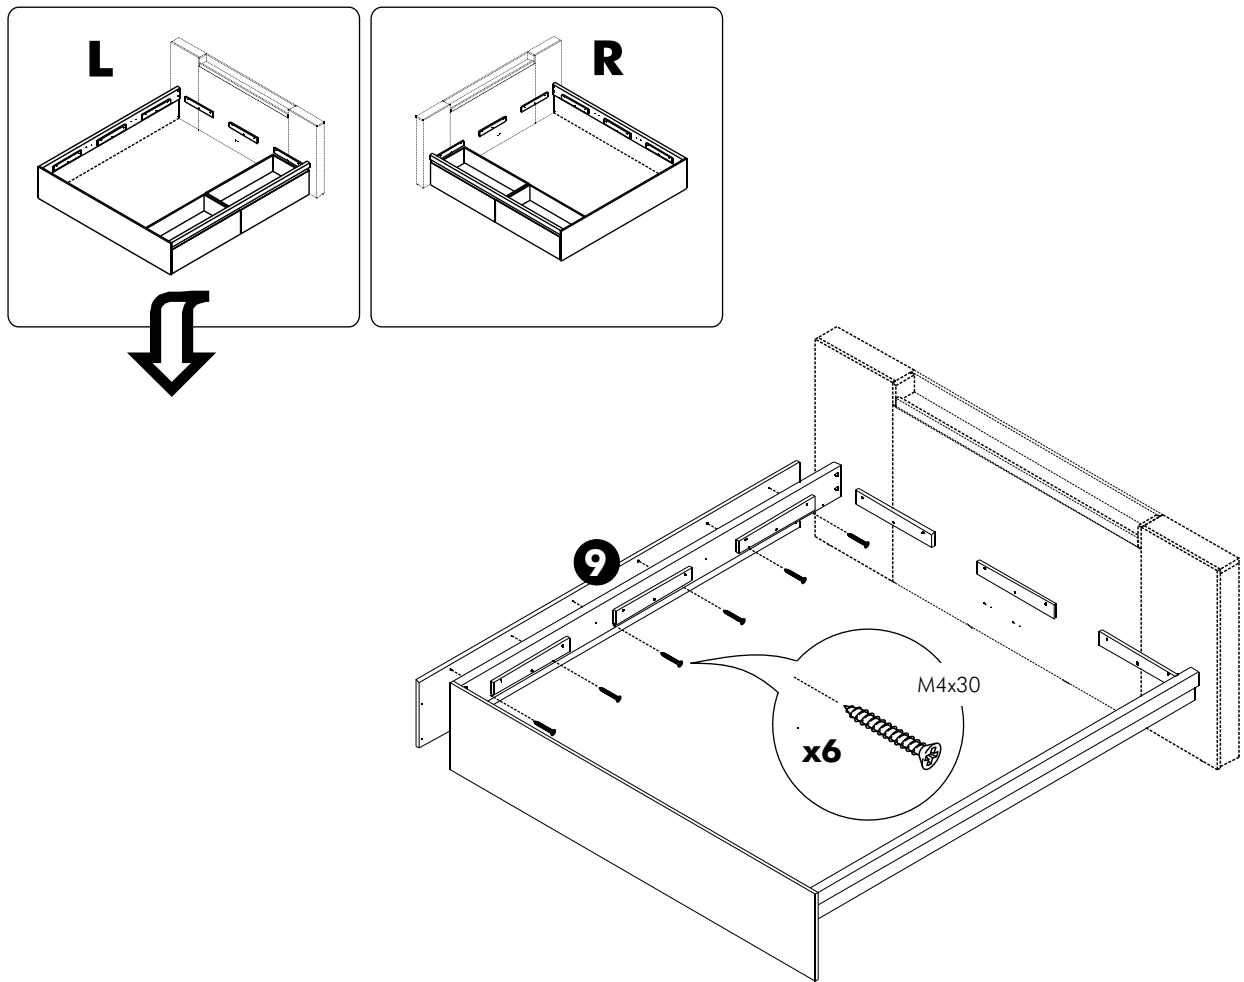


6.

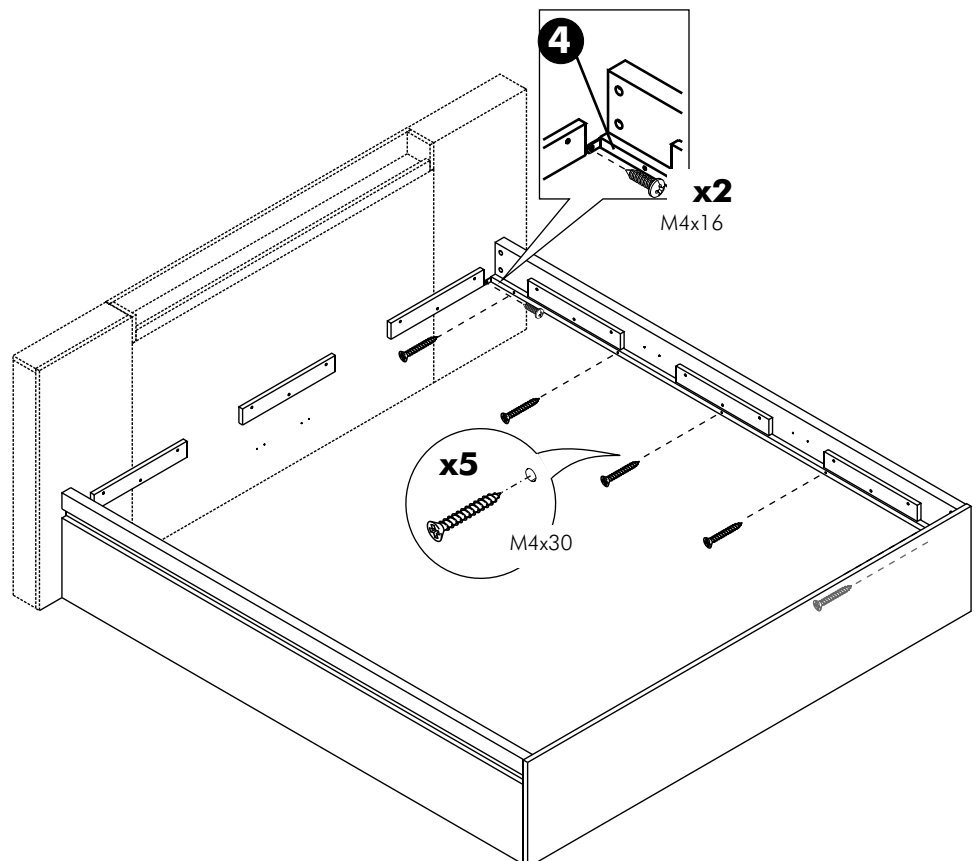


7.

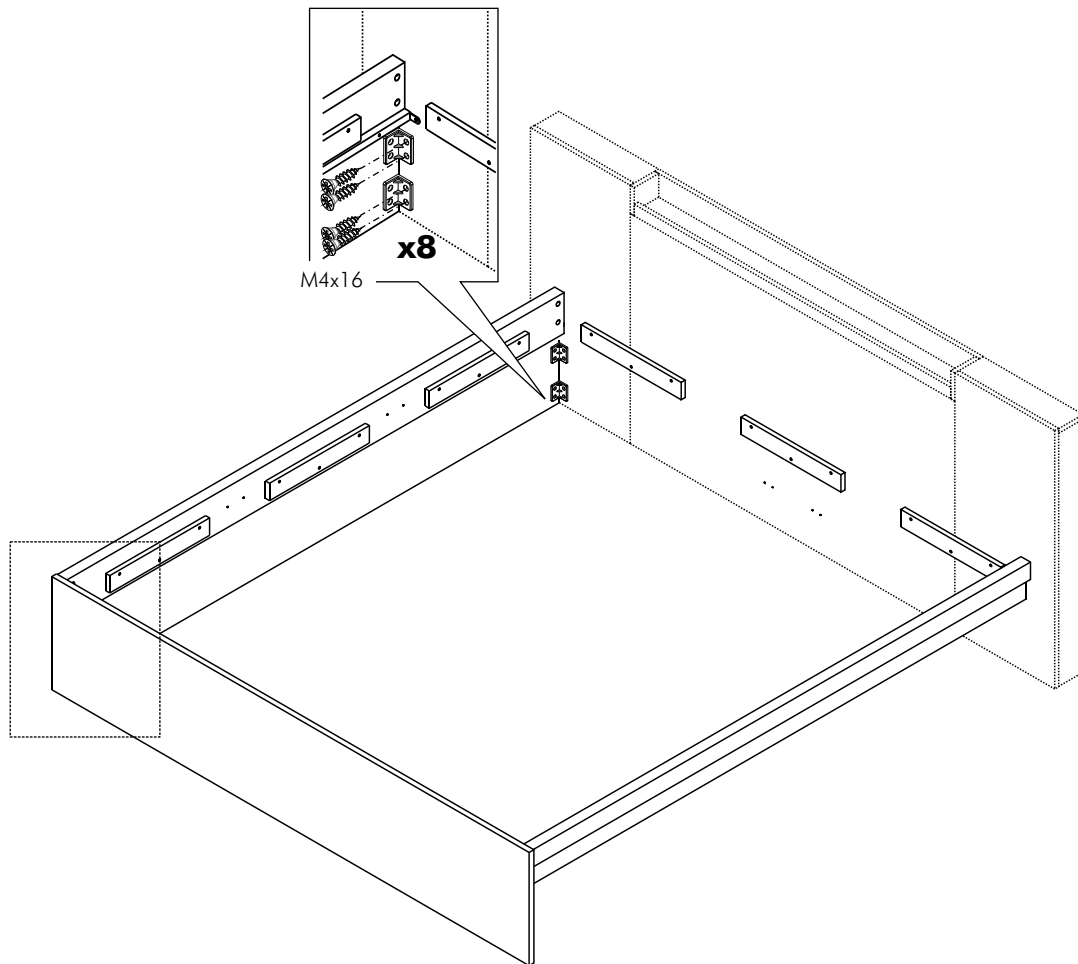

8.

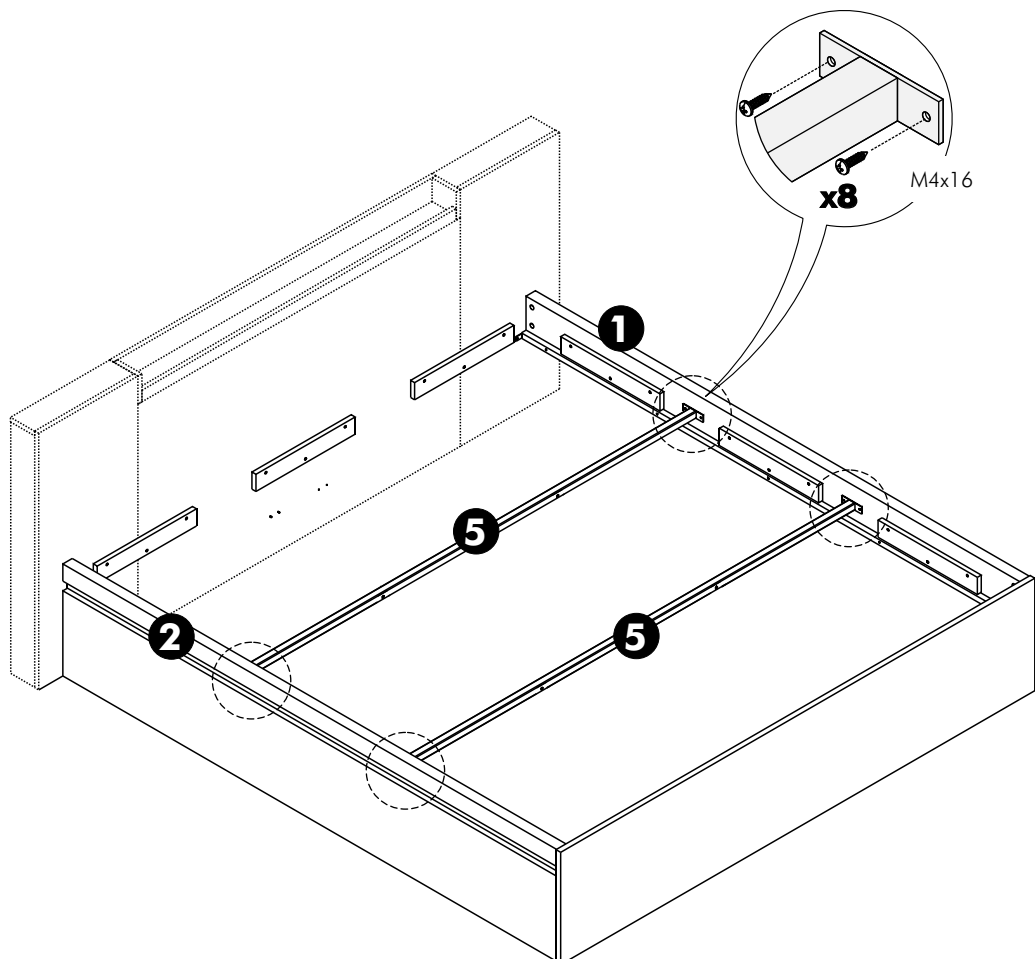

9.

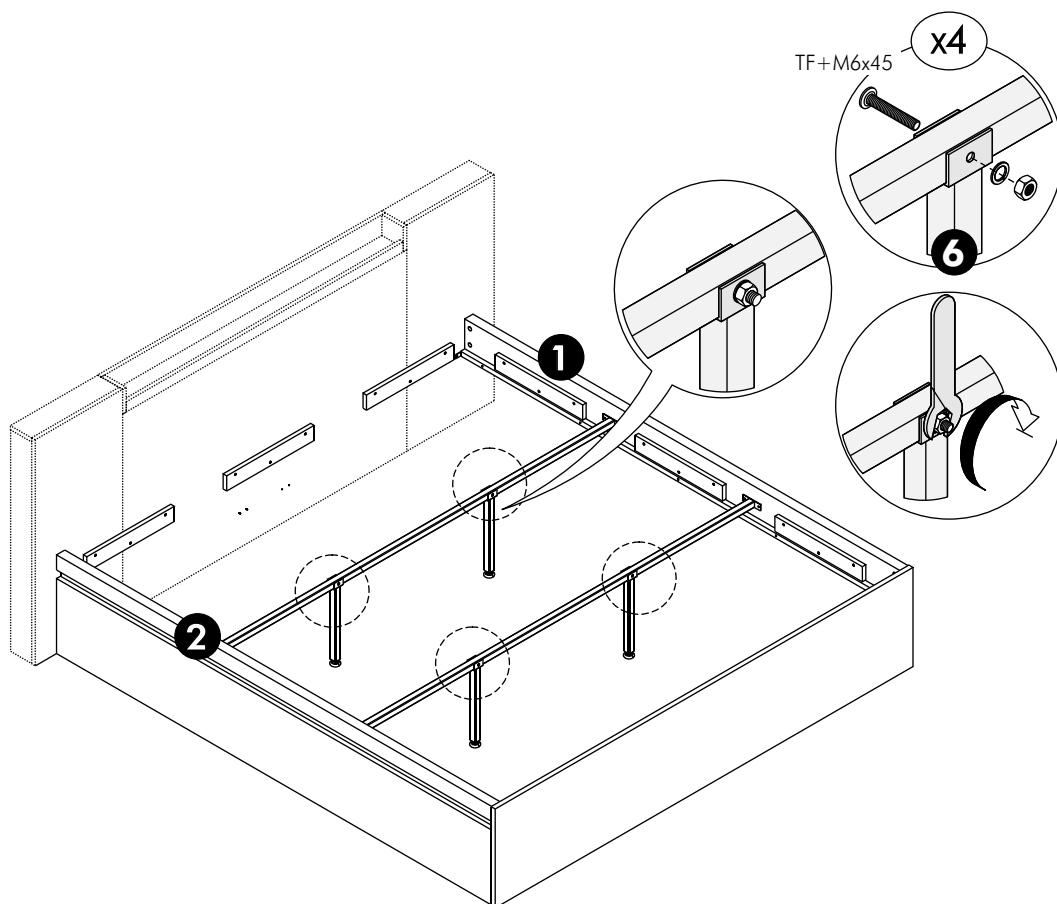

10.

