

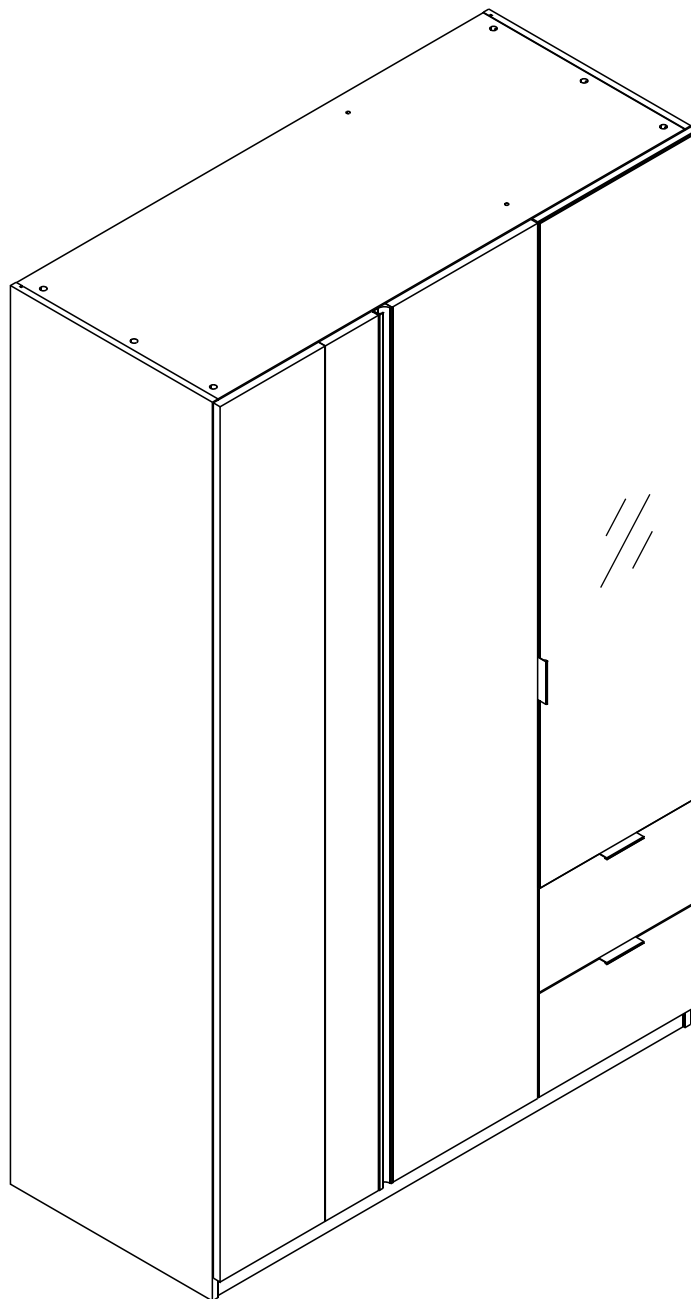
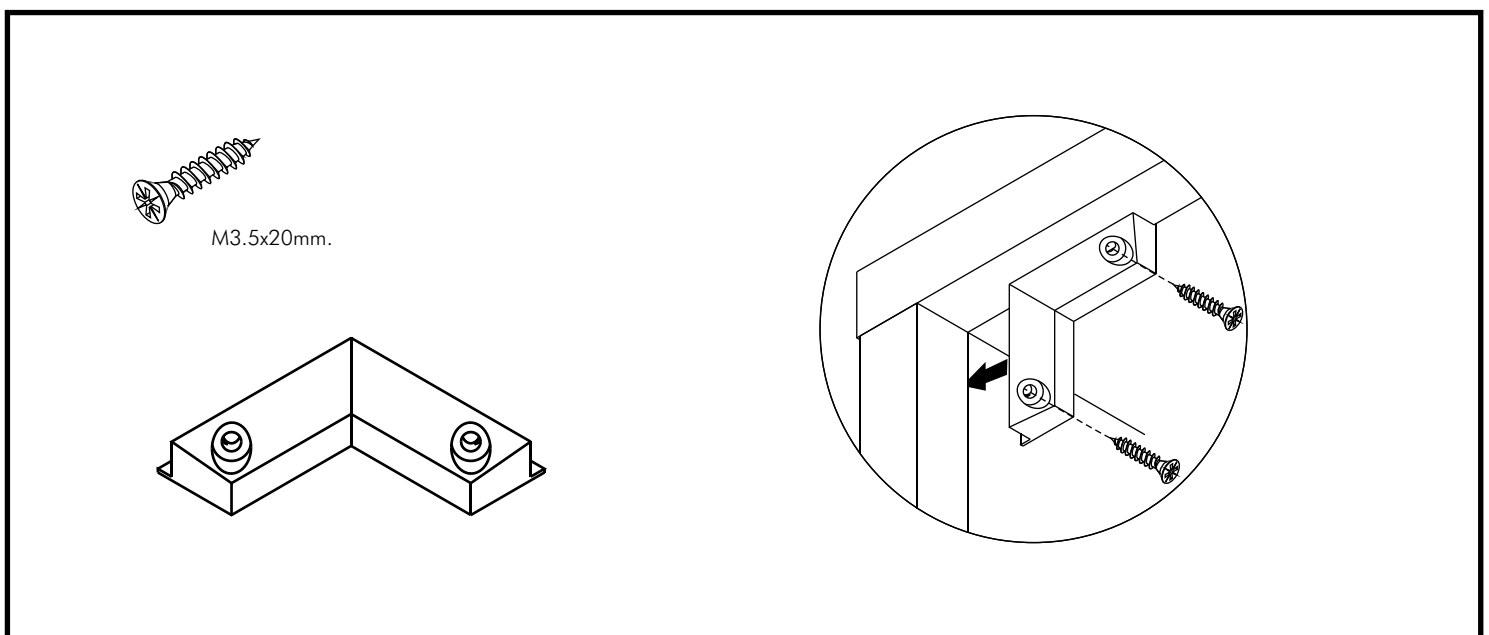


ARTISAN/D

Wardrobe 3 drs 135 cm.


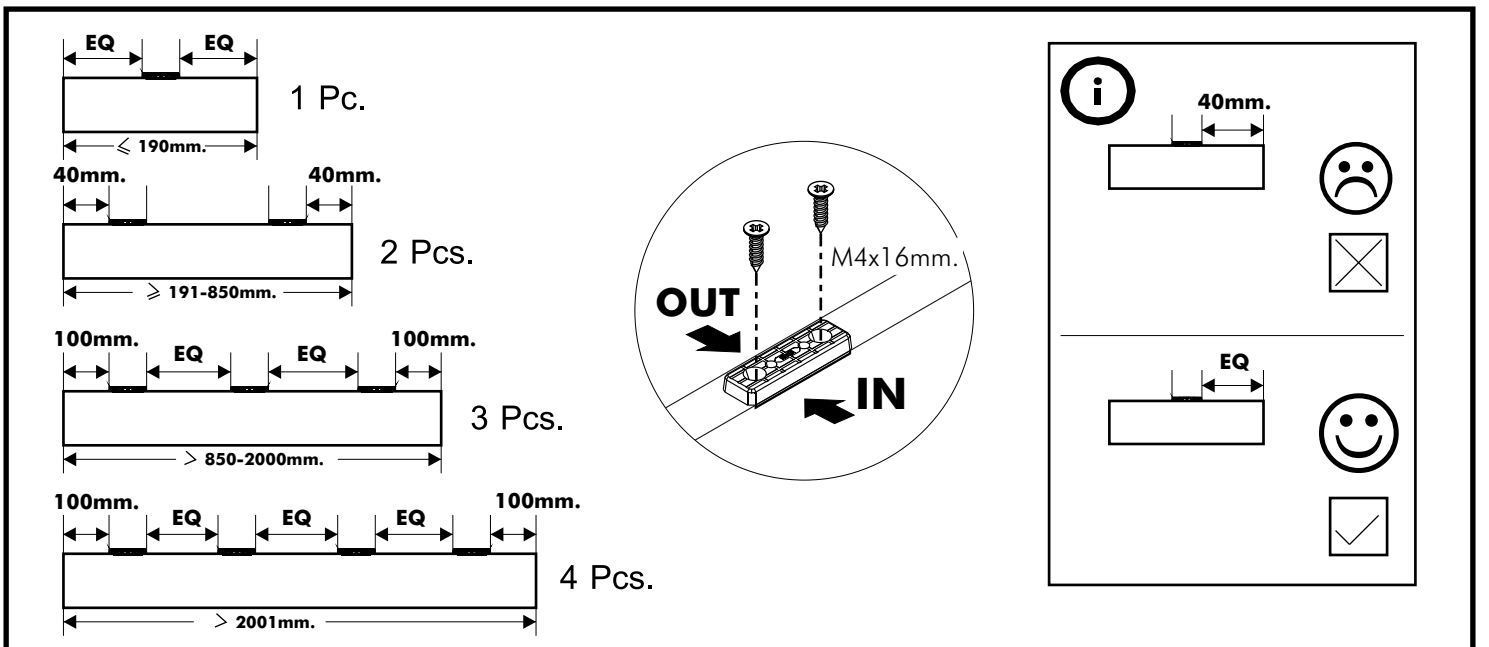


CONNECT SYSTEM

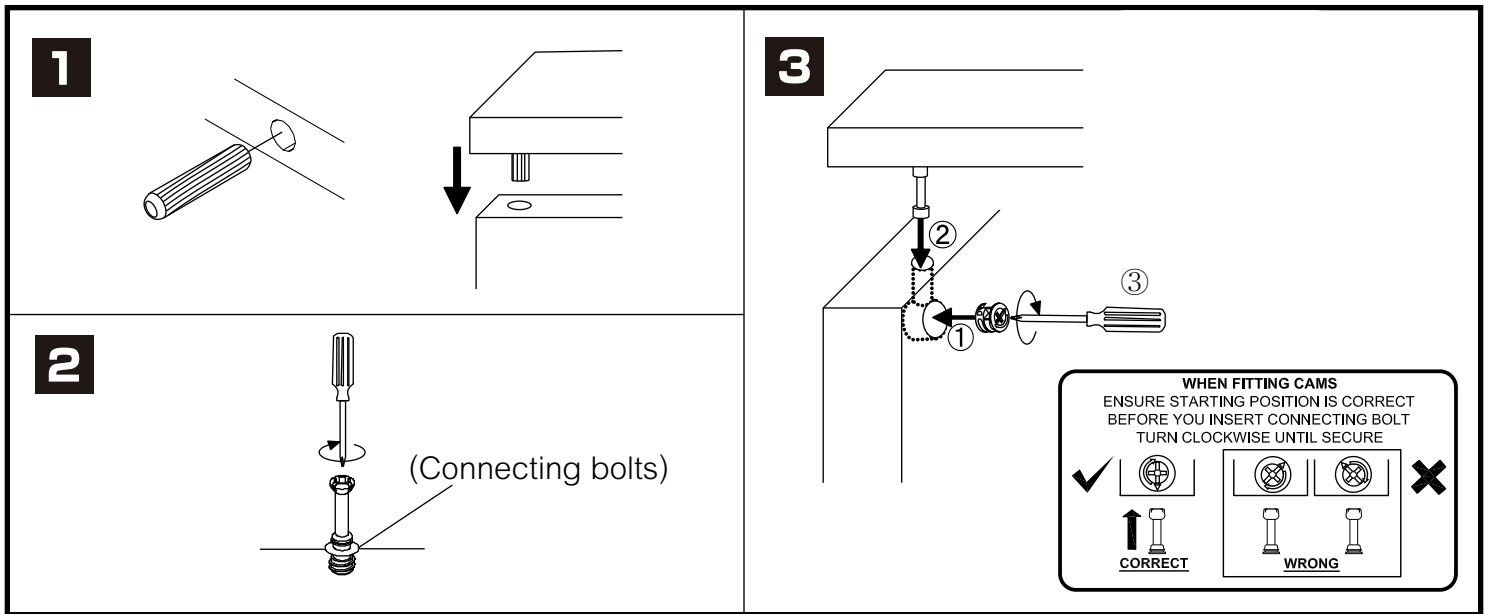



M4x16mm.

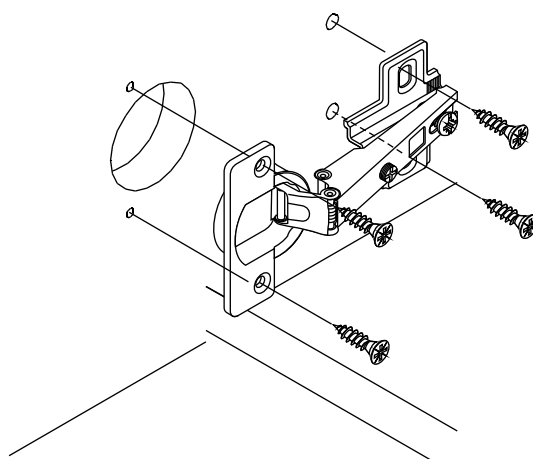
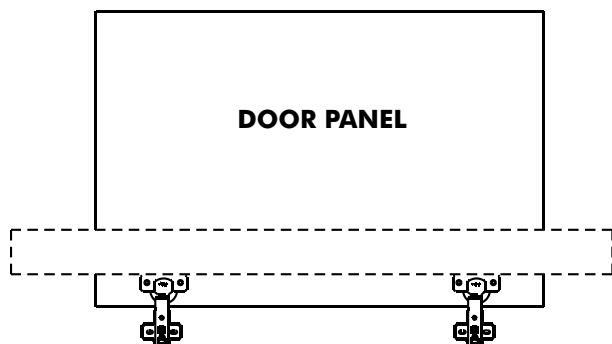


5/10.5 mm.







M3.5x13mm.


1

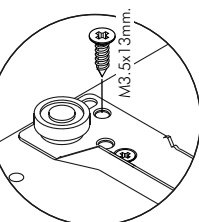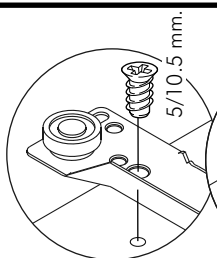

2

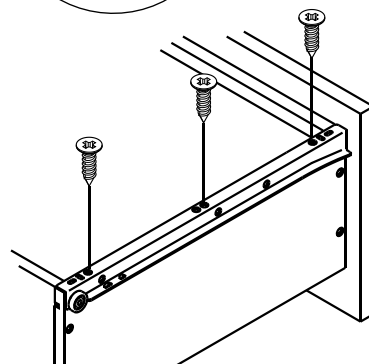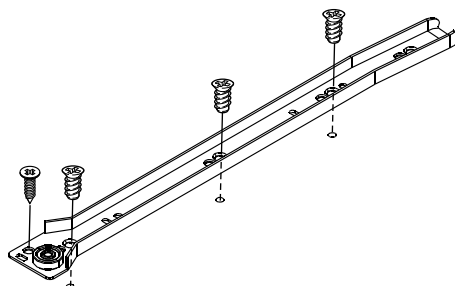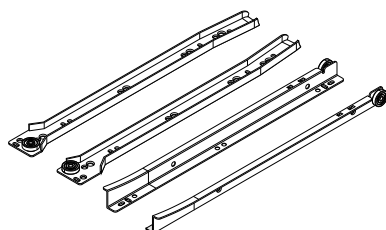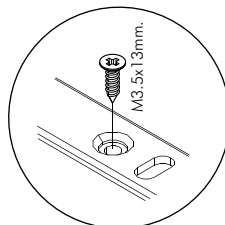


HARDWARE




x 27




x 27



x 47

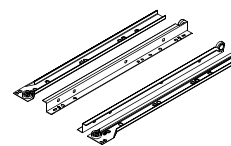

x 2 SET



x 12



F+ M4x16

x 42




#F+B M5x12/8

x 24




F+ M4x40

x 22



x 1



#M3.5x20(F)

x 4




P+ M3.5x16

x 30



F+ M3x13

x 6




x 3



TFL4 M6x23

x 8



TF+M6x40

x 4



F+M3.5x25

x 15



x 5



F+ M3.5x13

x 24



x 6



x 4



x 1




P+ 5x3/4

x 3



x 4



x 1



x 5



x 5




F+ 5x1/2"

x 4




#F+B M5x10.5


x 12




x 2




x 9

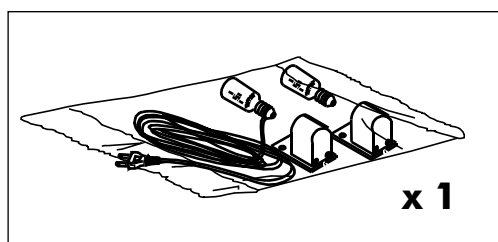


x 1

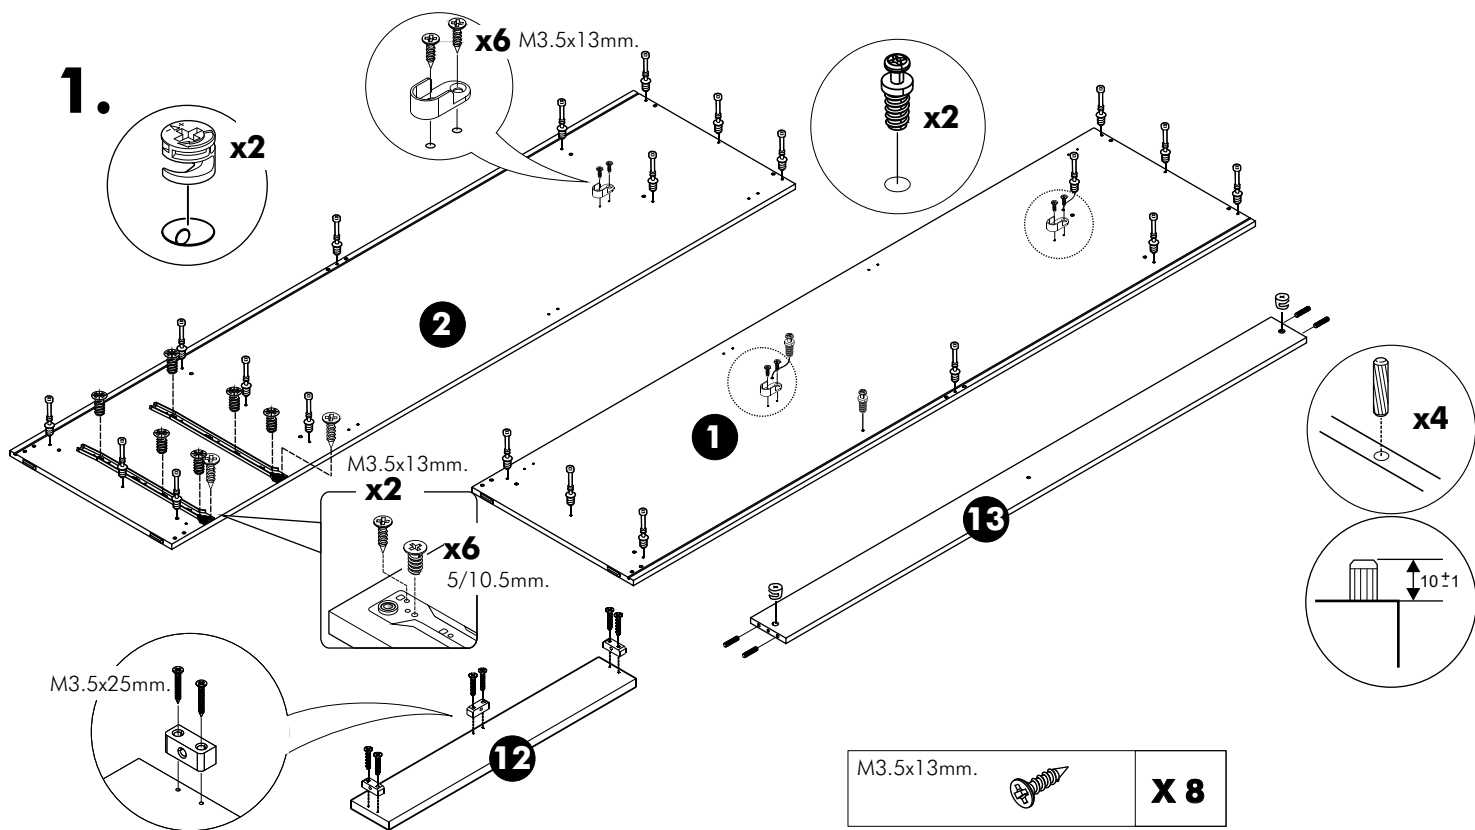


	X 21		1SET
	X 2		X 6
	X 4		X 3

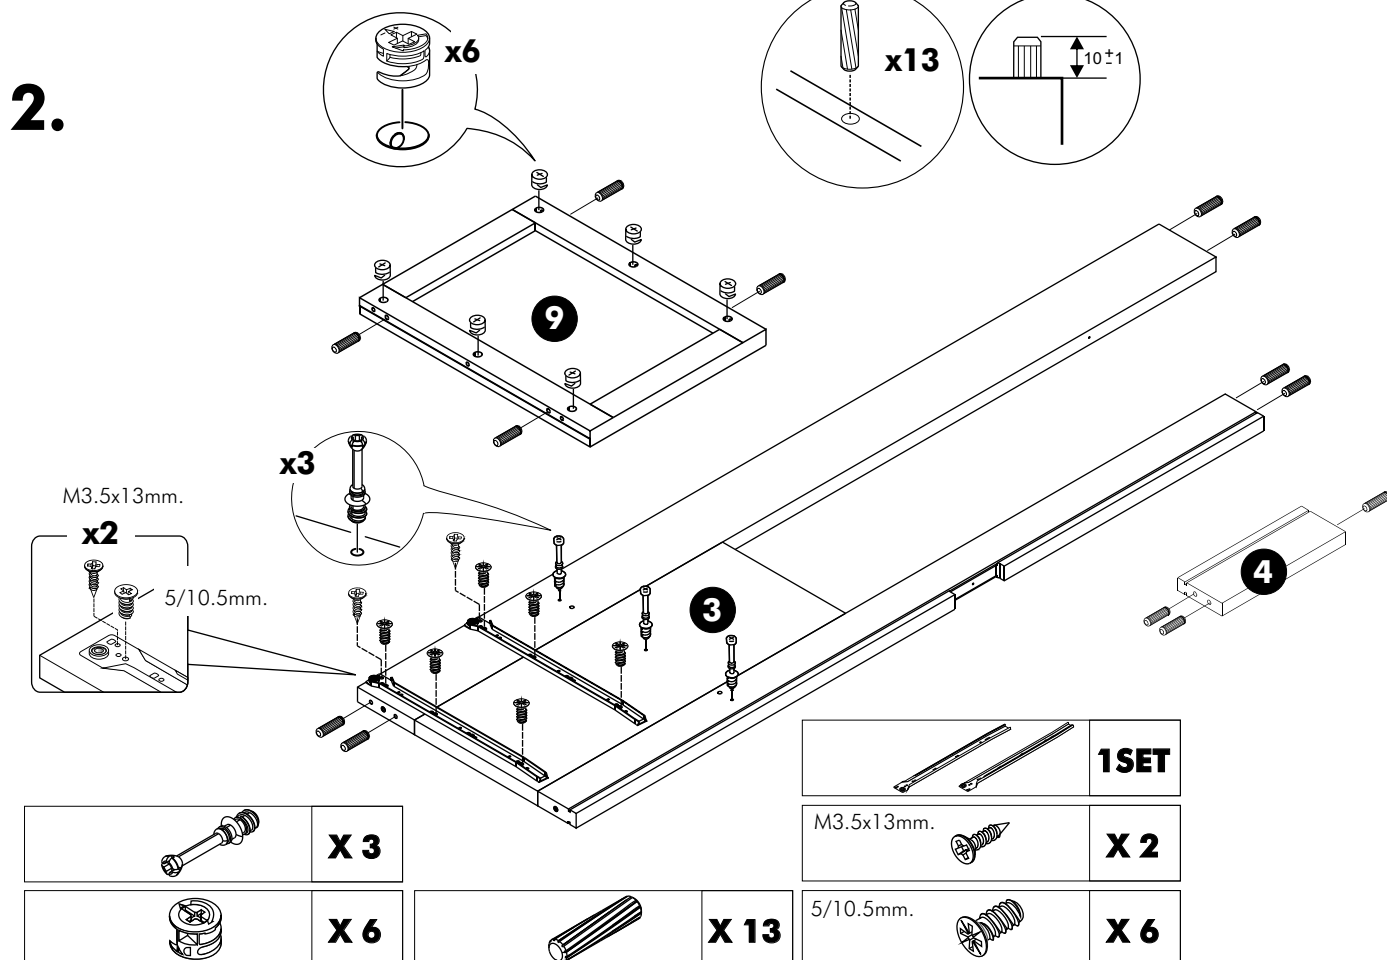

3.

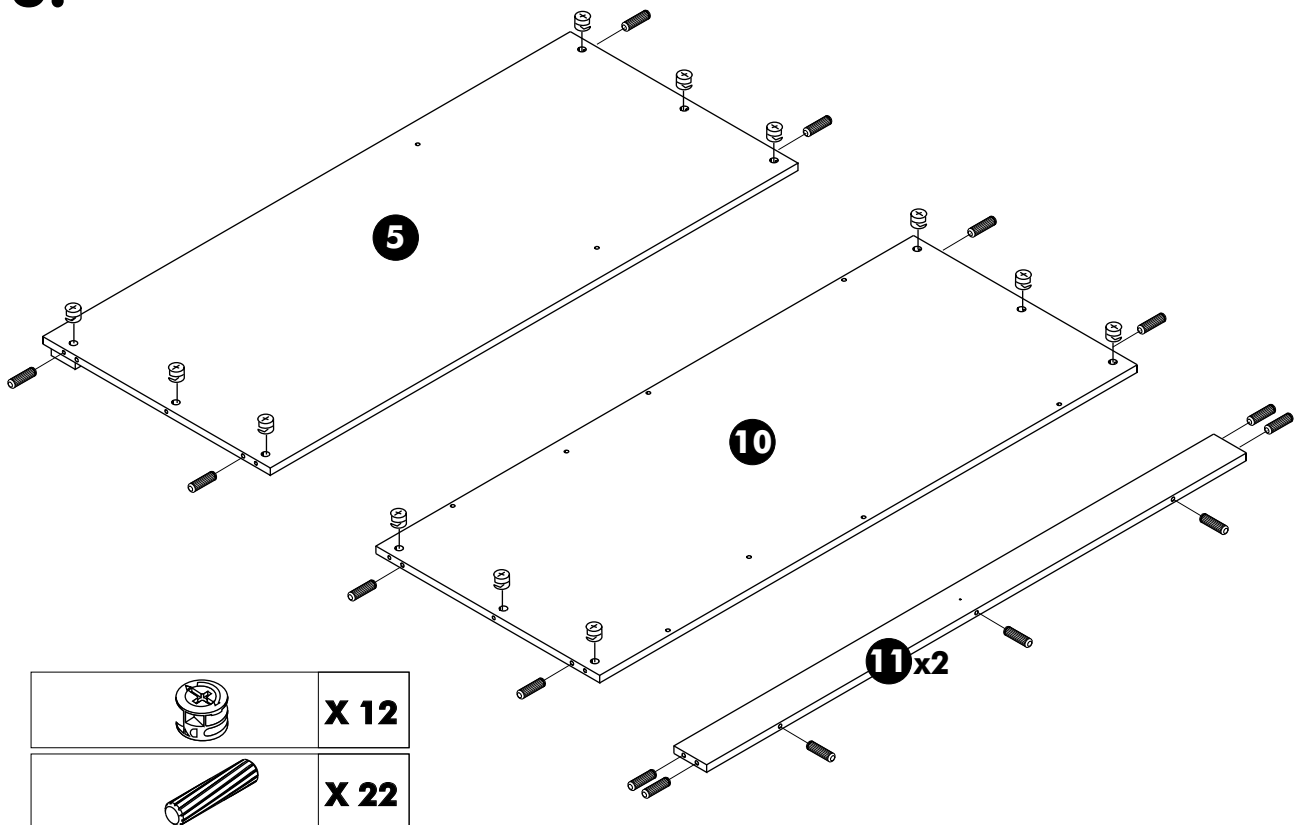


4.


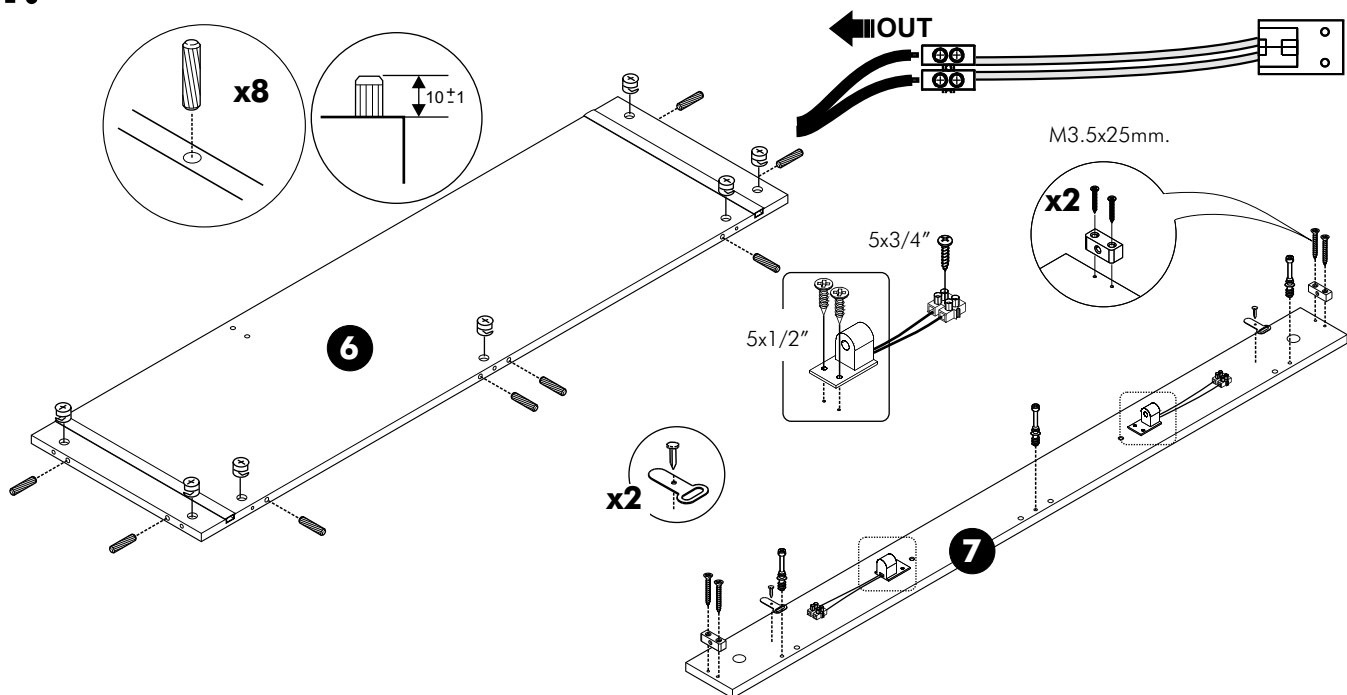


	X 3	M3.5x25mm.		X 4		X 2	
	X 7			X 2		X 2	
	X 8	5x3/4"		X 2	5x1/2"		X 4



5.

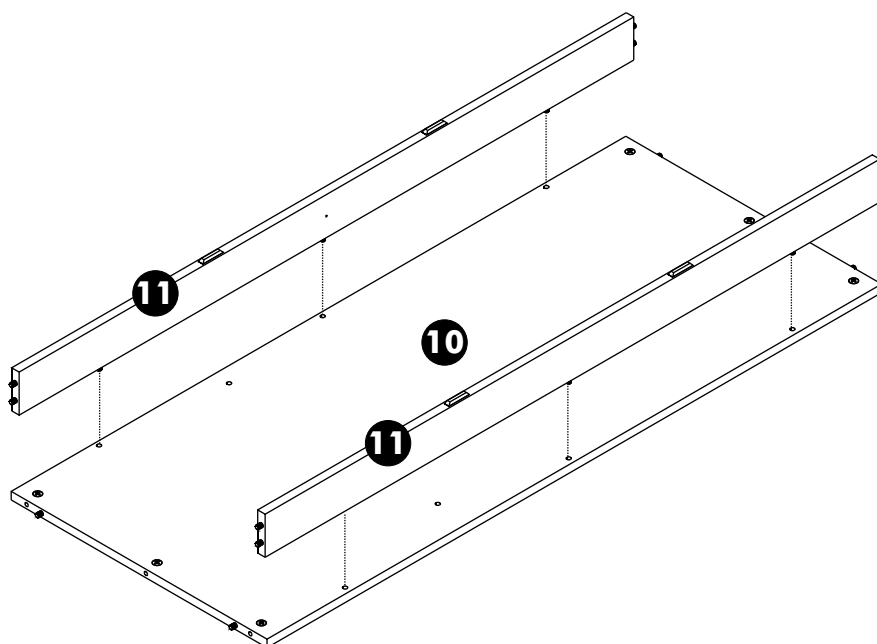



6.

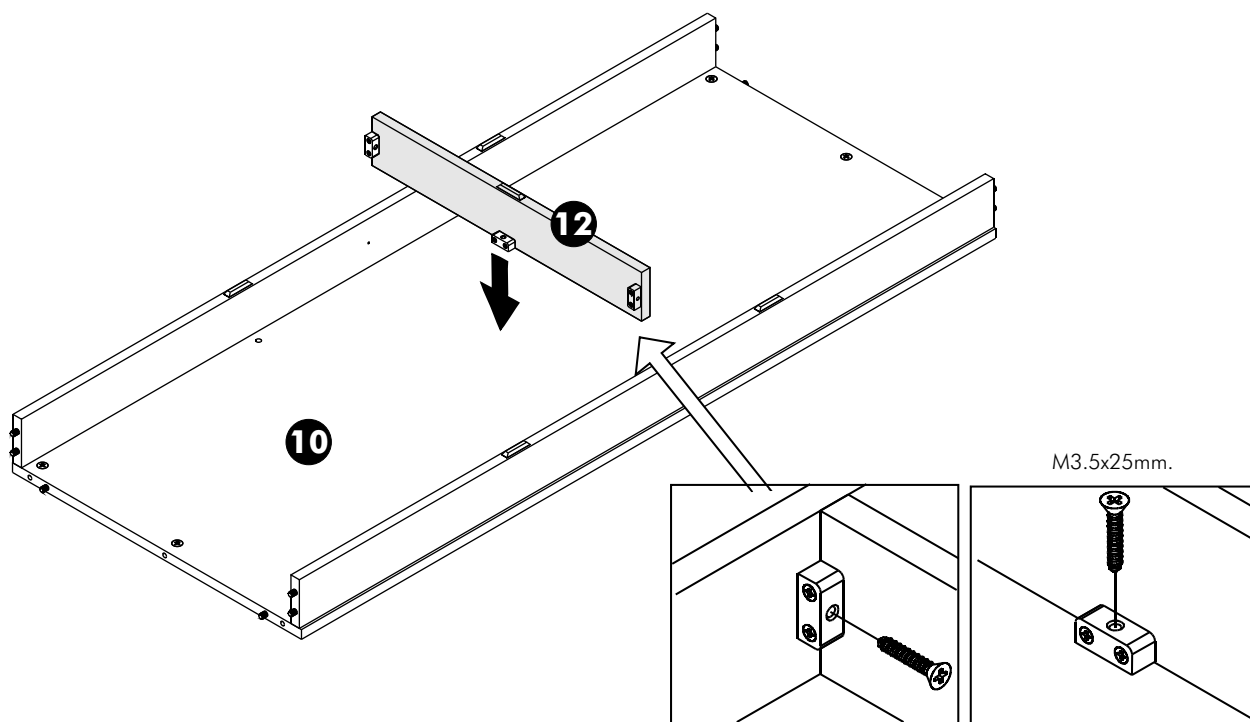

7.

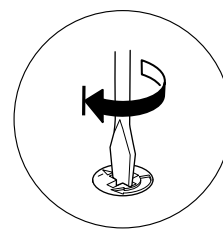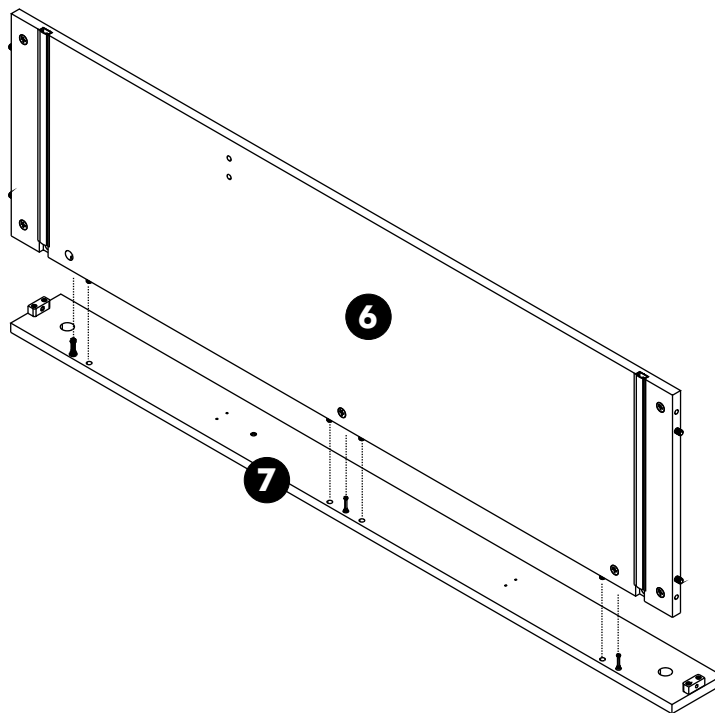


8.

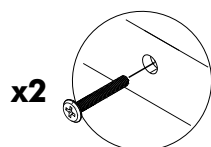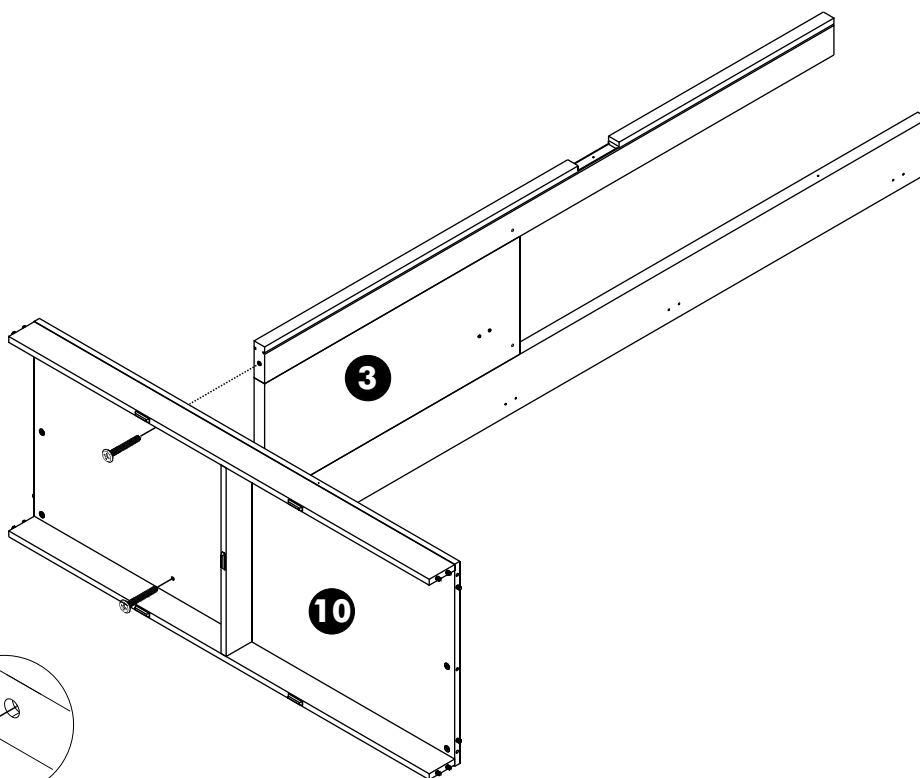


x2

M6x40mm.



X 2

9.

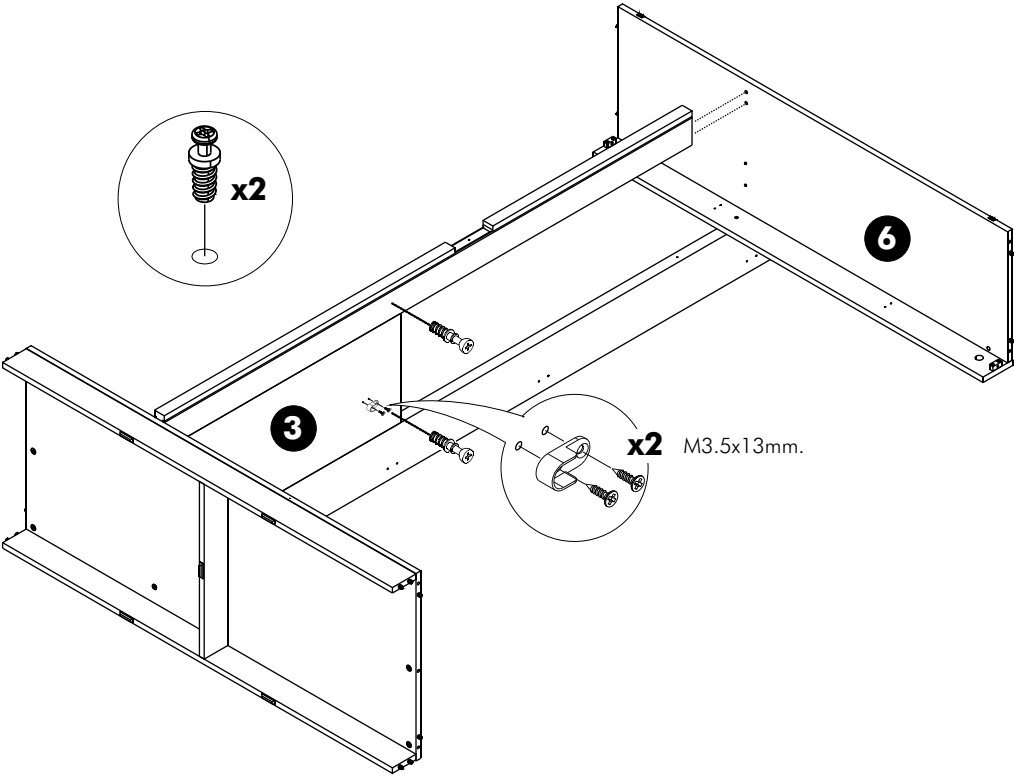


M3.5x13mm.		X 2
------------	--	------------


	X 1
---	------------

	X 2
---	------------



10.

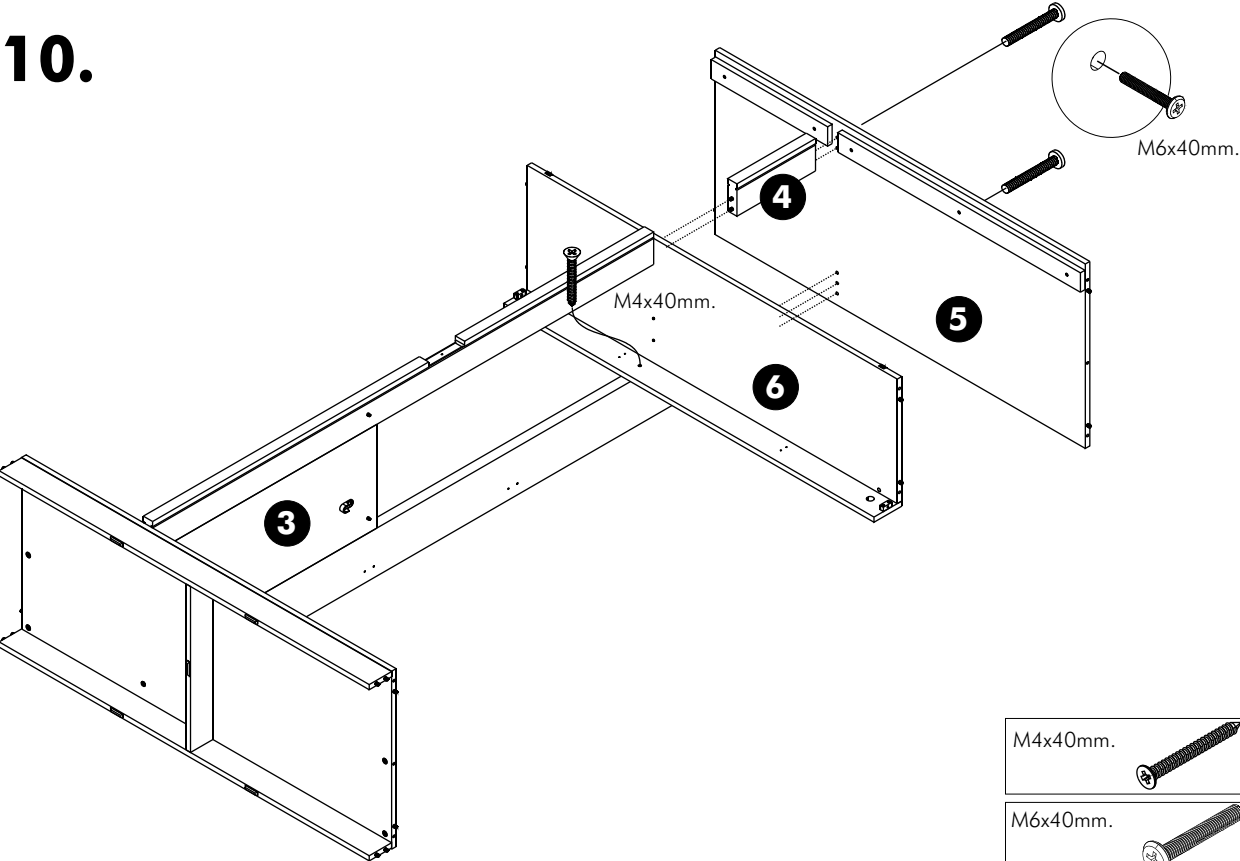



M4x40mm.		X 1
----------	---	------------

M6x40mm.		X 2
----------	---	------------


11.

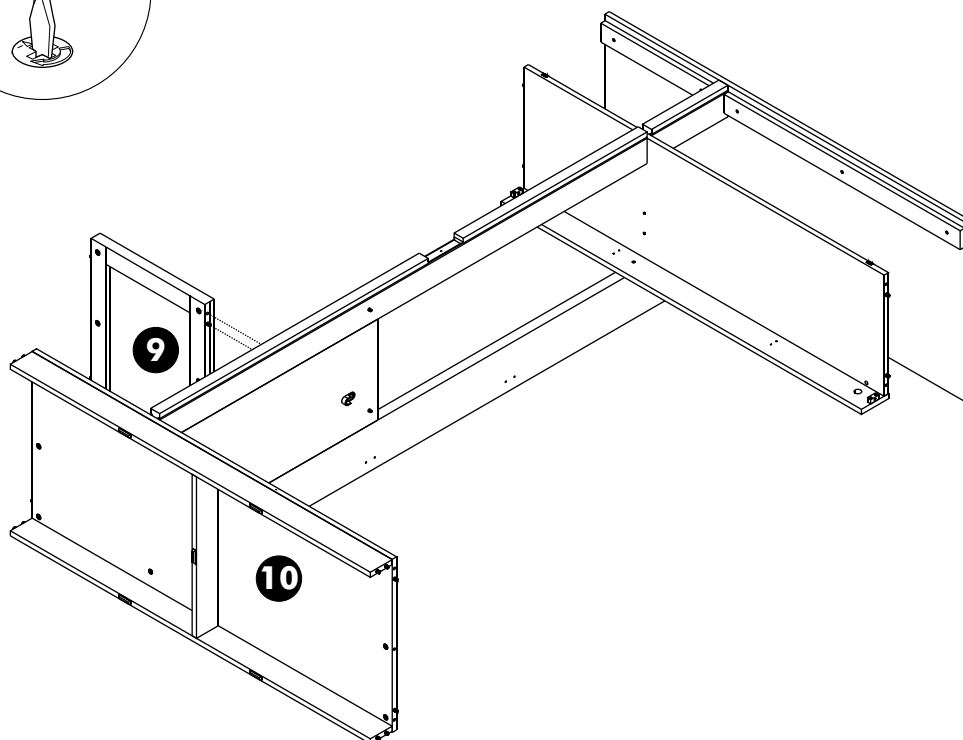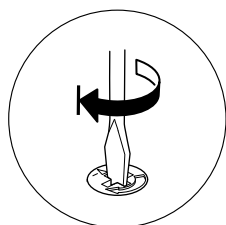


12.

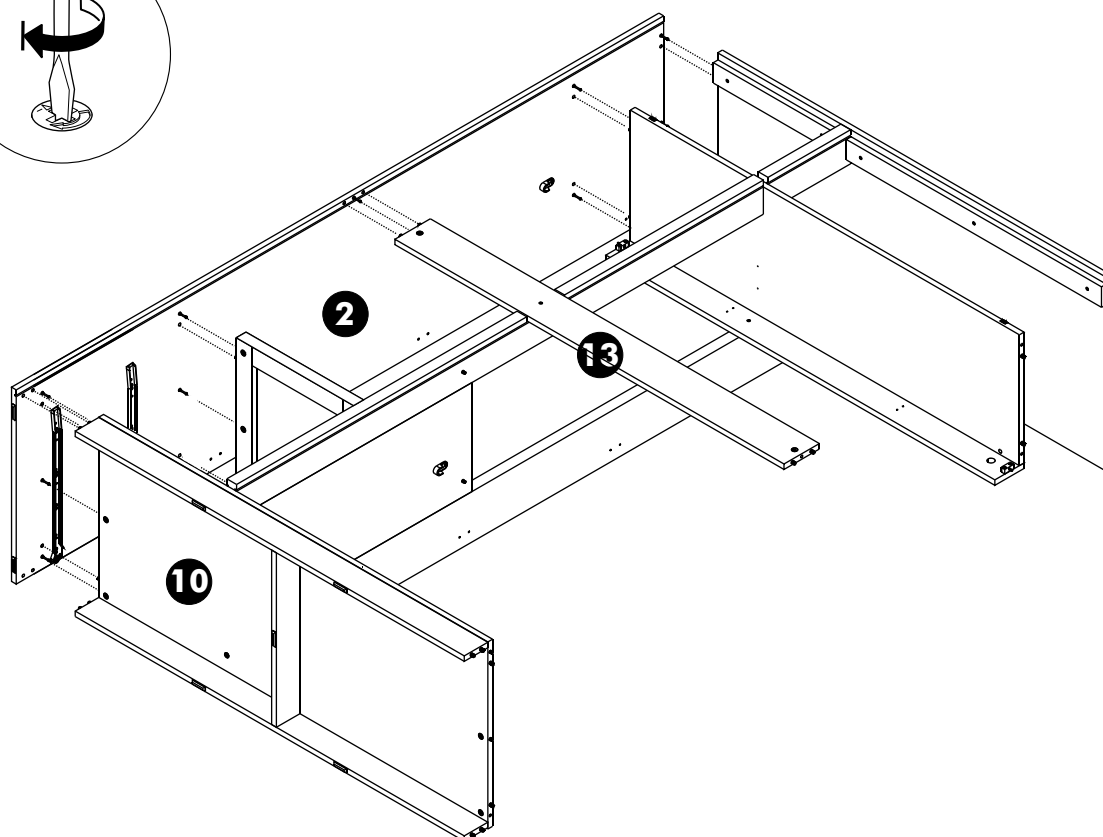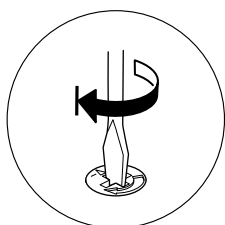


13.

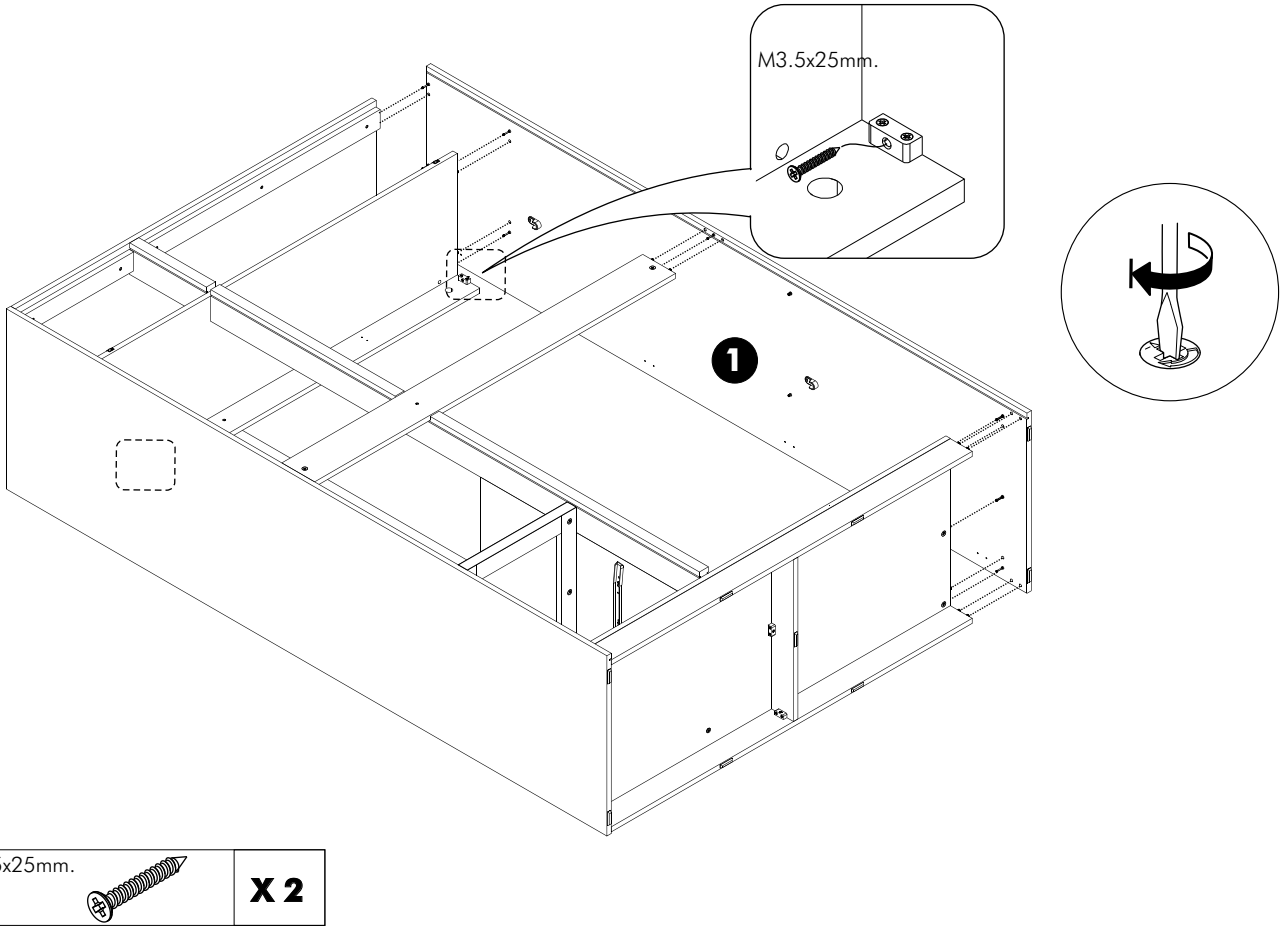

14.

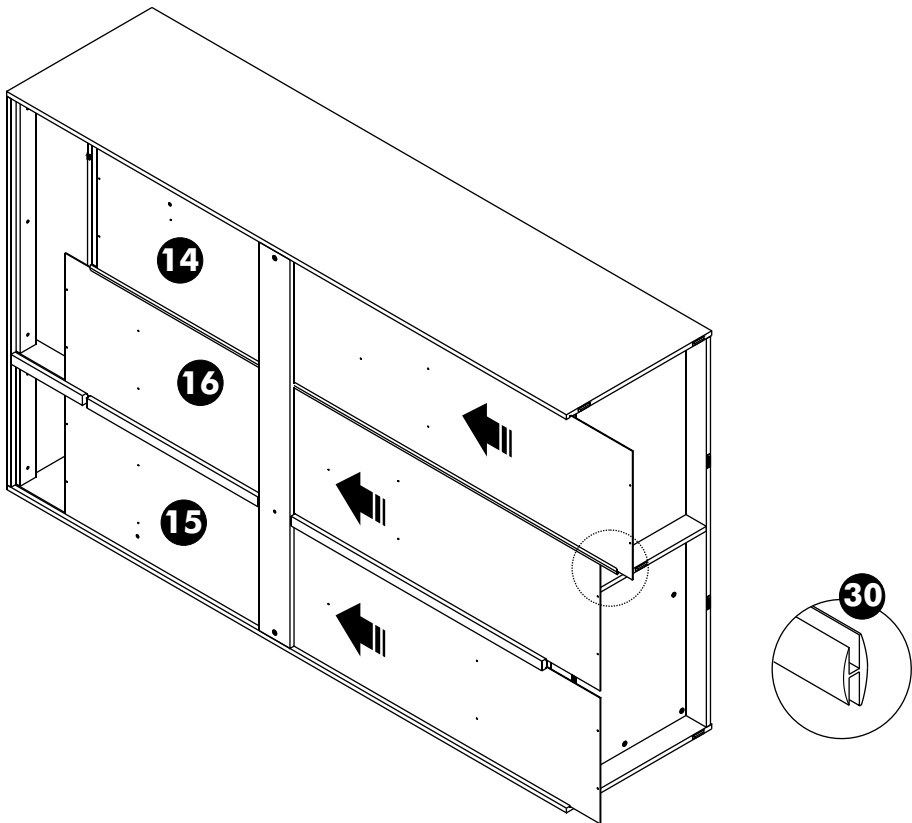

15.

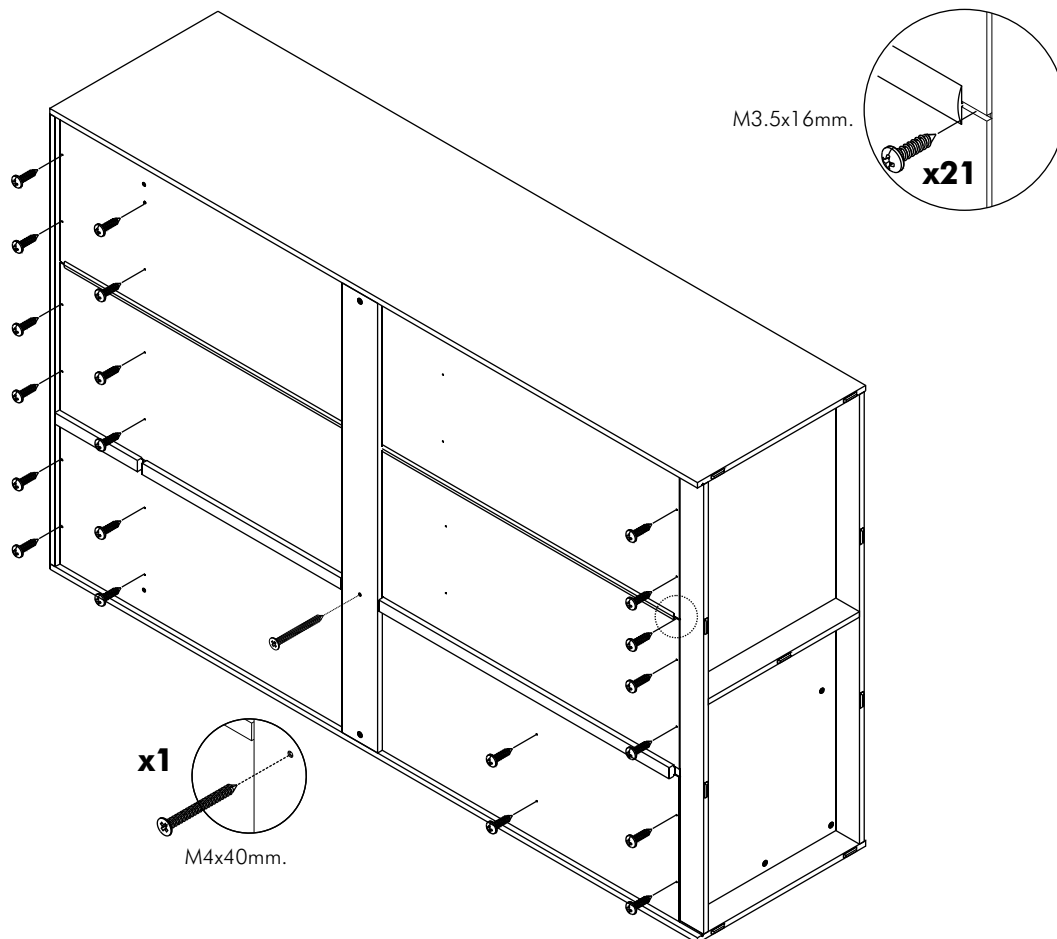

M4x40mm.




X 1

M3.5x16mm.




X 21






16.

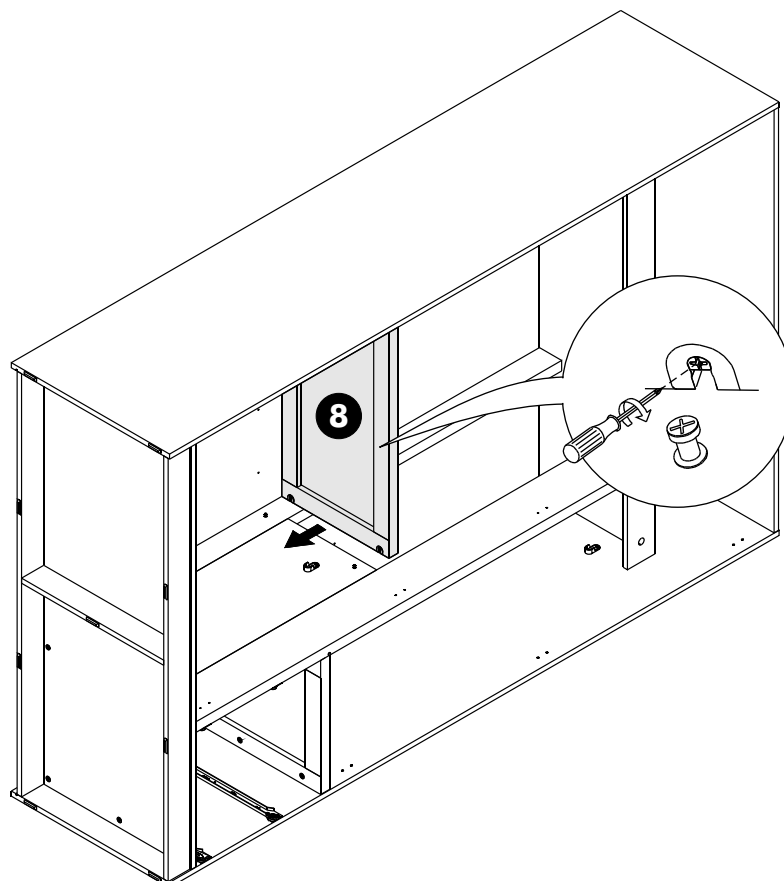

17.





18.

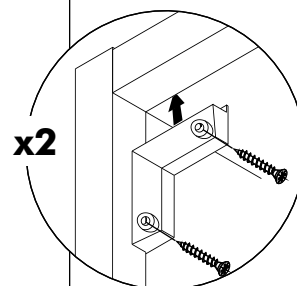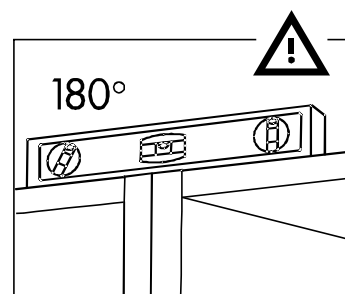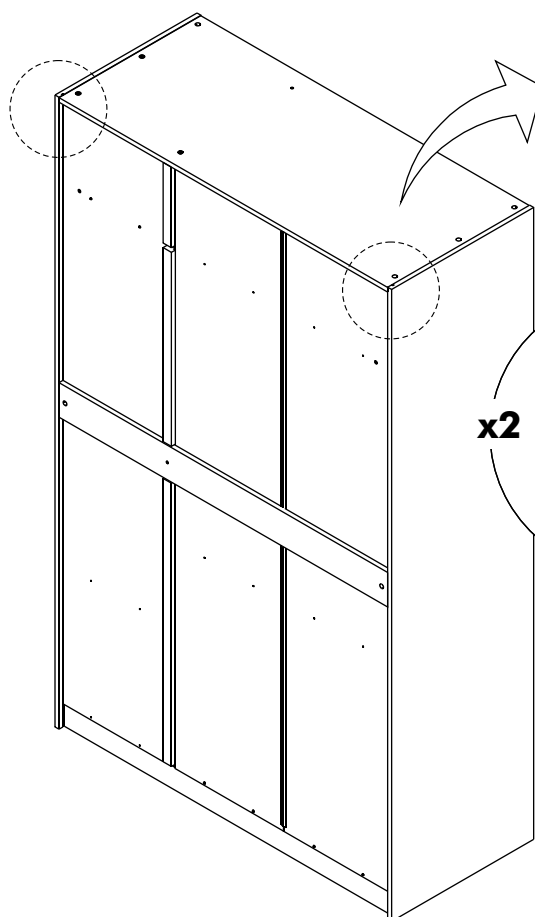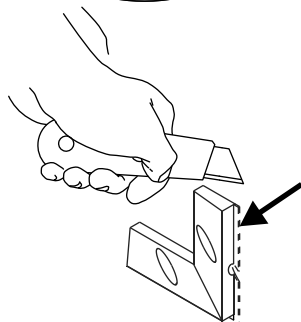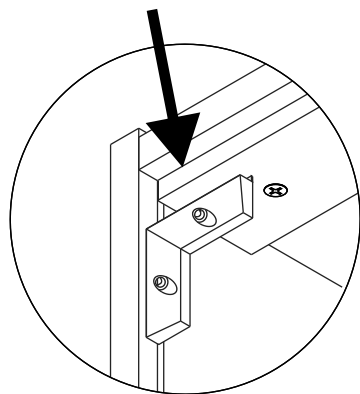




M3.5x20mm.

19.

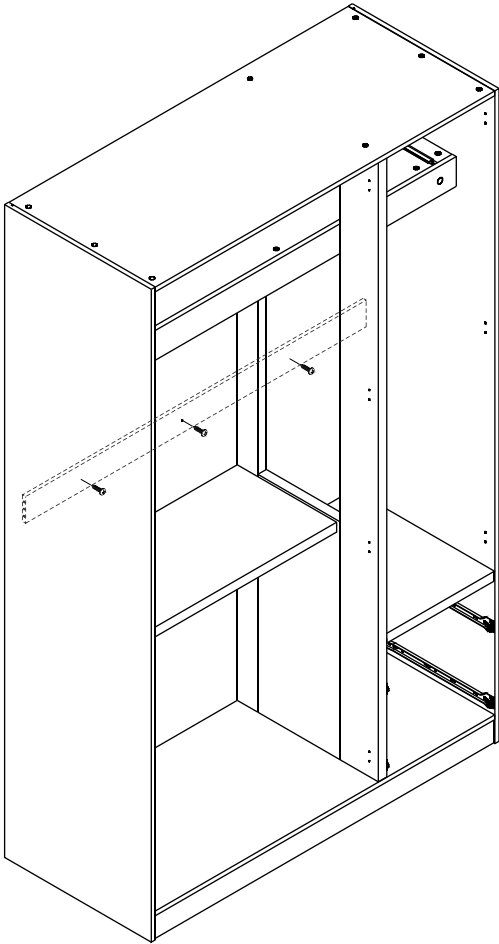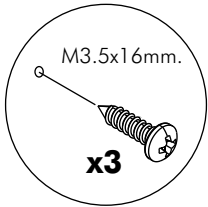


M3.5x16mm.		X 3
------------	---	------------

20.

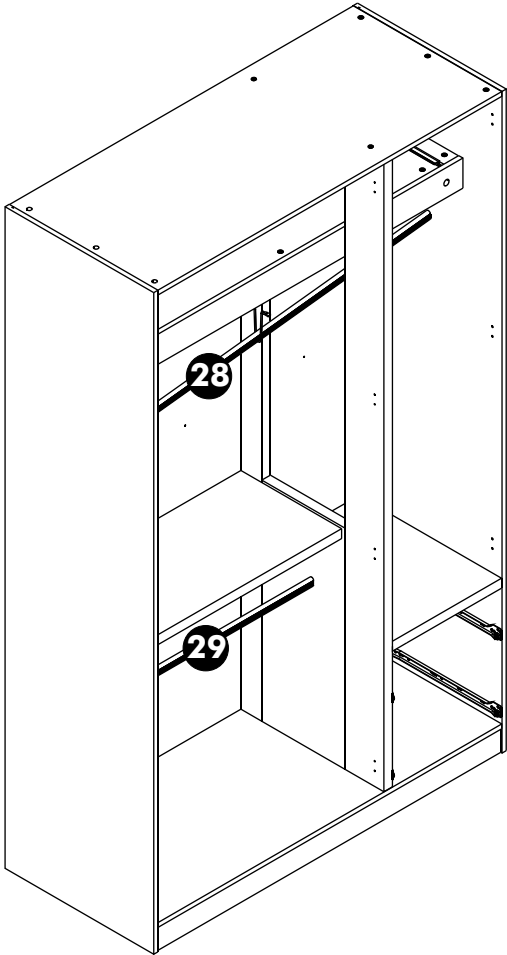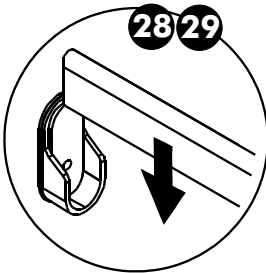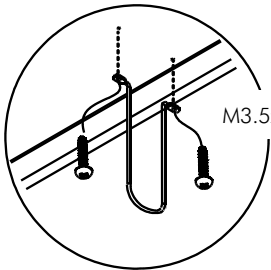

M3.5x16mm.		X 2
		X 1


21.

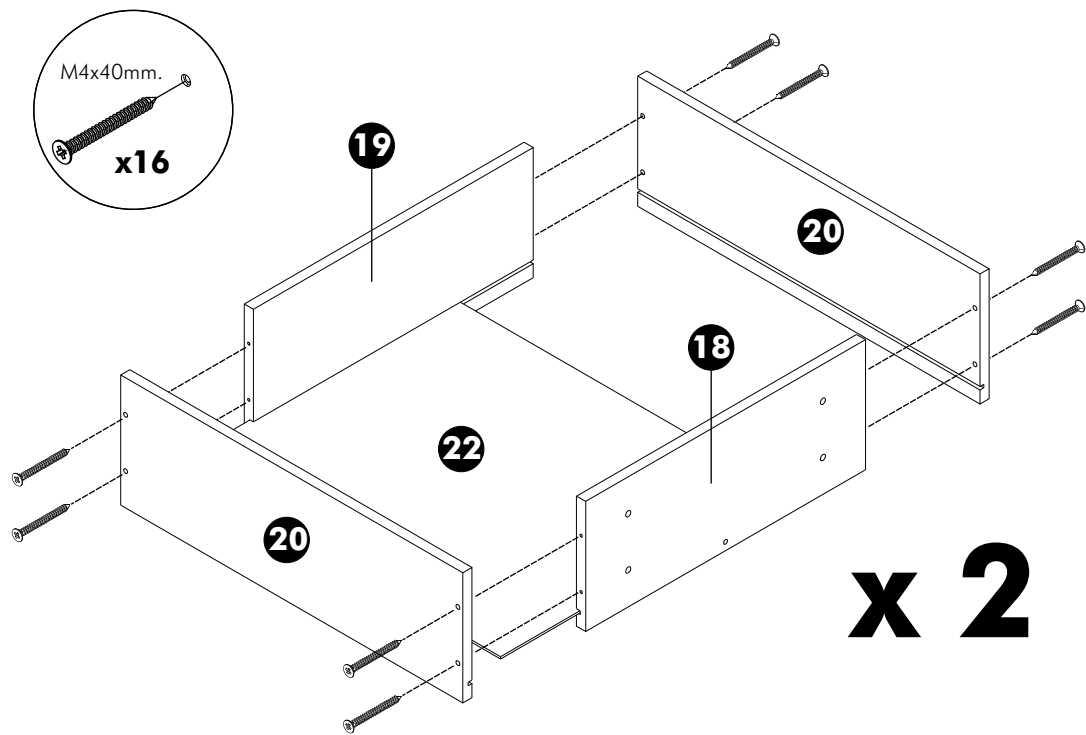


x 2

M4x40mm.		X16
----------	---	------------


22.

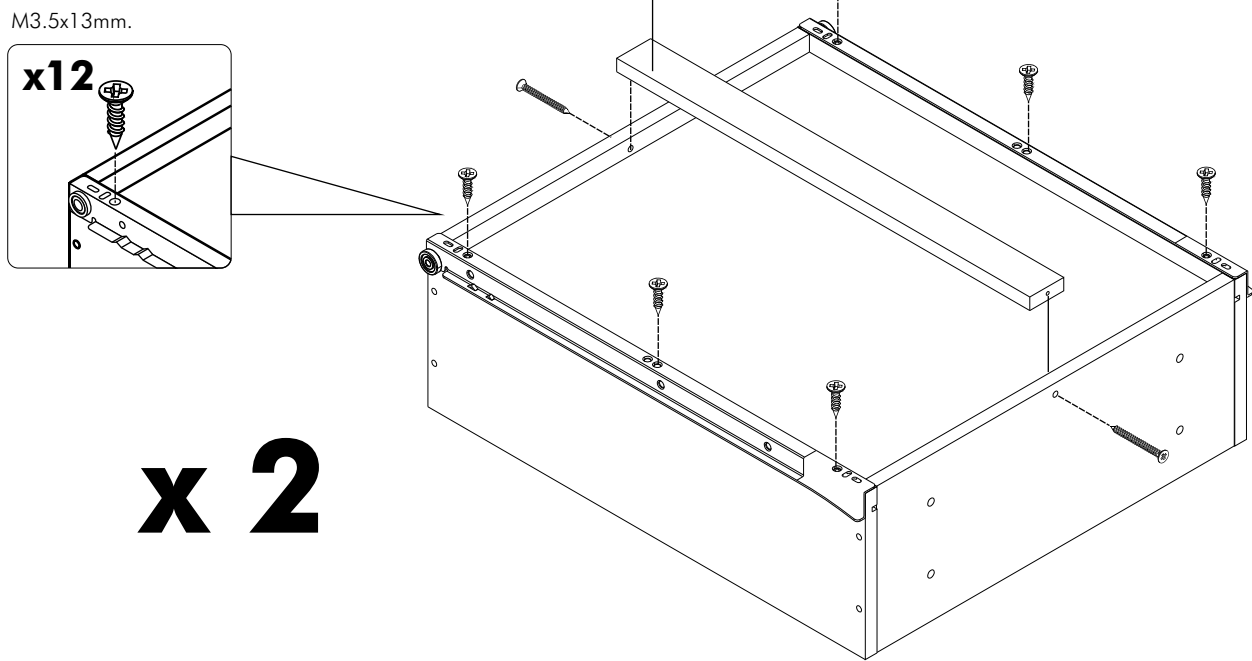


x 2

	2SET		
M4x40mm. 	X 4	M3.5x13mm. 	X 12


23.

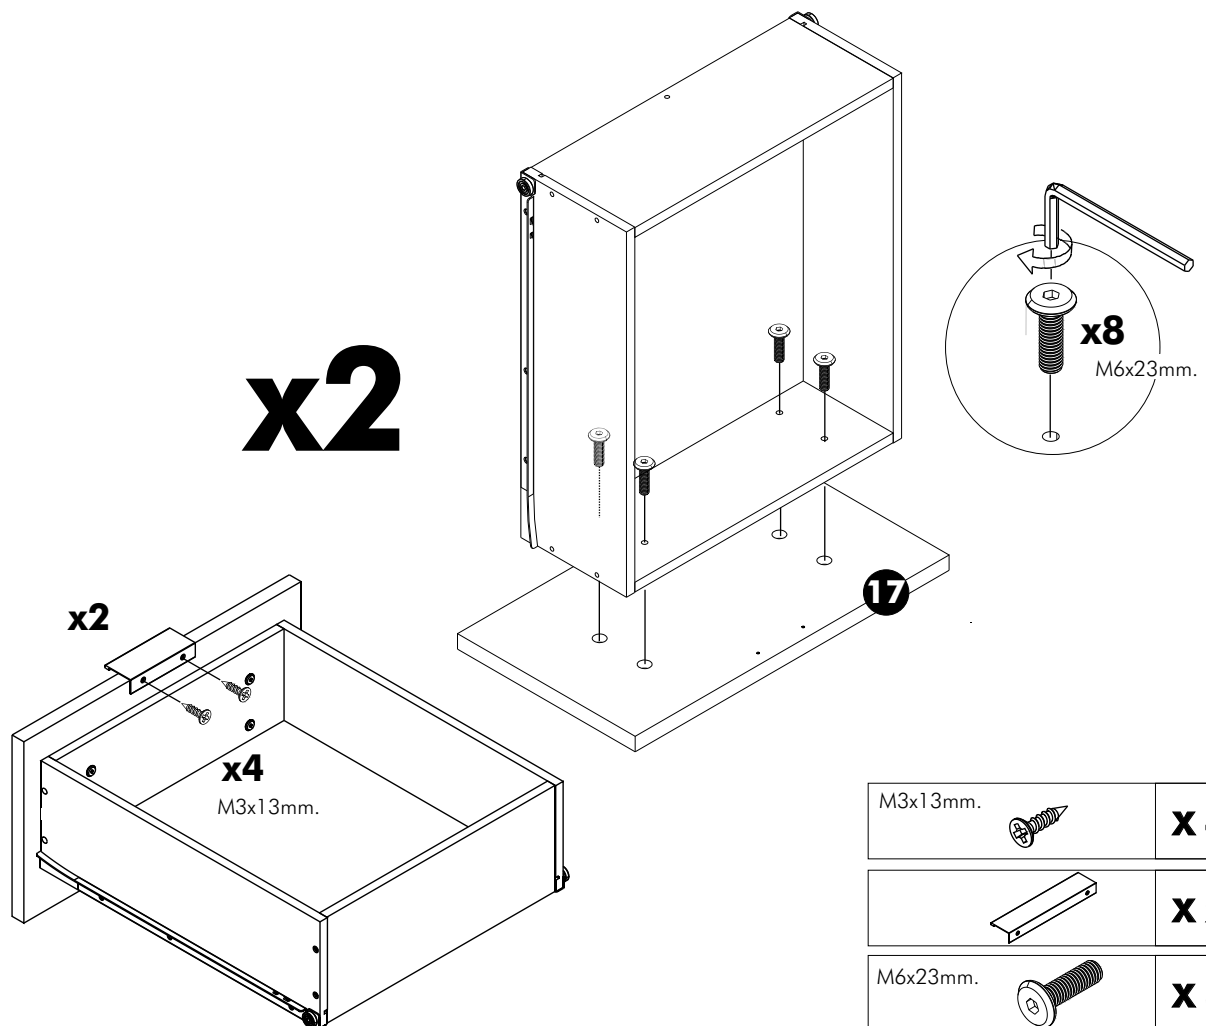

24.

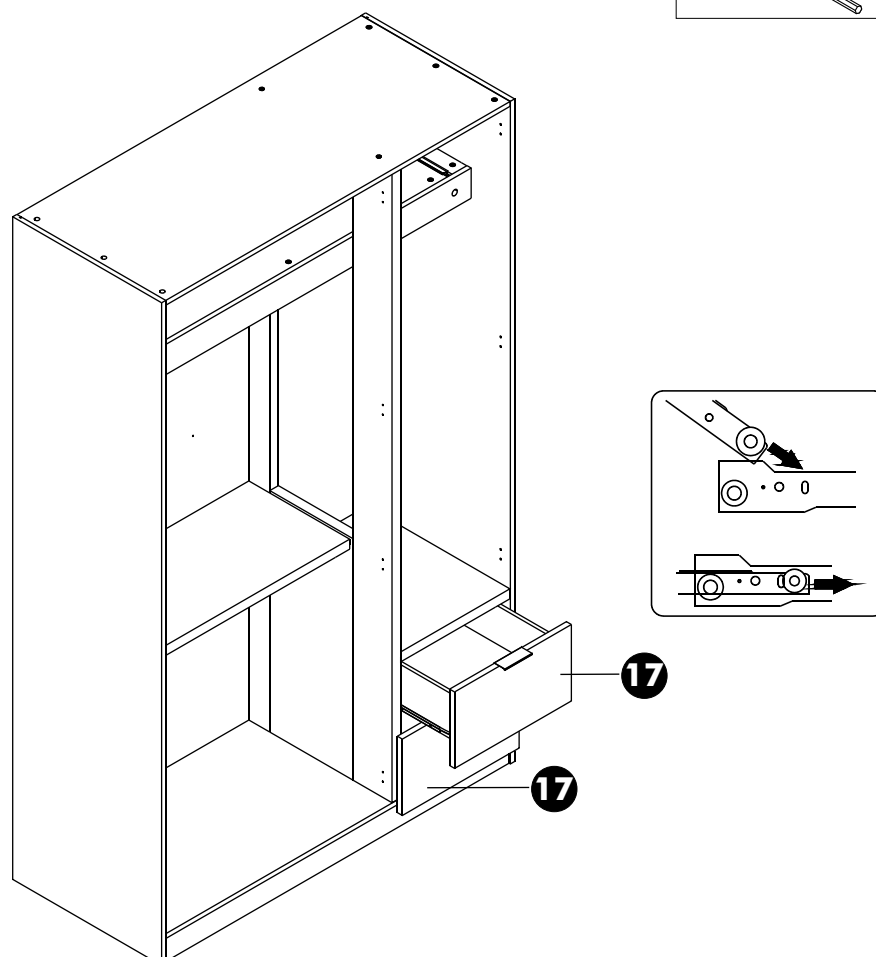


25.

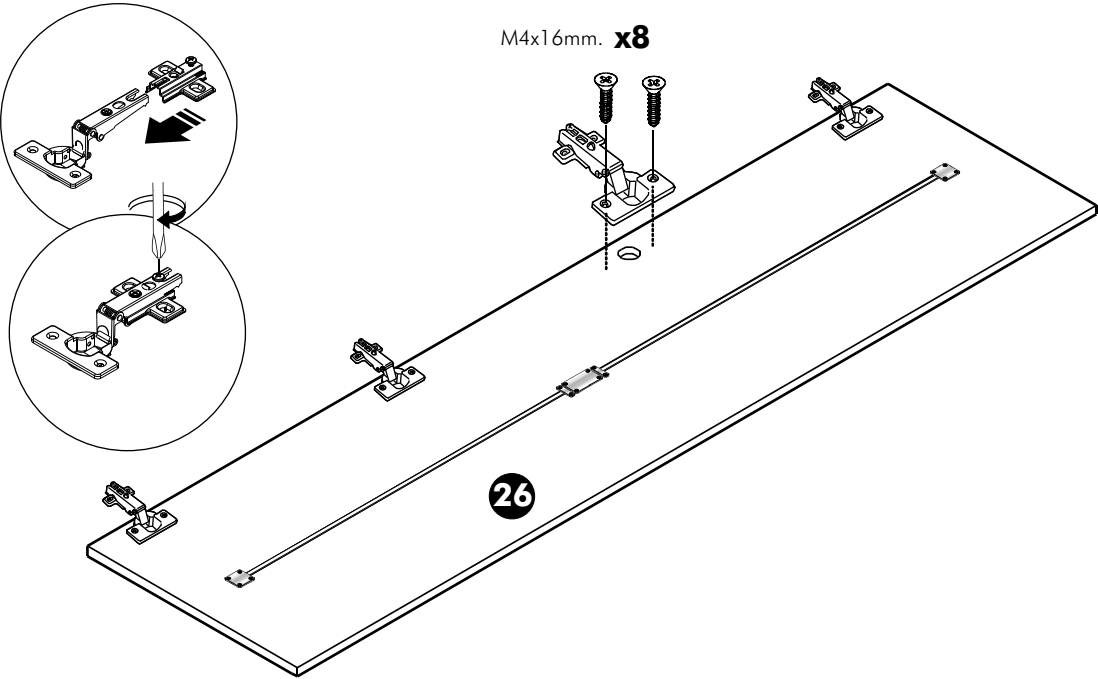


	X 4	M4x16mm. 	X 8
---	------------	--	------------

26.

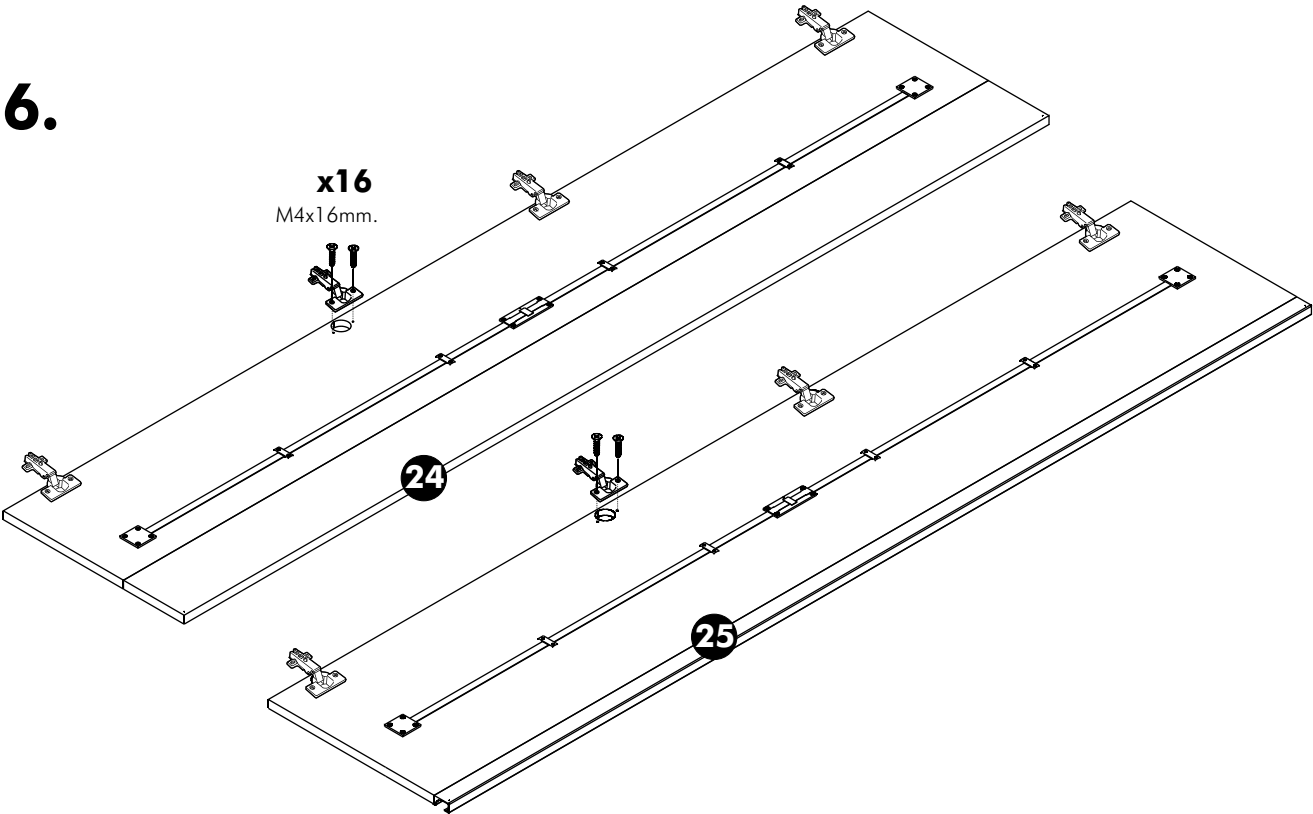


	X 8	M4x16mm. 	X 16
---	------------	--	-------------


27.

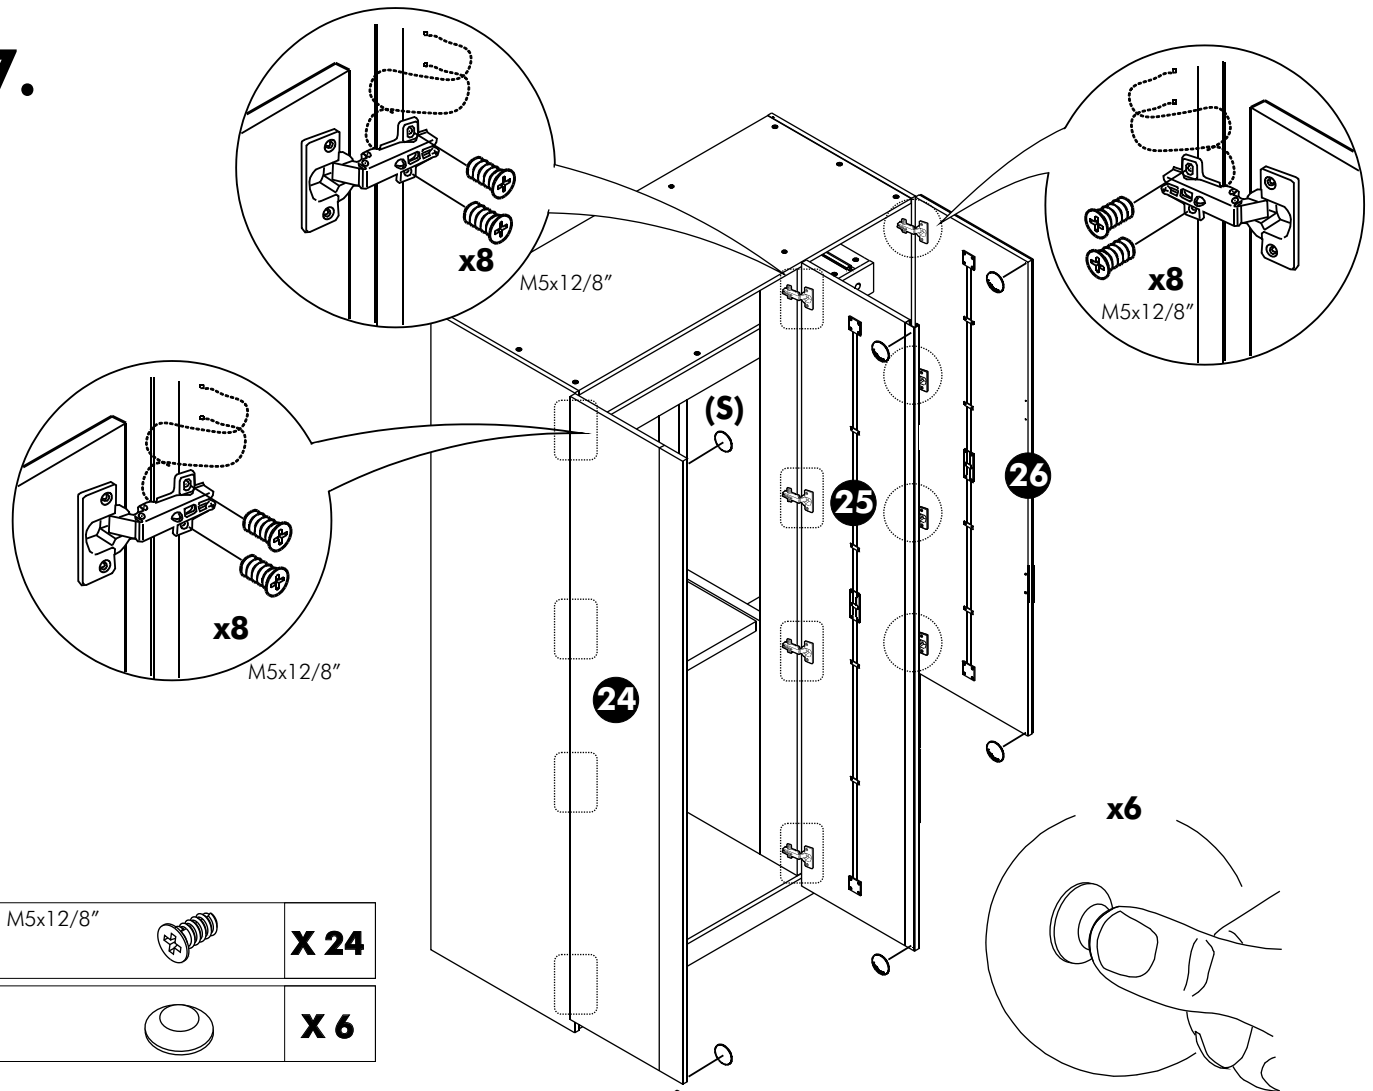


M5x12/8"		X 24
		X 6

28.

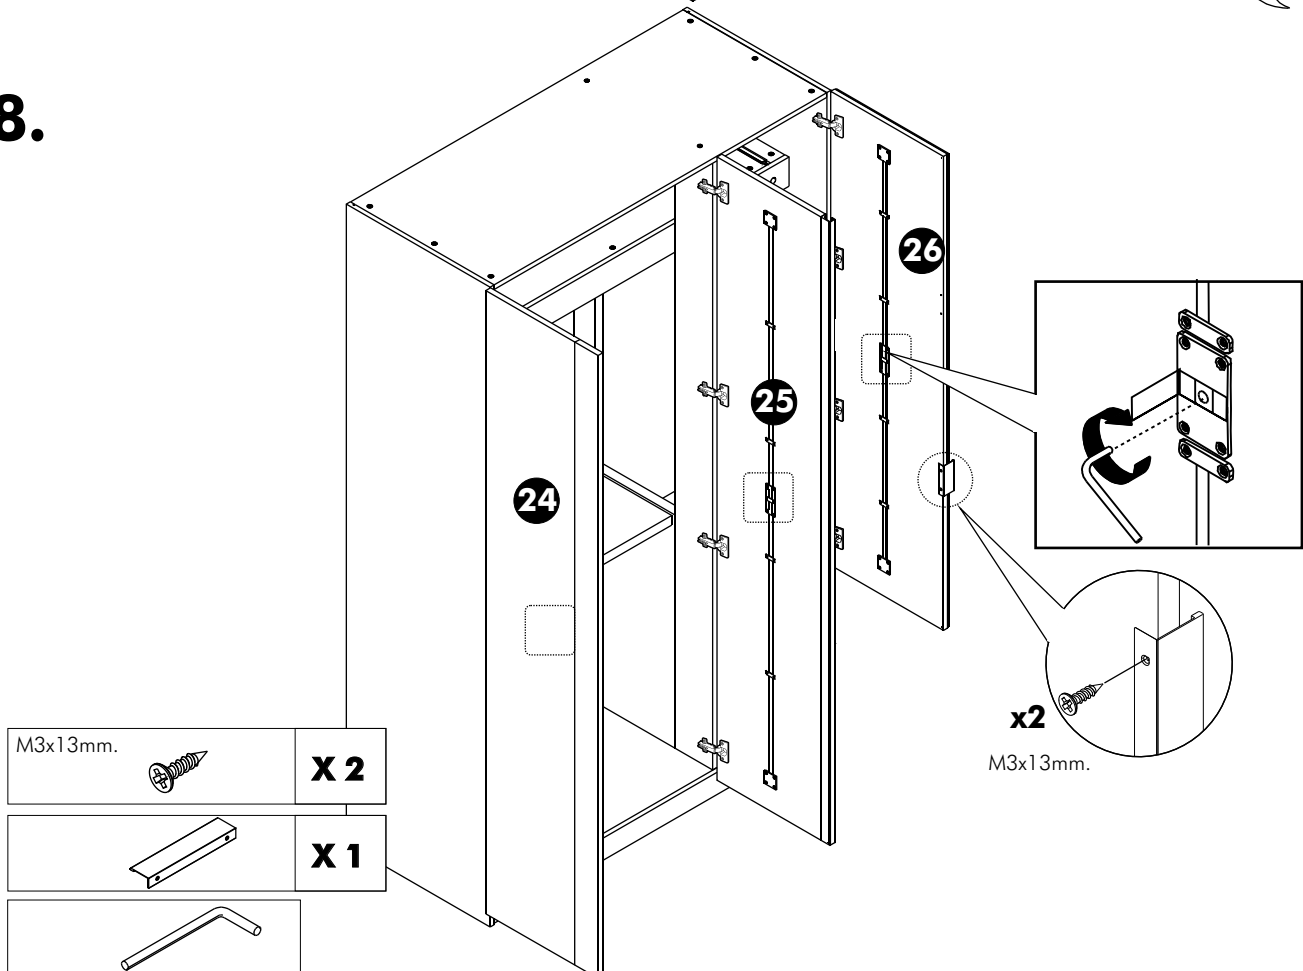


M3x13mm.		X 2
		X 1
		


29.

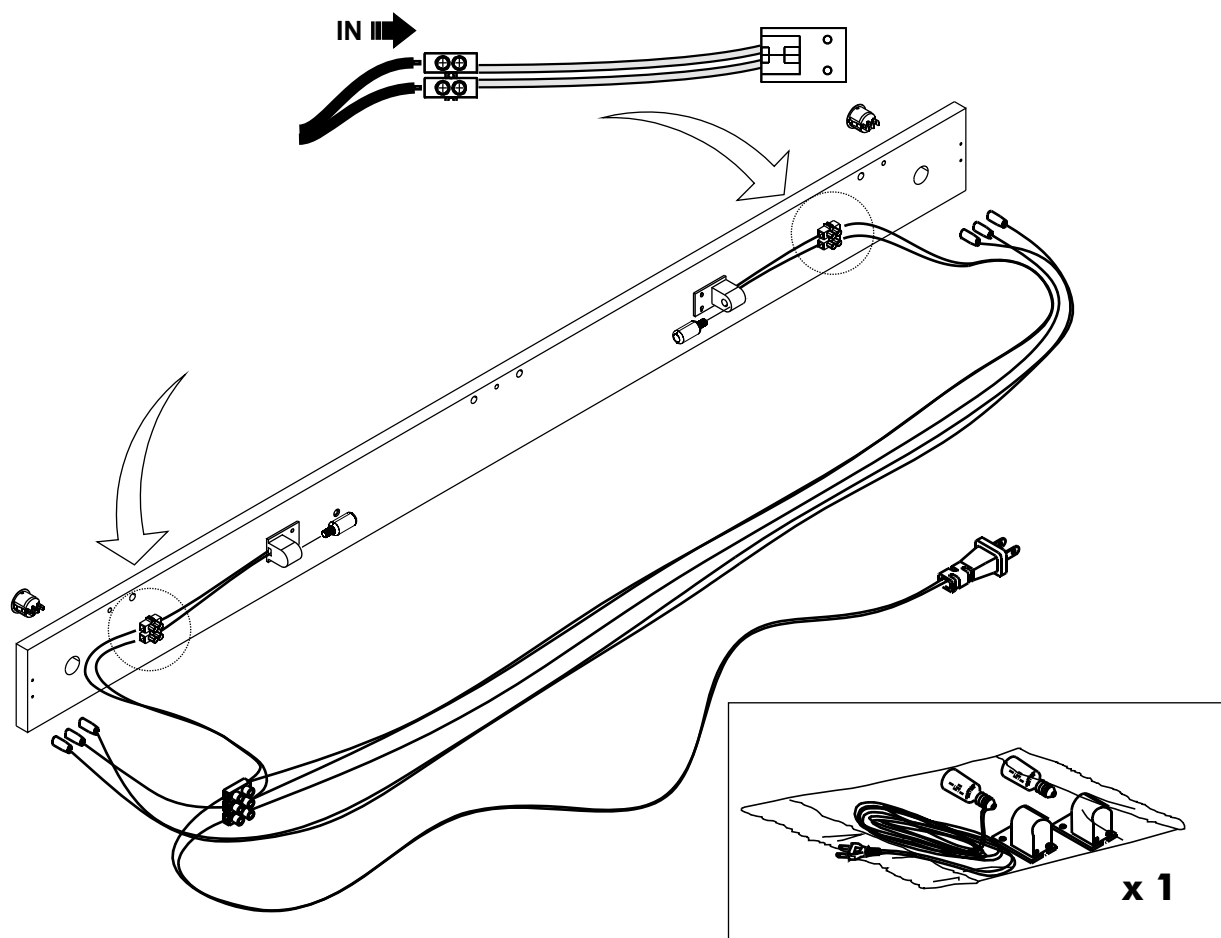


30.










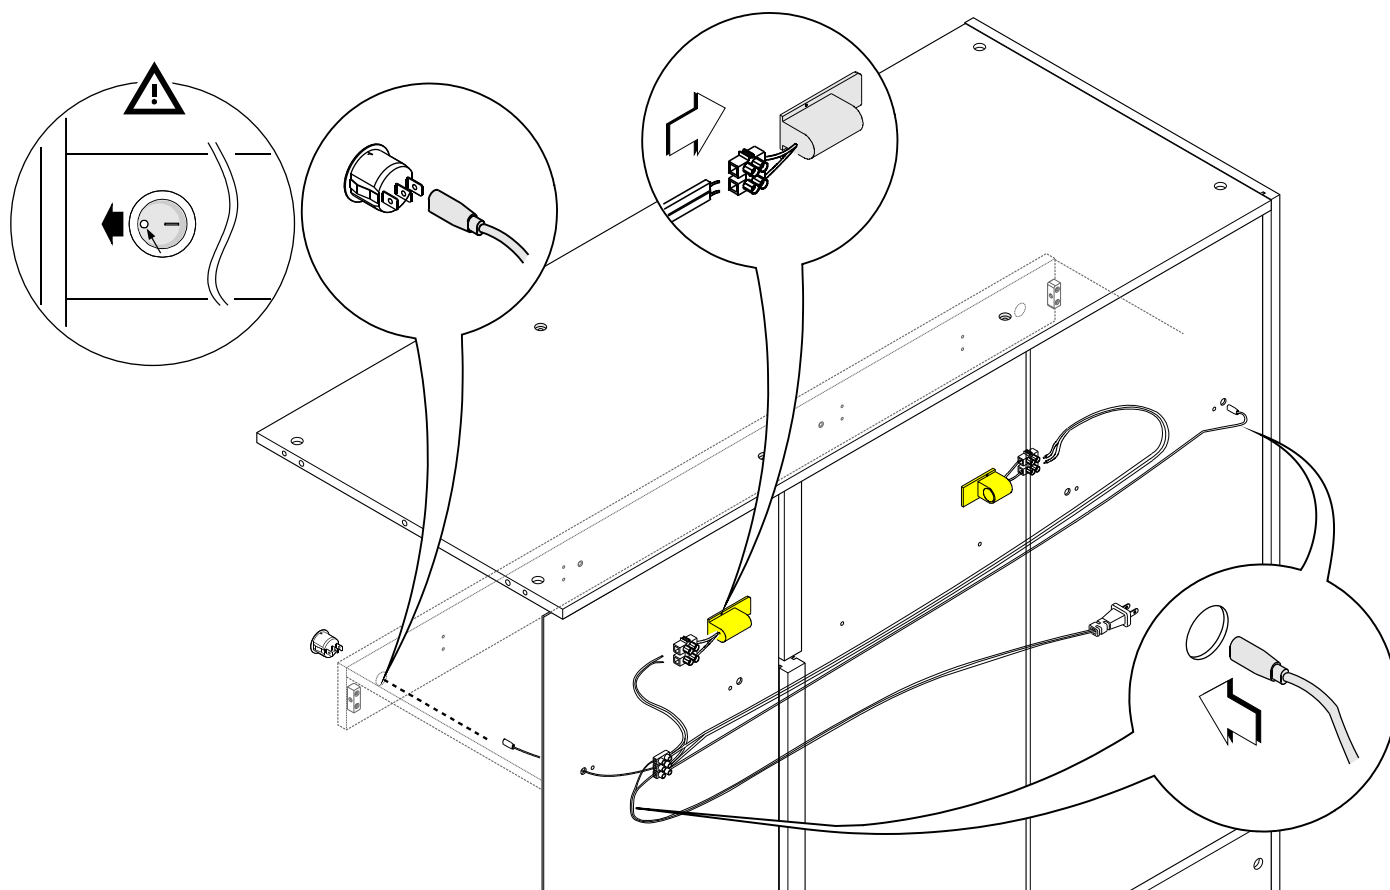


31.

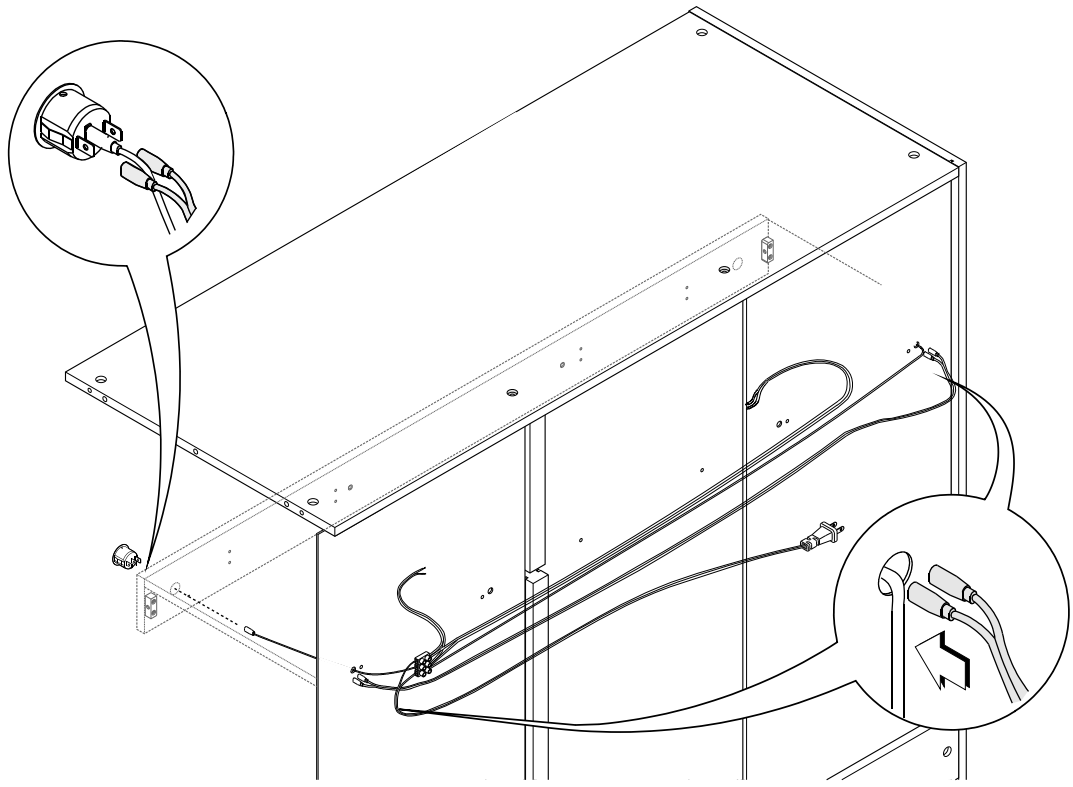

32.

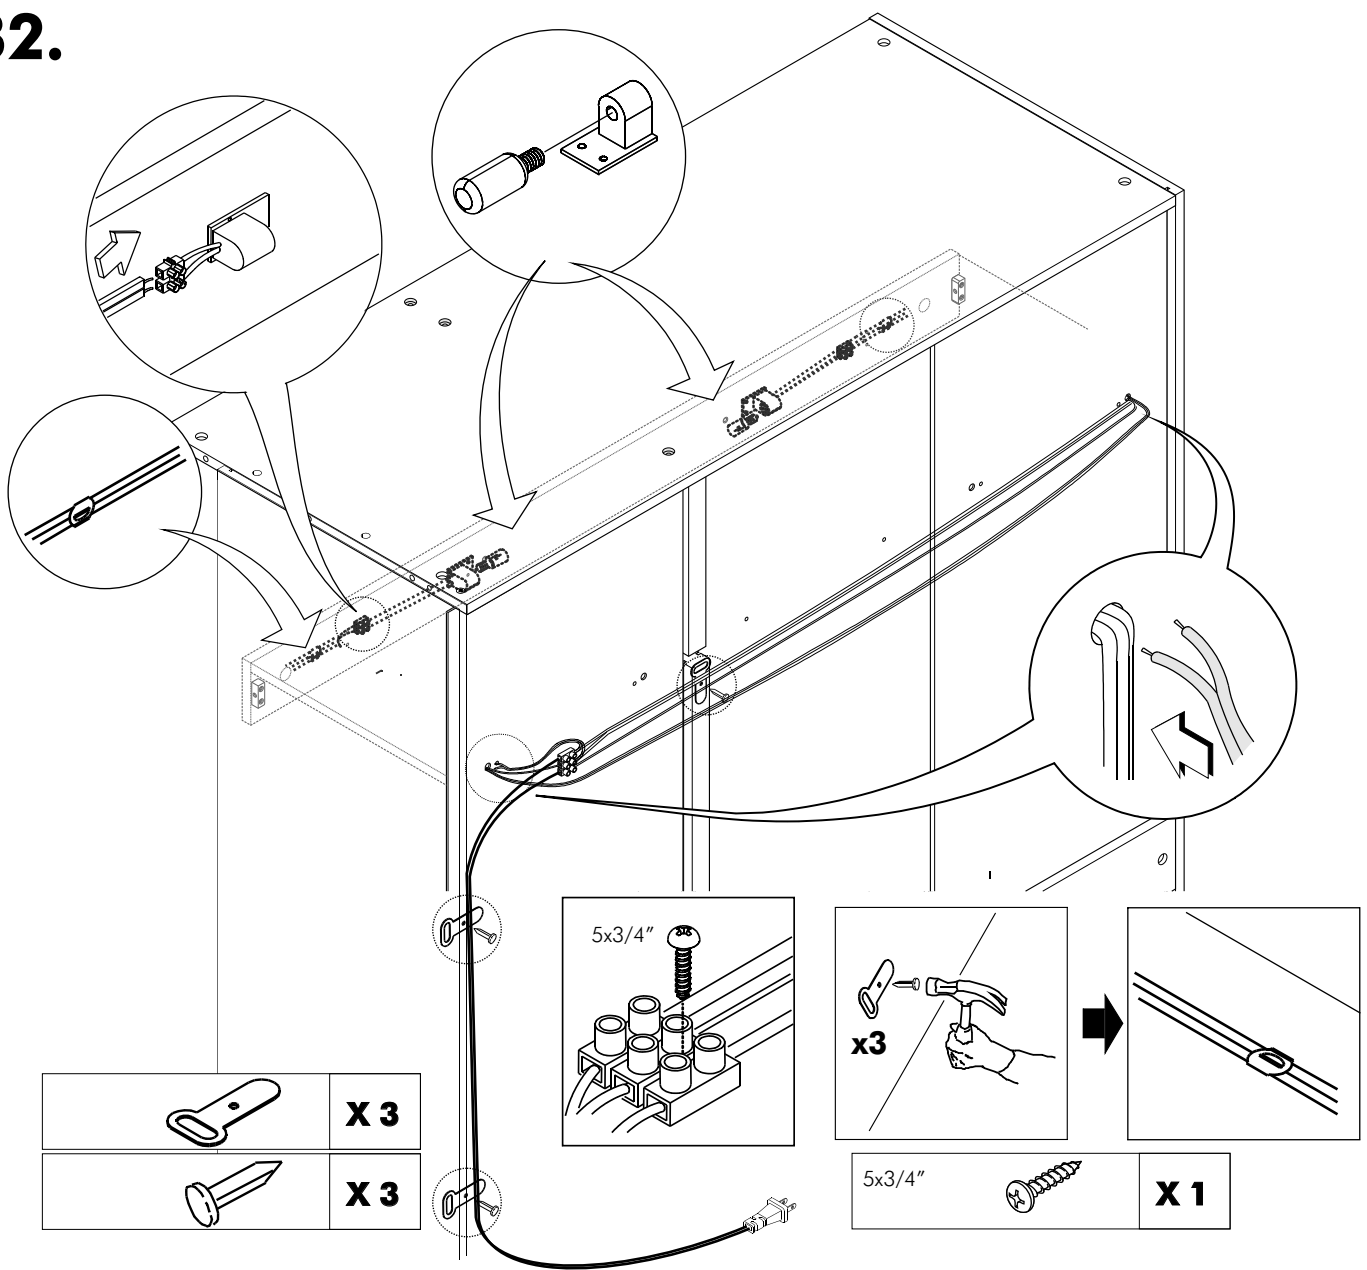

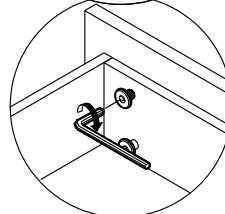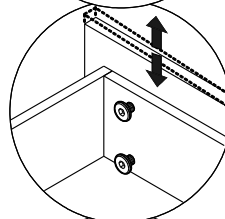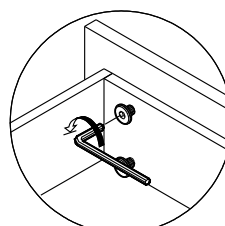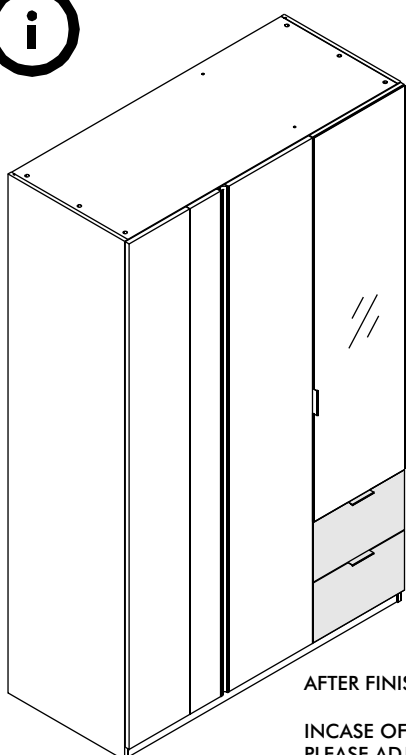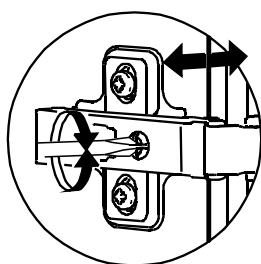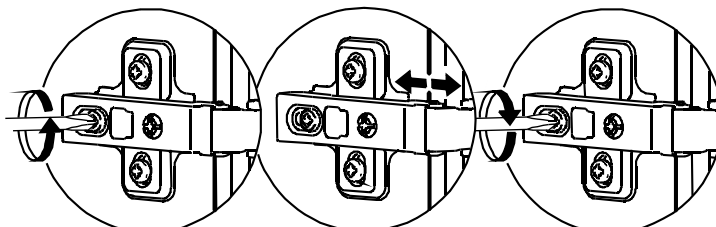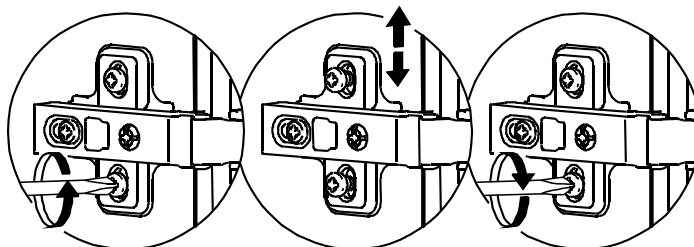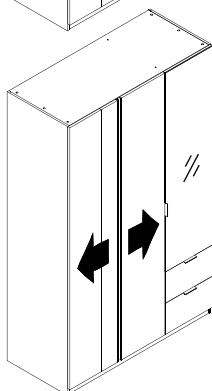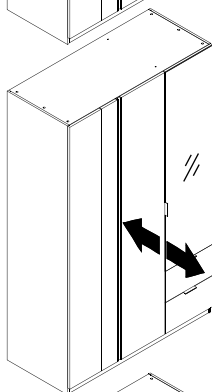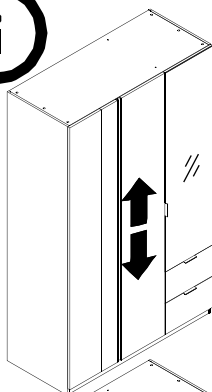

AFTER FINISHED ASSEMBLY.

IN CASE OF GAP BETWEEN DRAWERS ARE NOT ALIGN.
PLEASE ADJUST AS BELOW.
1. LOOSE SCREW A LITTLE BIT.
2. THEN MOVE FRONT DRAWER TO ALIGNMENT POSITION.
3. TIGHTEN SCREW.

