



CRARARA

4 Door WD 180 Cm.

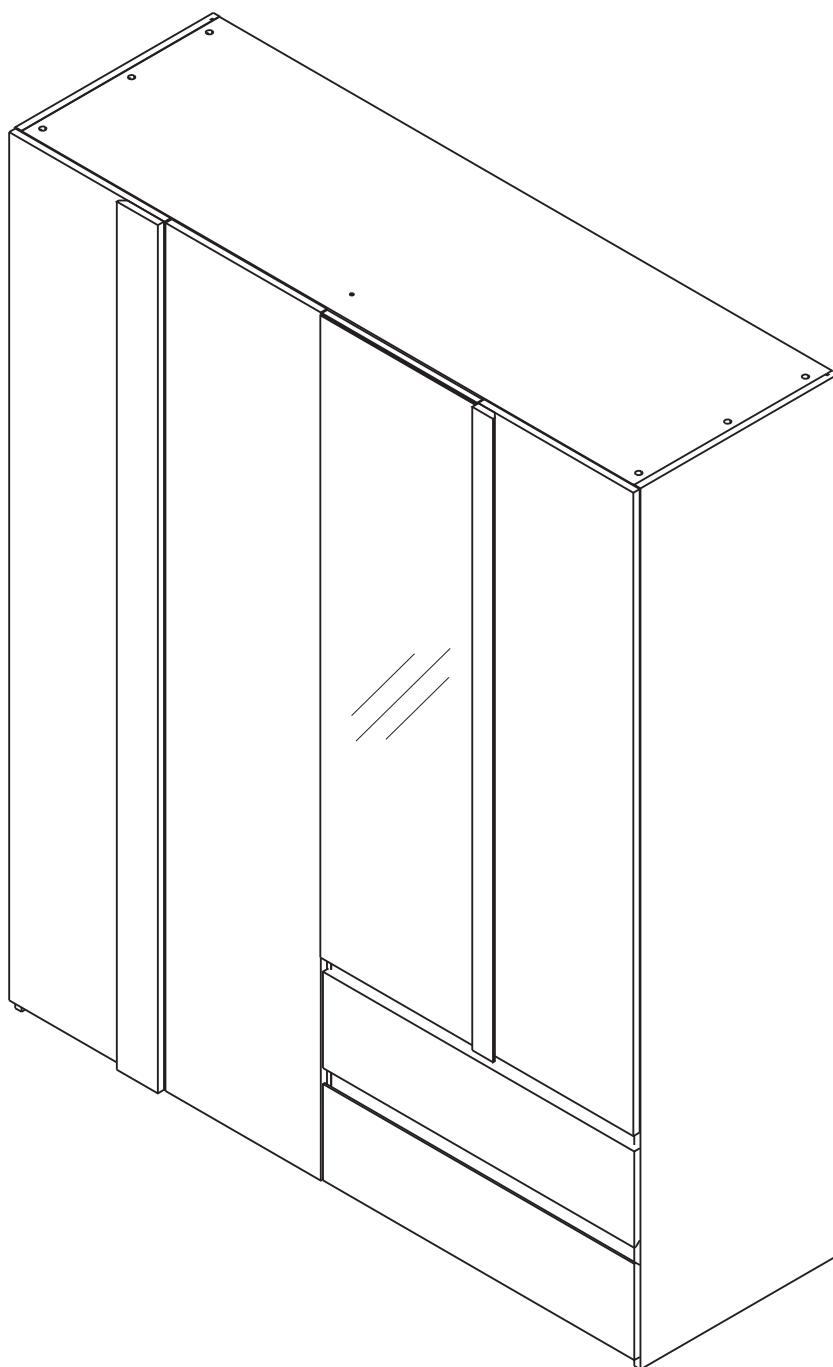


CONNECT SYSTEM

1

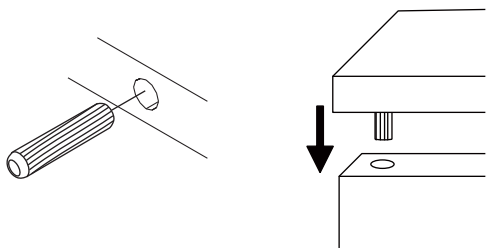


2

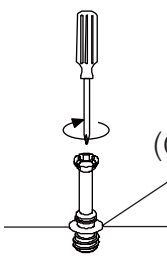

(Connecting bolts)

3

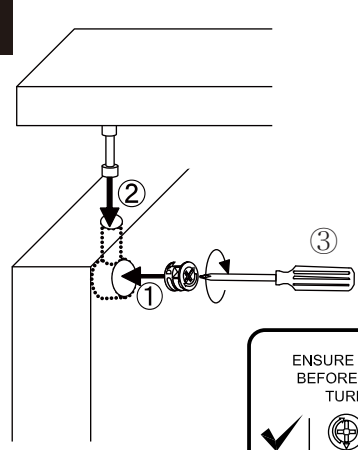

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓



CORRECT

✗



WRONG

✗




WRONG

✗




WRONG

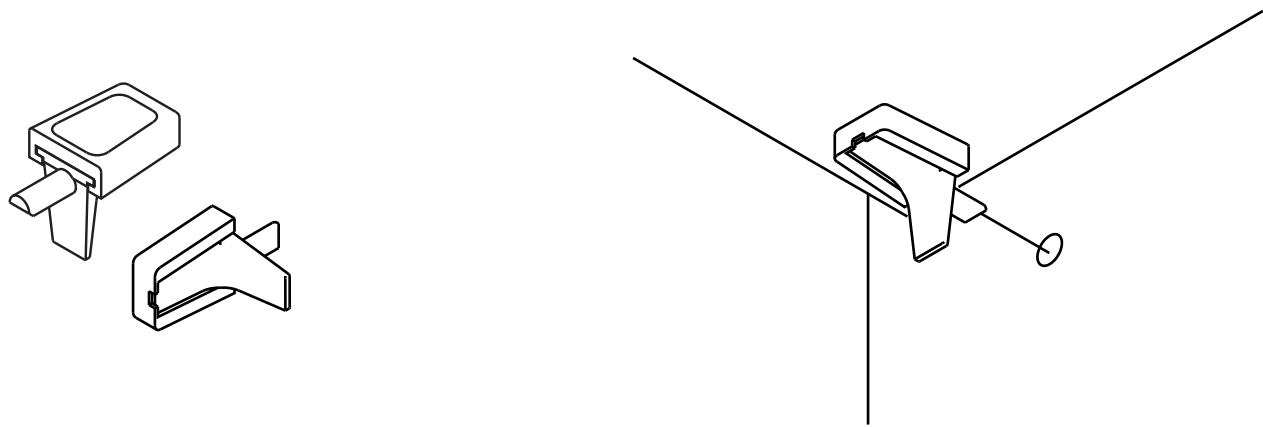






M4x16mm.

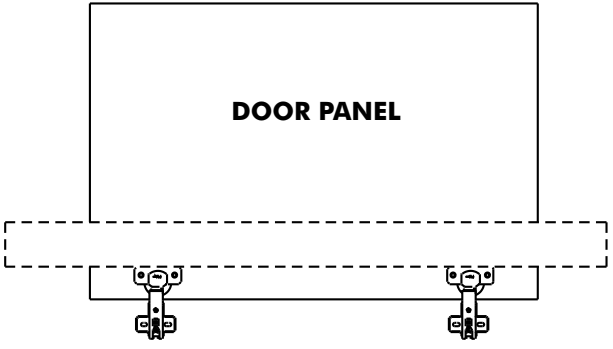



DOOR PANEL

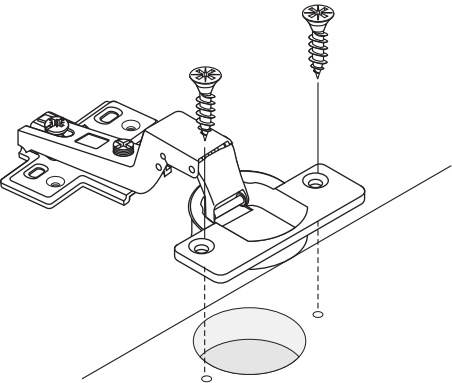

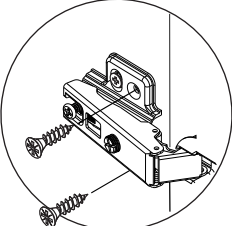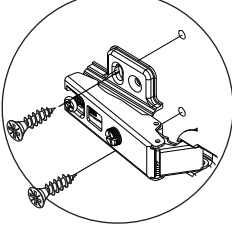


2

CONNECT SYSTEM

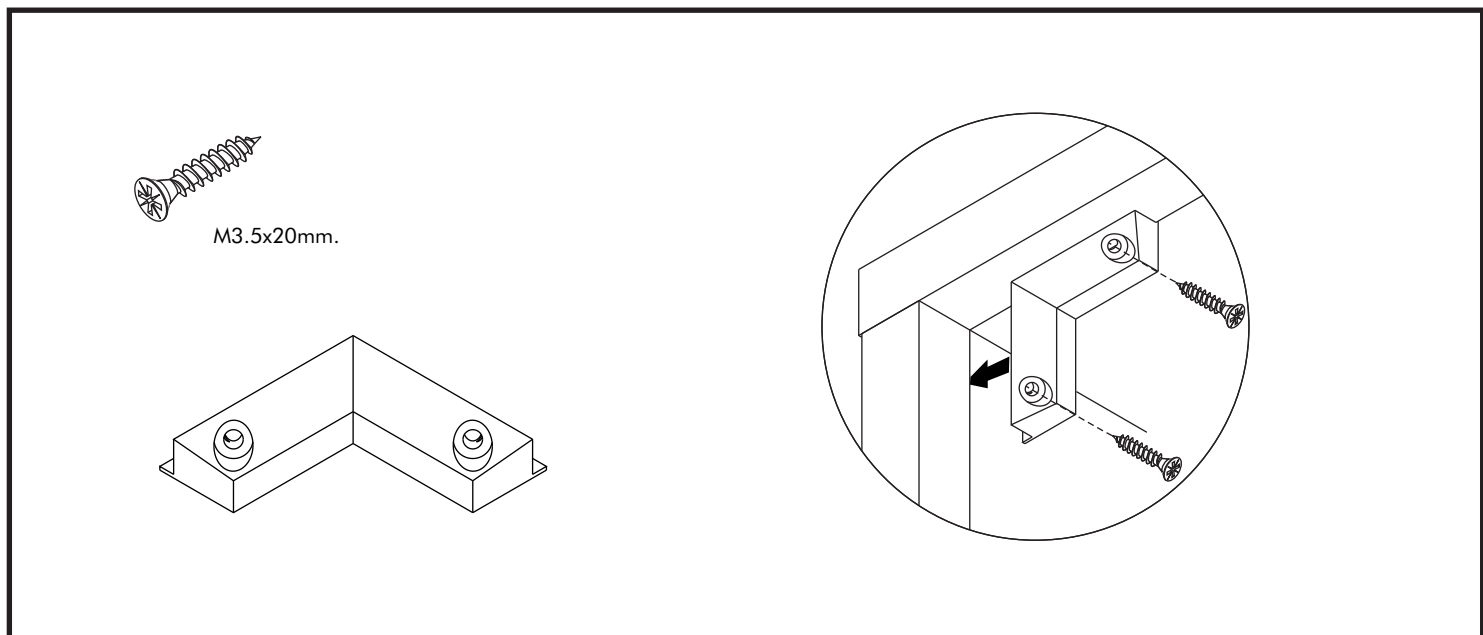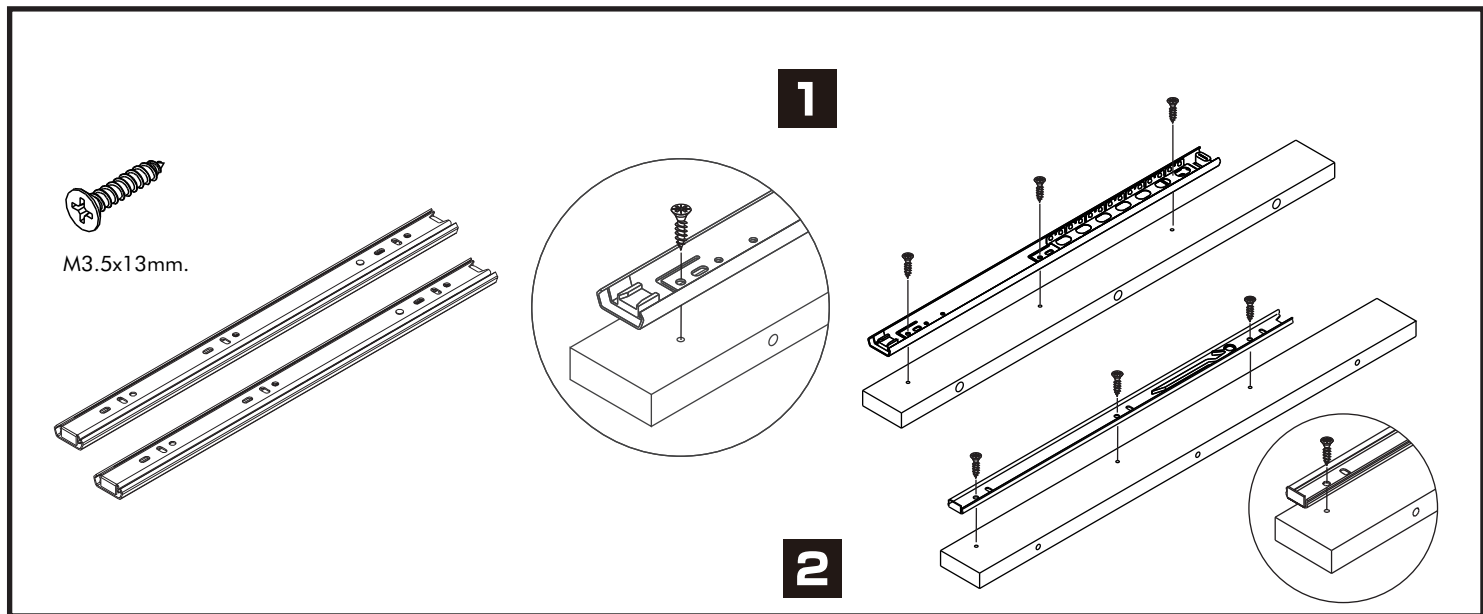

HARDWARE


-BODY SET




x 36



x 36




x 52

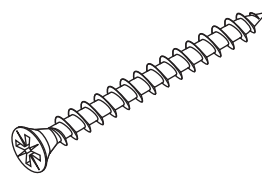


M4x50mm.

x 6



M4x40mm.

x 1



M4x35mm.

x 4



x 7



M4x25mm.

x 21



Ø 20mm.(5x23)

x 2



x 4




M3.5x13mm.

x 8



M4x16mm.

x 51



x 1




x 4




Ø 5x18 mm.

x 6

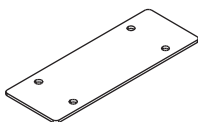

x 2




x 2



M3.5x20mm.


x 4



x 6



x 6

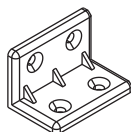


x 8



M4x16mm.


x 38



M4x30mm.


x 9

-DRAWER SET

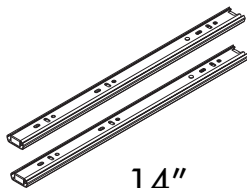

14"

x 1

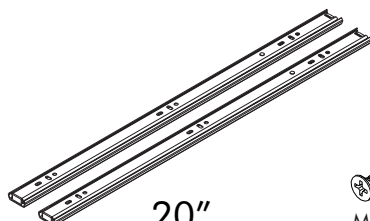


20"

x 2



M3.5x13mm.

x 36



M4x40mm.

x 34




TFL4 M6x23

x 16




x 1

-DOOR SET



(FULL OVERLAY)

x 8



(HALF OVERLAY)

x 8



M4x16mm.

x 96



x 8



M4x25mm.

x 9



x 1



Ø 11mm.(WHITE)

x 5




Ø 11mm.(MAPLE)

x 4


ASSEMBLY

-BODY SET


1.

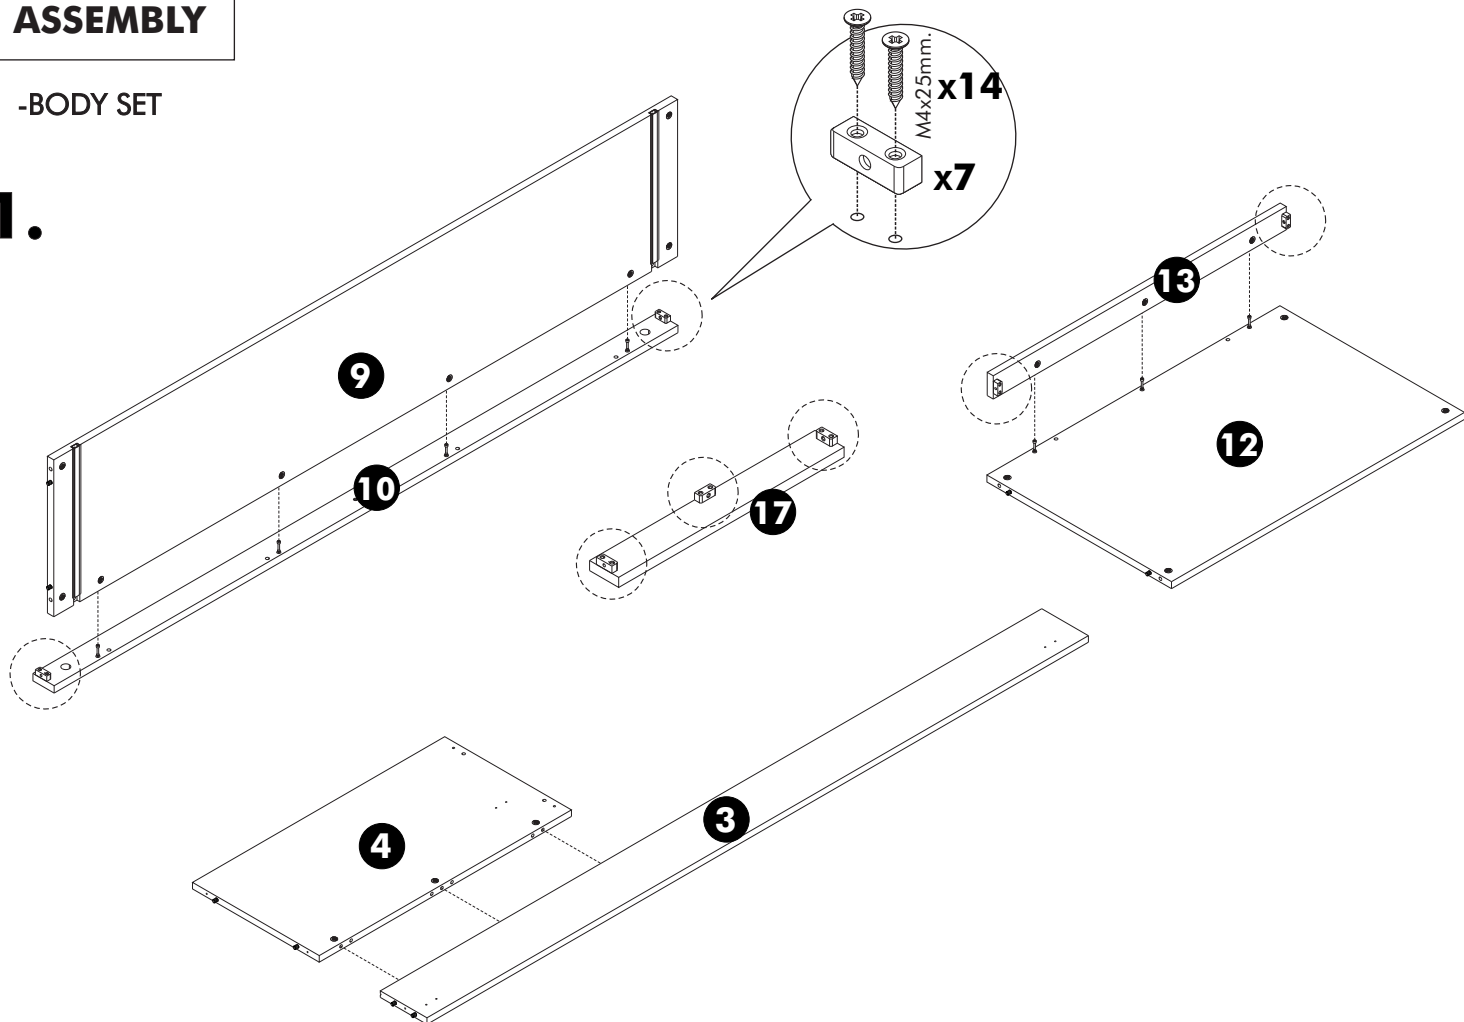


2.

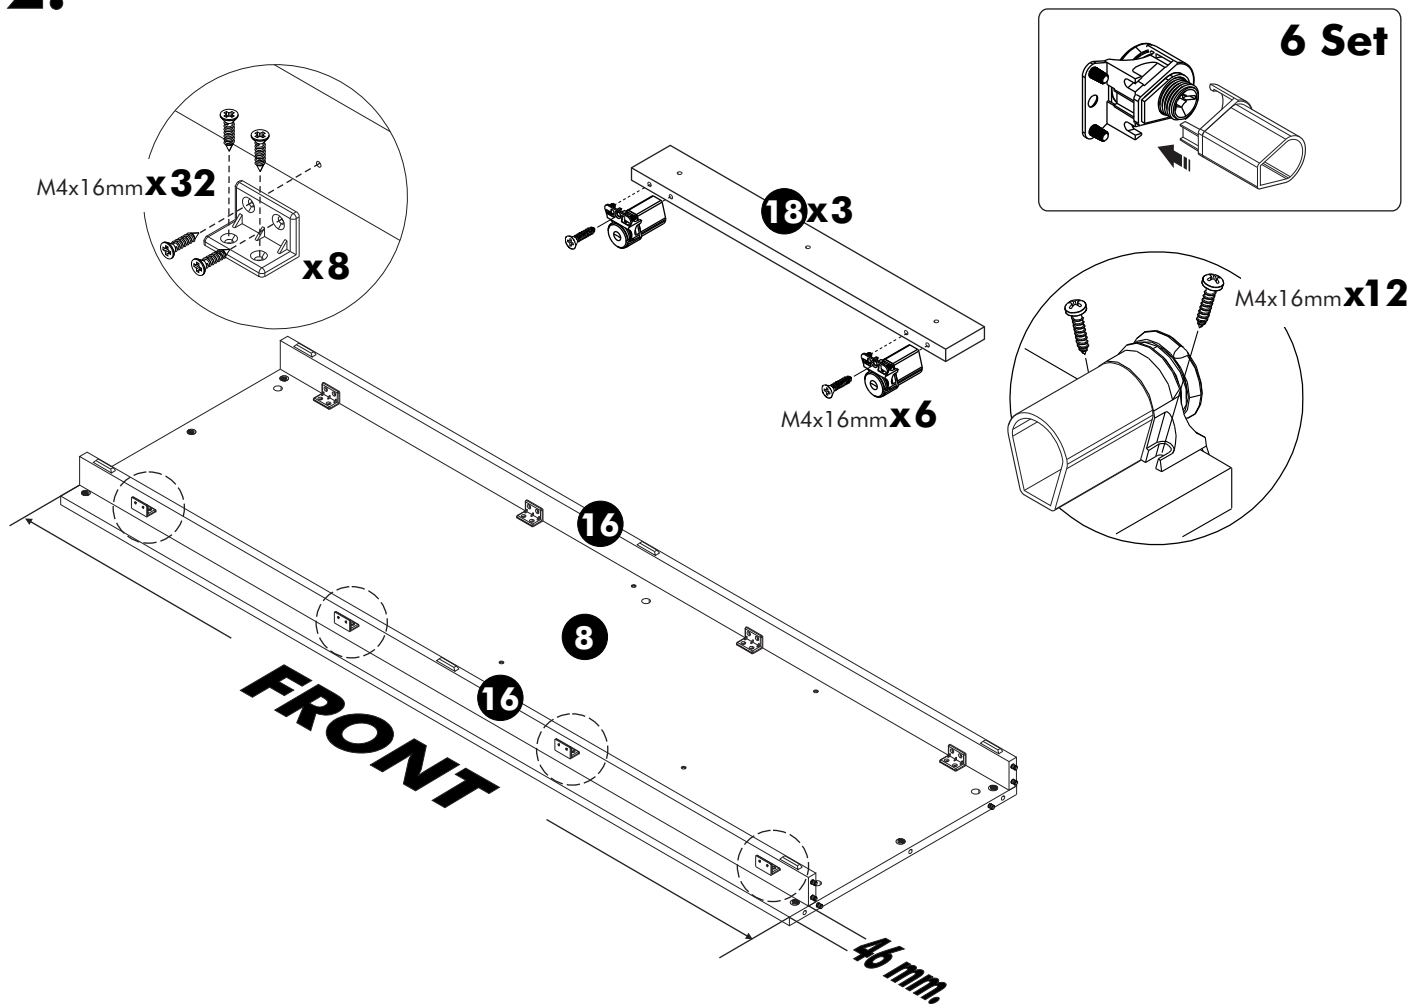


3.

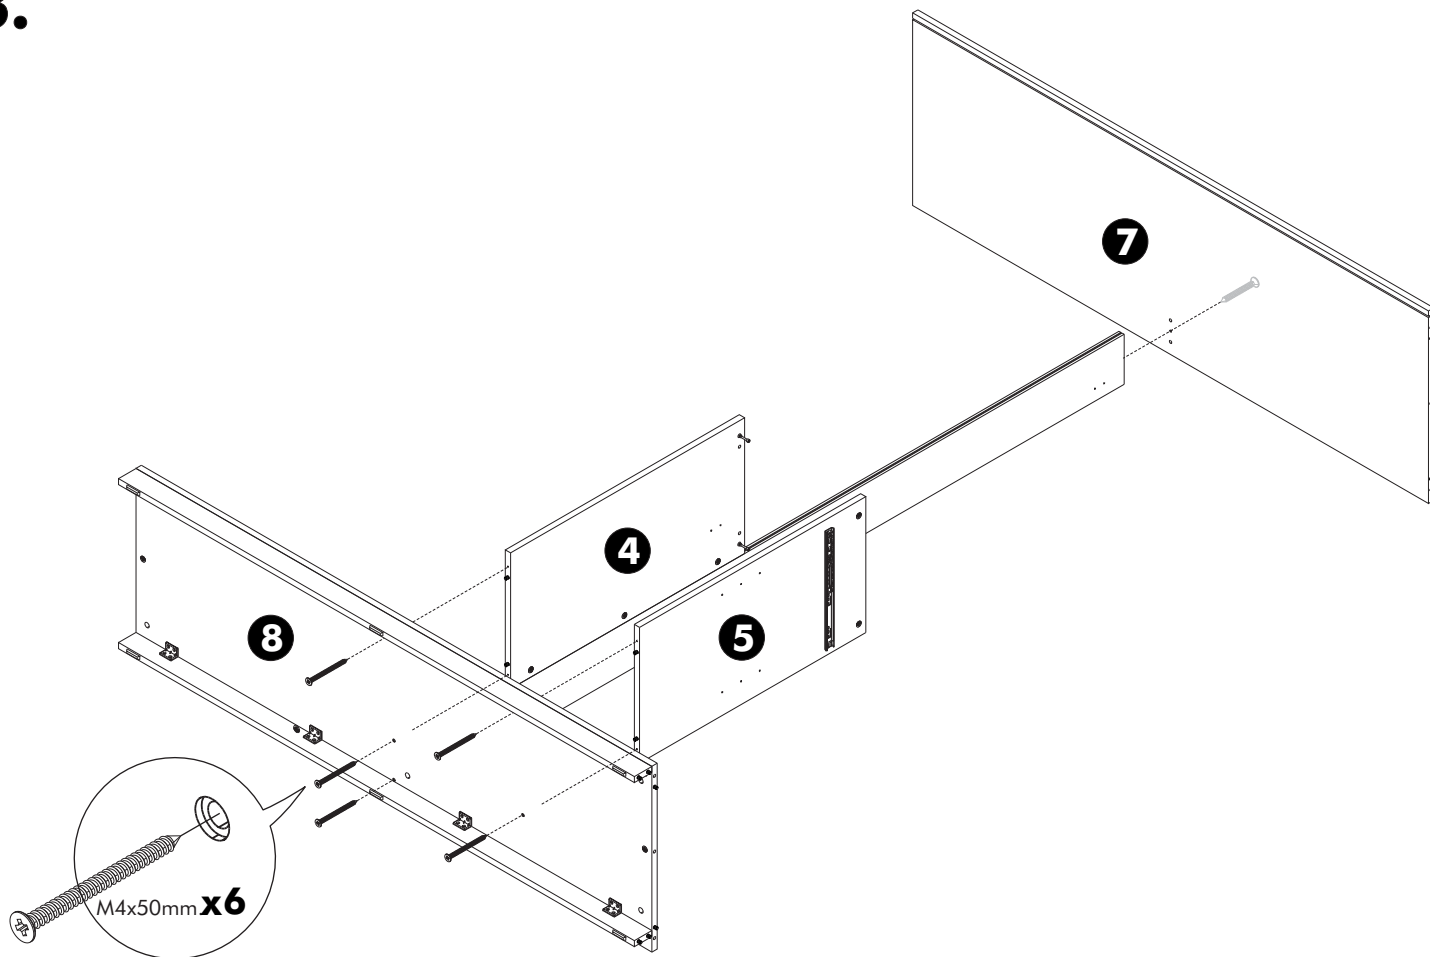


4.

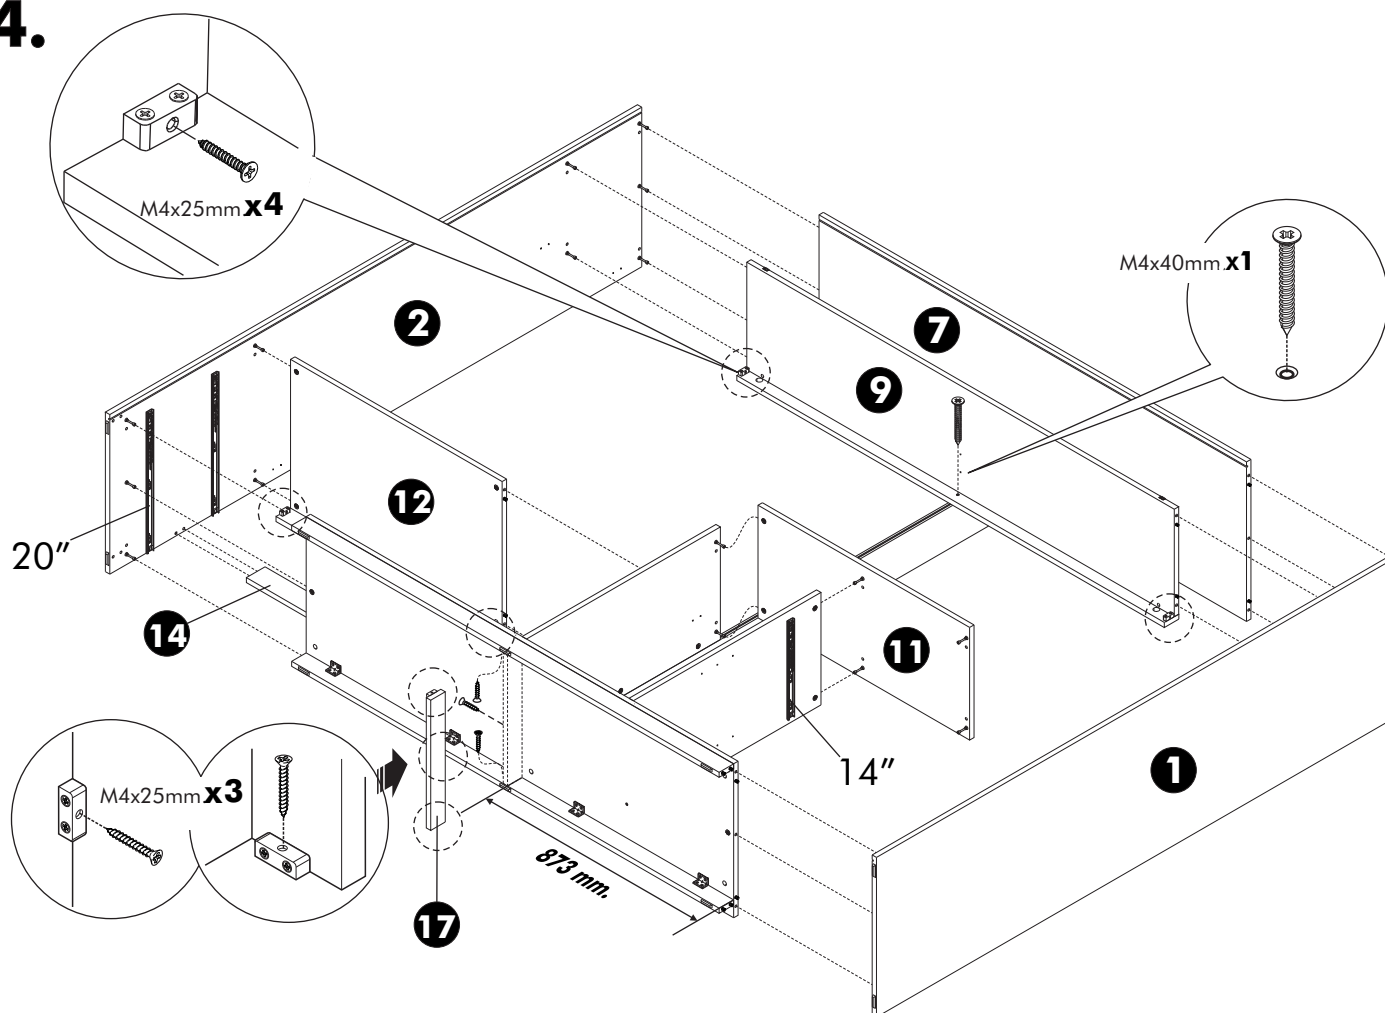






5.

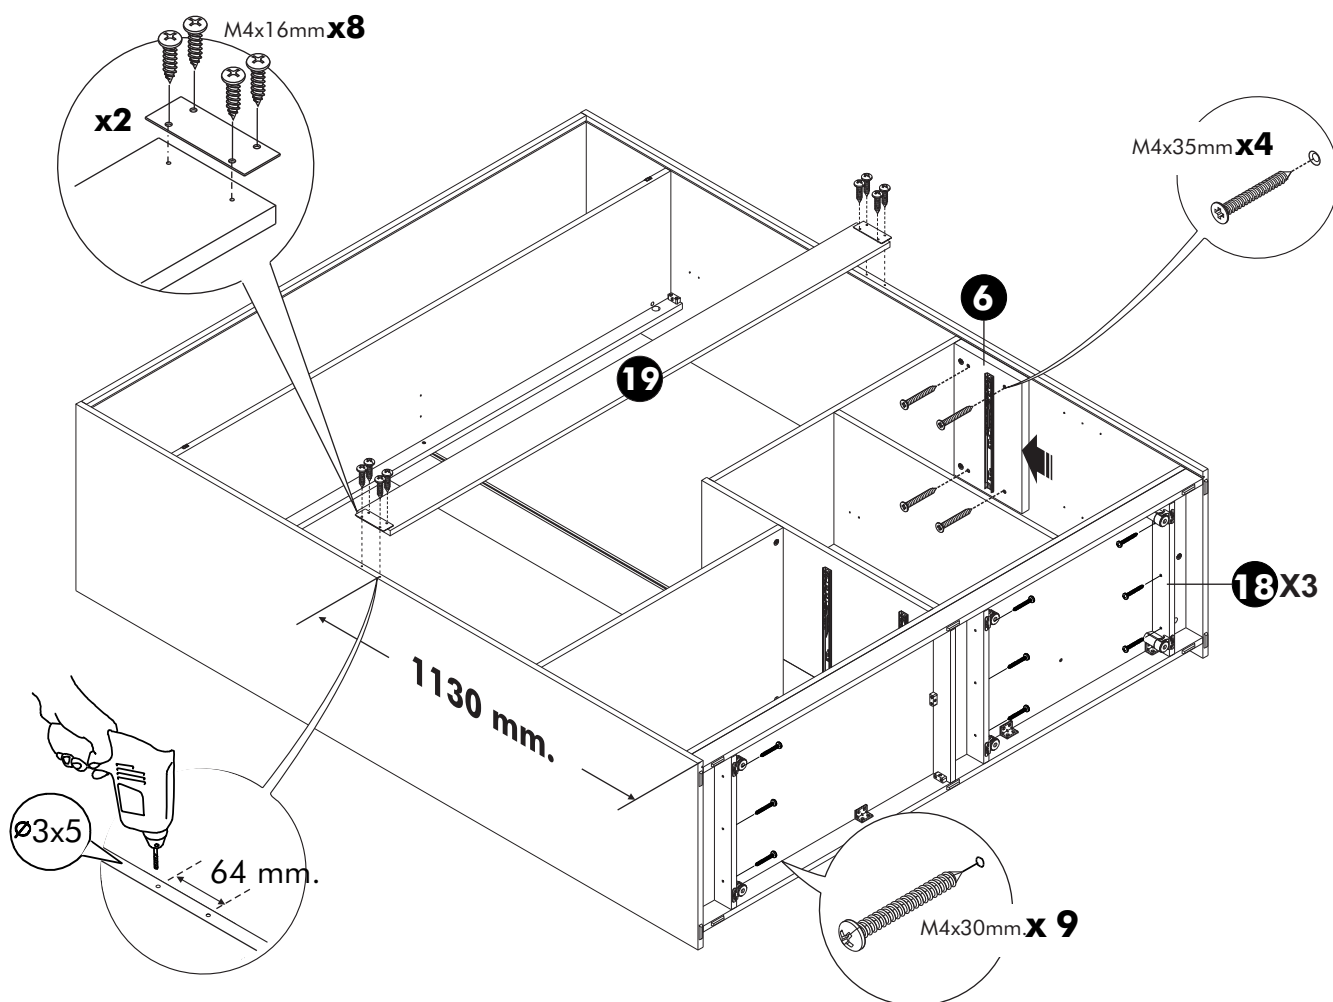





6.

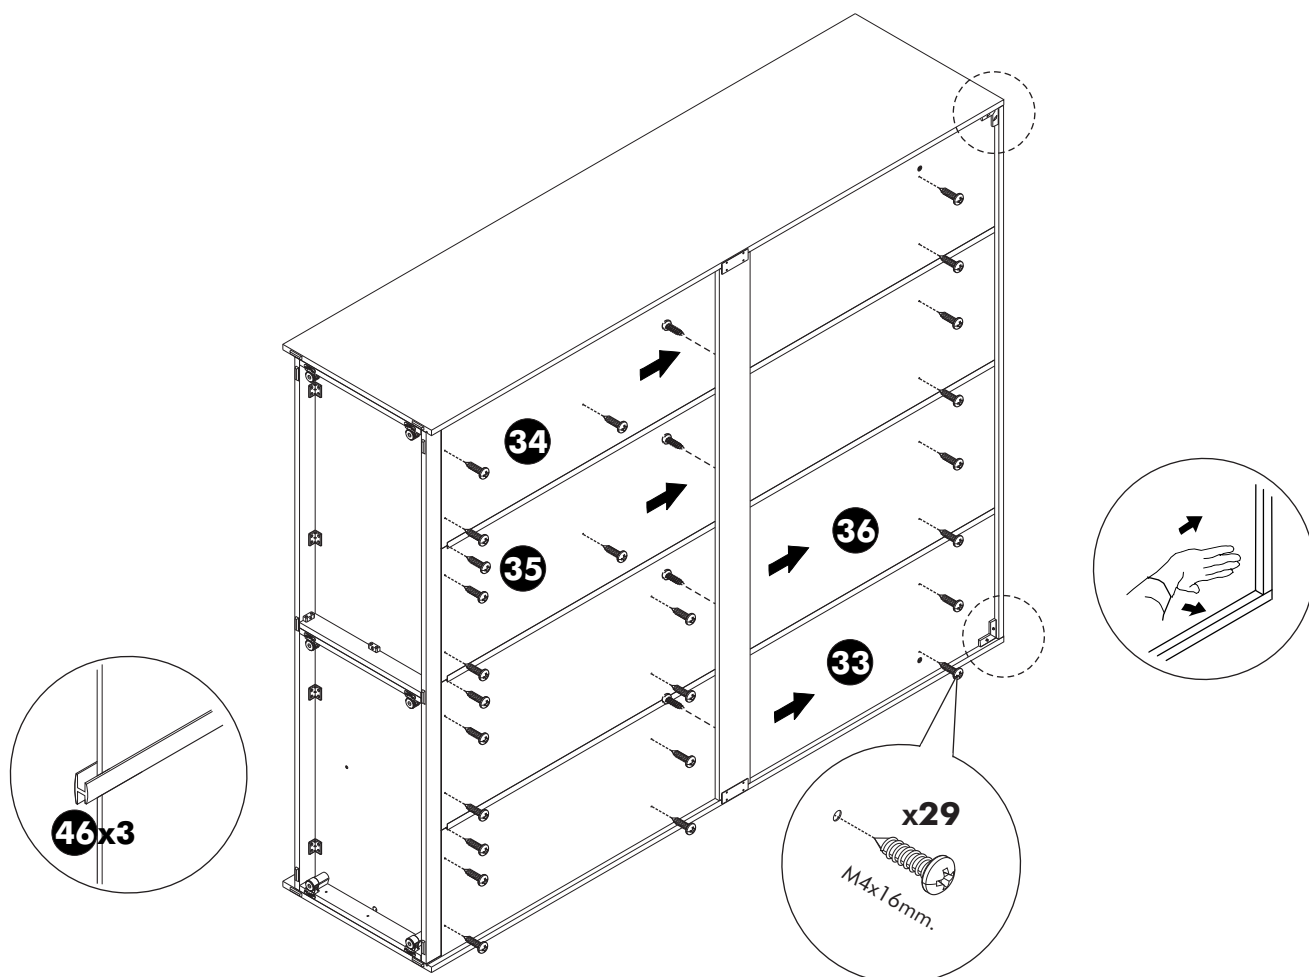

7.



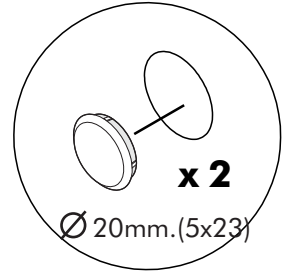
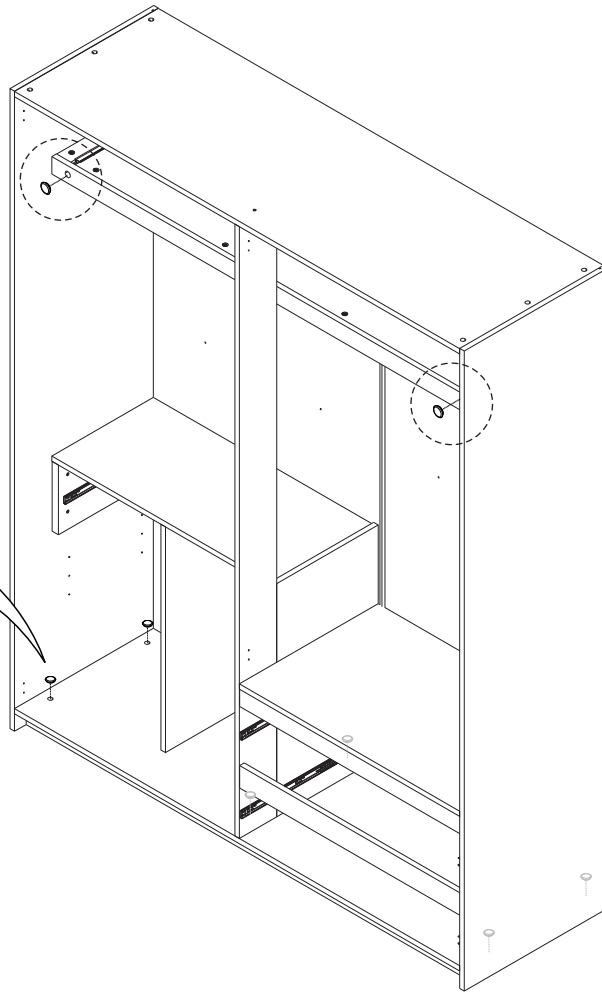
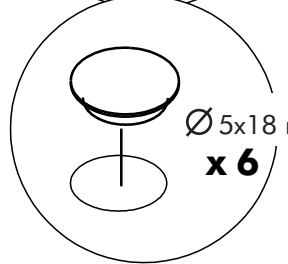
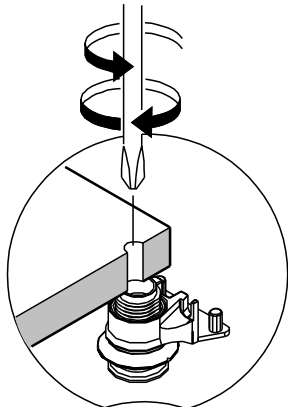
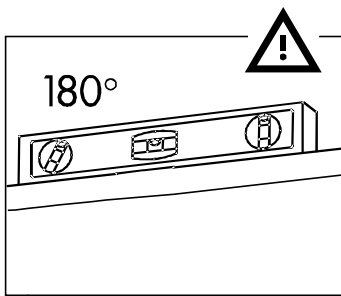





8.

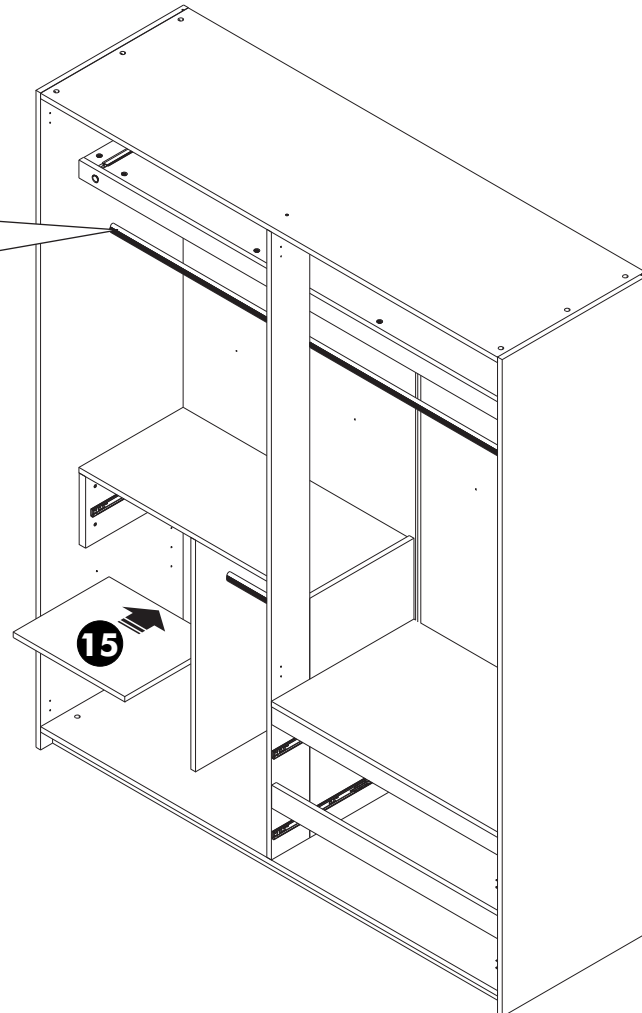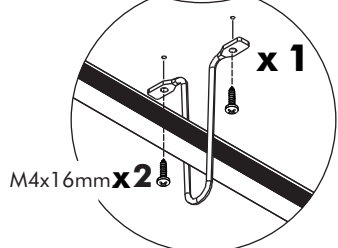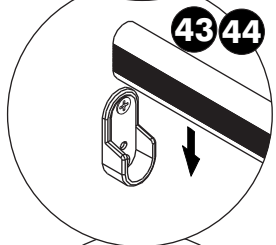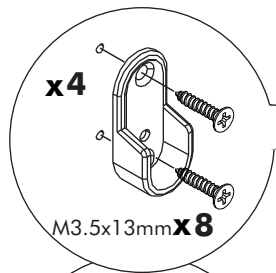

ASSEMBLY



-DRAWER SET

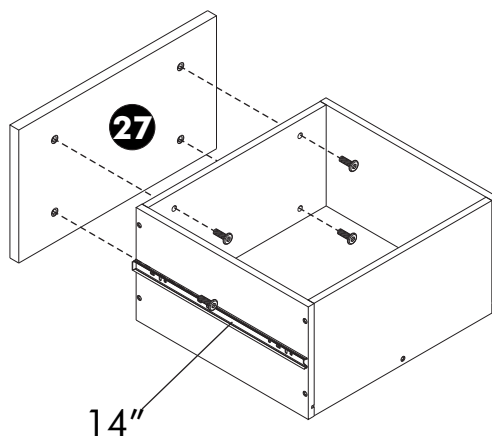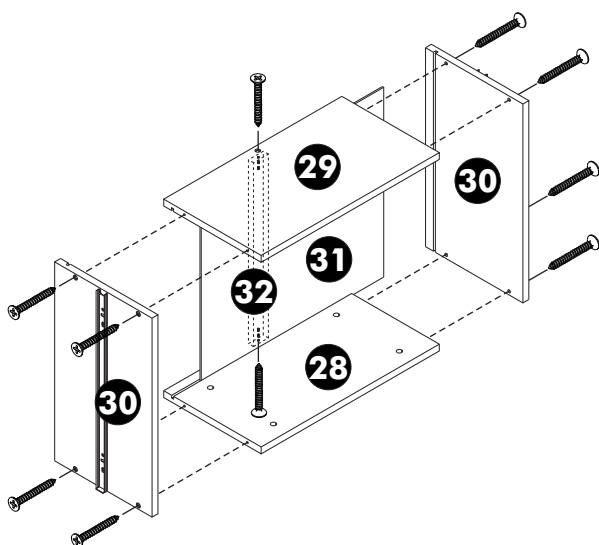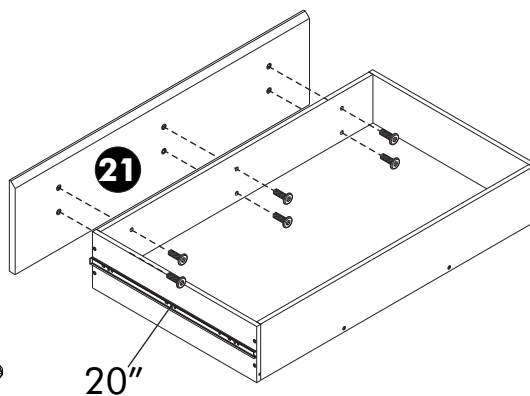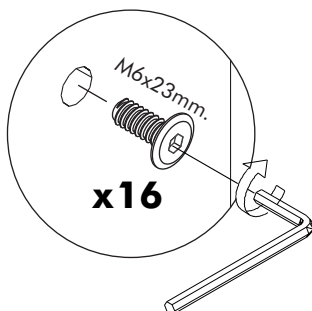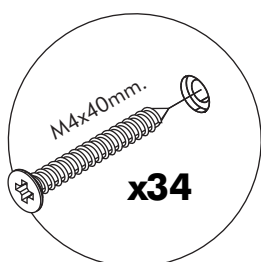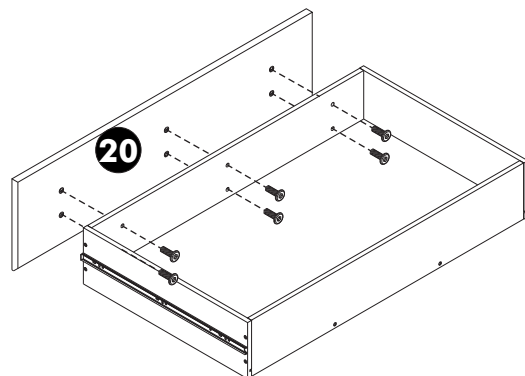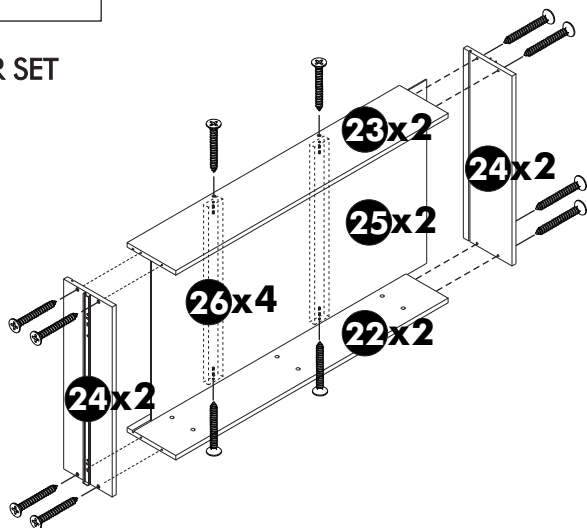

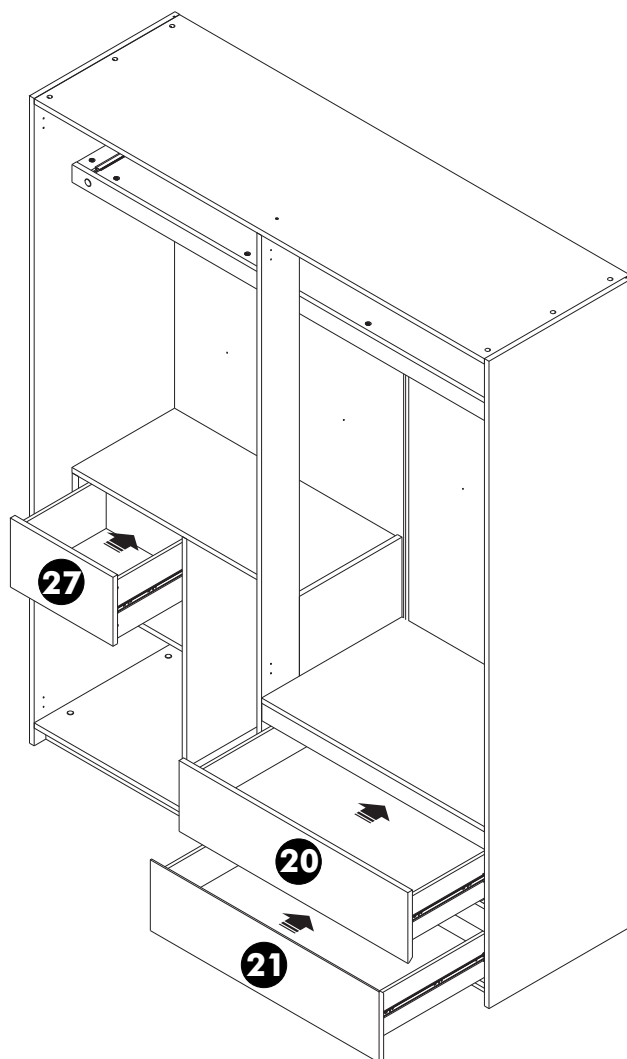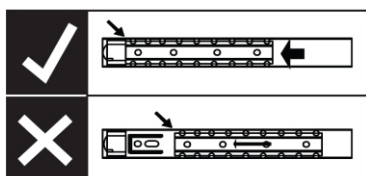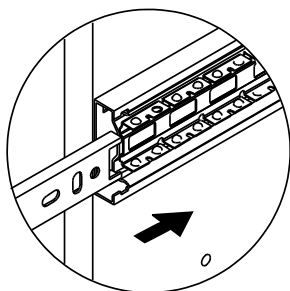

ASSEMBLY

-DOOR SET

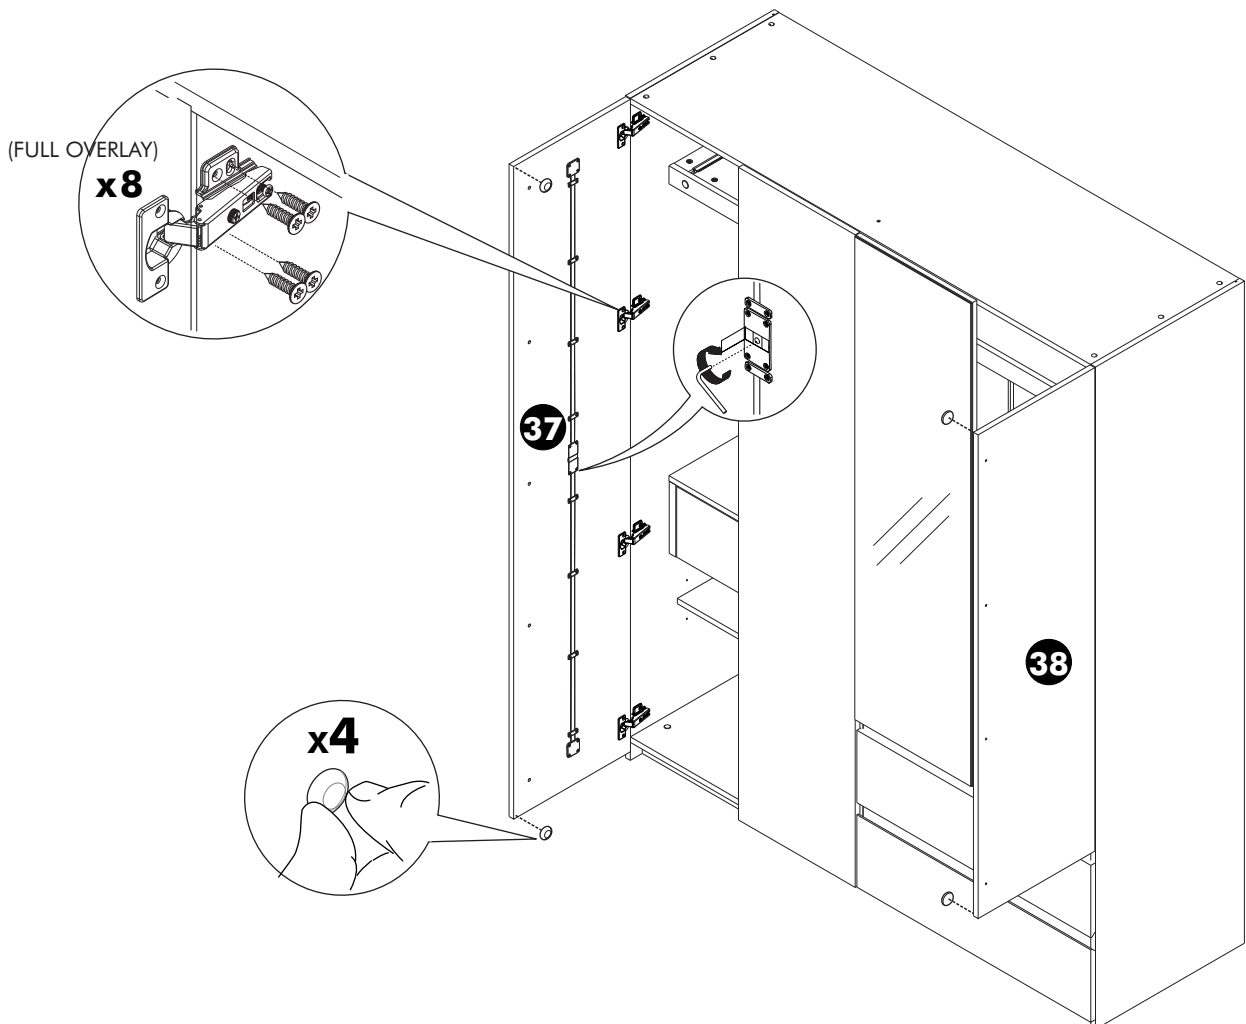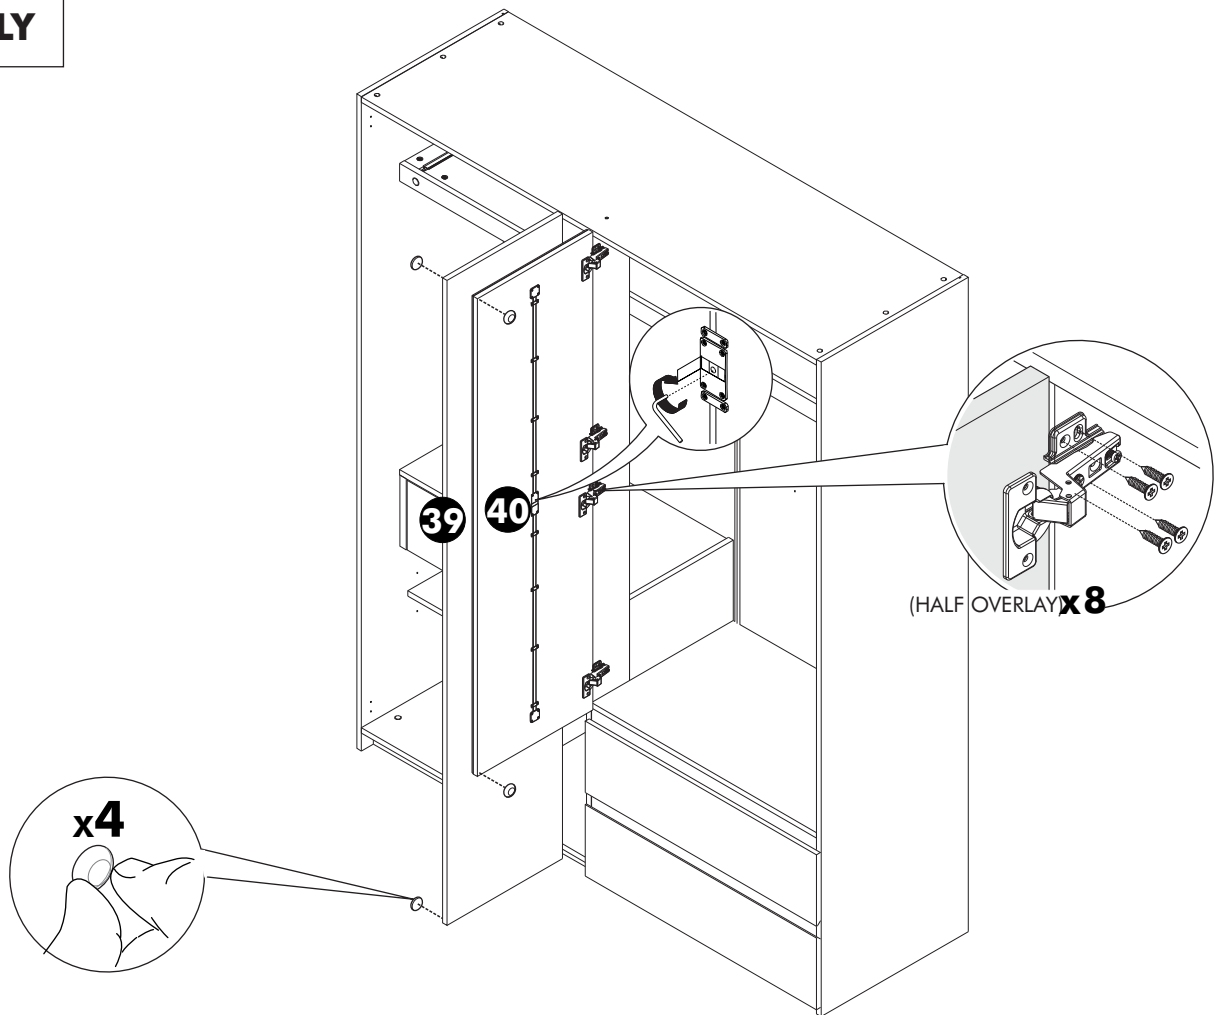

M4x25mm **x9**
Ø11mm.(WHITE) **x5**

