



CRARARA

5 Door WD 225 Cm.

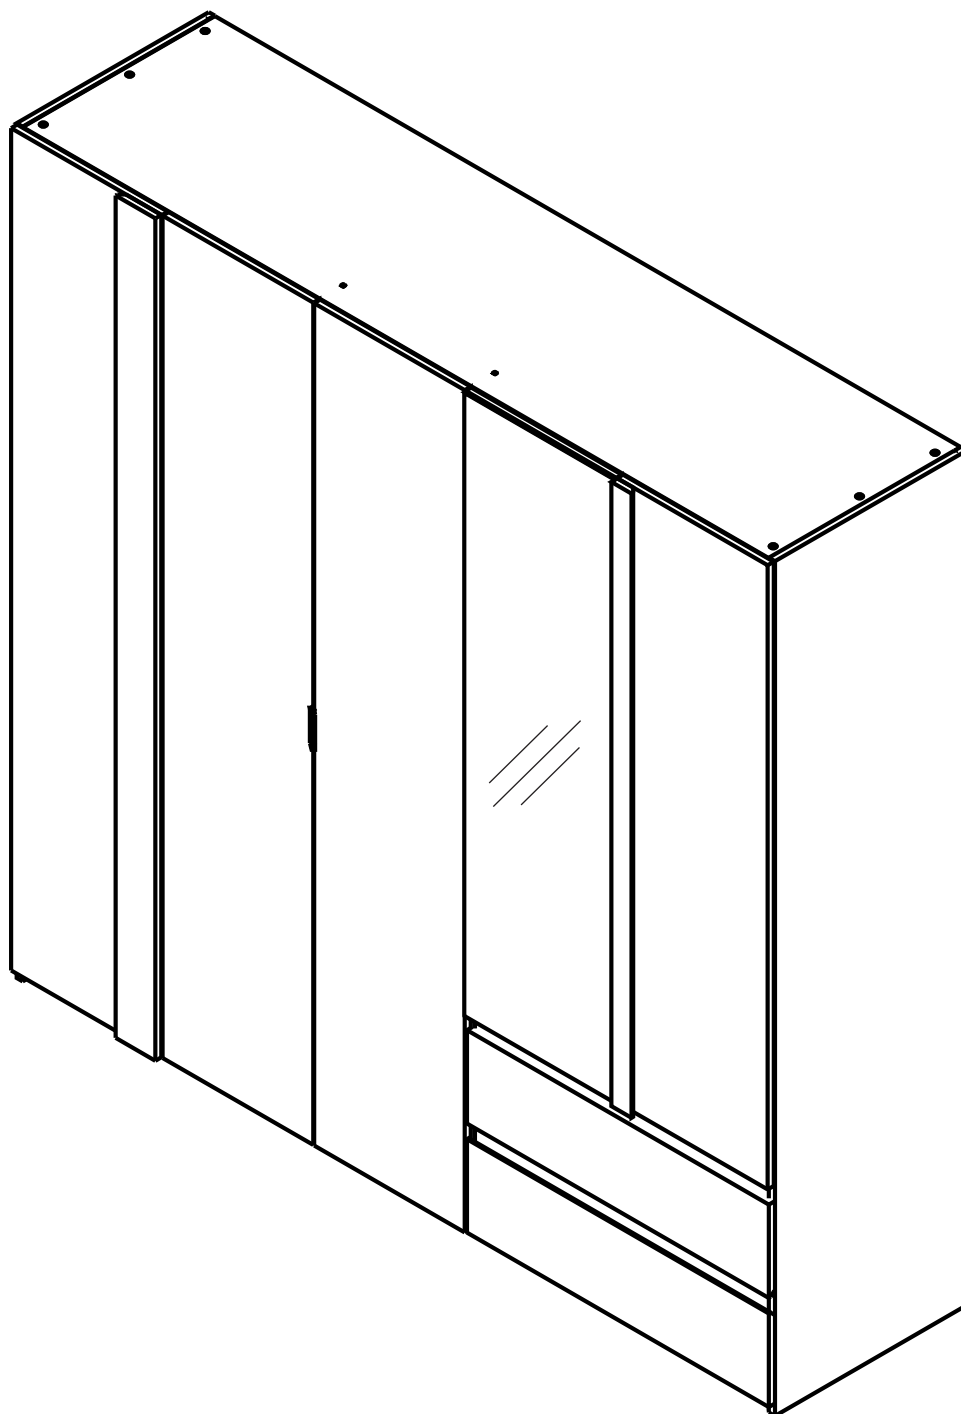


CONNECT SYSTEM

1

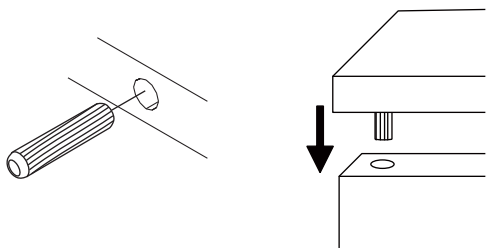


2

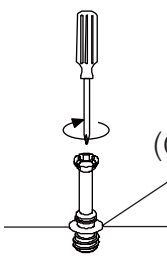


(Connecting bolts)


3

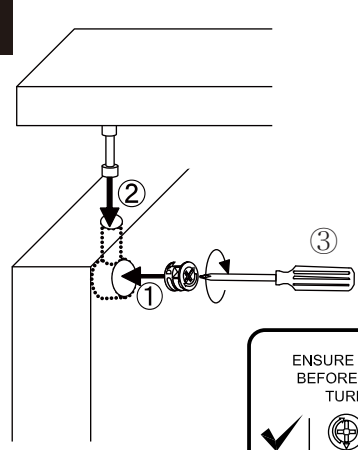


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

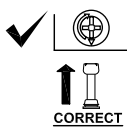

✓
↑
CORRECT

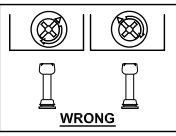


✗
WRONG

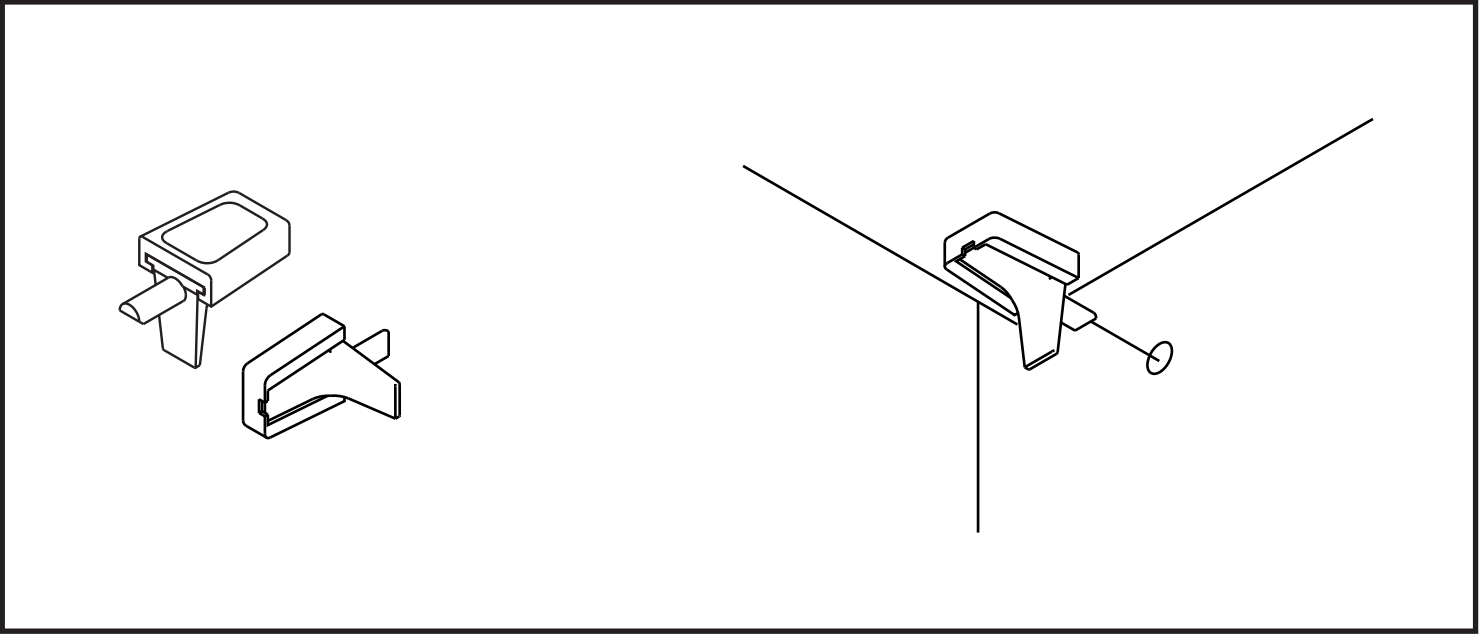






M4x16mm.

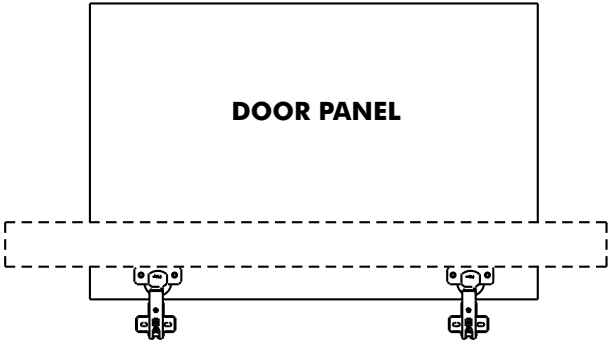

DOOR PANEL

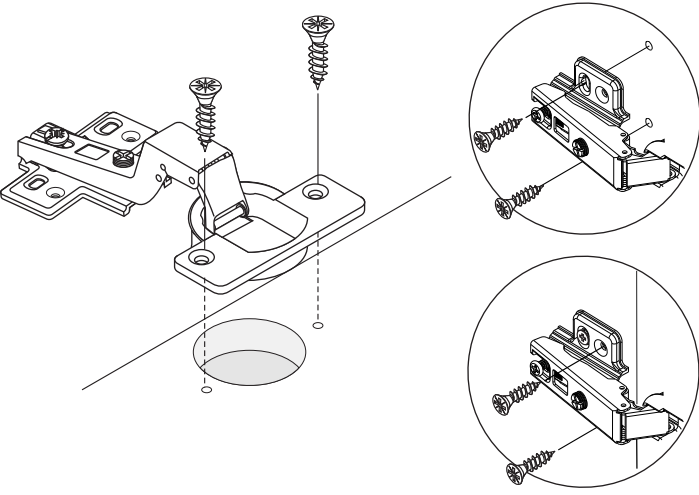


CONNECT SYSTEM

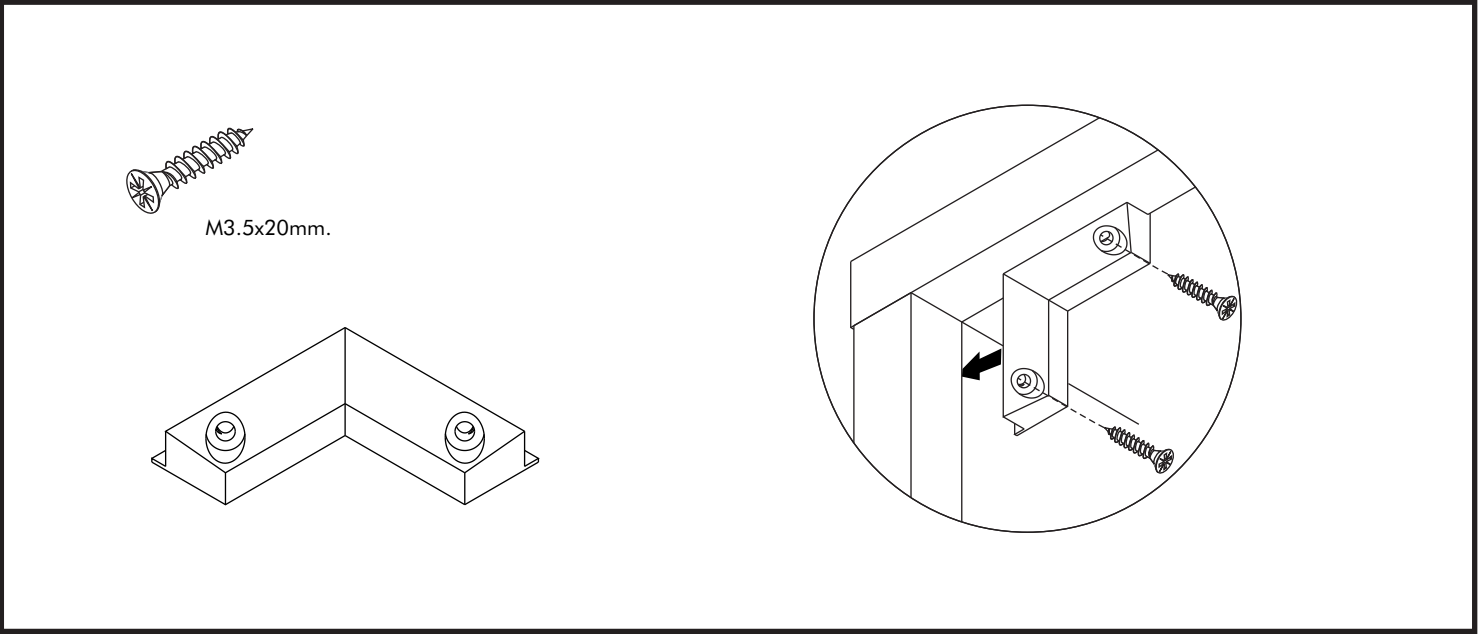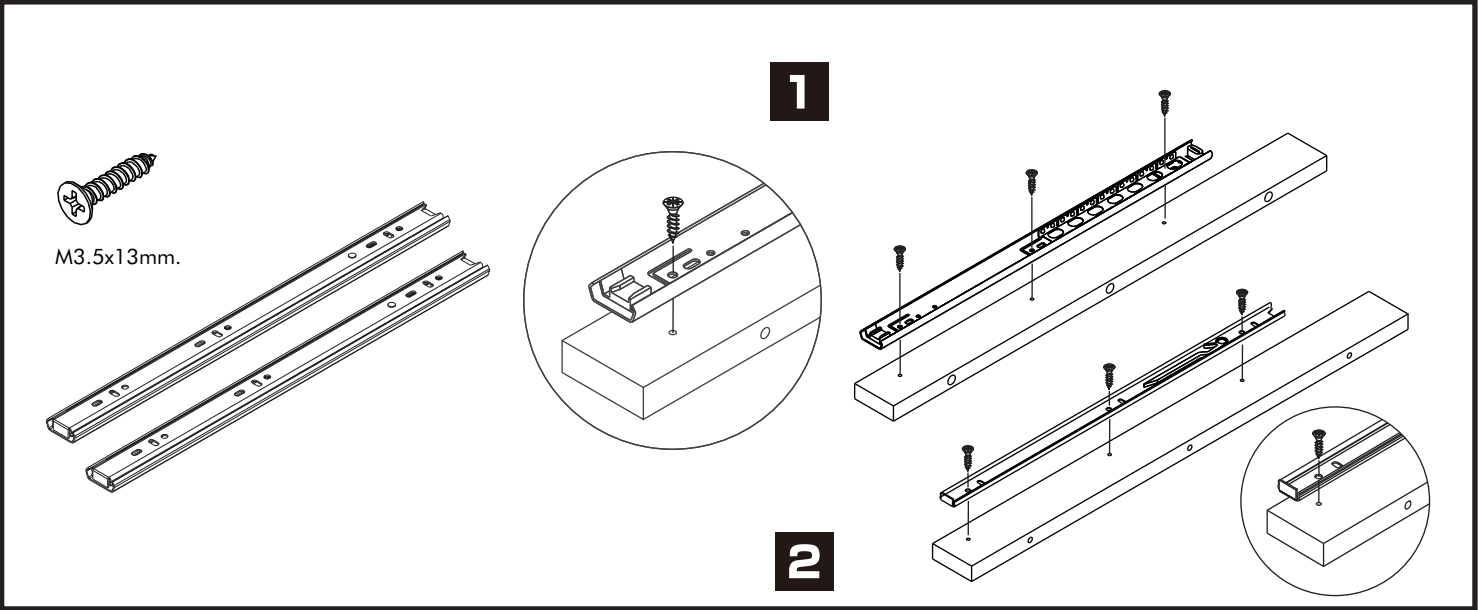

HARDWARE


-BODY SET




x 39



x 39




x 62

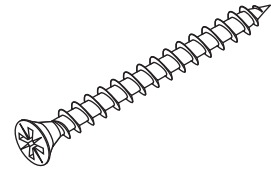


M4x50mm.

x 10



M4x40mm.

x 2




M4x35mm.

x 4



x 10




M4x25mm.

x 30



Ø 20mm.(5x23)

x 2



x 4




M3.5x13mm.

x 8



M4x16mm.

x 67



x 2




x 12




Ø 5x18 mm.

x 6

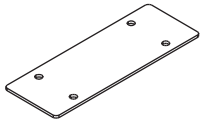

x 2




x 2




M4x20mm.


x 4



x 8



x 8

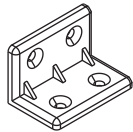


x 8




M4x16mm.

x 40




M4x30mm.

x 12

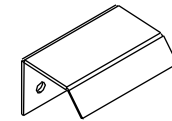


NO.48 x 1

-DRAWER SET

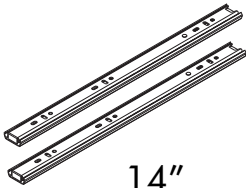

14"

x 1

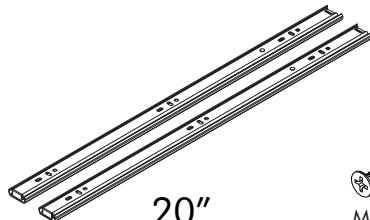


20"

x 2




M3.5x13mm.

x 36



M4x40mm.

x 34




TFL4 M6x23

x 16




x 1

-DOOR SET



(FULL OVERLAY)

x 8



(HALF OVERLAY)

x 12




M4x16mm.

x 120



x 8



M4x25mm.

x 9



x 1



Ø 11mm.(WHITE)

x 5




Ø 11mm.(MAPLE)

x 4


ASSEMBLY

-BODY SET


1.

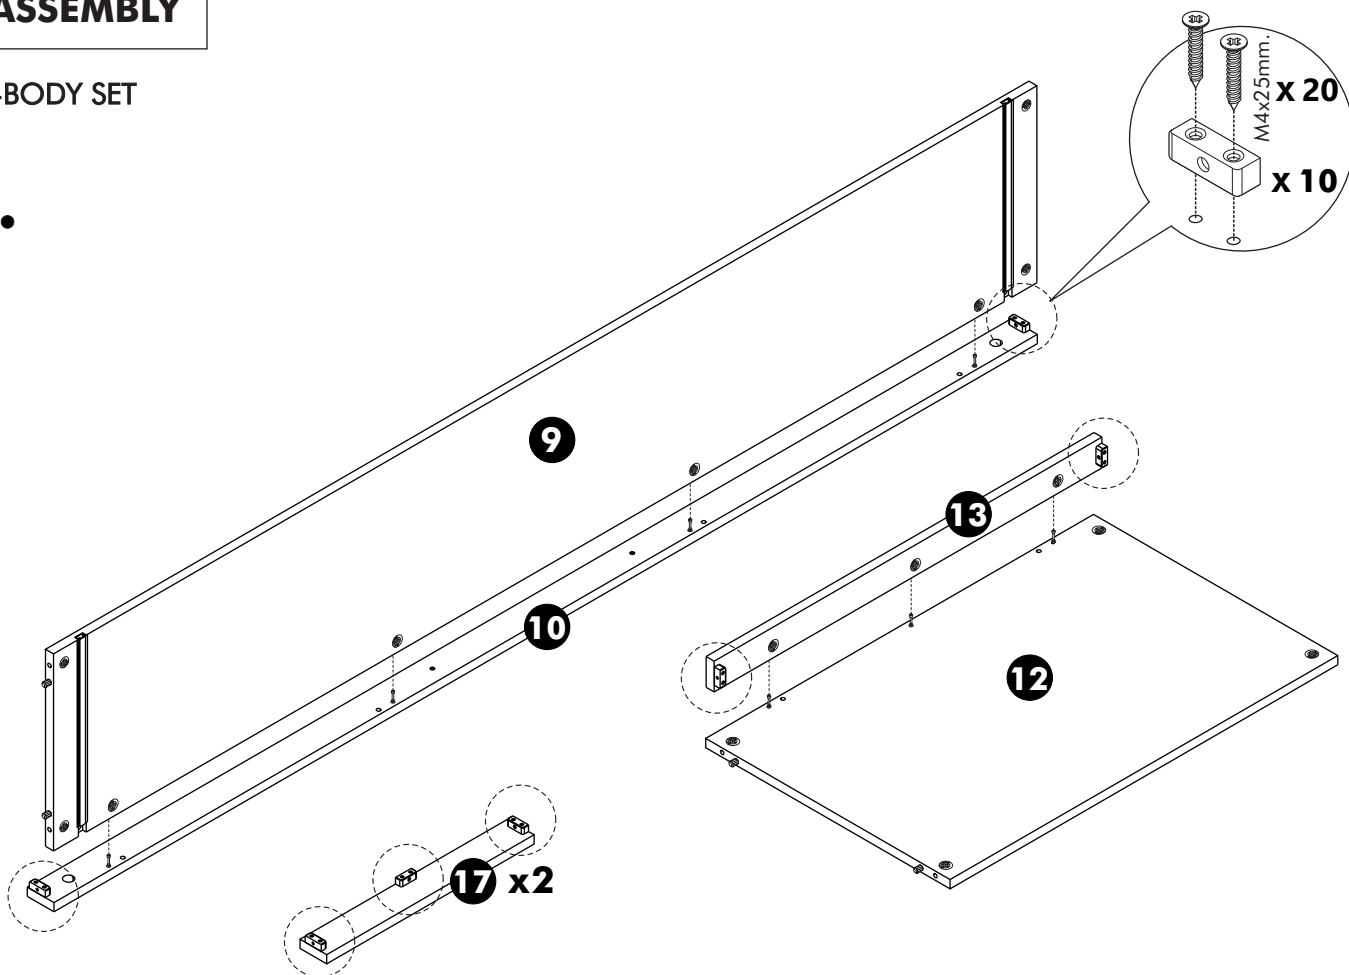


2.

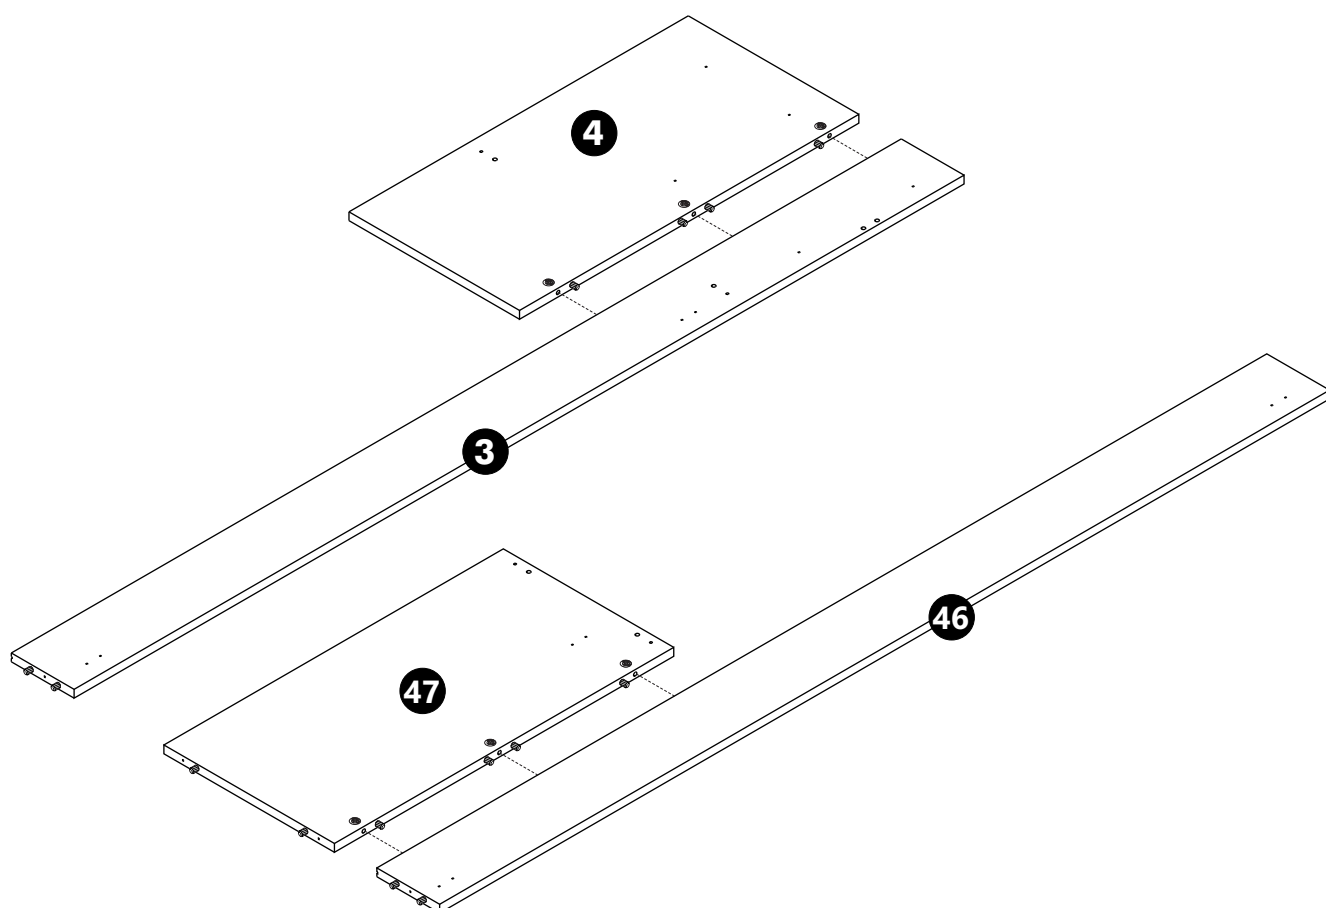


3.

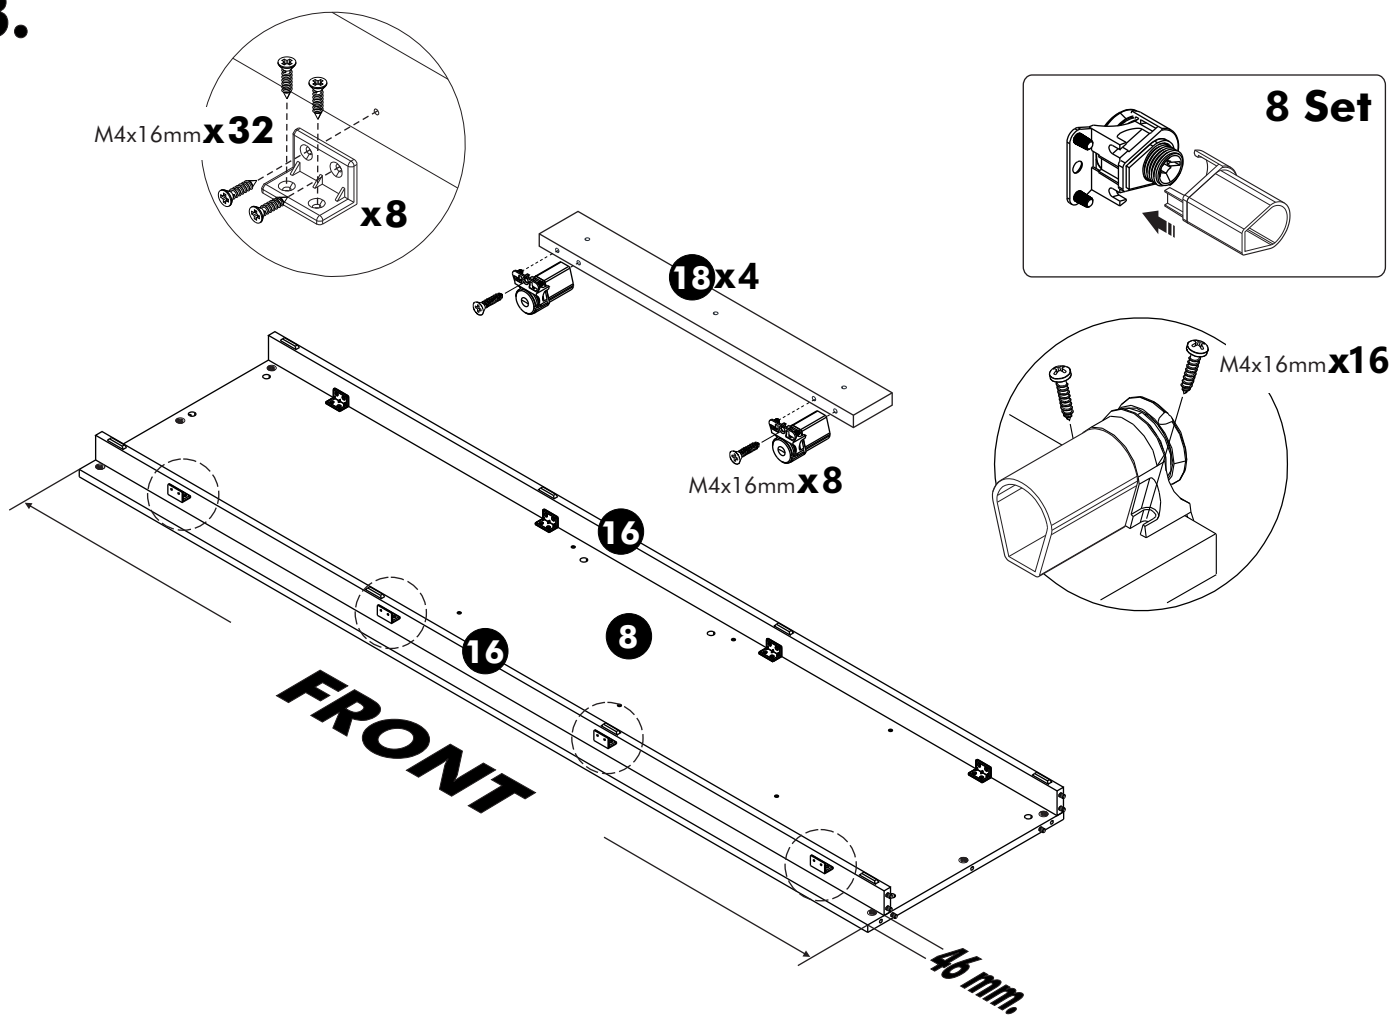


4.

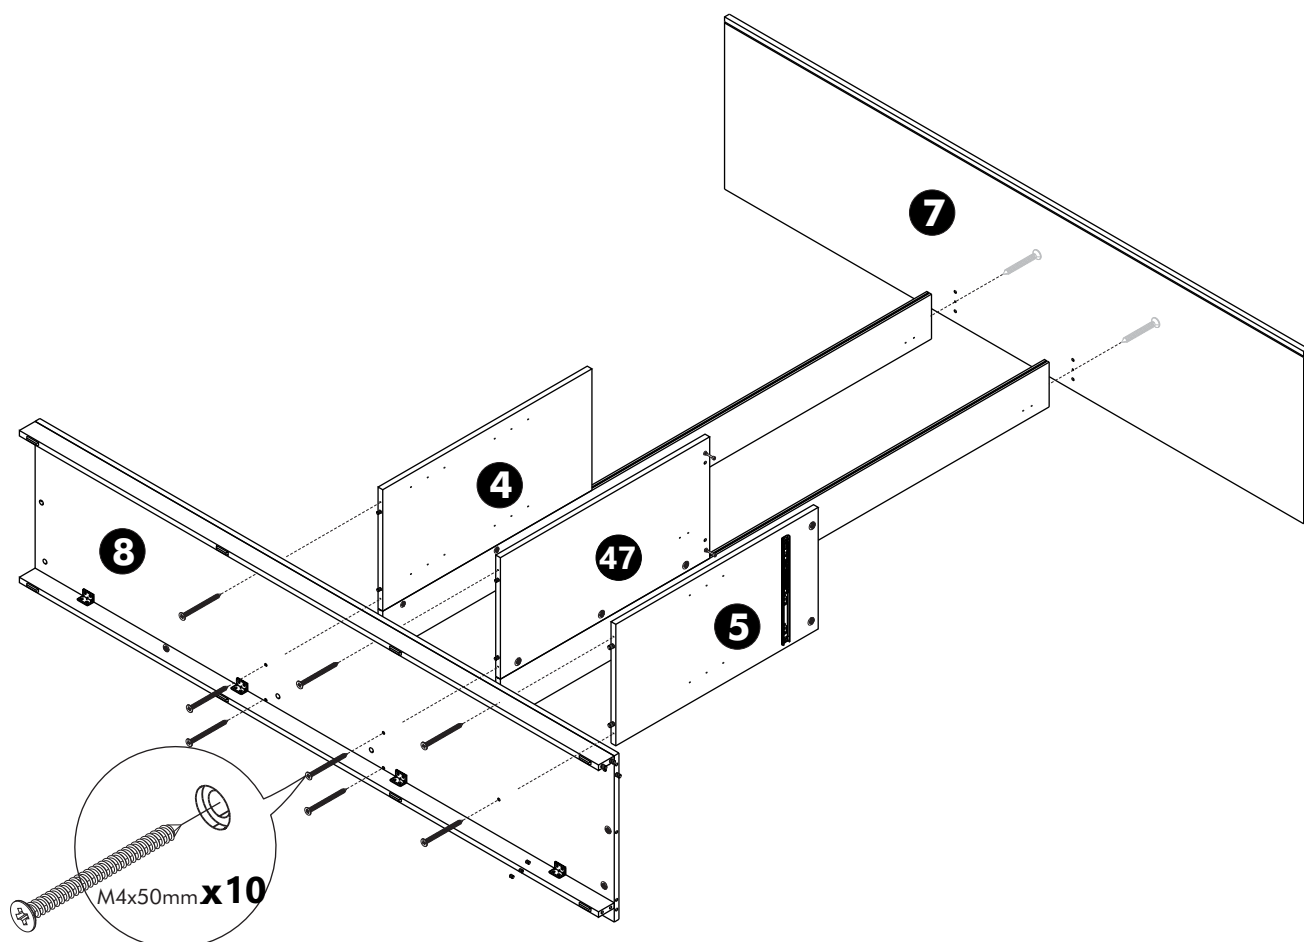


5.

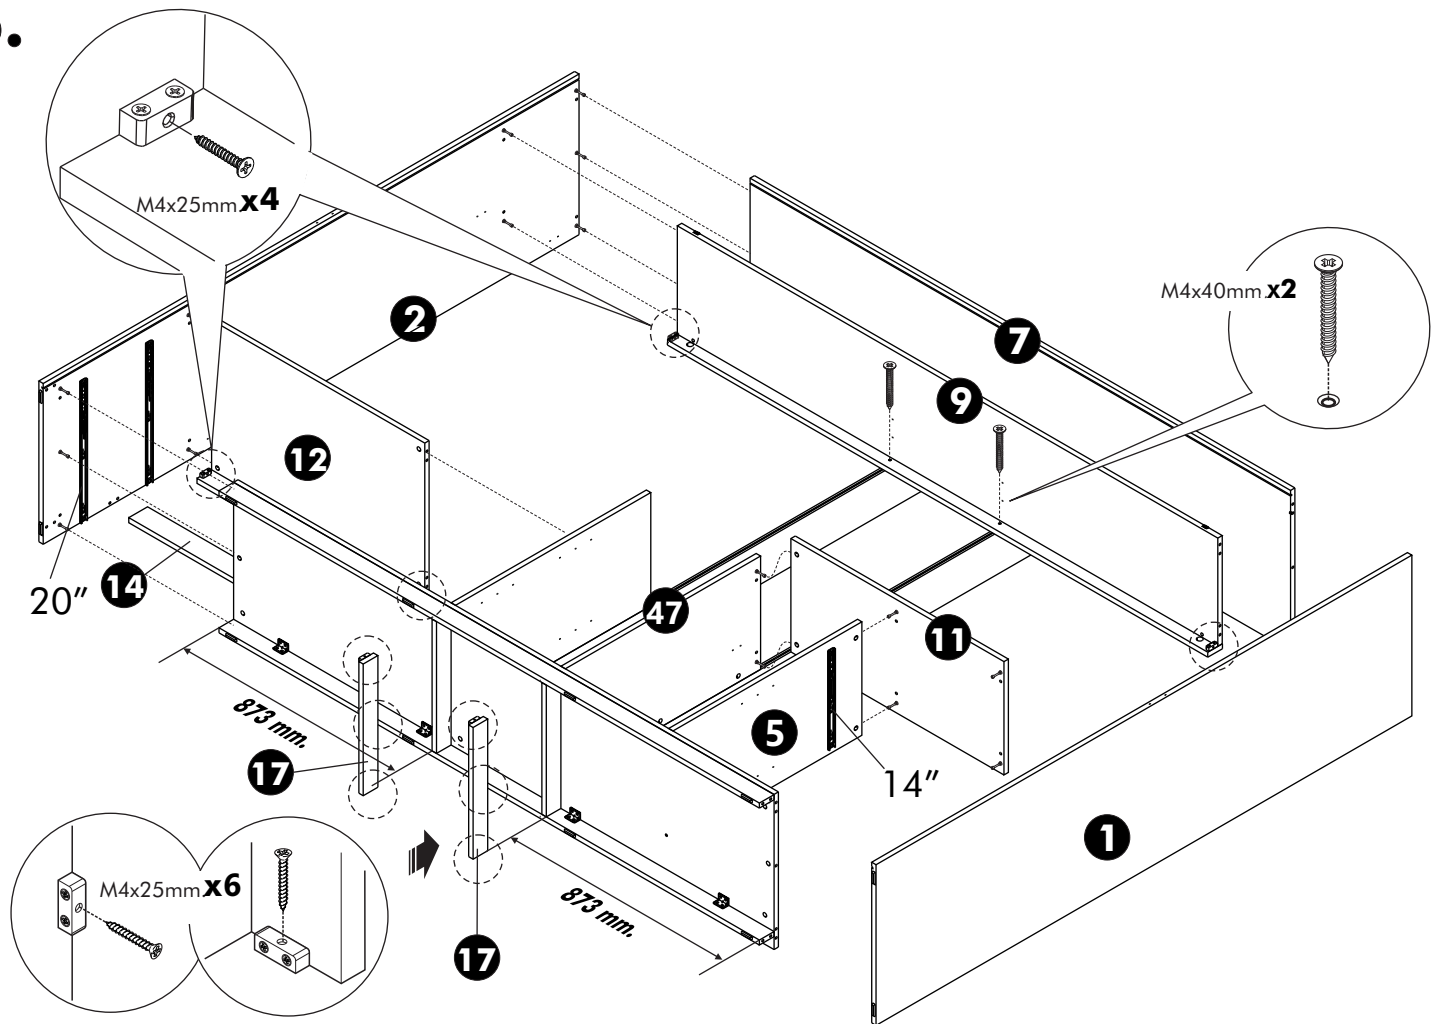


6.

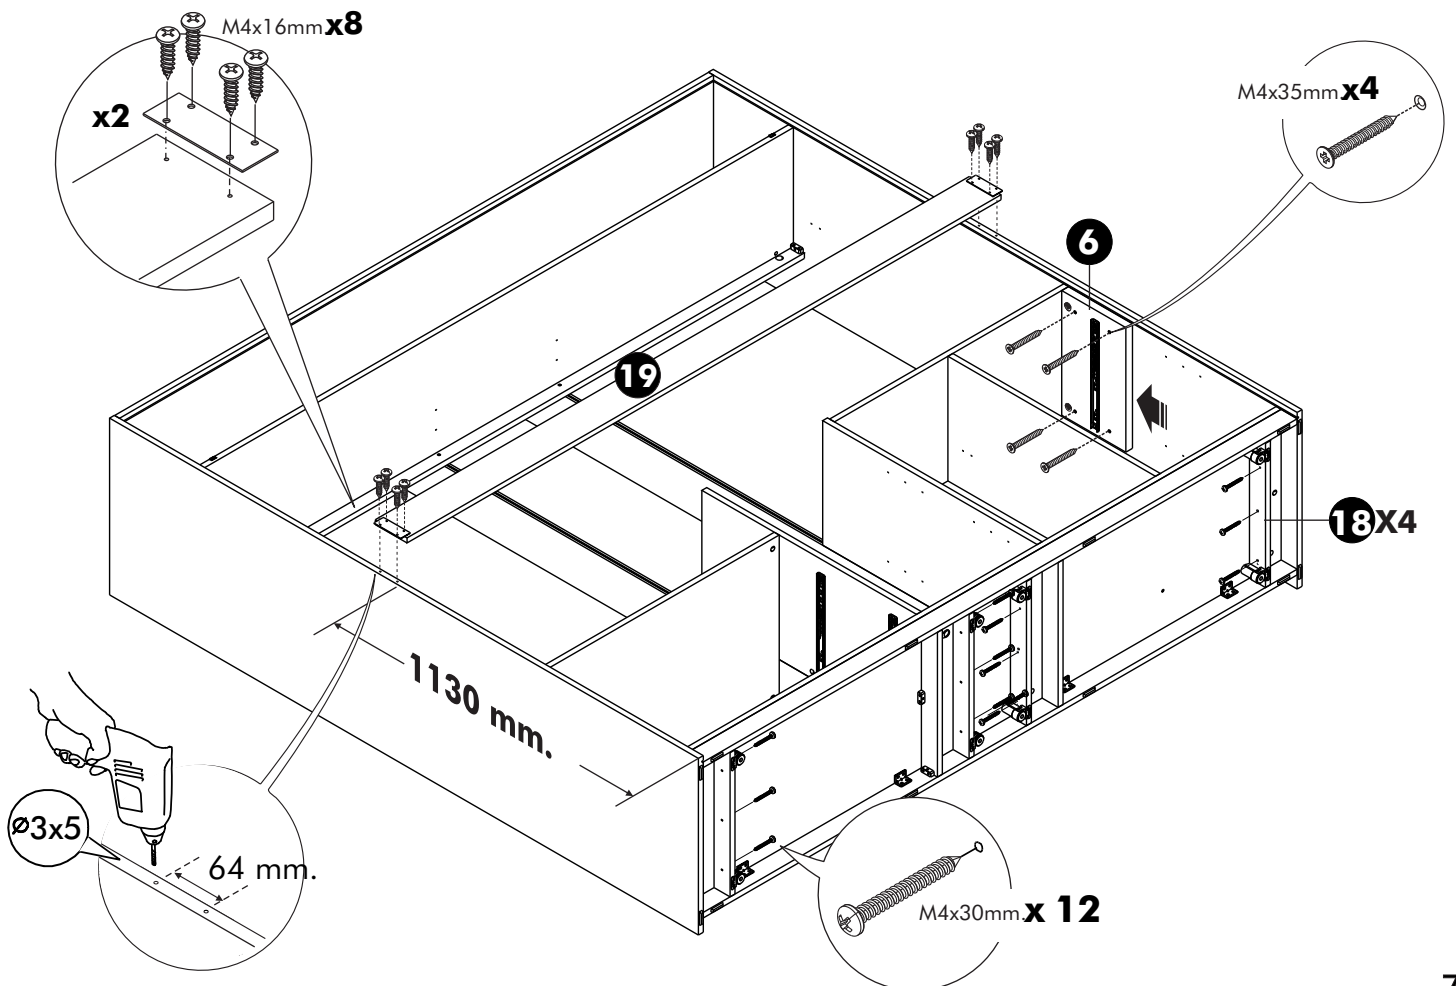


7.

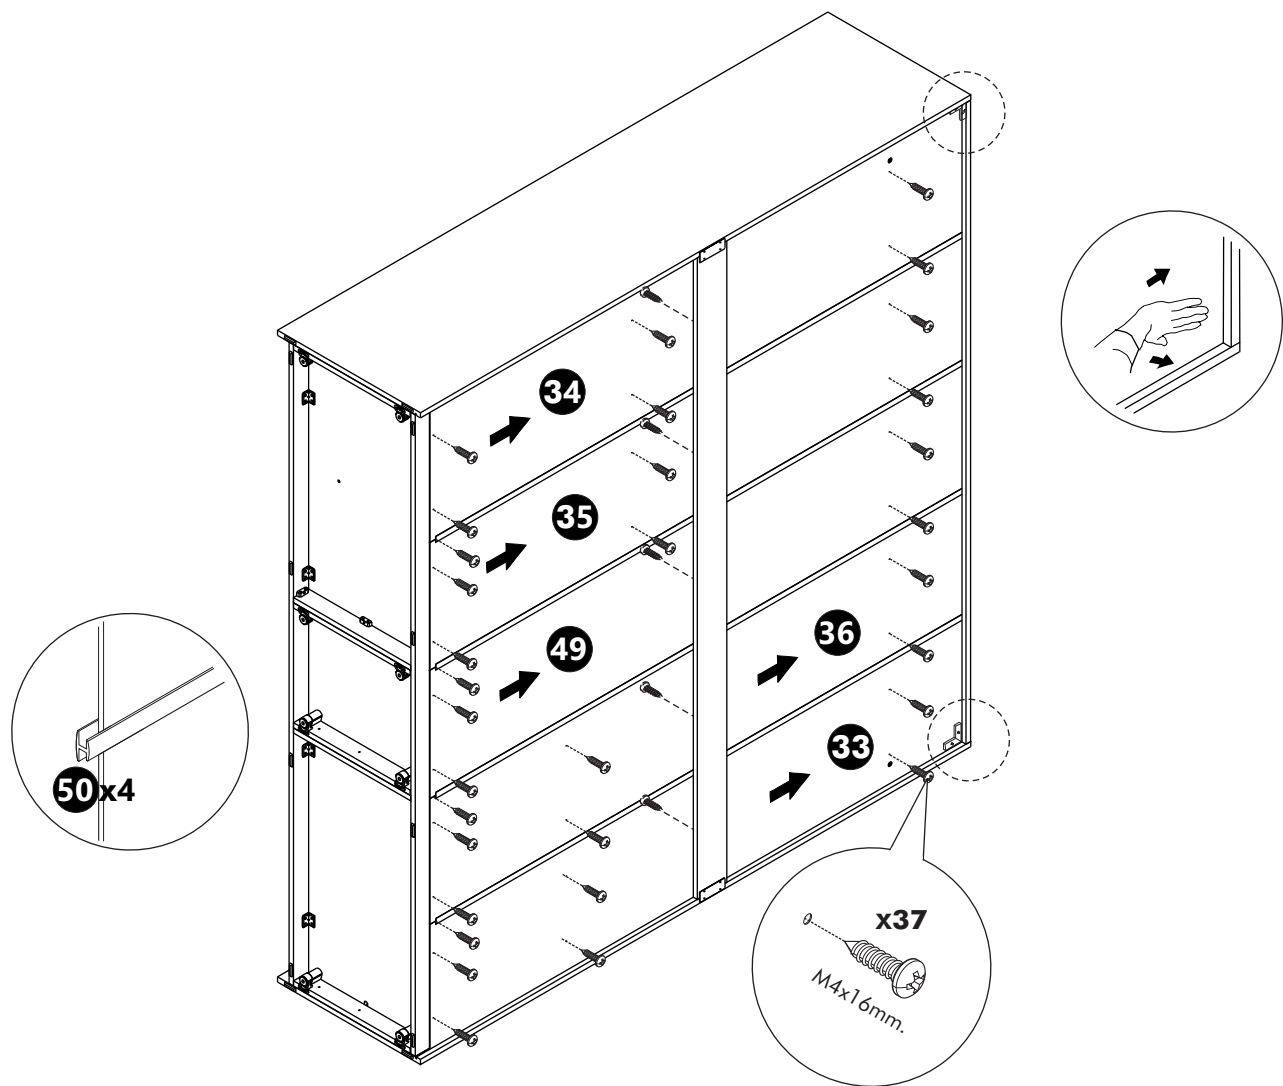

8.





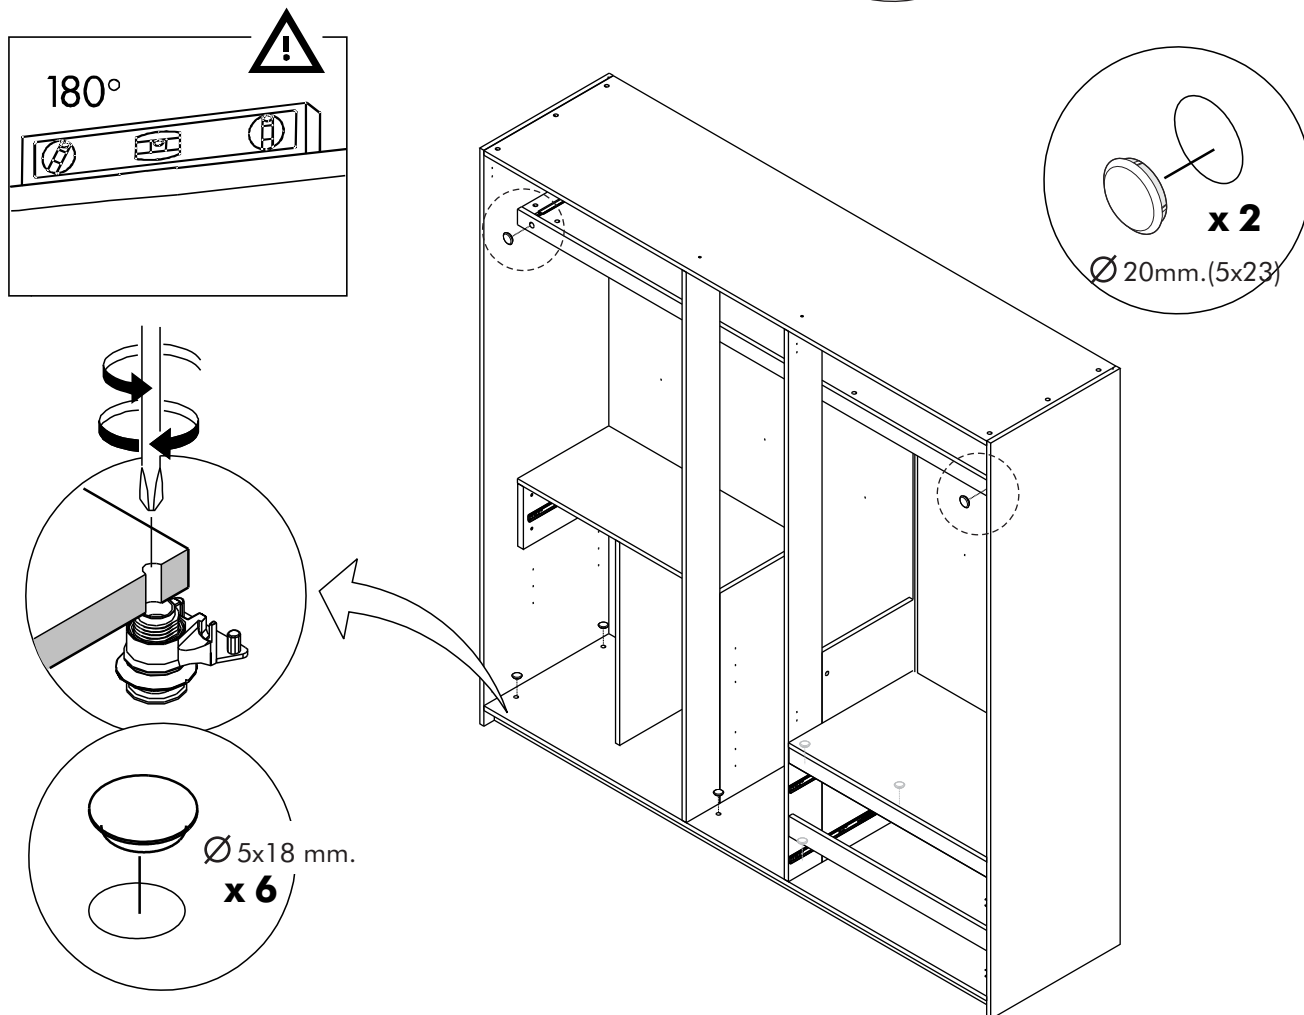







9.

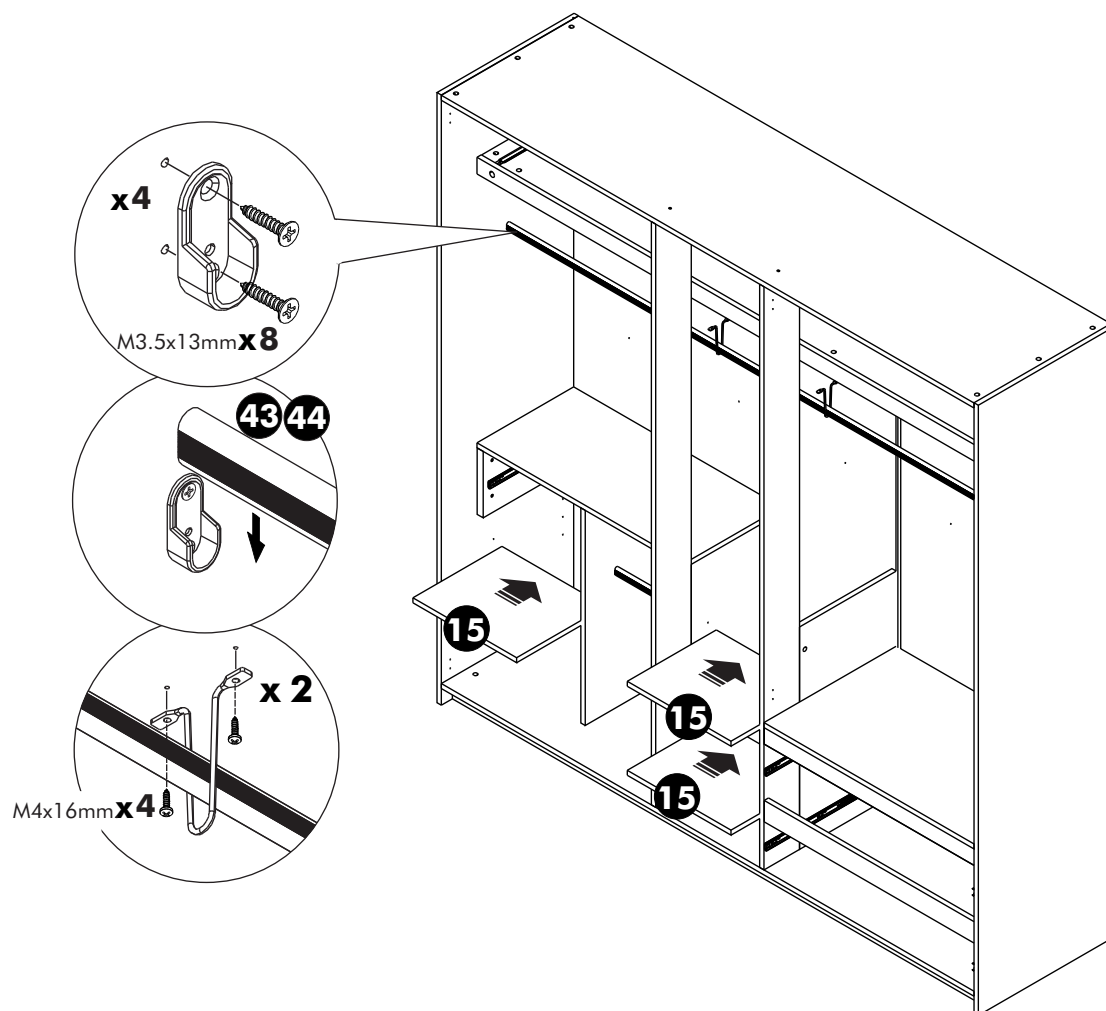

ASSEMBLY

-DRAWER SET

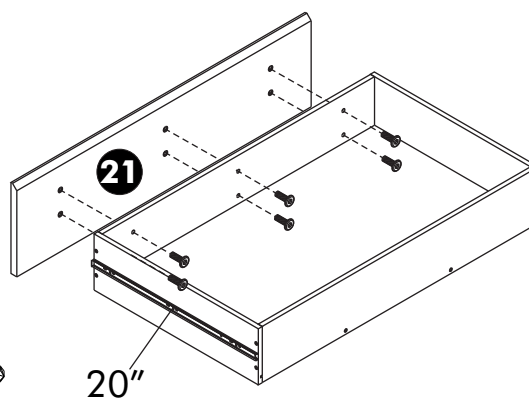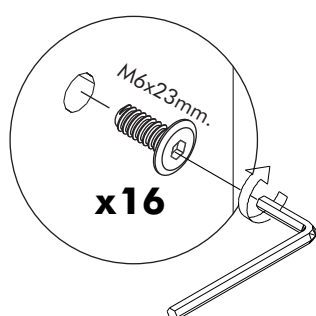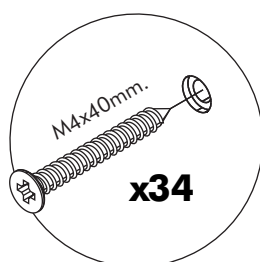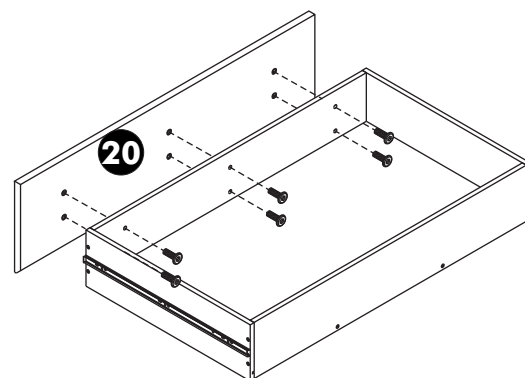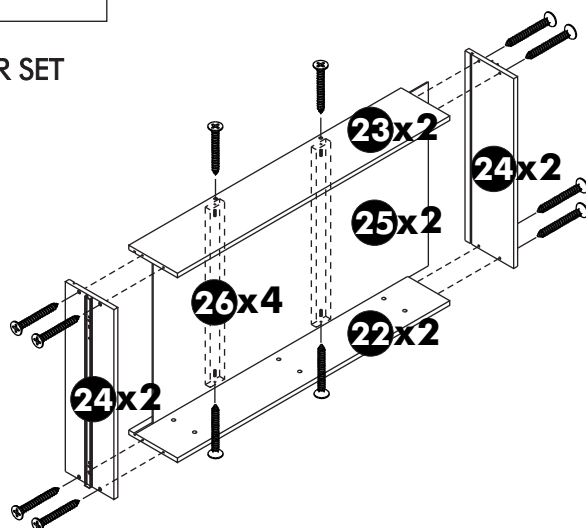

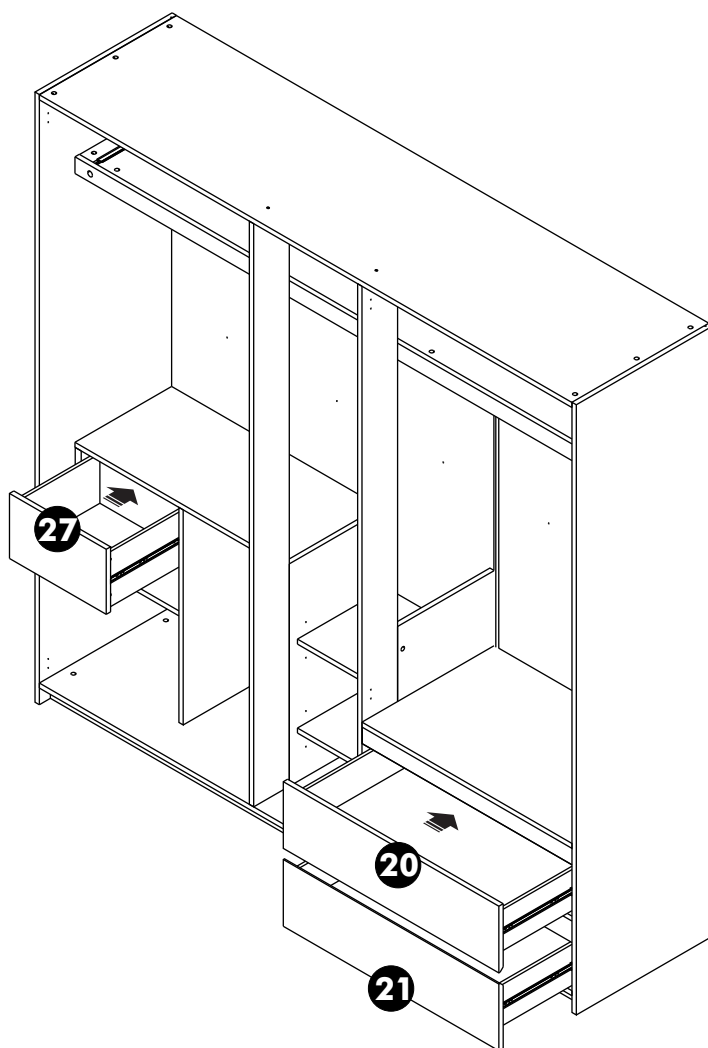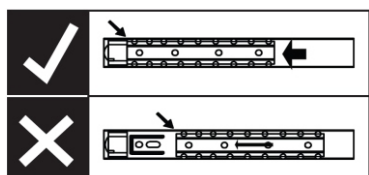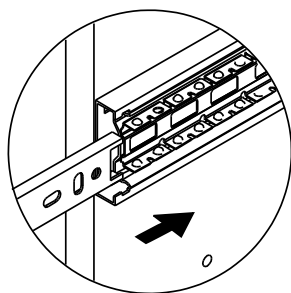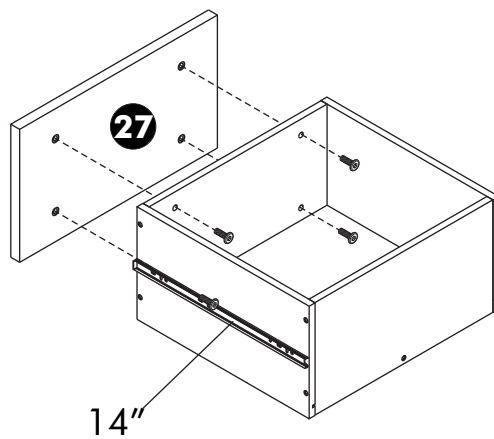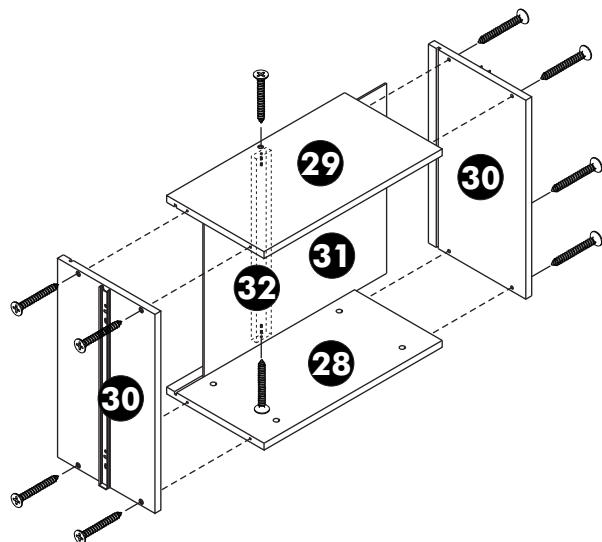

ASSEMBLY

-DOOR SET

