


\$MAZZIMO


BED 5 ft.

BED 6 ft.

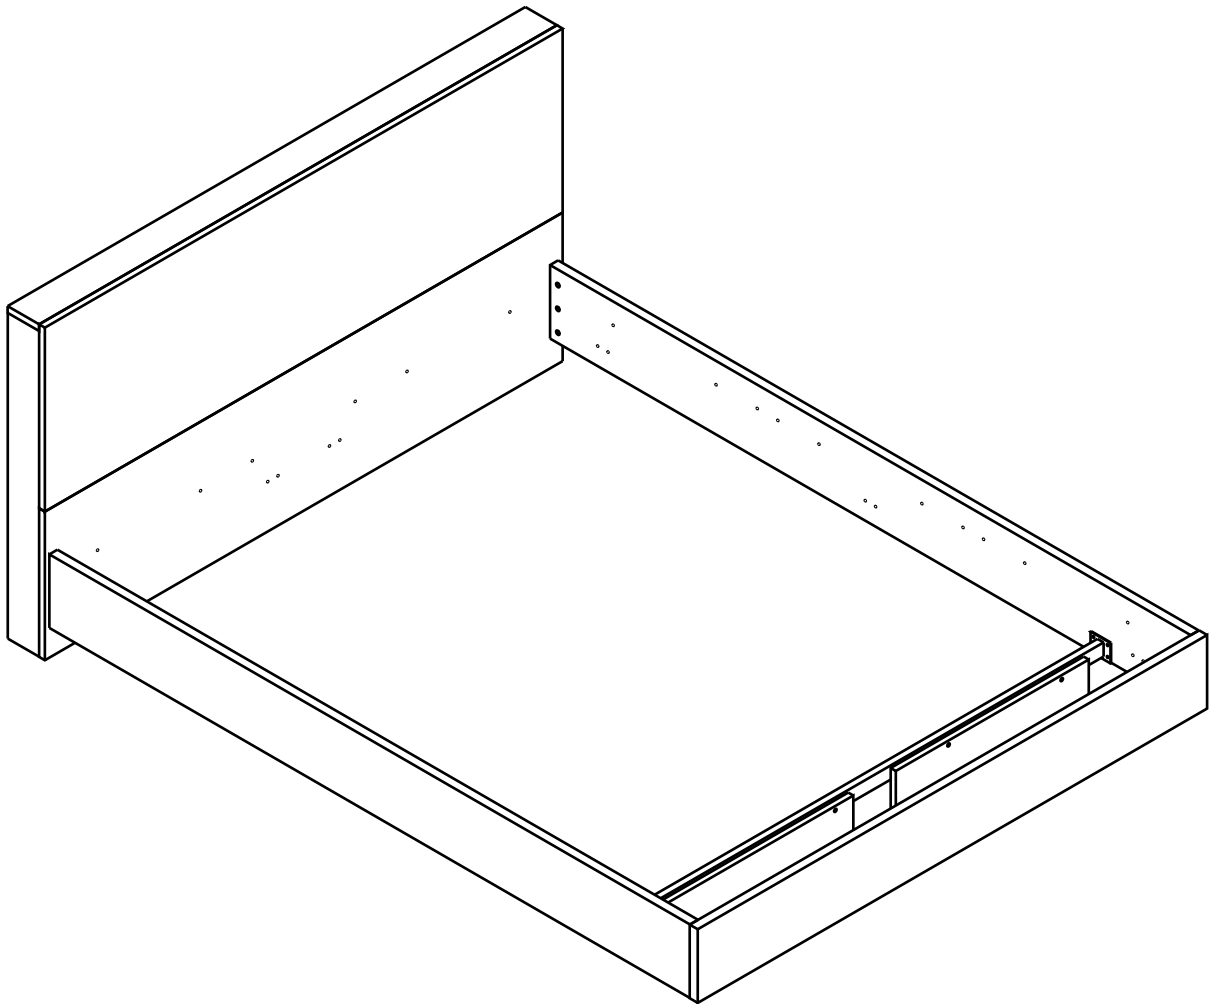


CONNECT SYSTEM


1

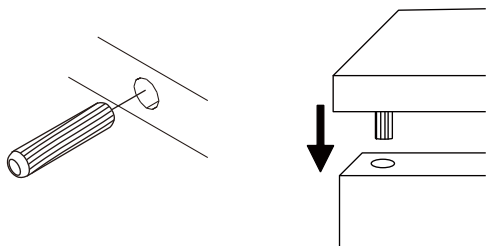








2

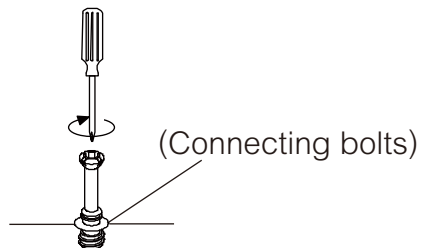


3

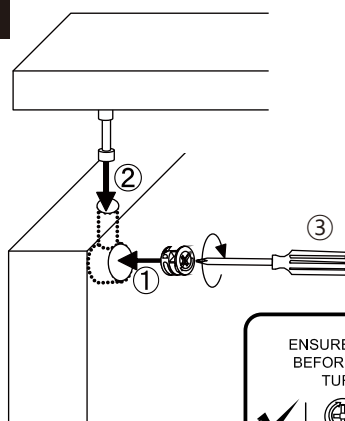

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

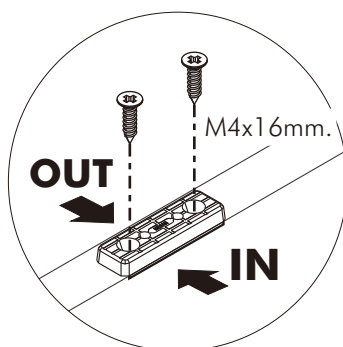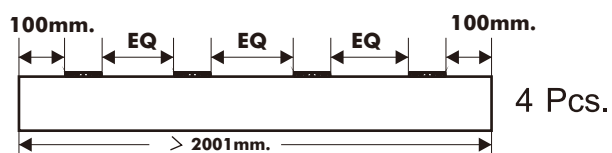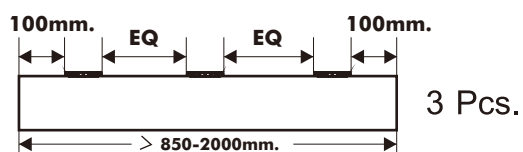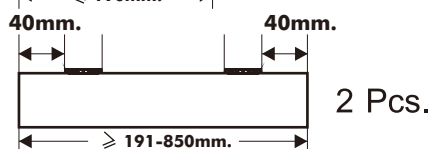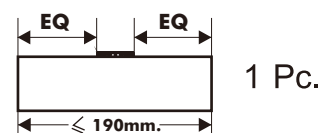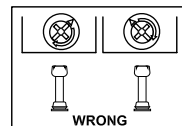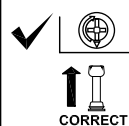


40mm.



HARDWARE


-BODY SET



x 4




x 4



#8x35

x 4

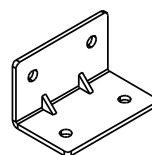

x 2



No.1

x 3



M4x16mm.

x 19




#M8

x 4




#M8

x 4




#TFL4 M8x50

x 4

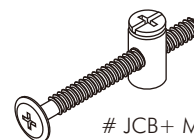


JCB+ M6x60

x 6



#M4x16mm.

x 22




x 11


ASSEMBLY

-BODY SET


1.

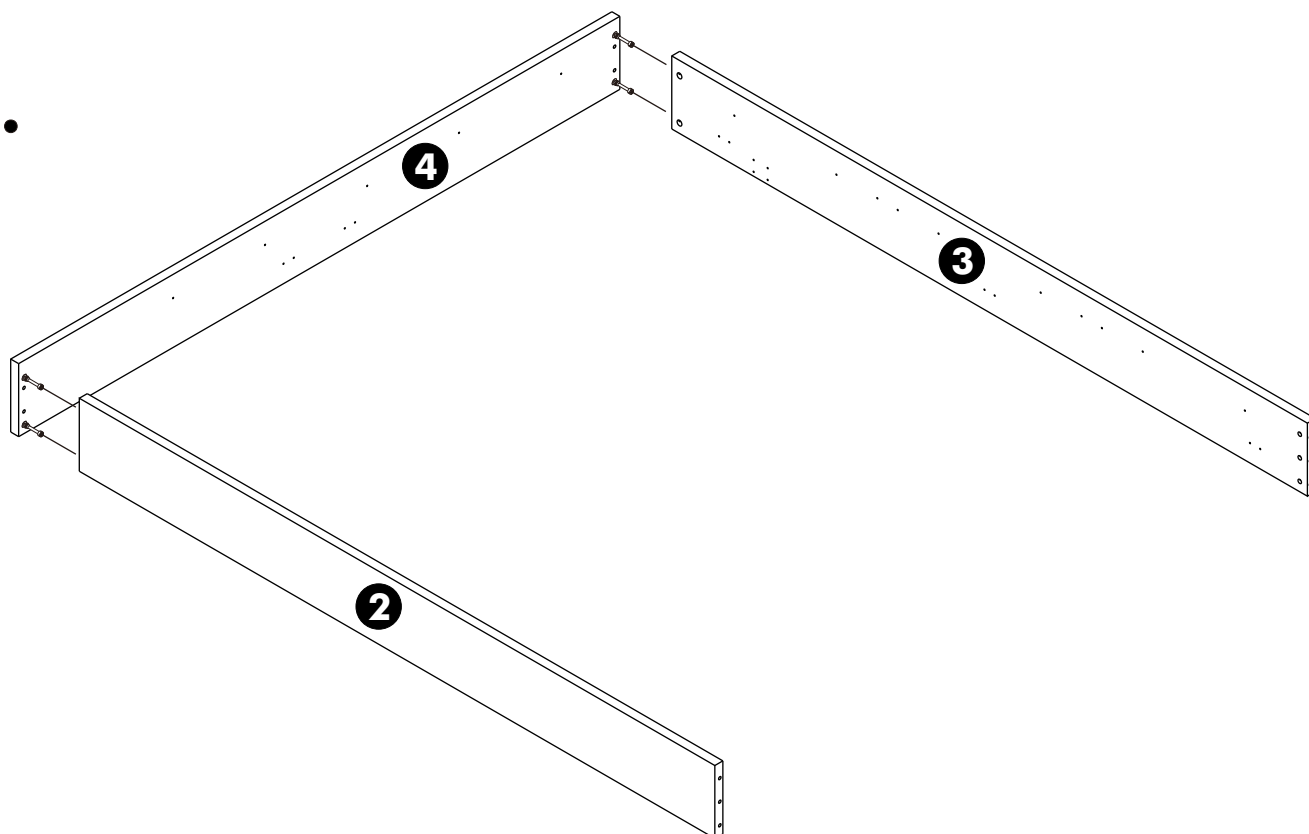

2.

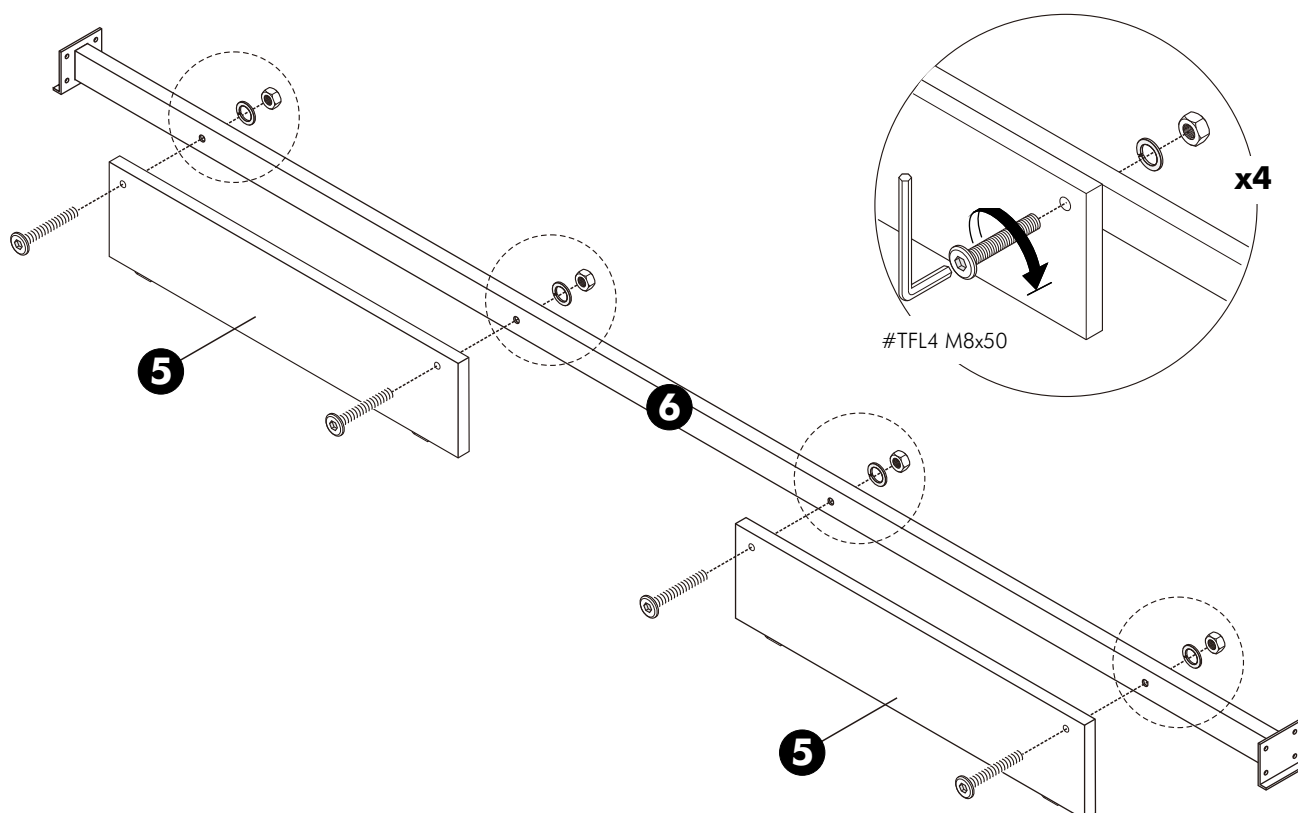

3.

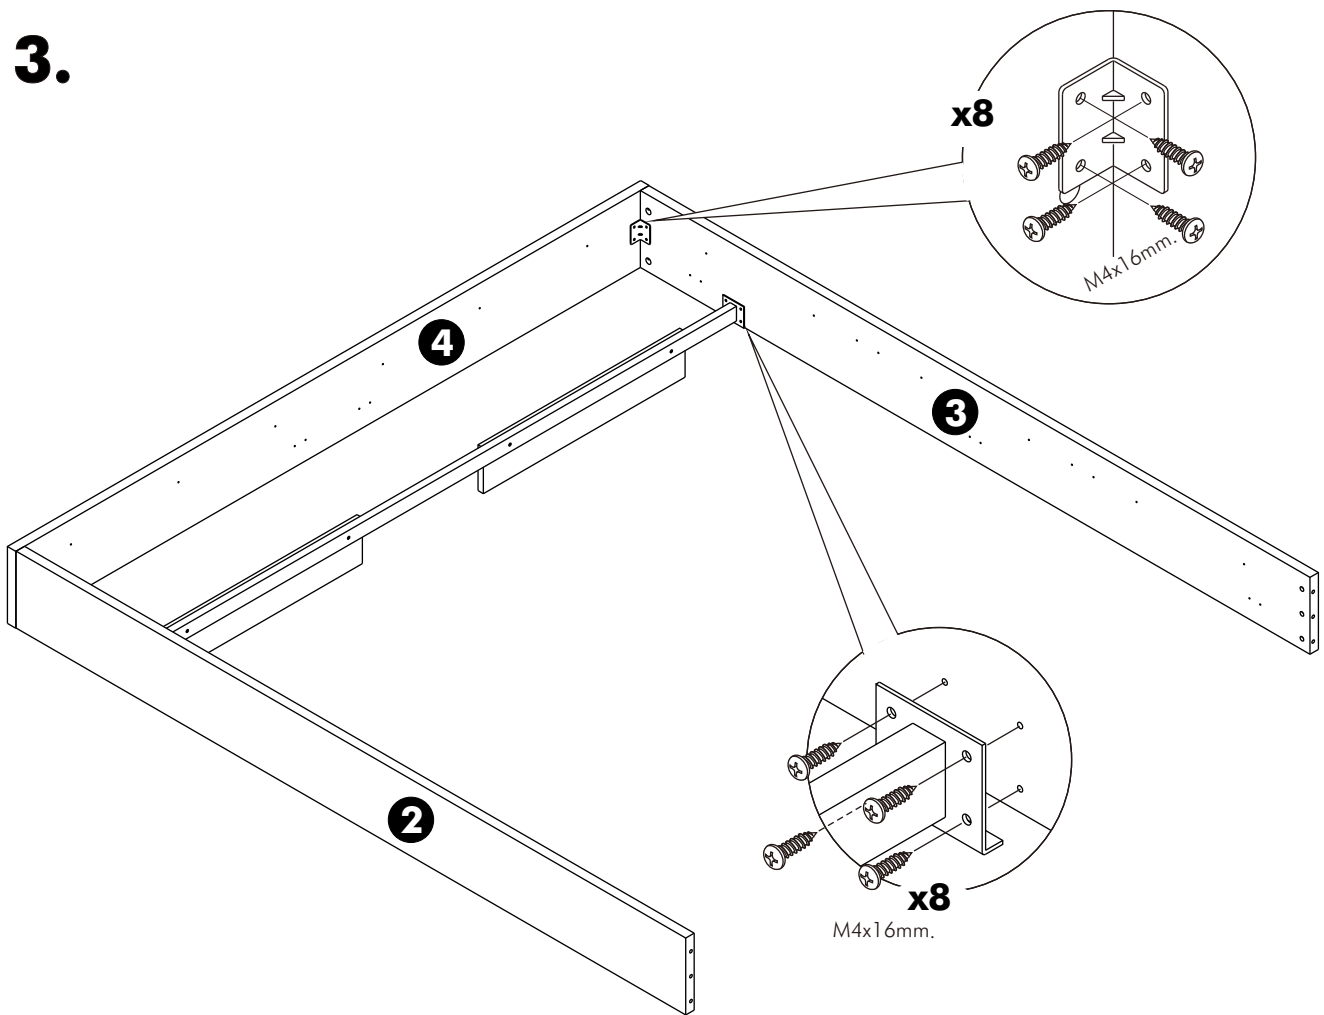

4.

