


SUPREME

Wardrobe Slide W100 cm.

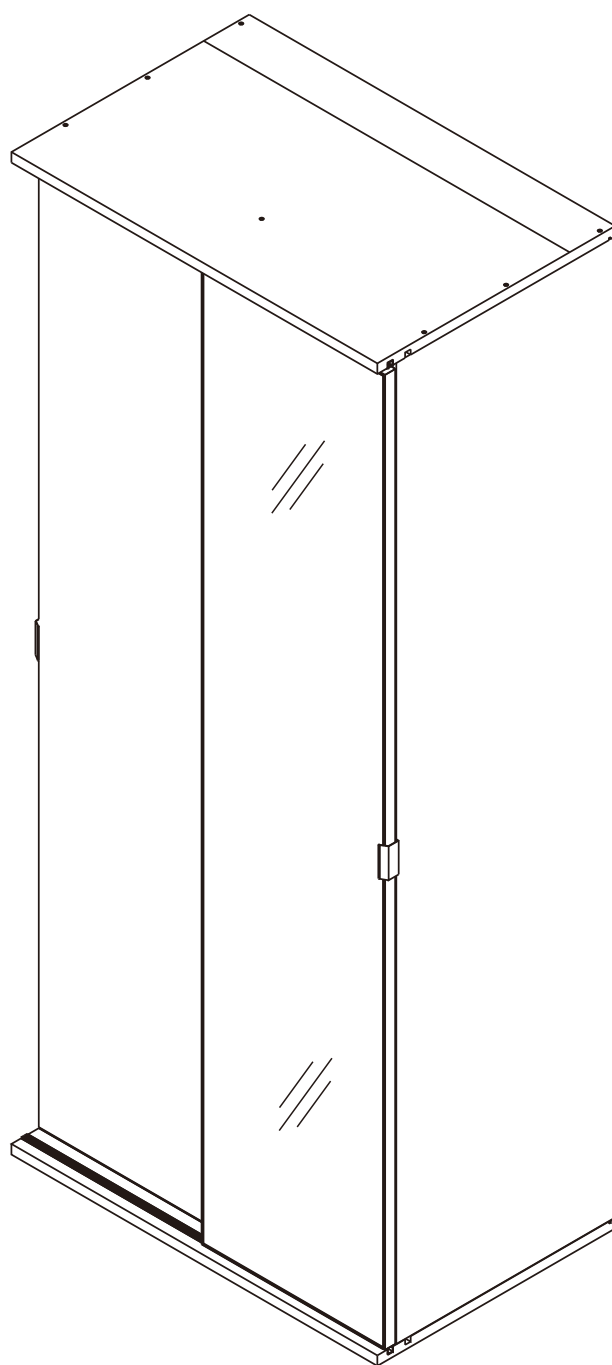

CONNECT SYSTEM

1

2

3

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓

↑
CORRECT

✗

↓
WRONG

1 Pc. $\leq 190\text{mm.}$

2 Pcs. $\geq 191-850\text{mm.}$

3 Pcs. $> 850-2000\text{mm.}$

4 Pcs. $> 2001\text{mm.}$

i

40mm.

EQ

M4x16mm.


OUT

IN

M3.5x13mm.

1





2






M4x16mm.





DOOR PANEL

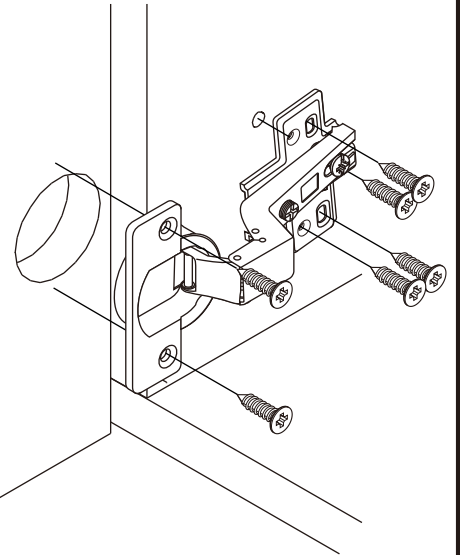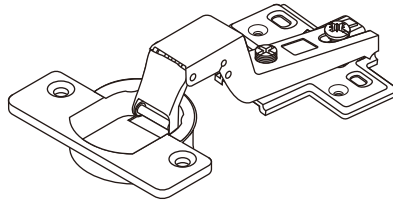

M3.5x20mm.

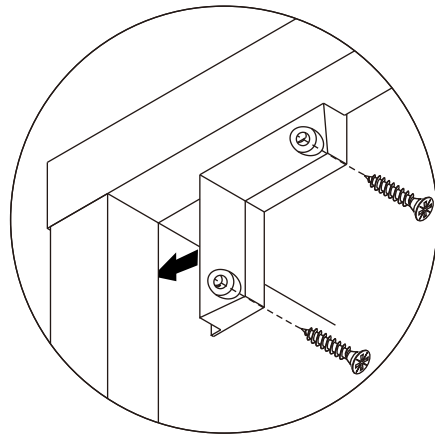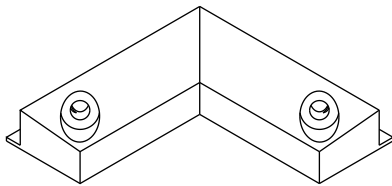


M4x30mm.

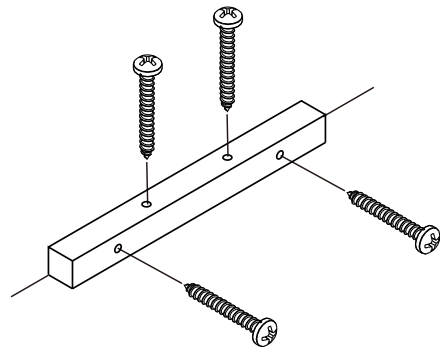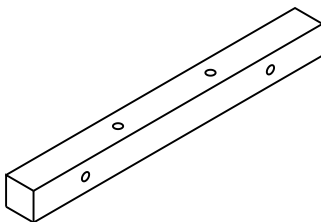

HARDWARE


-BODY SET




x 13



x 13




x 36

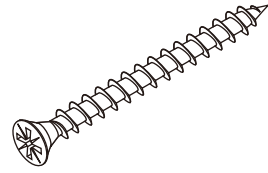


M4x50mm.

x 18



M4x40mm.


x 5



x 8



x 2




M4x25mm.

x 6



M4x13mm.

x 12



x 4




M3.5x13mm.

x 8




M4x16mm.

x 19



x 1




M4x30mm.

x 28




Ø 11mm.

x 11

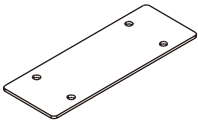

x 2



x 4



M3.5x20mm.

x 8




M4x16mm.

x 16



x 8

-DRAWER SET

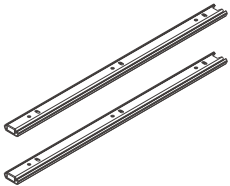


x 3




M3.5x13mm.

x 36

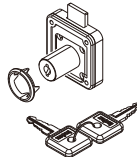

x 1



x 1




M4x1/2"

x 2



M3.5x20mm.

x 4




TFL4 M6x23

x 12



#M4


x 1




M4x40mm.

x 30

-DOOR SET

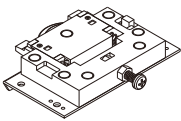

x 4



x 4




M4x16mm.

x 32




4x1/2"

x 24



M4x30mm.

x 26

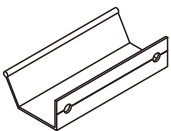


x 2



M6x3/8"

x 4

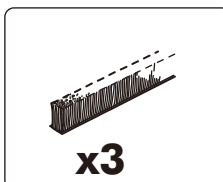


x 3


ASSEMBLY

-BODY SET


1.

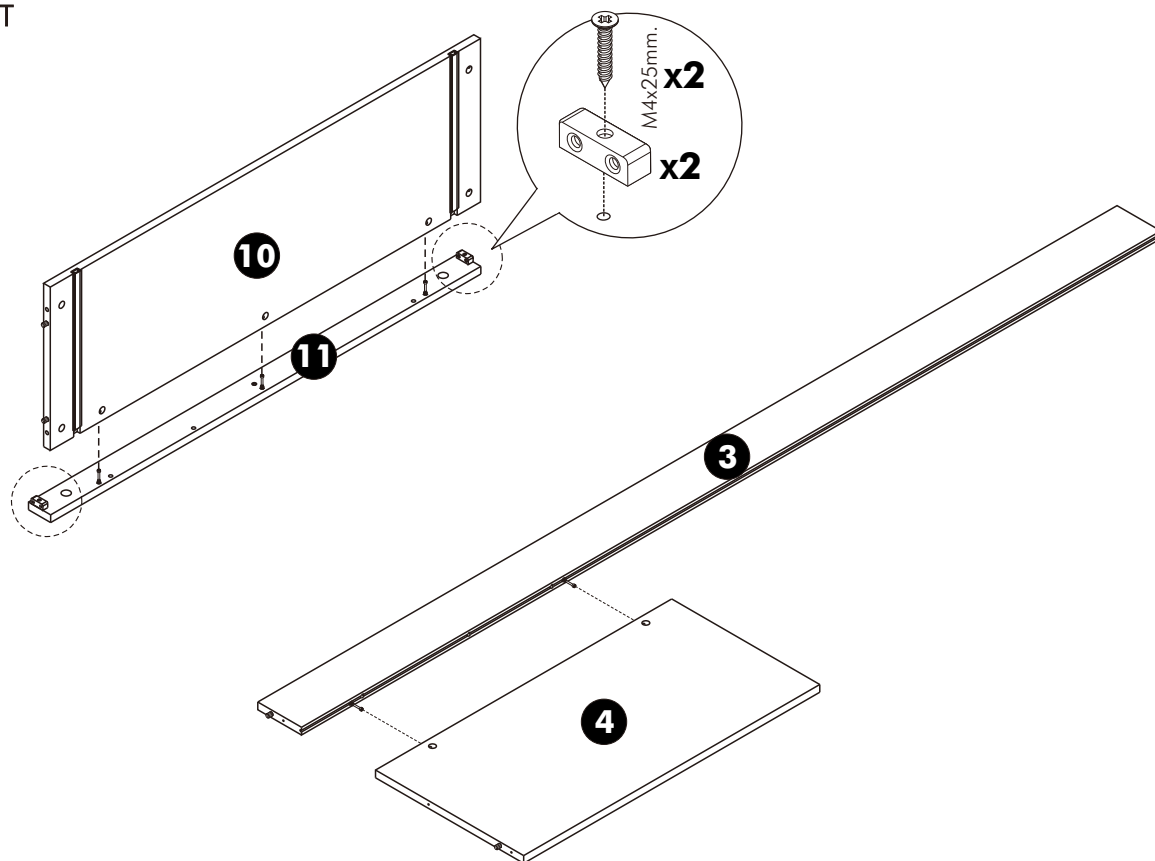


2.

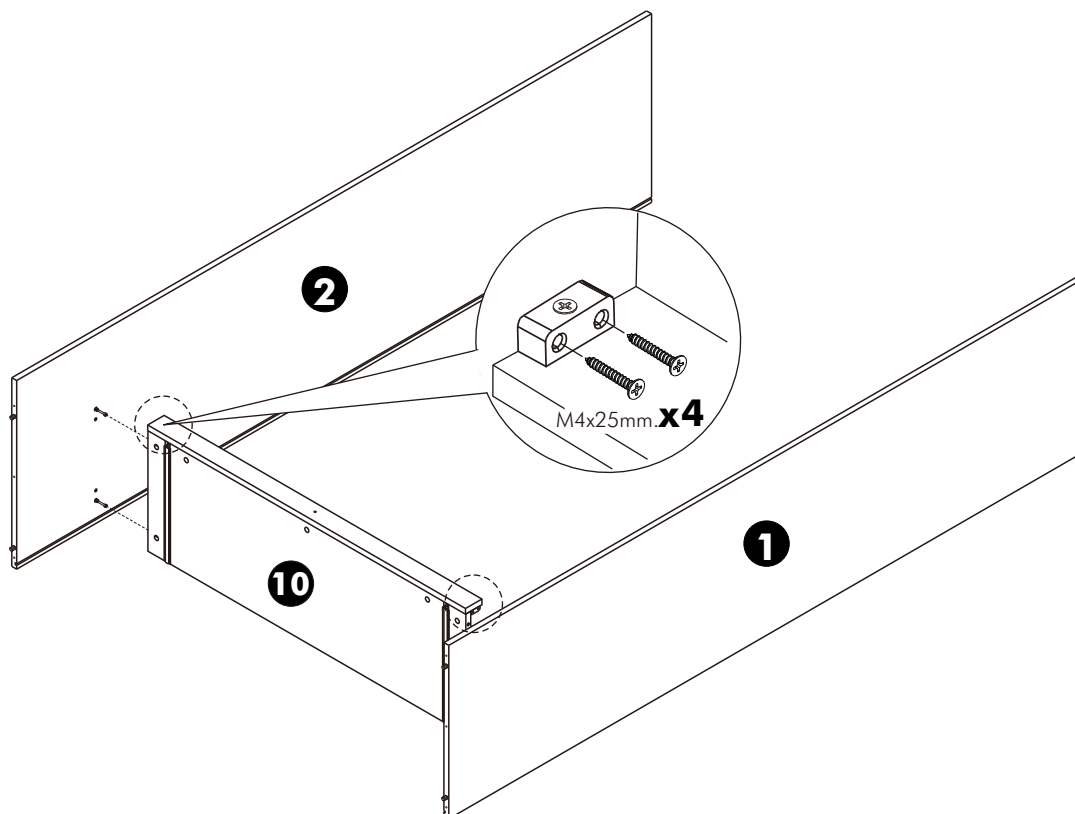


3.

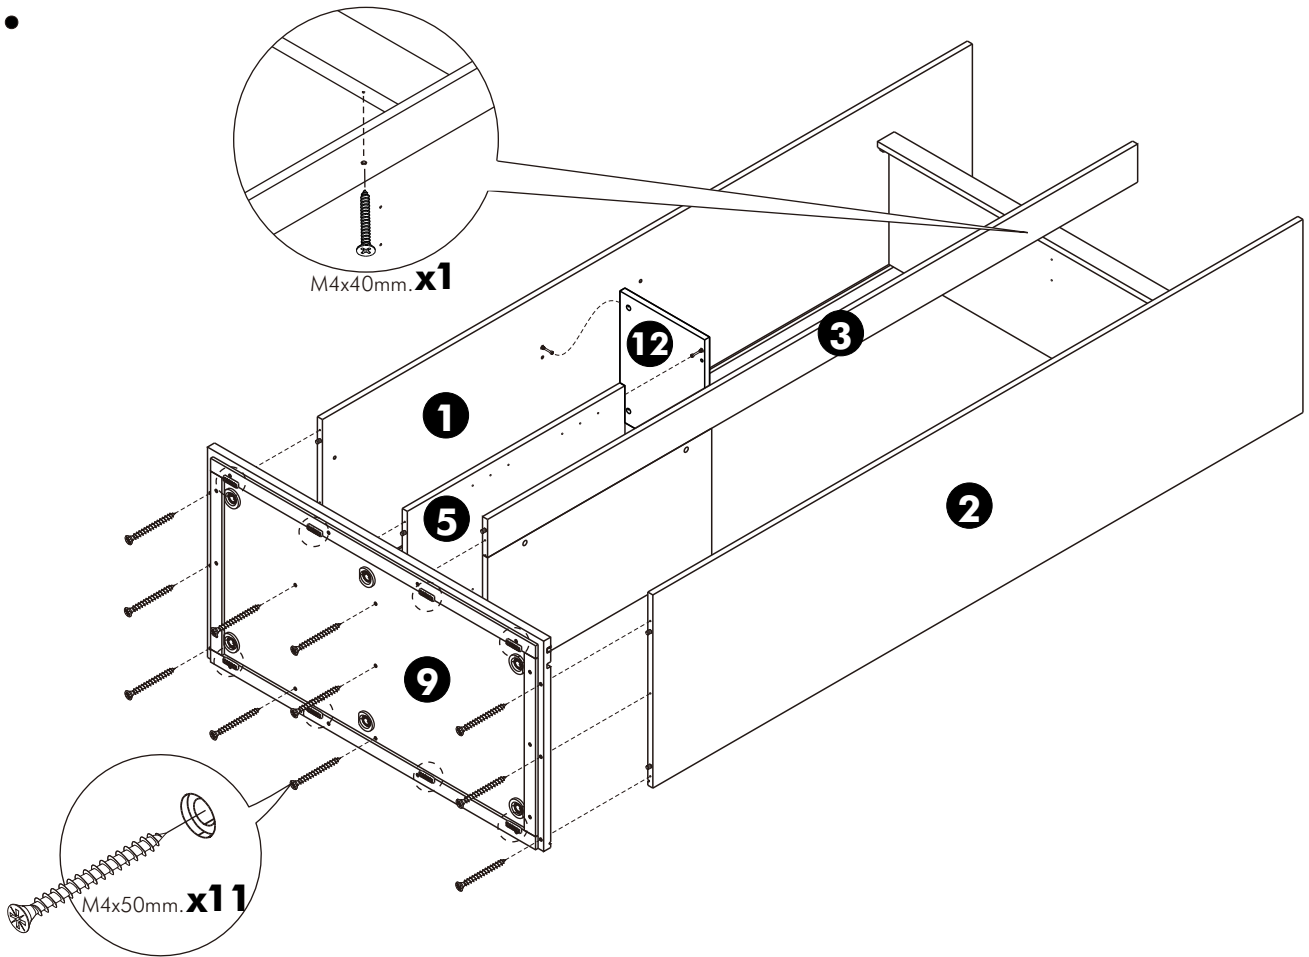


4.

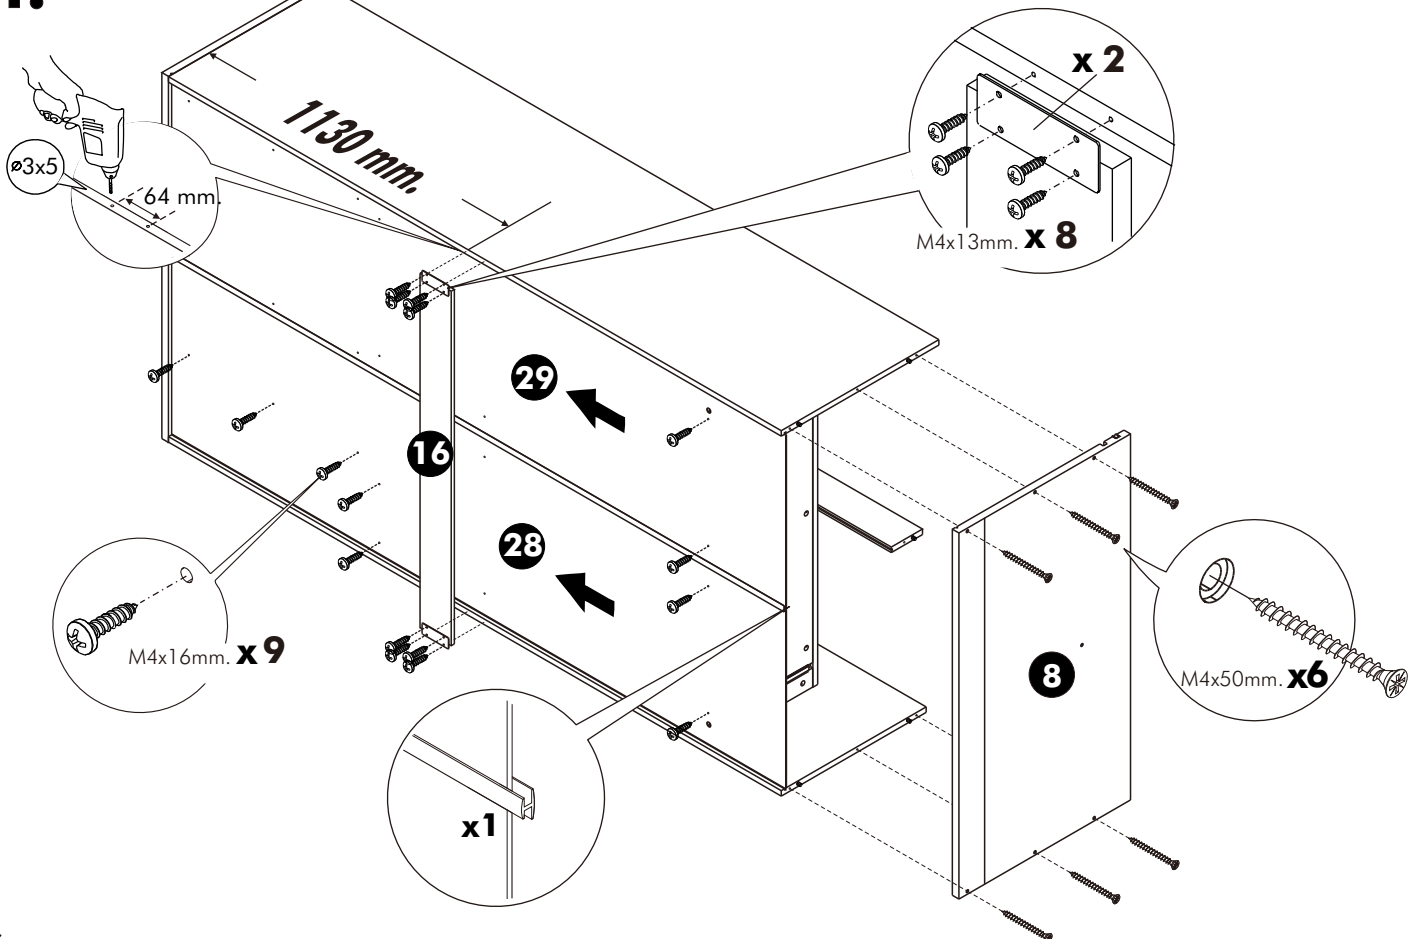


5.

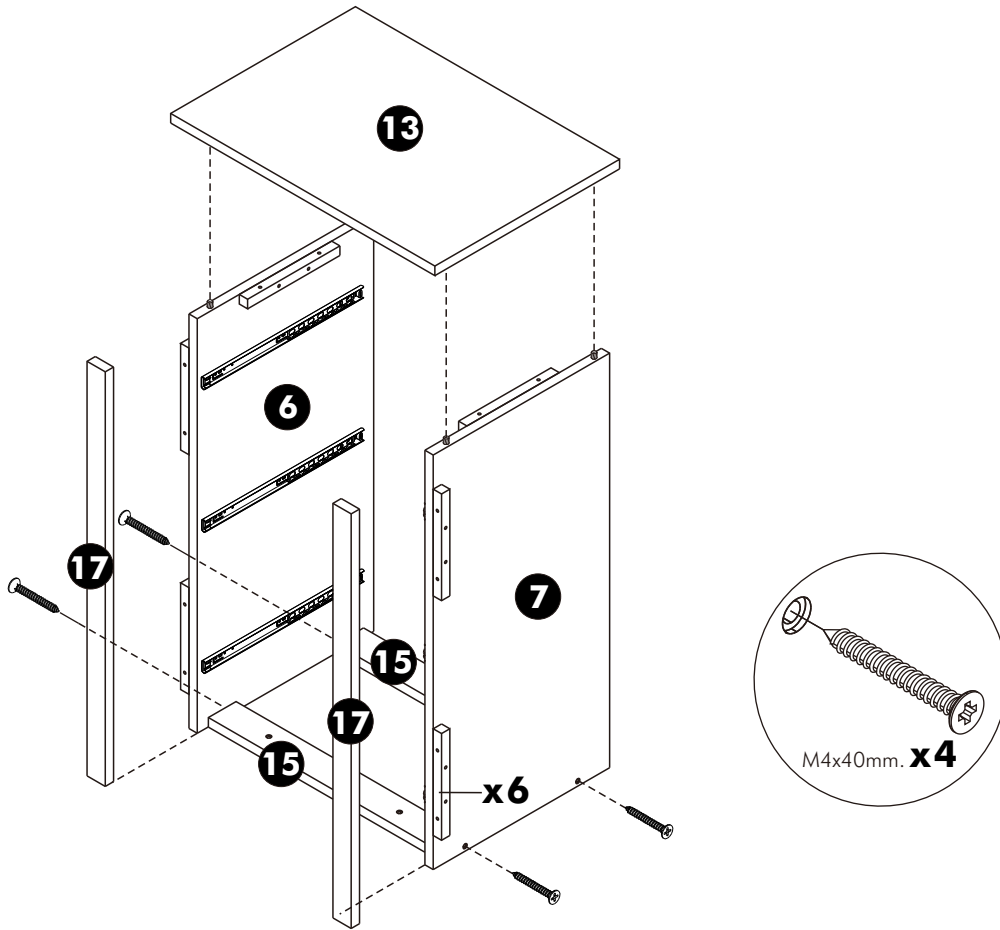


6.

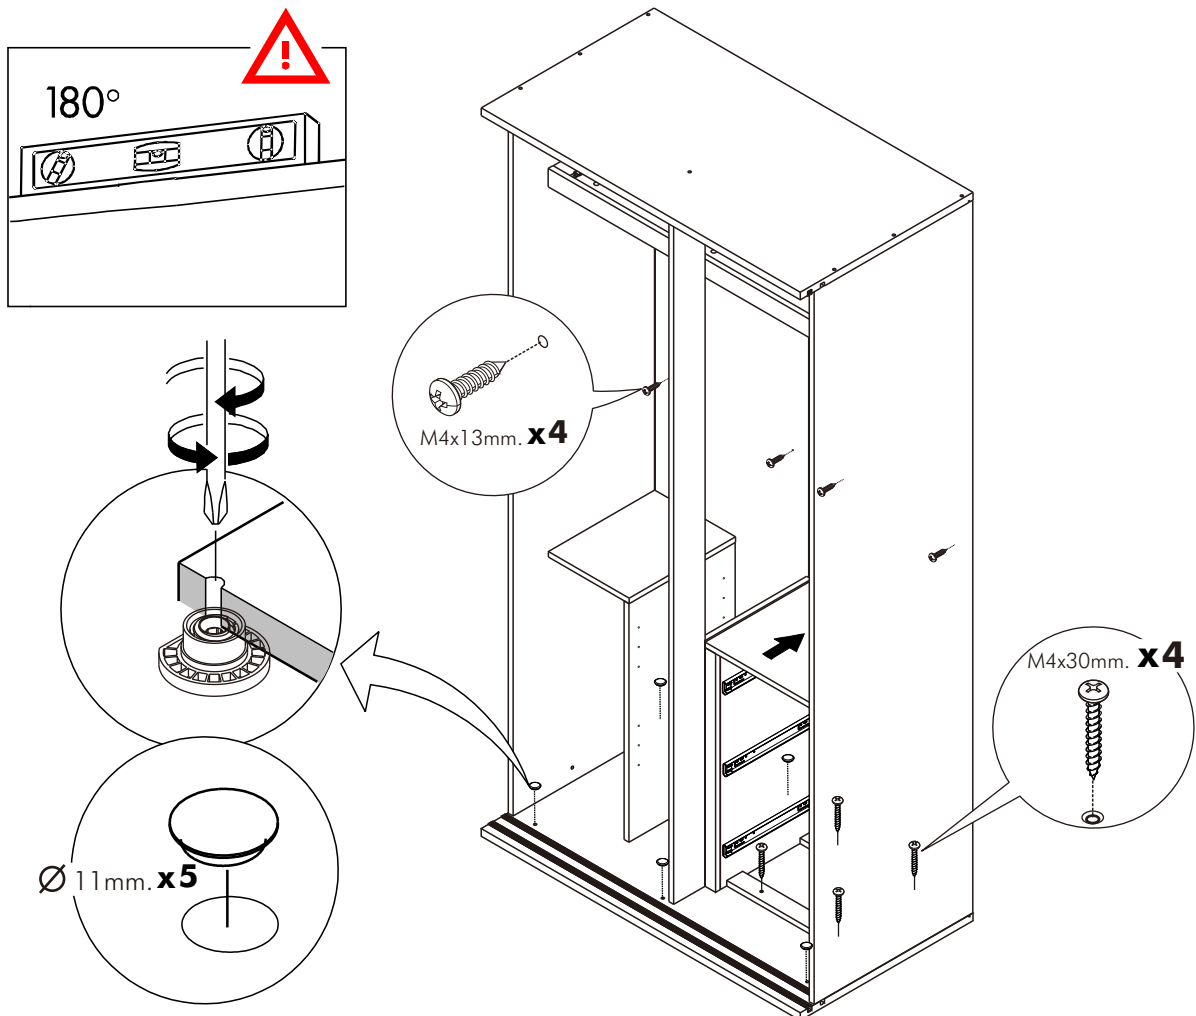

7.

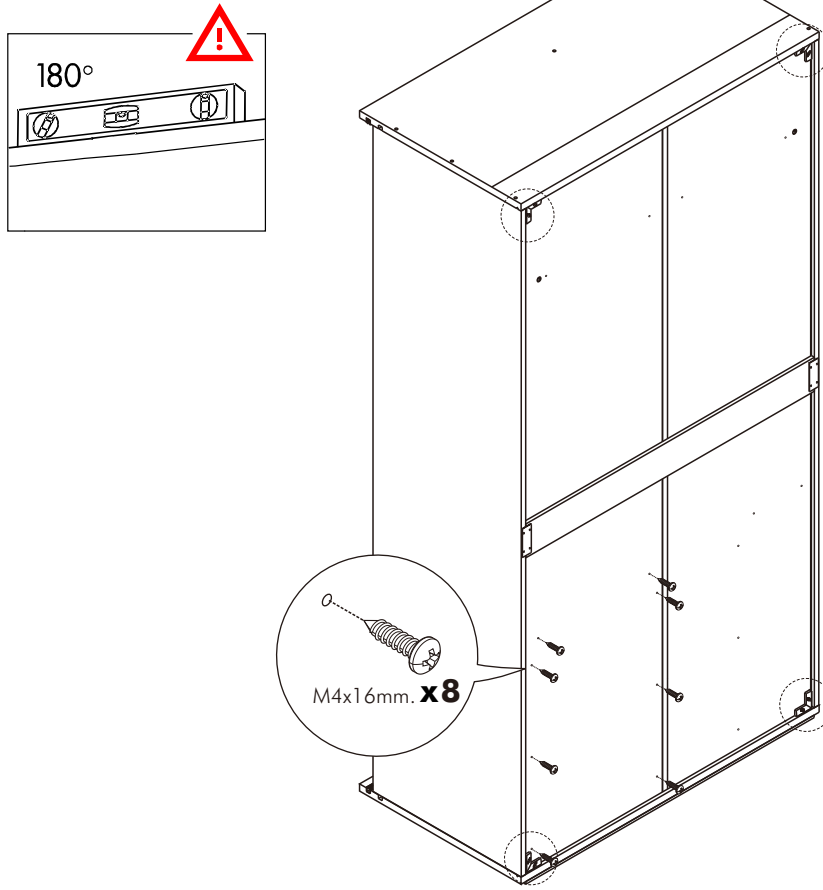

8.

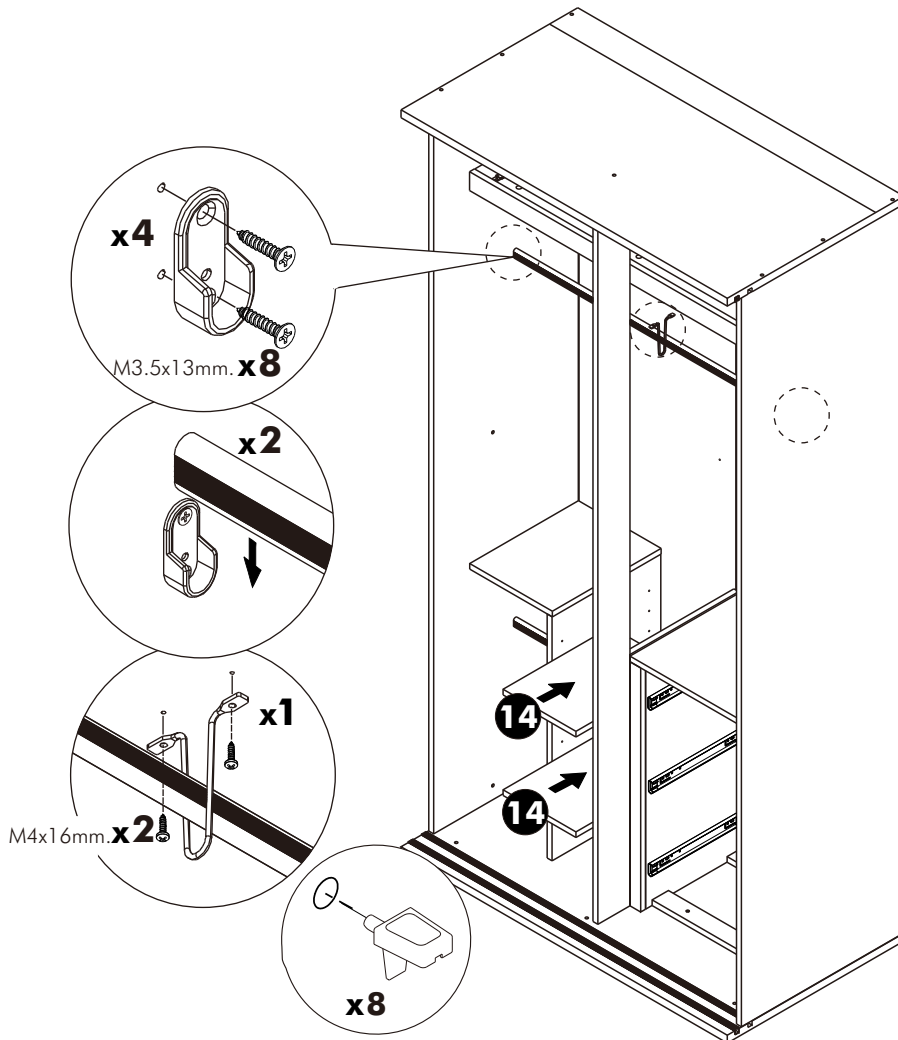

ASSEMBLY

-DOOR SET

