

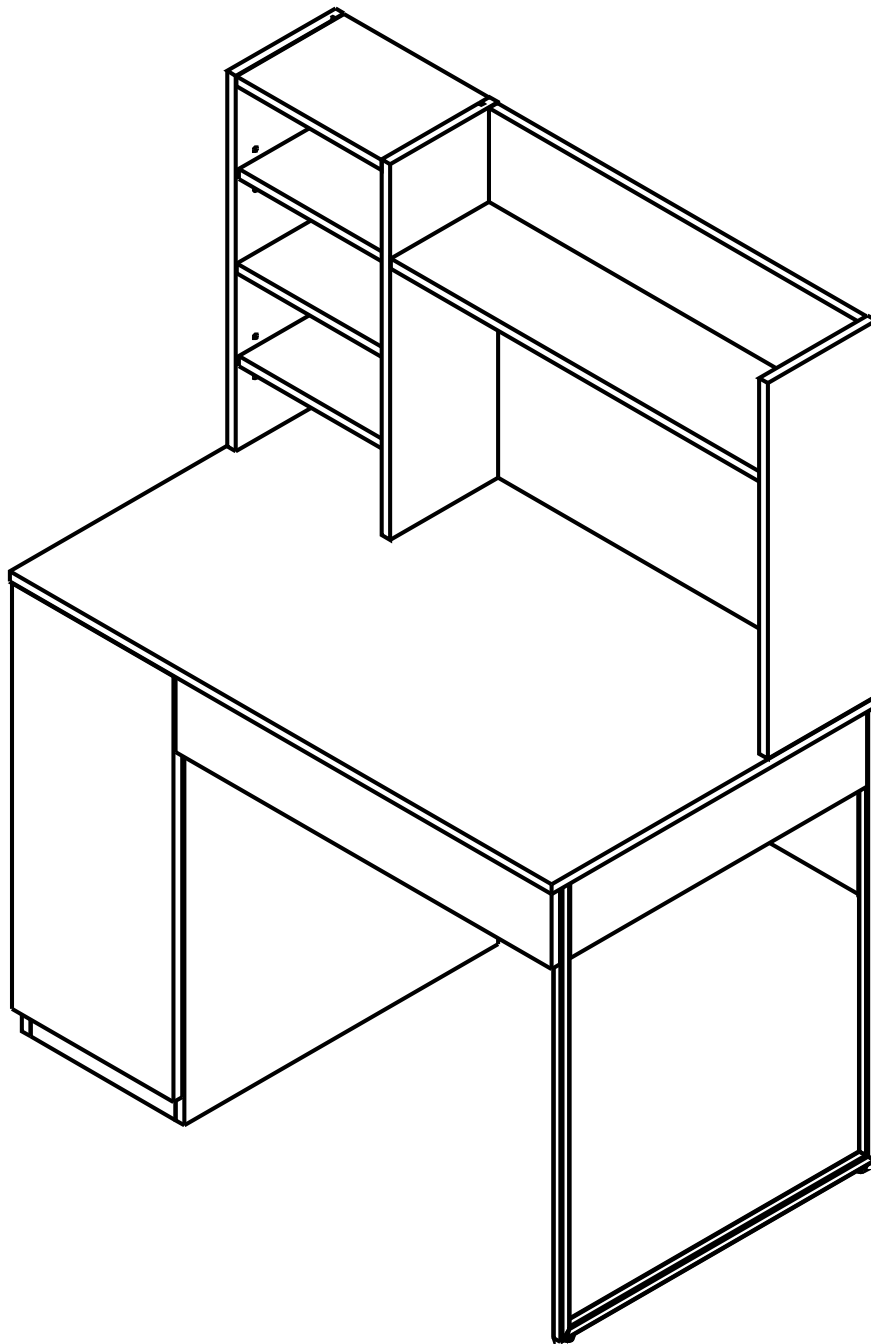
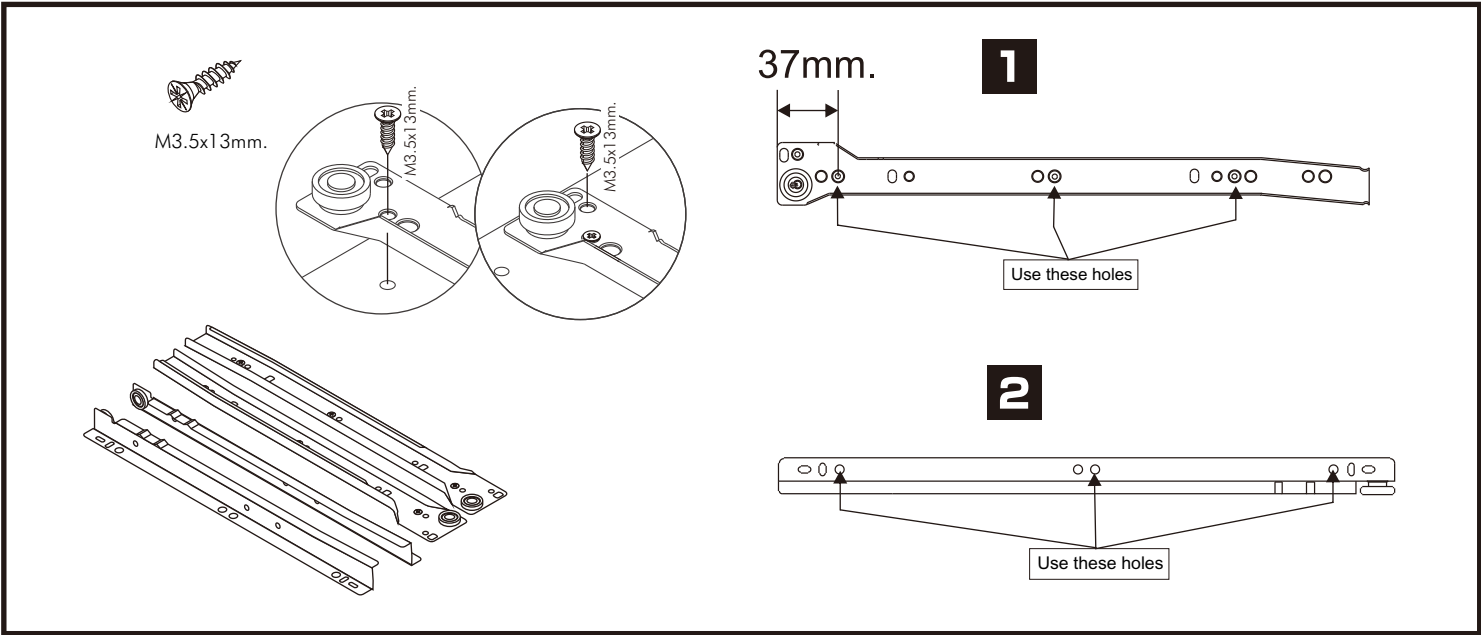


# CLEVERO-P



Working table 100 cm.

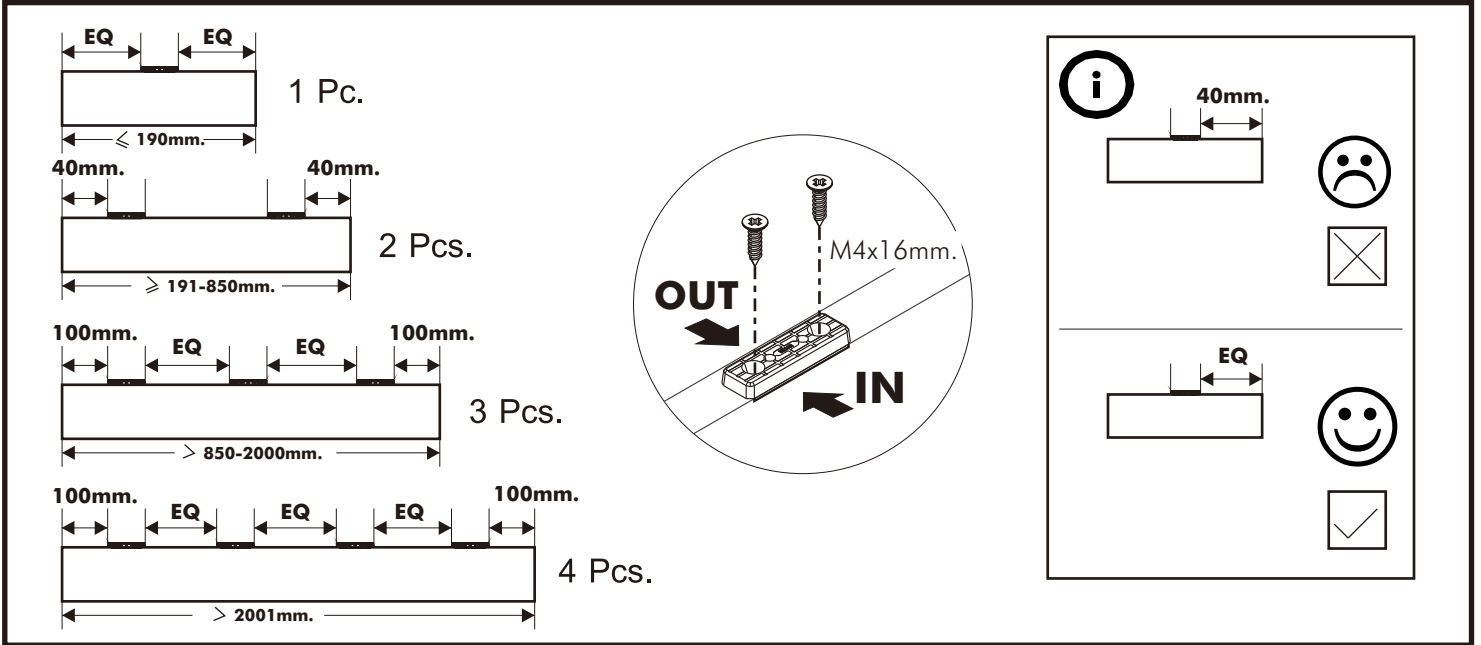

# CONNECT SYSTEM

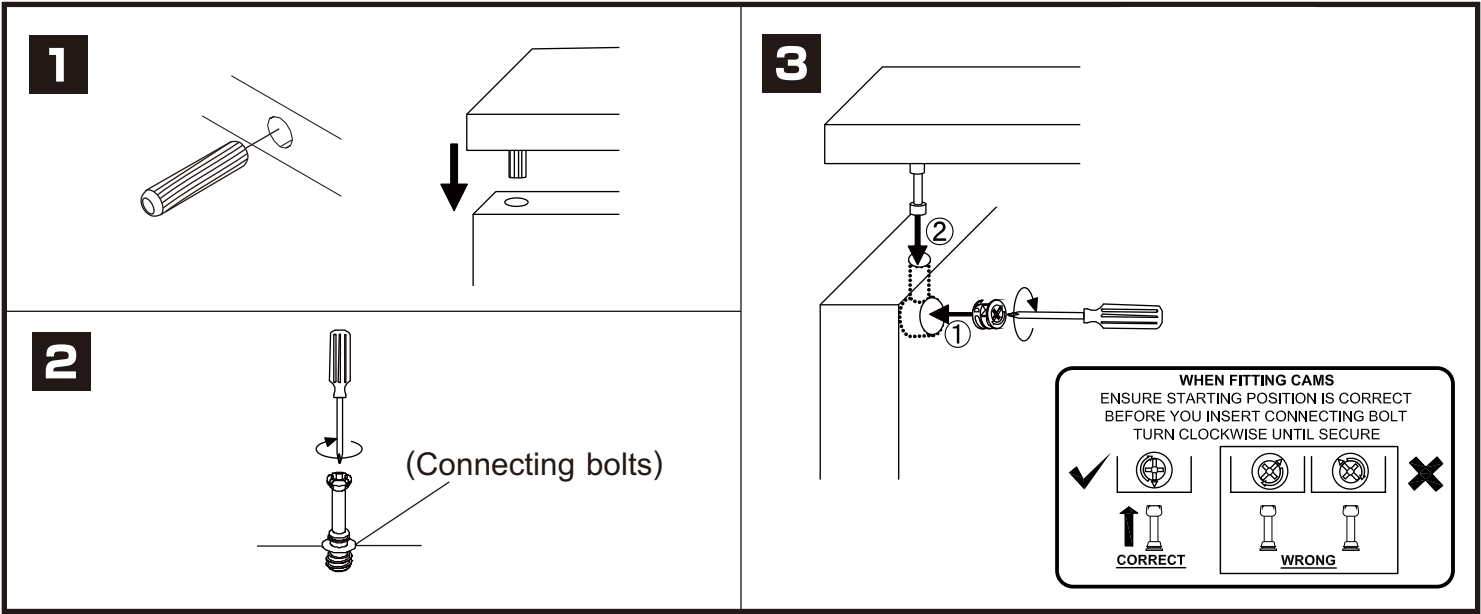


# CONNECT SYSTEM

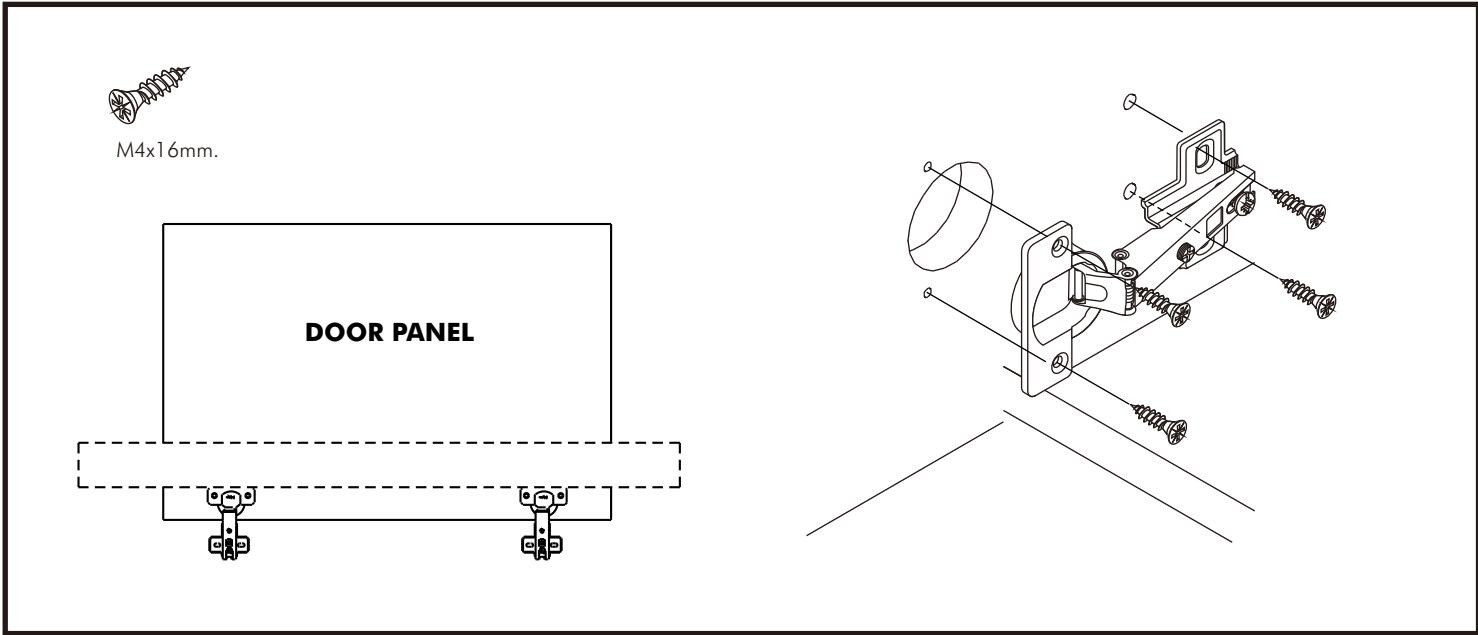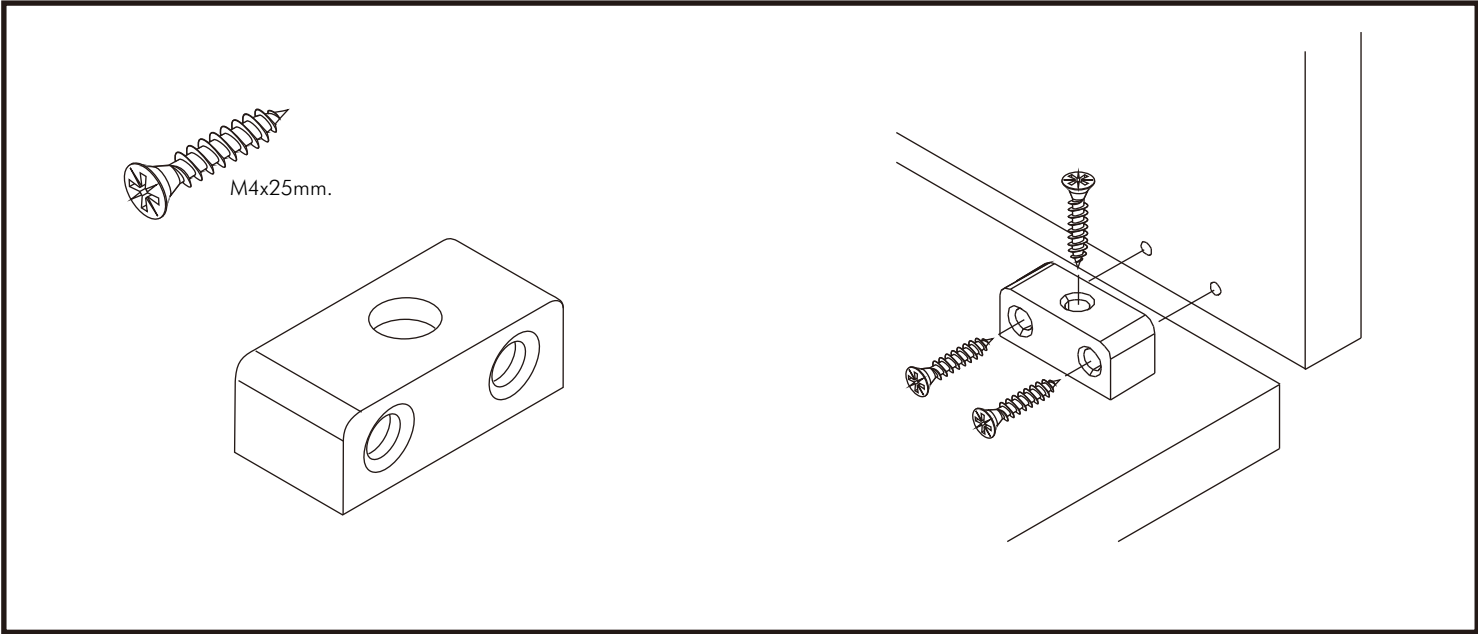

# HARDWARE


## -BODY SET




**x 33**



**x 35**



**x 56**



**x 4**




**x 2**




M4x16mm.

**x 15**




**x 4**



M4x25mm.

**x 15**



M4x30mm.


**x 4**




**x 2**




**x 19**



**x 12**




**x 1**

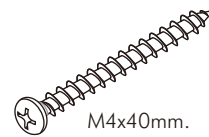

M4x40mm.

**x 4**

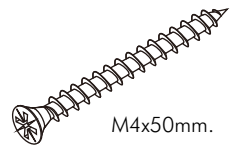

M4x50mm.


**x 9**



M4x16mm.

**x 6**

## -DRAWER SET

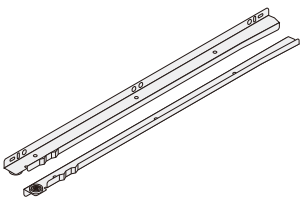


**x 1**



M3.5x13mm.

**x 12**

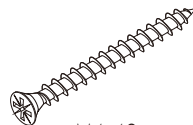

M4x40mm.


**x 12**



M6x23mm.

**x 3**

## -DOOR SET



**x 2**




M4x16mm.

**x 8**




**x 3**


**1.**

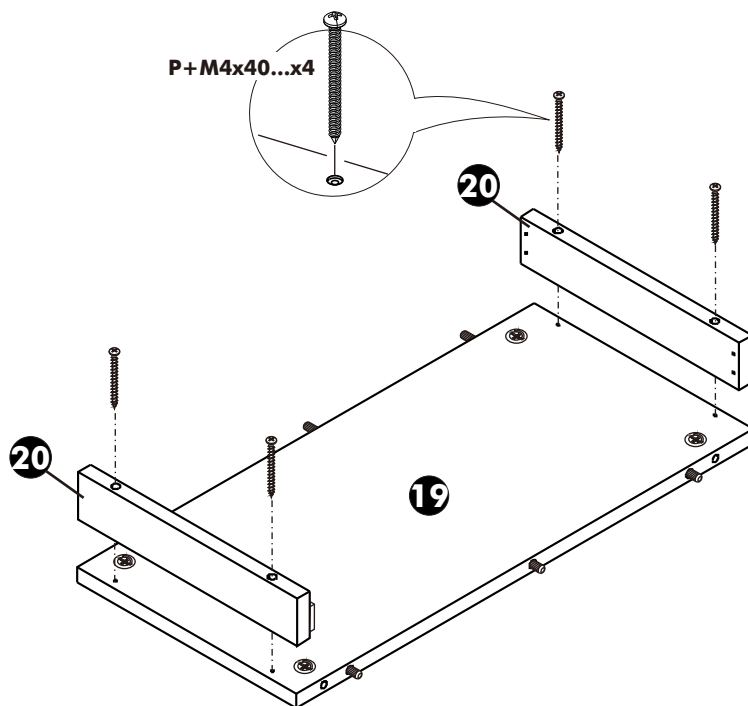


**2.**

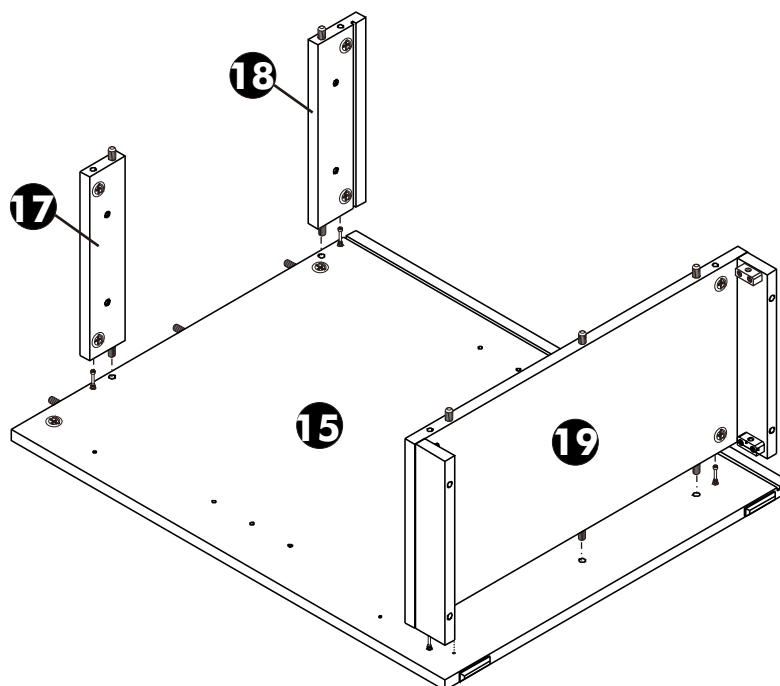


**3.**

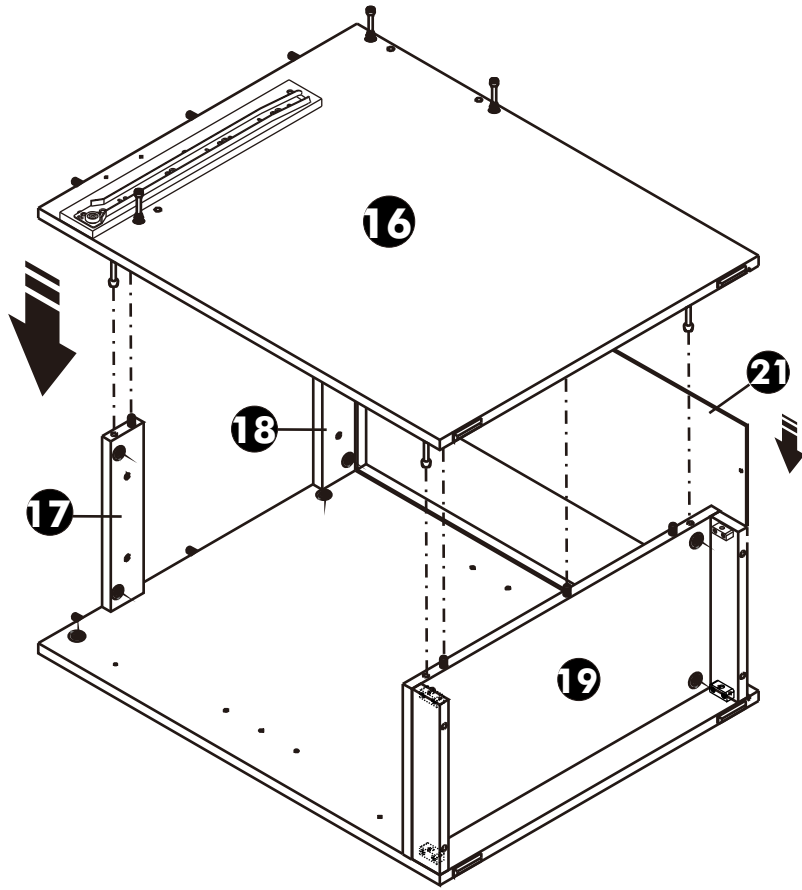


**4.**

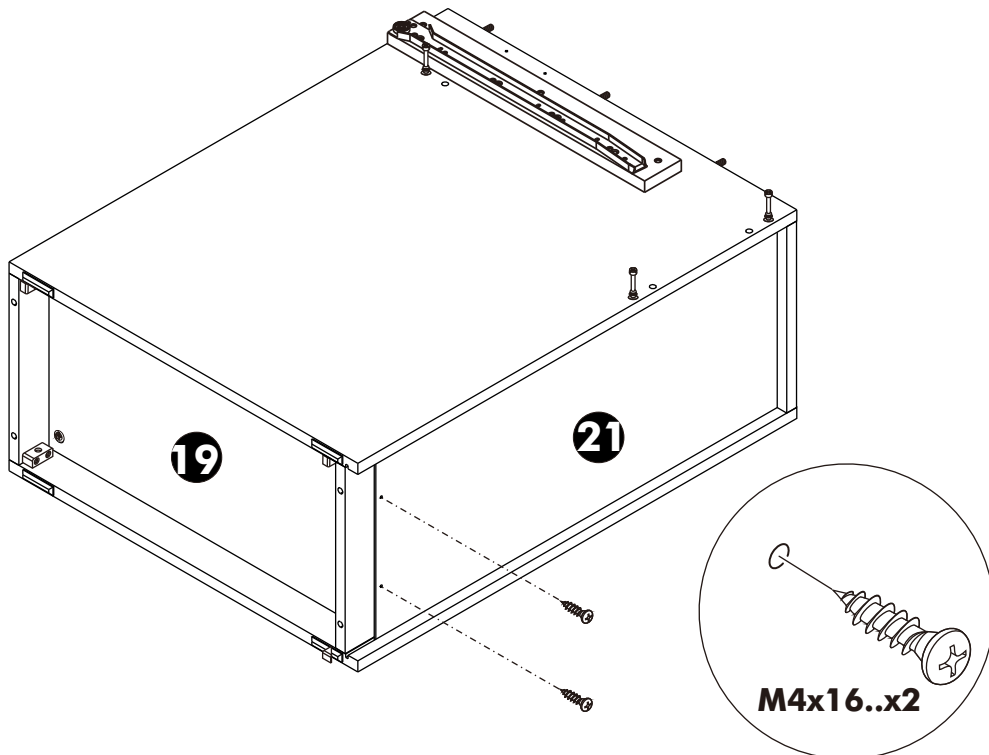


5.

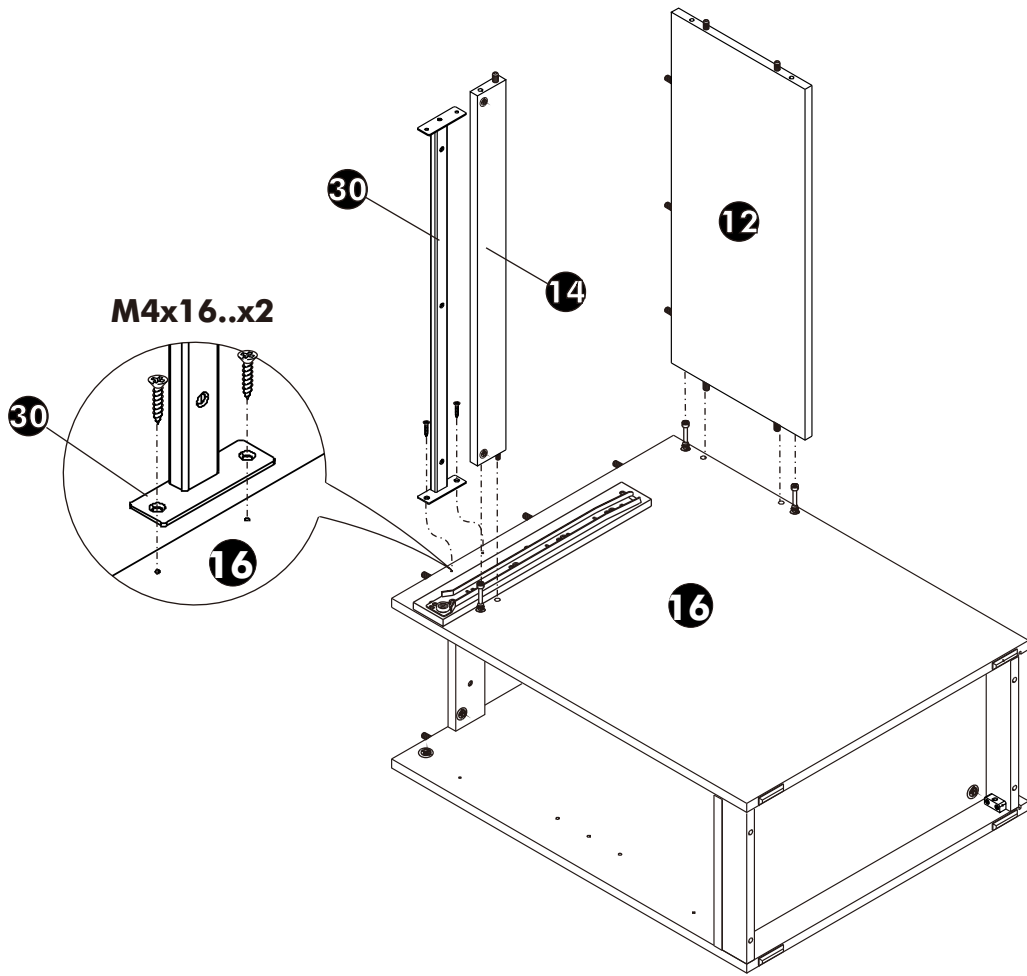


6.

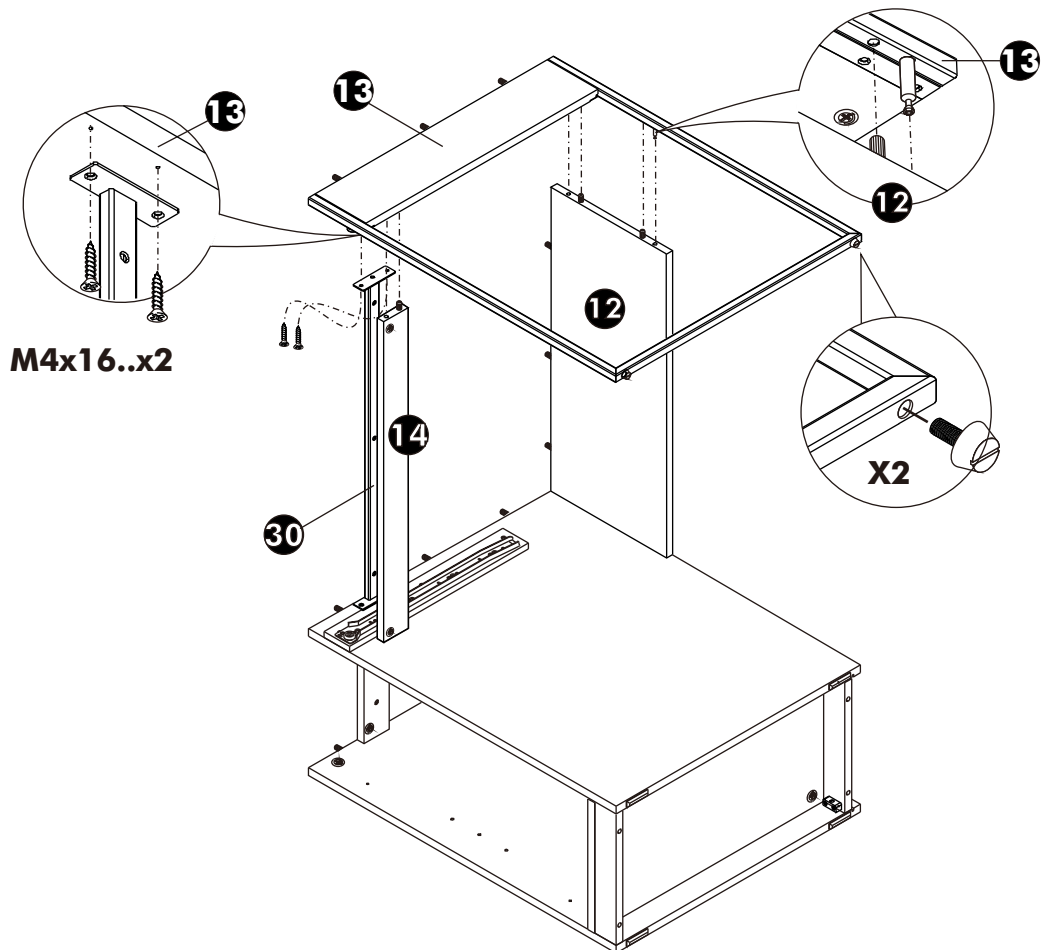


**7.**

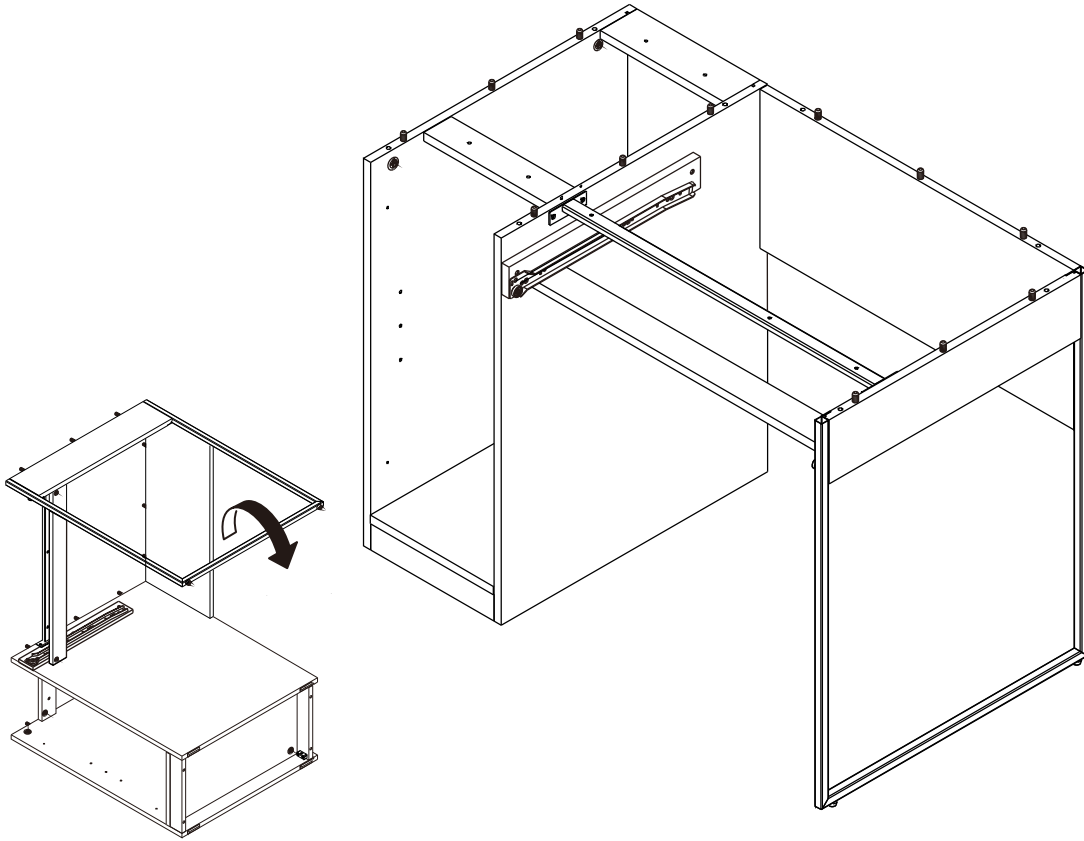


**8.**

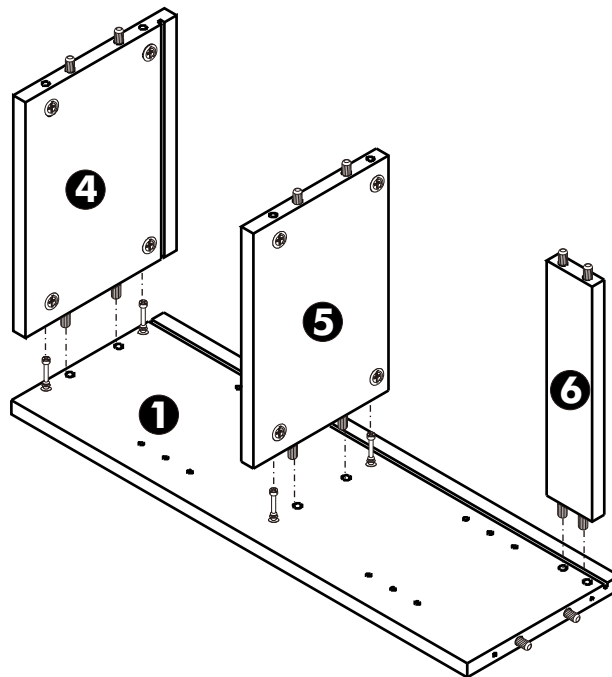


**9.**

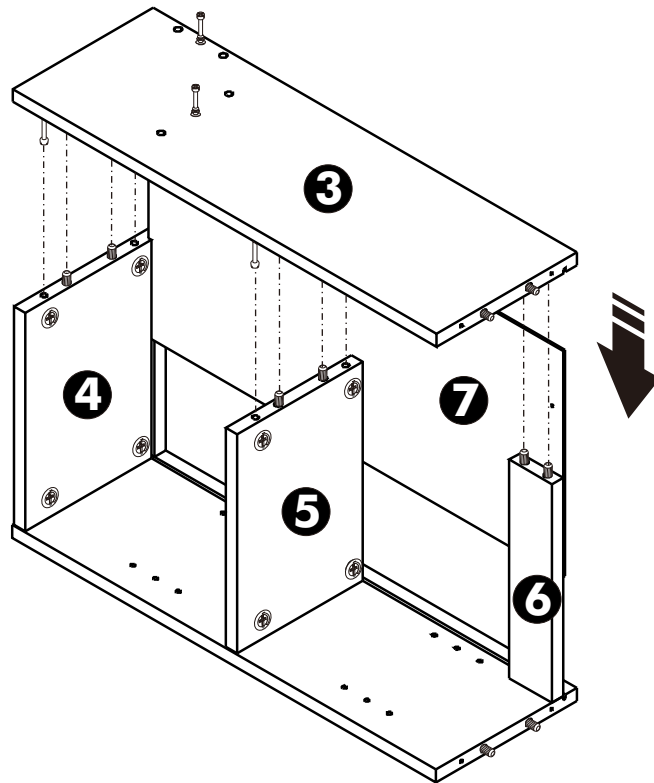


**10.**

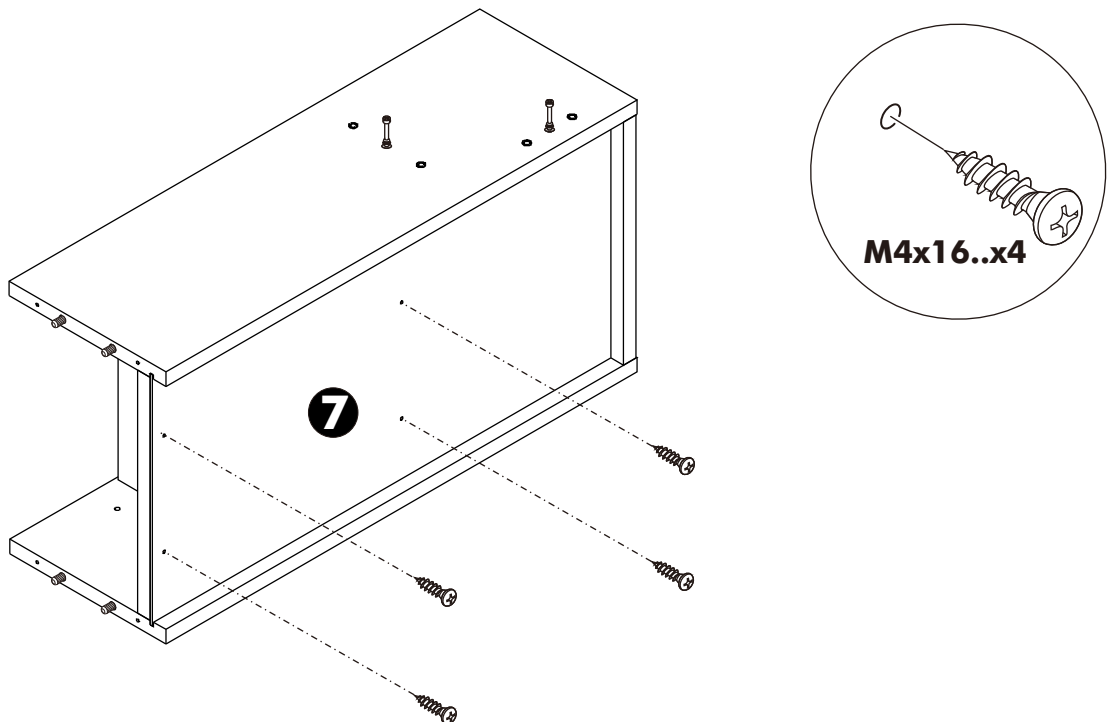


**11.**

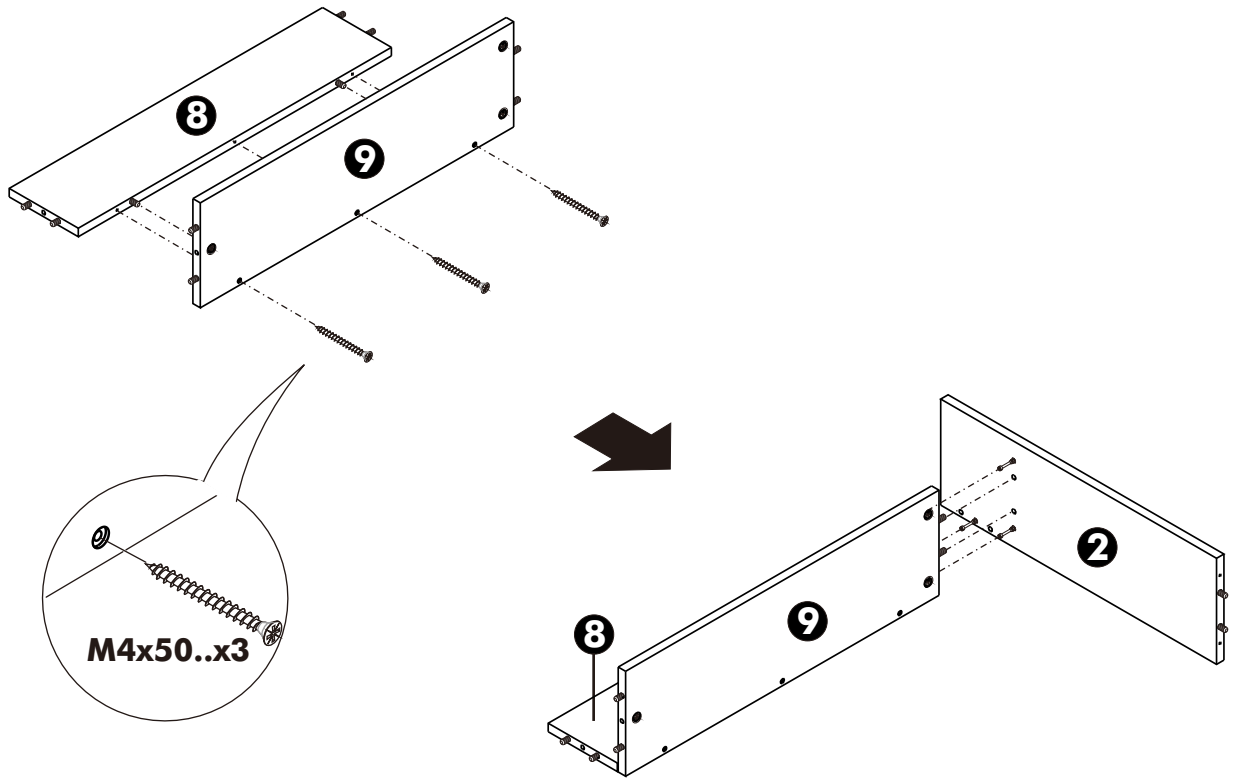


**12.**

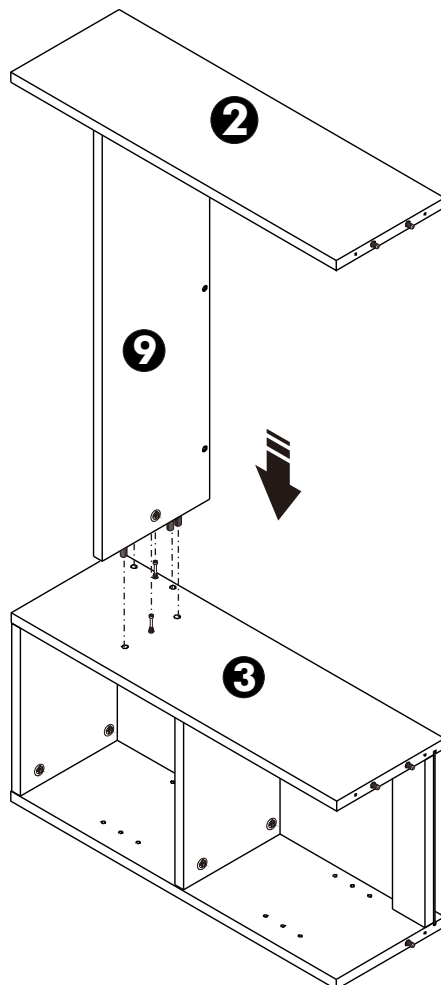


**13.**

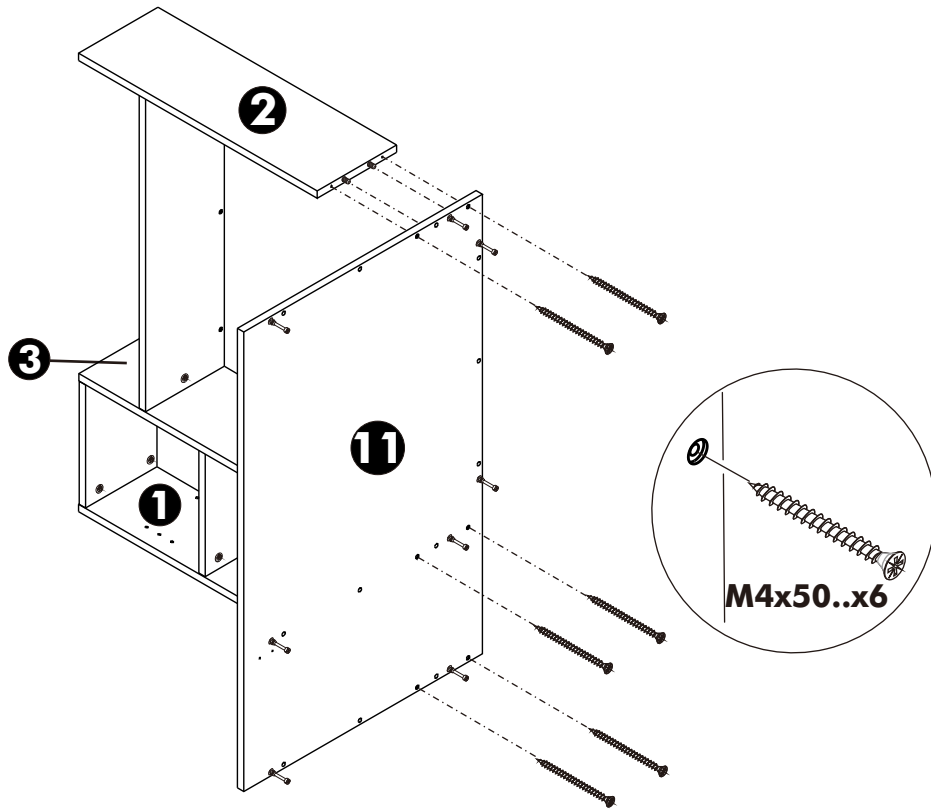


**14.**

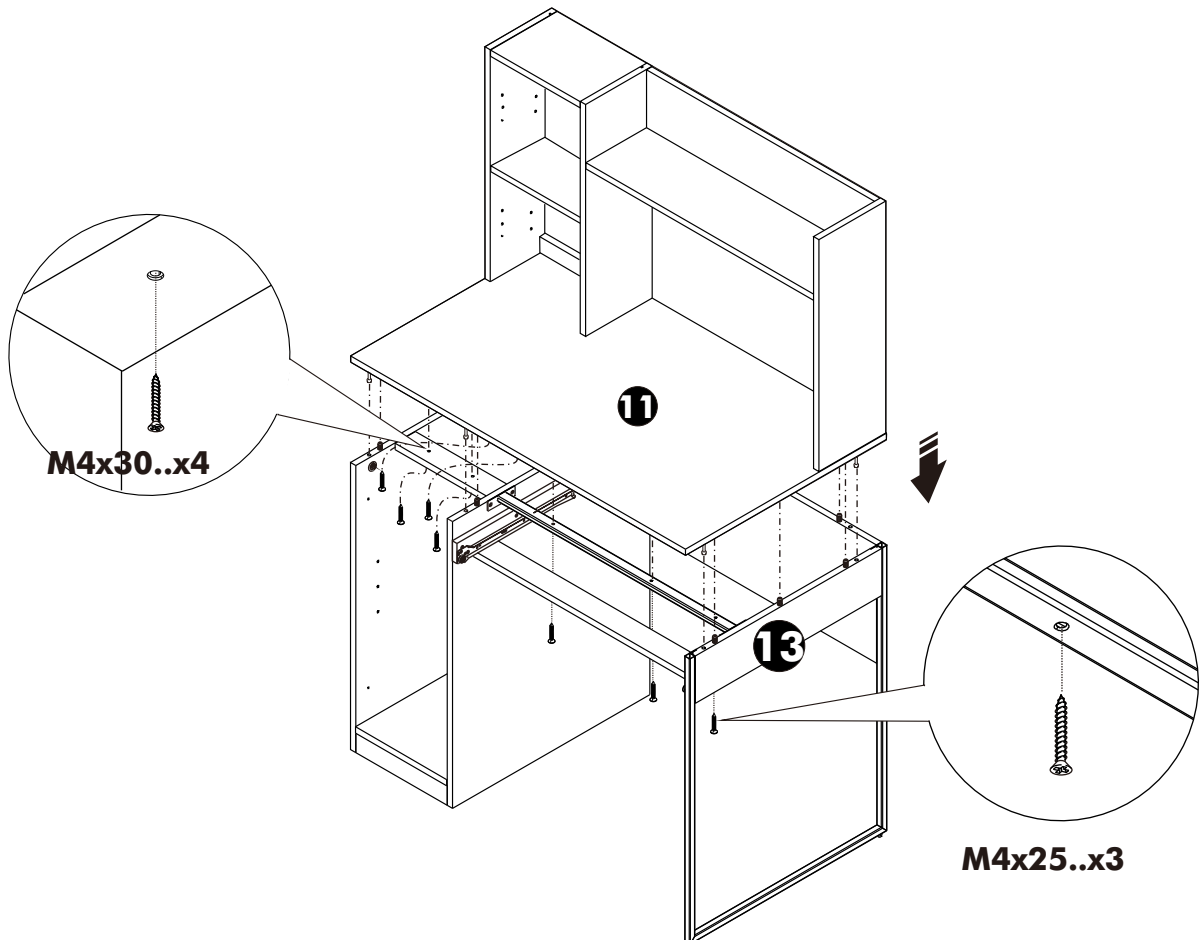


**15.**

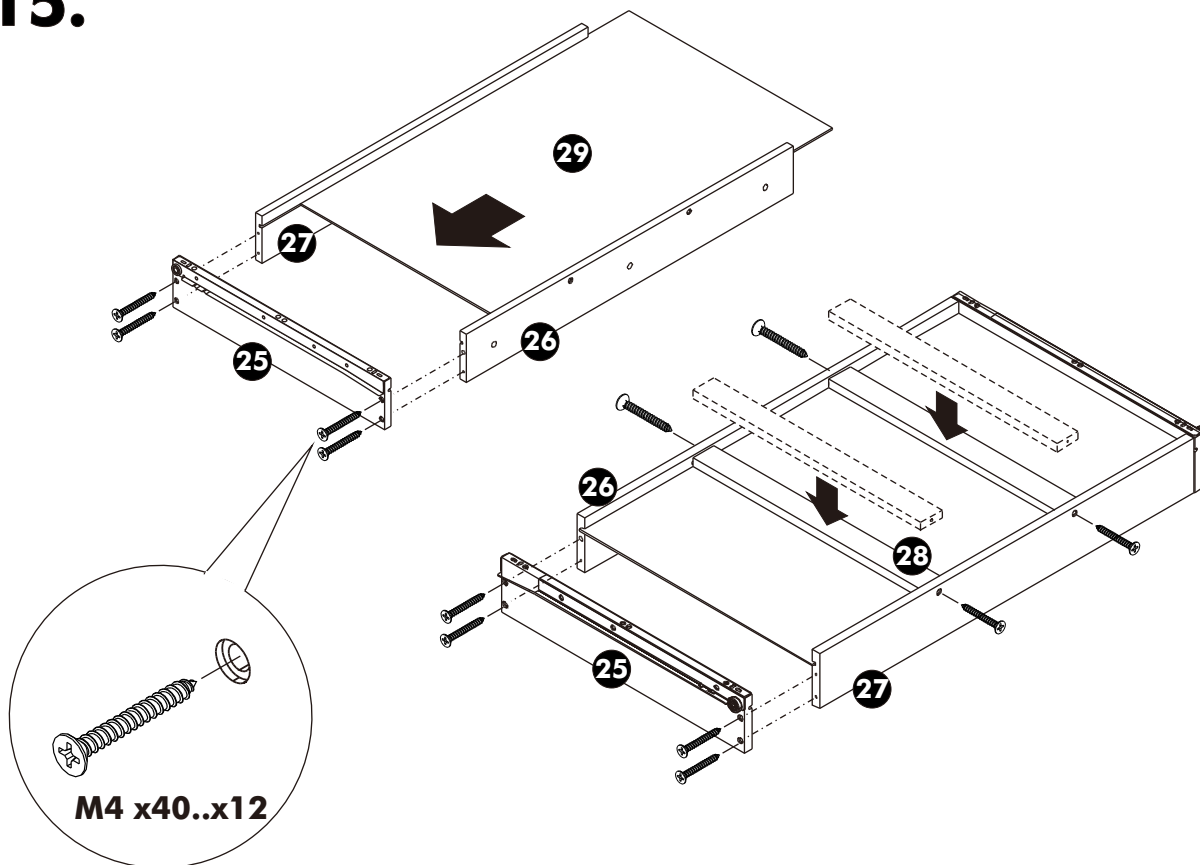


**16.**

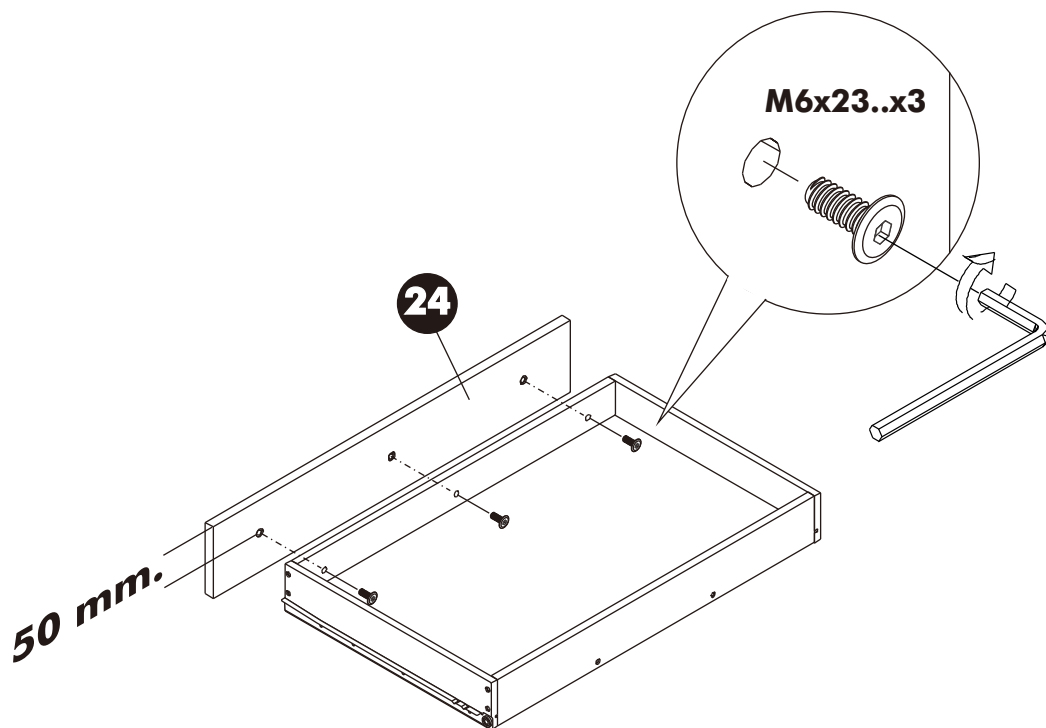


**17.**

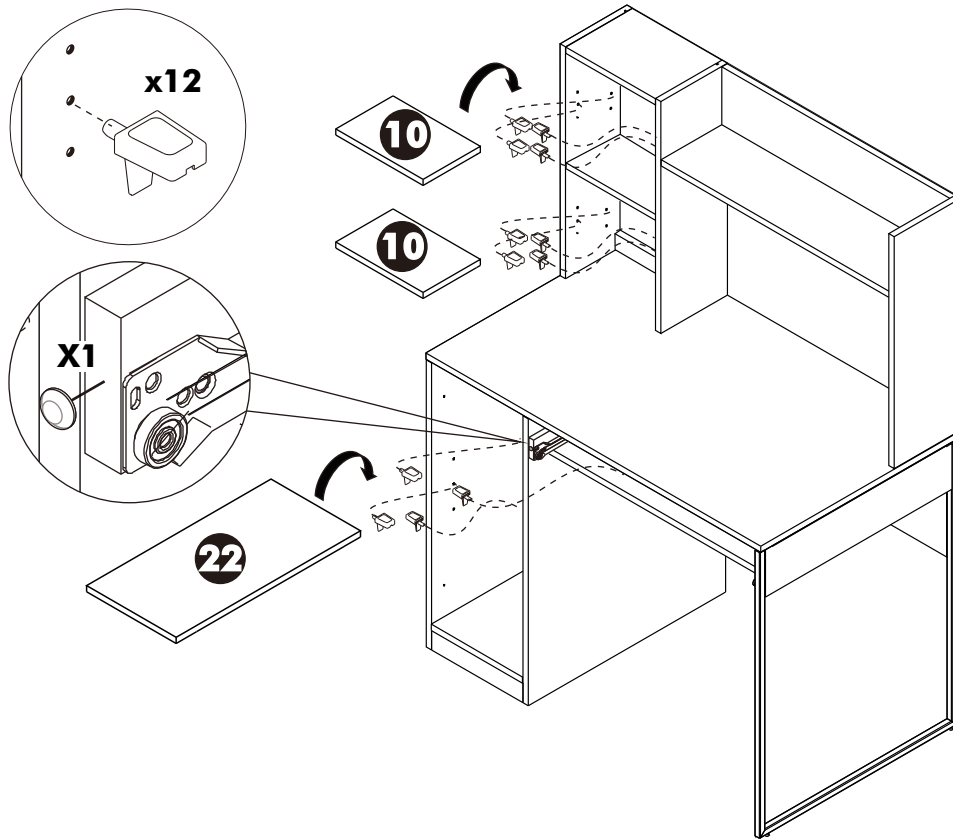


**18.**


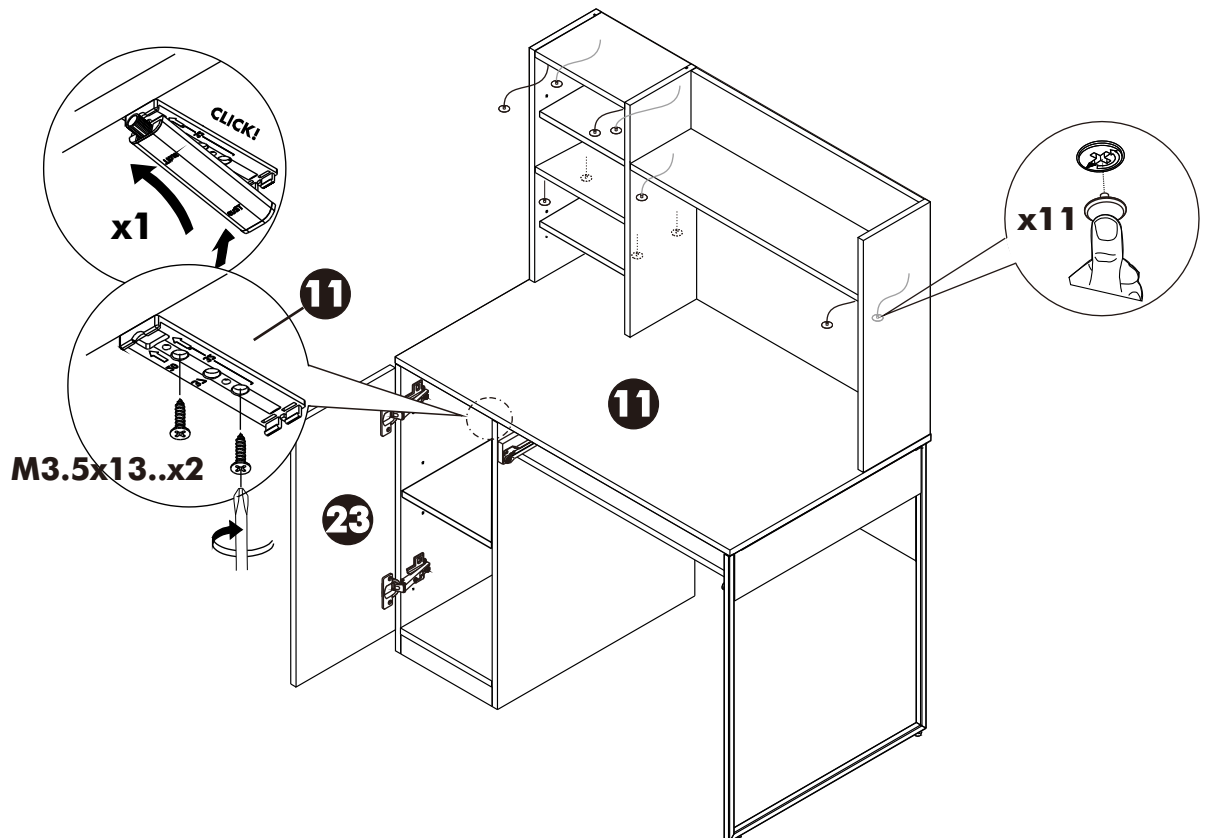


**19.**

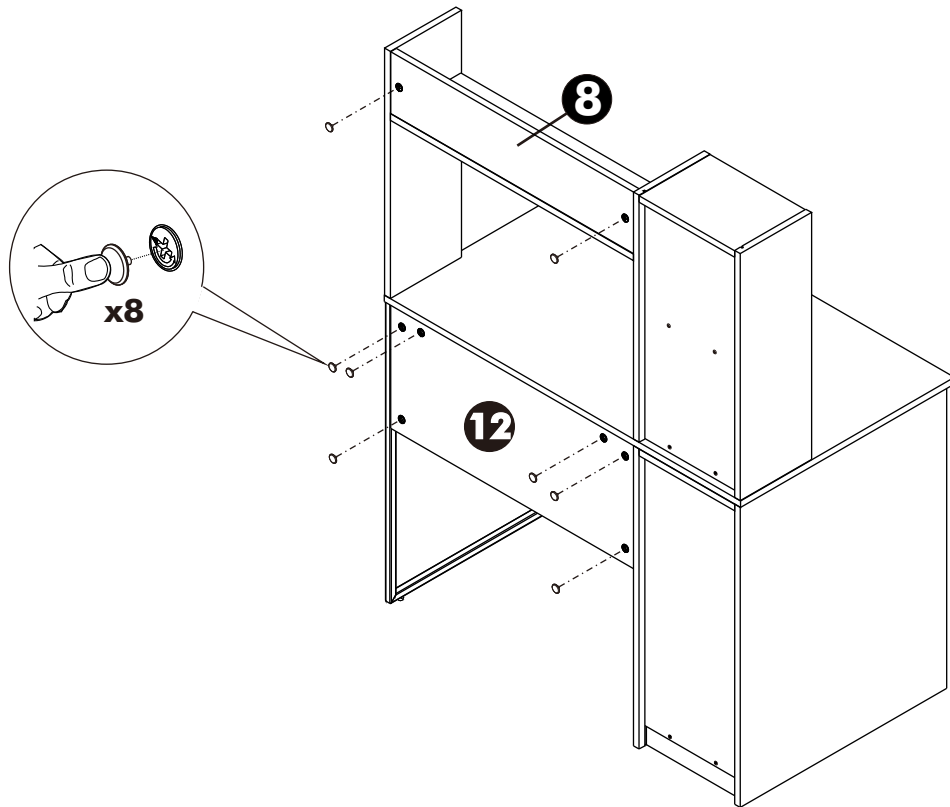

**20.**

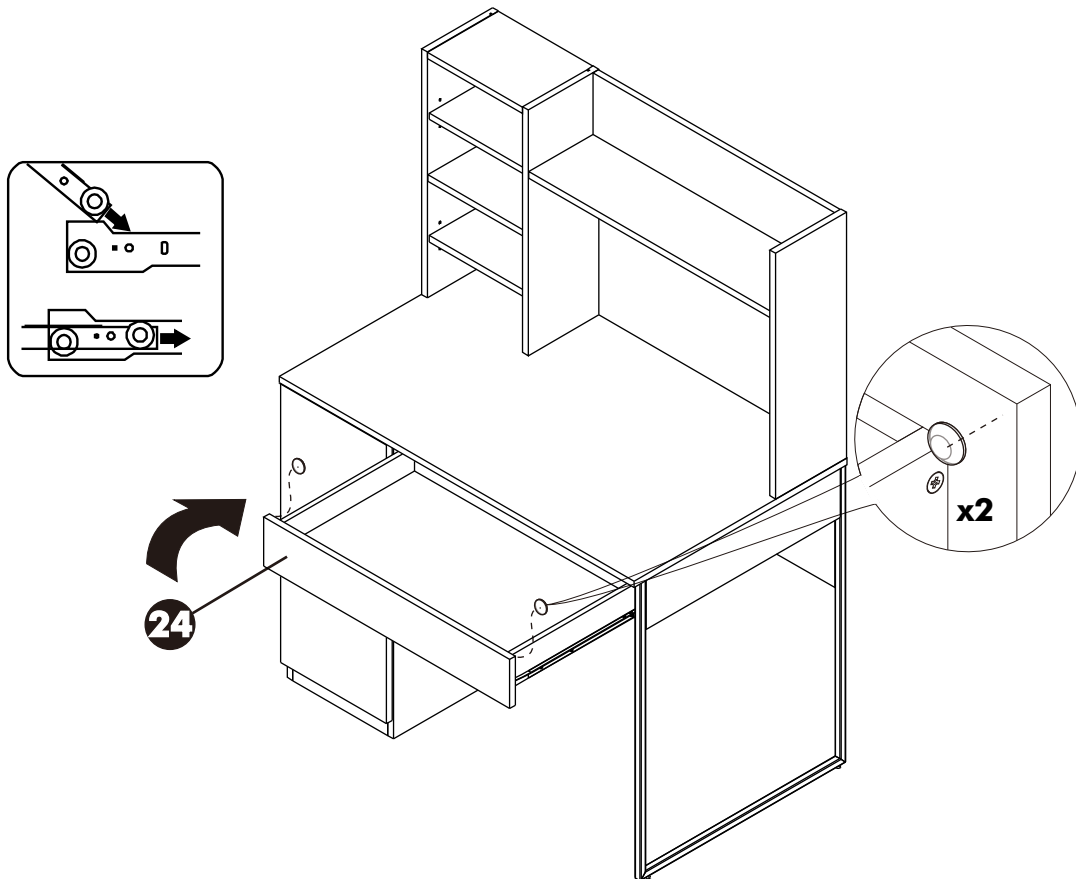

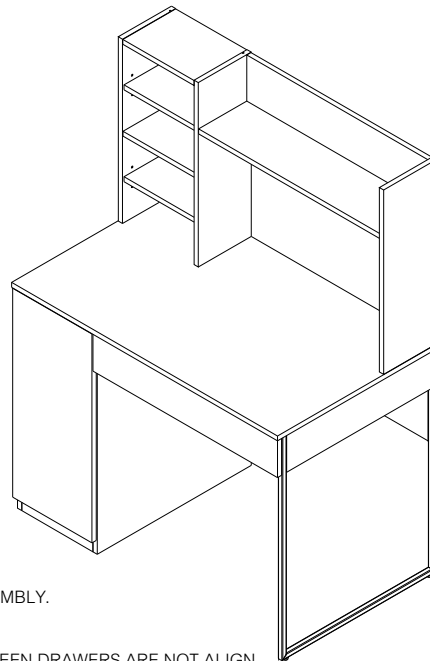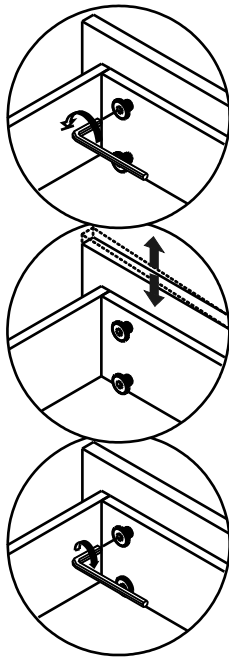

AFTER FINISHED ASSEMBLY.

INCASE OF GAP BETWEEN DRAWERS ARE NOT ALIGN.  
PLEASE ADJUST AS BELOW.

1. LOOSE SCREW A LITTLE BIT.
2. THEN MOVE FRONT DRAWER TO ALINGMENT POSITION.
3. TIGHTEN SCREW.

