



ONLY ME-P

Working table/90

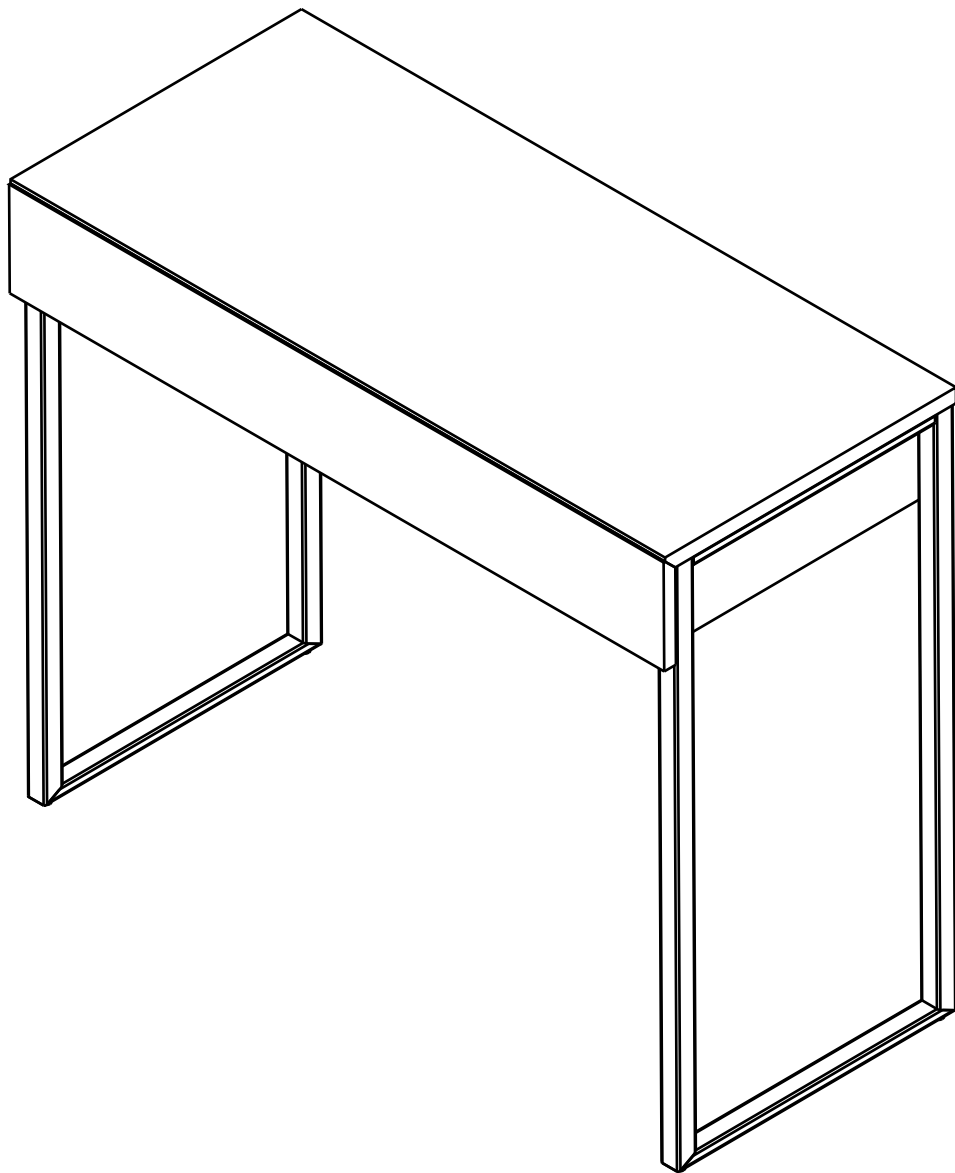


CONNECT SYSTEM

1

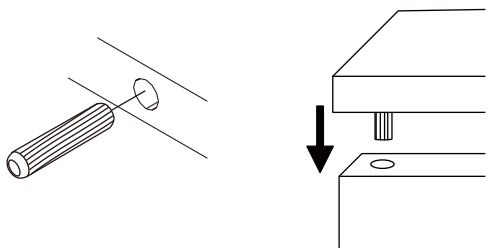


2

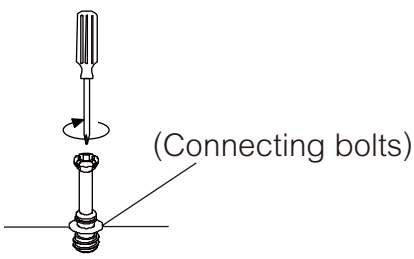

(Connecting bolts)

3

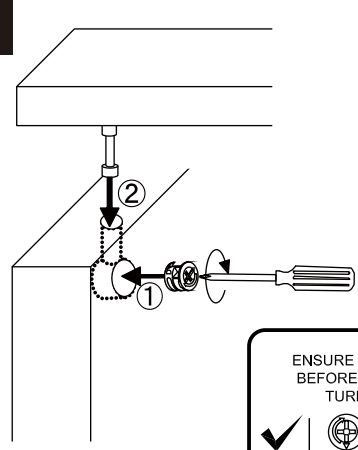

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓



↑


CORRECT





✗


WRONG

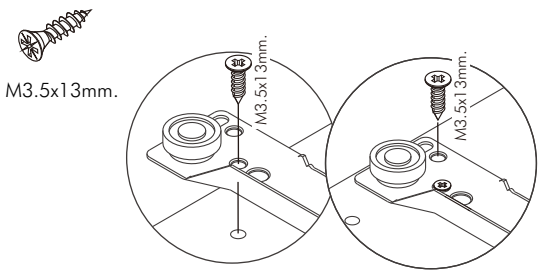

M3.5x13mm.


M3.5x13mm.

M3.5x13mm.

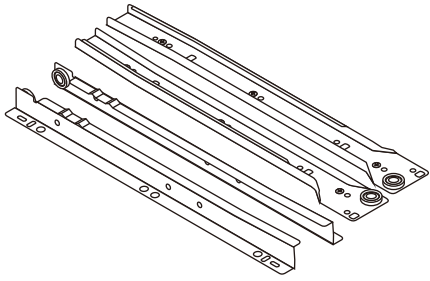


1

28mm.



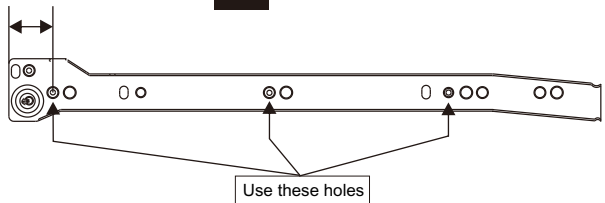


Use these holes

2

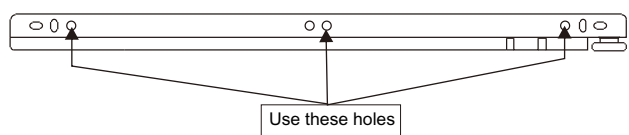


Use these holes

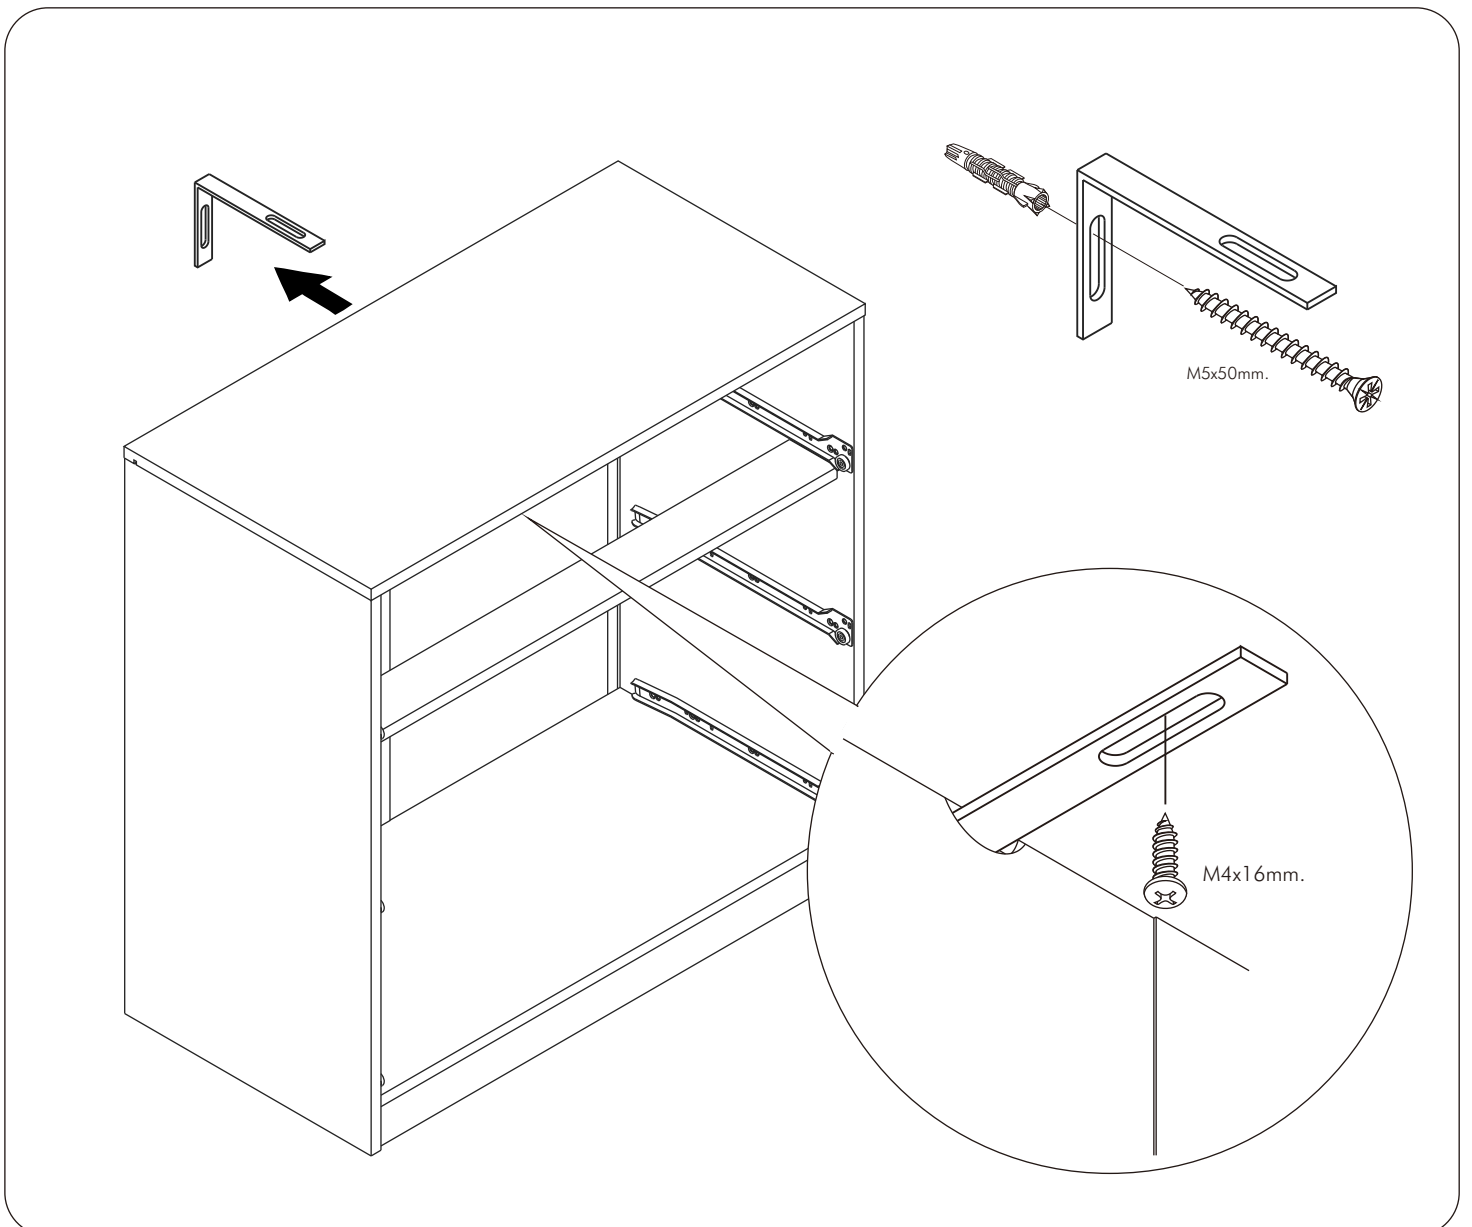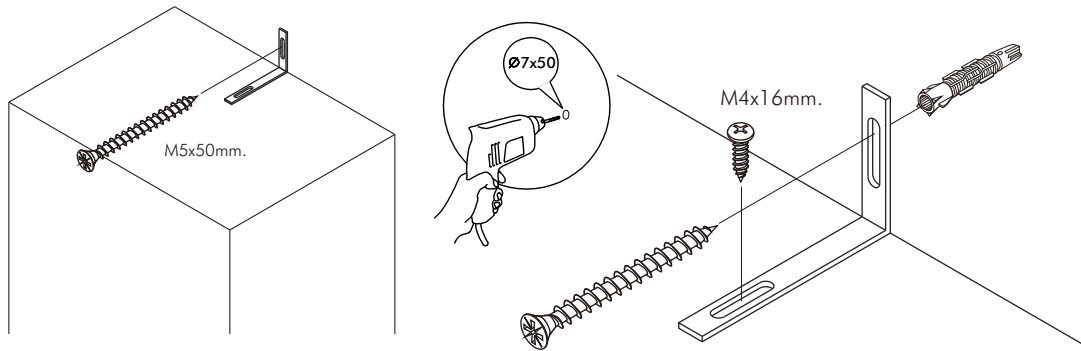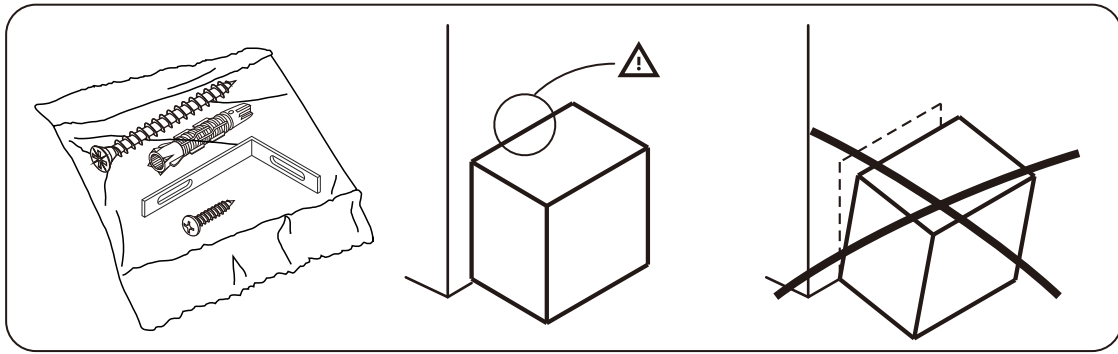

HARDWARE


-BODY SET



x 11



x 11




x 10




x 2



x 2



x 6




x 4




x 10



x 4

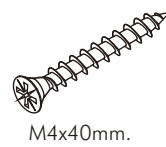

x 6




x 1



x 1




x 1



x 1


-DRAWER SET

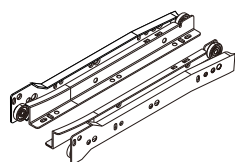

x 1



x 14



x 8




x 4




x 1


1.

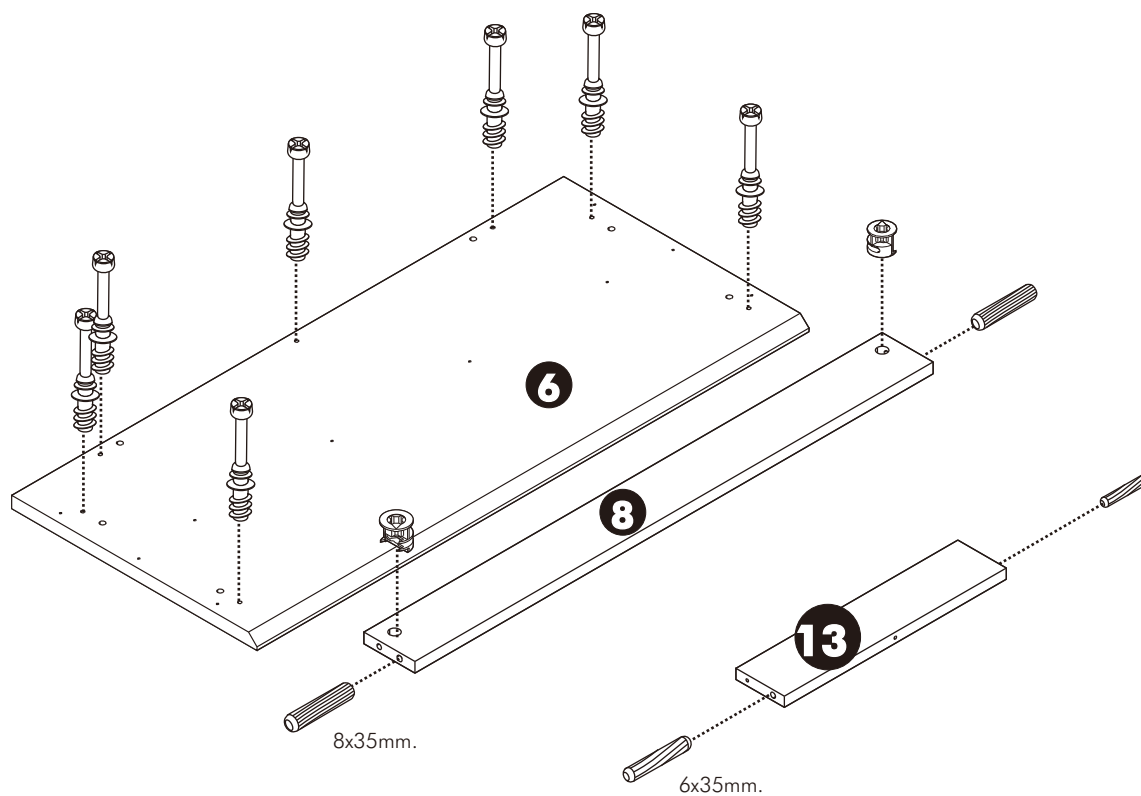


2.

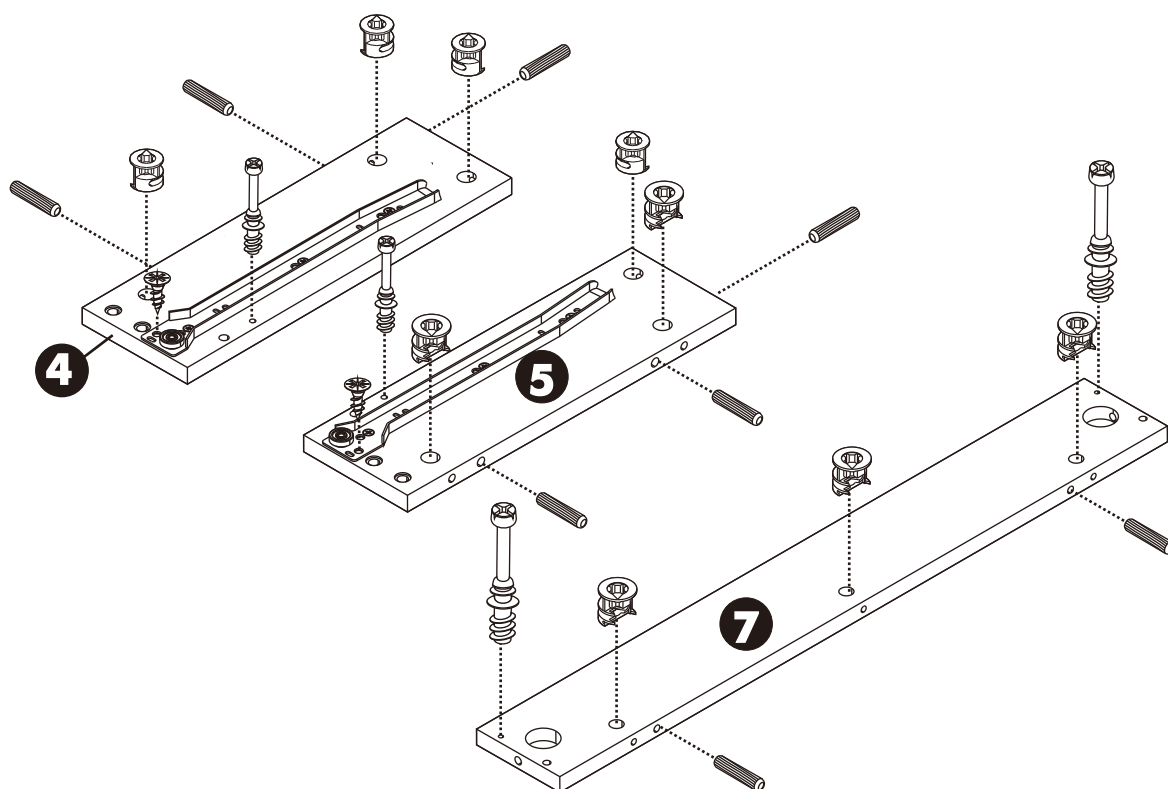


3.

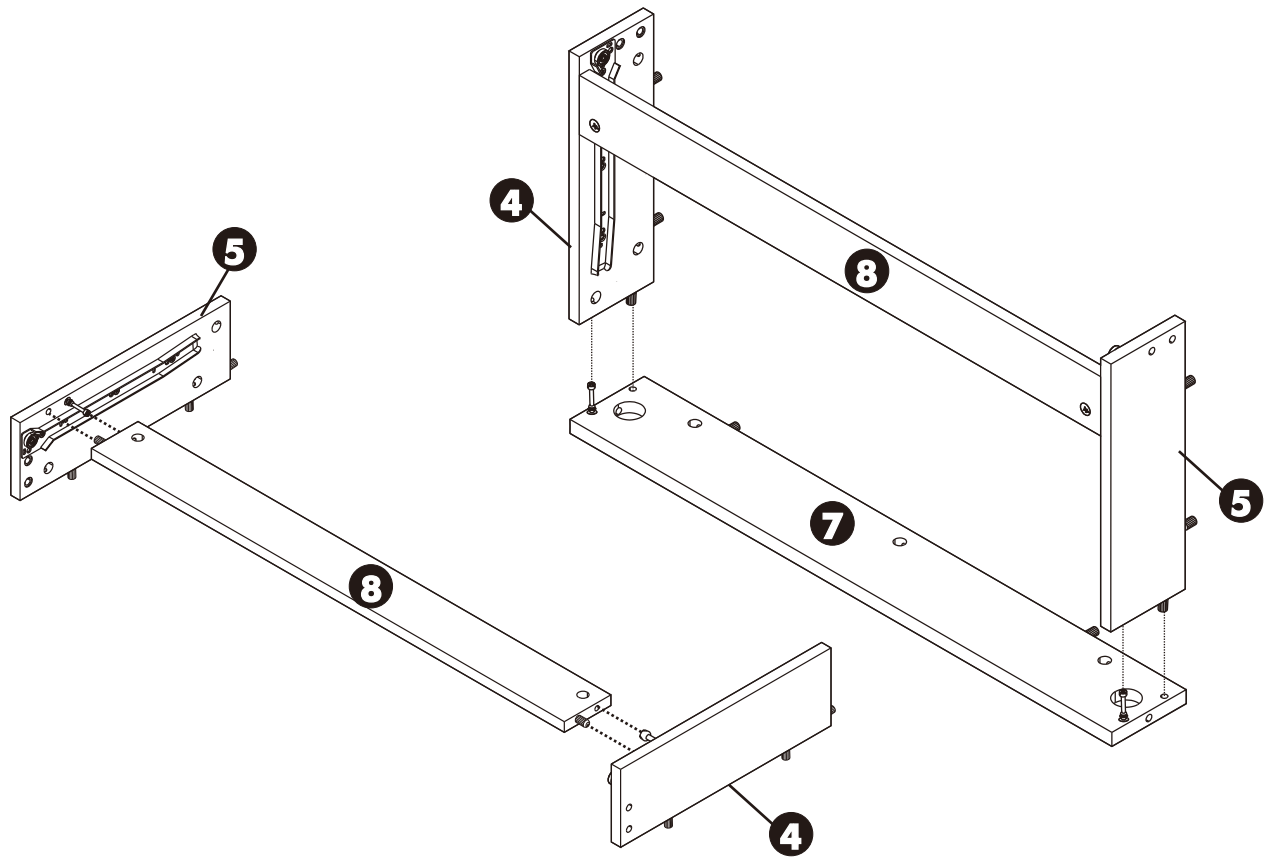


4.

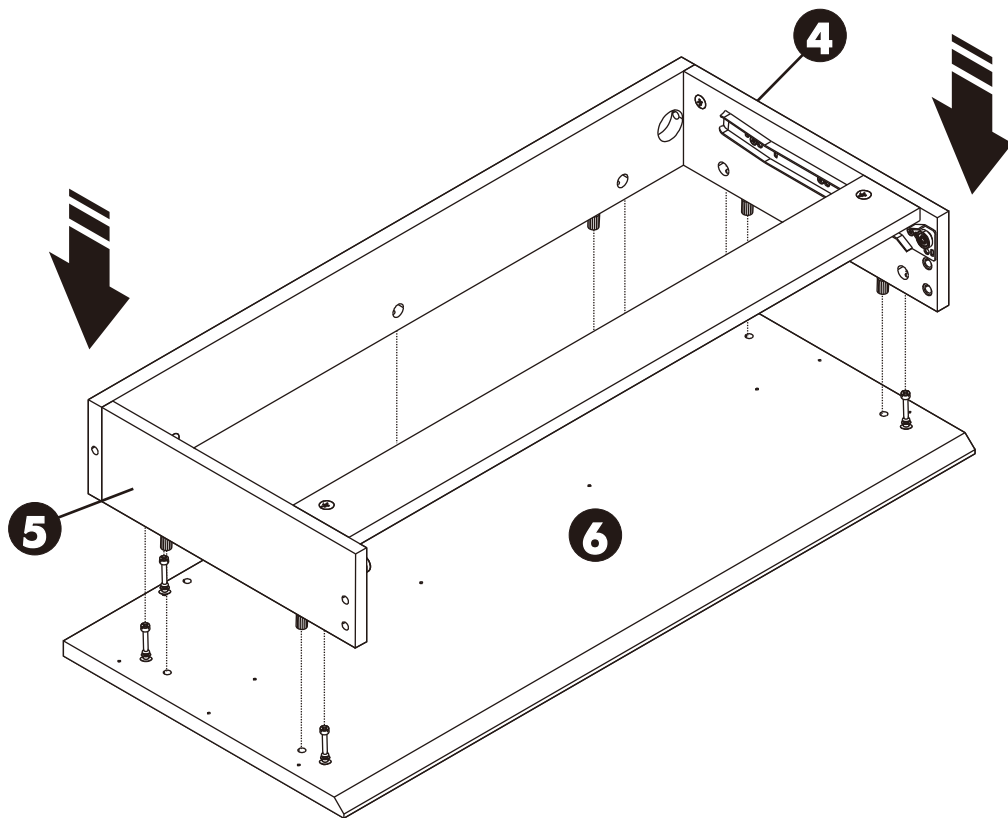


5.

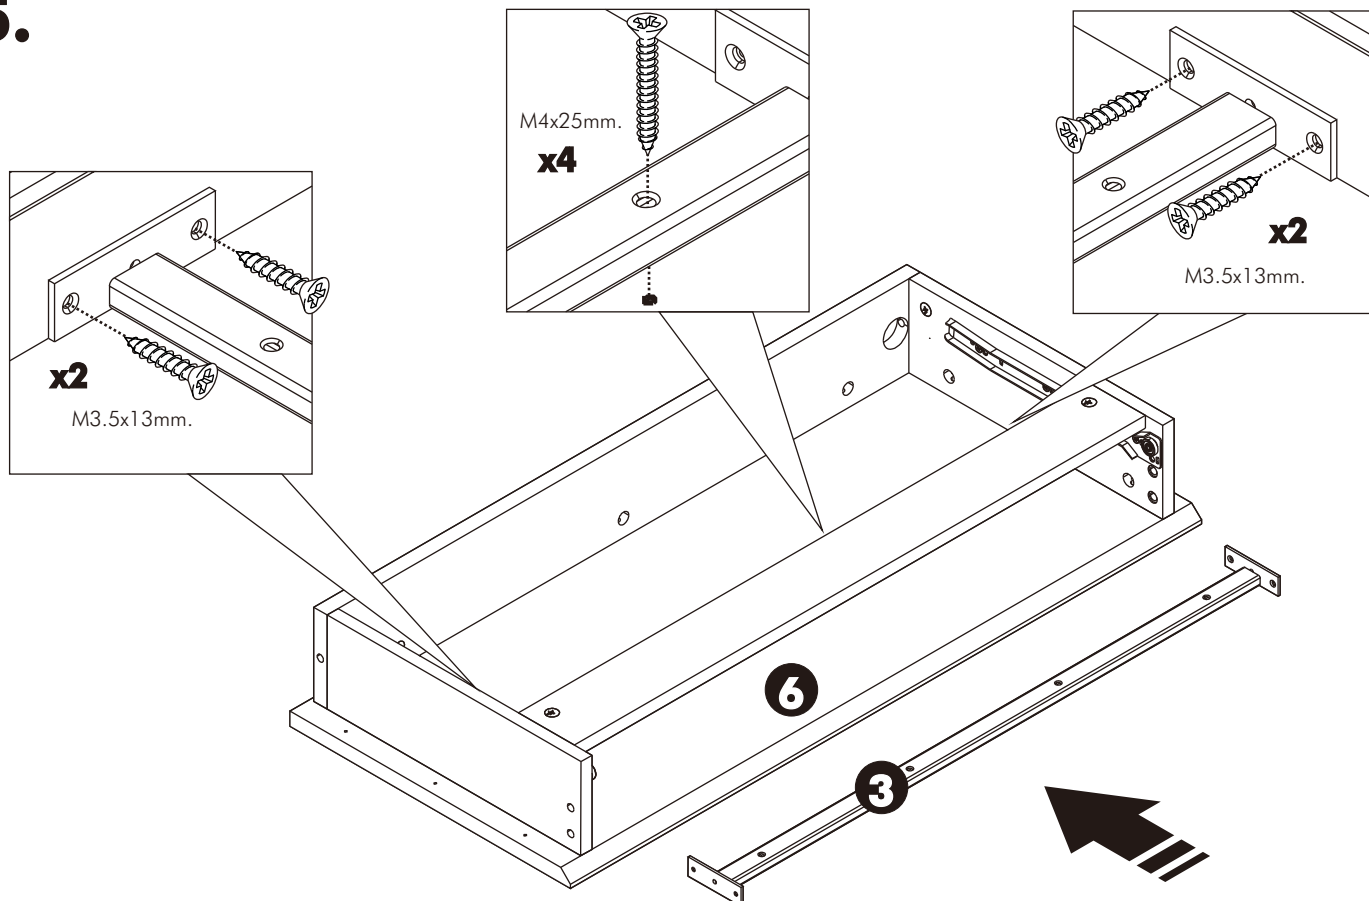


6.

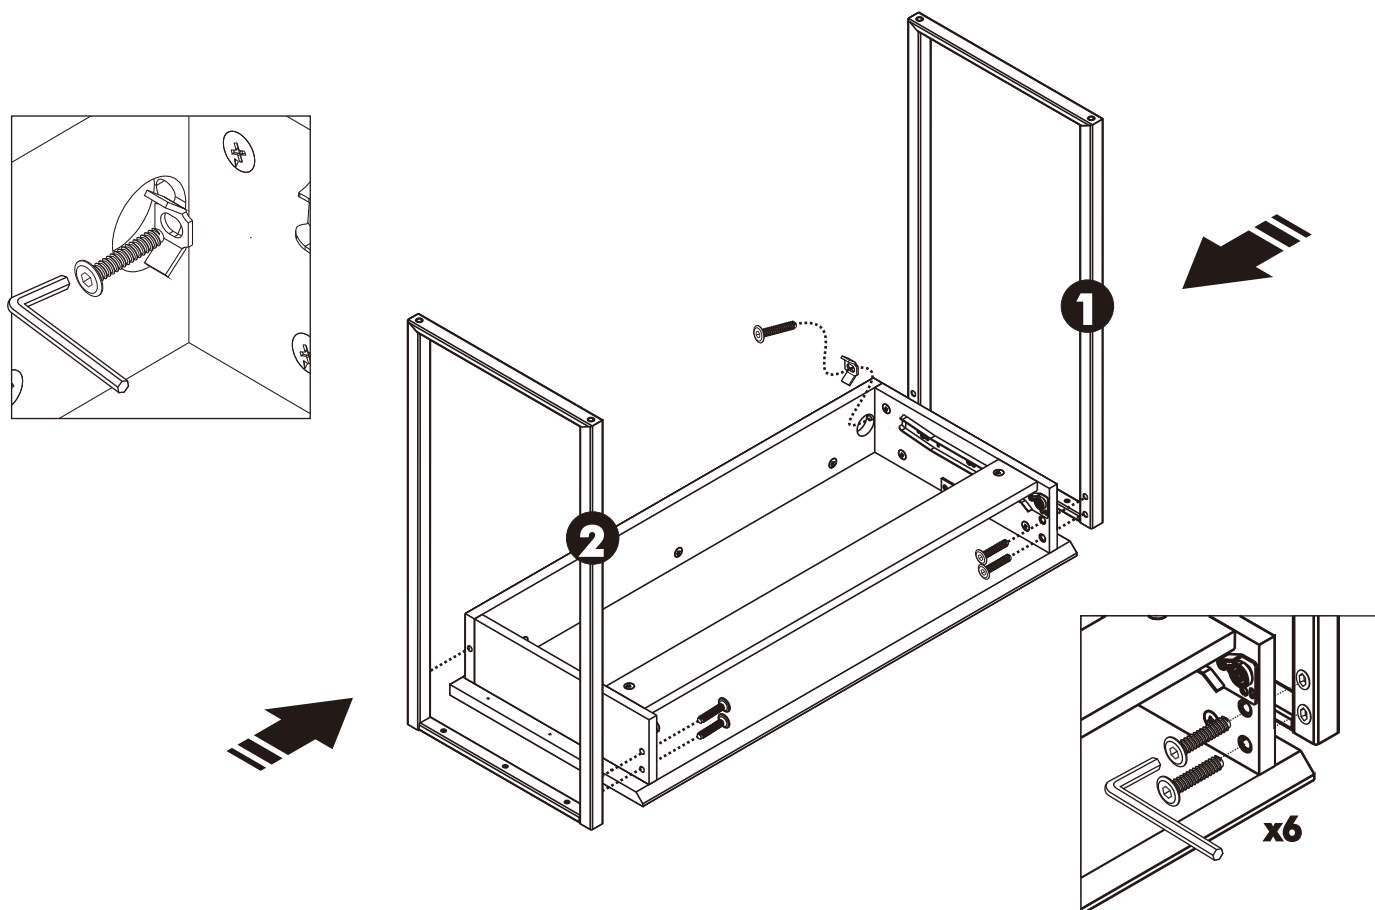


7.

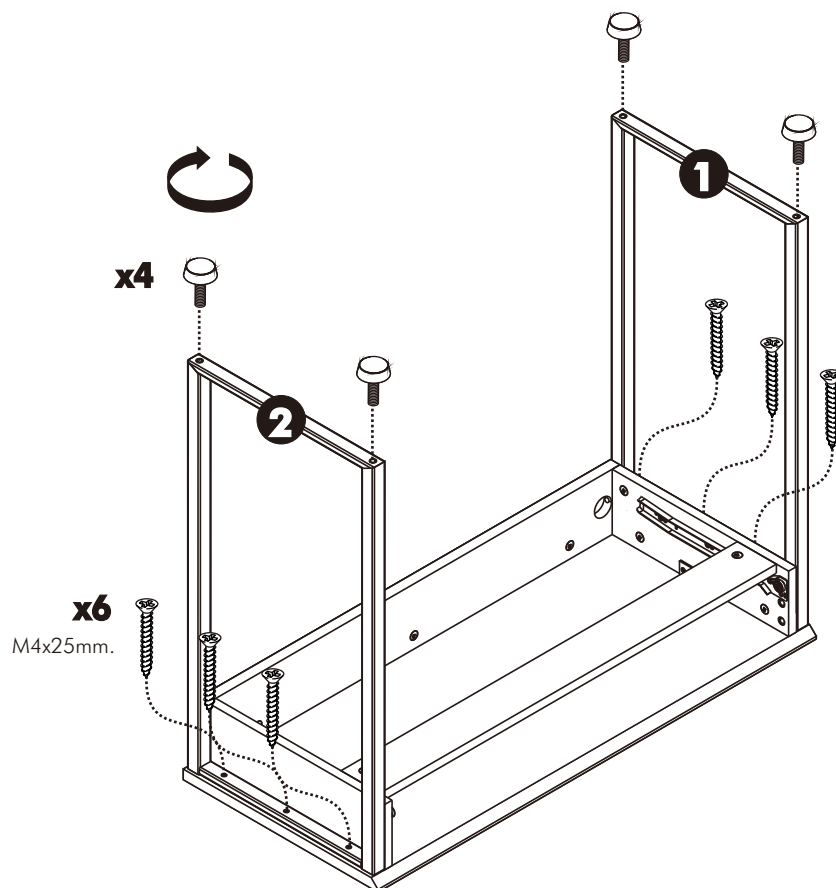


8.

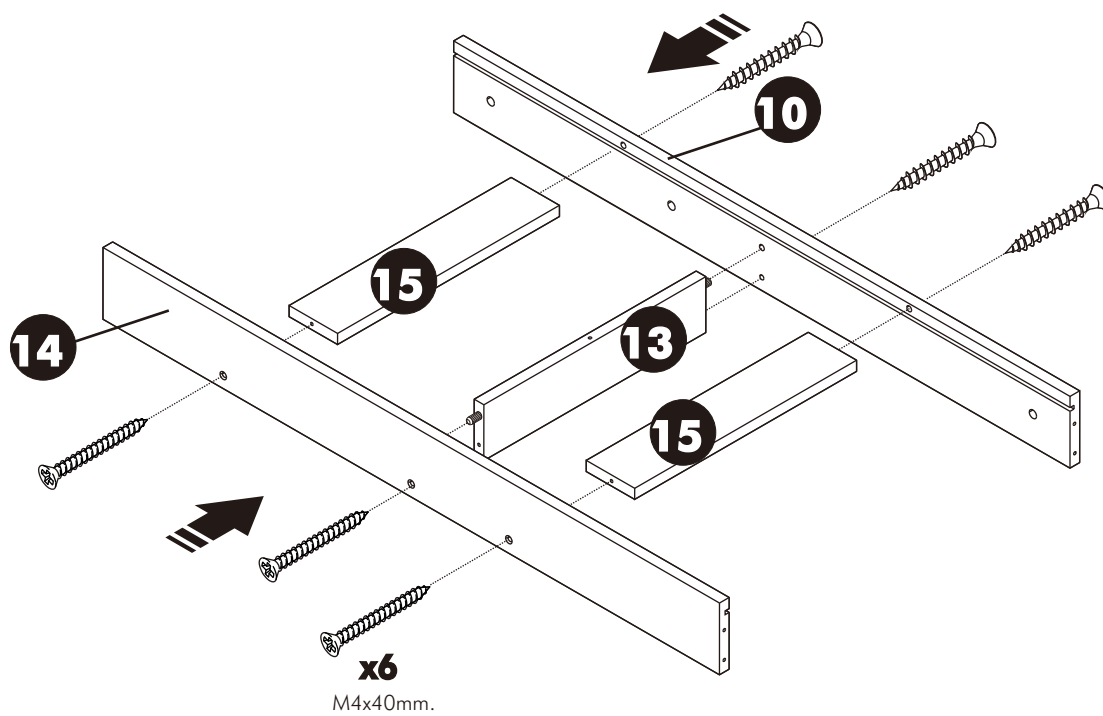




9.

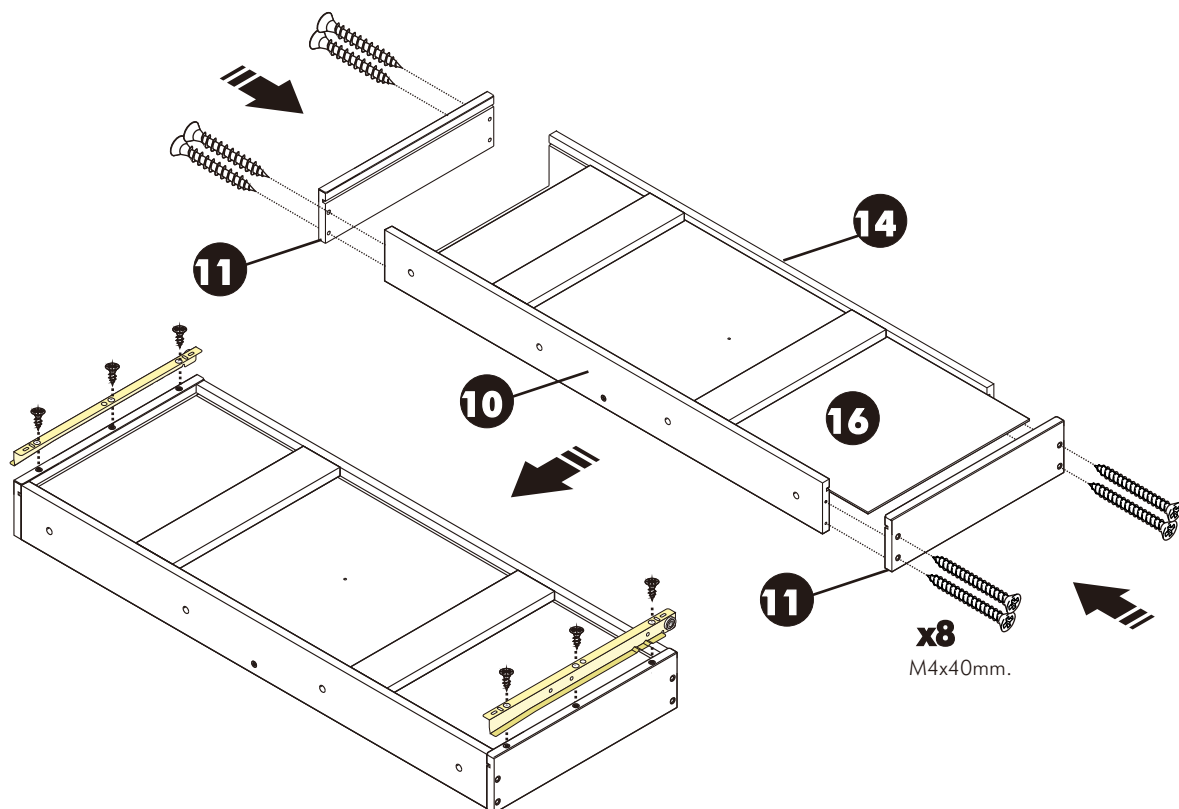

10.

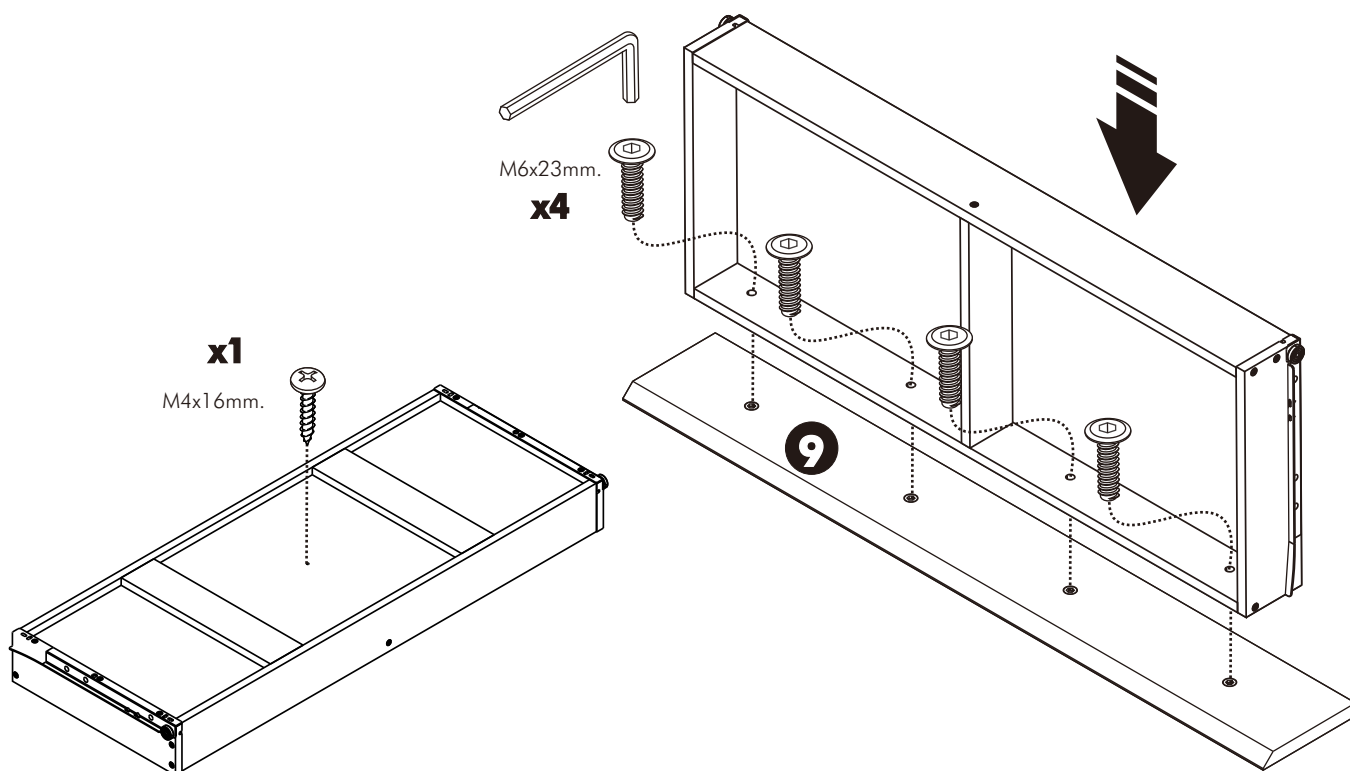

11.

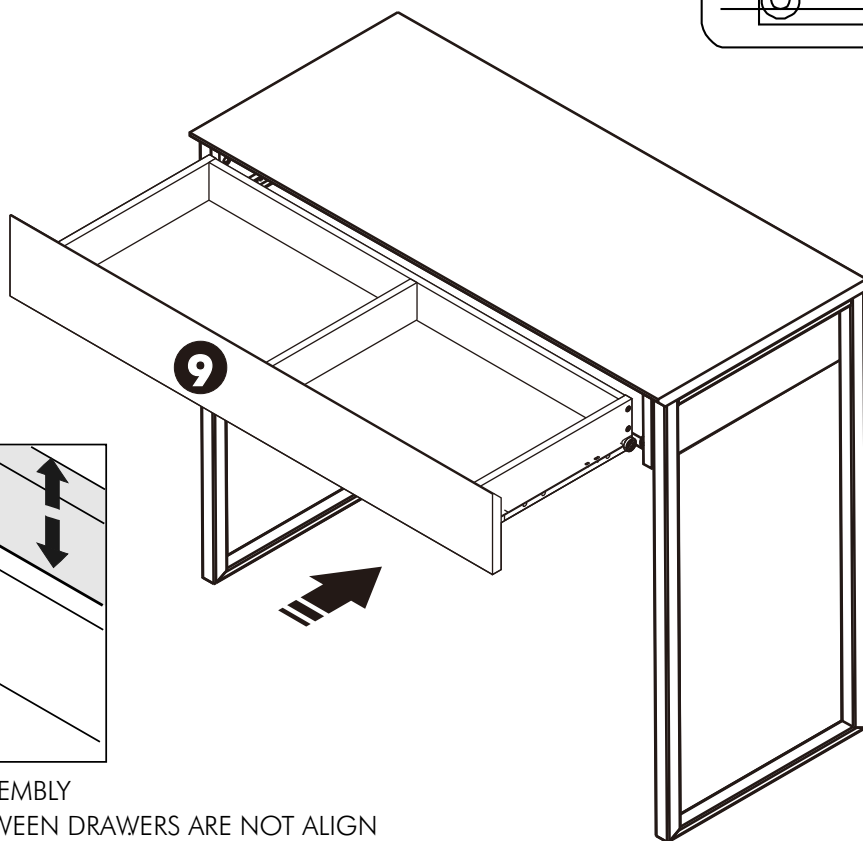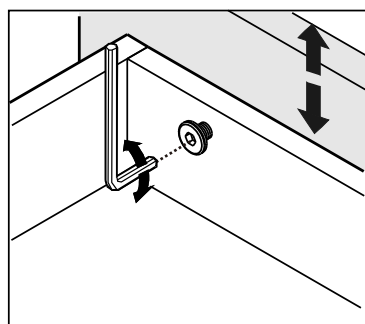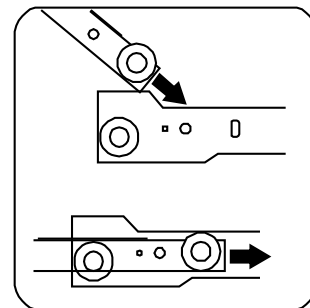

AFTER FINISHED ASSEMBLY
 INCASE OF GAP BETWEEN DRAWERS ARE NOT ALIGN
 PLEASE ADJUST AS BELOW
 1.LOOSE SCREW A LITTLE BIT
 2THEN MOVE FRONT DRAWER TO ALINGNMENT POSITION
 3TIGHTEN SCREW