


PRESENCE-P

Work Station-1/3

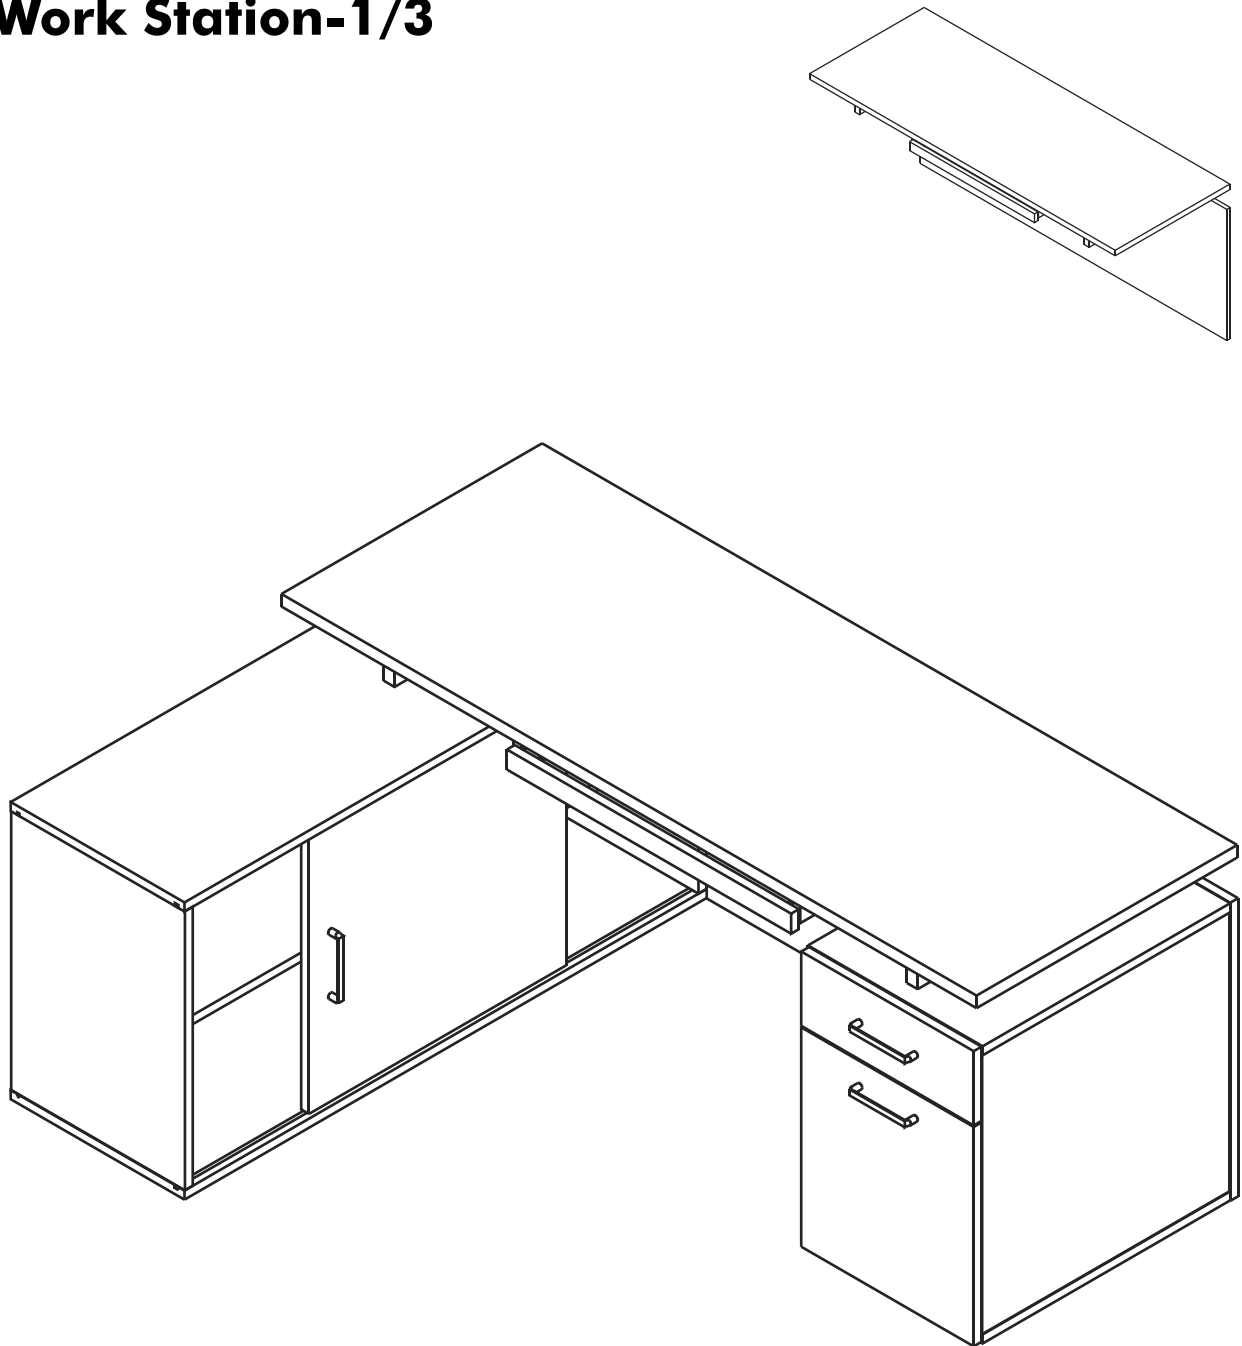

CONNECT SYSTEM

1

2

(Connecting bolts)

3

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

CORRECT

WRONG

M3.5x13mm.

1

Use these holes

2

Use these holes

EQ

EQ

1 Pc.

≤ 190mm.

40mm.

40mm.

EQ

EQ

2 Pcs.

≥ 191-850mm.

100mm.

100mm.

EQ

EQ

3 Pcs.

> 850-2000mm.

100mm.

100mm.

EQ

EQ

4 Pcs.

> 2001mm.

100mm.

100mm.

OUT

IN

M4x16mm.

40mm.

☹

☒




EQ

☺




☑





M4x16mm.

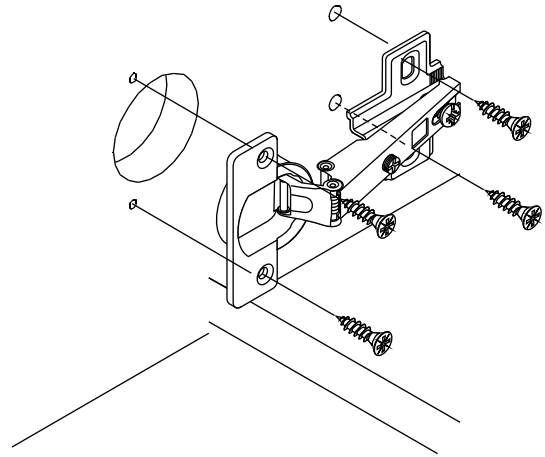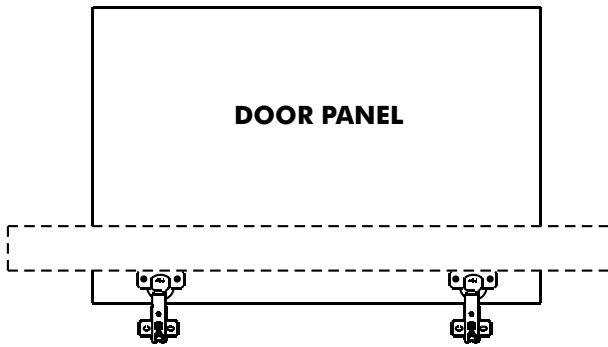

M4x16mm.

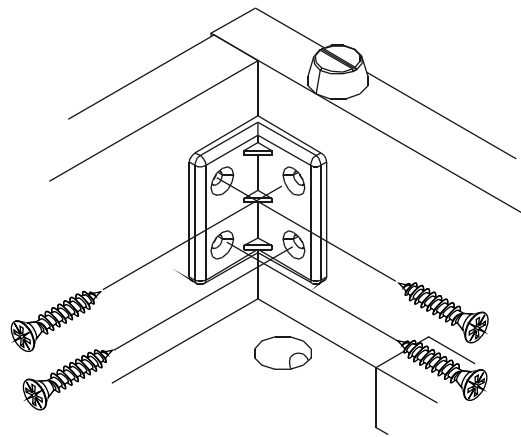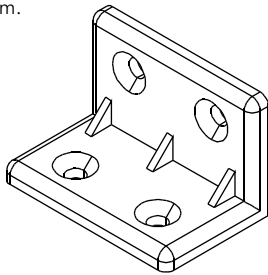


M4x30mm.

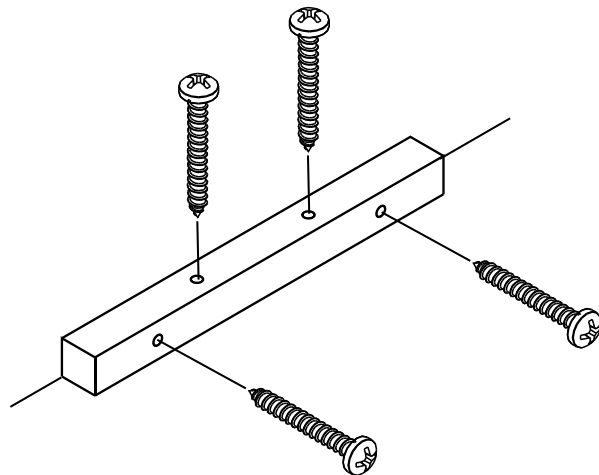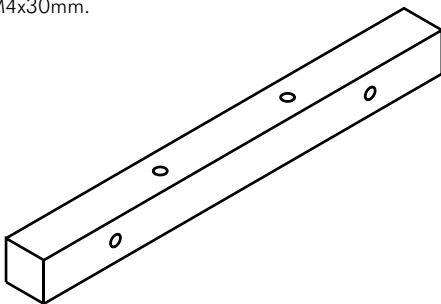

HARDWARE

-BODY SET




x 8



19mm.

x 8




#8x35

x 21




x 2

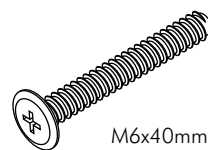

M6x40mm.

x 4




M4x35mm.

x 6



M4x16mm.


x 4



M4x30mm.

x 8

-DRAWER SET

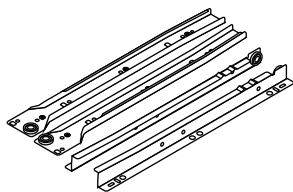

x 1



M3.5x13mm.

x 14




M4x40mm.

x 14


ASSEMBLY

-BODY SET


1.

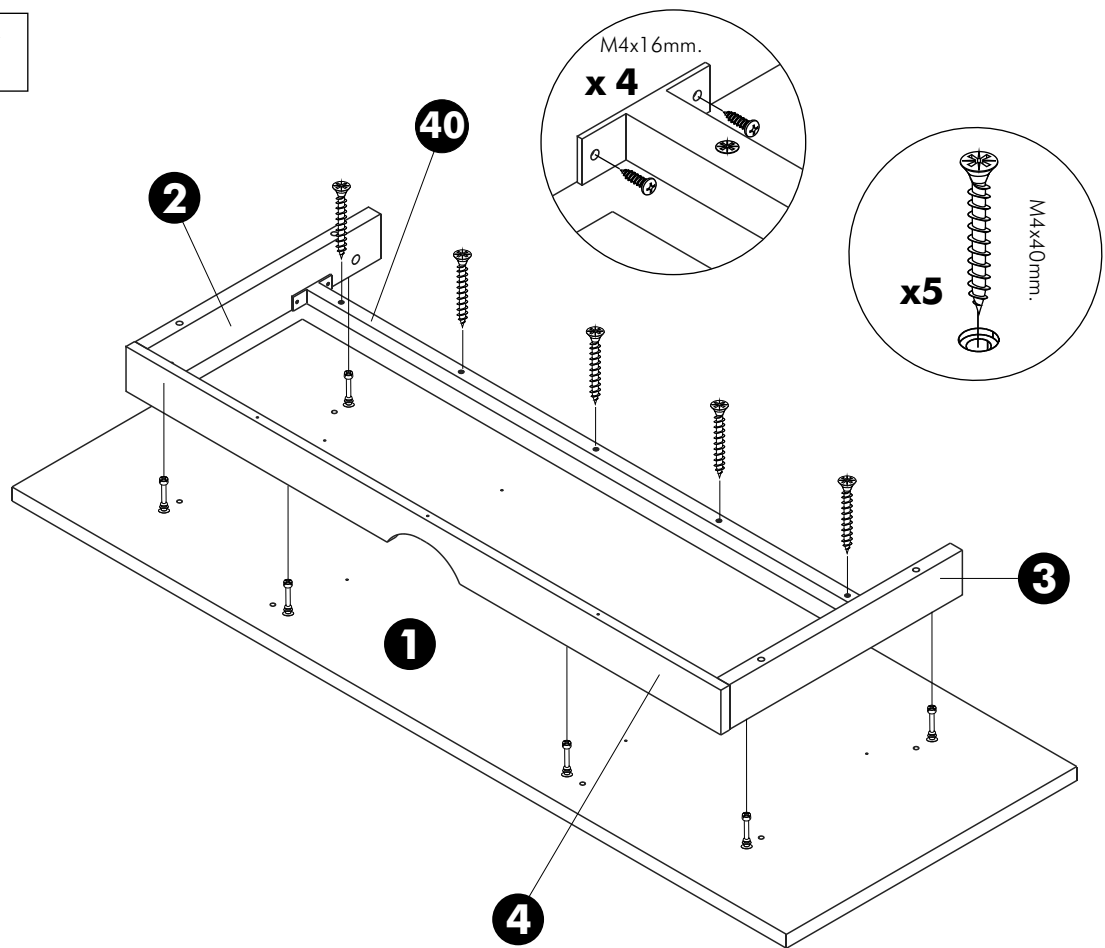


2.

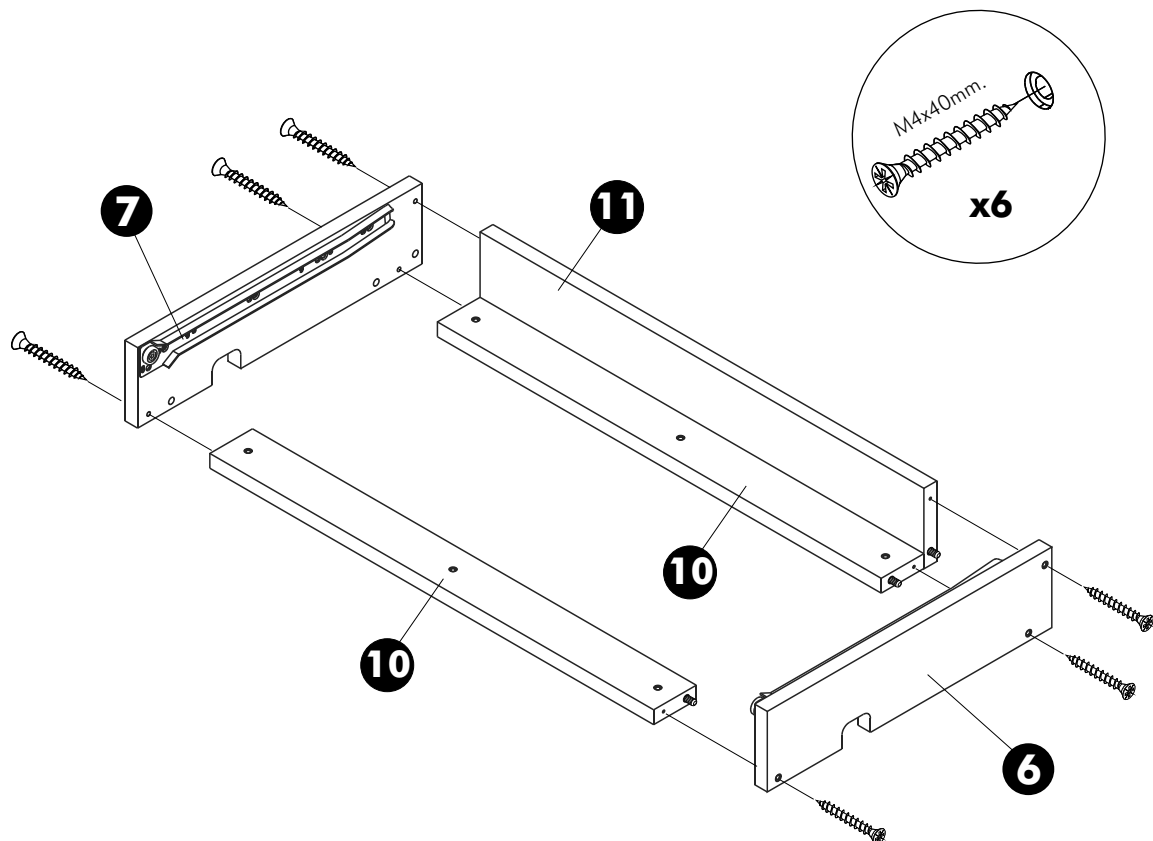


3.

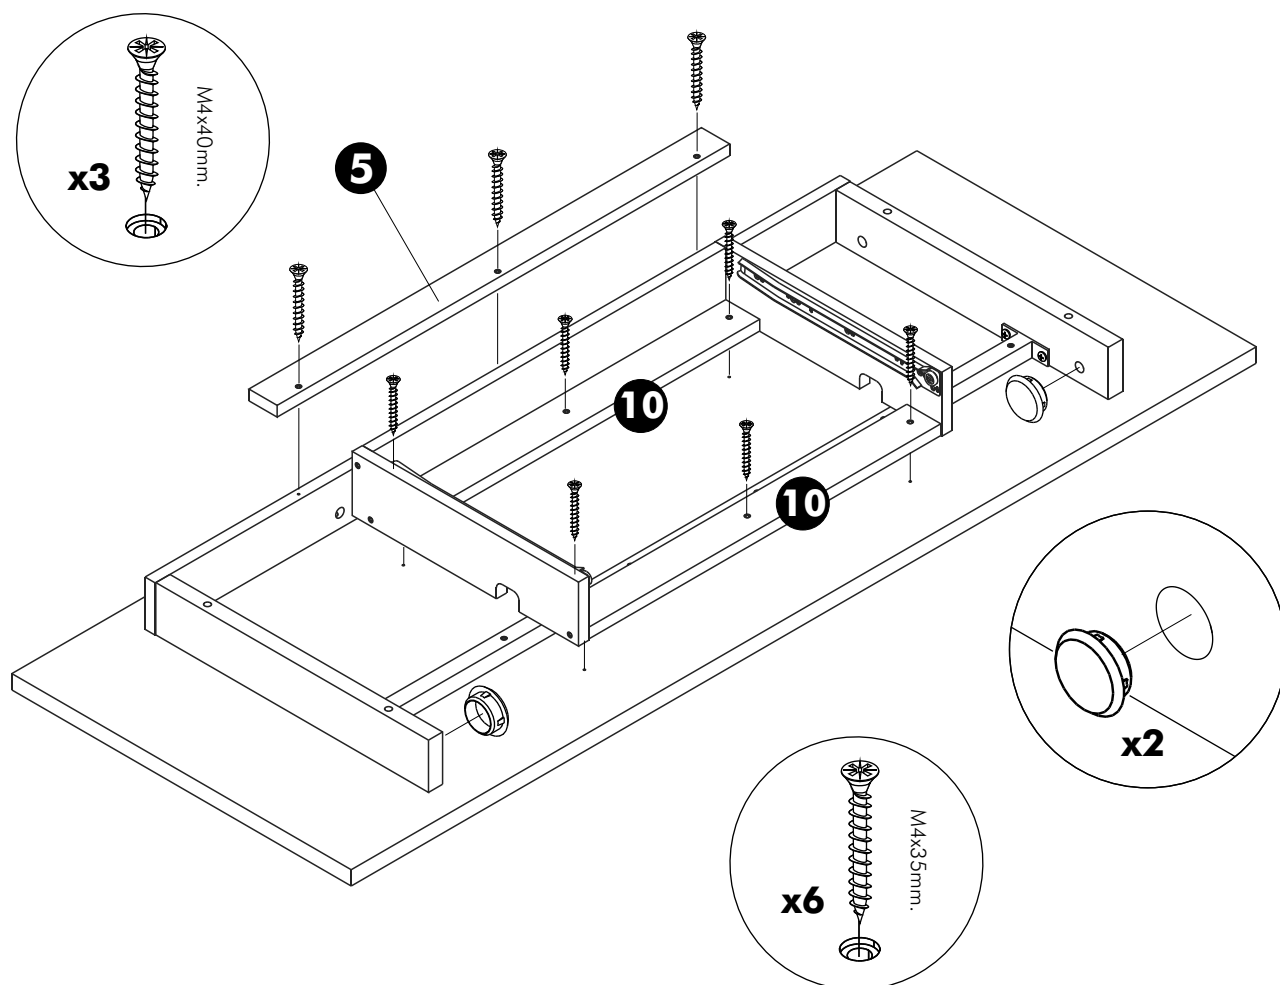


4.

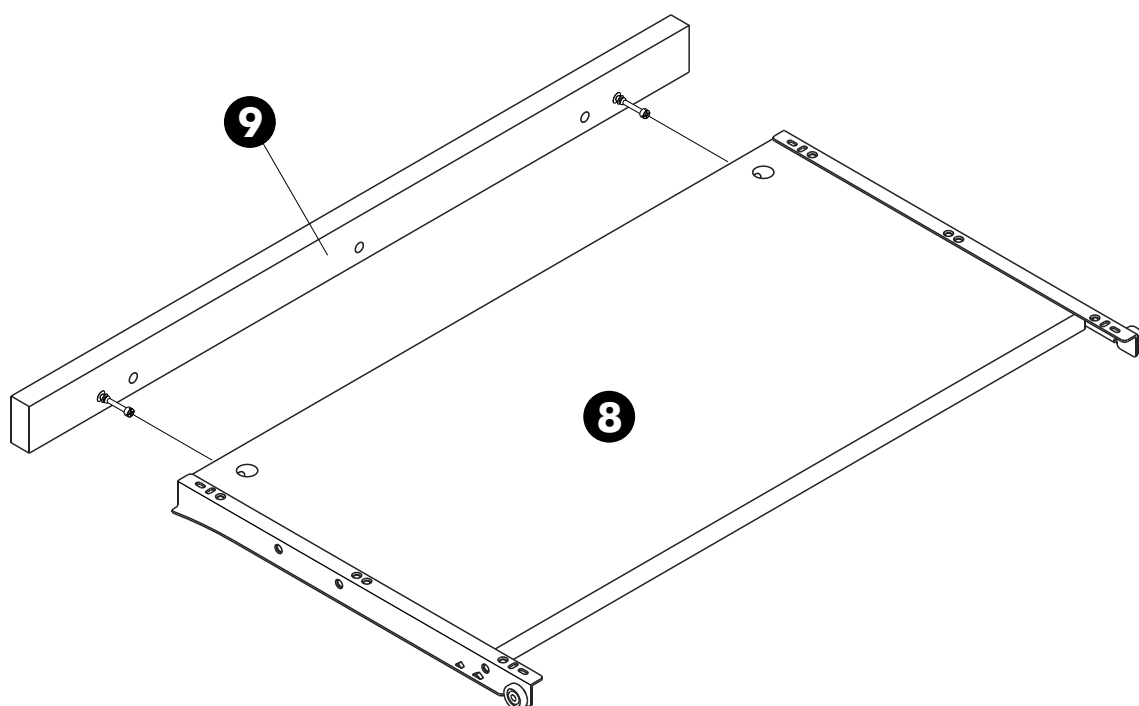


5.

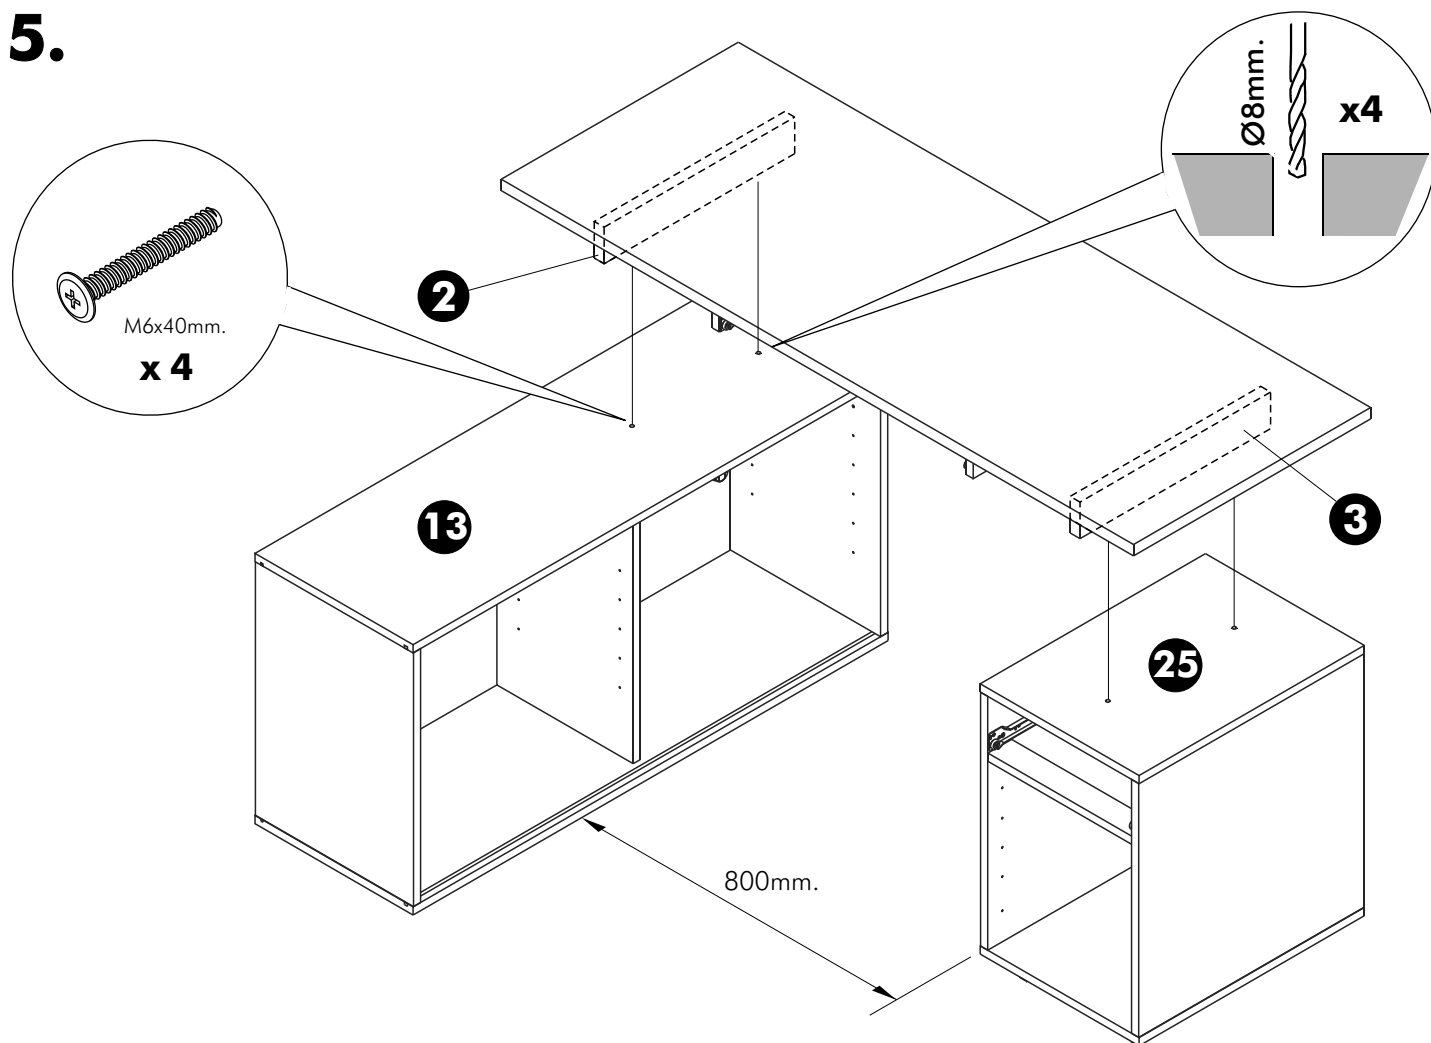


6.

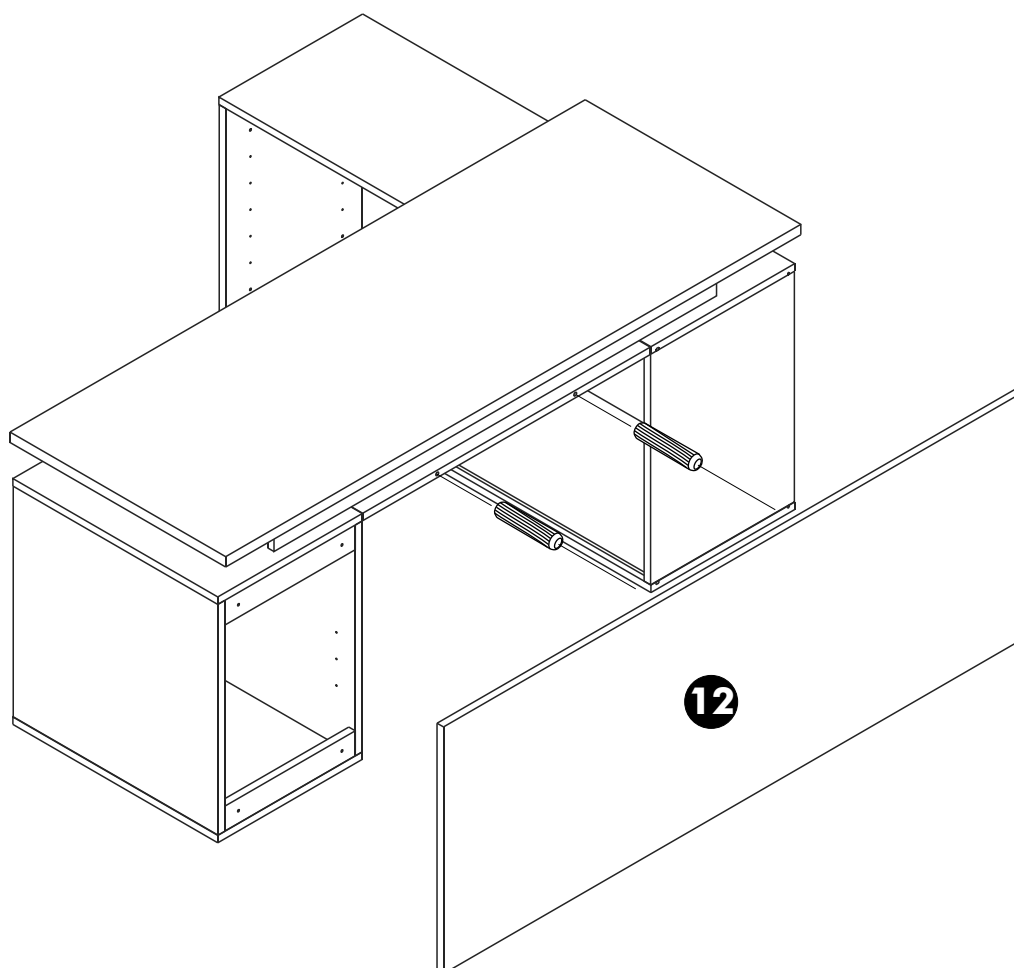

7.


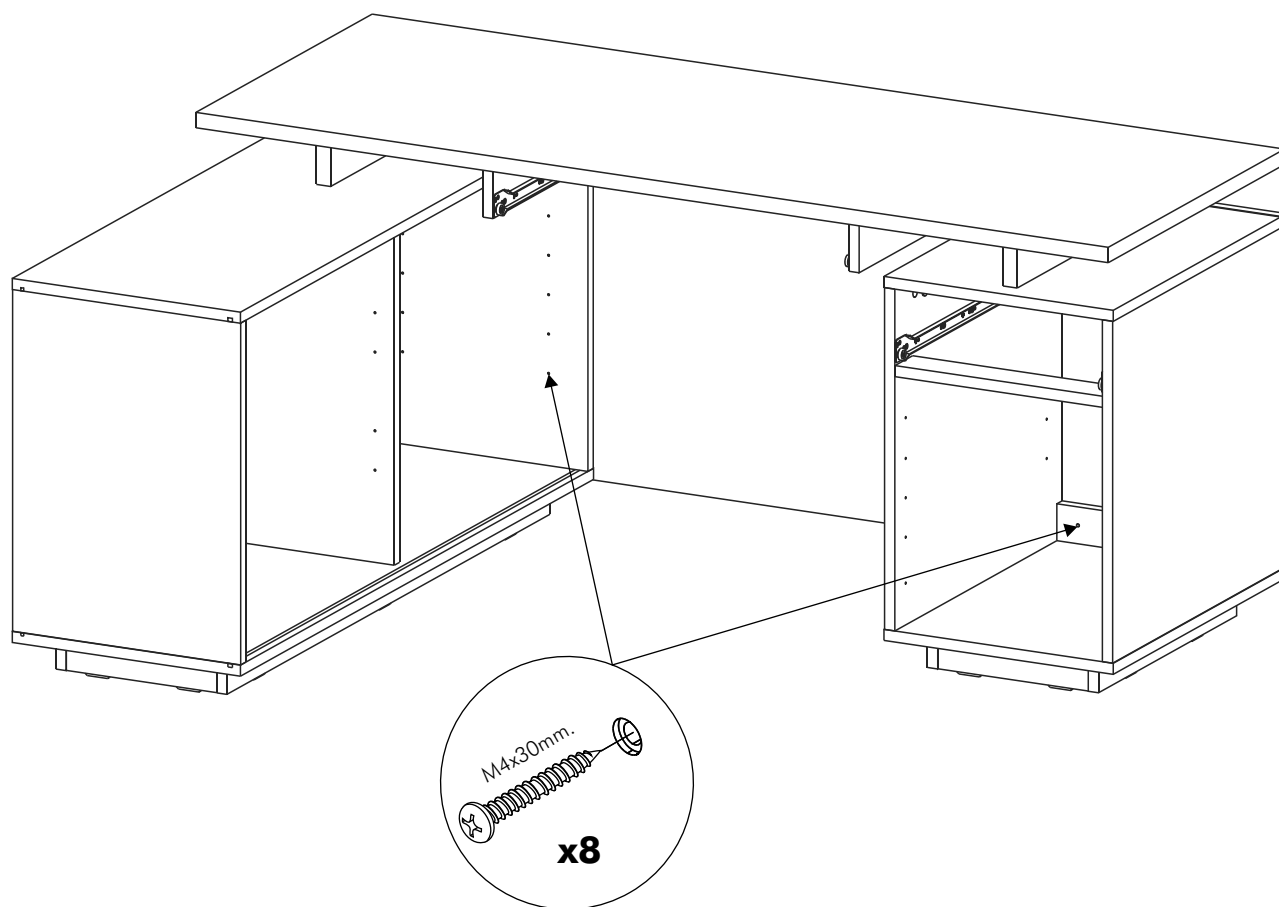


8.

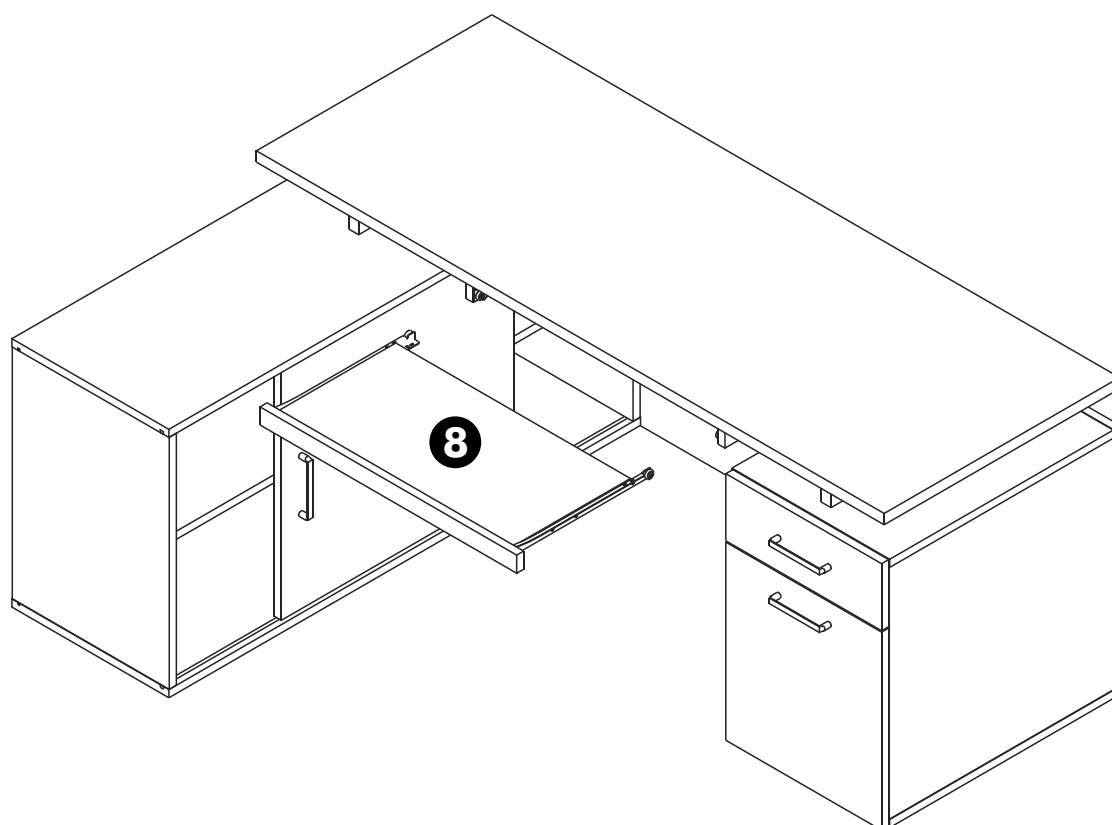


PRESENCE-P

Work Station-2/3

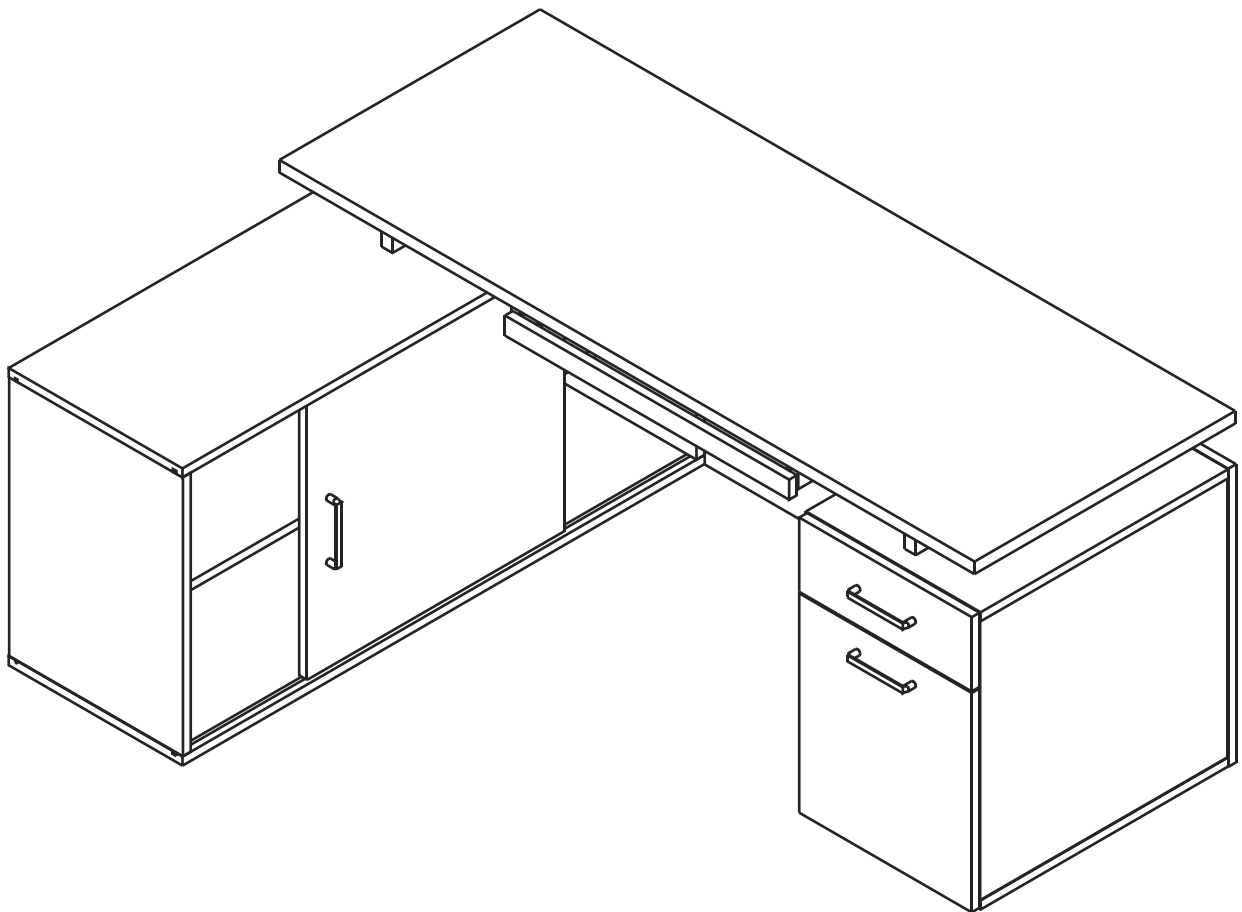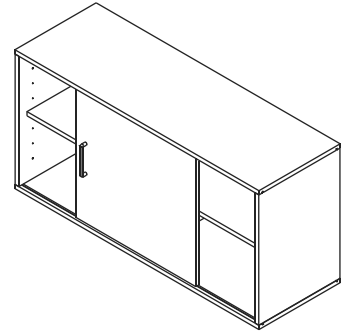


HARDWARE


-BODY SET



x 6




x 6



x 12




x 8

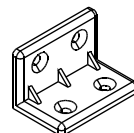


x 10




x 64



x 4

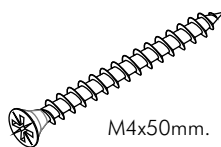


x 6



x 28




x 2




x 12


-DOOR SET

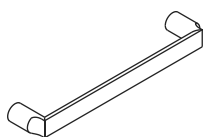

x 1




x 2



x 2



x 2



x 4




x 4


ASSEMBLY

-BODY SET


1.

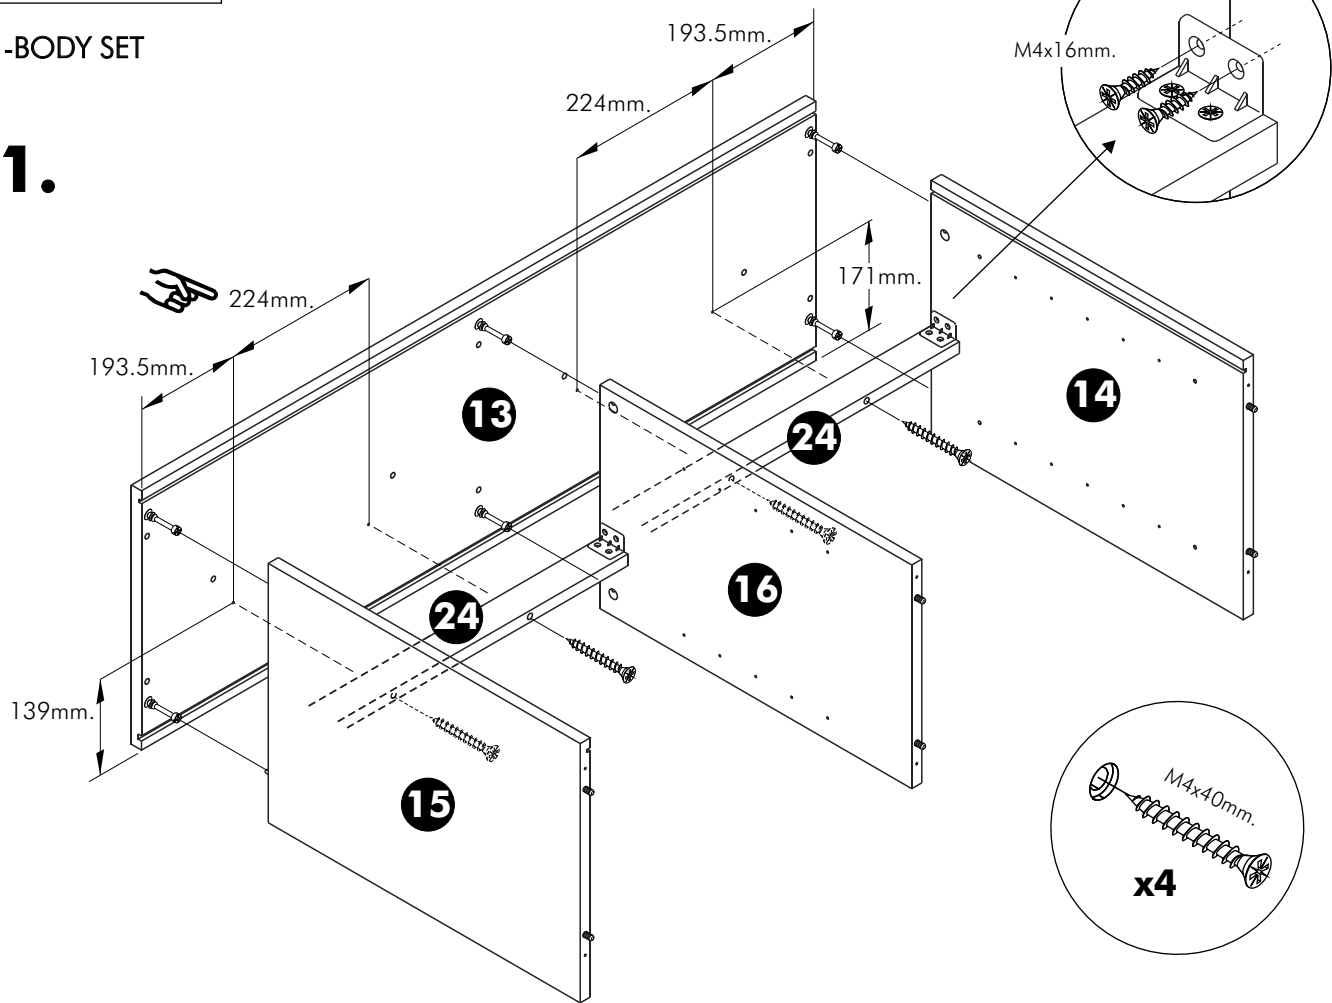


2.

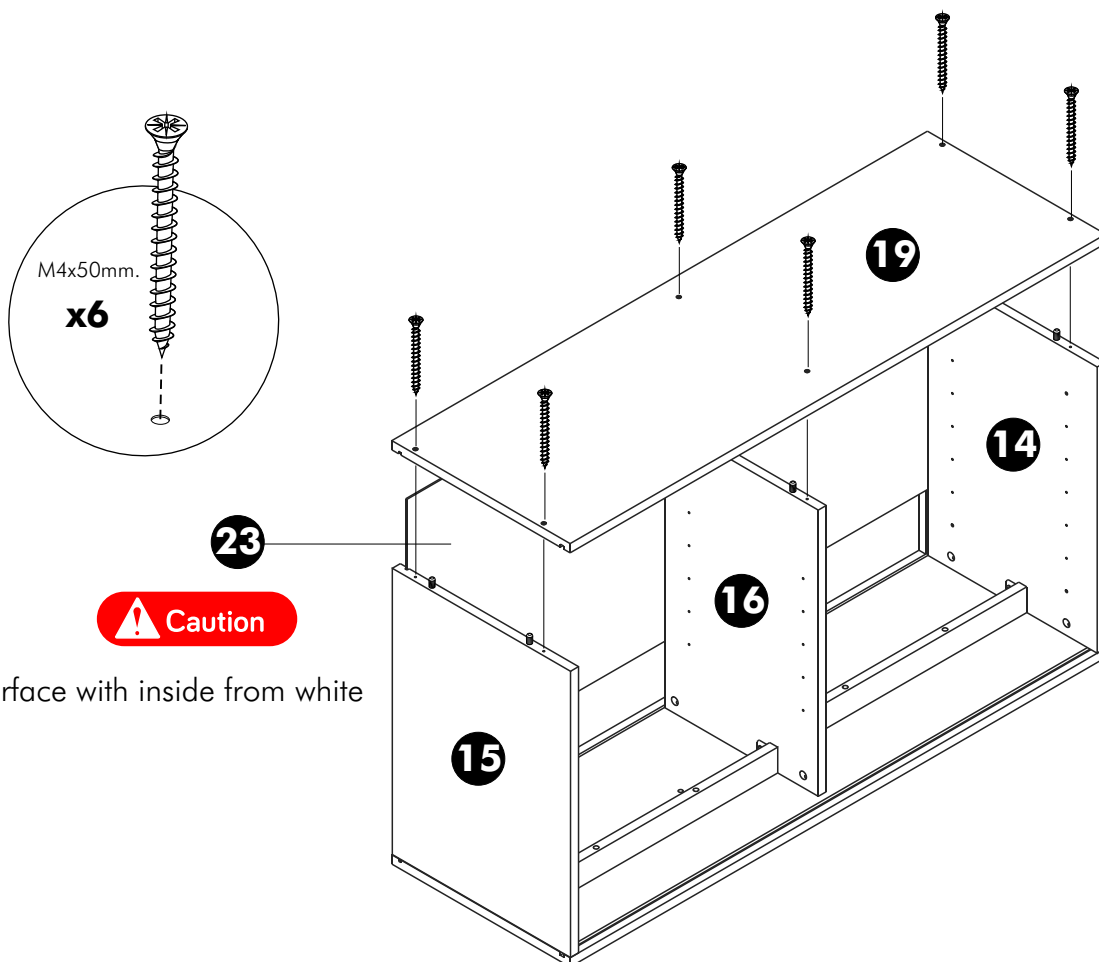

3.

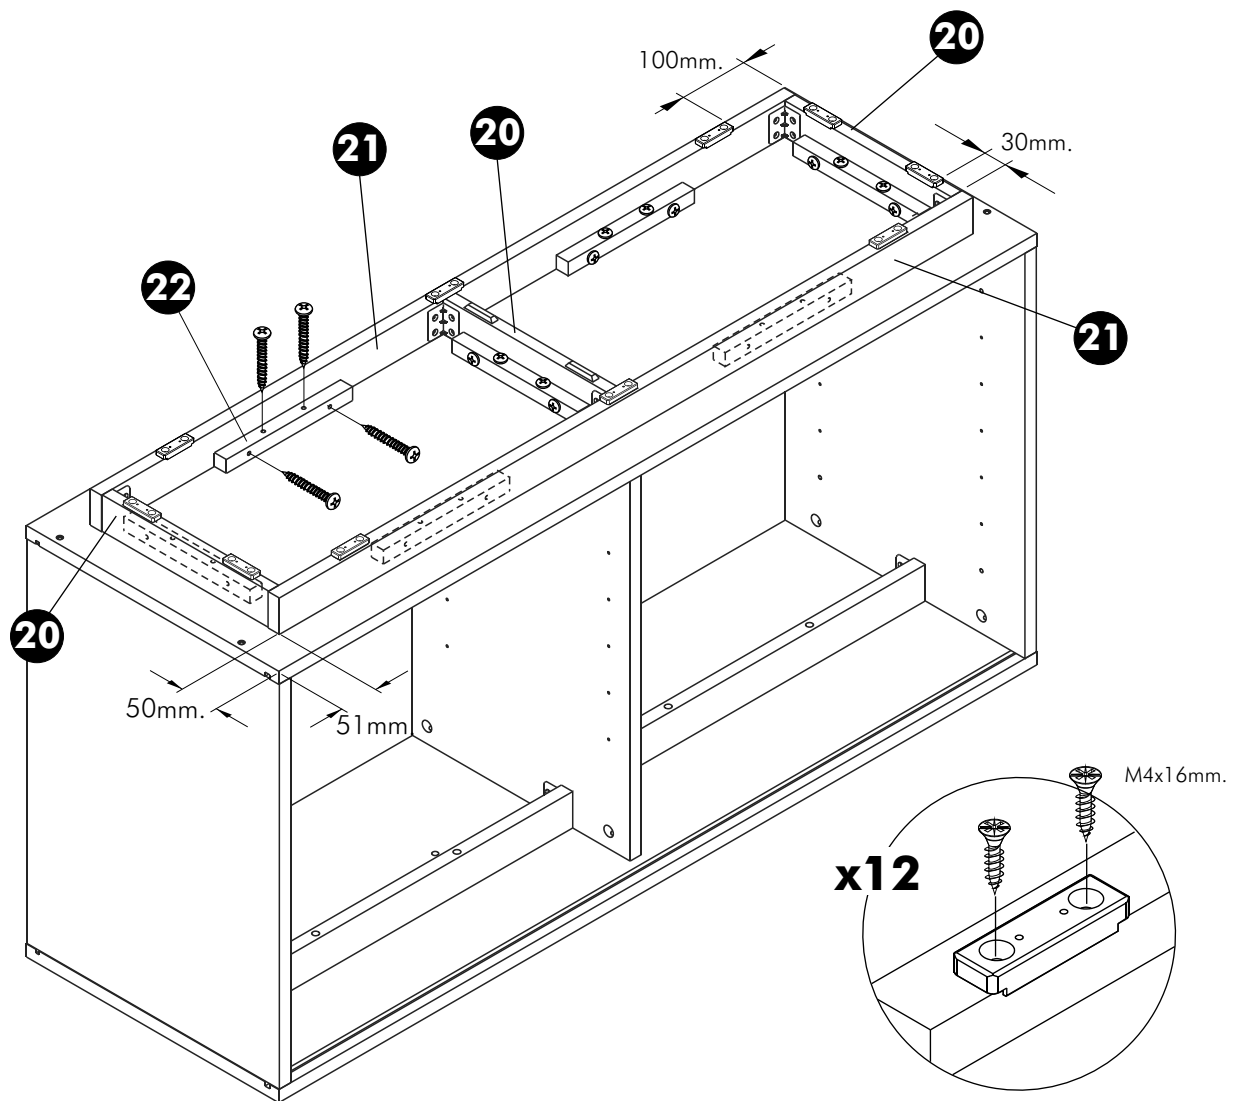


4.

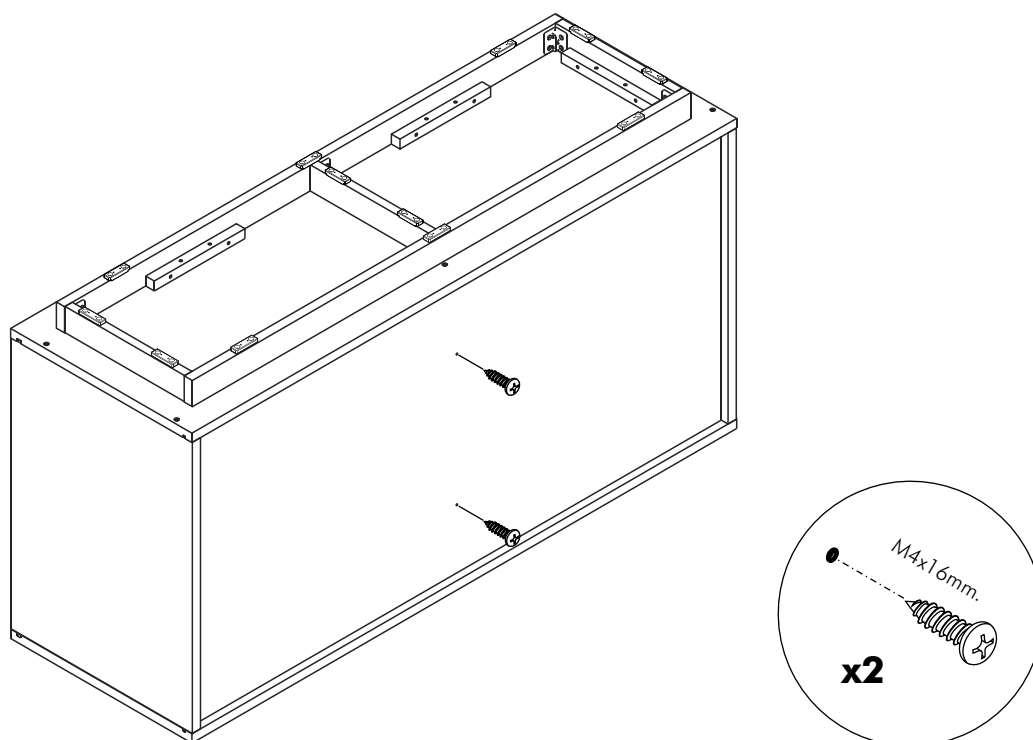





ASSEMBLY

-DOOR SET

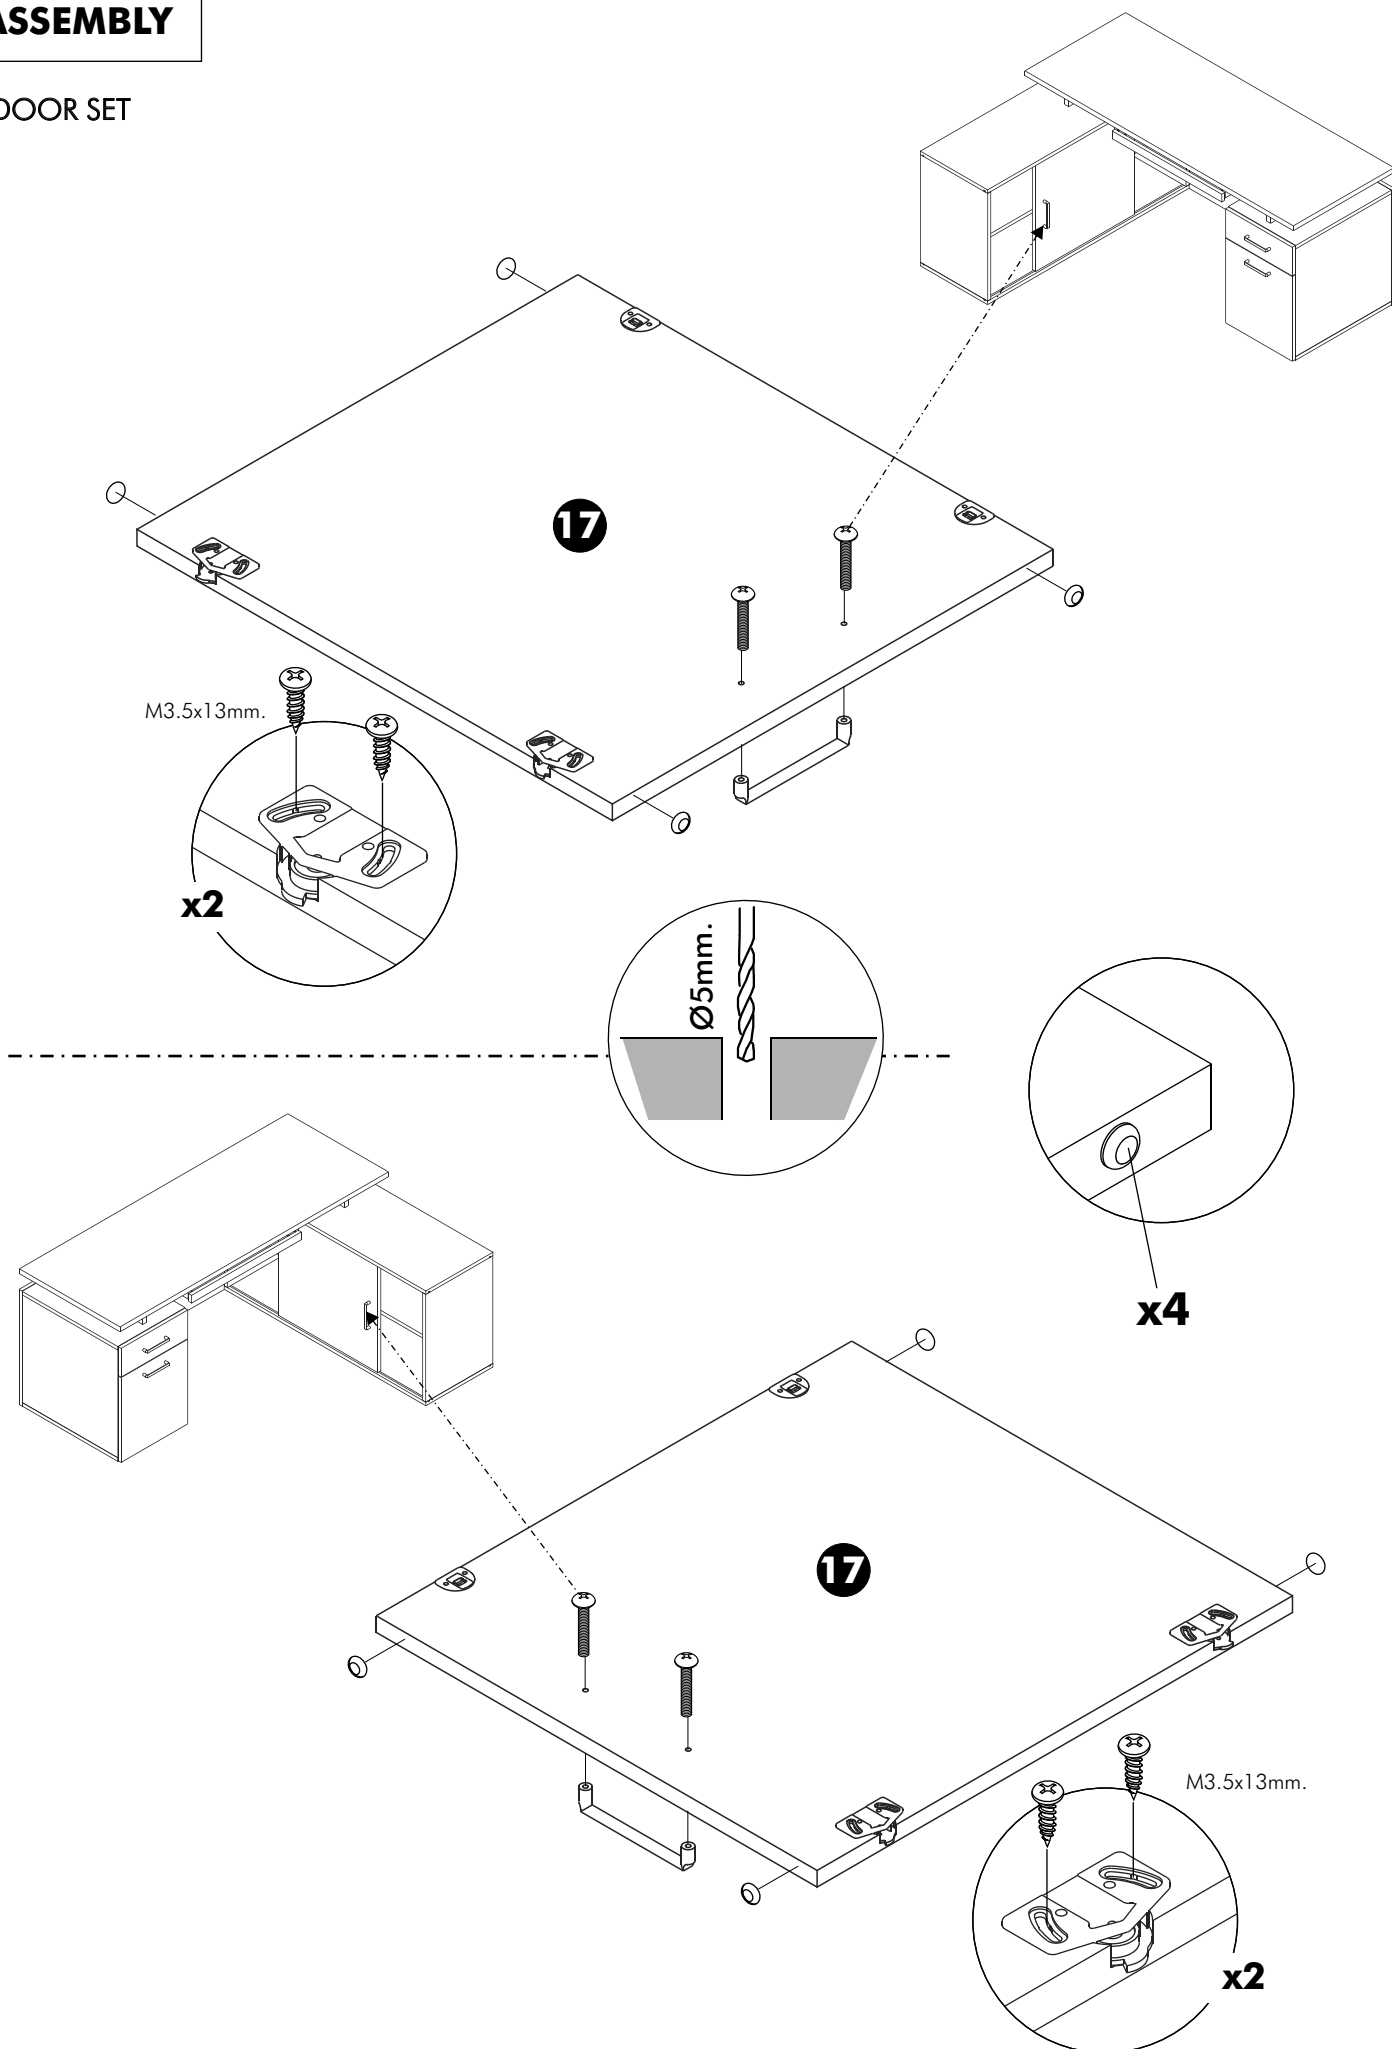



ASSEMBLY

-DOOR SET

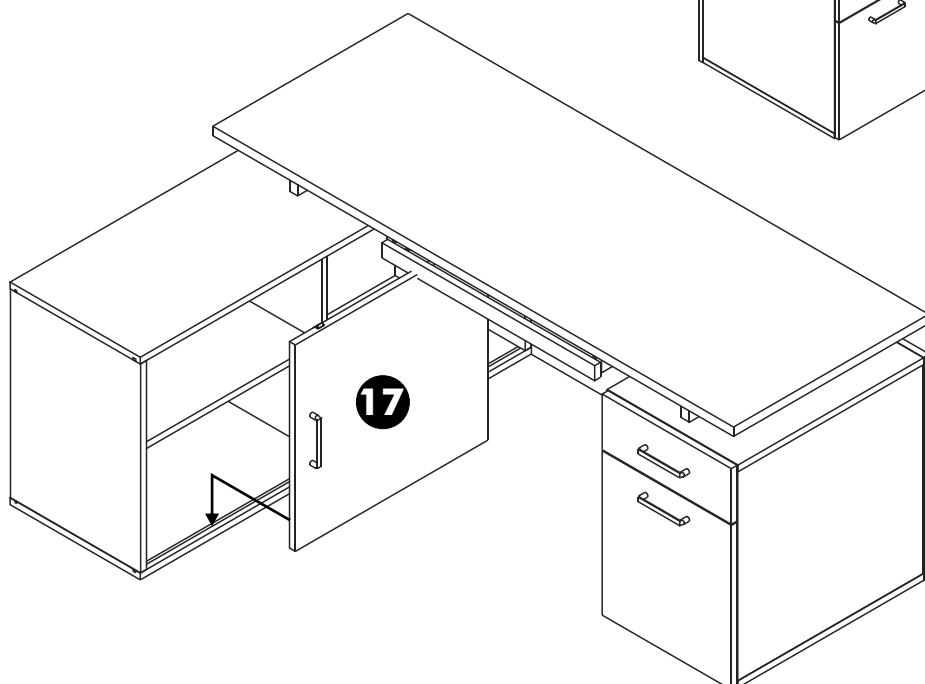
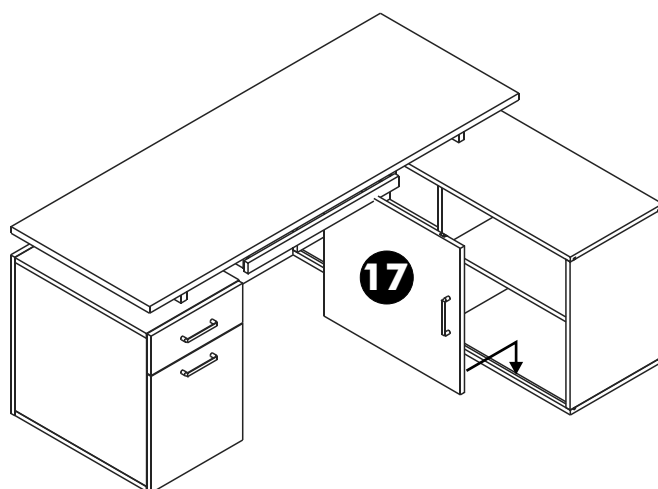
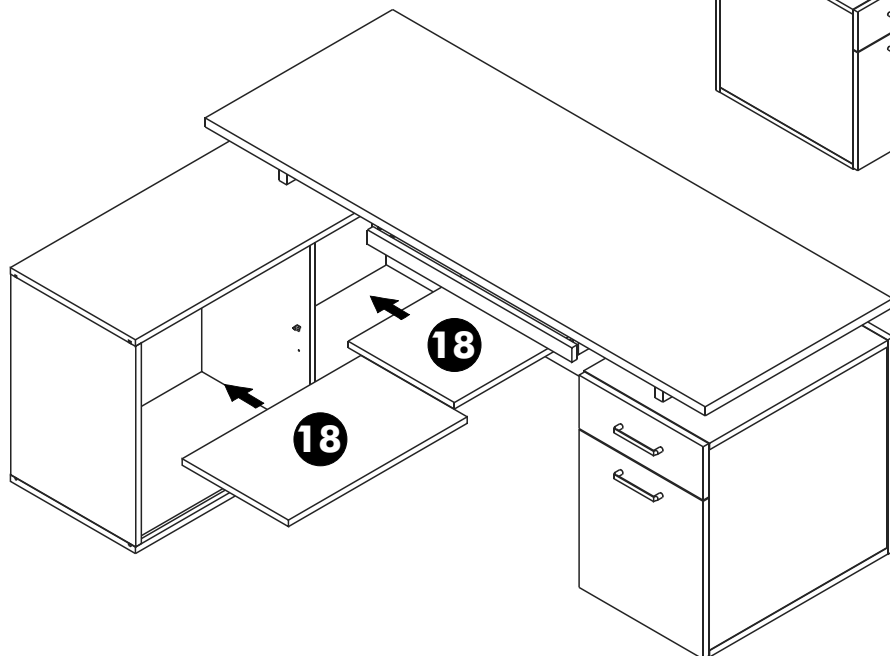
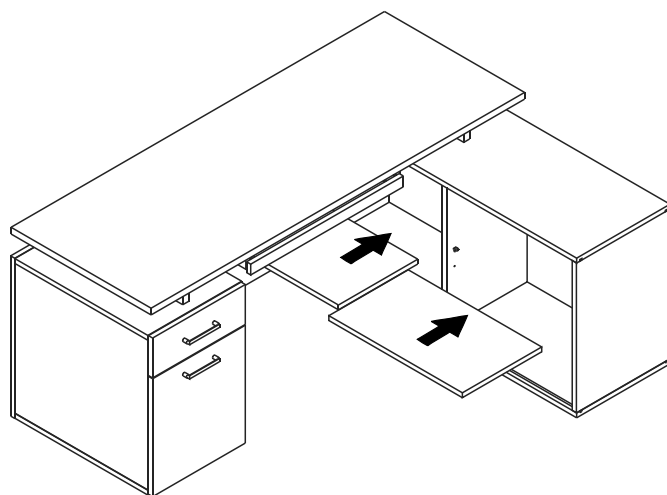


PRESENCE-P

Work Station-3/3

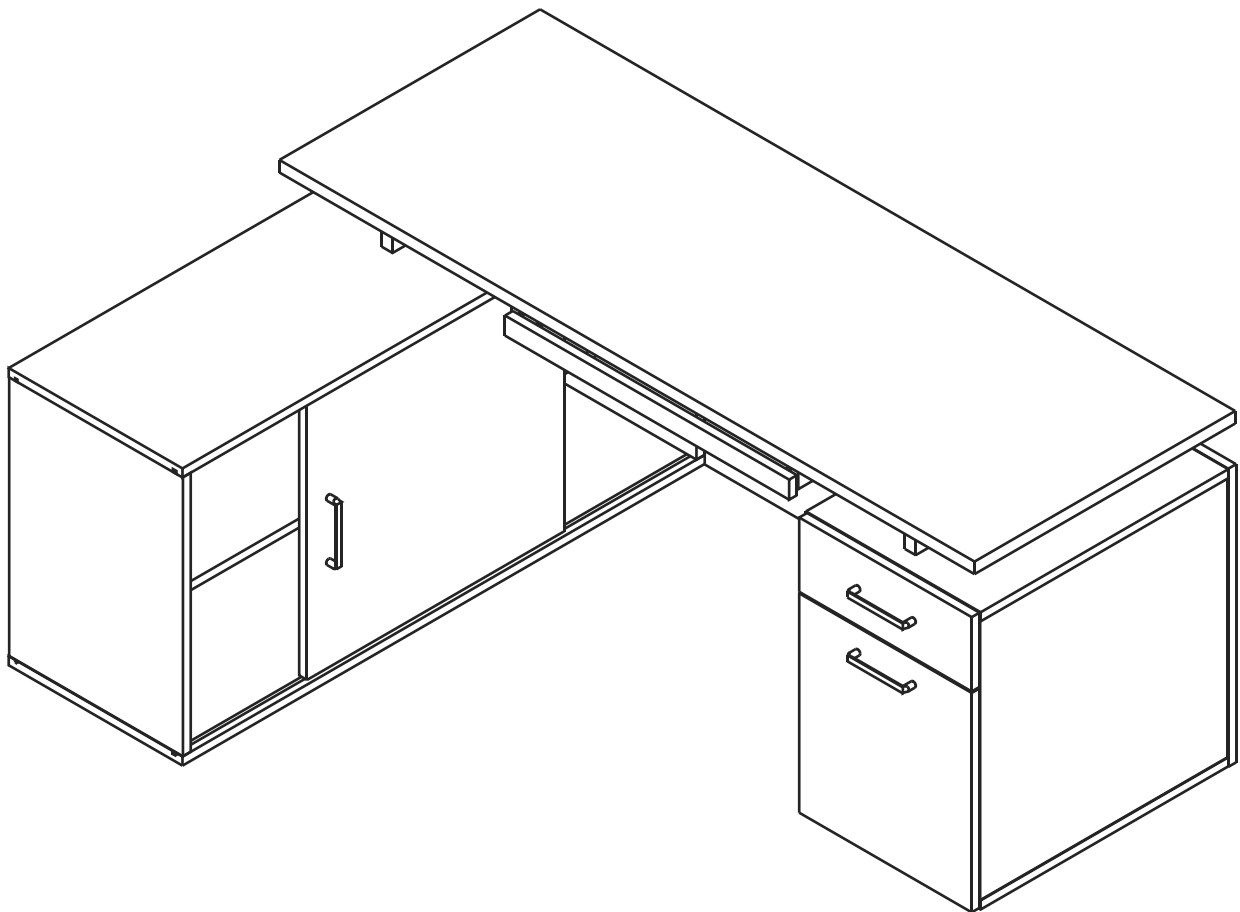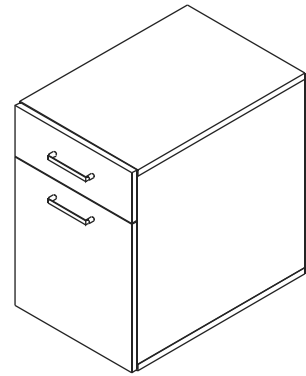


CONNECT SYSTEM

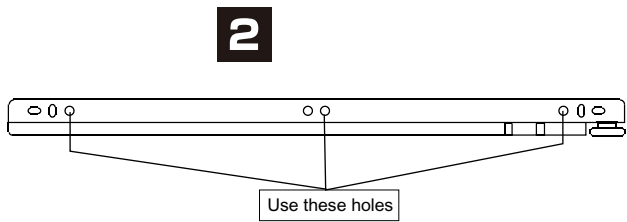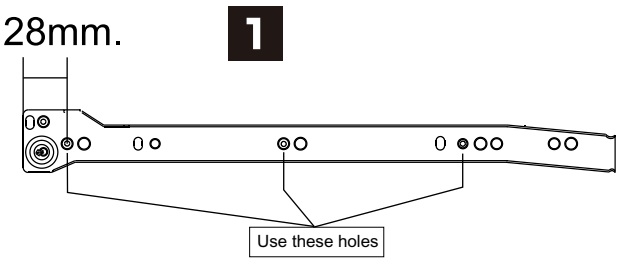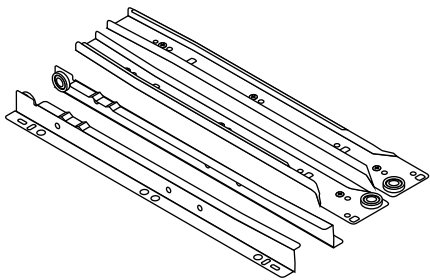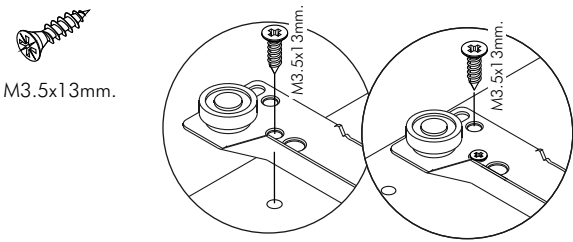

HARDWARE


-BODY SET



x 4




x 4



x 24




x 4

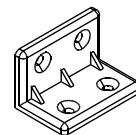


x 4



x 32

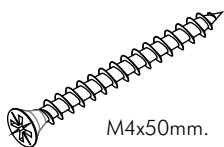


x 4



x 18




x 2




x 8


-DRAWER SET

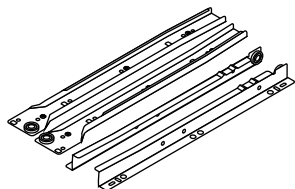


x 1




x 14



x 8

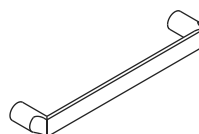

x 1



x 2




x 2



x 1


-DOOR SET

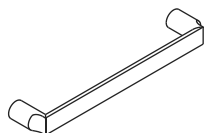

x 1



x 2



x 2



x 8



x 2




x 2


ASSEMBLY

-BODY SET


1.

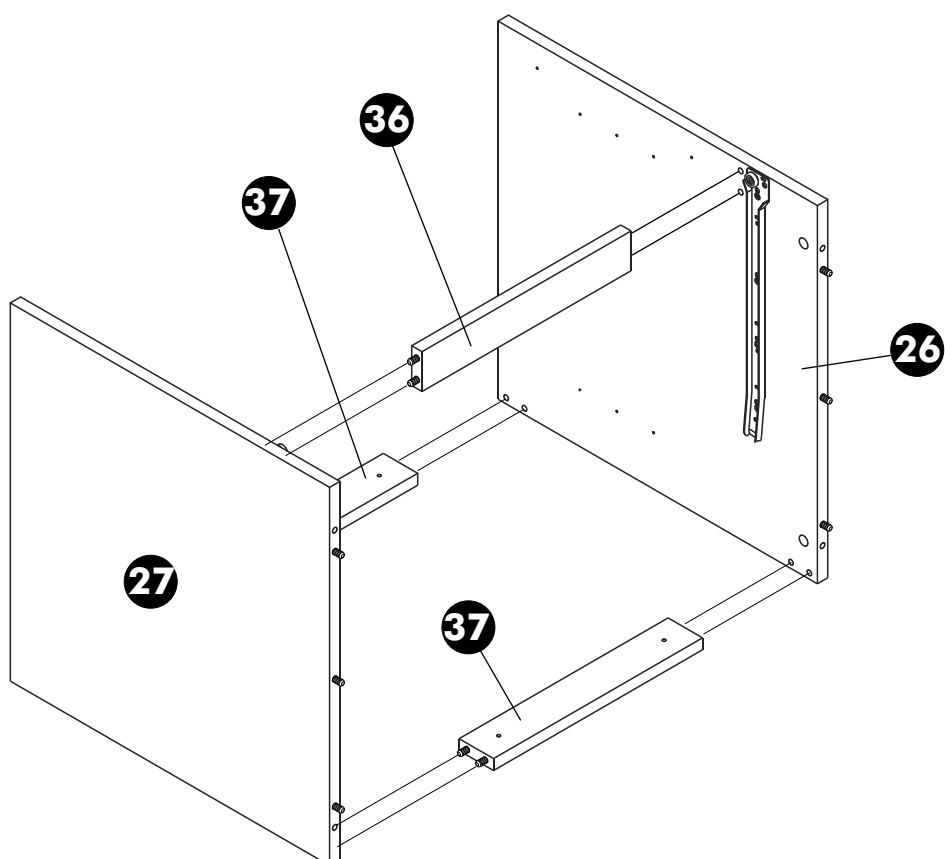

2.


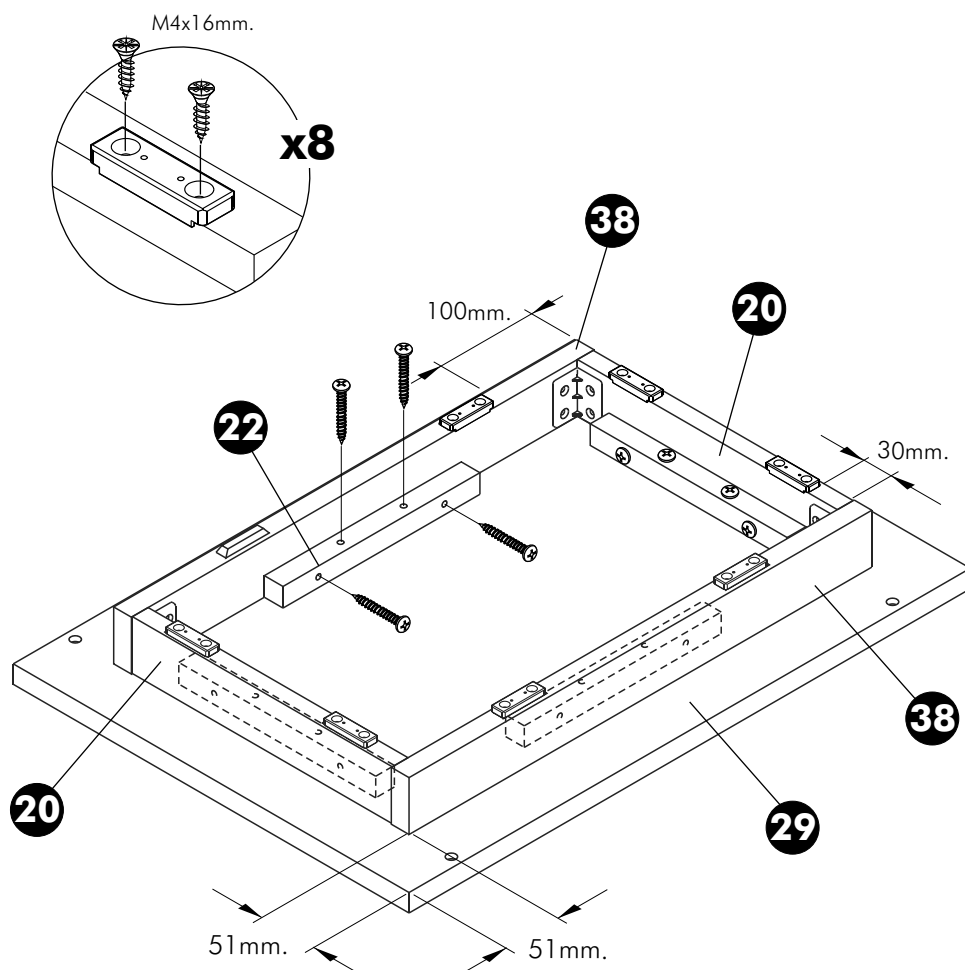


3.

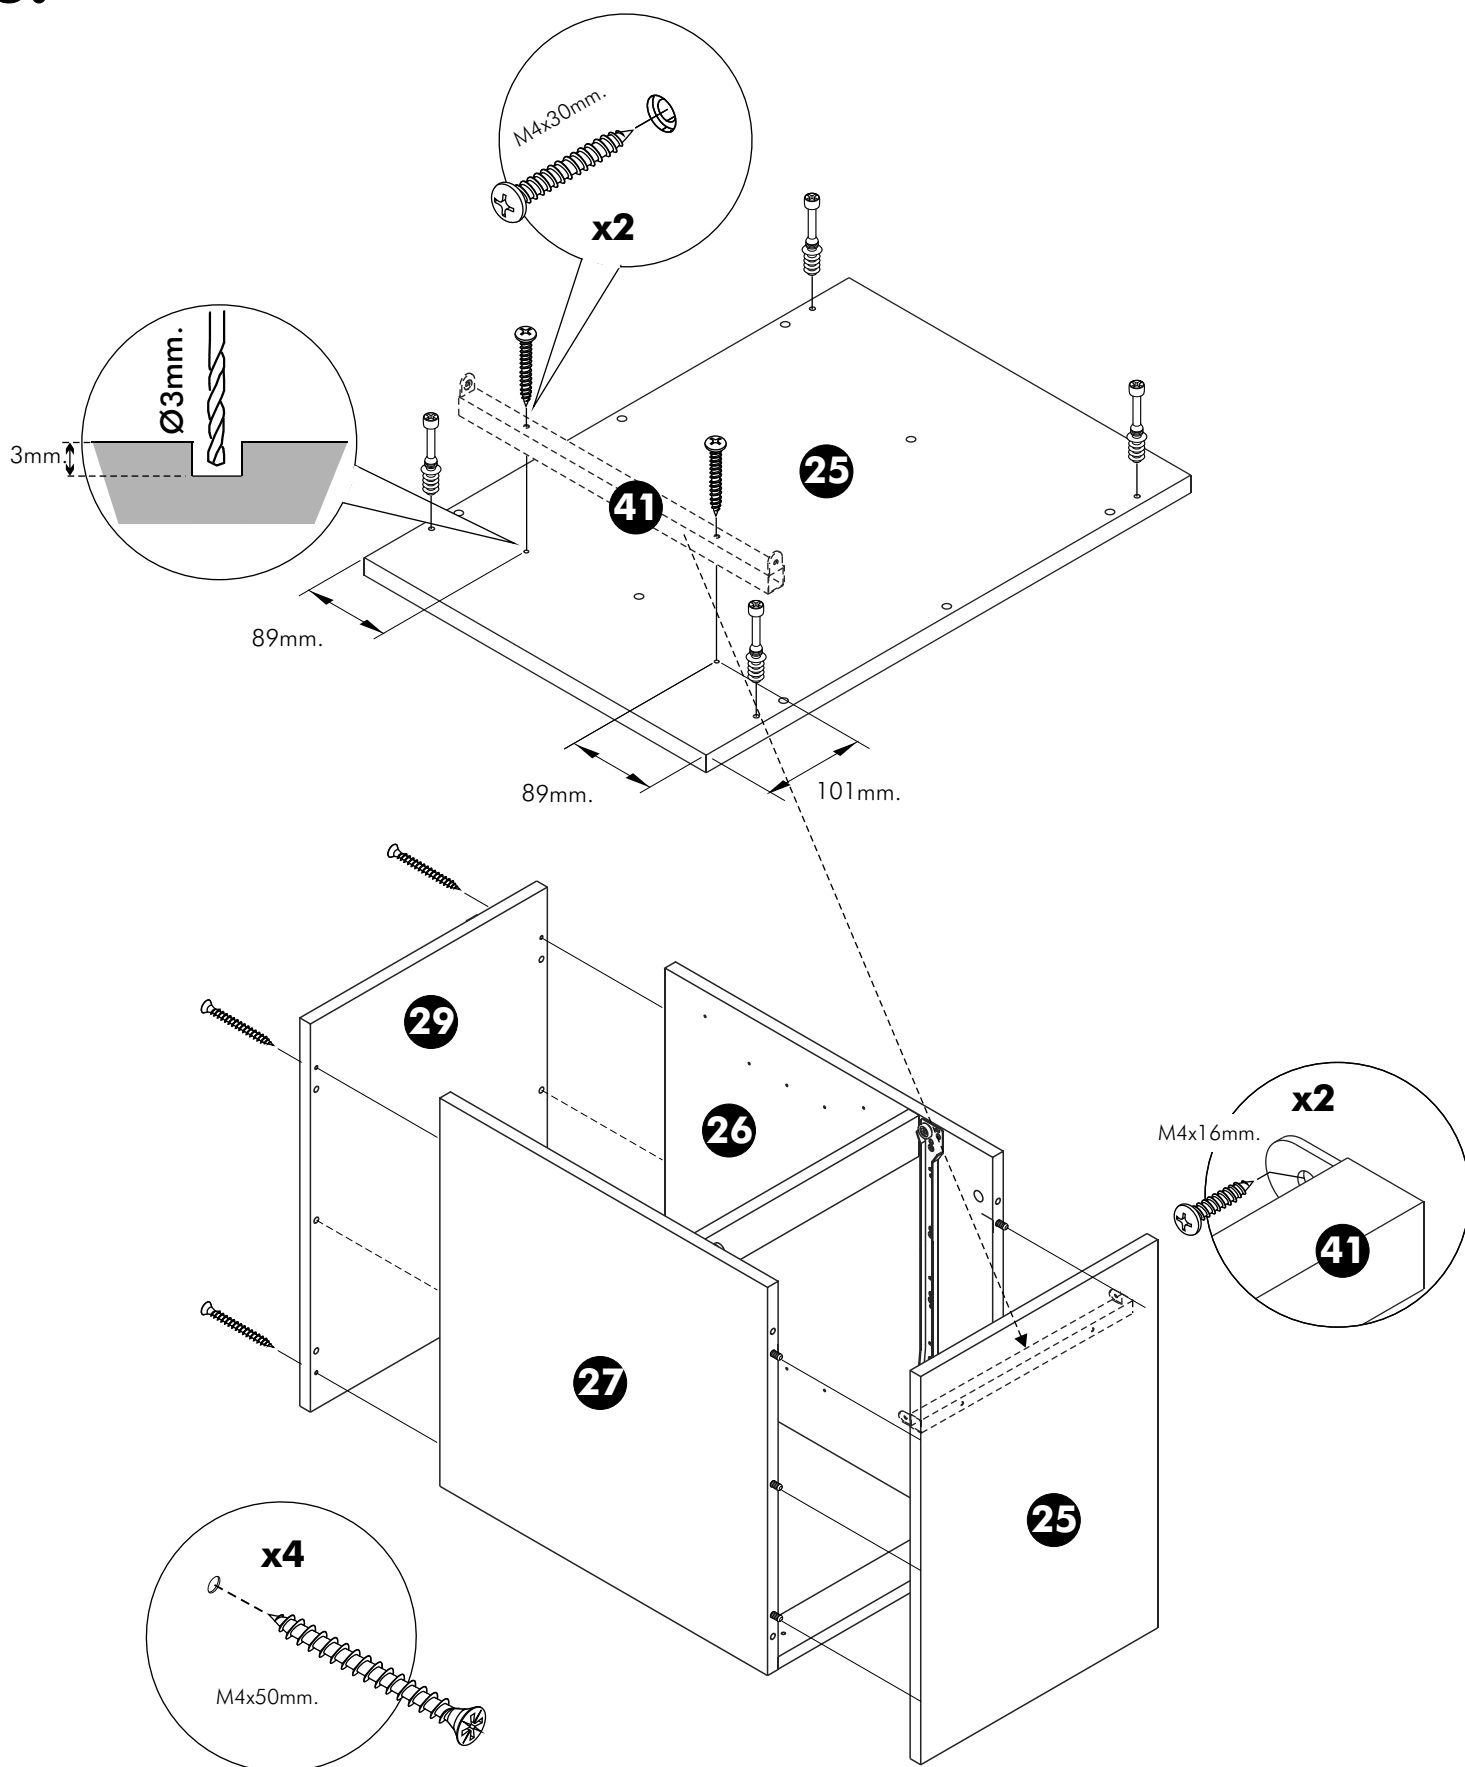




ASSEMBLY

-DRAWER SET

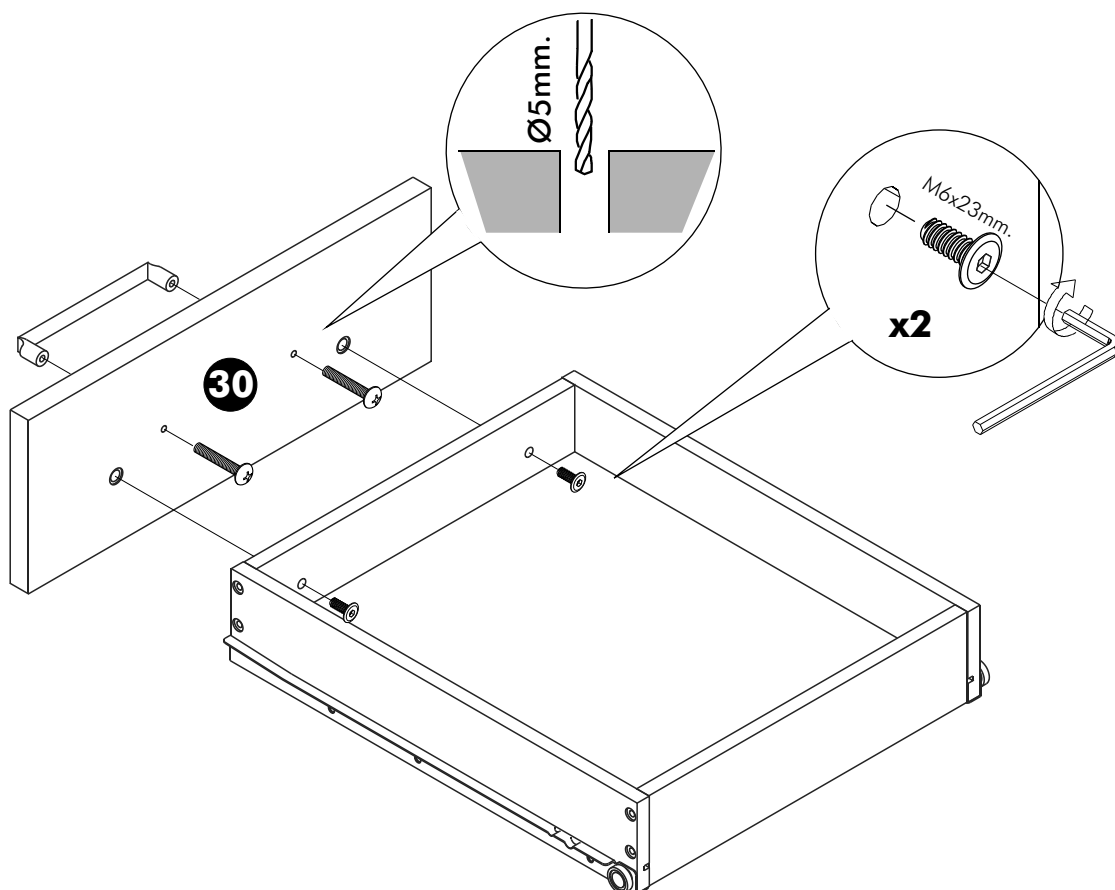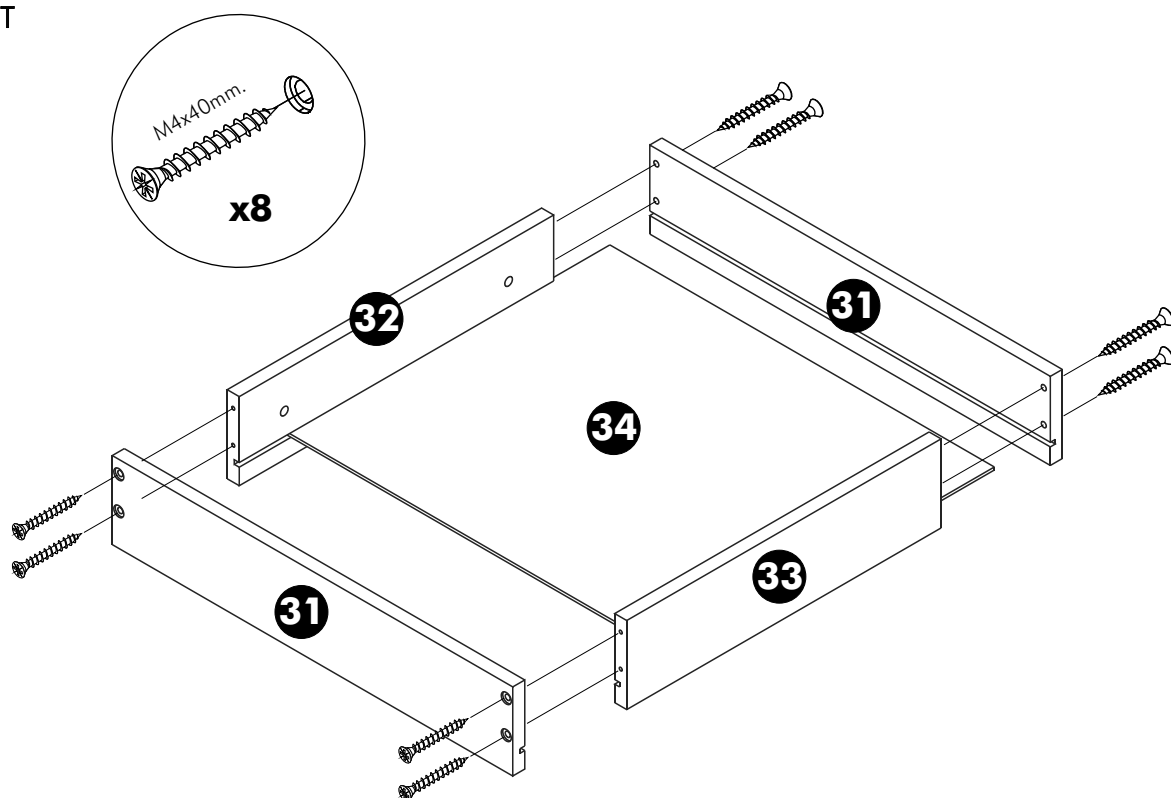


ASSEMBLY


-DRAWER&DOOR SET

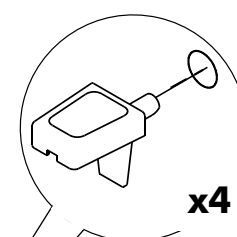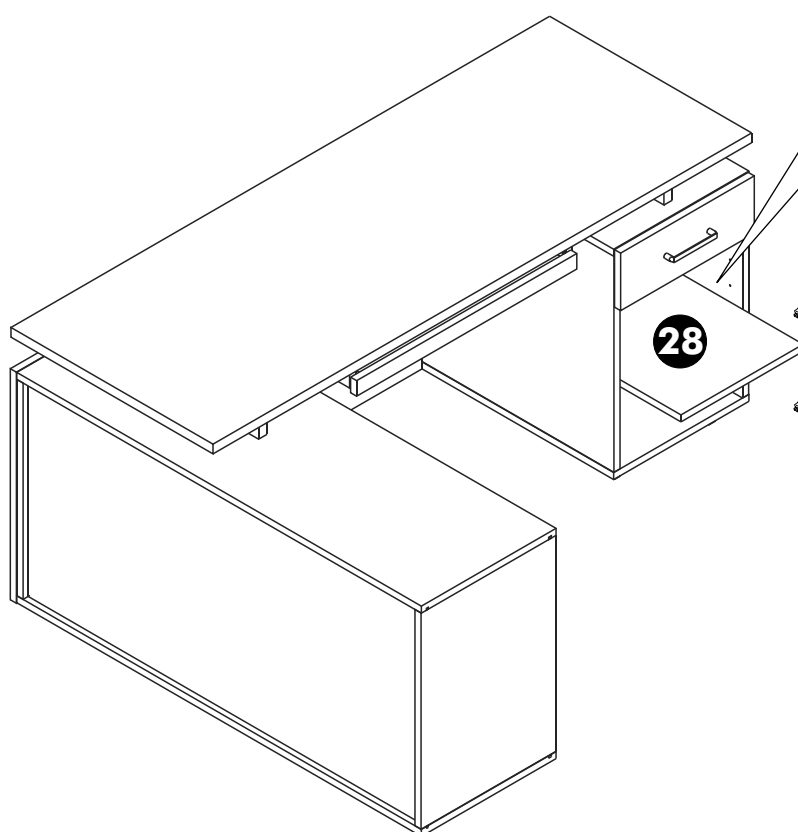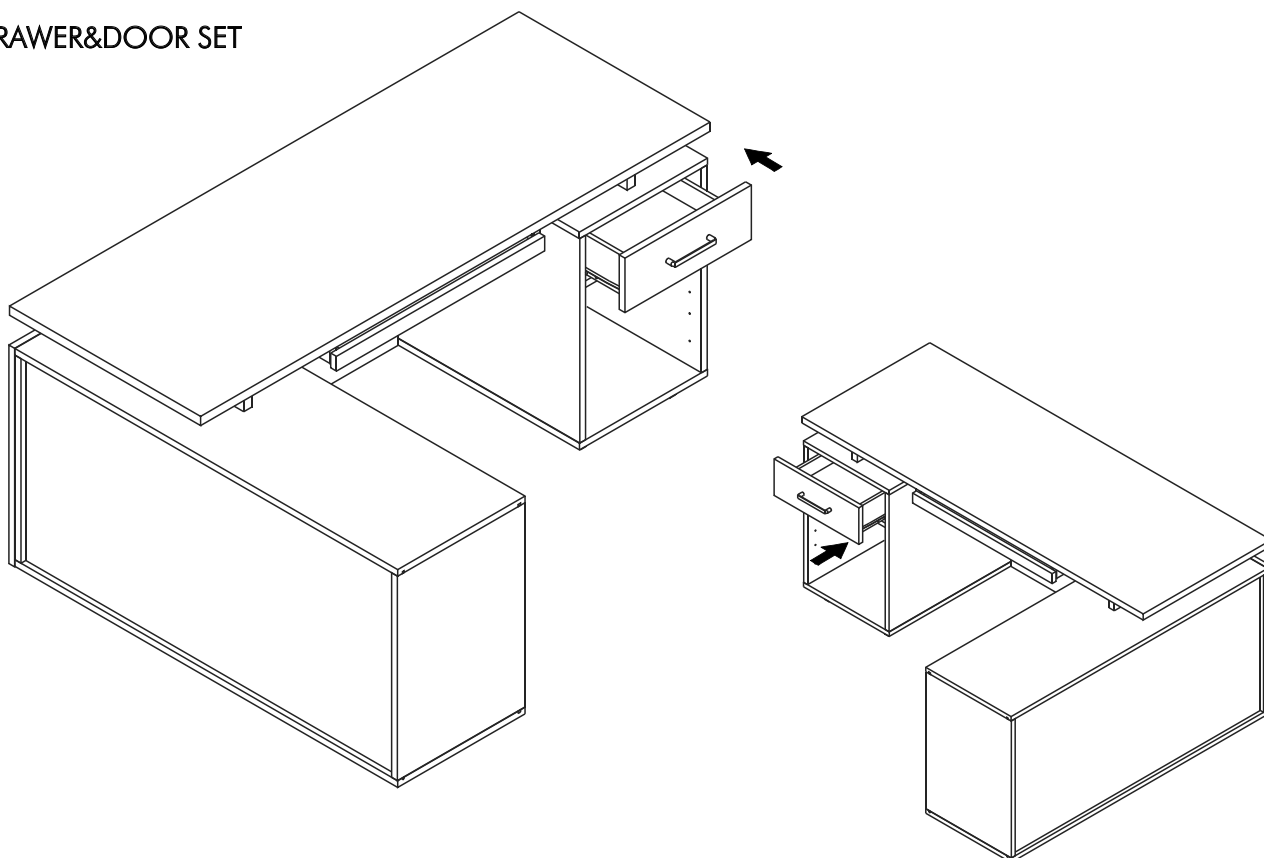

x4

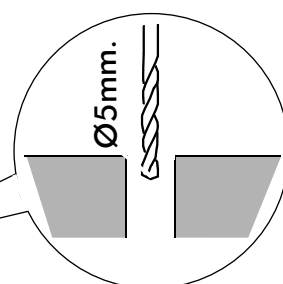

35

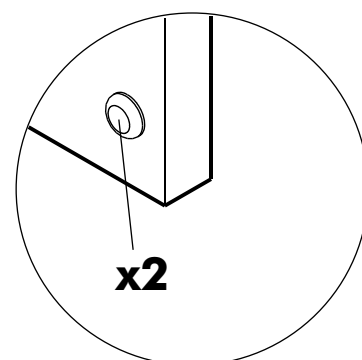

x2