


TRAVERTINE

Wardrobe Slide 180 cm.

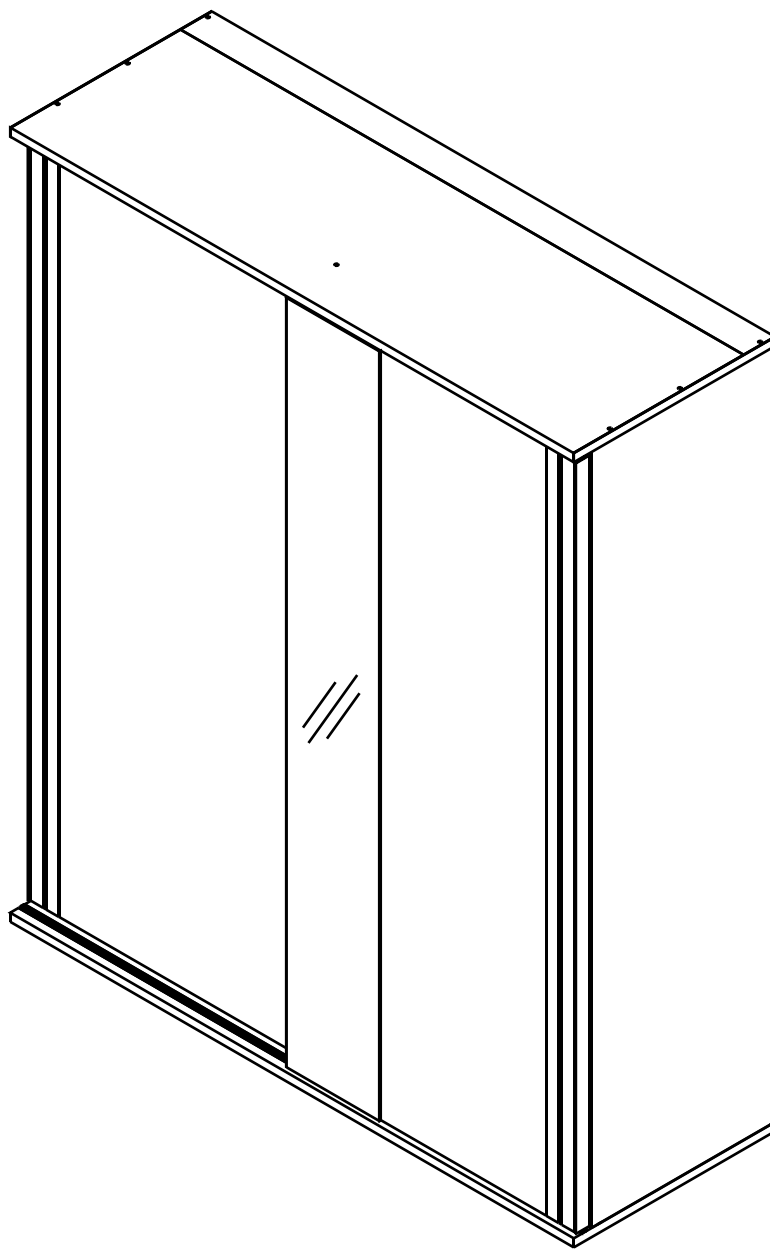

CONNECT SYSTEM

1

2

(Connecting bolts)

3

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓

↑

CORRECT

✗

WRONG

EQ

EQ

1 Pc.

≤ 190mm.

40mm.

40mm.

2 Pcs.

≥ 191-850mm.

100mm.

EQ

EQ

100mm.

3 Pcs.

> 850-2000mm.

100mm.

EQ

EQ

EQ

100mm.

4 Pcs.

> 2001mm.

OUT

IN

M4x16mm.

i

40mm.

✗

EQ

✓


M3.5x13mm.

1

2

HARDWARE


-BODY SET




x 23



x 23




x 36

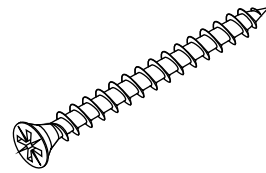


M4x50mm.

x 16



M4x40mm.

x 1



M4x35mm.

x 8



x 3




M4x25mm.

x 15



Ø 20mm.(5x23)

x 2



x 4




M3.5x13mm.

x 8



M4x16mm.

x 16



x 1




x 12




Ø11mm.(GREY)

x 4



x 2




x 4



M3.5x20mm.

x 8



x 2



M4x16mm.

x 34



M4x13mm.

x 12




Ø 5x18 mm.

x 3




Ø11mm.(SAND STONE)

x 4




x 8

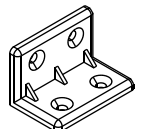

x 4

-DRAWER SET

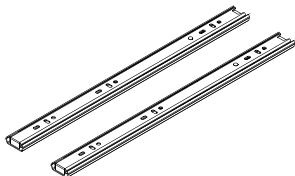


x 4




M3.5x13mm.

x 48

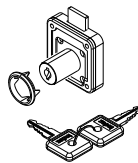

x 1



x 1



M4x1/2"

x 2



M3.5x20mm.

x 4




TFL4 M6x23

x 14




x 1




M4x40mm.

x 40

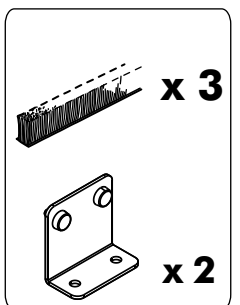


x 3




x 2

-DOOR SET



x 4




x 4



M4x16mm.

x 36



M4x30mm.

x 20




M5x1/2"

x 24


ASSEMBLY

-BODY SET


1.

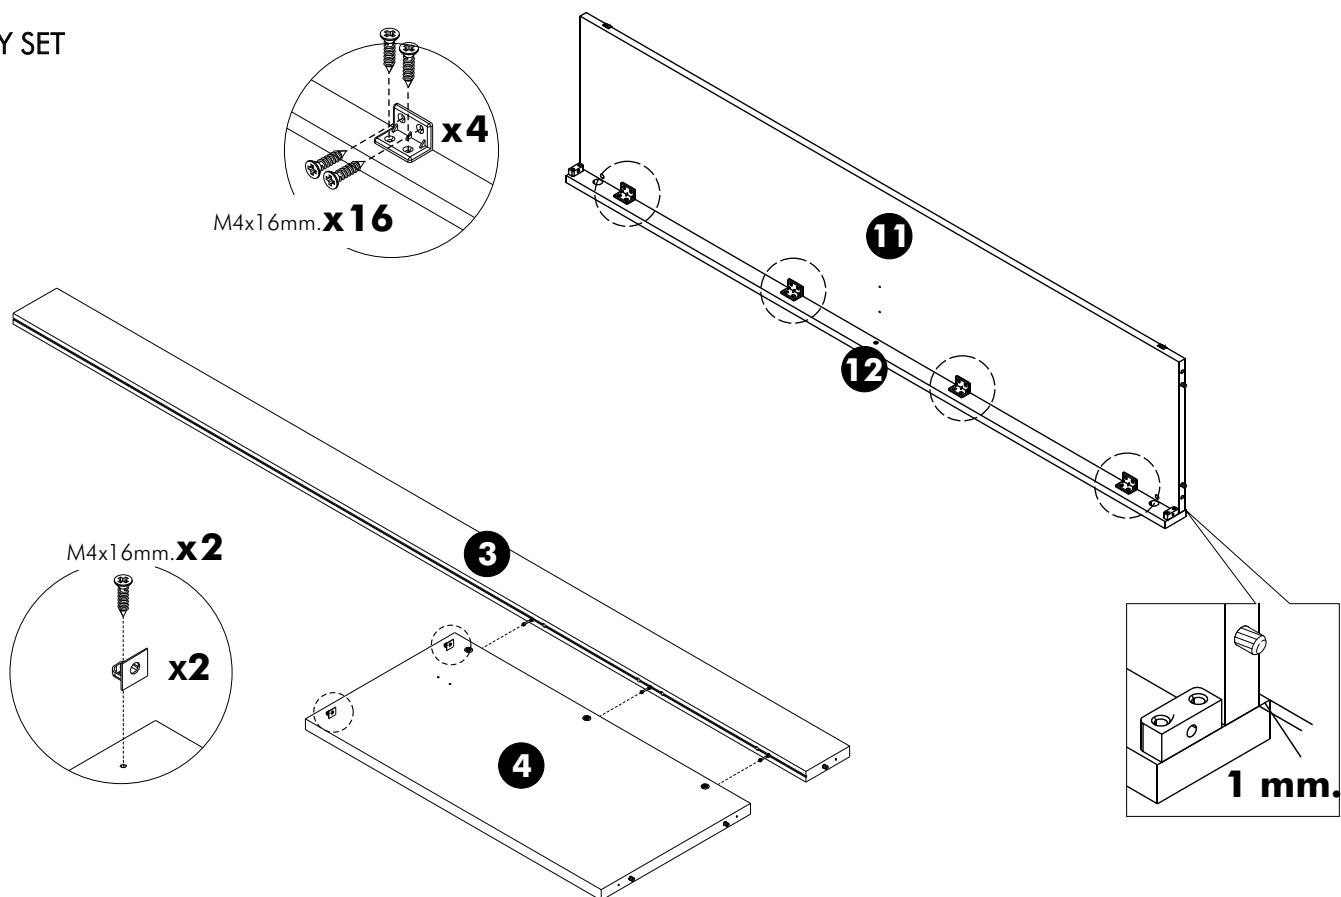


2.

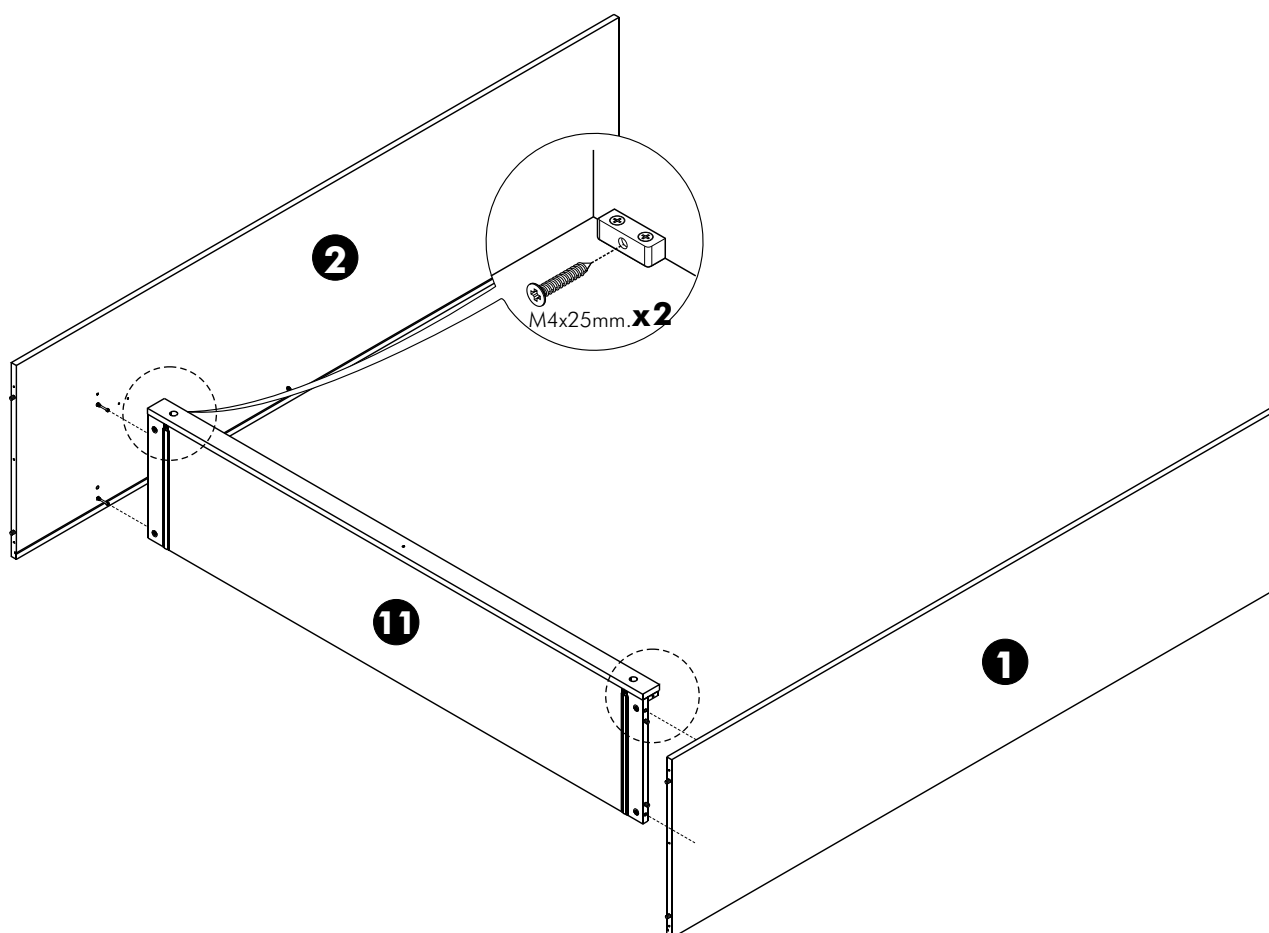


3.

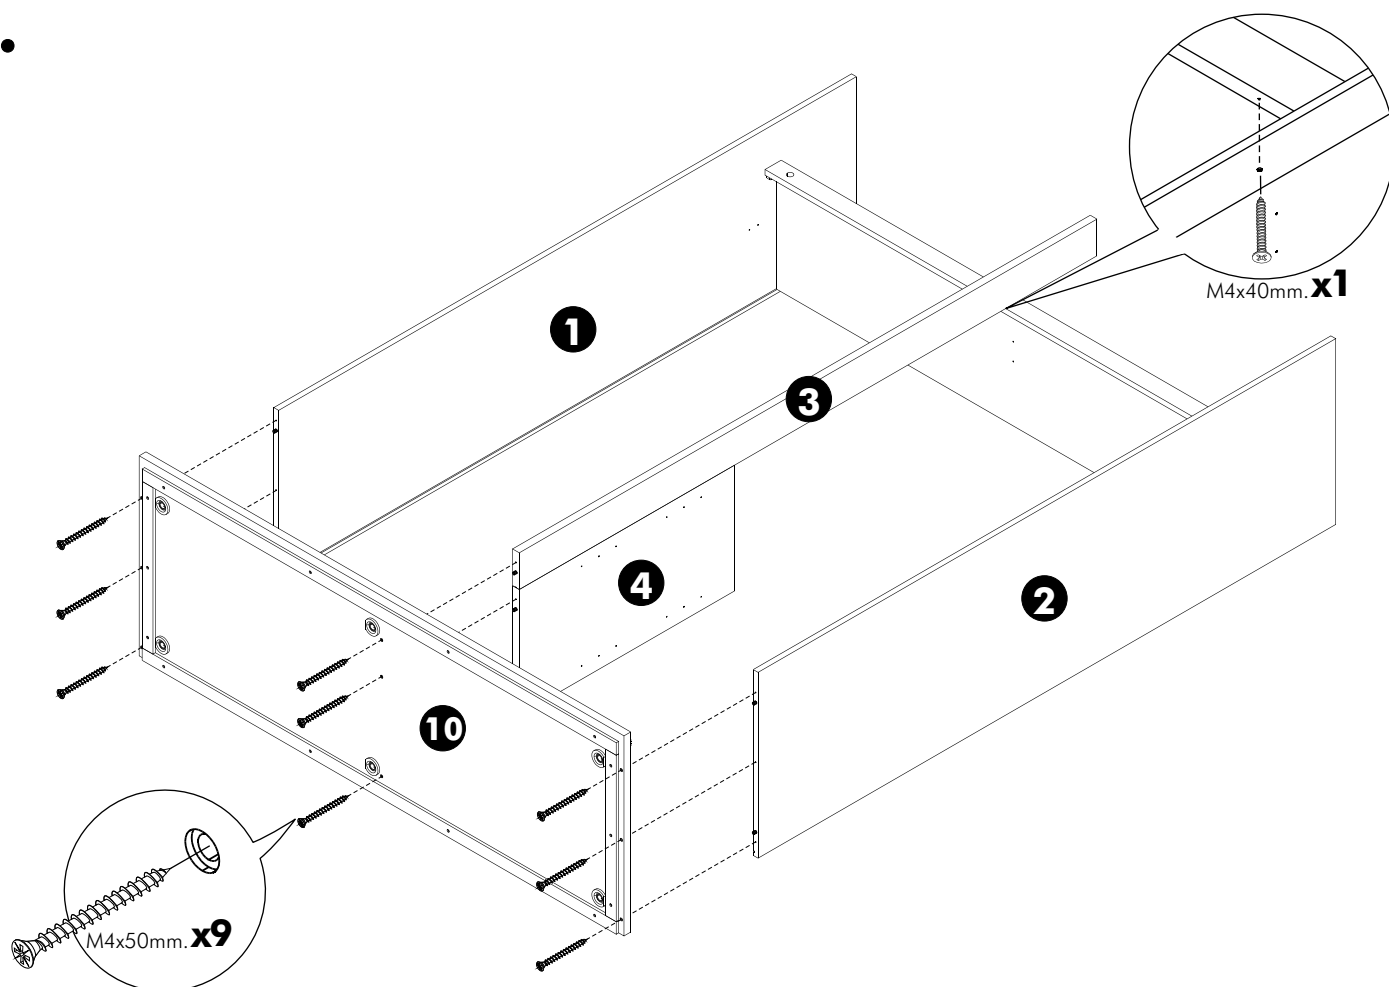


4.

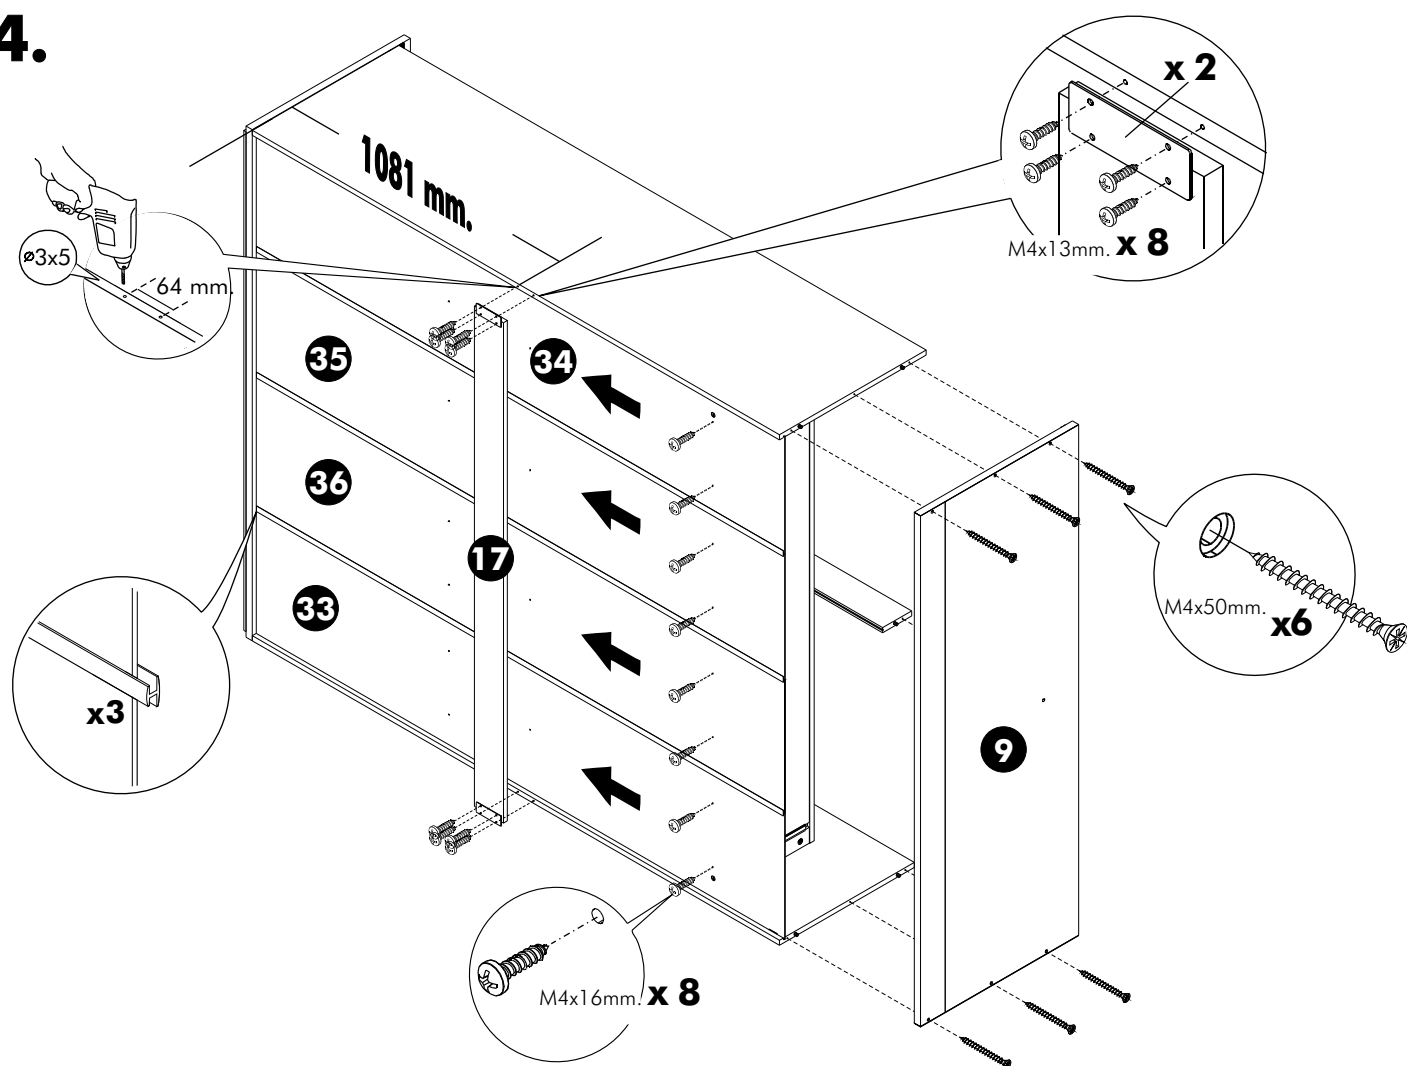



5.

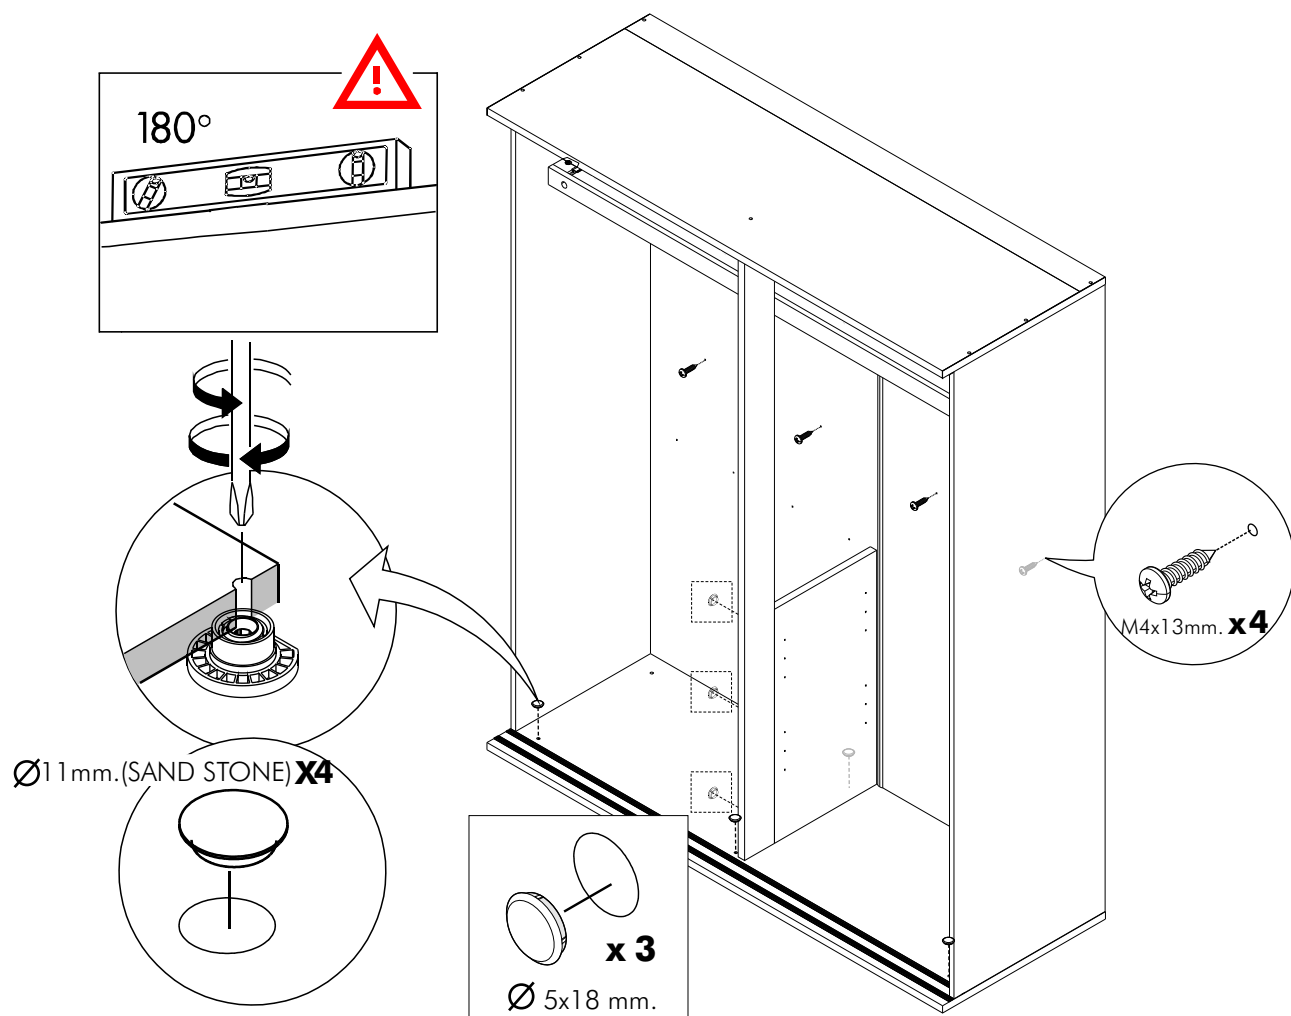






6.

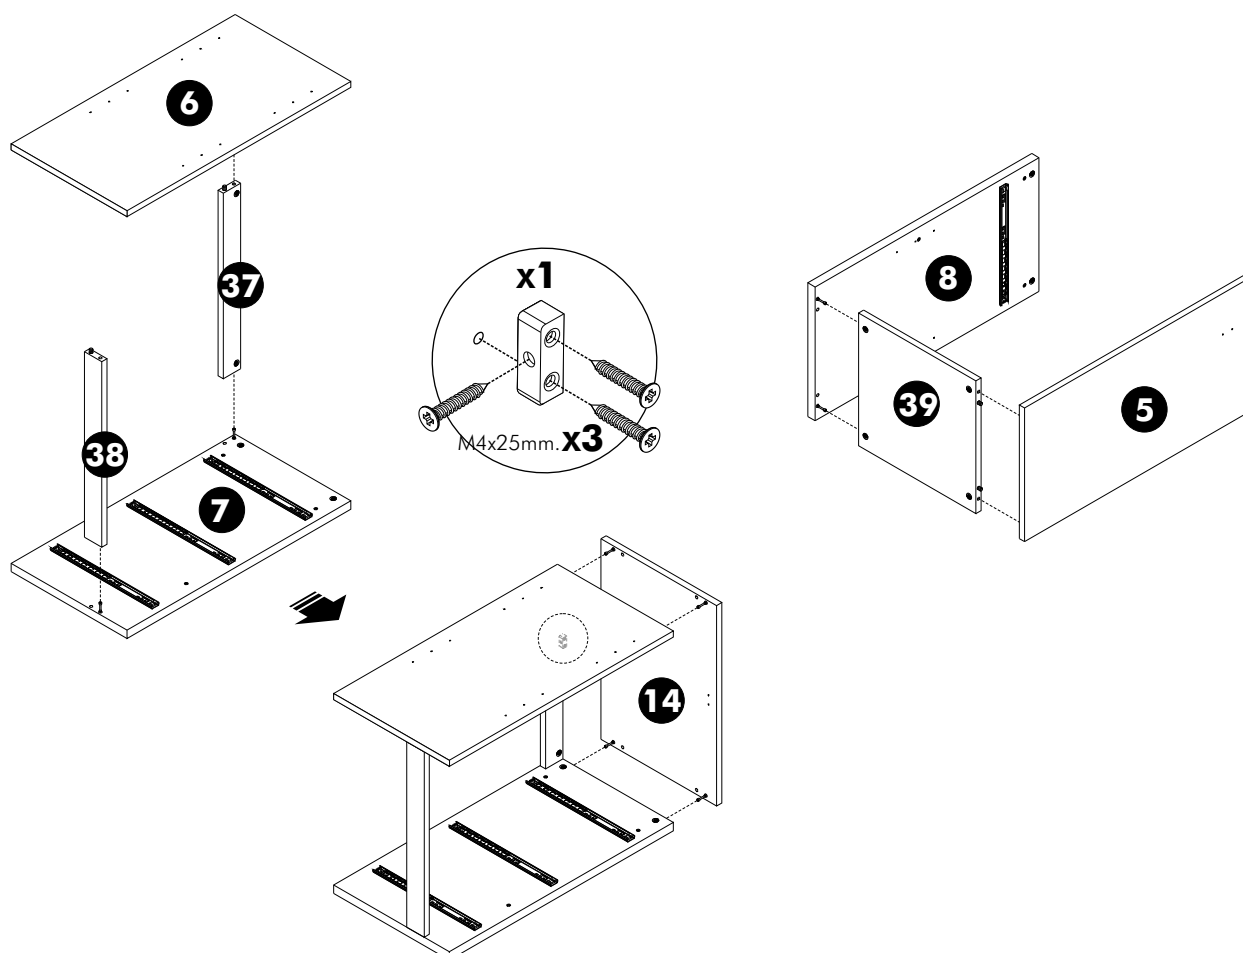





7.

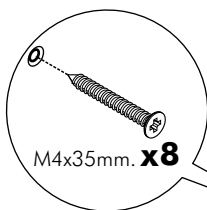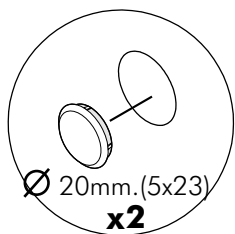


Ø11mm.(GREY) **x4**

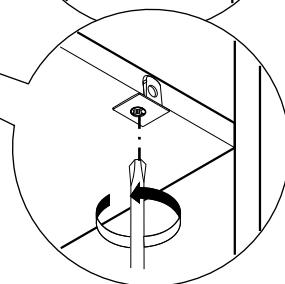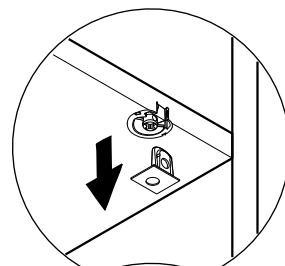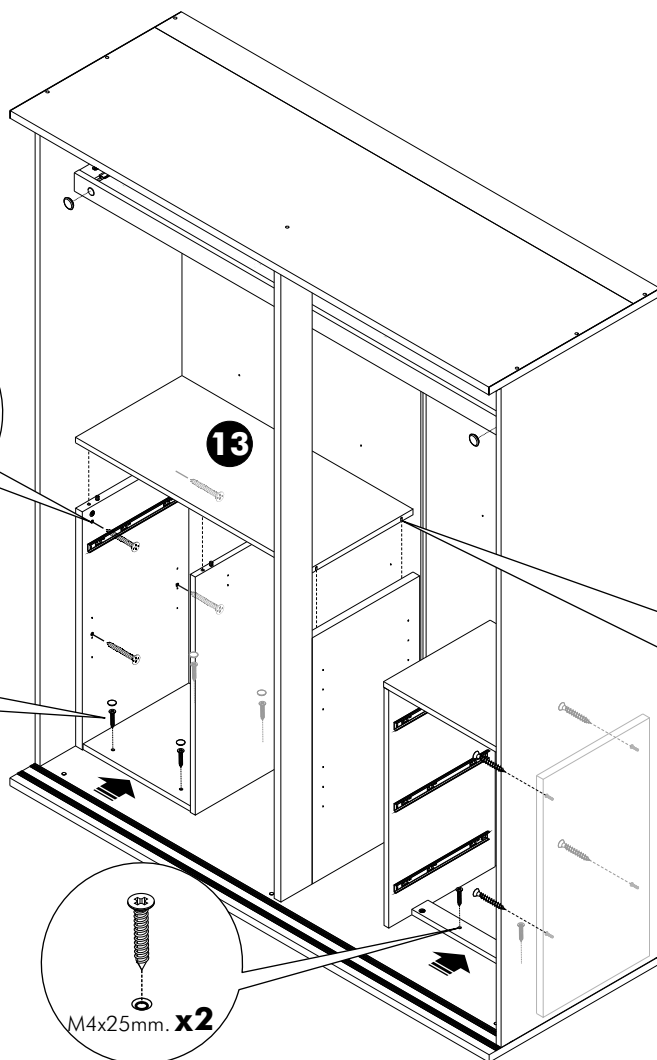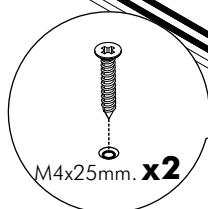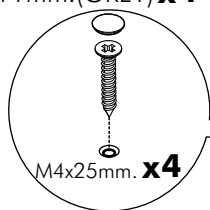

8.

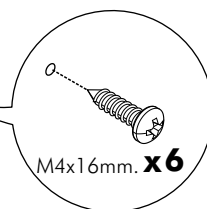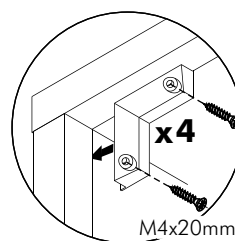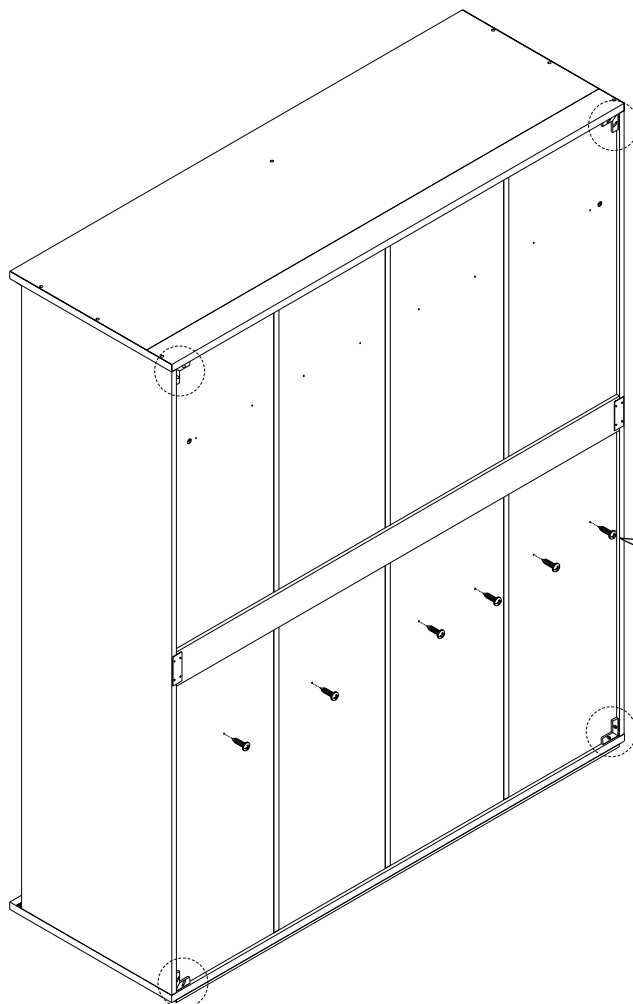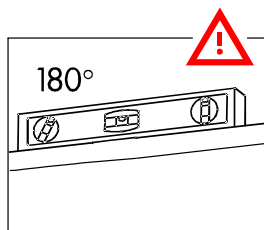




9.

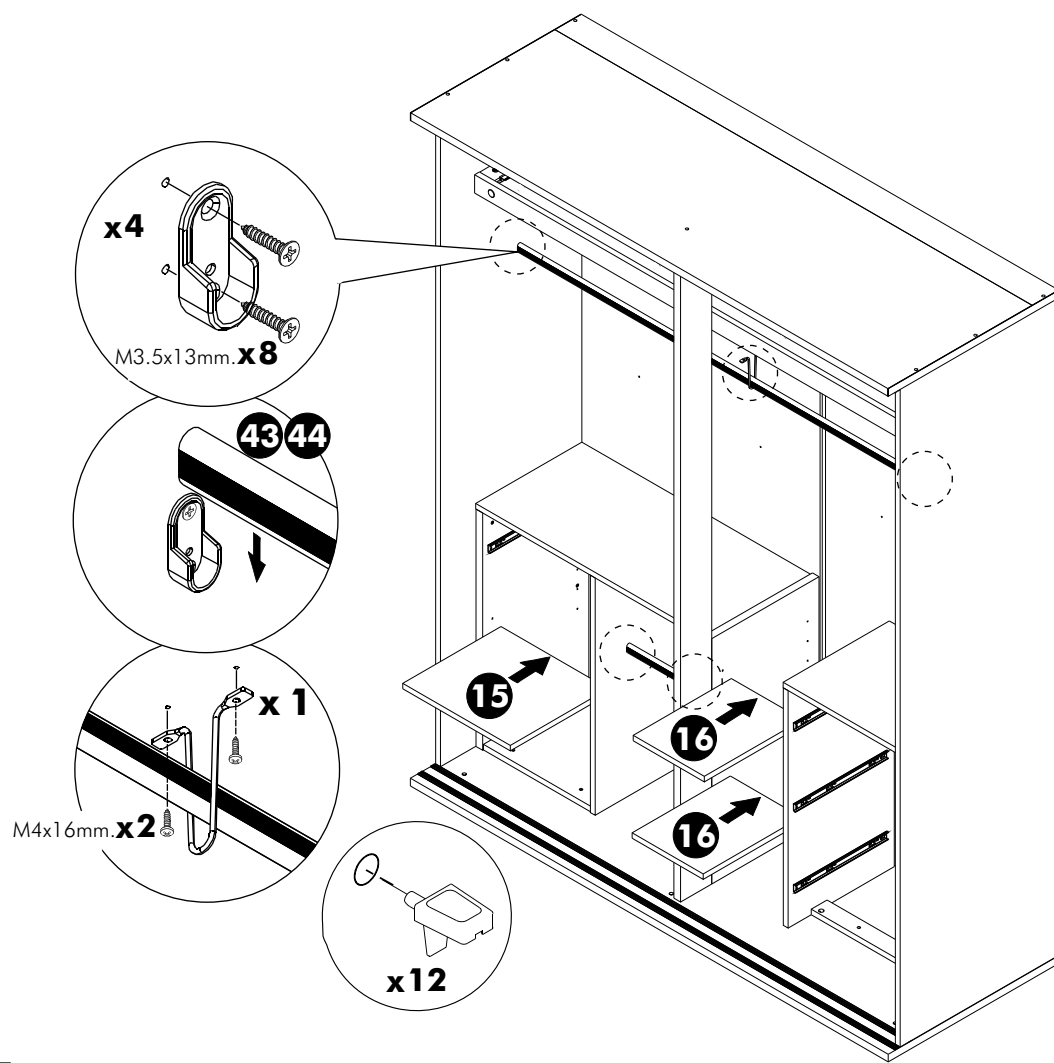

ASSEMBLY

-DRAWER SET

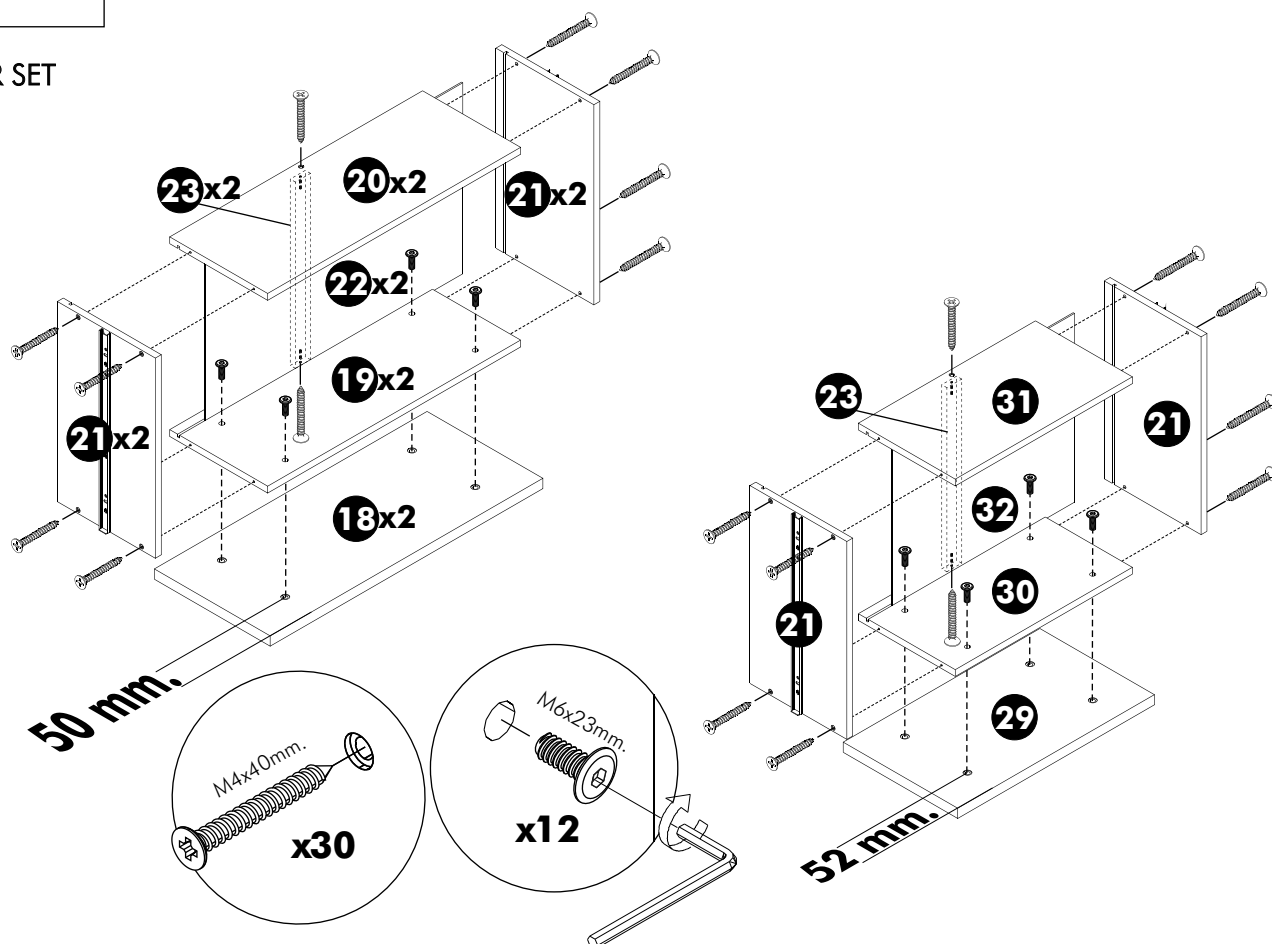

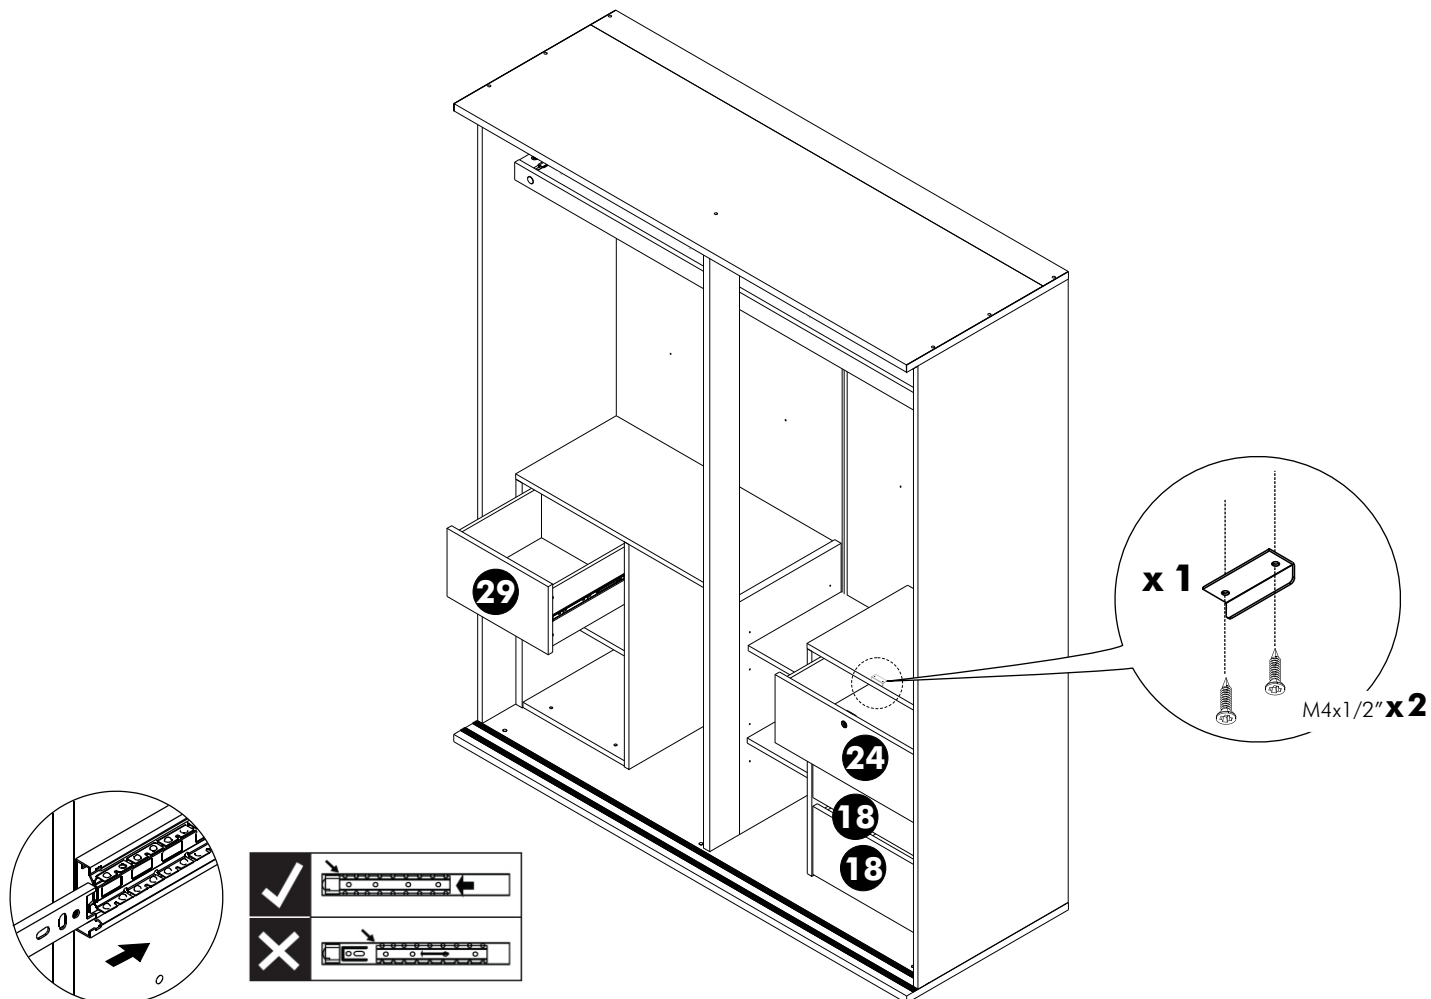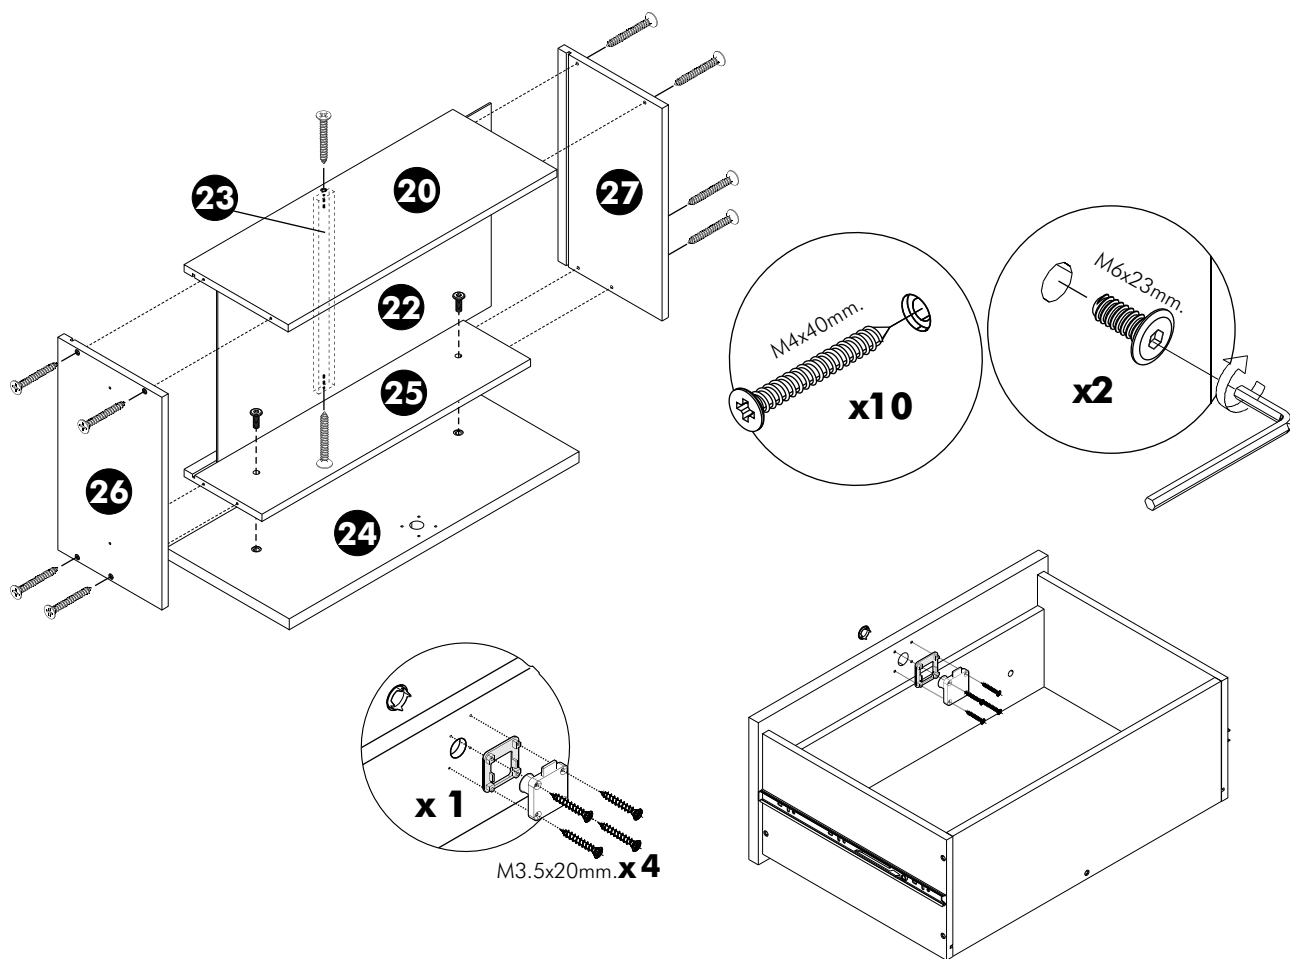

ASSEMBLY

-DOOR SET

