
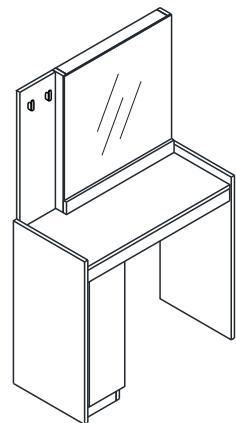



ESSENCE

Dressing table

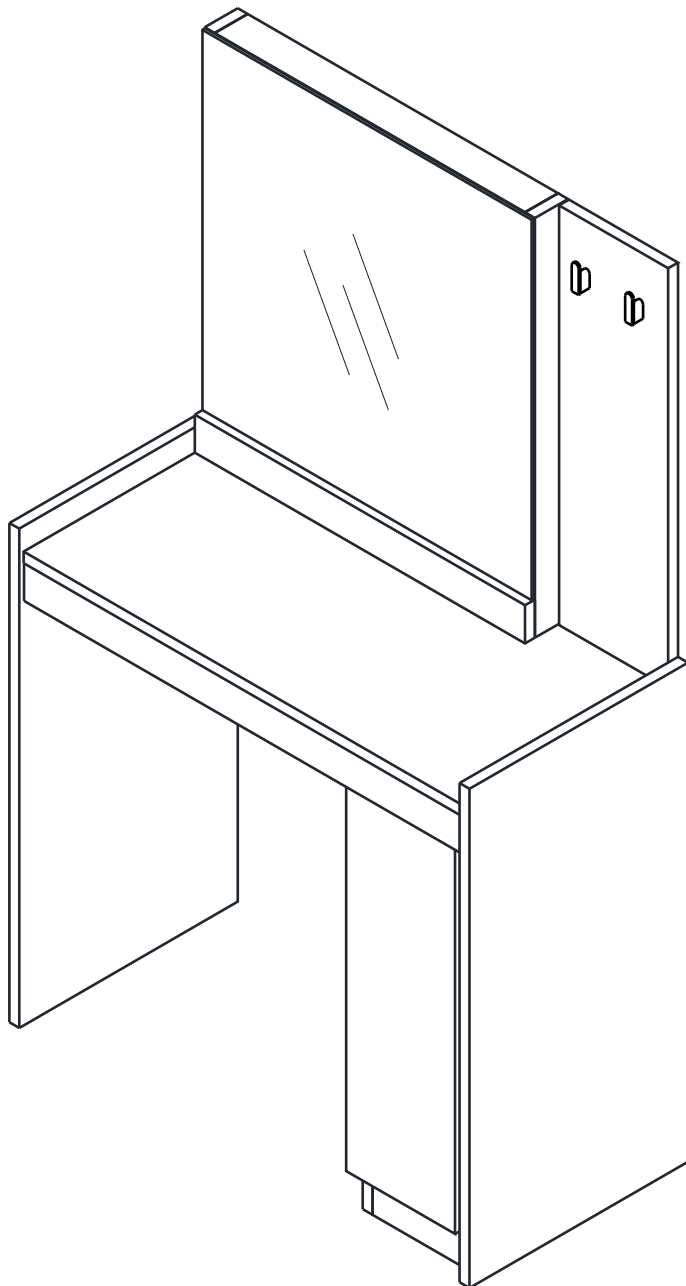


CONNECT SYSTEM

1

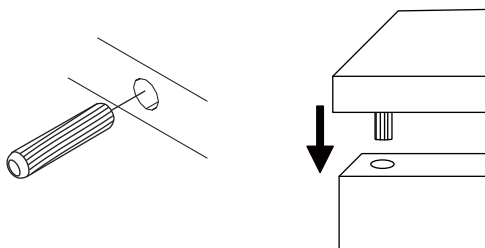


2

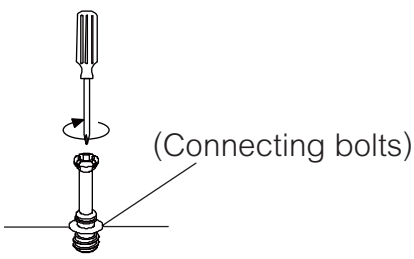

(Connecting bolts)


3

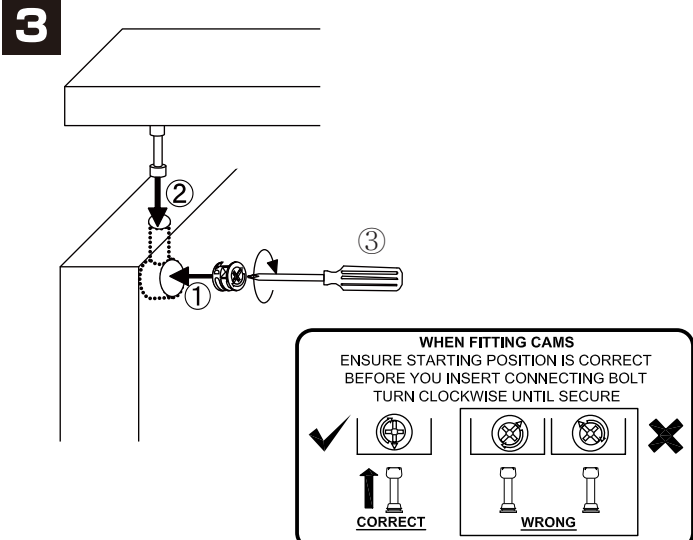


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE


CORRECT

WRONG

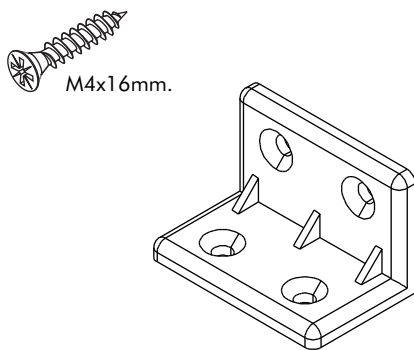


M4x16mm.

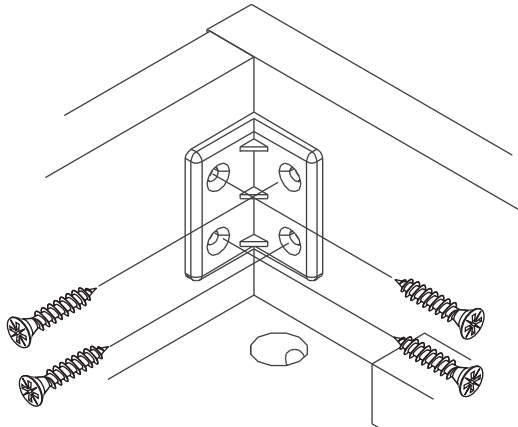

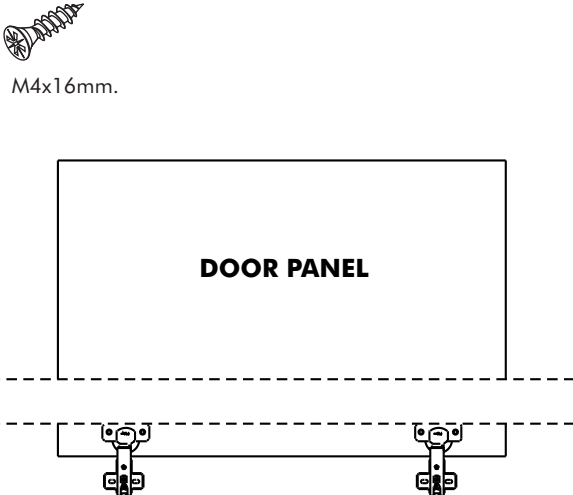

M4x16mm.




DOOR PANEL

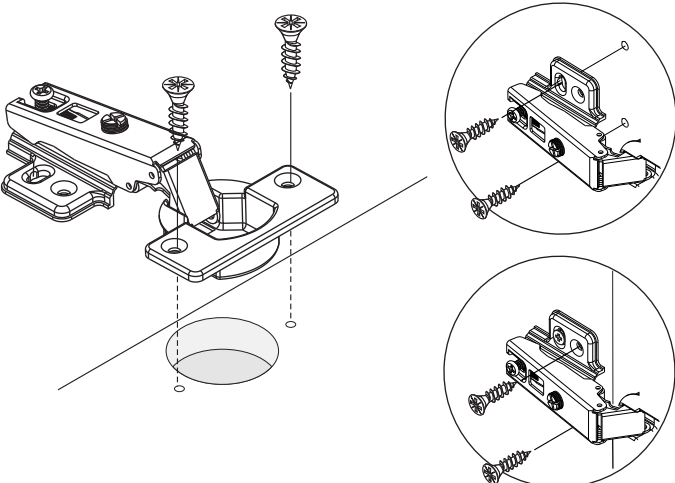


CONNECT SYSTEM




M3.5x20mm.

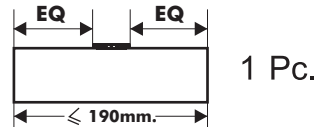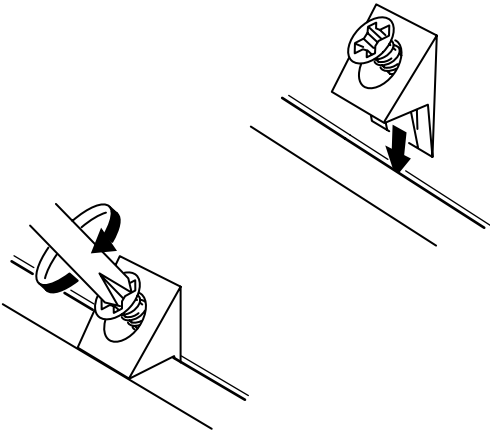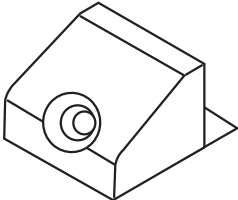


1 Pc.

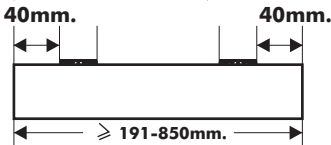


2 Pcs.



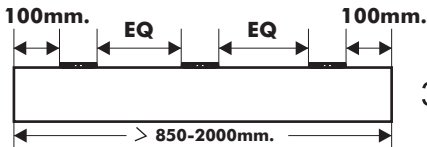


3 Pcs.

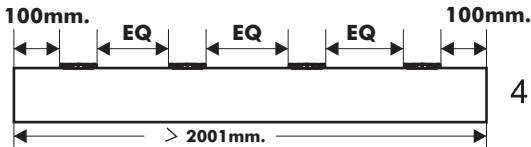


4 Pcs.

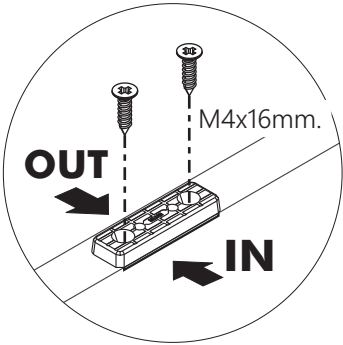

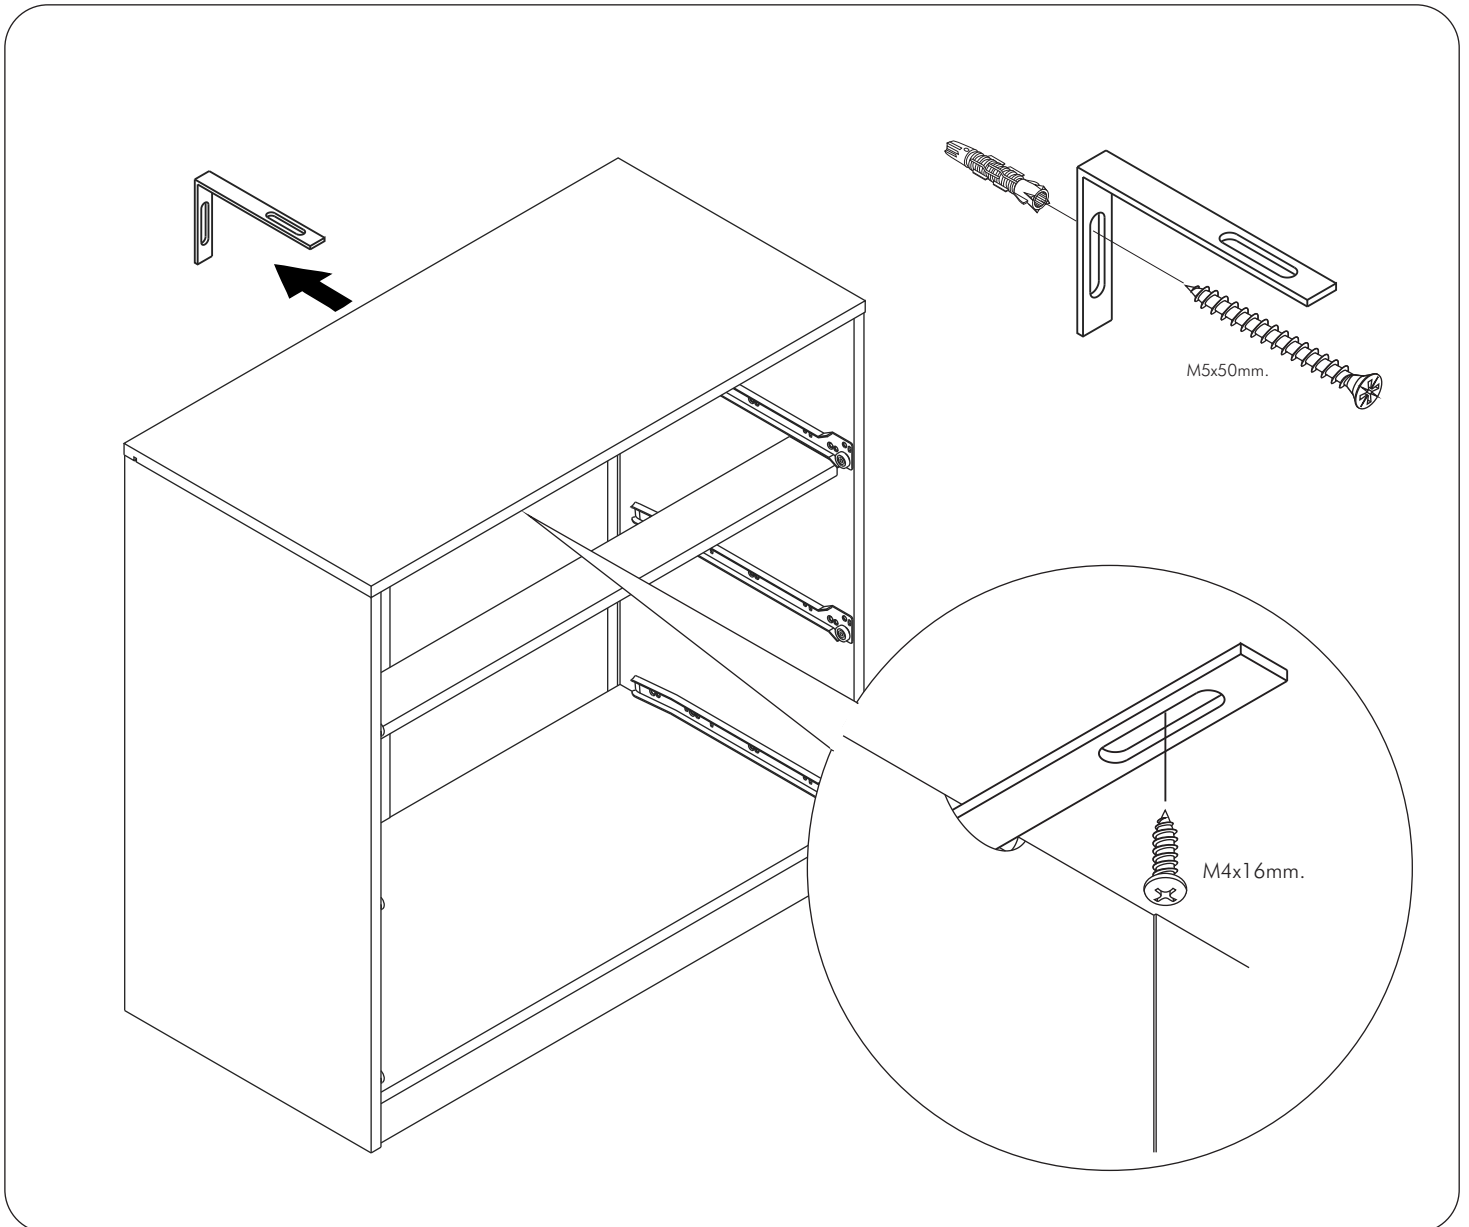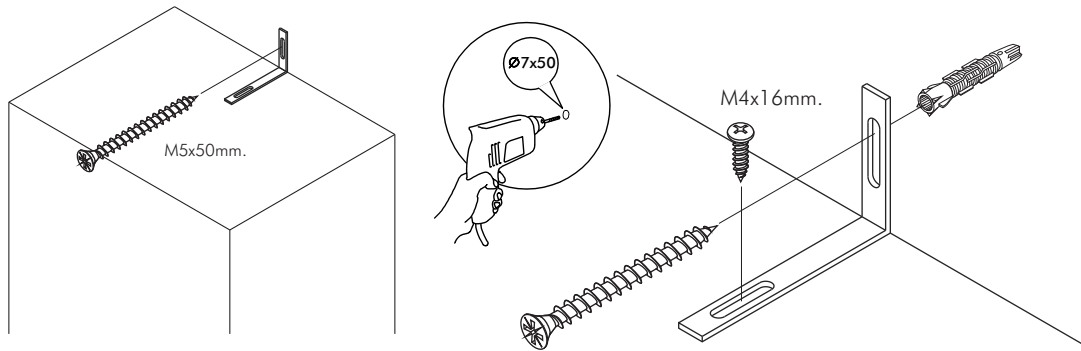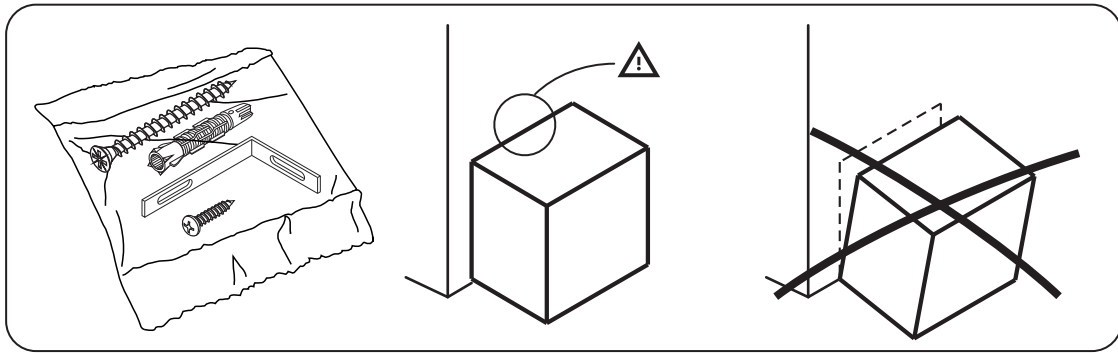

HARDWARE

-BODY SET




x 7




x 7

19mm.




#8x35


x 14

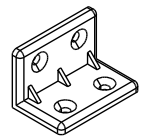


x 8




x 8




x 4



x 2

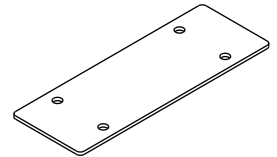


x 2



M4x25mm.

x 2



x 1



Ø 11mm.

x 2



M4x16mm.

x 56




x 4




M3.5x20mm.

x 4



x 5



x 1



M4x30mm.

x 7




M4x16mm.

x 23



M5x50mm.


x 1



M4x50mm.

x 7

-DOOR SET

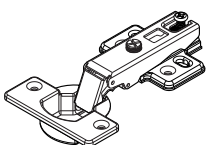

x 2



M4x16mm.

x 12




x 2


ASSEMBLY

-BODY SET

1.

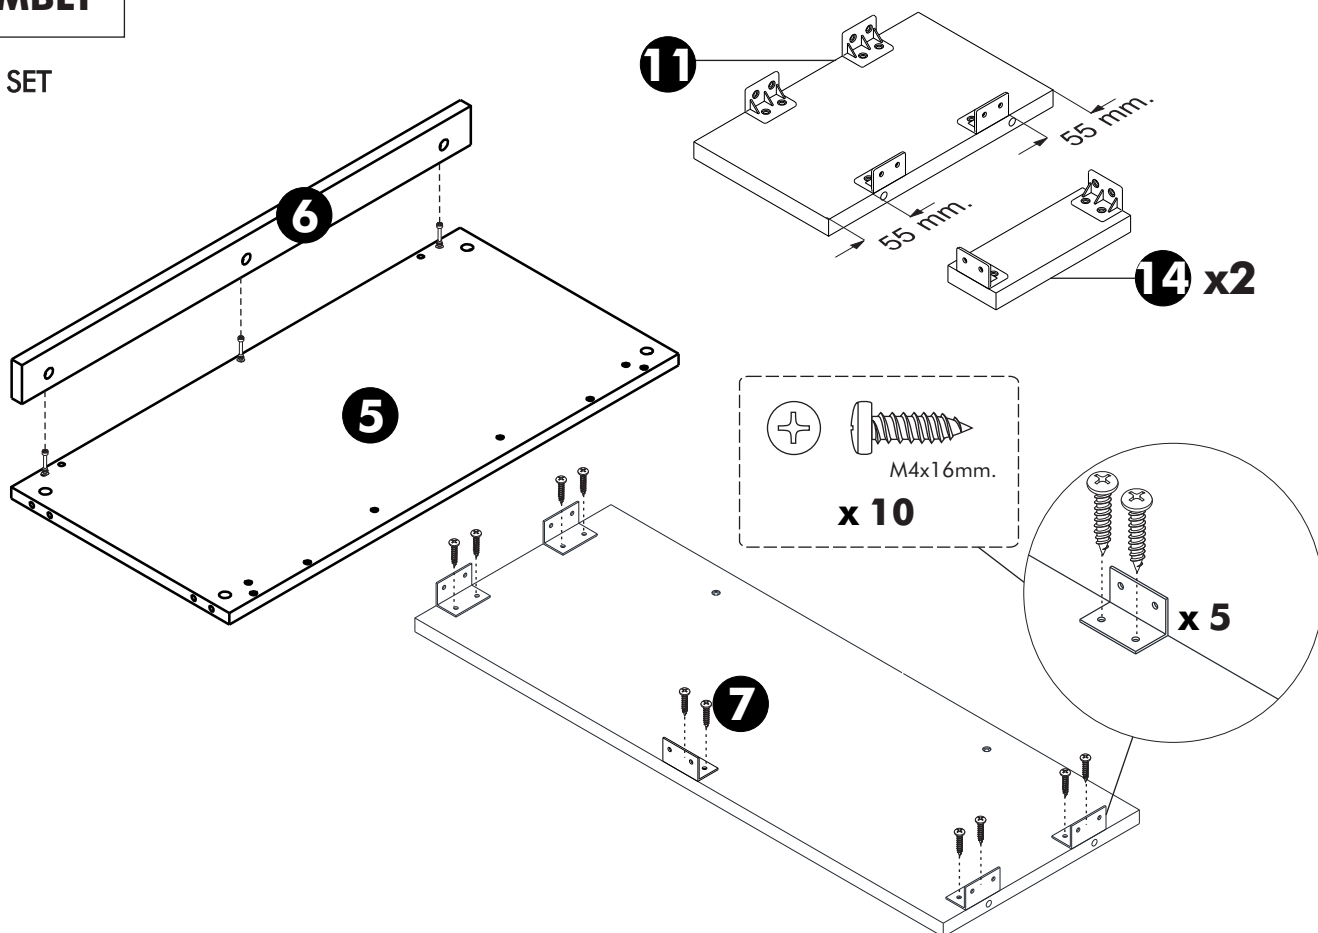


2.

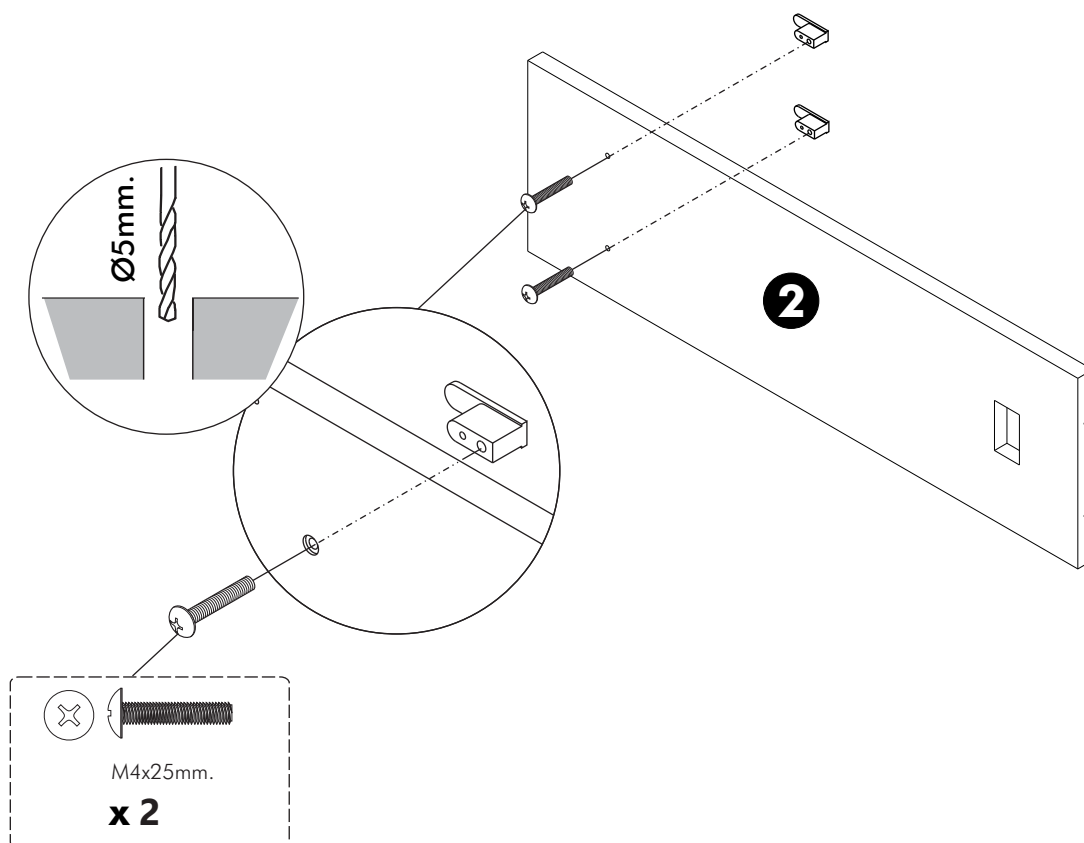


3.

(For Right)

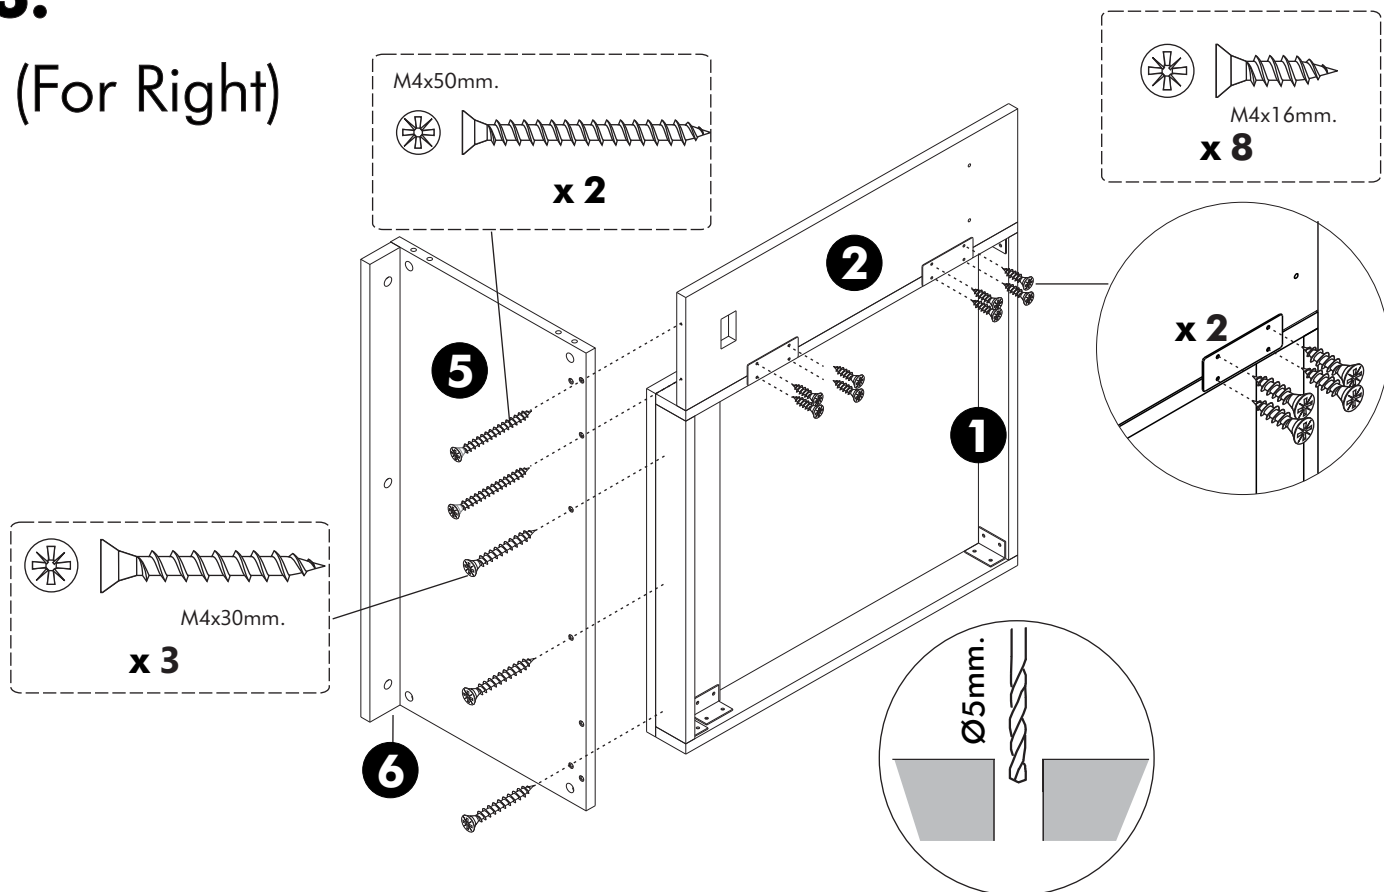


4.



(For Left)

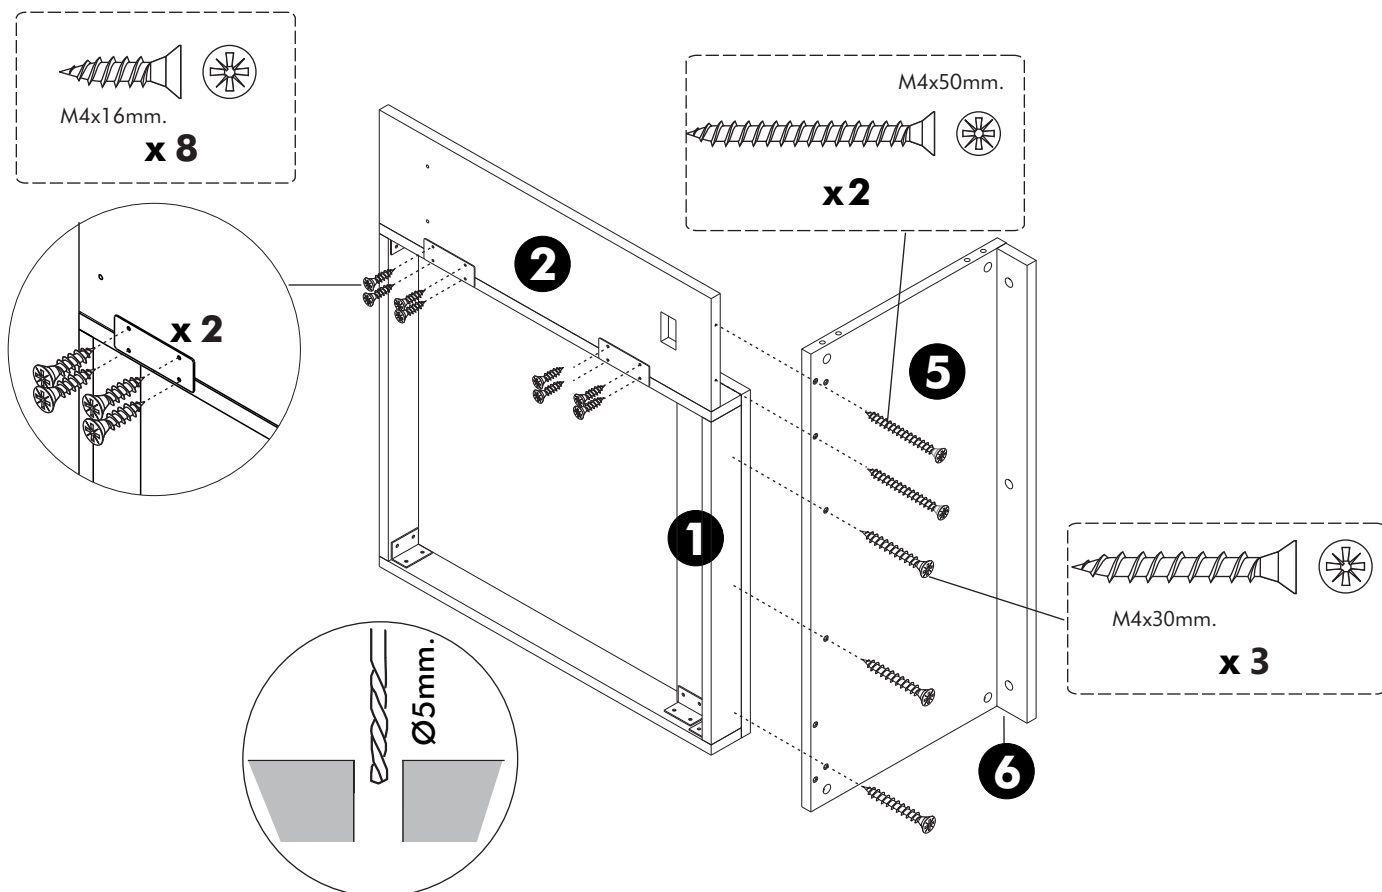

5. (For Right)

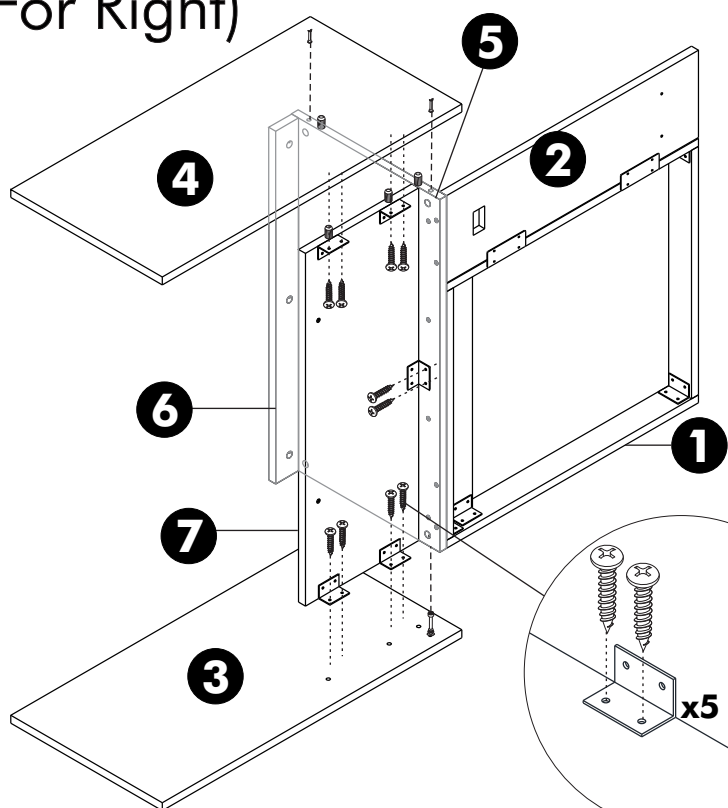




(For Left)

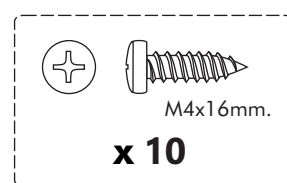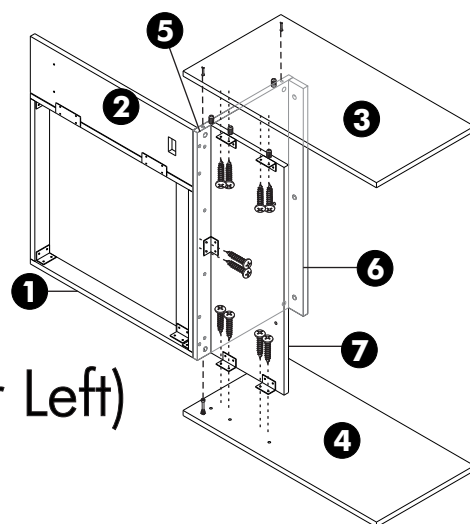


6.

ASSEMBLY

-DOOR SET

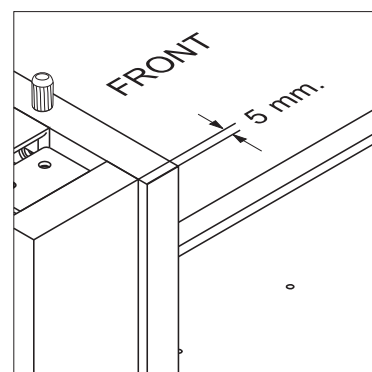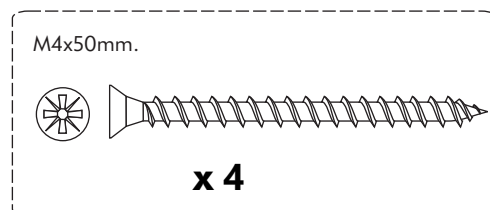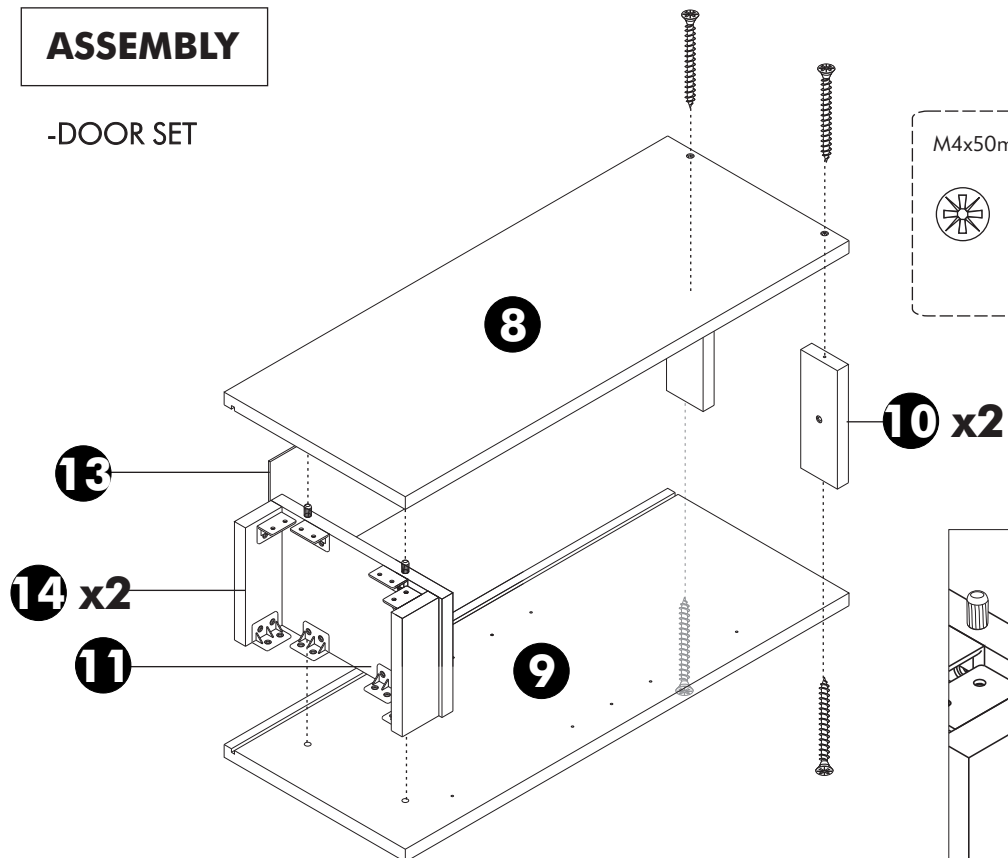


7.

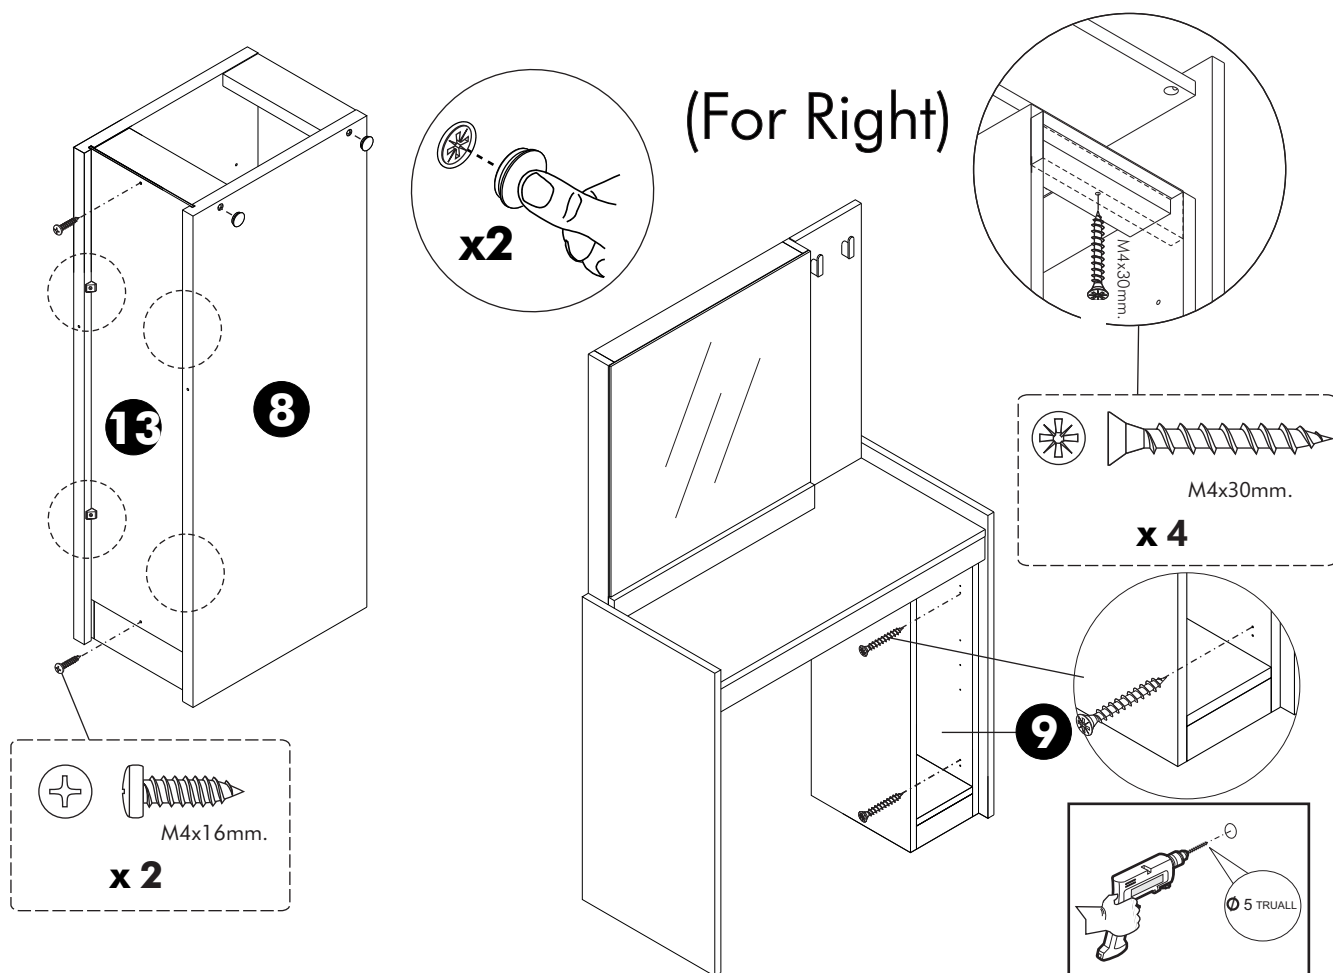


8.

(For Left)

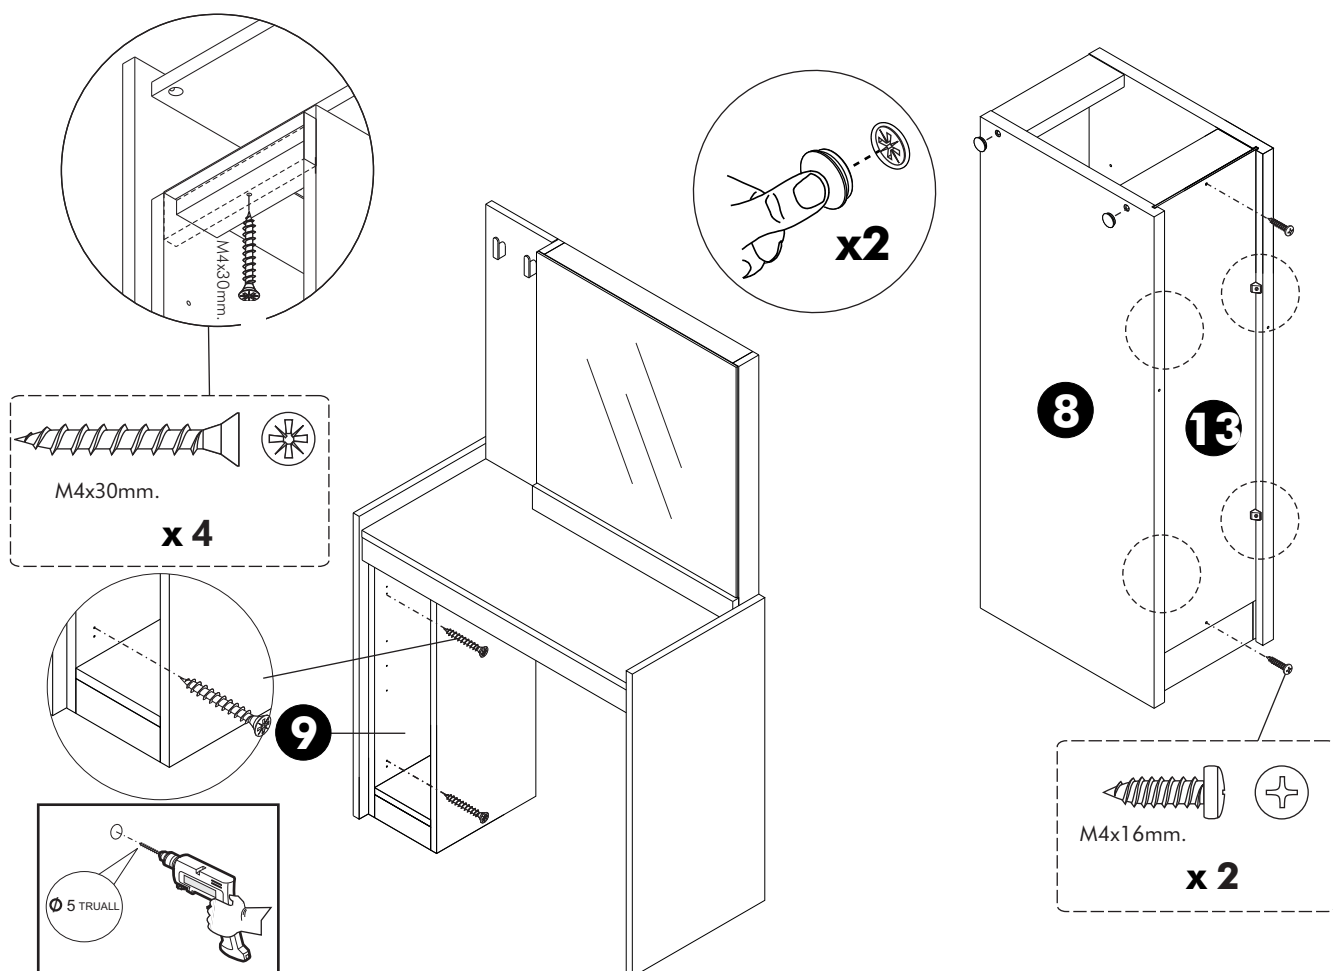

9.

(For Right)

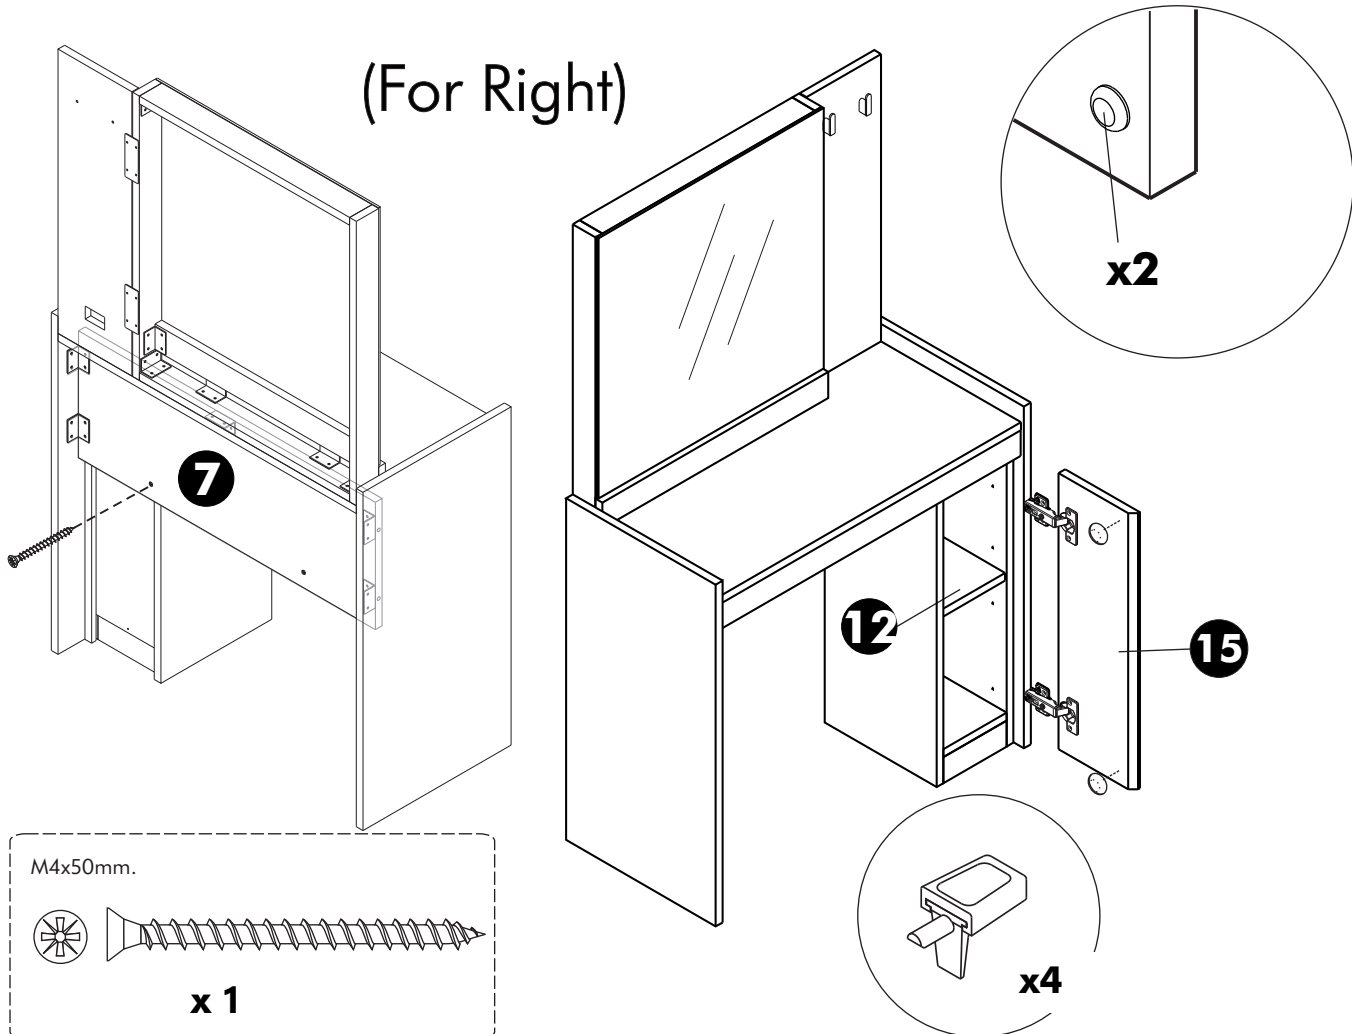

10.

(For Left)

