


# CARRARA-P

**BED 5 ft.**

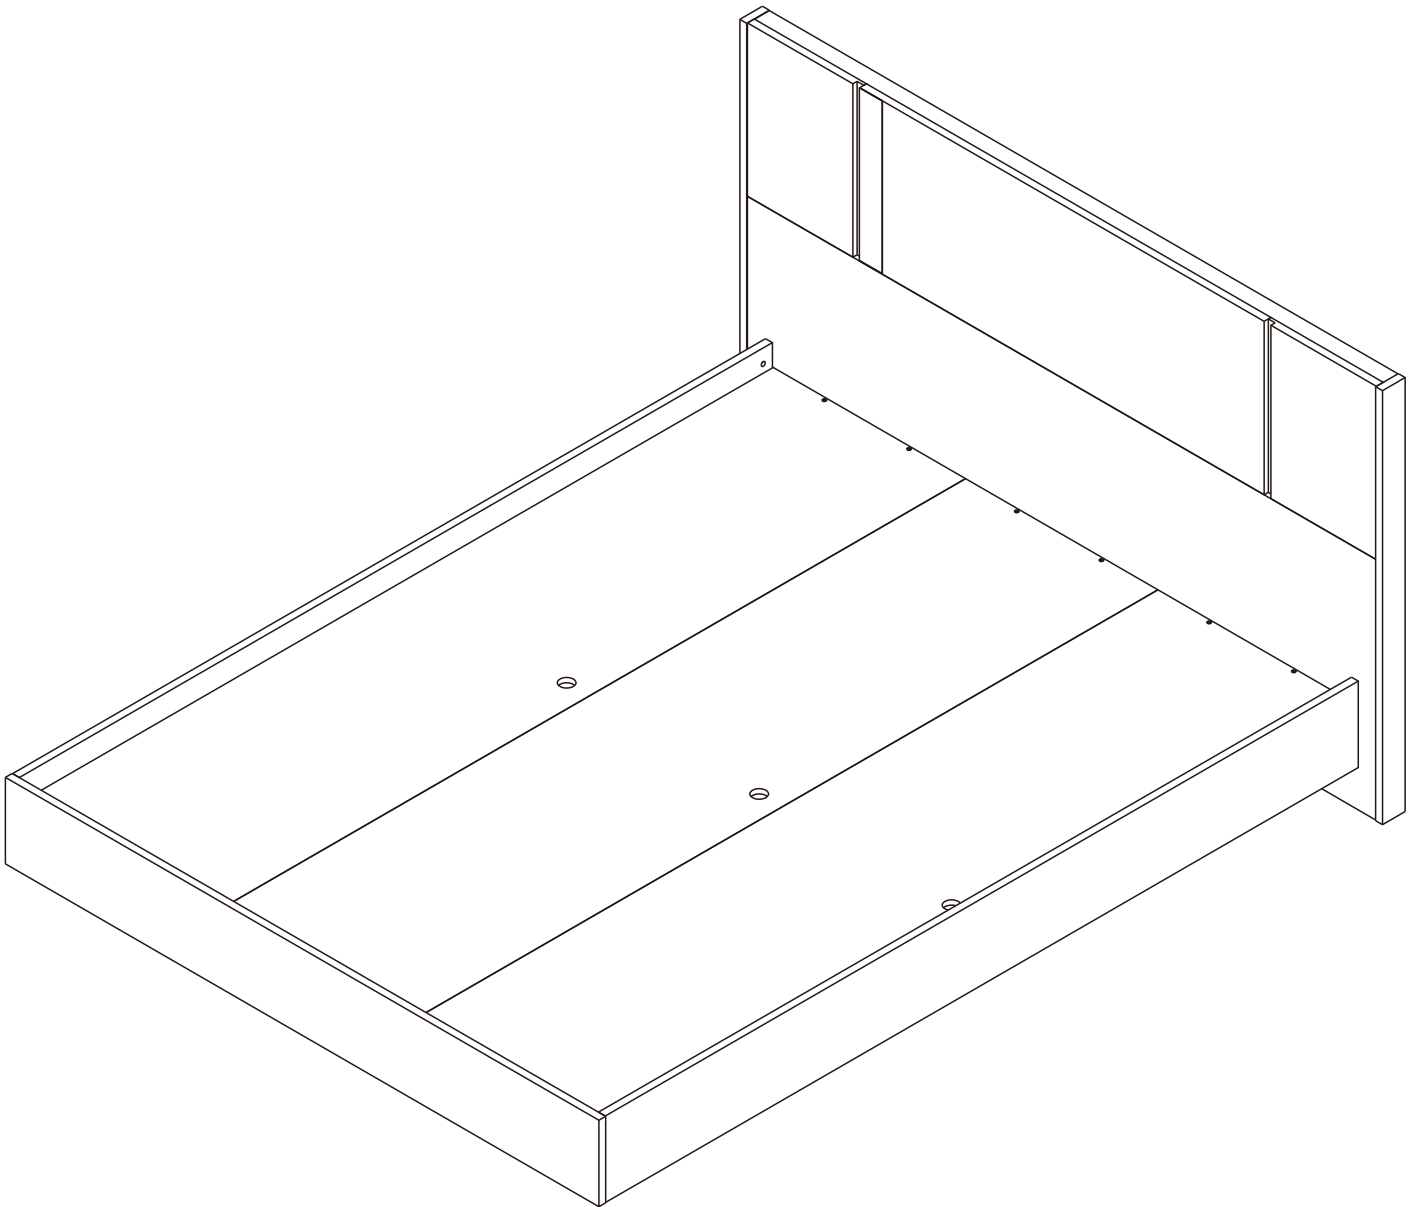

# CONNECT SYSTEM

**1**

**3**

**2**

(Connecting bolts)

**WHEN FITTING CAMS**  
ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING BOLT  
TURN CLOCKWISE UNTIL SECURE

✓				✗
↑	<b>CORRECT</b>	<b>WRONG</b>	<b>WRONG</b>	

**1 Pc.**

EQ EQ

≤ 190mm.

40mm. 40mm.

**2 Pcs.**

≥ 191-850mm.

100mm. EQ EQ 100mm.

**3 Pcs.**

> 850-2000mm.

100mm. EQ EQ EQ 100mm.

**4 Pcs.**

> 2001mm.

**i**

40mm.

---

EQ

**OUT**

M4x16mm.

**IN**

M6x45mm.


M6

M6

M4x16mm.

# HARDWARE


## -BODY SET



**x 4**




**x 4**



#8x35

**x 4**

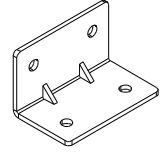

**x 4**



No.1

**x 3**



#M6

**x 4**




#M6

**x 4**



#M4

**x 1**



**x 10**



M4x16mm.

**x 20**



M4x30mm.

**x 48**



M4x16mm.

**x 35**




#M8

**x 4**




#M8

**x 4**



No.10

**x 1**




#M6x45

**x 4**



# JCB+ M6x60

**x 6**




#TFL4 M8x50

**x 4**


# ASSEMBLY

-BODY SET

## 1.

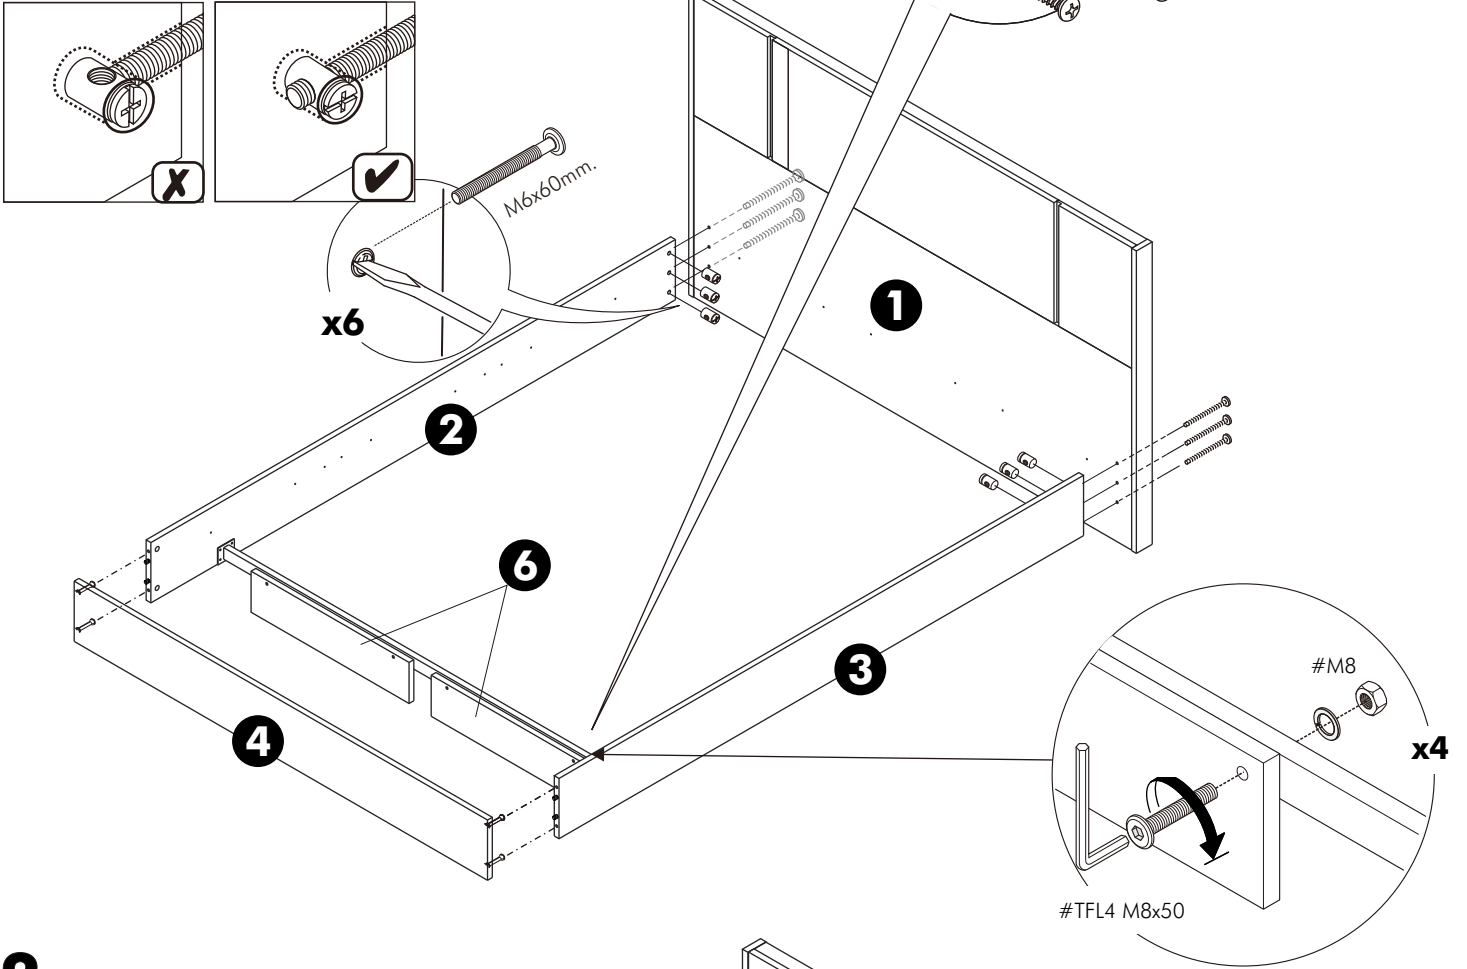

## 2.

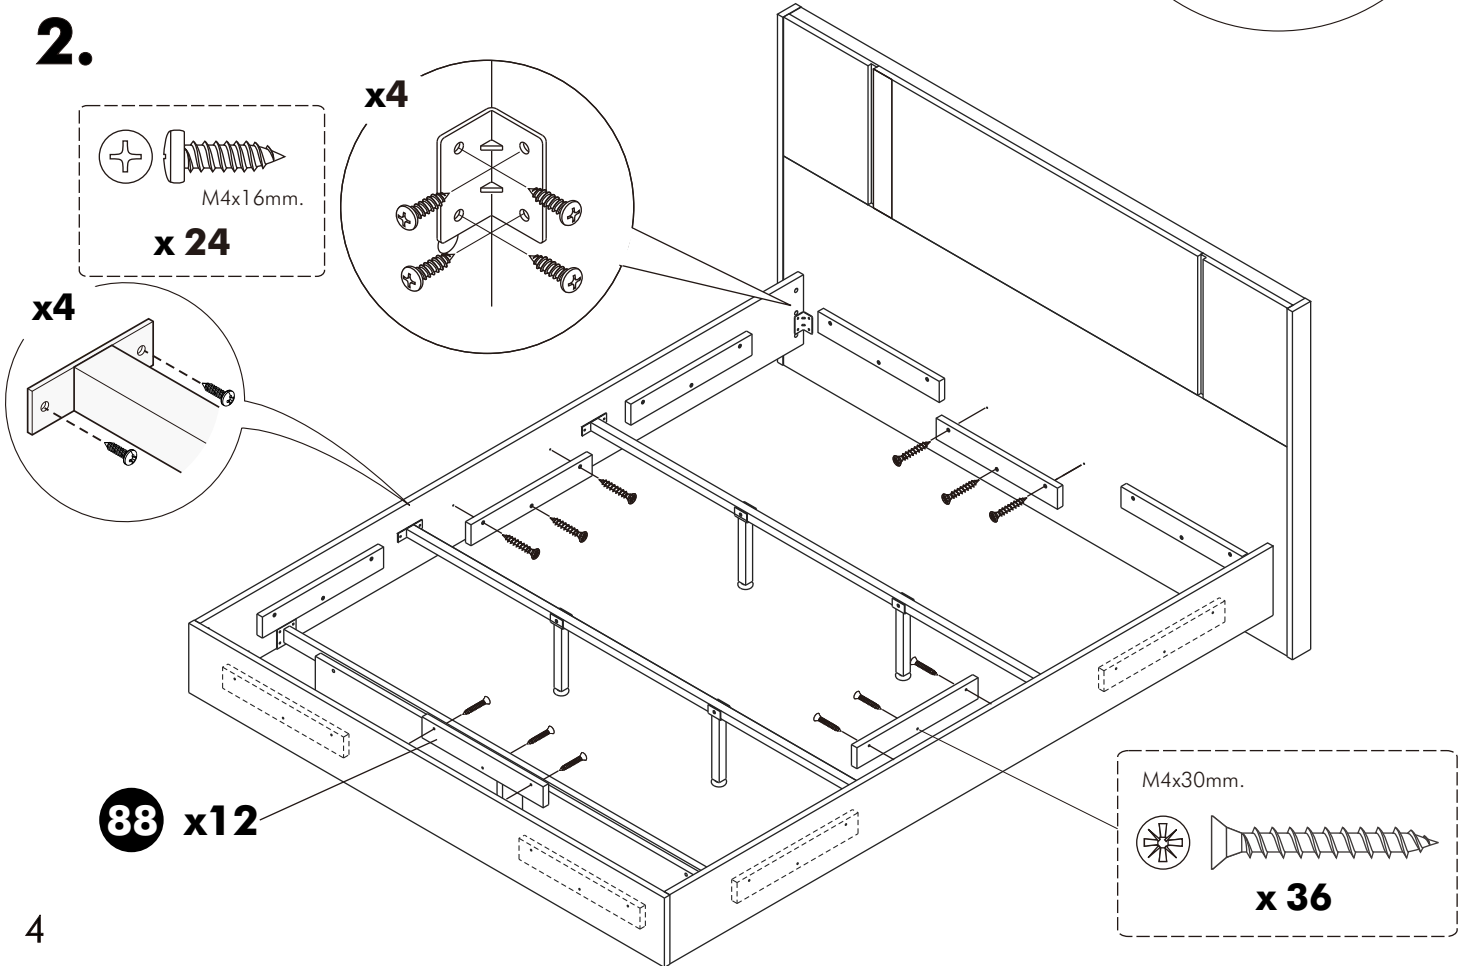

**3.**

