
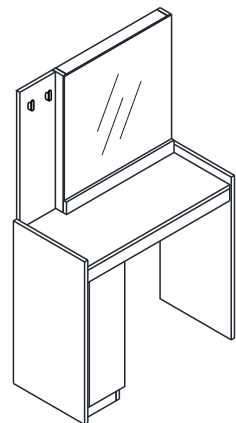


ESSENCE

Dressing table

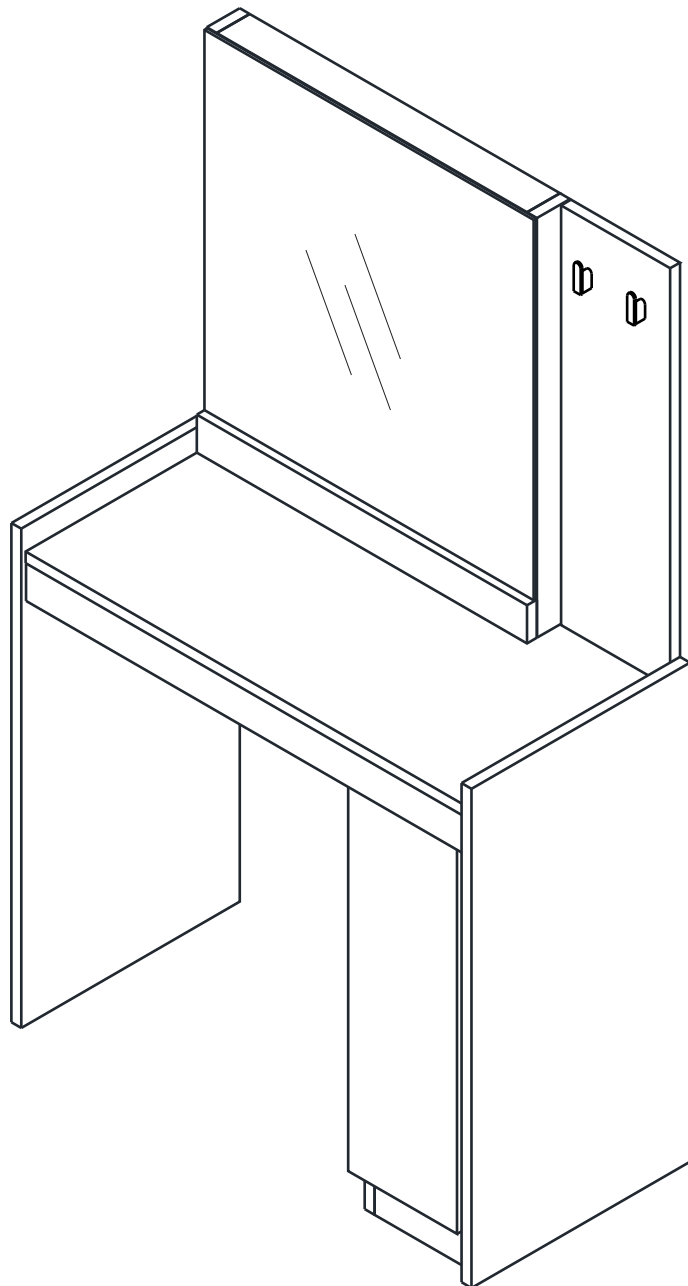

CONNECT SYSTEM

1

3

2

(Connecting bolts)

WHEN FITTING CAMS
 ENSURE STARTING POSITION IS CORRECT
 BEFORE YOU INSERT CONNECTING BOLT
 TURN CLOCKWISE UNTIL SECURE

✓				✗
	CORRECT	WRONG		

M4x16mm.






M4x16mm.




DOOR PANEL

CONNECT SYSTEM




M3.5x20mm.

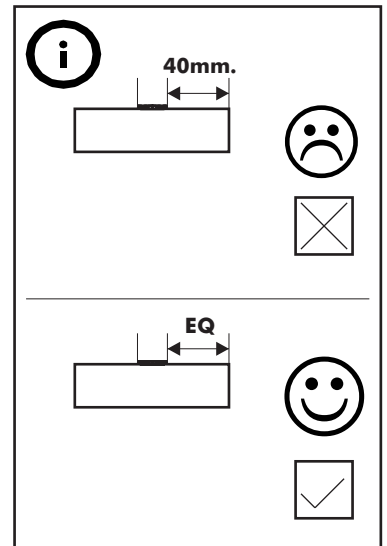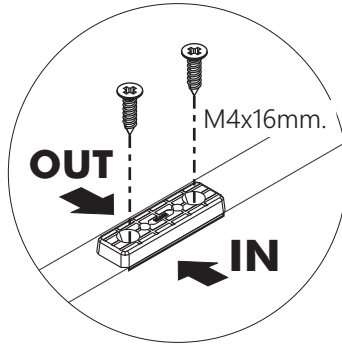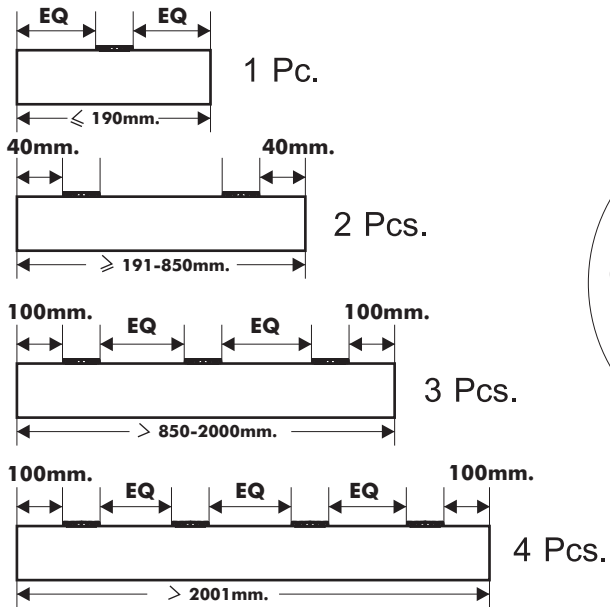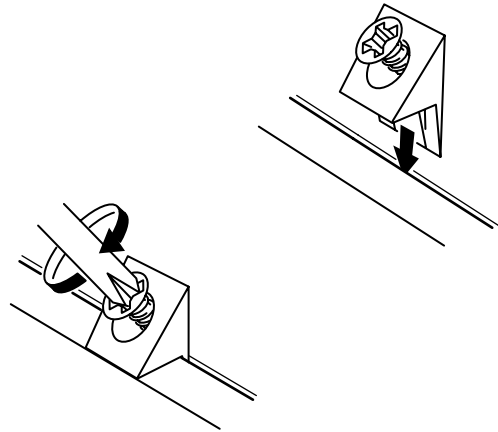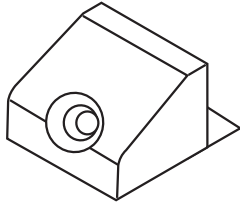

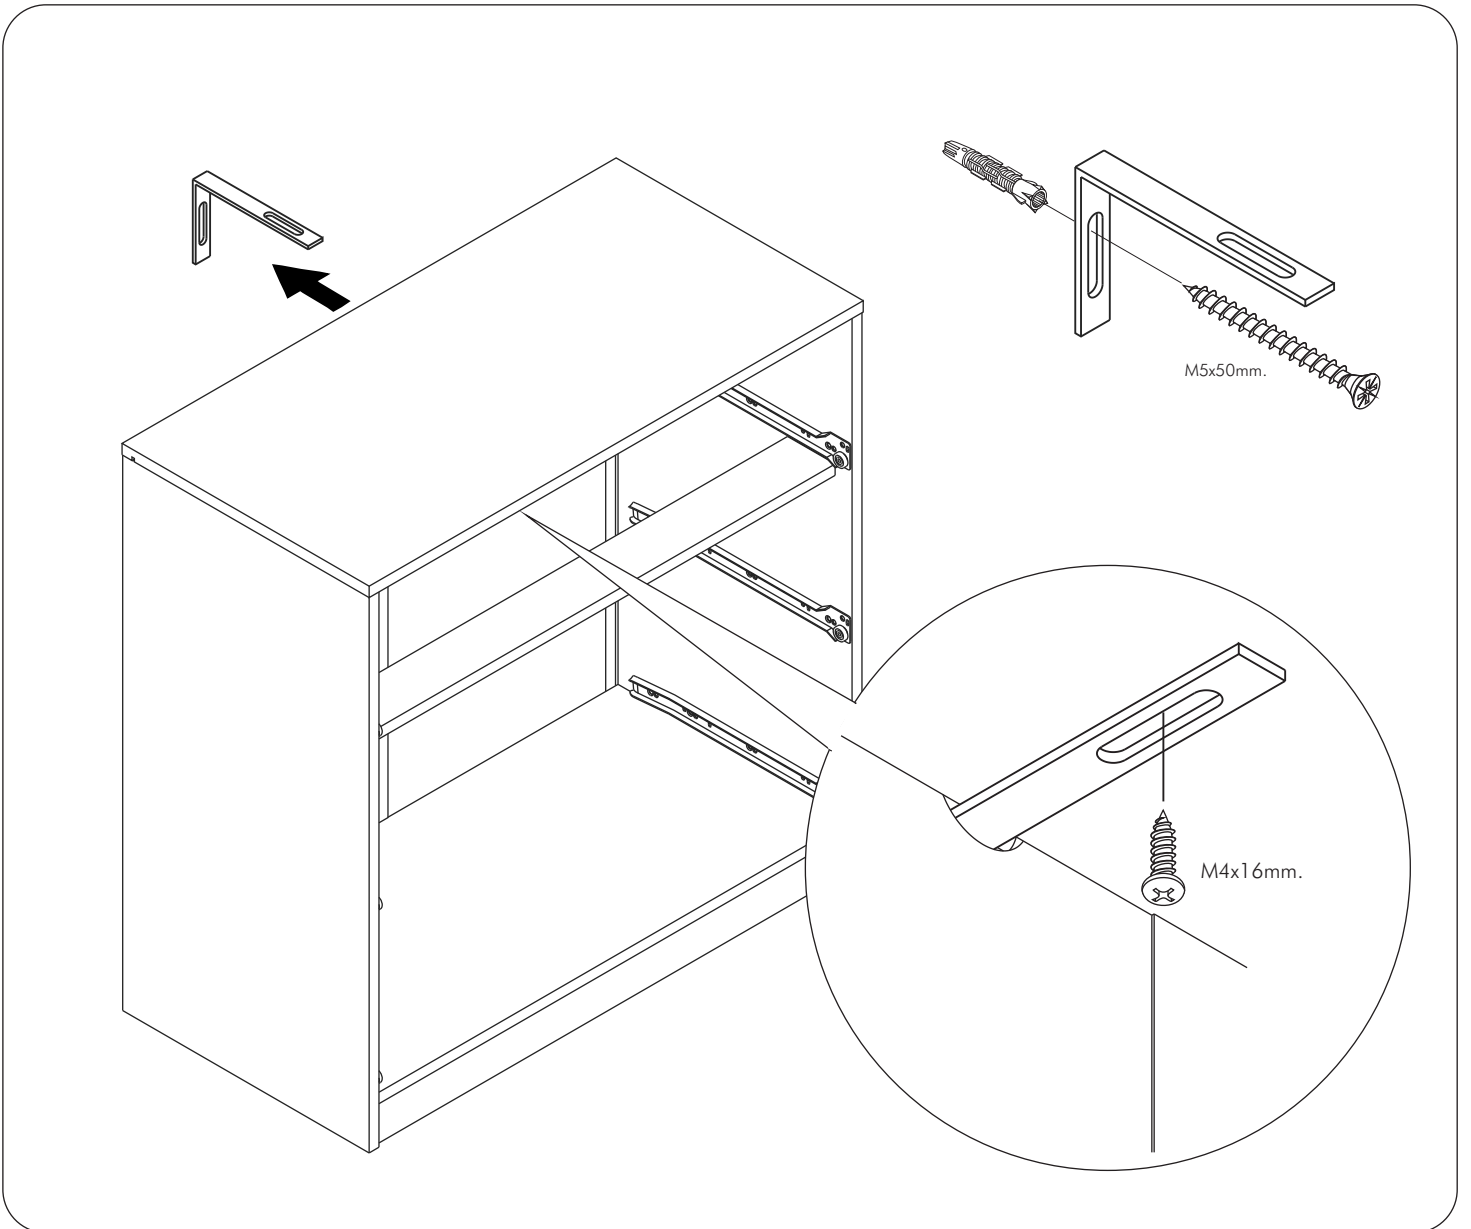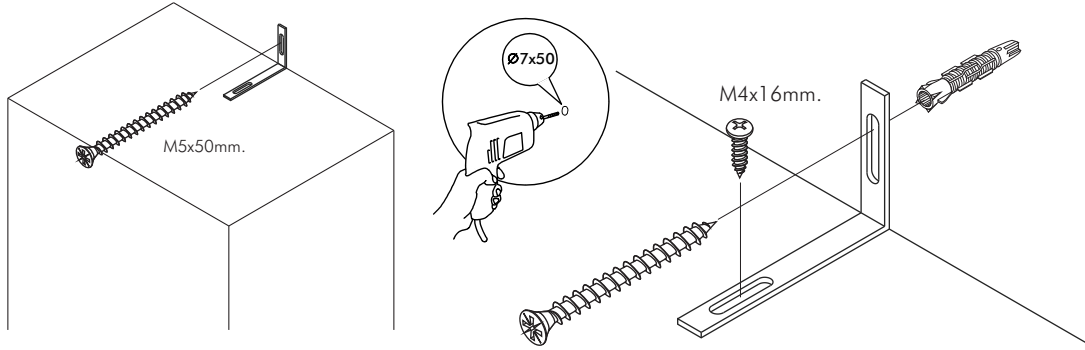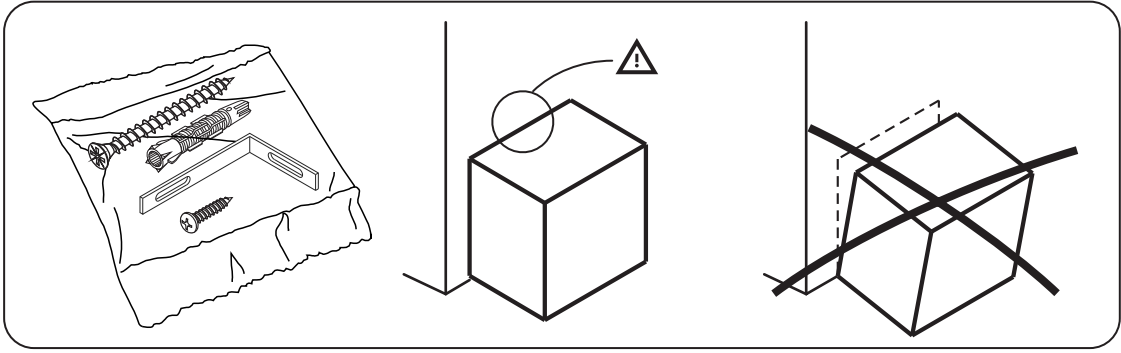

HARDWARE

-BODY SET

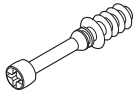


x 7




19mm.

x 7

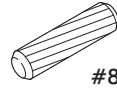


#8x35


x 14

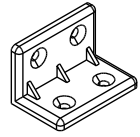


x 8

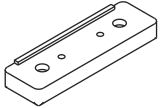


x 8

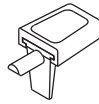


x 4

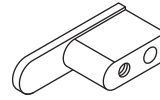

x 2

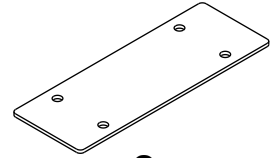


x 2

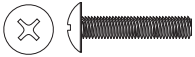

M4x25mm.

x 2

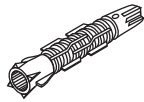

x 1



∅ 11mm.

x 2



M4x16mm.

x 56




x 4




M3.5x20mm.

x 4

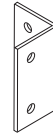

x 5

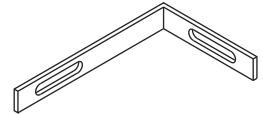

x 1



M4x30mm.

x 7



M4x16mm.

x 23



M5x50mm.


x 1



M4x50mm.

x 7

-DOOR SET

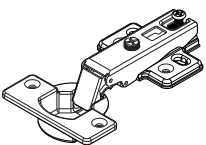

x 2



M4x16mm.

x 12




x 2


ASSEMBLY

-BODY SET

1.

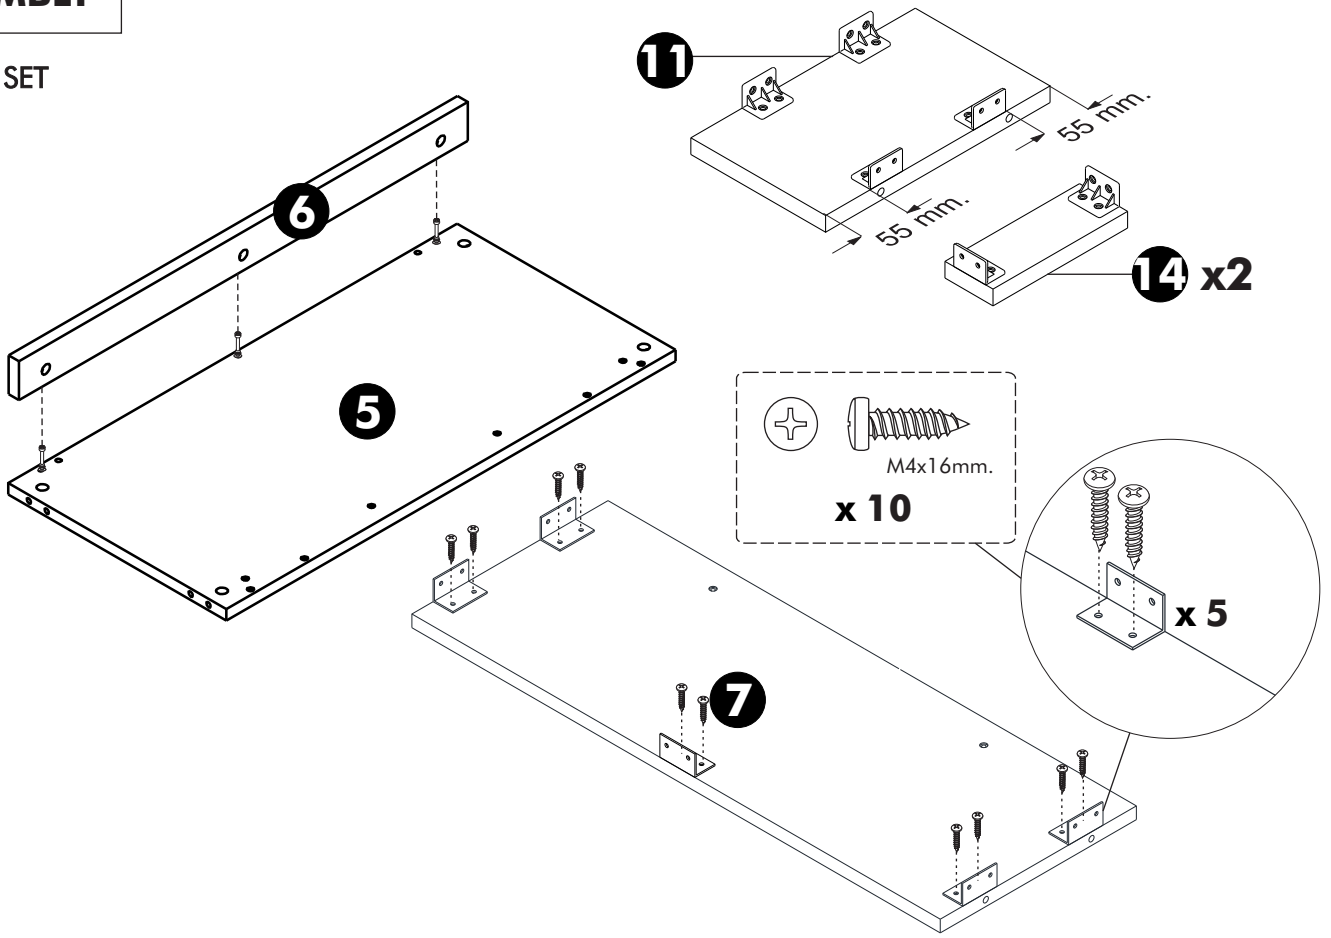


2.

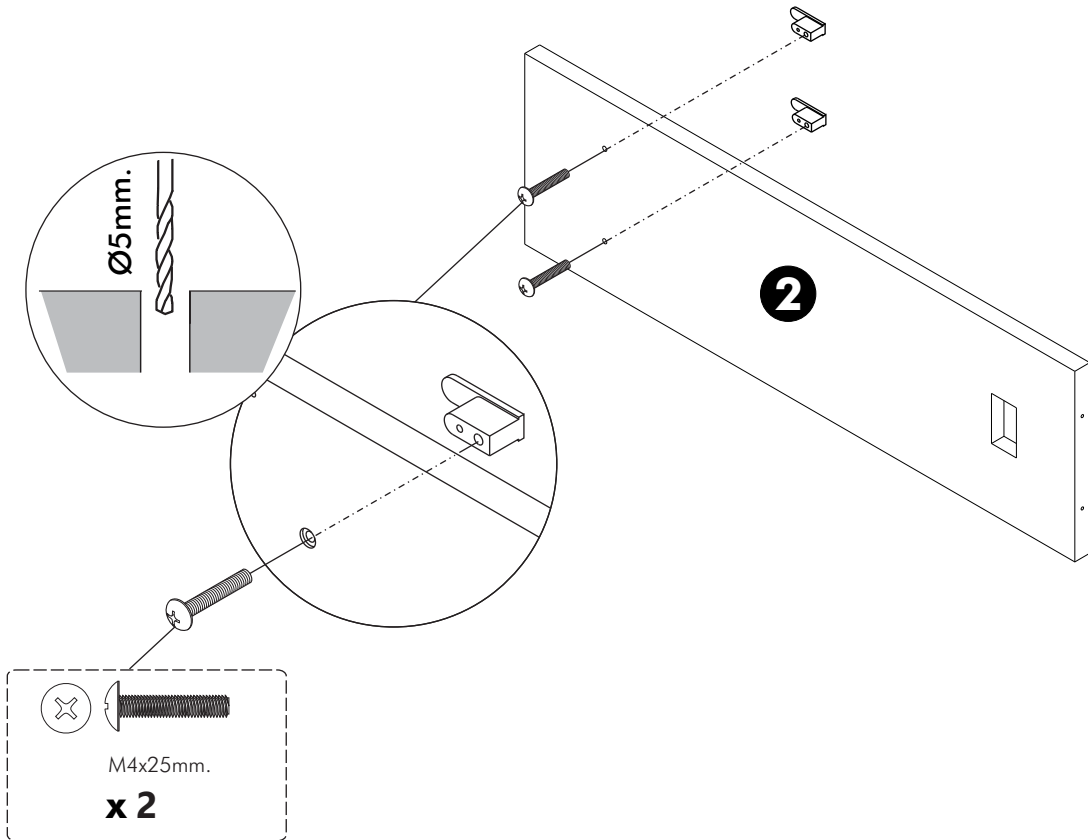


3.

(For Right)

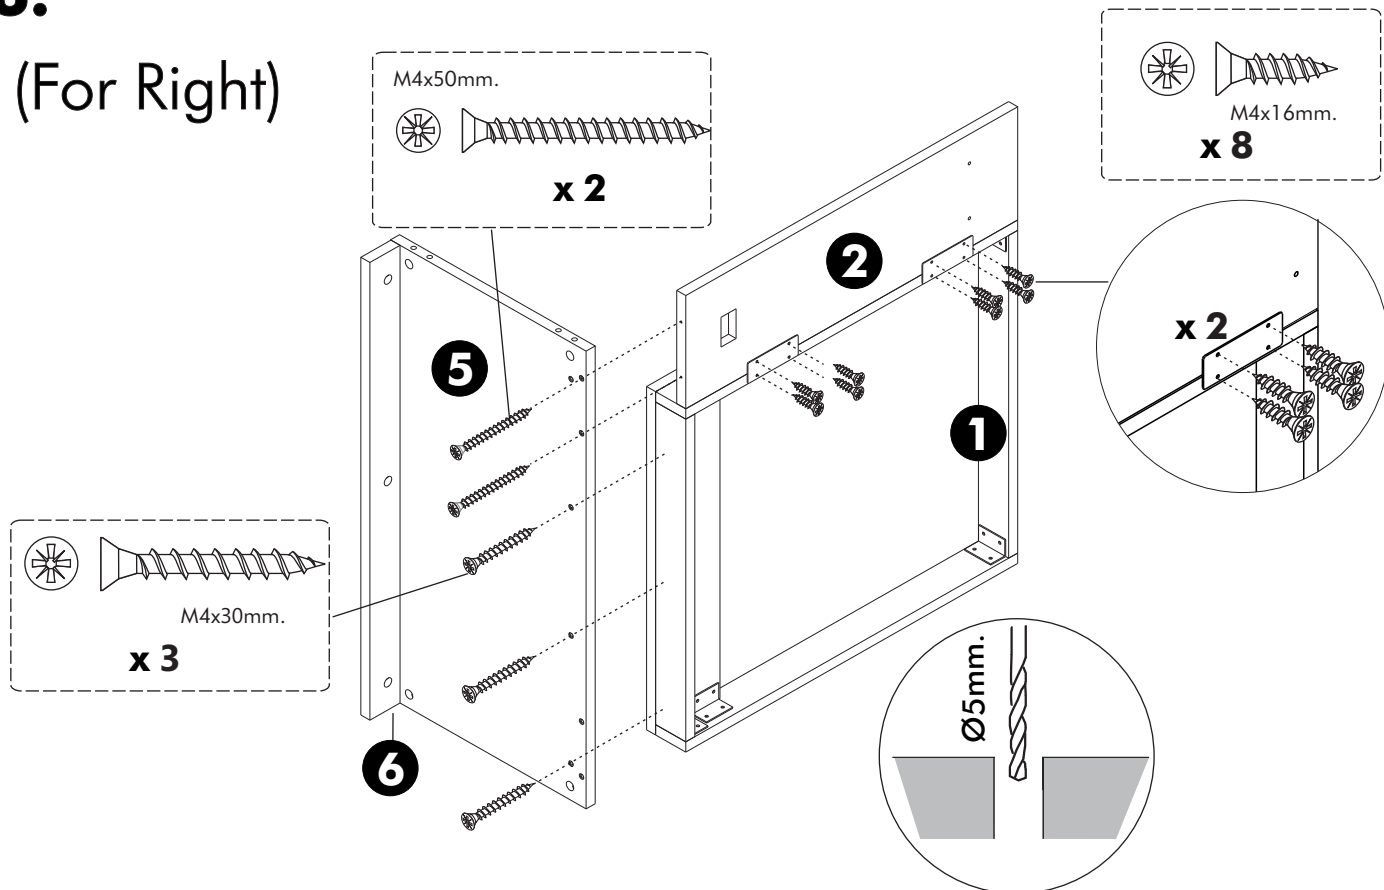


4.



(For Left)

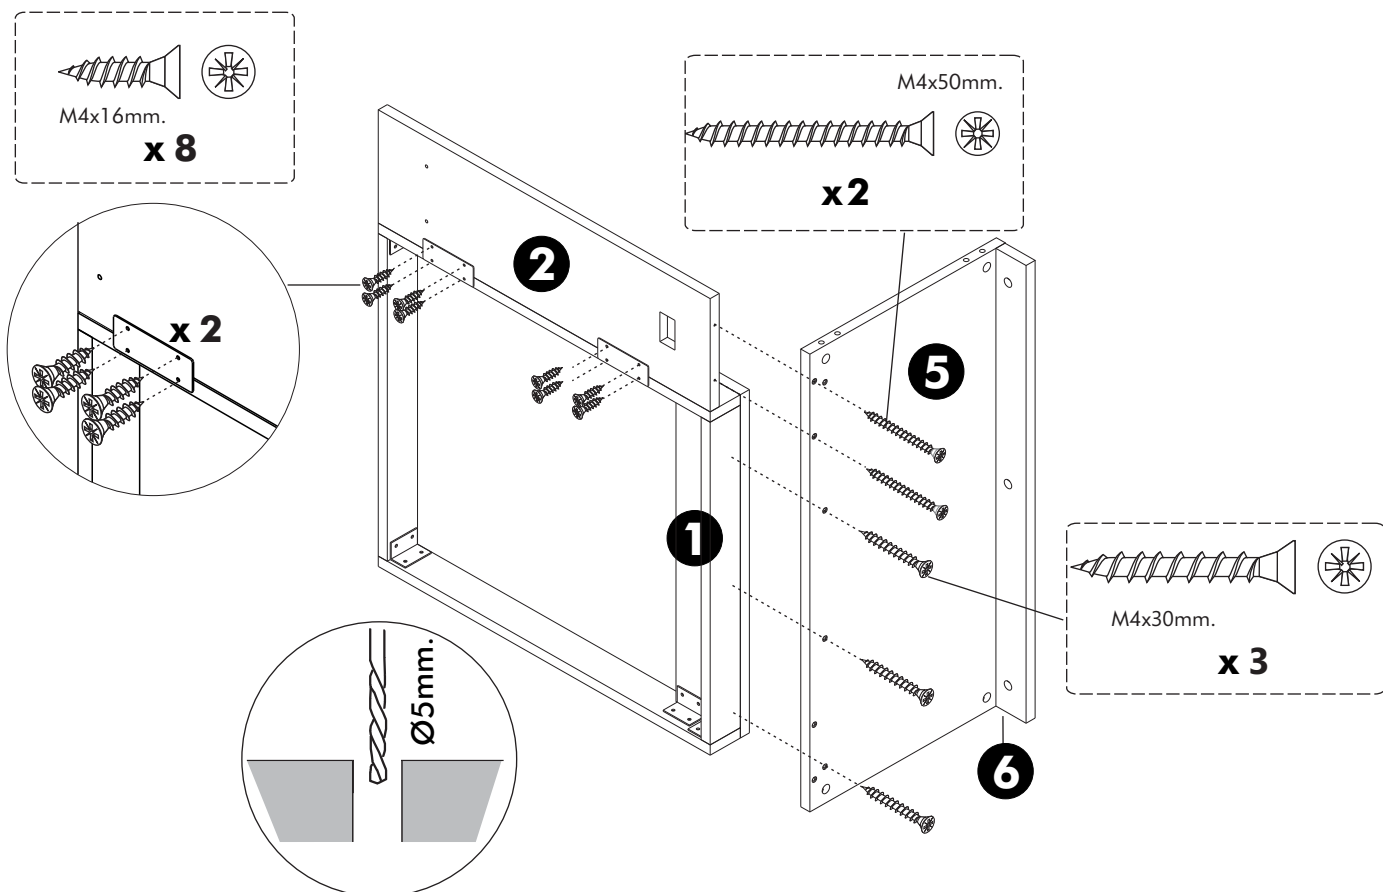

5. (For Right)

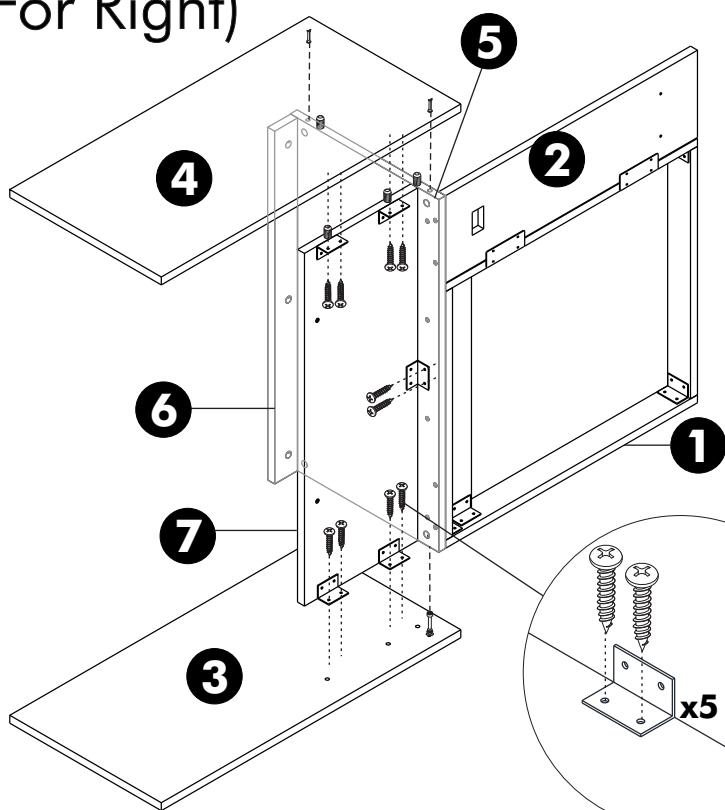




(For Left)

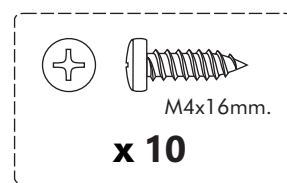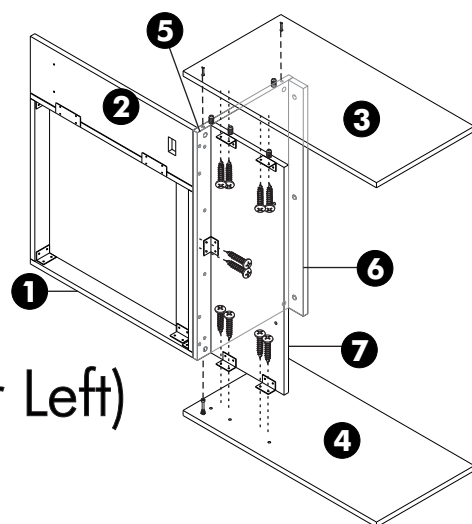


6.

ASSEMBLY

-DOOR SET

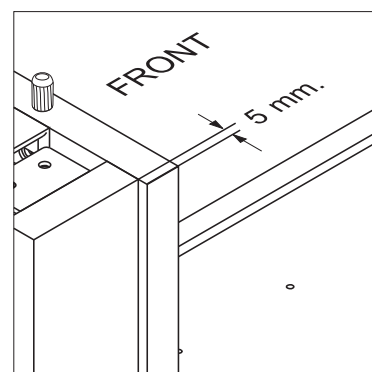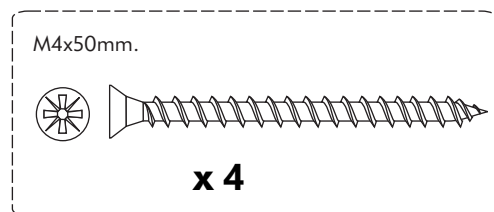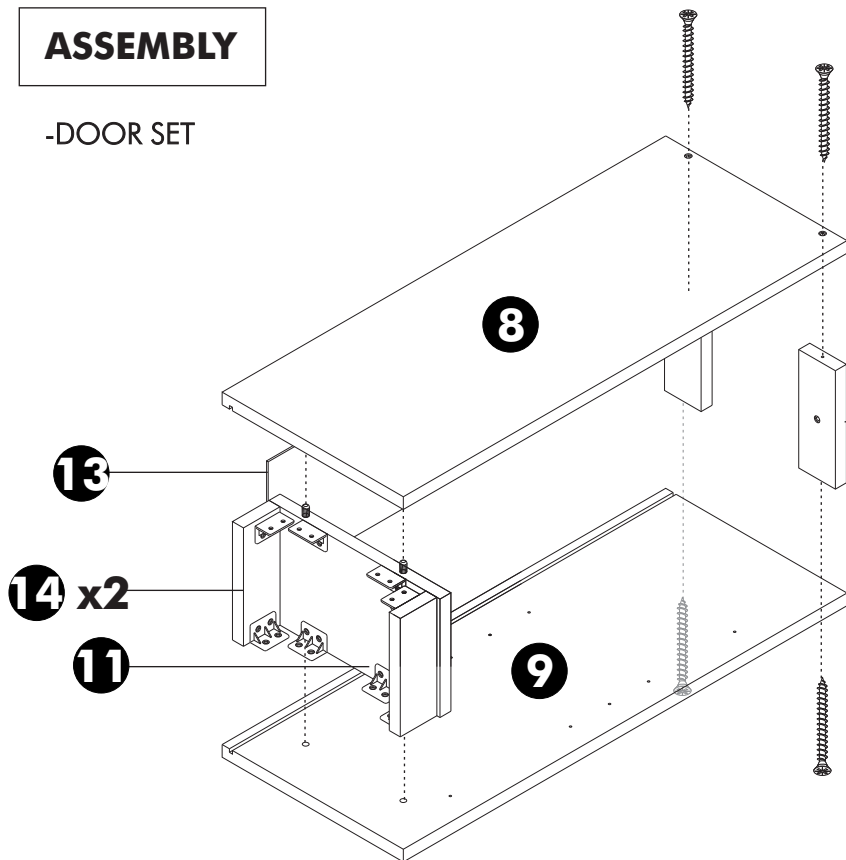


7.

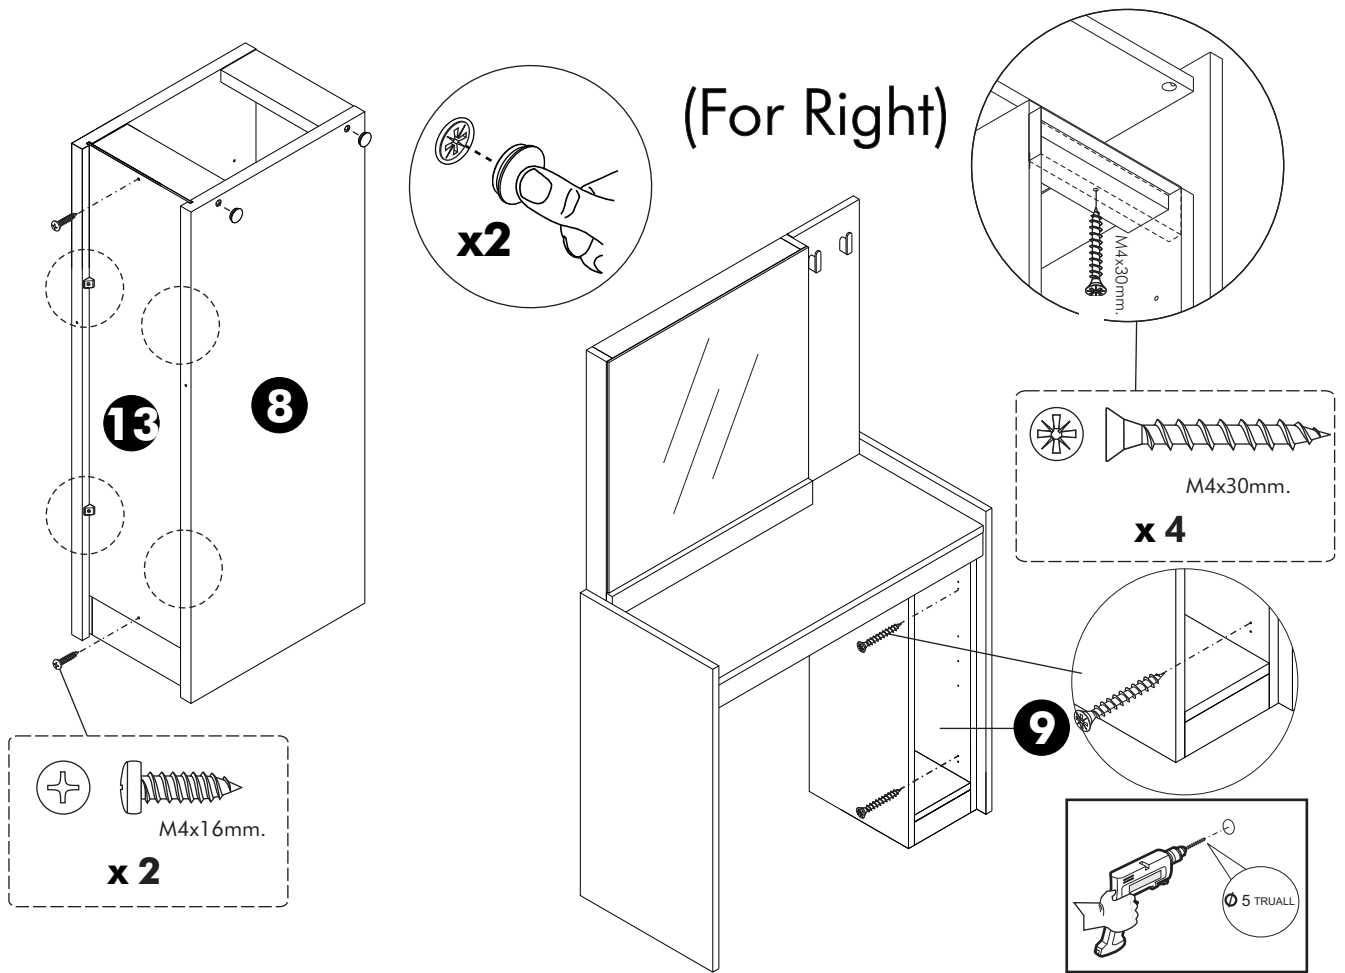


8.

(For Left)

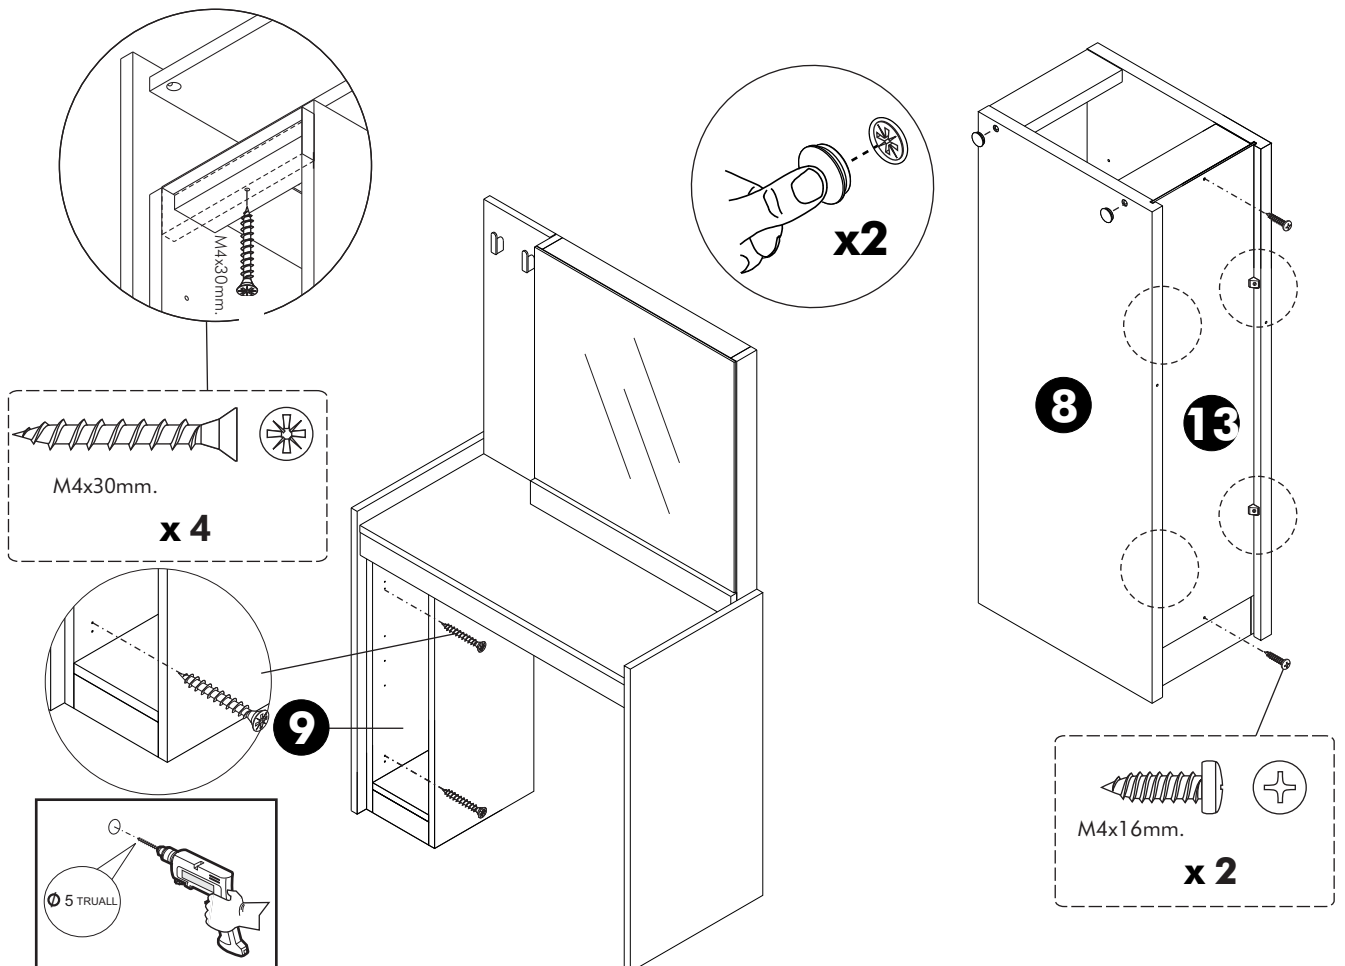

9.

(For Right)

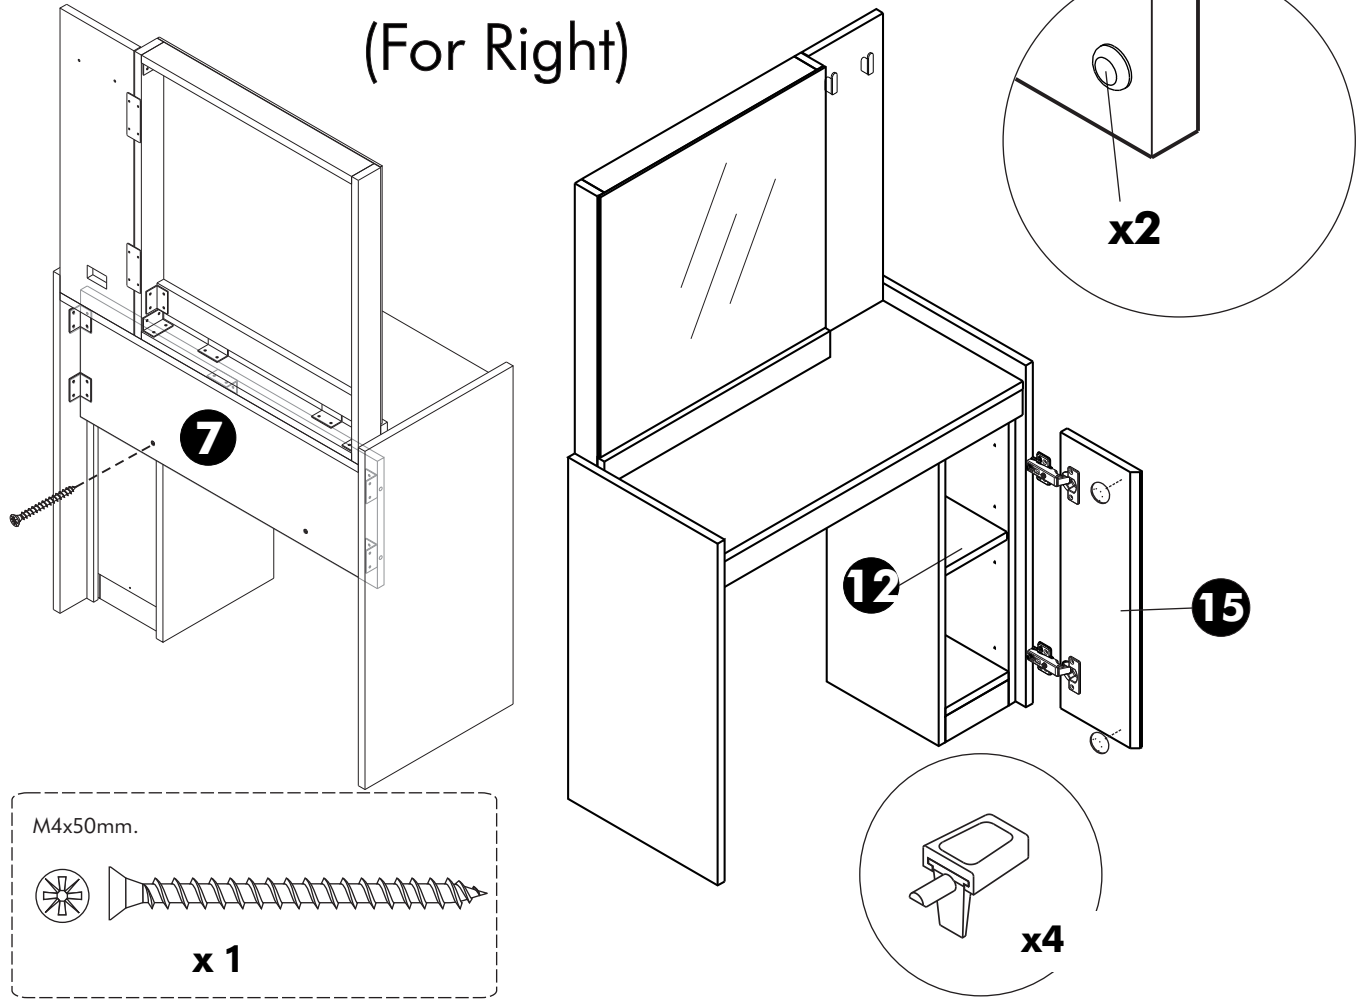

10.

M4x50mm.



x 1

(For Left)

