


NORIS

TV CABINET 150 cm.

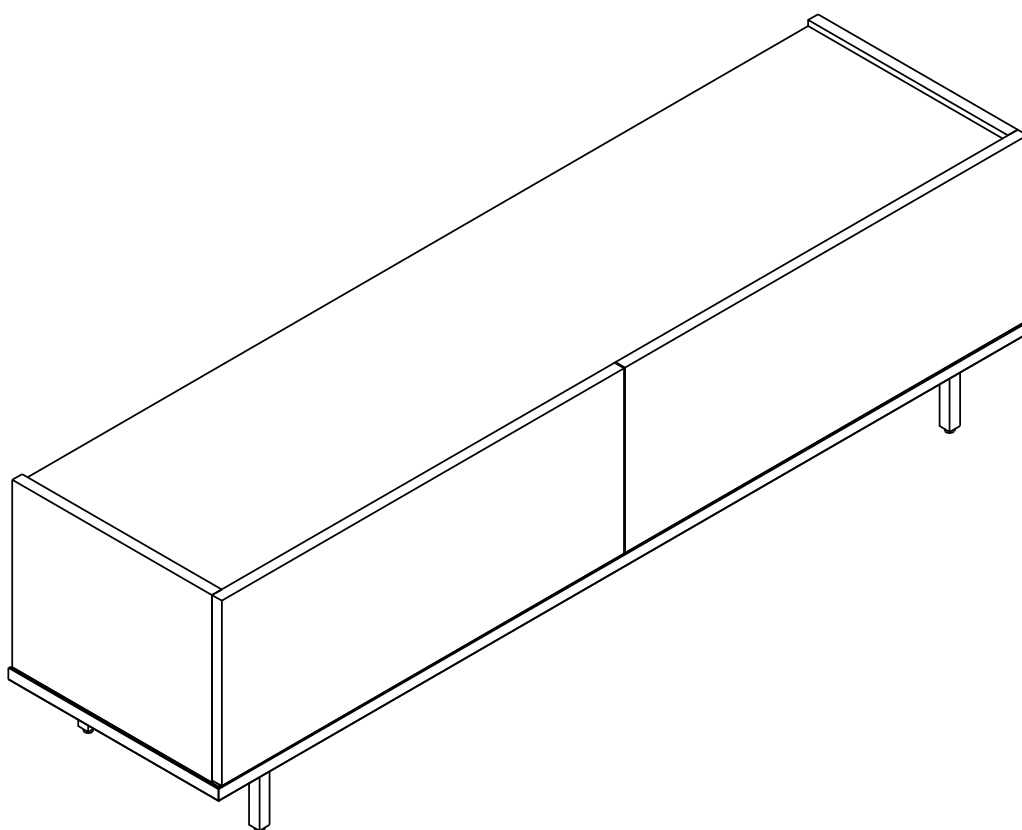

CONNECT SYSTEM

1

3

2

(Connecting bolts)

WHEN FITTING CAMS
 ENSURE STARTING POSITION IS CORRECT
 BEFORE YOU INSERT CONNECTING BOLT
 TURN CLOCKWISE UNTIL SECURE

✓				✗
	CORRECT	WRONG		

M3.5x20mm.







M3.5x13mm.



1

Use these holes

2



Use these holes

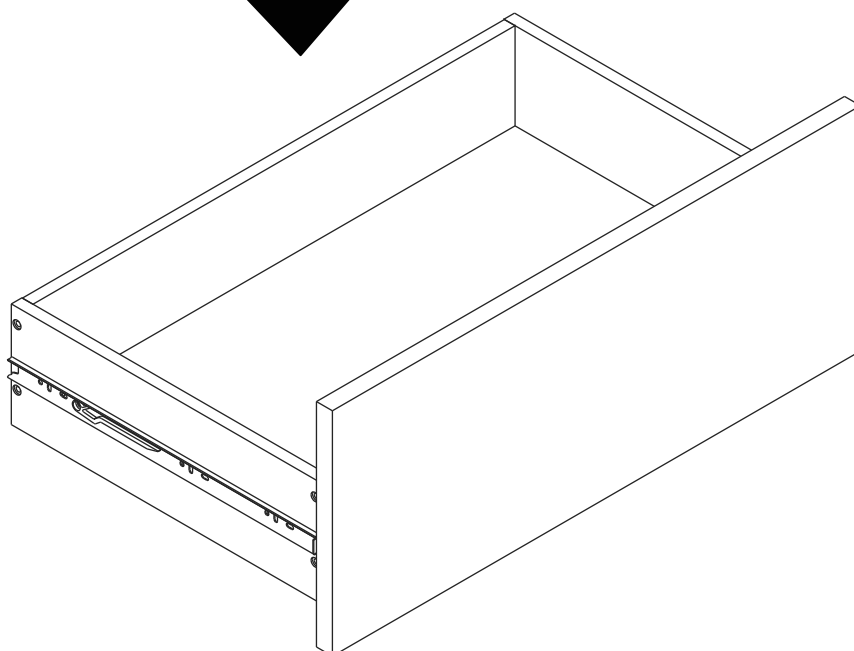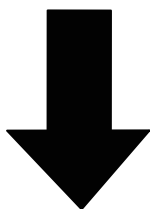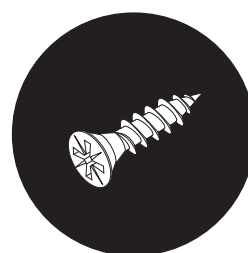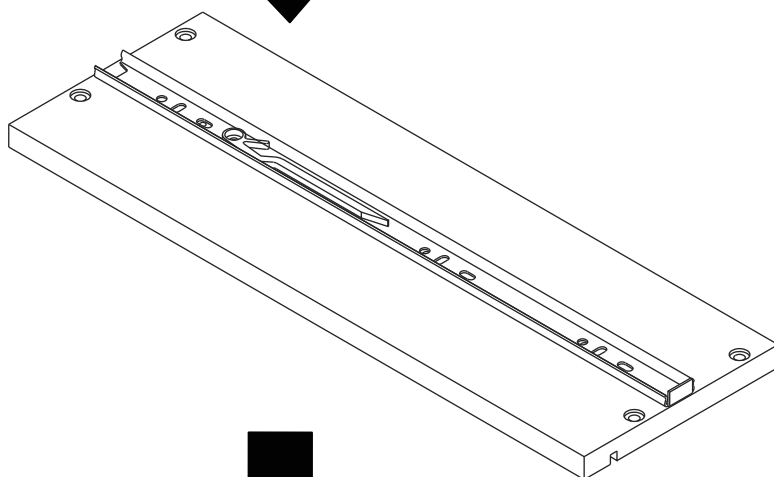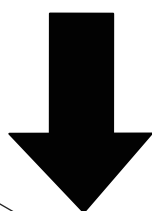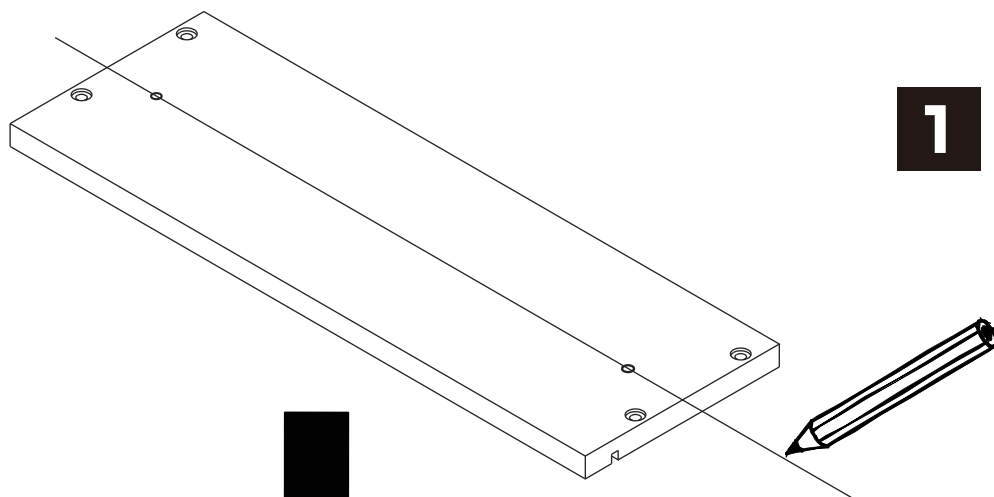

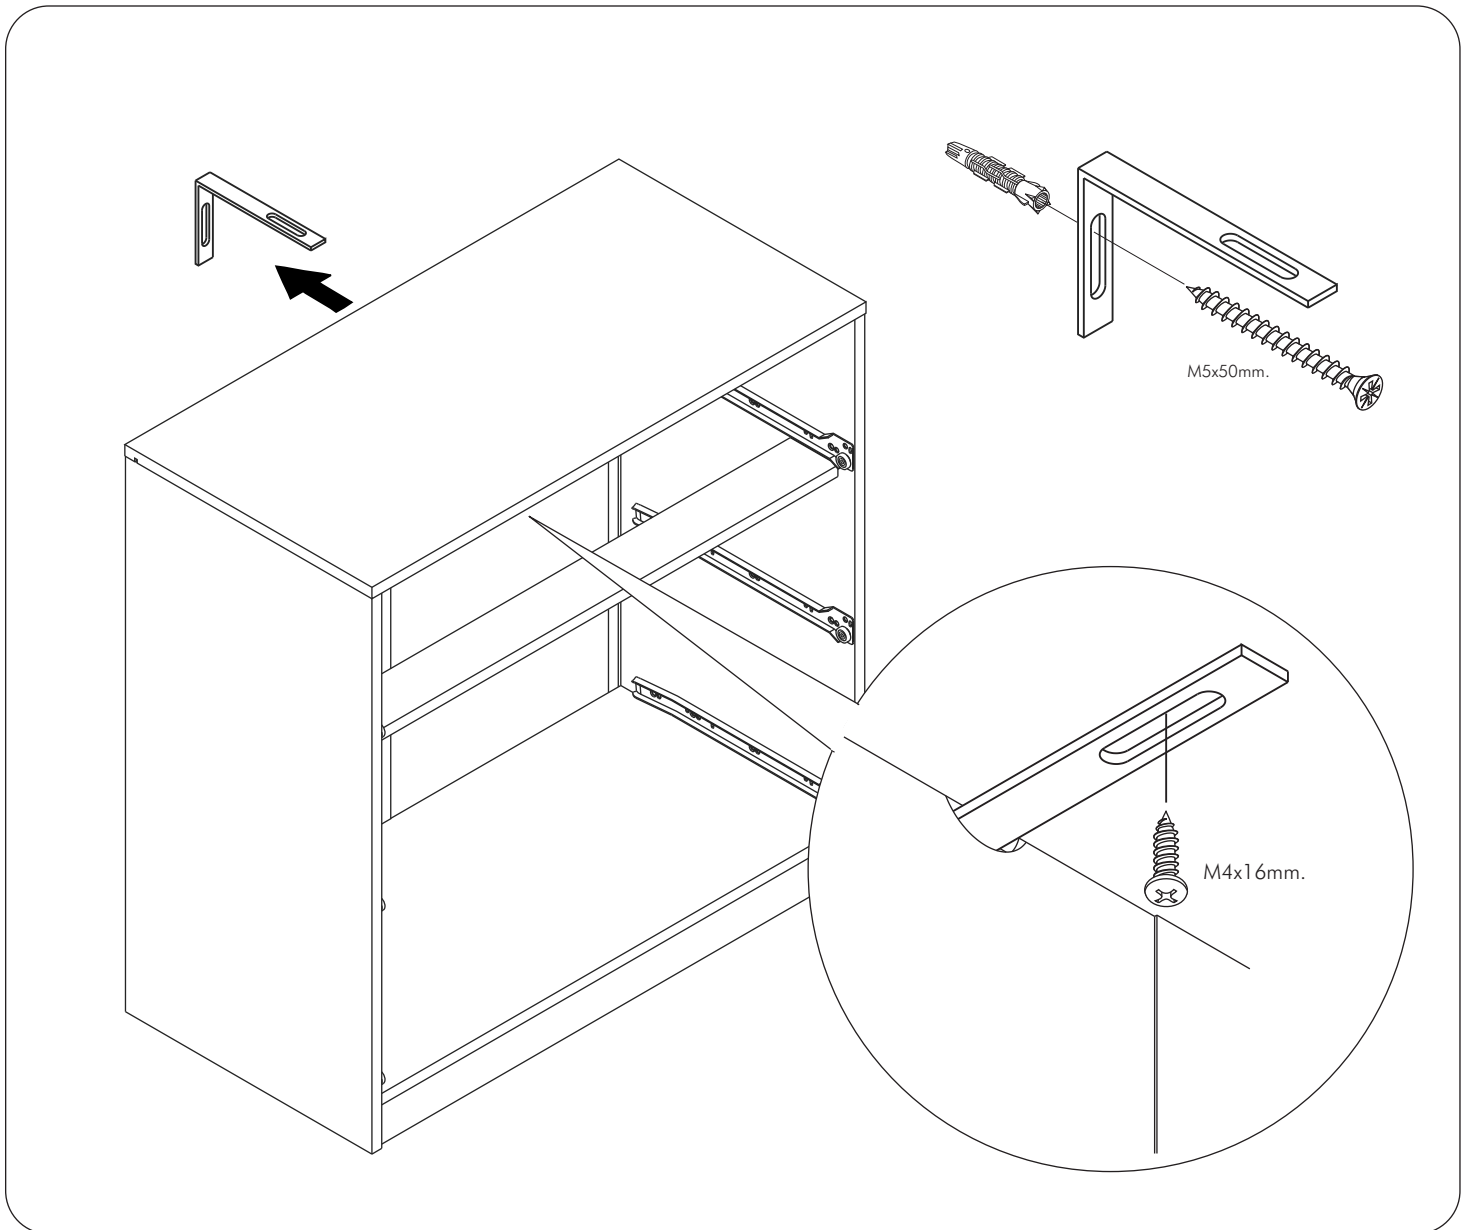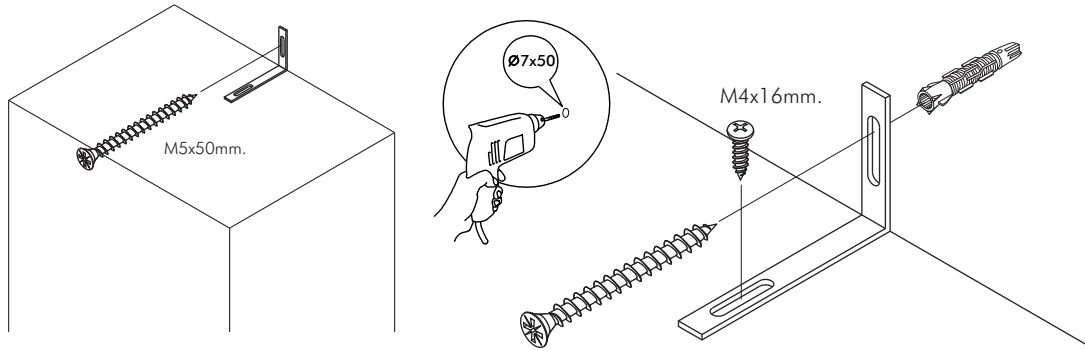

■ The Standard for identifying which mounted safety fall protection fitting to use **Note : That children's products must be installed with all anti-falling fittings.**


■ Mounted fall protection fittings

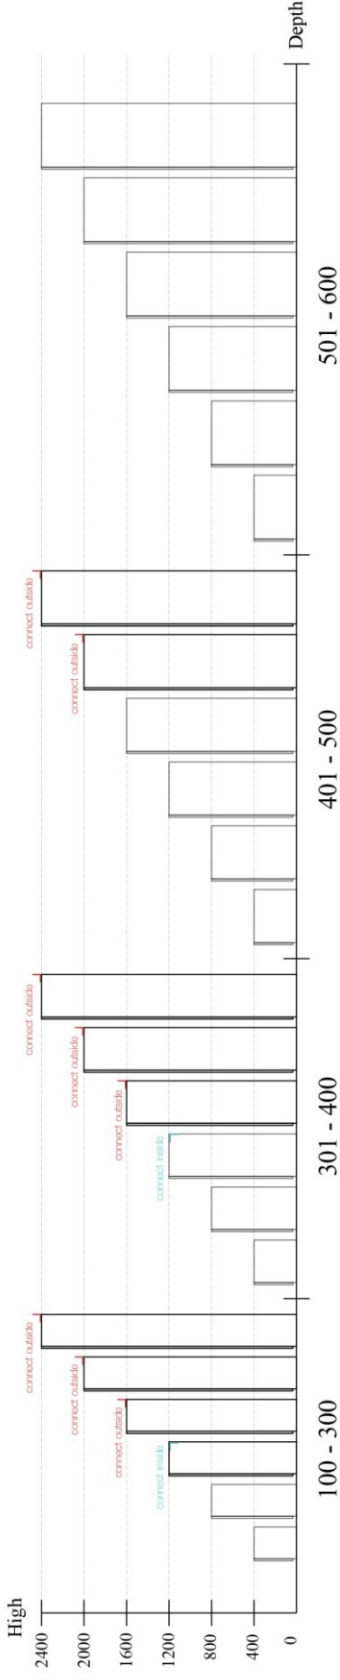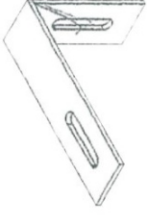

501 - 600




501 - 600

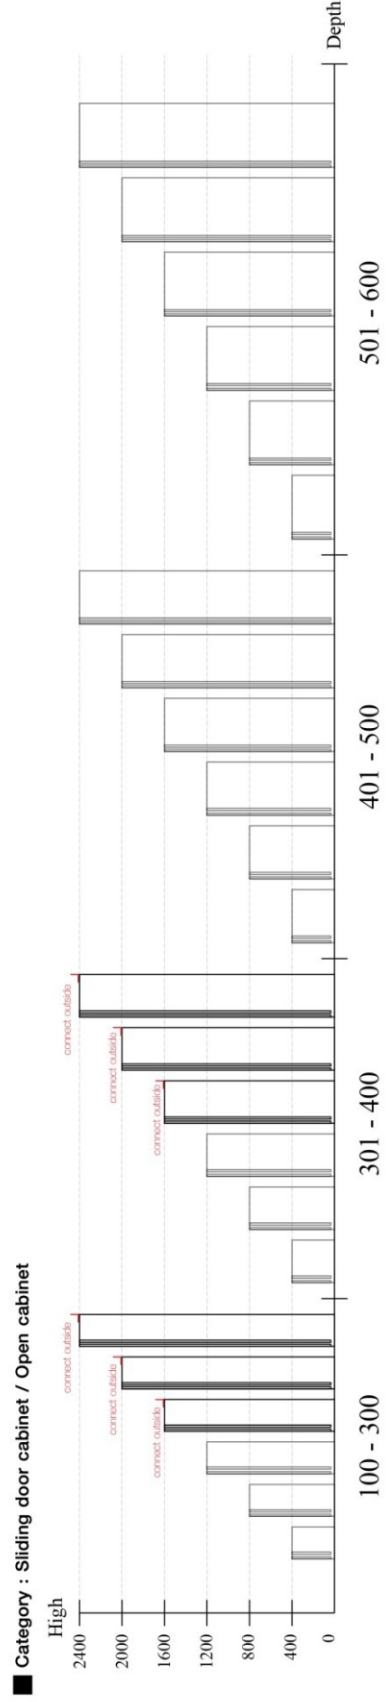

501 - 600

HARDWARE


-BODY SET




x 6



x 6




x 12




M4x13mm.

x 8




x 8



M4x30mm.

x 6




M4x16mm.

x 21




M3.5x20mm.


x 8



x 1




x 1



M4x50mm.


x 6




M5x50mm.

x 1

-DRWAER SET

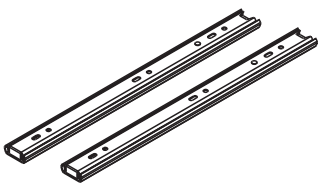


x 2 set




M3.5x13mm.

x 24




M4x40mm.

x 20




M6x23mm.

x 10

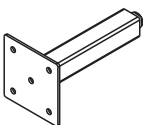


14 x5

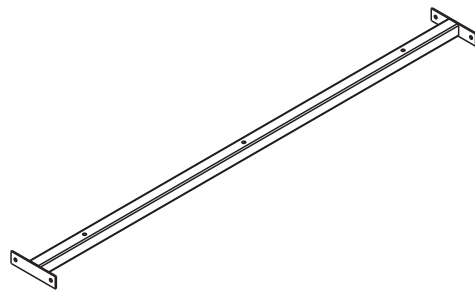


15 x2


1.

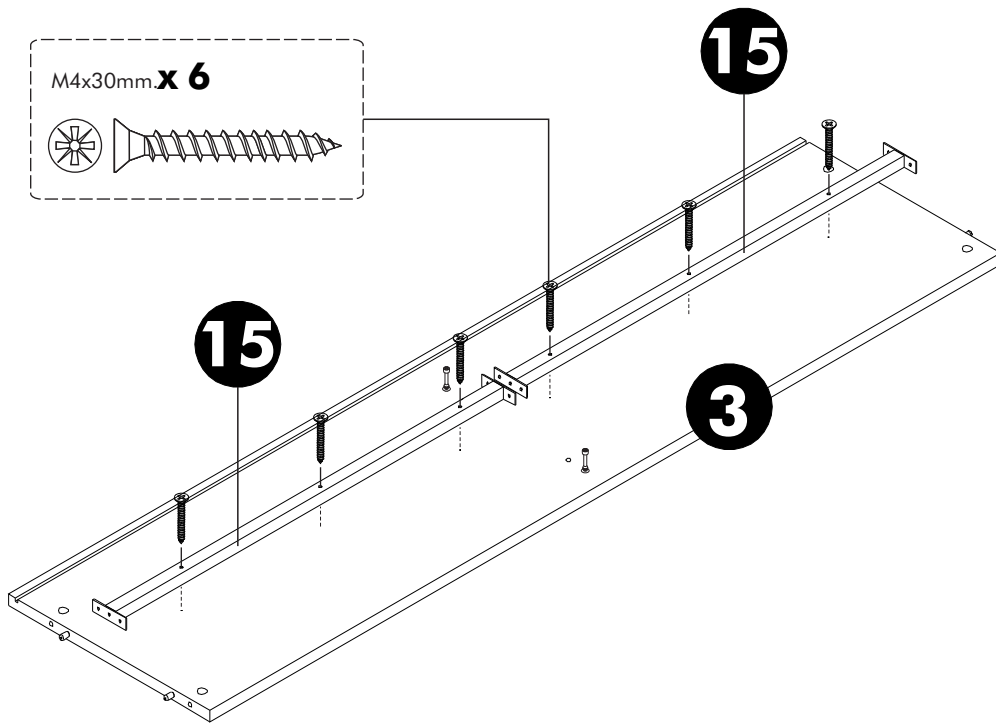


2.

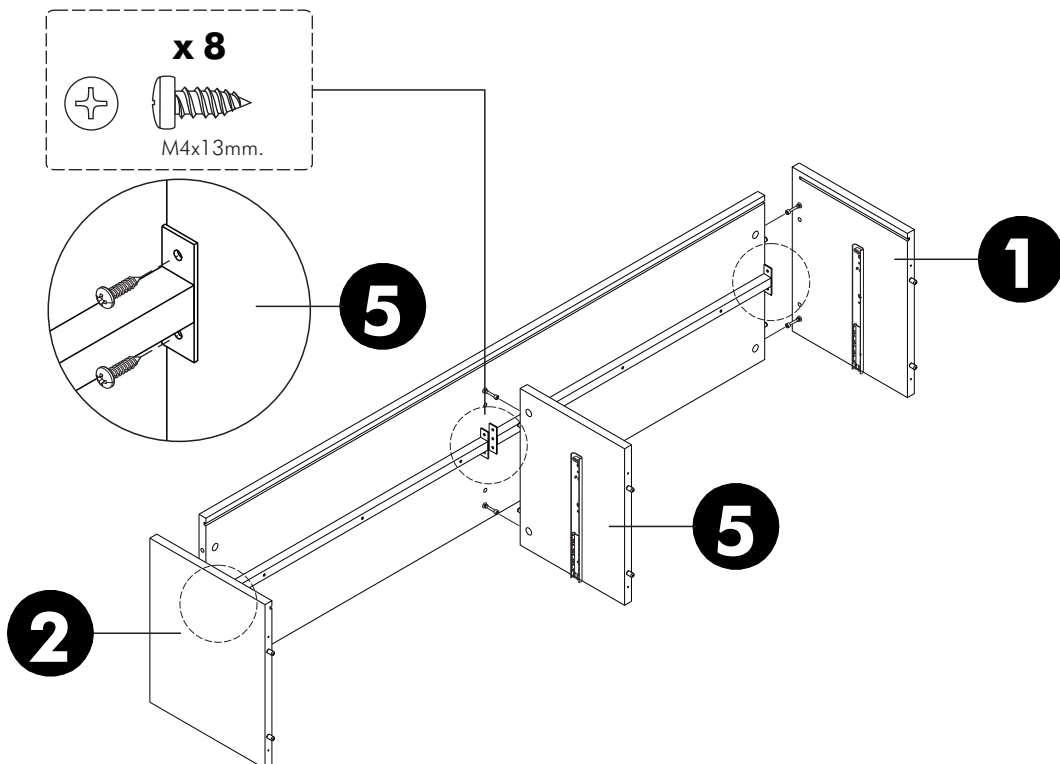

3.

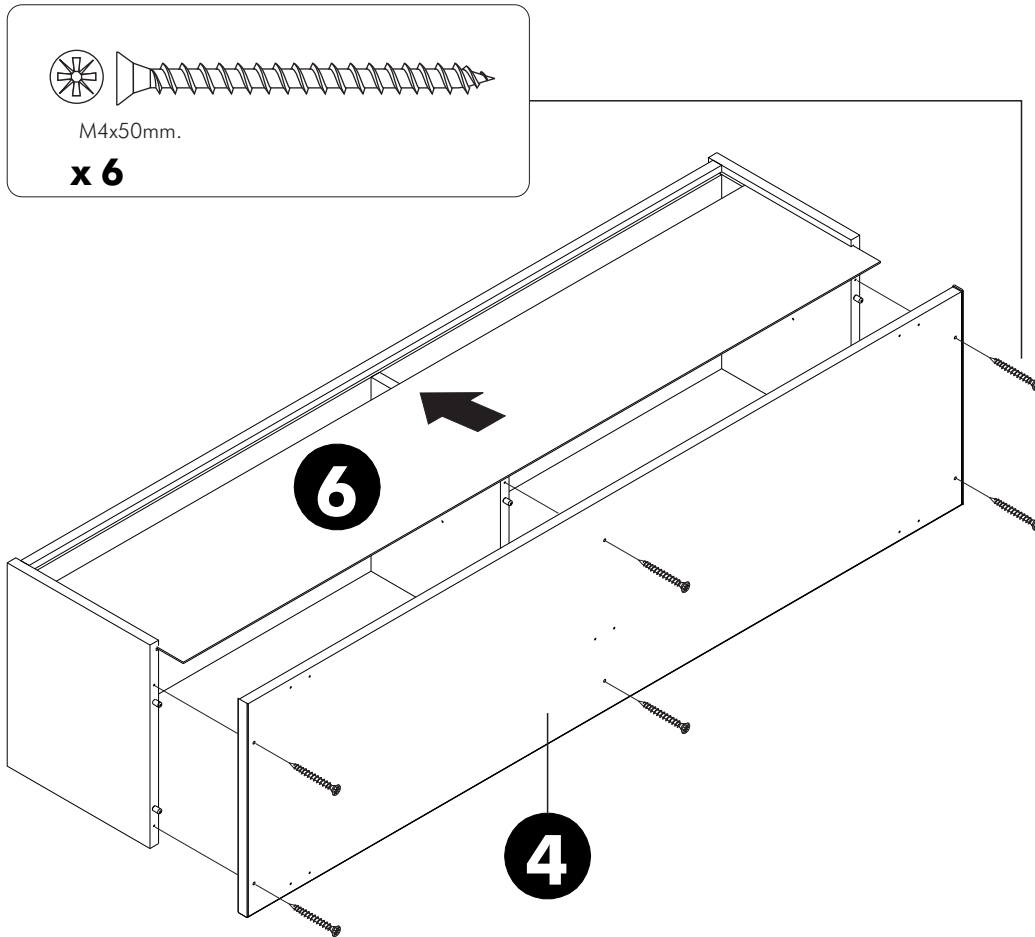


4.

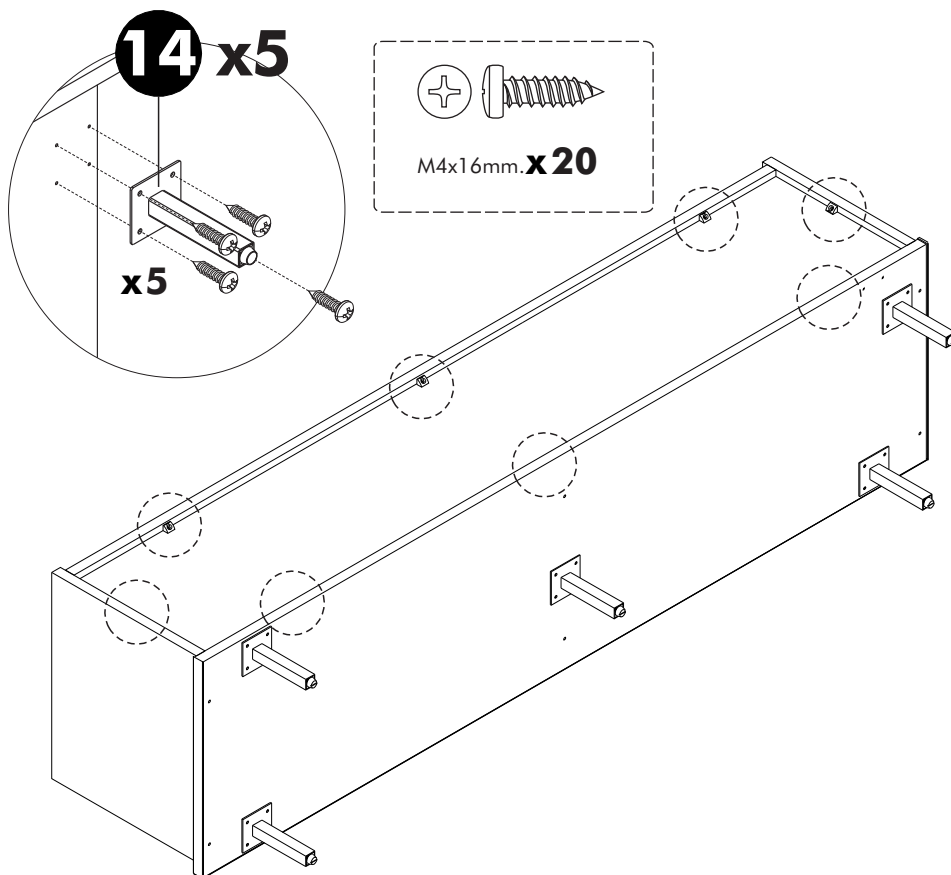

5.

ASSEMBLY

-DRWAER SET

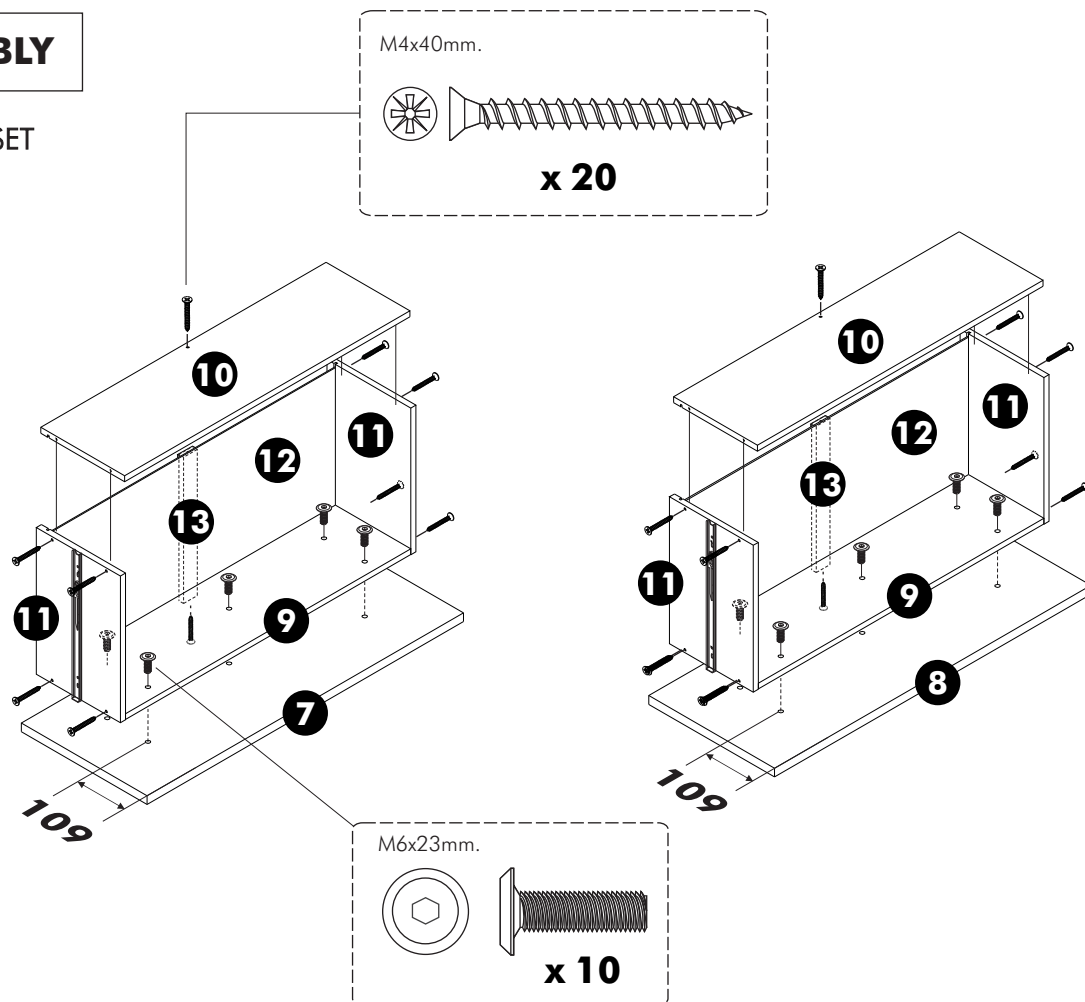

6.

