



HAZE

BED 6 ft.

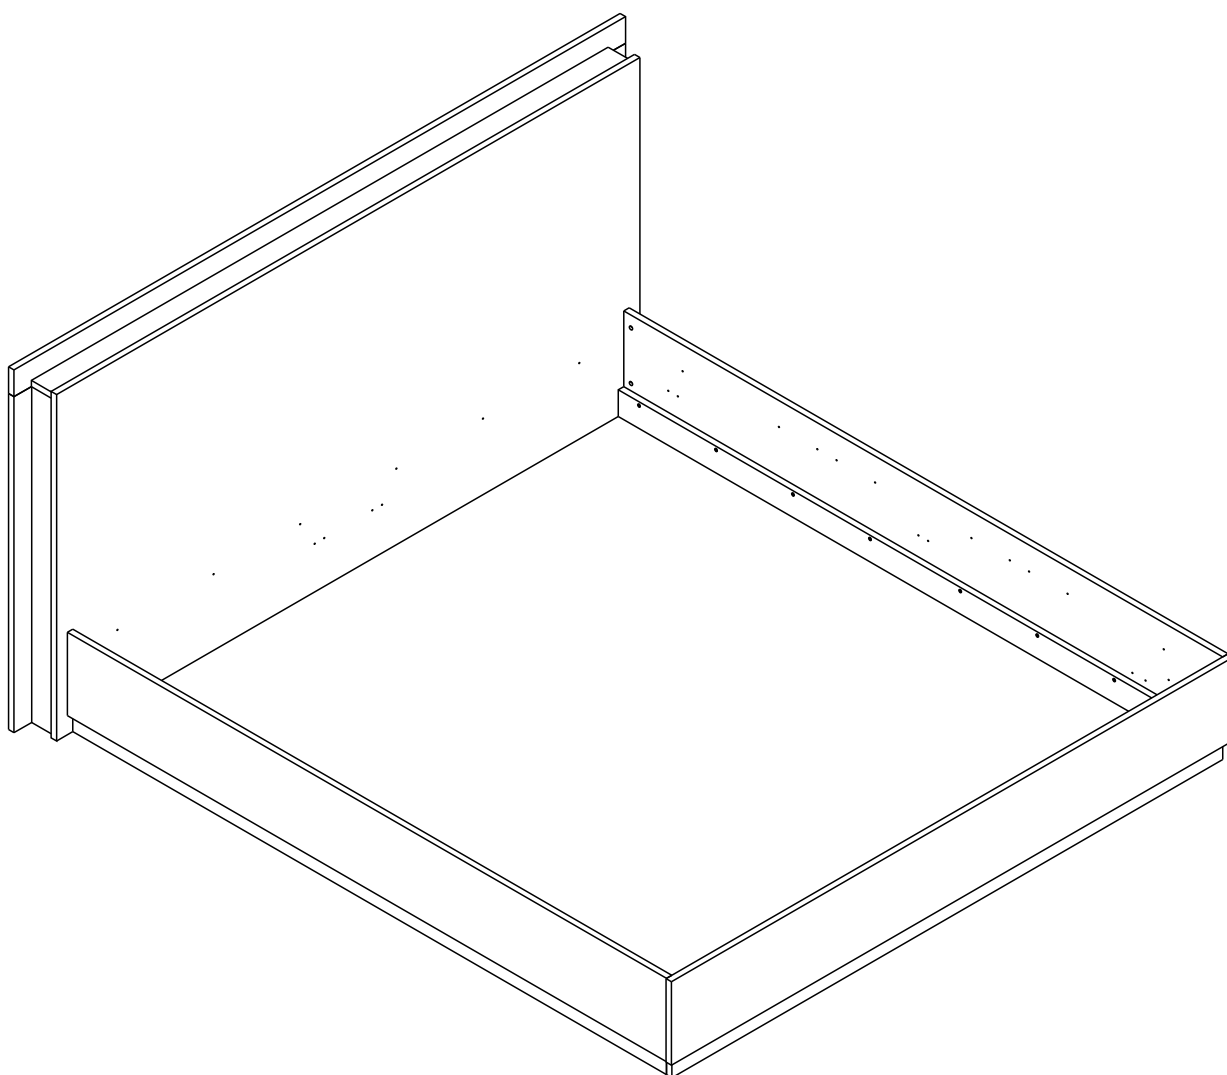


CONNECT SYSTEM


1

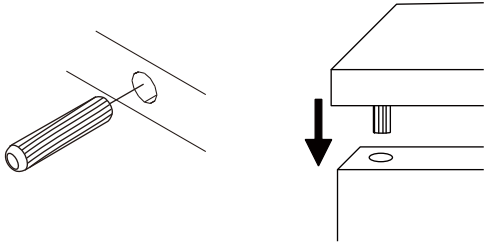

3

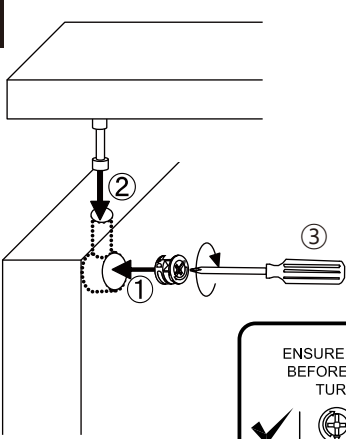


2

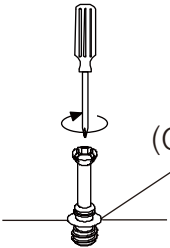


(Connecting bolts)

WHEN FITTING CAMS
 ENSURE STARTING POSITION IS CORRECT
 BEFORE YOU INSERT CONNECTING BOLT
 TURN CLOCKWISE UNTIL SECURE

✓				✗
↑				
CORRECT		WRONG		




M4x16mm.

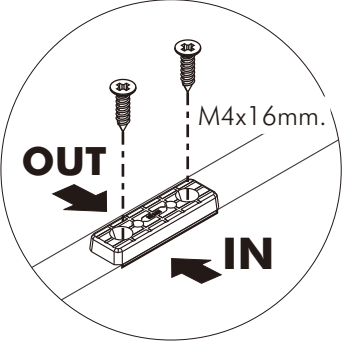

i


40mm.



☹️

☒

EQ




😊

☑️

HARDWARE


-BODY SET



x 4




x 4



#8x35

x 8

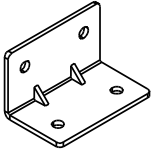

x 8




No.1

x 3




M4x16mm.

x 35

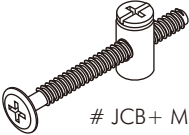

JCB+ M6x60

x 4




x 15



M4x16mm.

x 30




M4x30mm.

x 24


ASSEMBLY

-BODY SET


1.

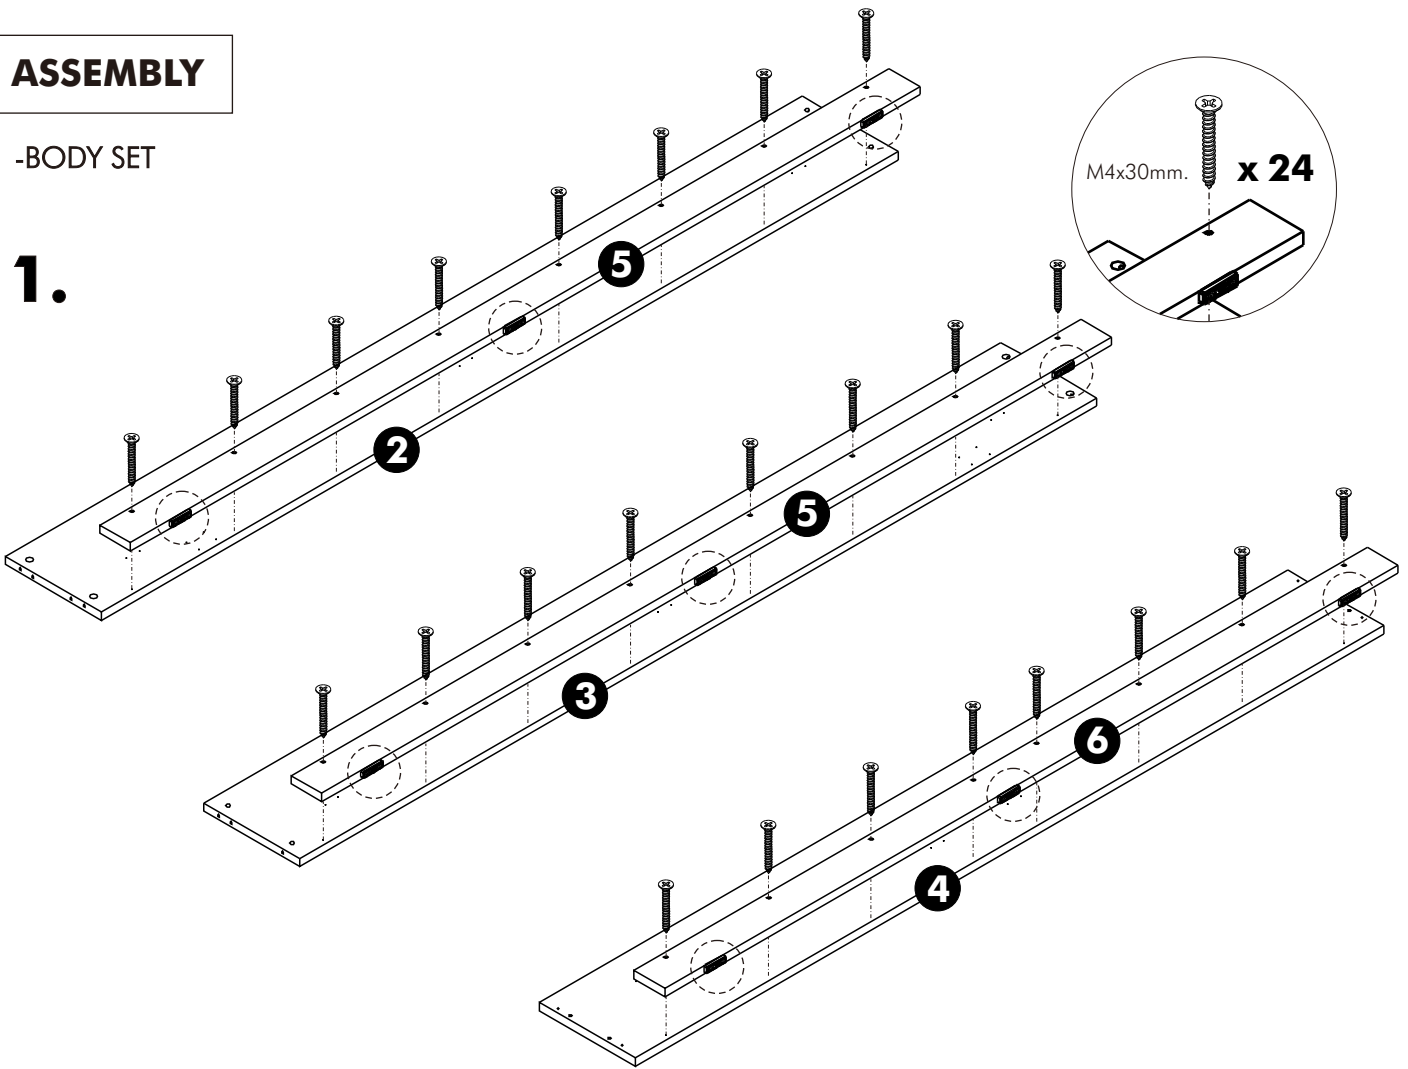

2.

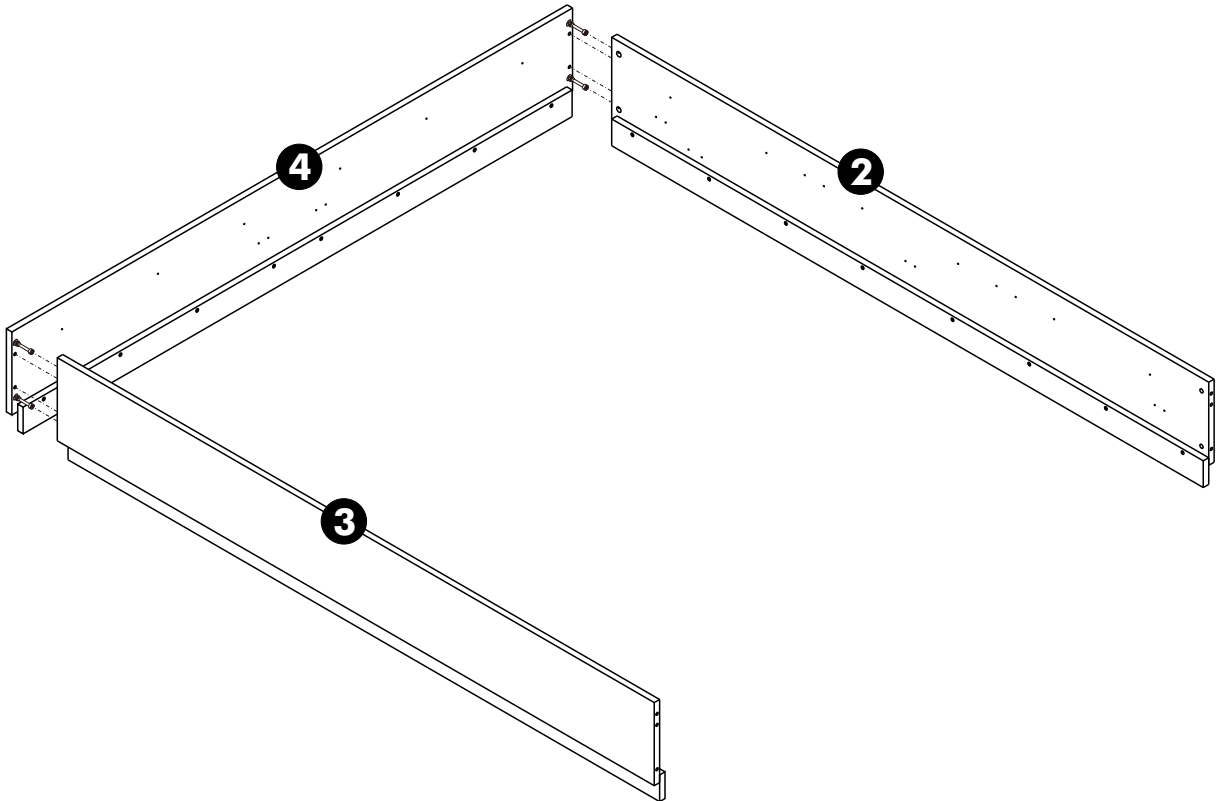

3.

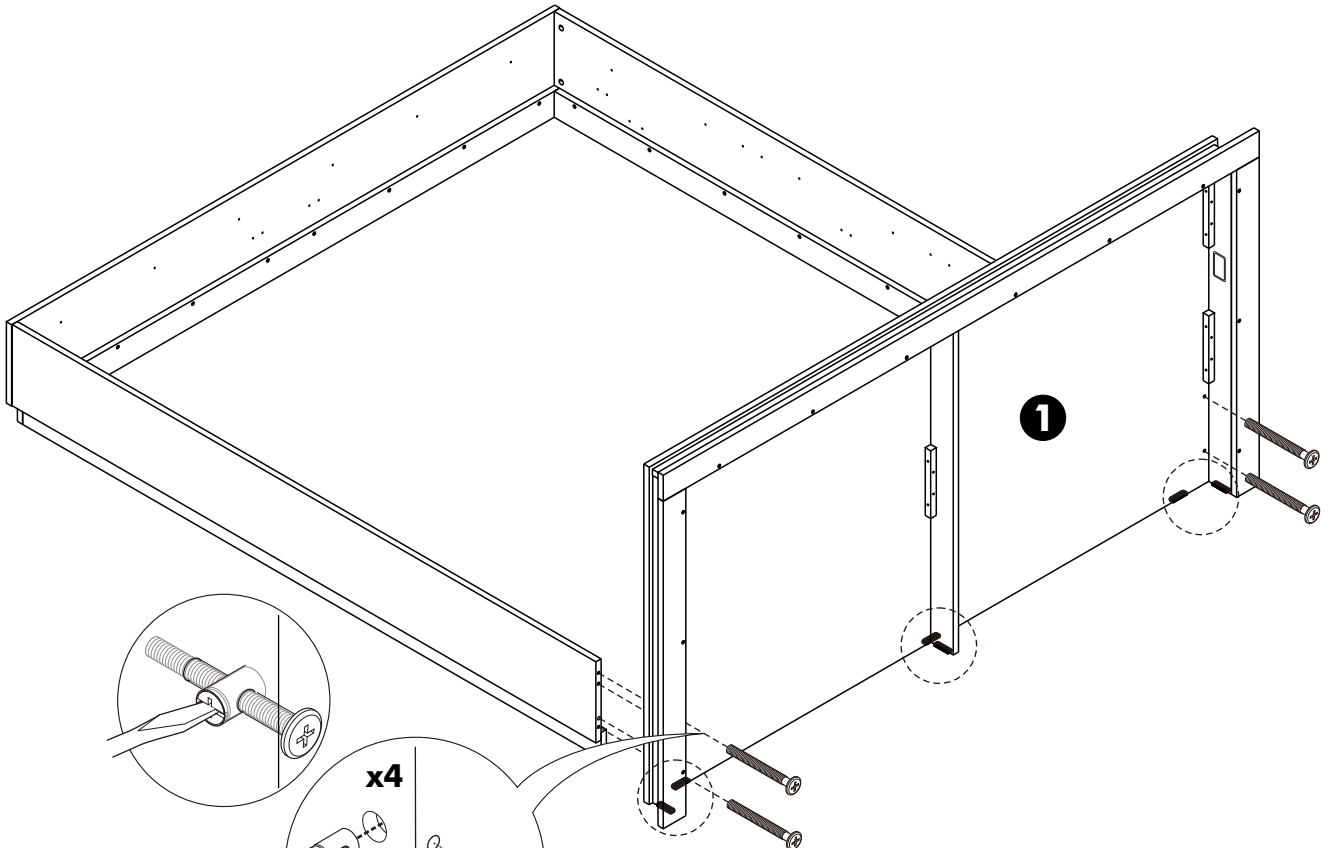

4.

