



# GRUFF

**Glass coffee table 120cm.**

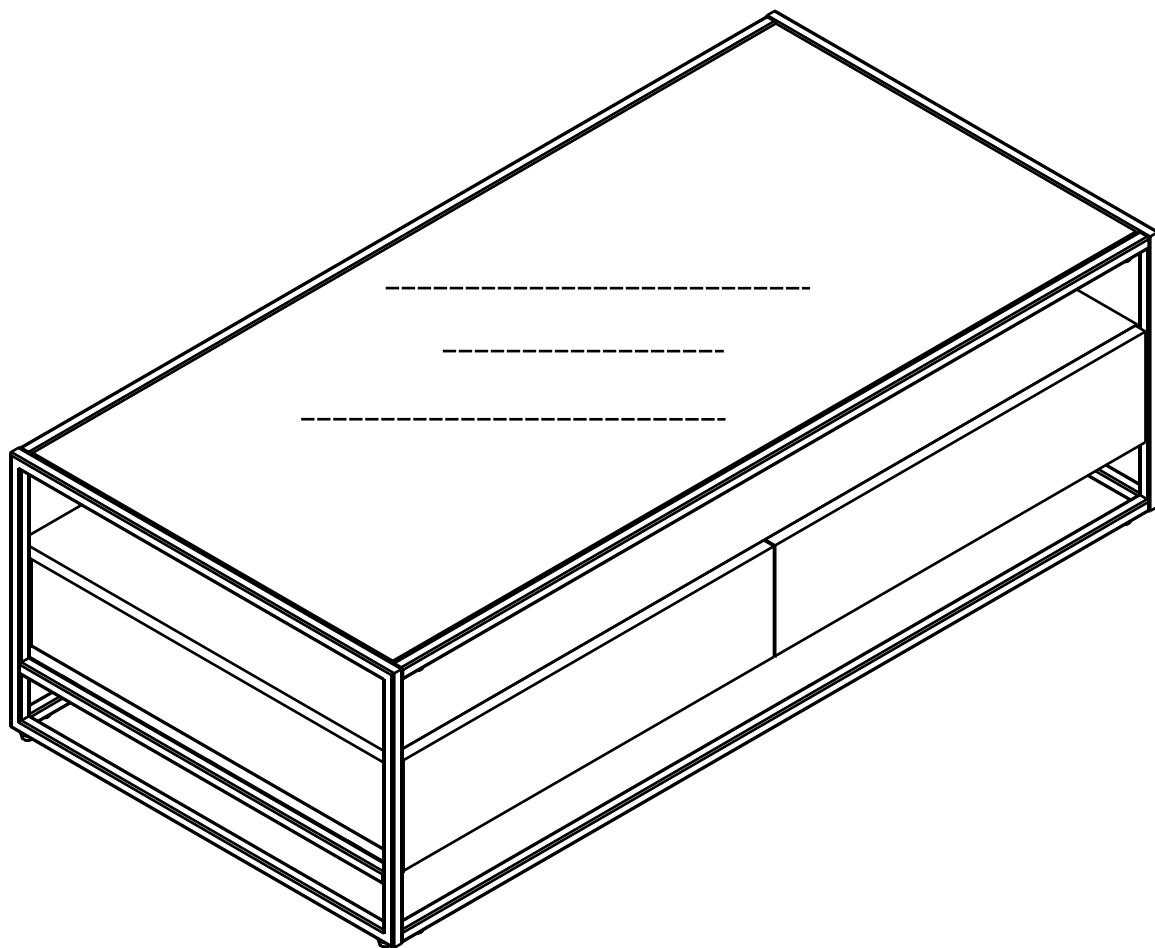


# CONNECT SYSTEM

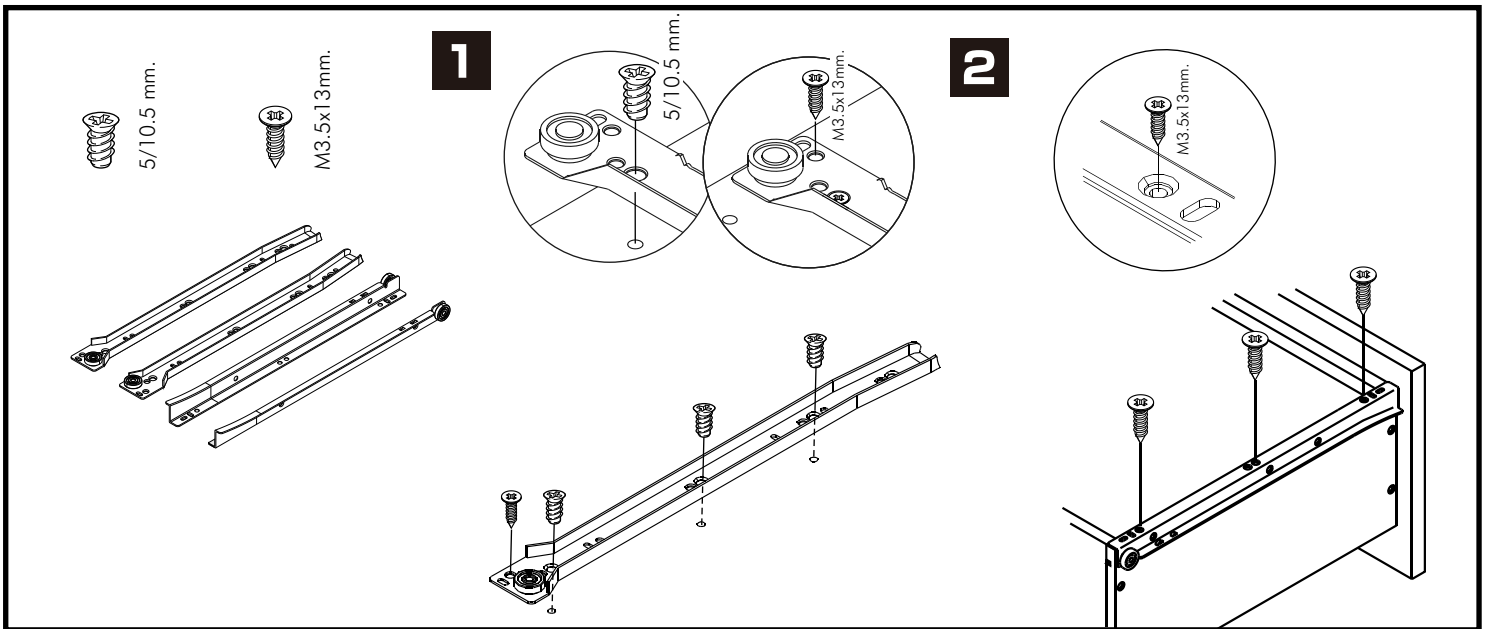


# HARDWARE


## -BODY SET




**X8**



**X6**



**X18**



**X8**



**X7**



**X4**



**X10**



**X10**




**X8**




**X2**

## -DRAWER SET

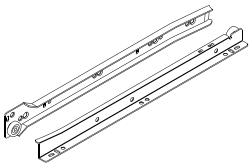


**X2**




#TFL4 M6x23

**X10**



#F+M3.5x13

**X16**



**X20**




**X1**




M5x10.5

**X12**


**1.**

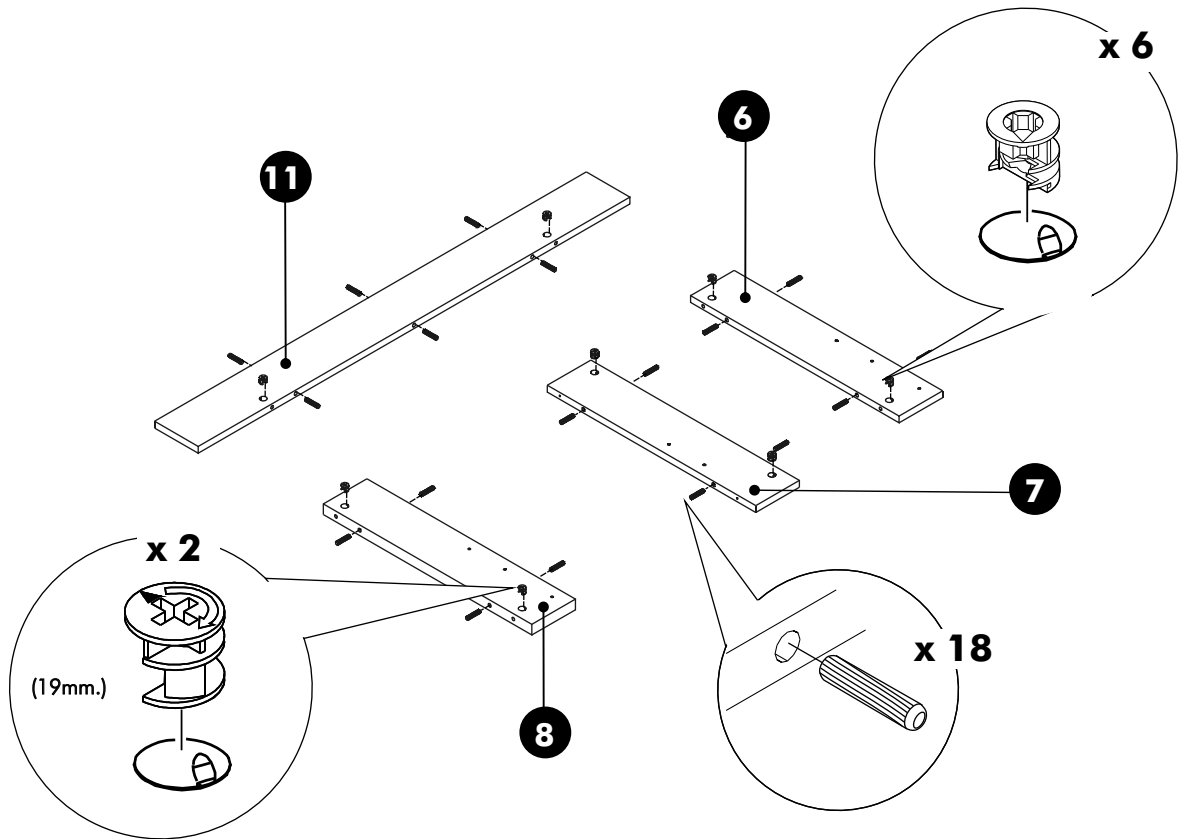


**2.**

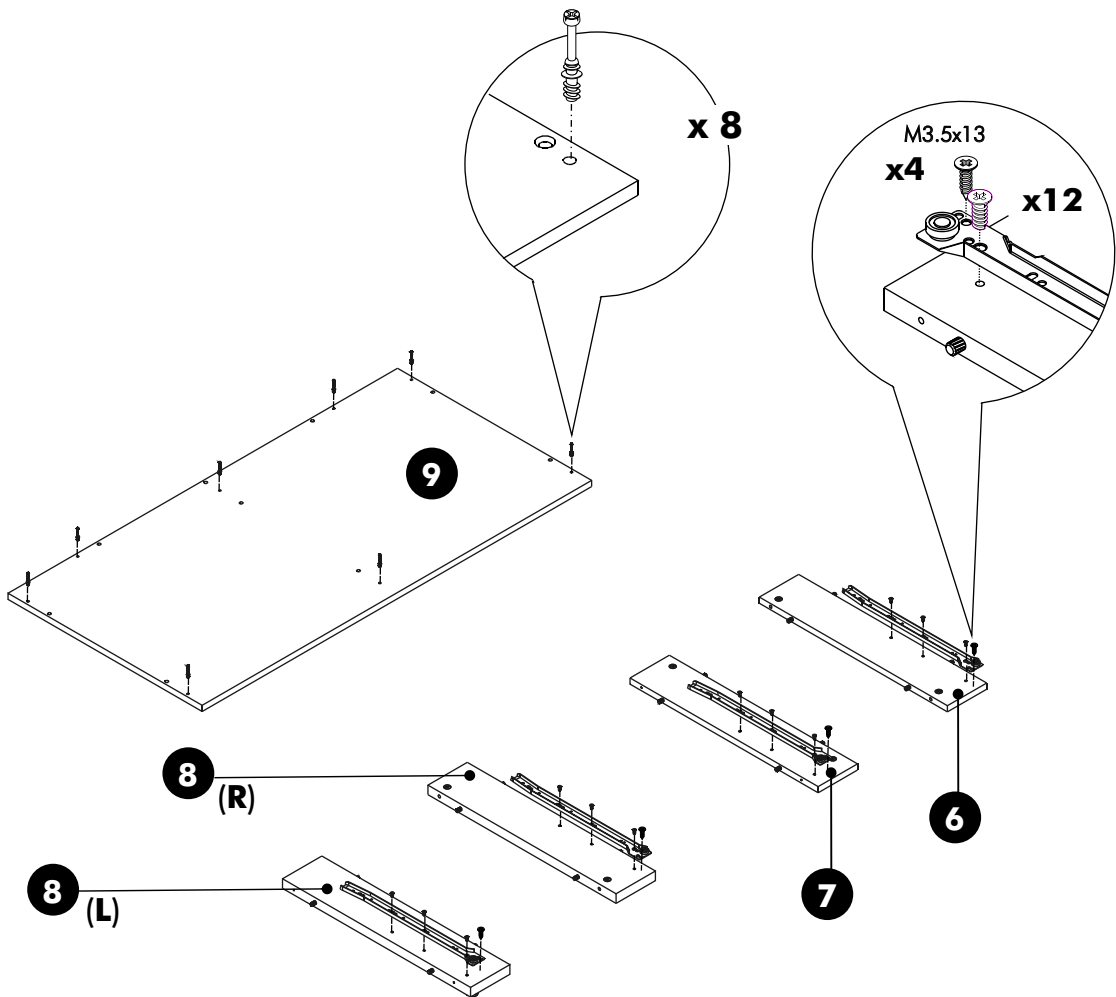

**3.**

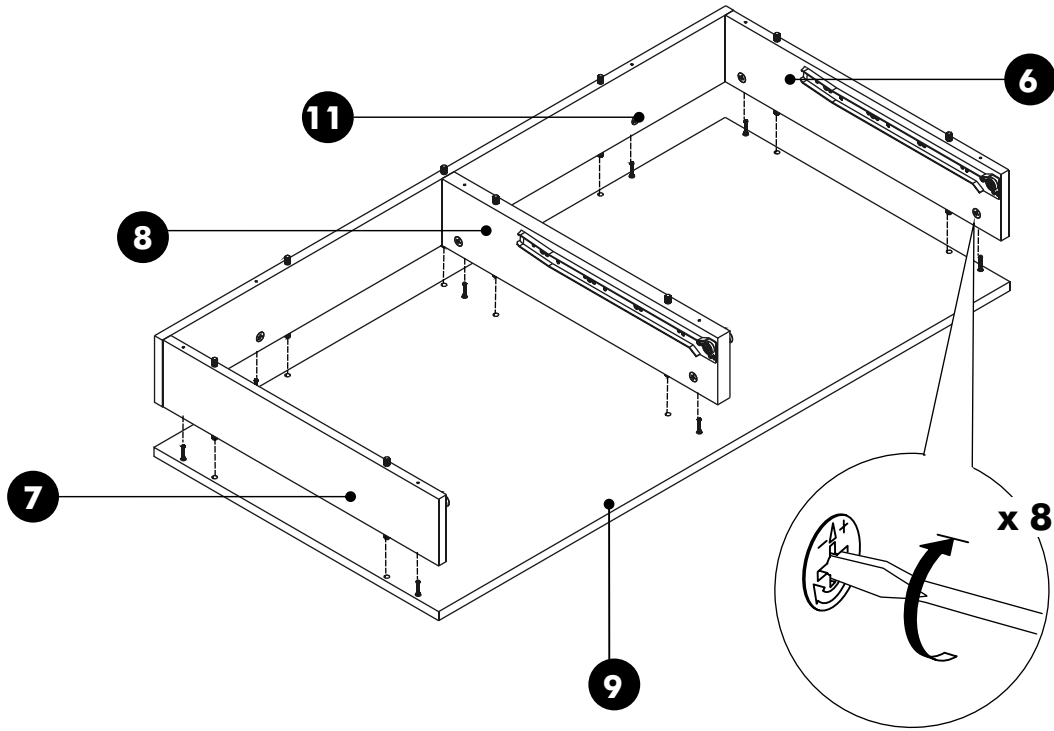


**4.**

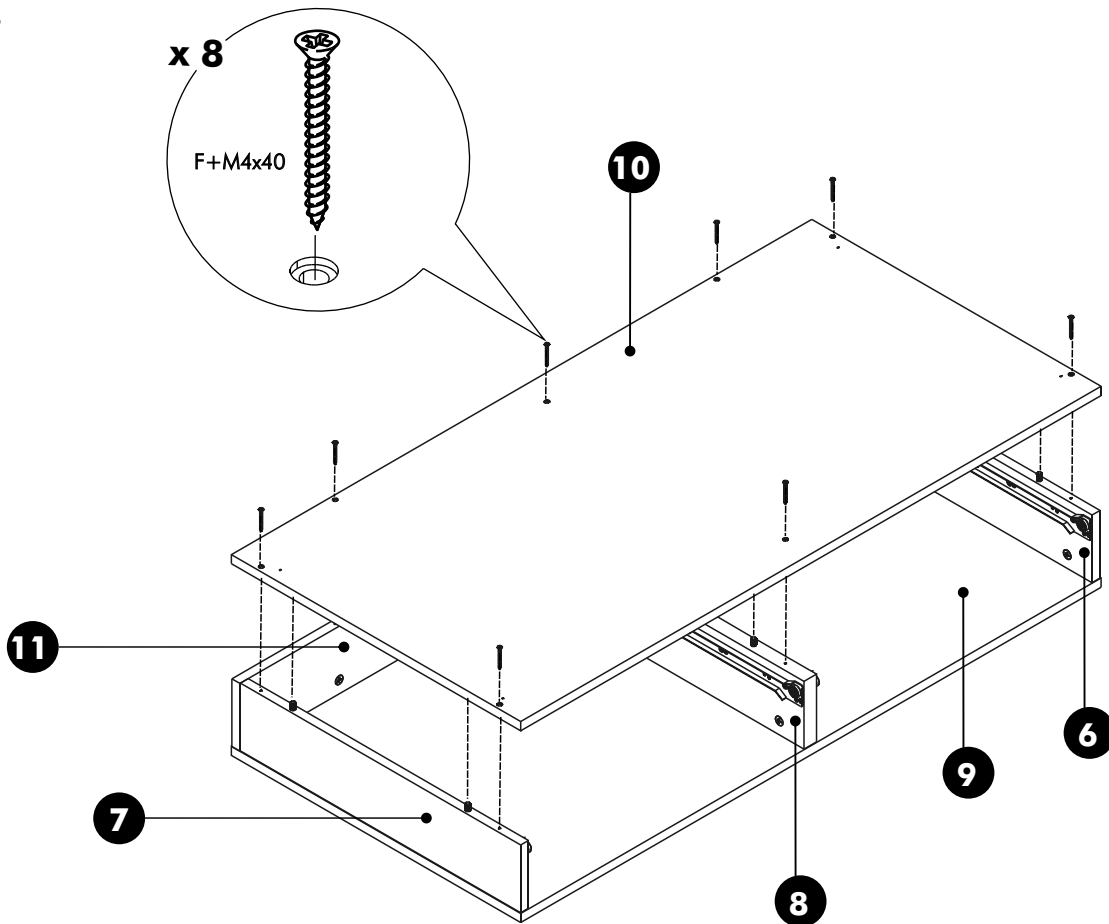


**5.**


NOTE: Do not over tighten cam screws.

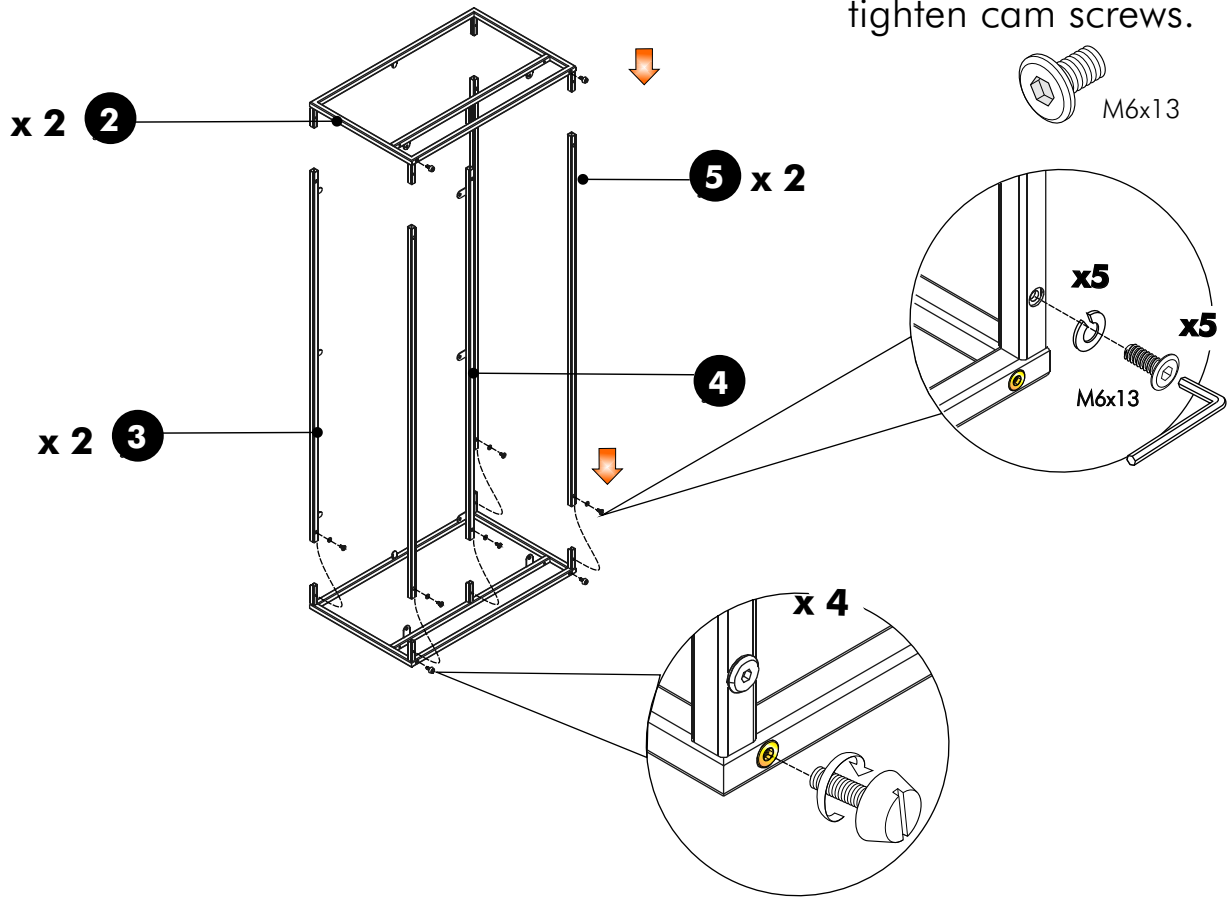


**6.**

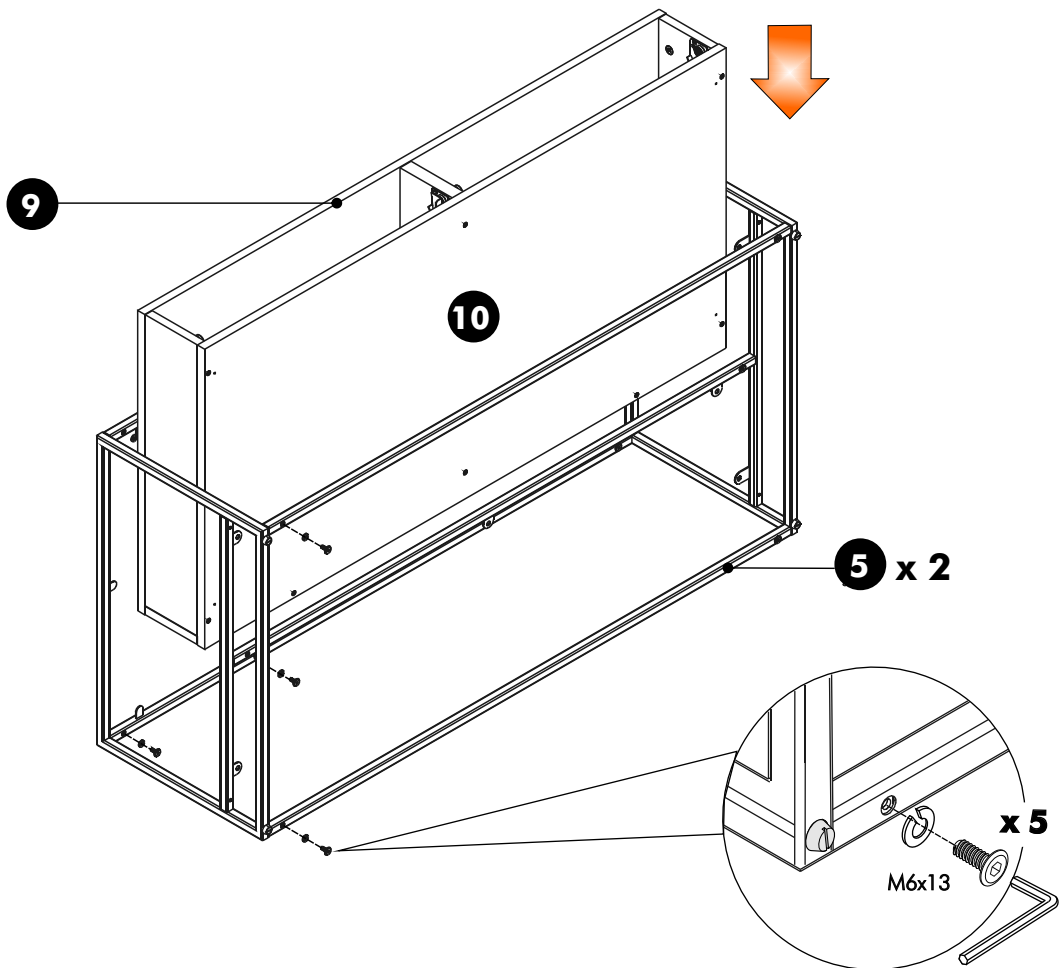

**7.**

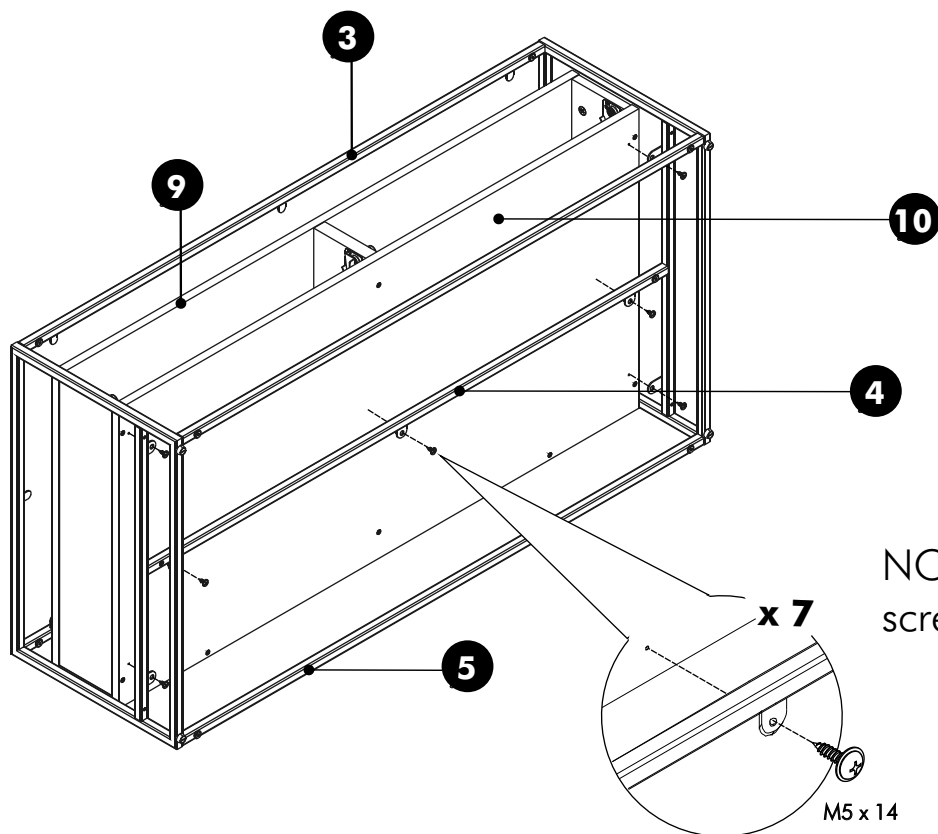


NOTE: retighten screw




M6x13

**8.**

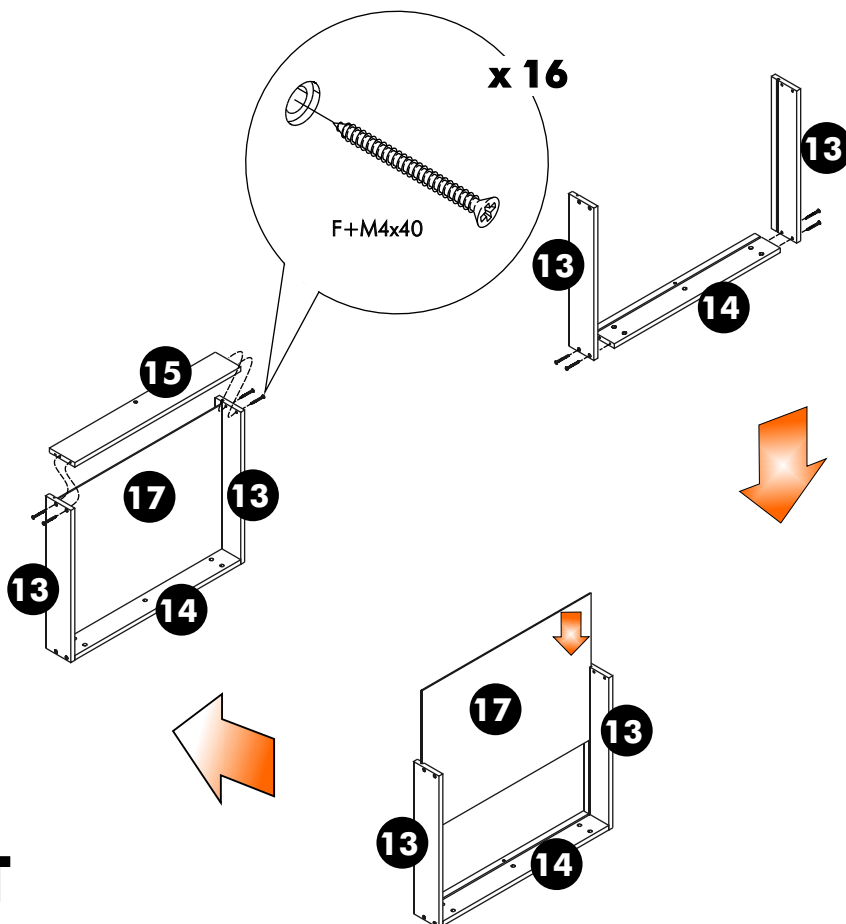


**2 SET**

9.

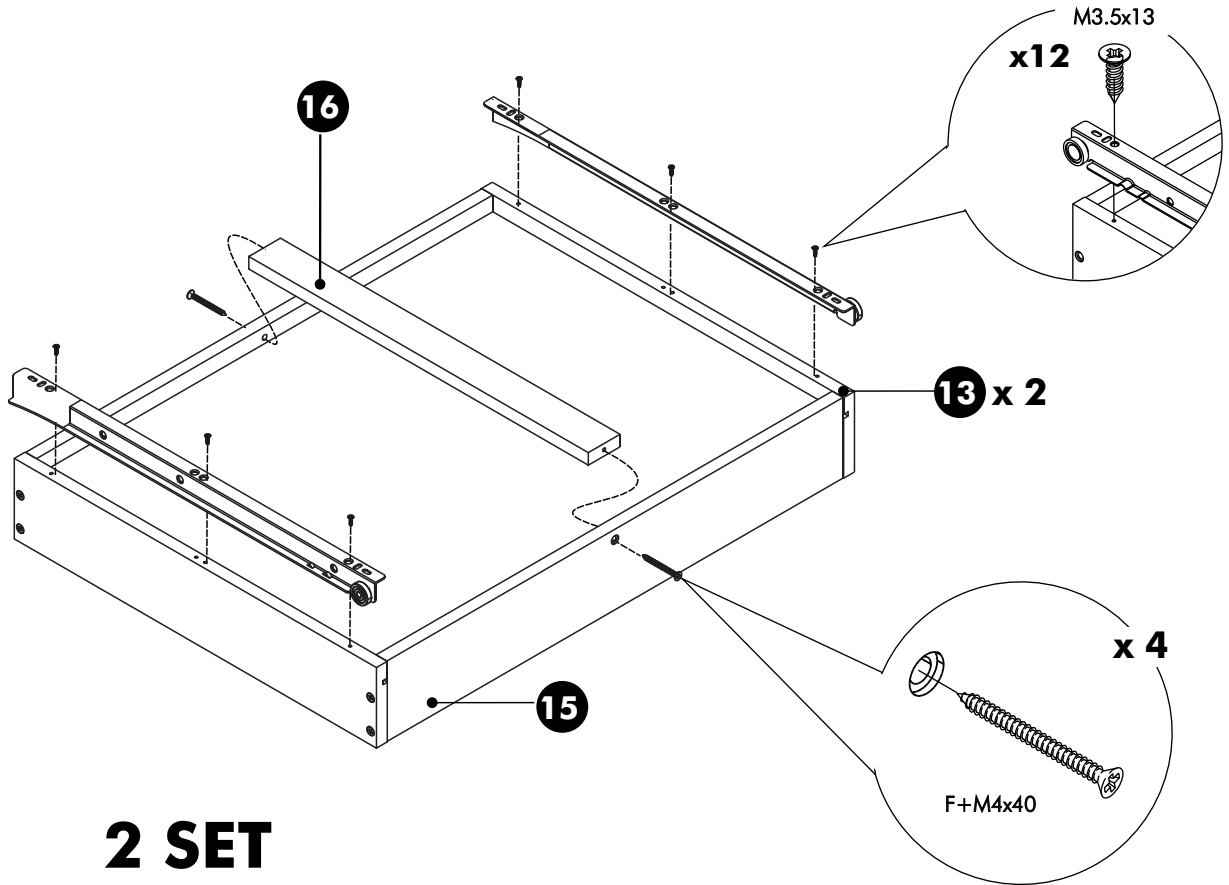

10.

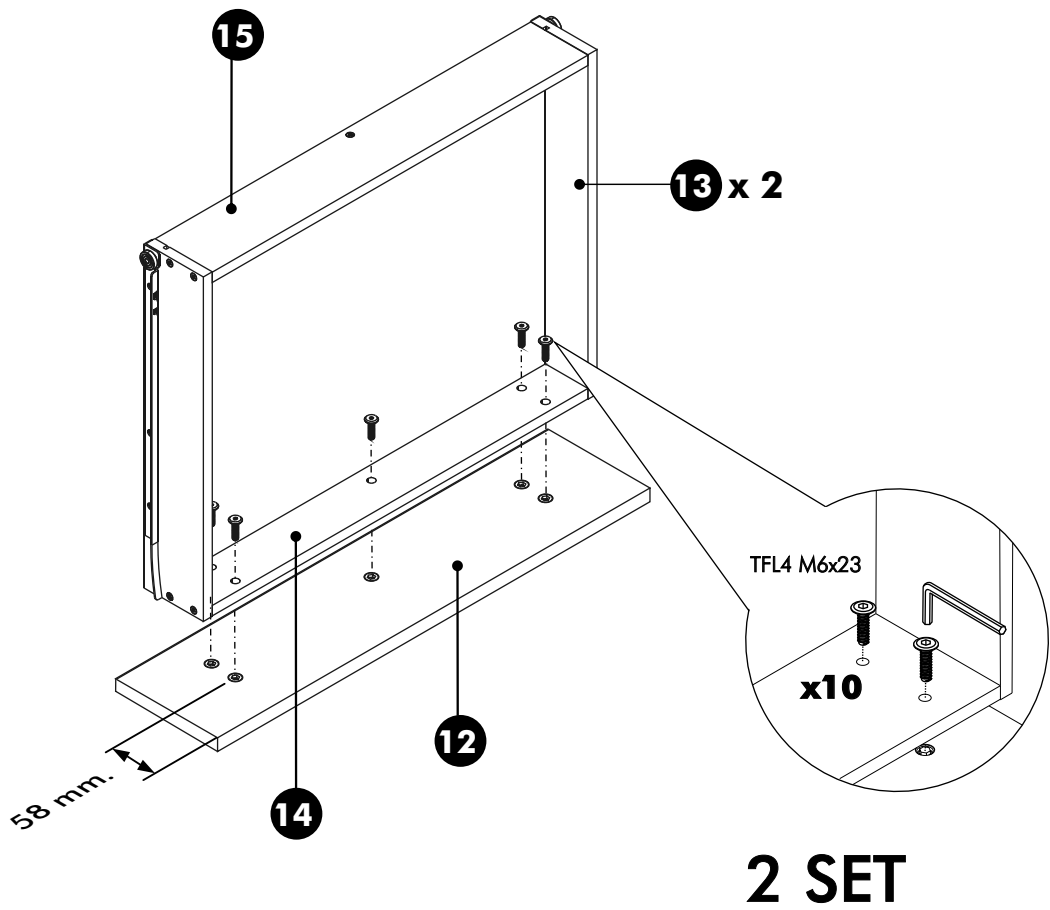

11.

