



URBANO

WALL CABINET 100 cm

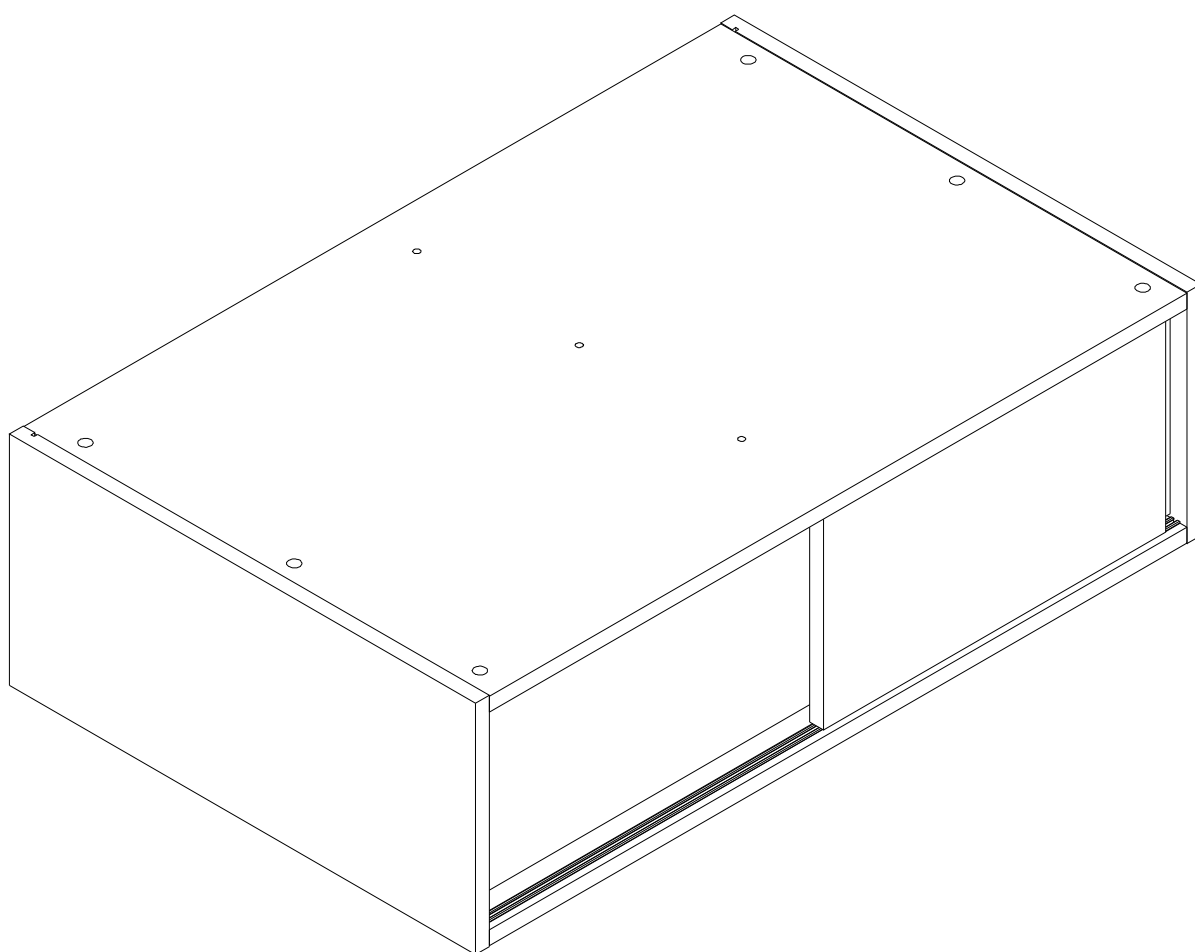


CONNECT SYSTEM


1

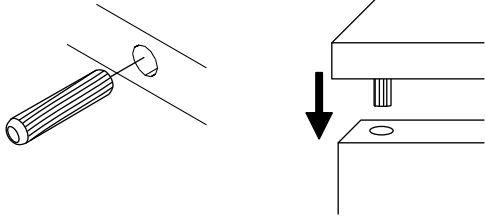

2

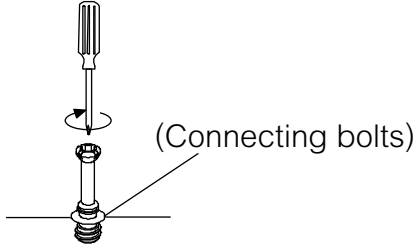


3

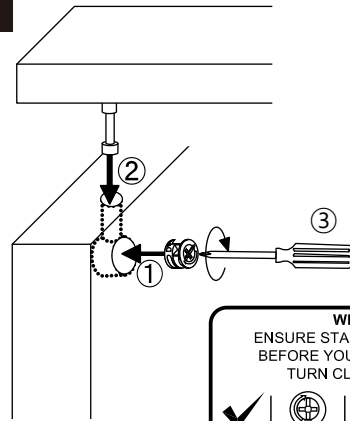

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓				✗
	CORRECT	WRONG		

HARDWARE




X 12




#16mm.

X 12




#8x35

X 12

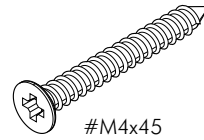


#M4x45

X 6



#M4x16

X 1



#M4x25

X 4



X 4



X 4



#M4x20

X 4



Ø11mm.


X 2




#M4x30

X 2


1.

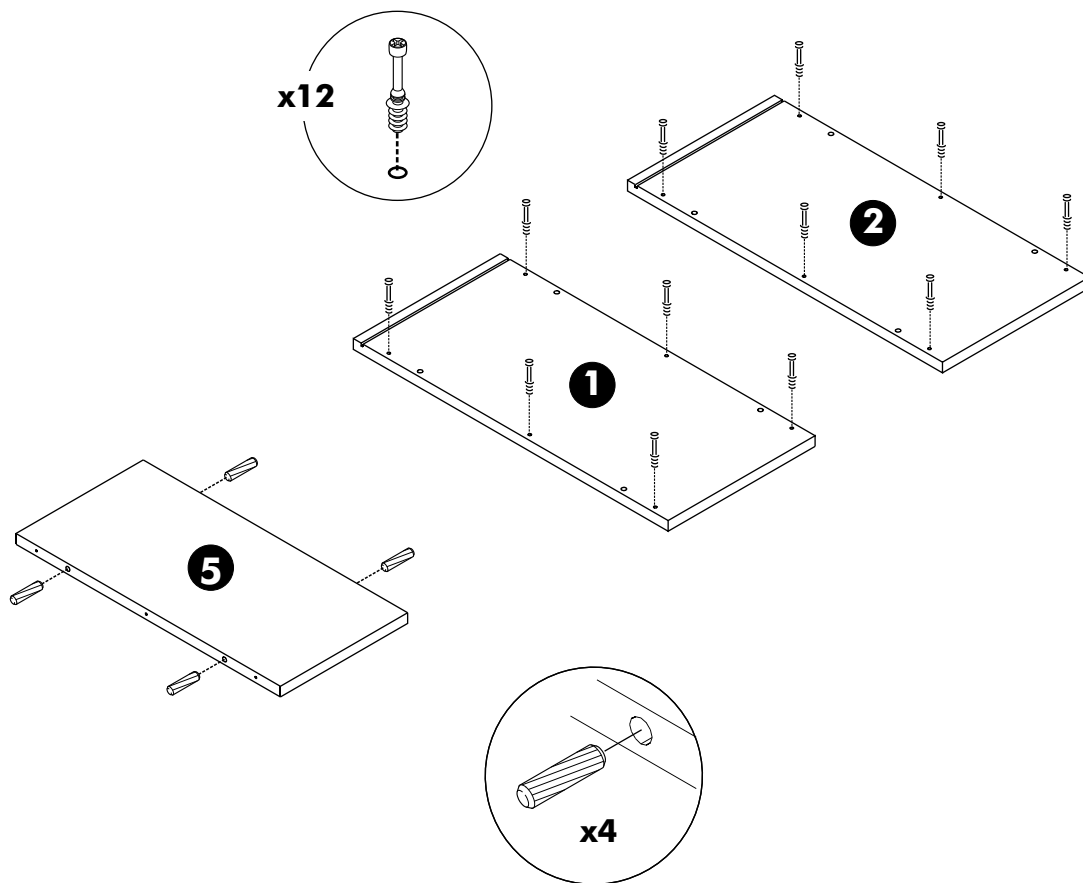


2.

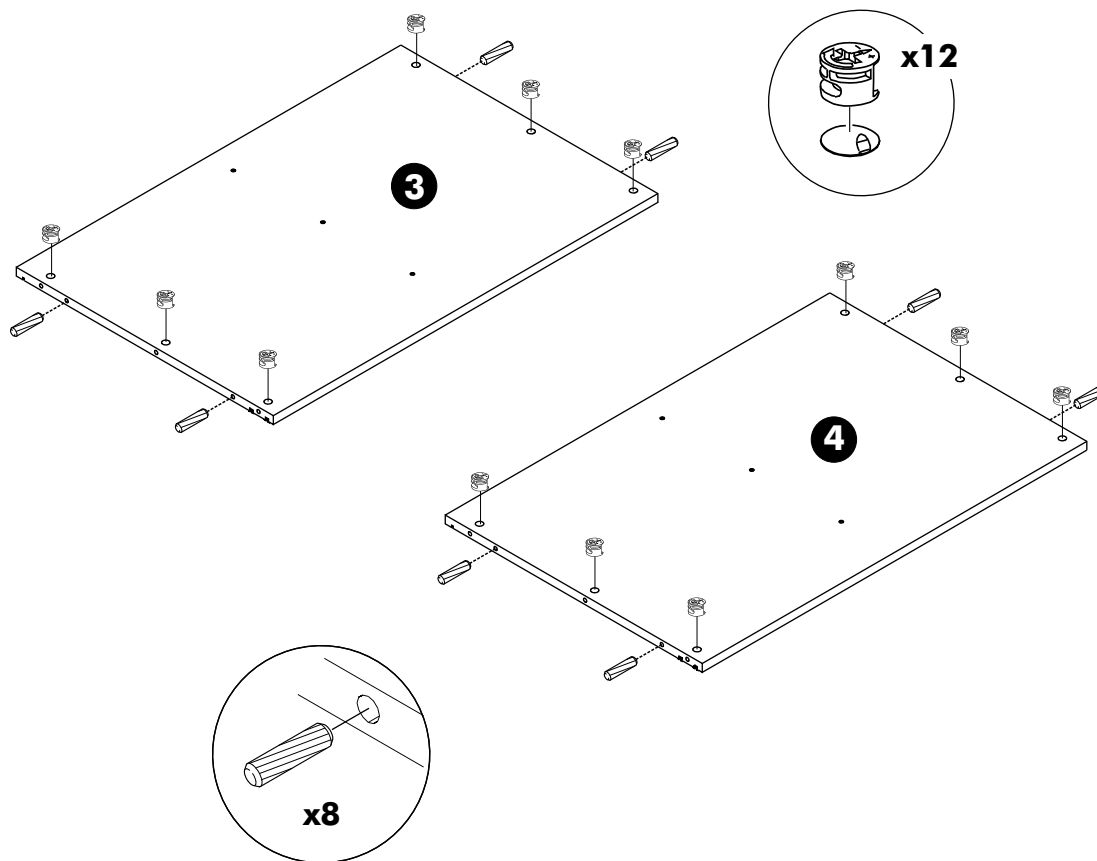


3.

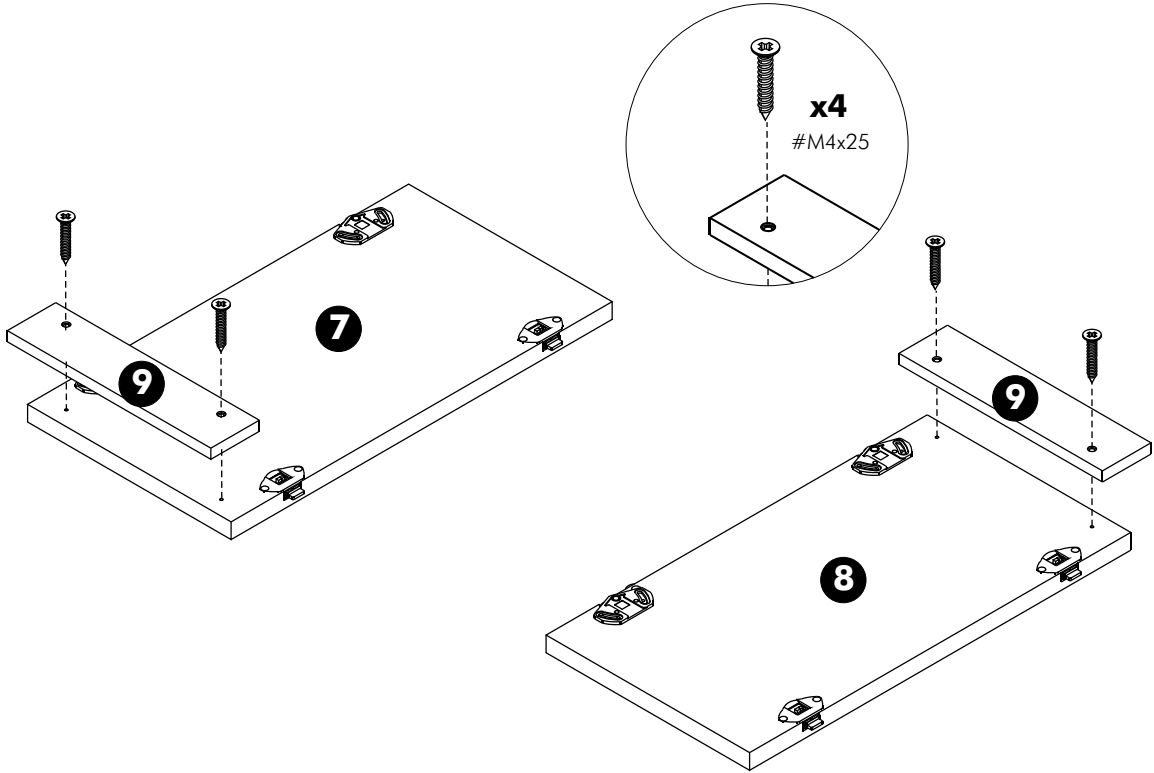


4.

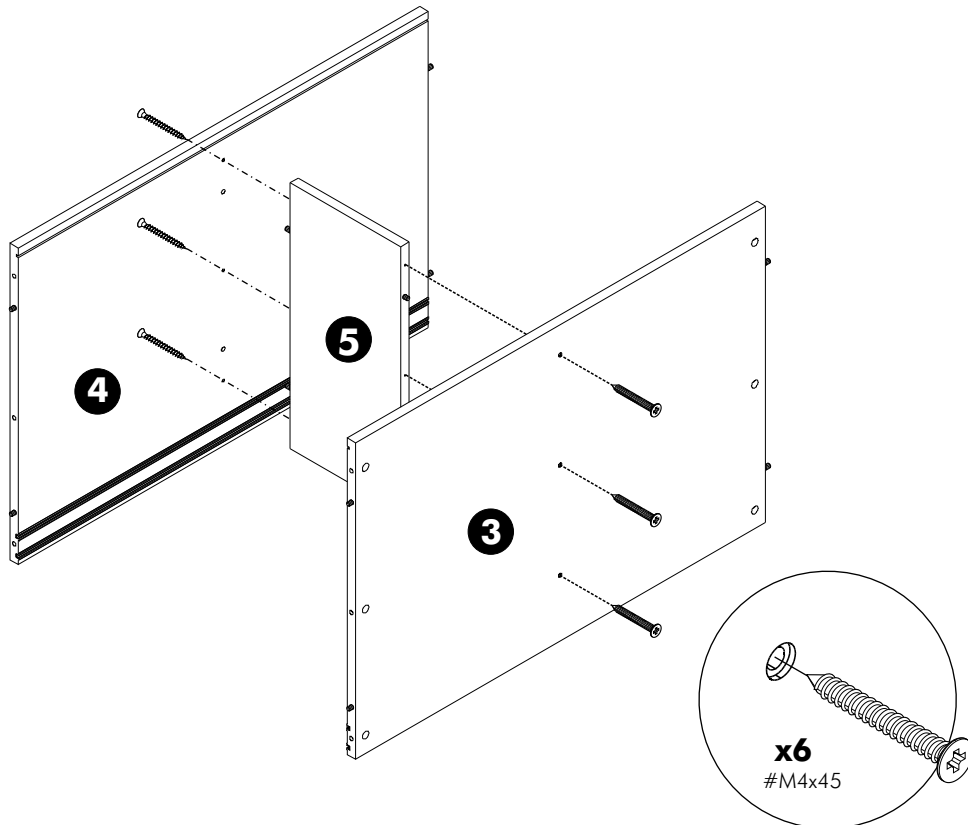


5.

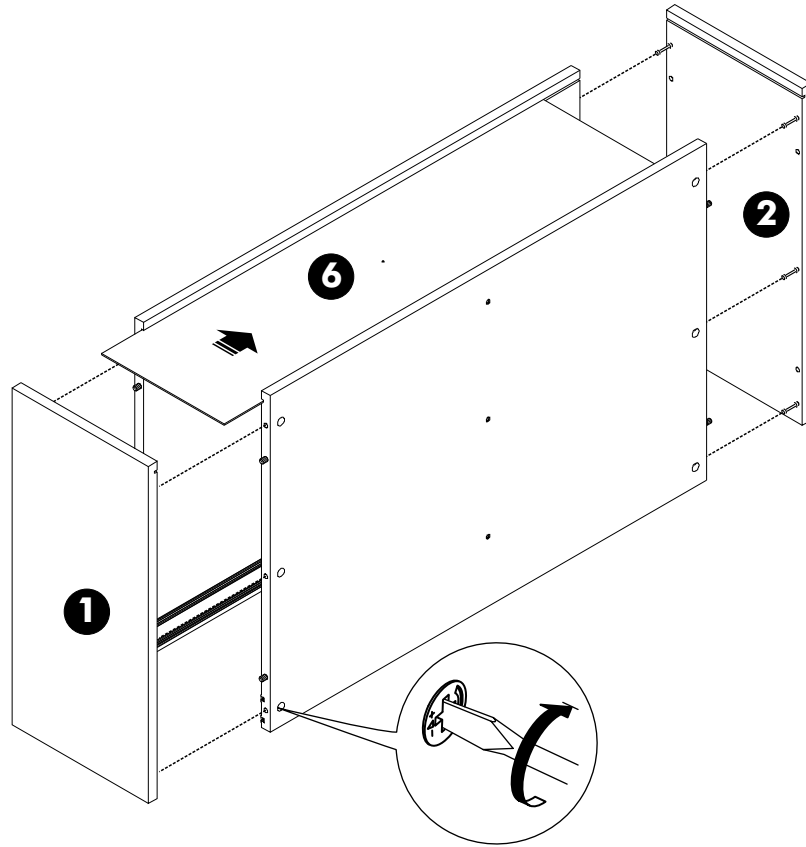



6.

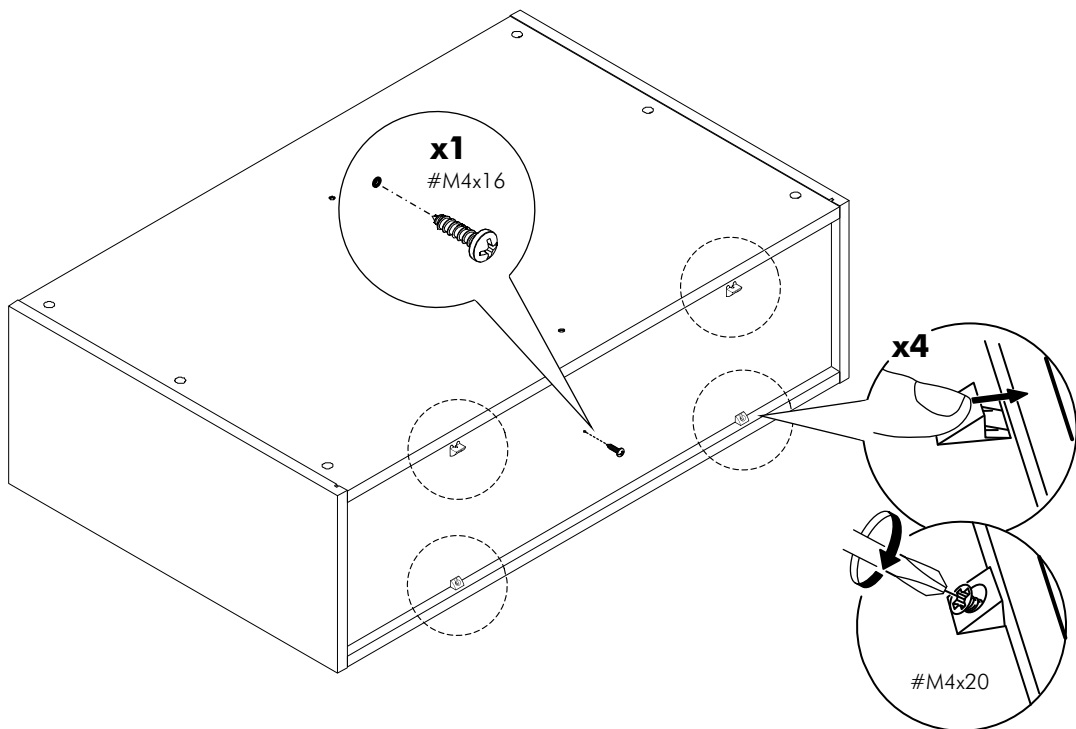

7.

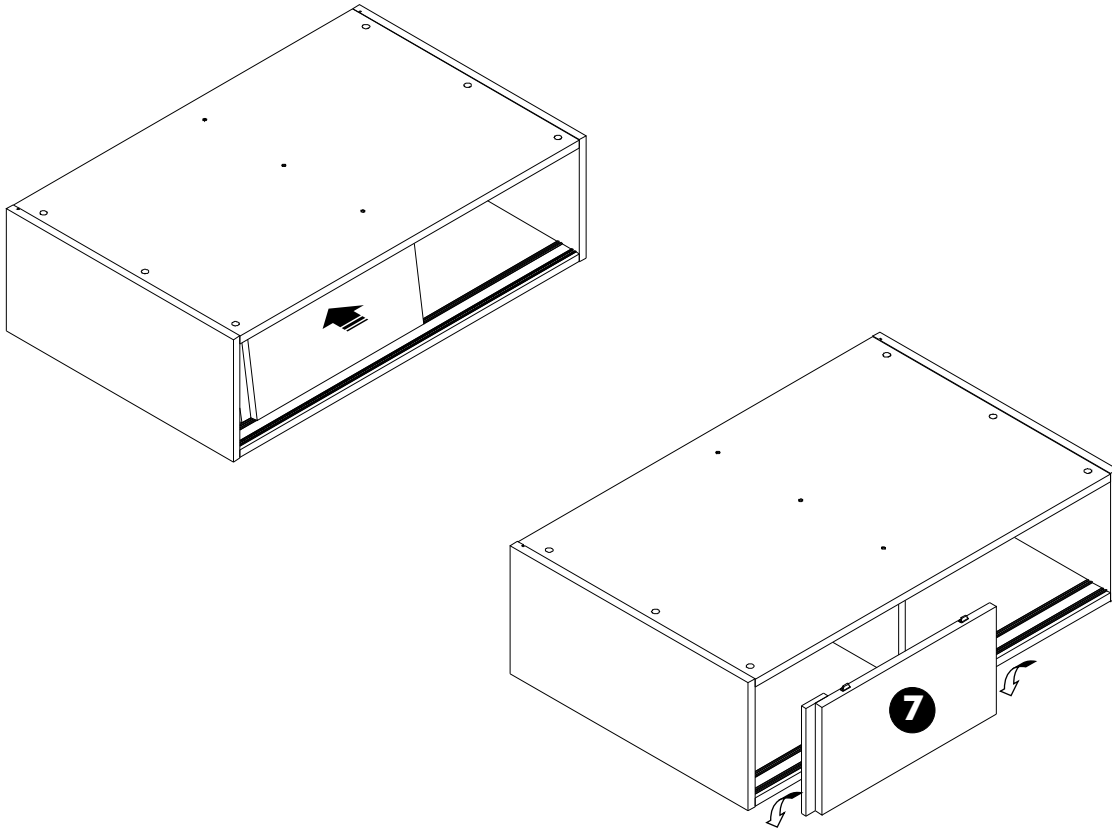

8.

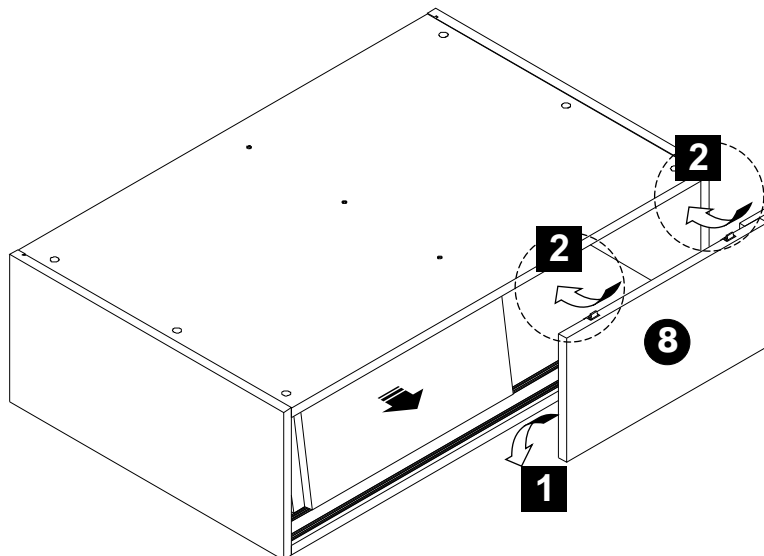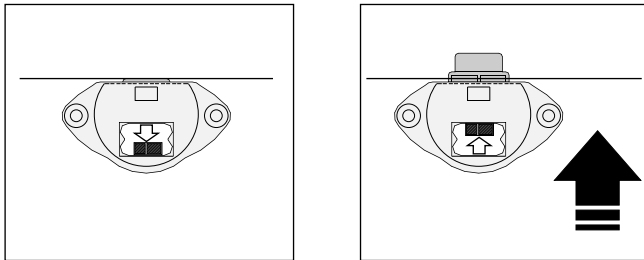

9.

