


# KARLMAR

## Chest 4 drawers

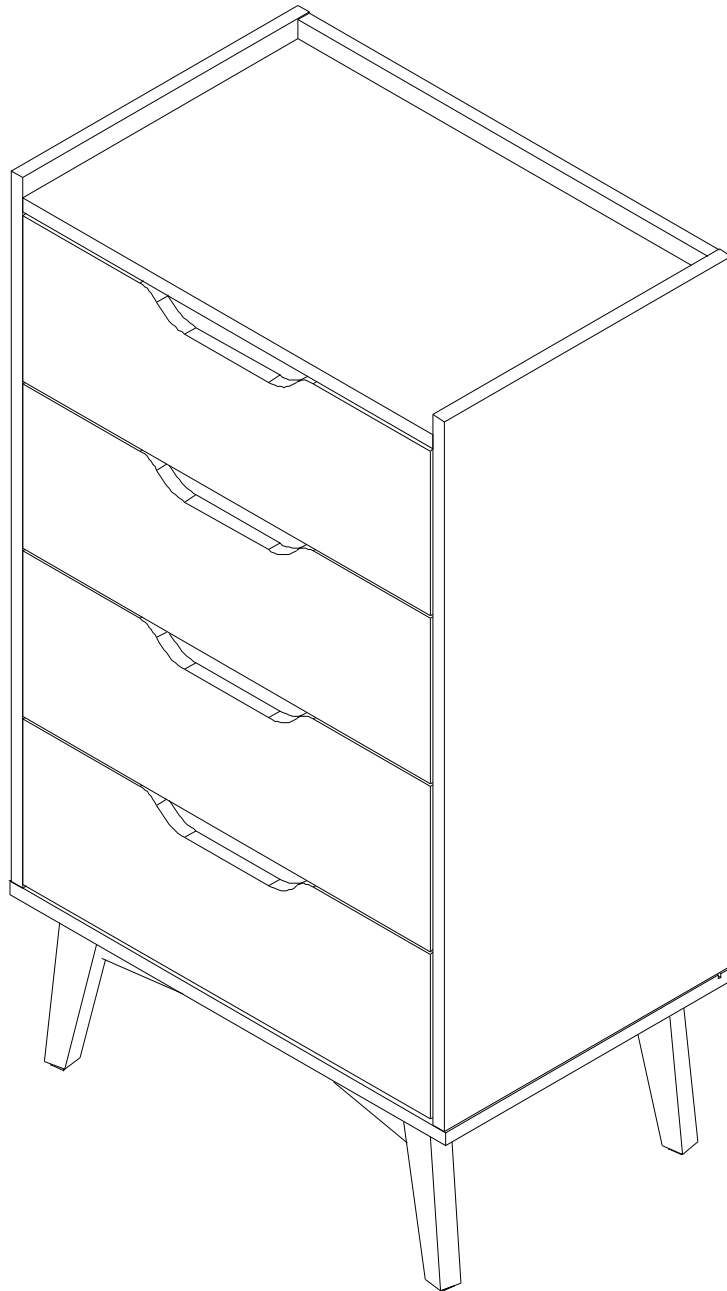

# CONNECT SYSTEM

**1**

**2**

(Connecting bolts)

**3**

**WHEN FITTING CAMS**  
ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING BOLT  
TURN CLOCKWISE UNTIL SECURE

✓  
CORRECT

✗  
WRONG

5/10.5 mm.

M3.5x13mm.

**1**

5/10.5 mm.

M3.5x13mm.

**2**

M3.5x13mm.

M4.5x60mm.

M4x16mm.

⚠

M4.5x60mm.

Ø7x50

1


2

3

4

M4x16mm.

# HARDWARE

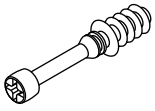


**X 8**



#16mm.

**X 8**

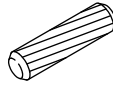


#8x35

**X 12**



#M4.5x60

**X 1**

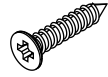


#M4x16

**X 4**




#M4x16

**X 21**

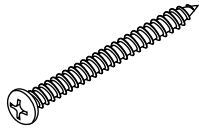


#M4x50

**X 4**

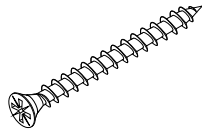


#M4x50


**X 7**

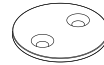


**X 2**

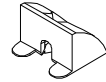


**X 6**

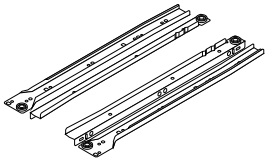

**X 4 Set**

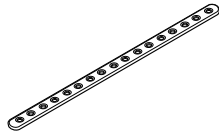


**X 1**

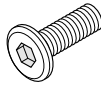


#TFL4 M6x23

**X 20**

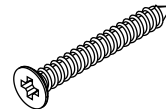


#M4x40

**X 40**

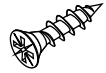


#M3.5x13

**X 32**

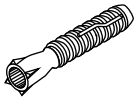

**X 1**

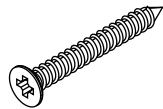


#M4x30

**X 20**



**X 1**

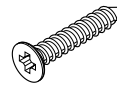


#M4x20

**X 6**




#M5x10.5

**X 24**

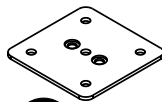


**16x4**

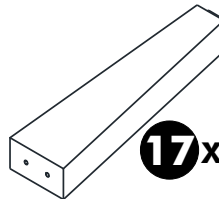


**17x4**


1.

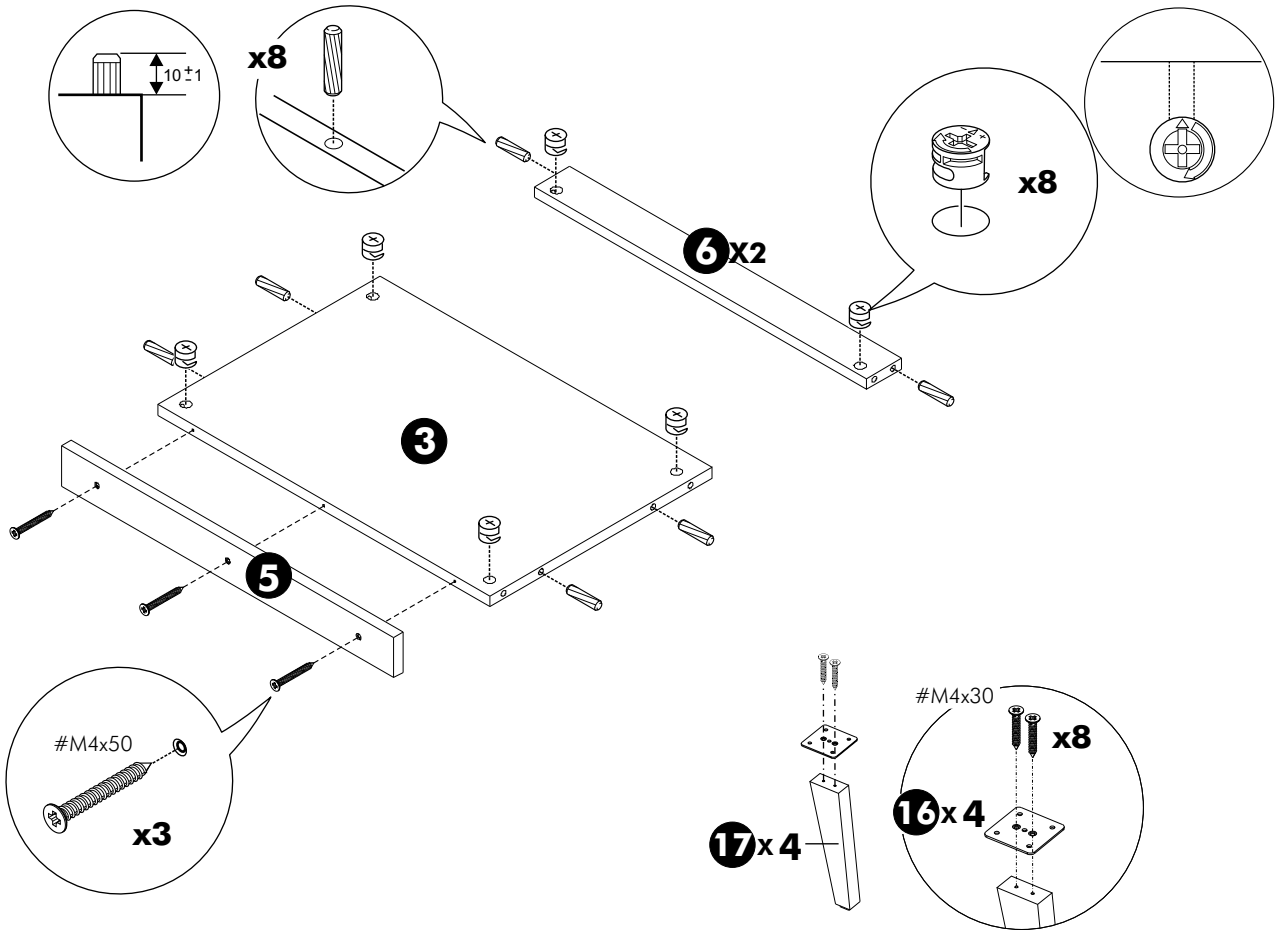


2.

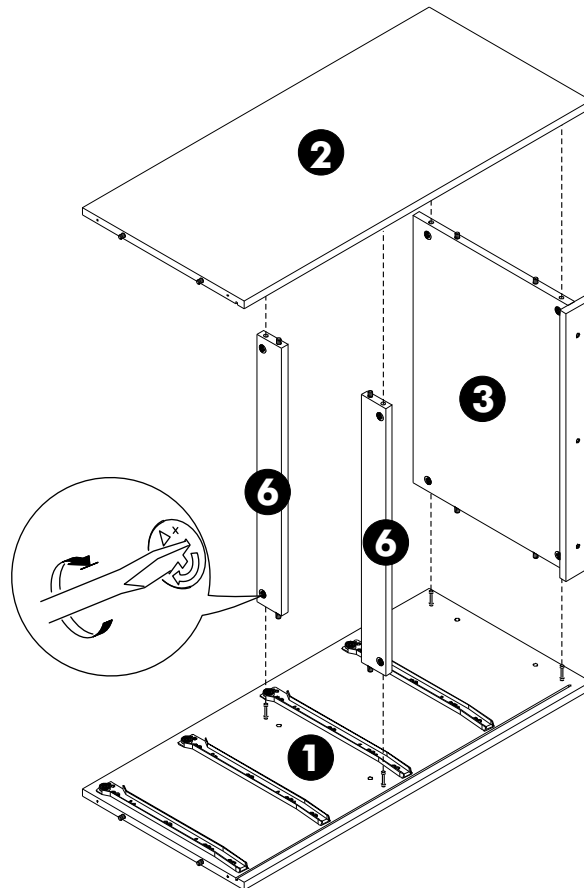


**3.**

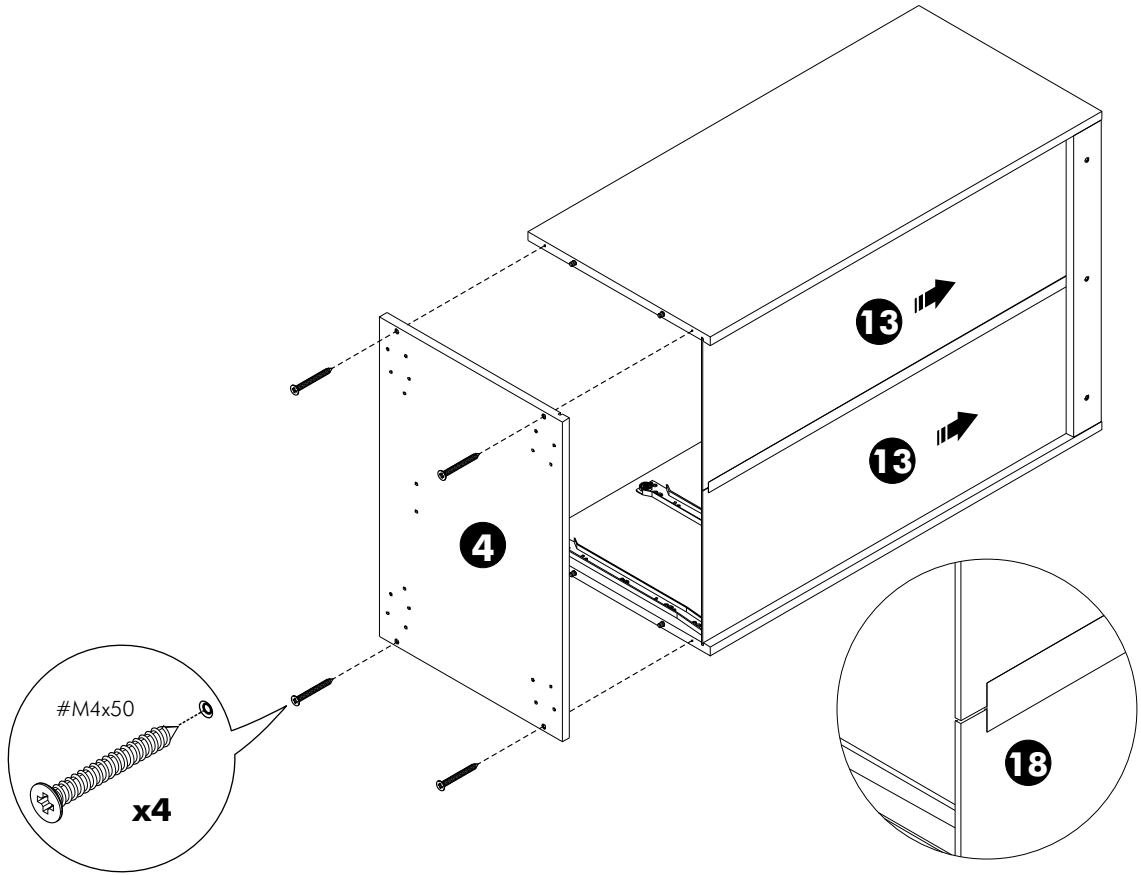


**4.**

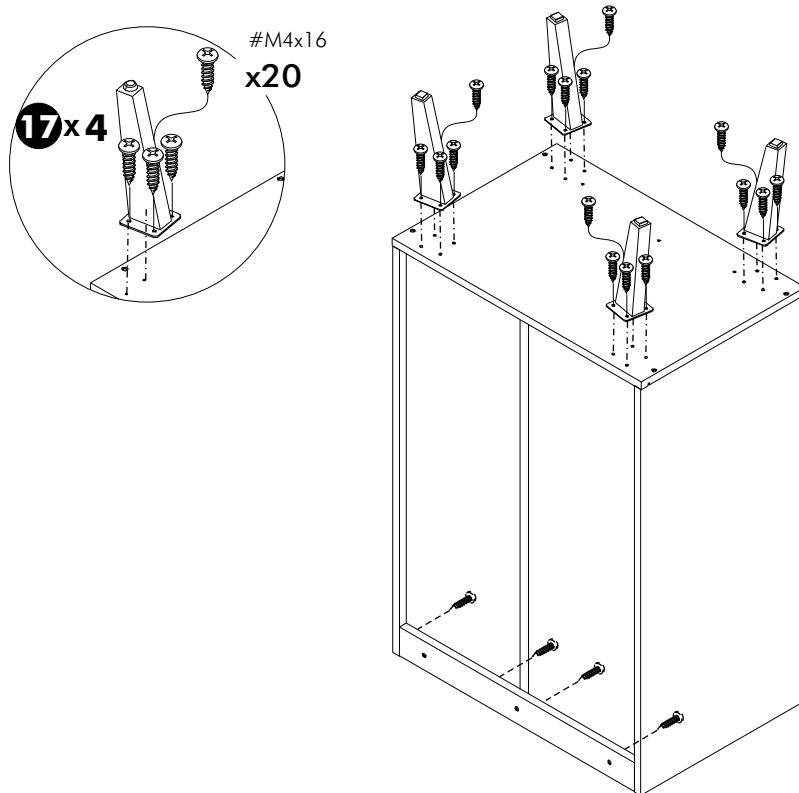

5.

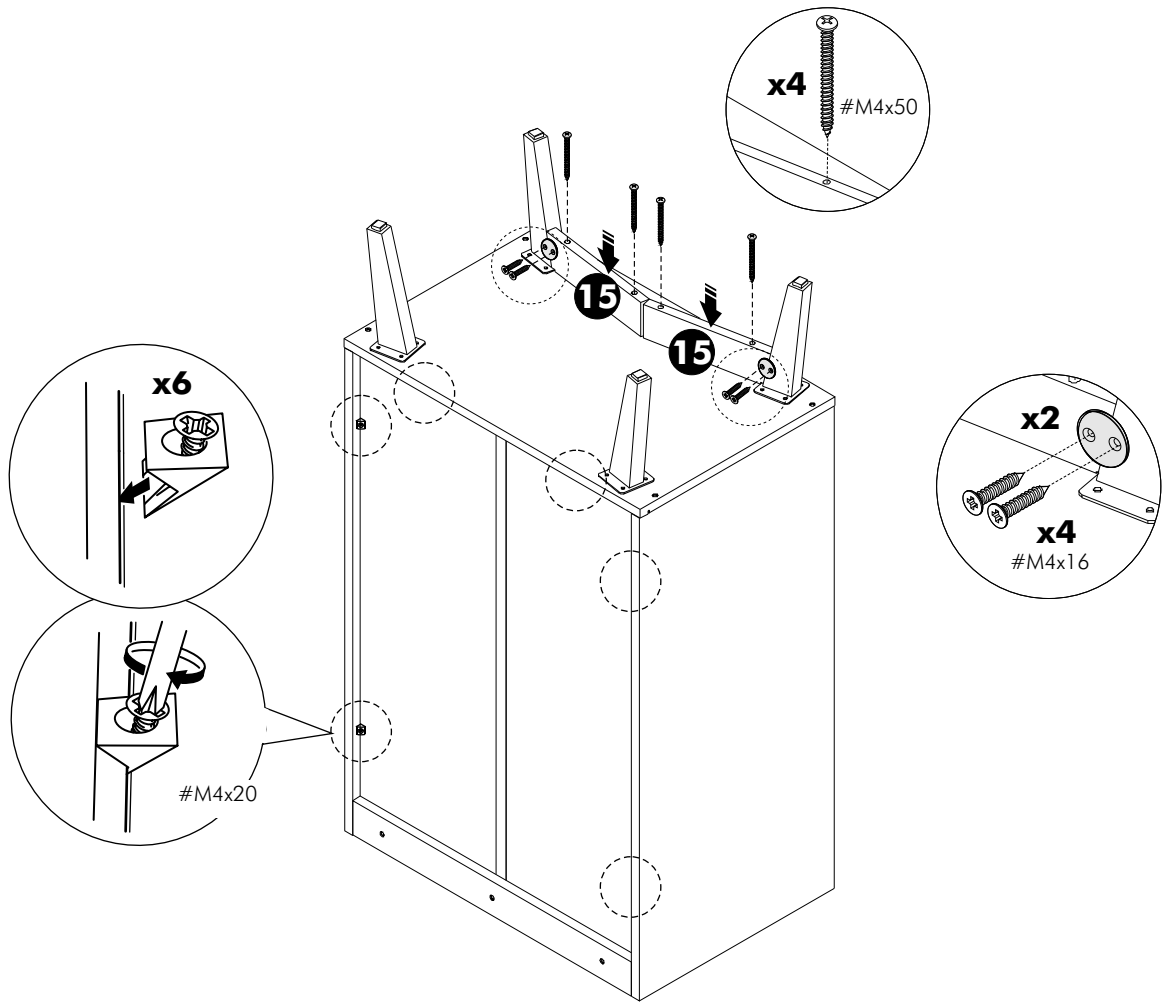

6.

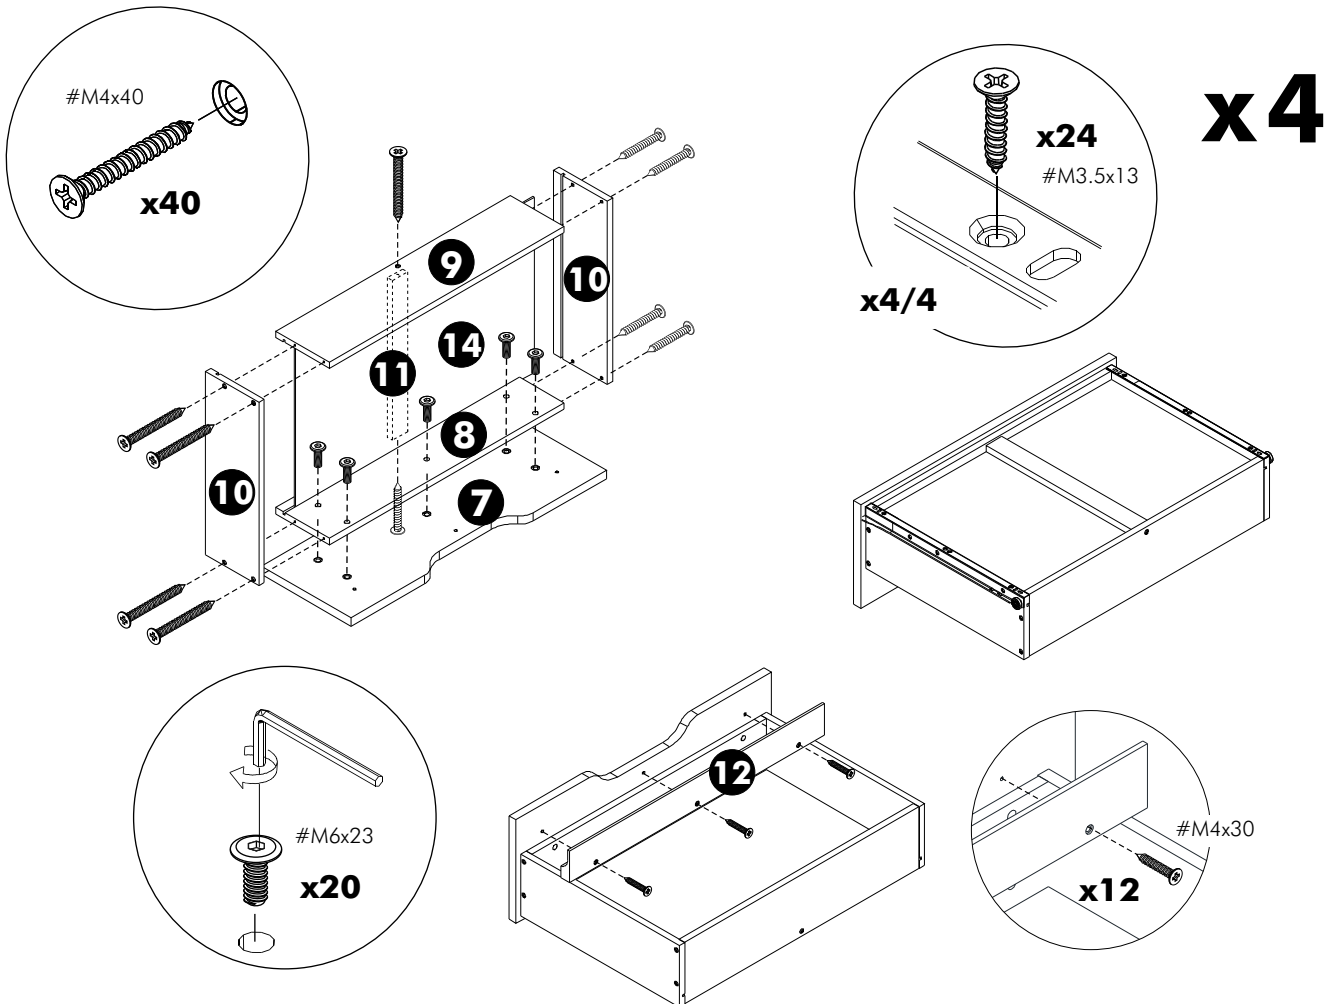

**7.**

