



# EXTREME

**Living high shelf 40 cm.**

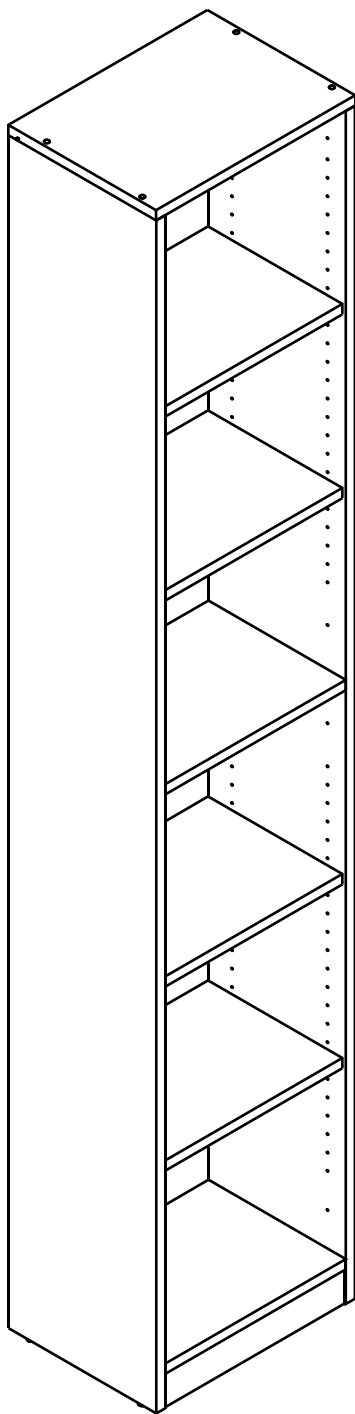


CONNECT SYSTEM

1

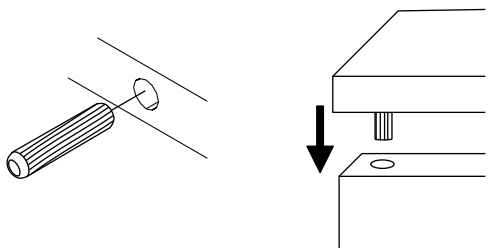


2

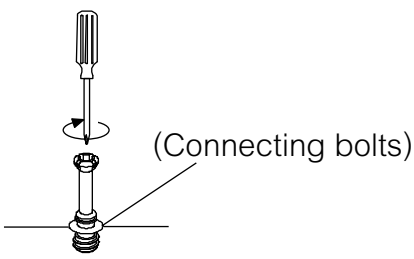

(Connecting bolts)

3

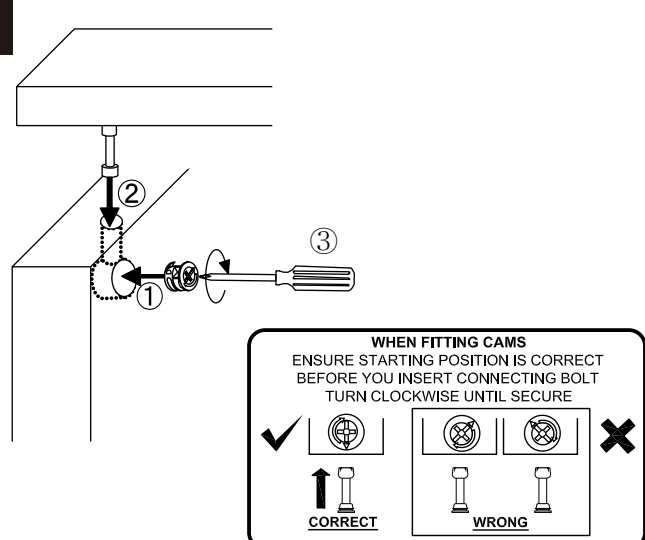


WHEN FITTING CAMS  
ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING BOLT  
TURN CLOCKWISE UNTIL SECURE



**CORRECT**


**WRONG**




M4x20mm.

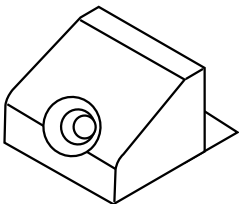


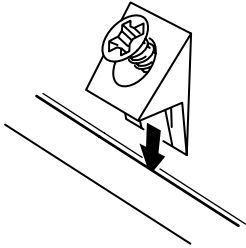
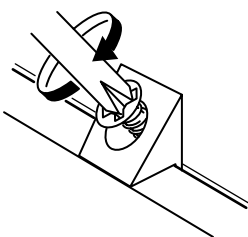







M4x16mm.

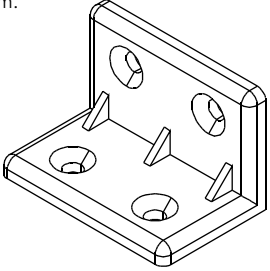

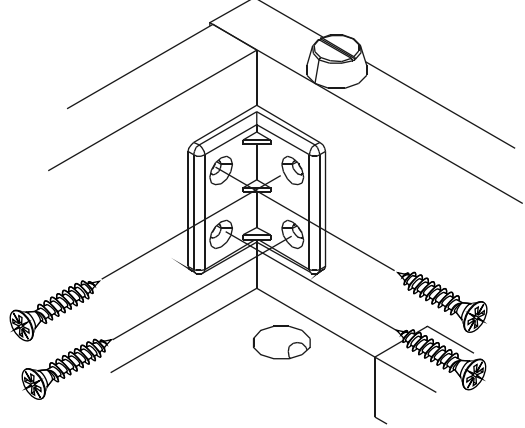


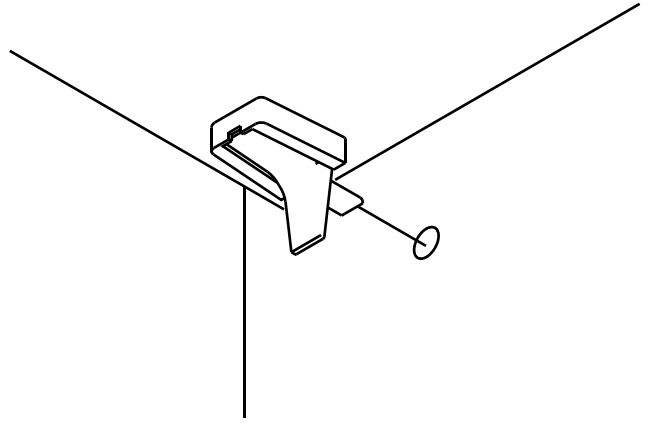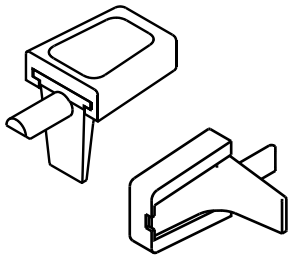

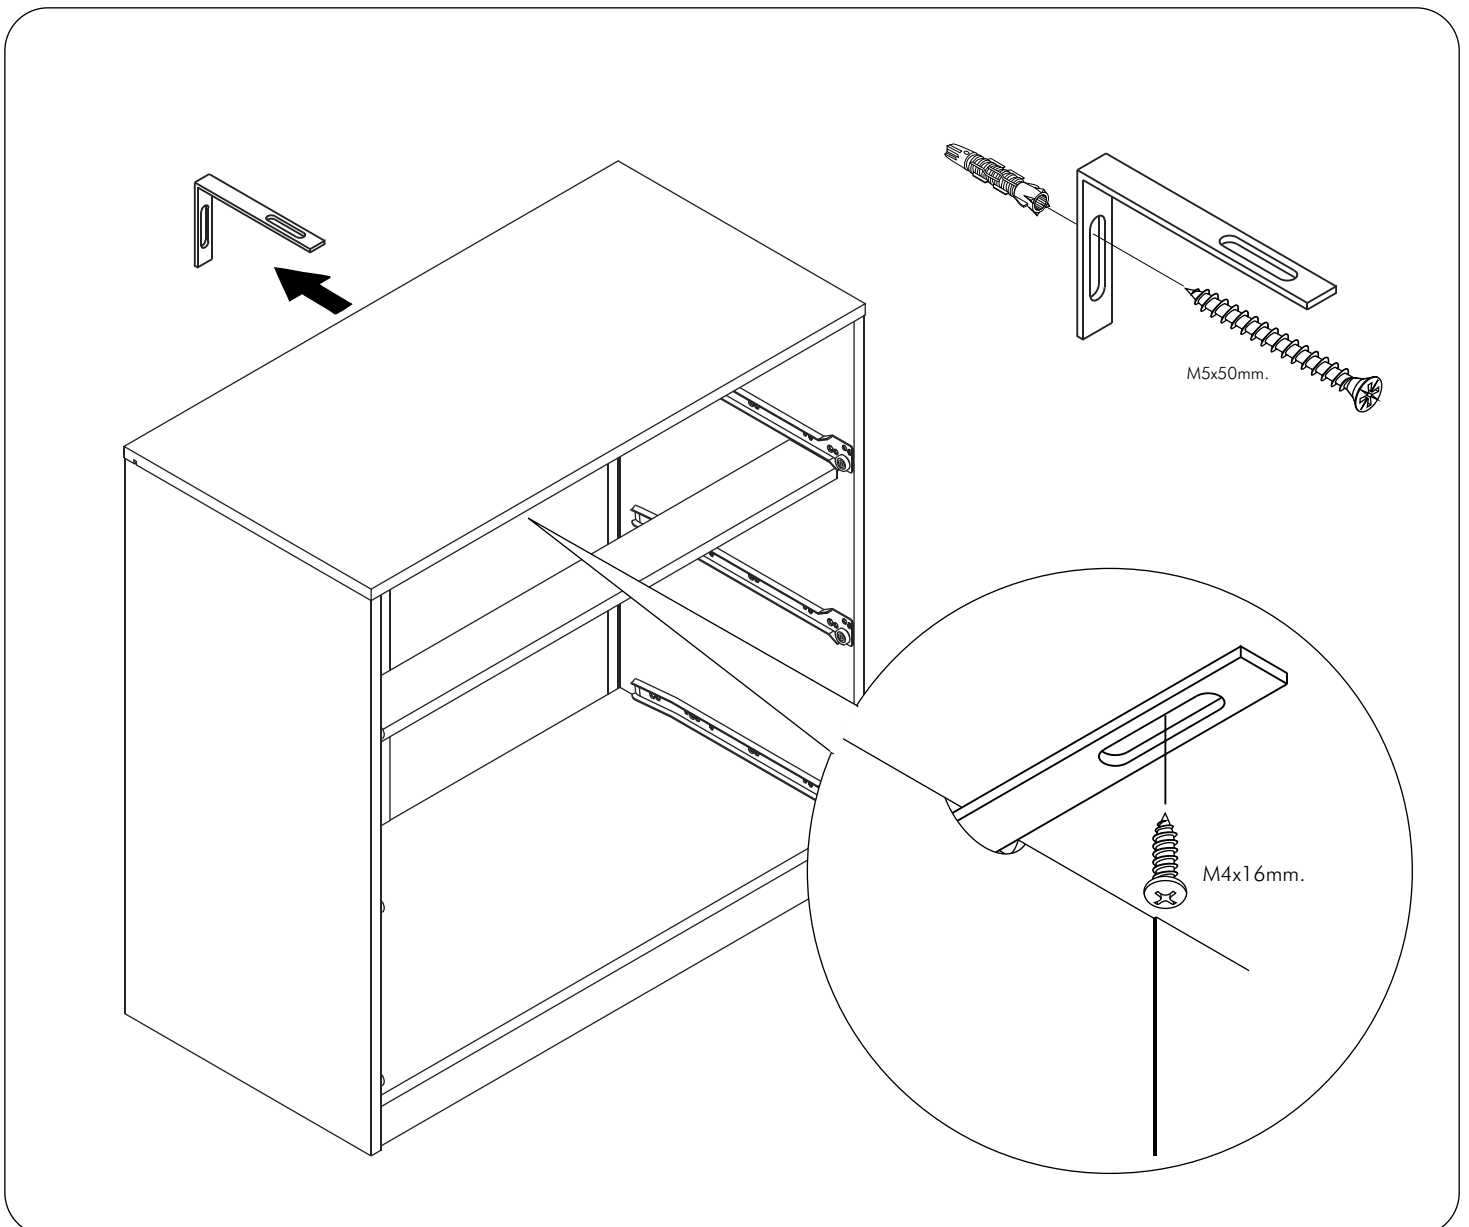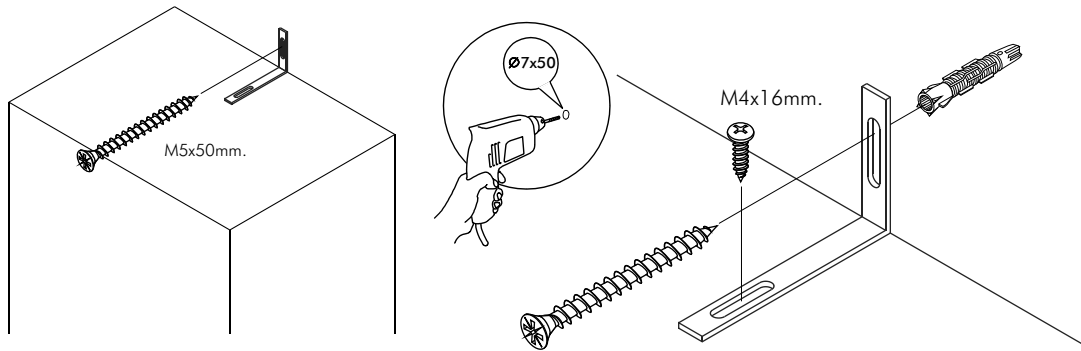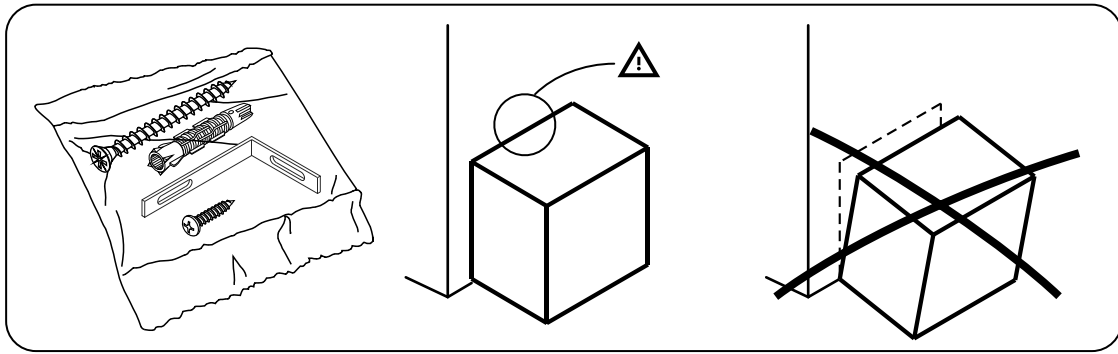

## HARDWARE


### -BODY SET



**x 8**



**x 8**




#8x35

**x 12**




#F+M4x16

**x 24**



#63x63mm.

**x 2**




#F+M3.5x20

**x 11**




#P+M4x16

**x 5**




**x 1**

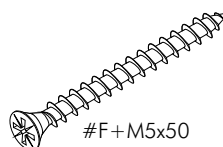


#F+M5x50

**x 1**




#UP-745


**x 1**




**x 7**

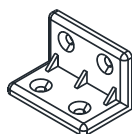

**x 4**




**x 16**




#P+M4x30

**x 8**




#F+M4x30


**x 4**



**x 4**



**x 2**

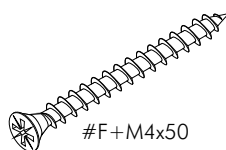

#F+M4x50

**x 4**

## ASSEMBLY

Diagram 1 illustrates the assembly of the side panel (2) to the main frame (1). The side panel is shown being attached to the main frame using screws (4). A callout shows a screw with the label "X4".

M4x50mm.

**x4**

**3**

**5**

**6**

**6**


**8** **x2**

**x8**


Front

5mm.



3.

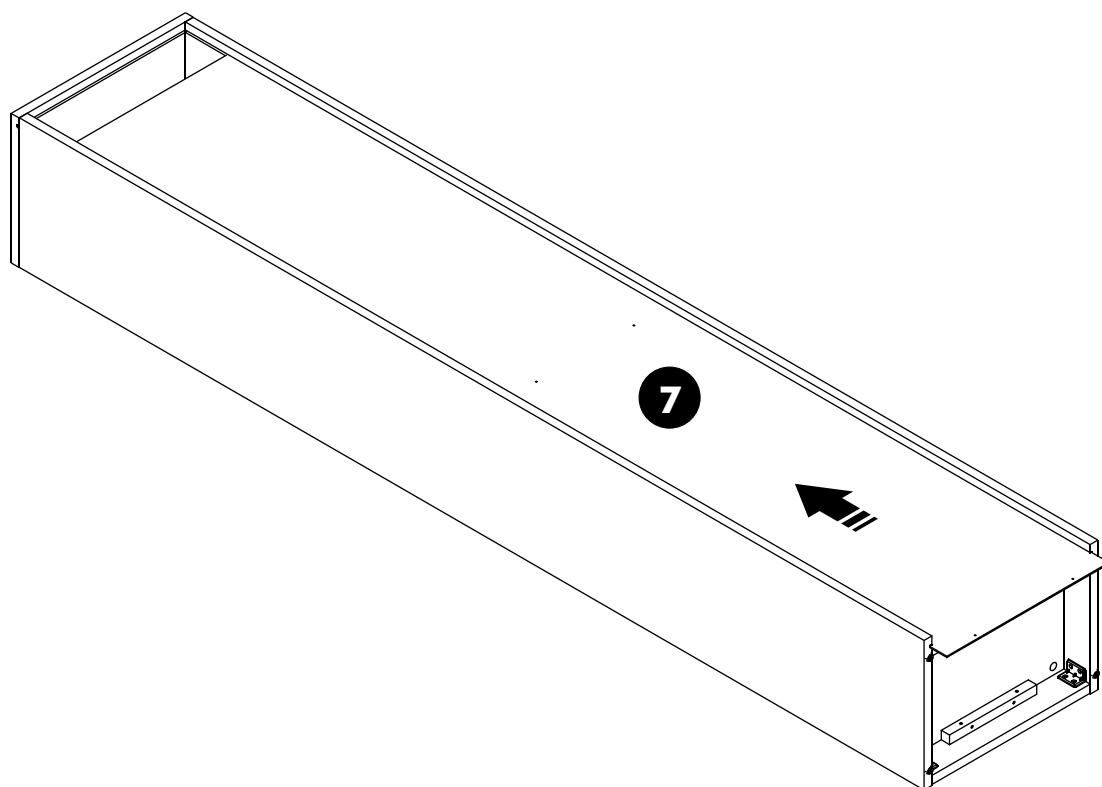



4.

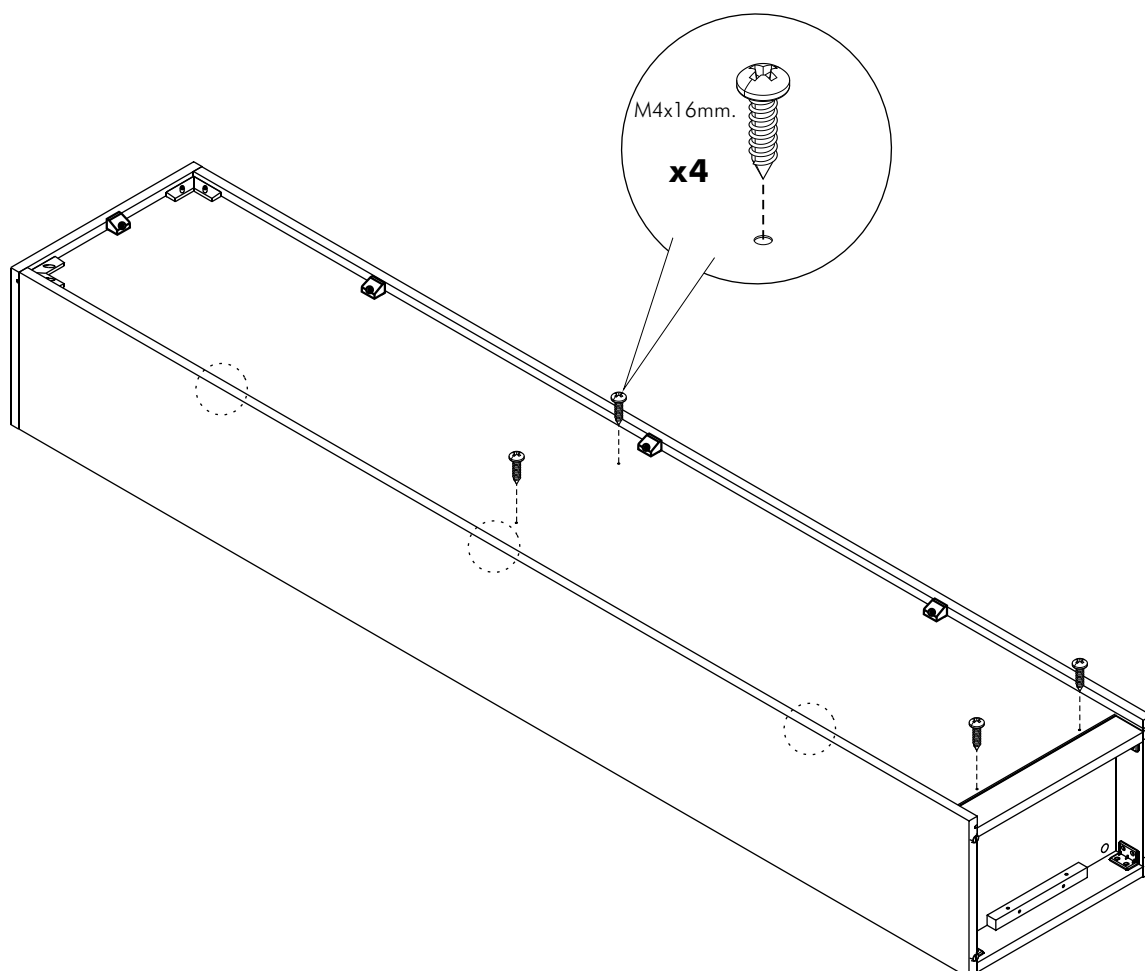

5.

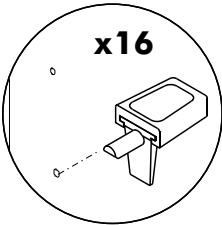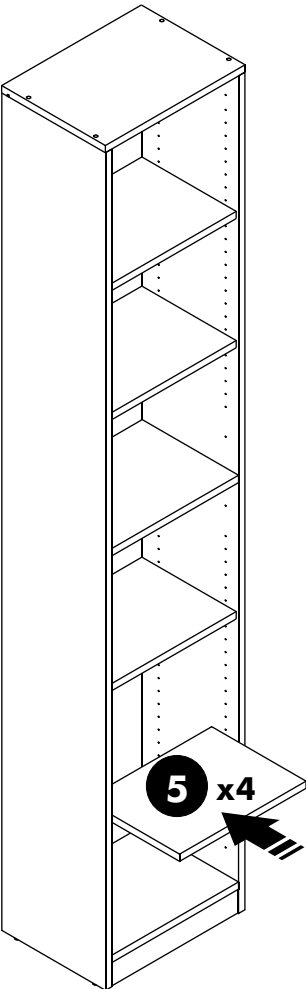

6.

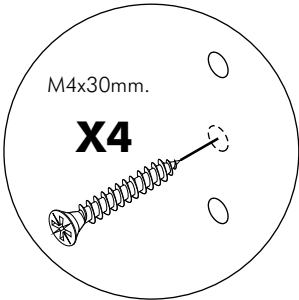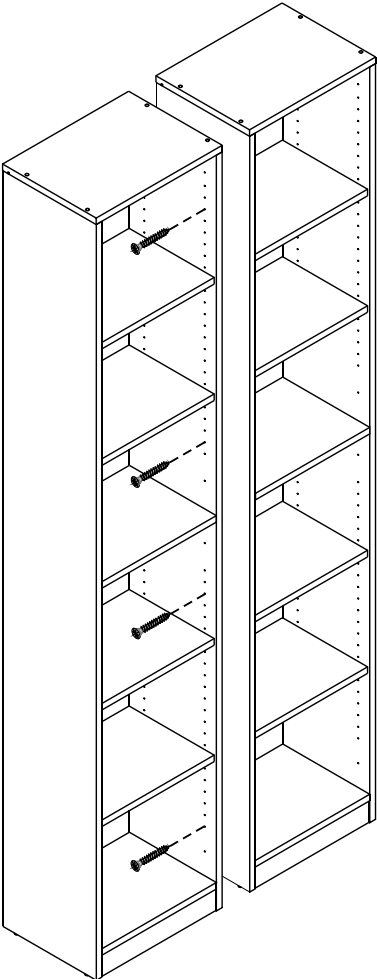

7.

