


ONE WAY-A-P

Low cabinet




CONNECT SYSTEM

1

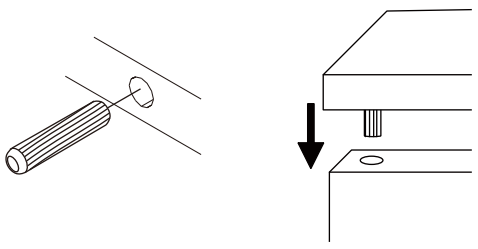


2

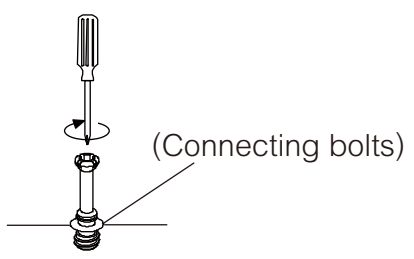

(Connecting bolts)

3

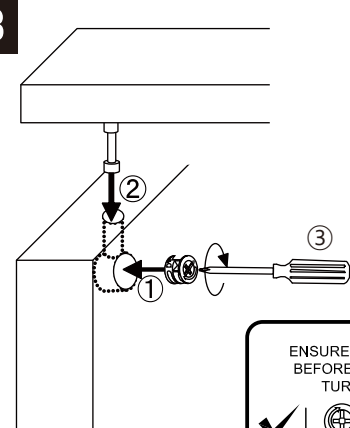

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE



✓




↑
CORRECT




✗





WRONG






M3.5x20mm.

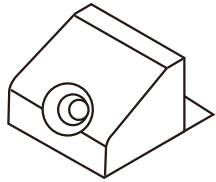

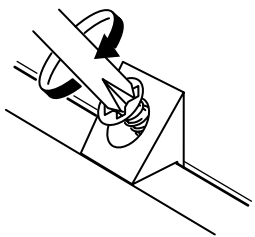


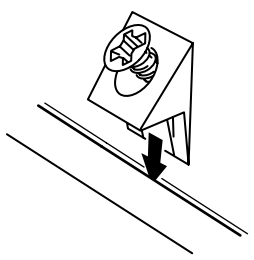

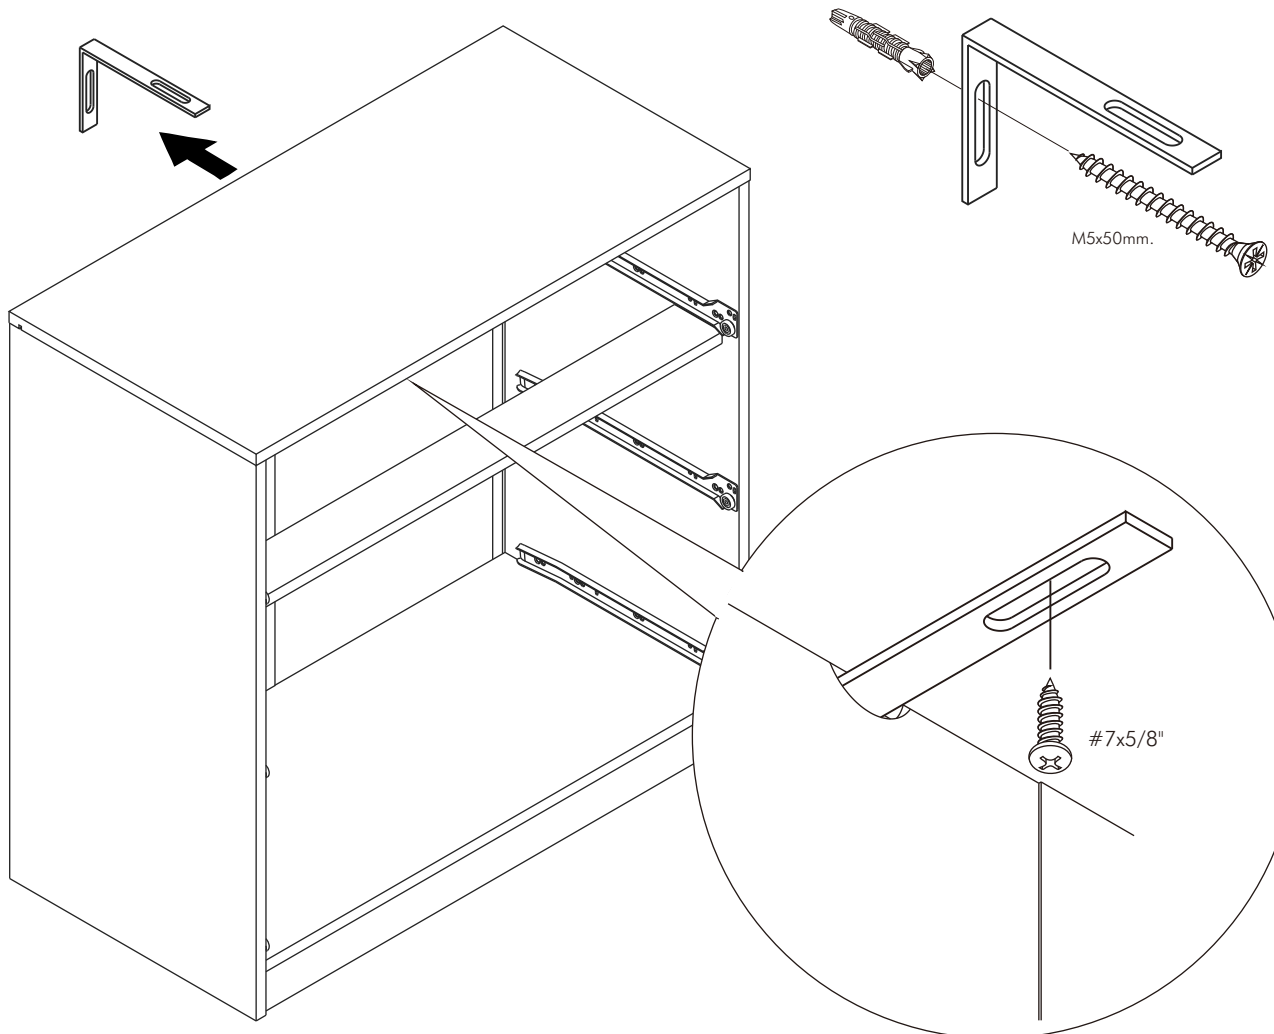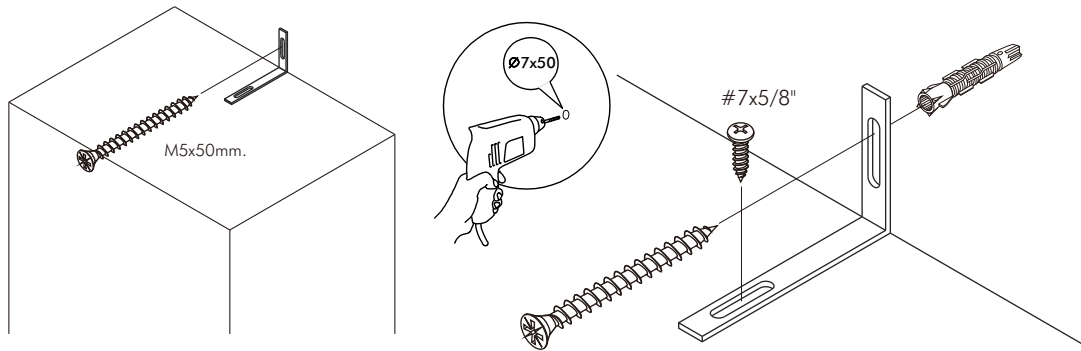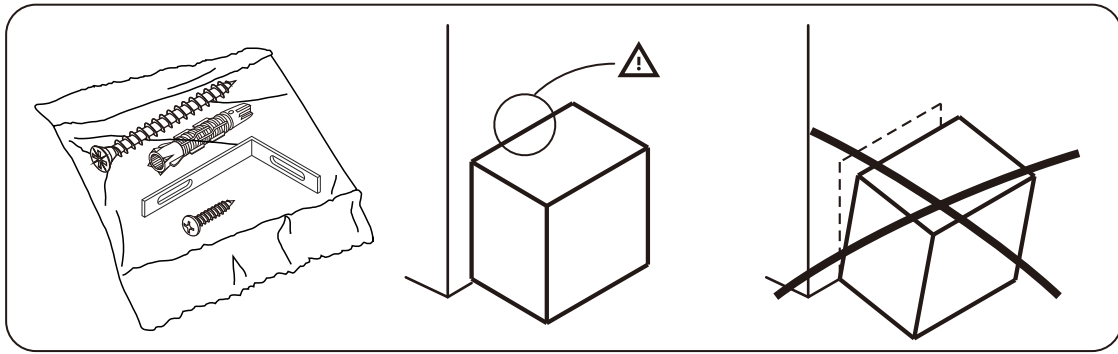


HARDWARE

-BODY SET

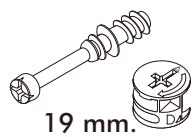


19 mm.

x 12/12



(8x35)

x 20

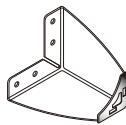


x 4




(7x5/8")

x 21

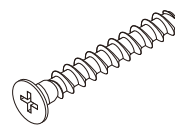


(M5.5x38)

x 6

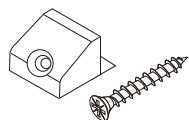

(M3.5x20)

x 8/8




(6x35)

x 52

(M4x25)




x 16/8



12 mm.

x 10/10



(M4x40)

x 10



(8x3/8")

x 10




x 10



M5x50mm.


x 1



x 1



x 1

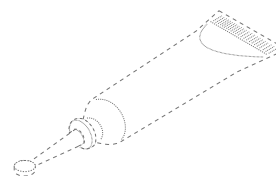


(For WOOD DOWEL)


ASSEMBLY

-BODY SET


1.

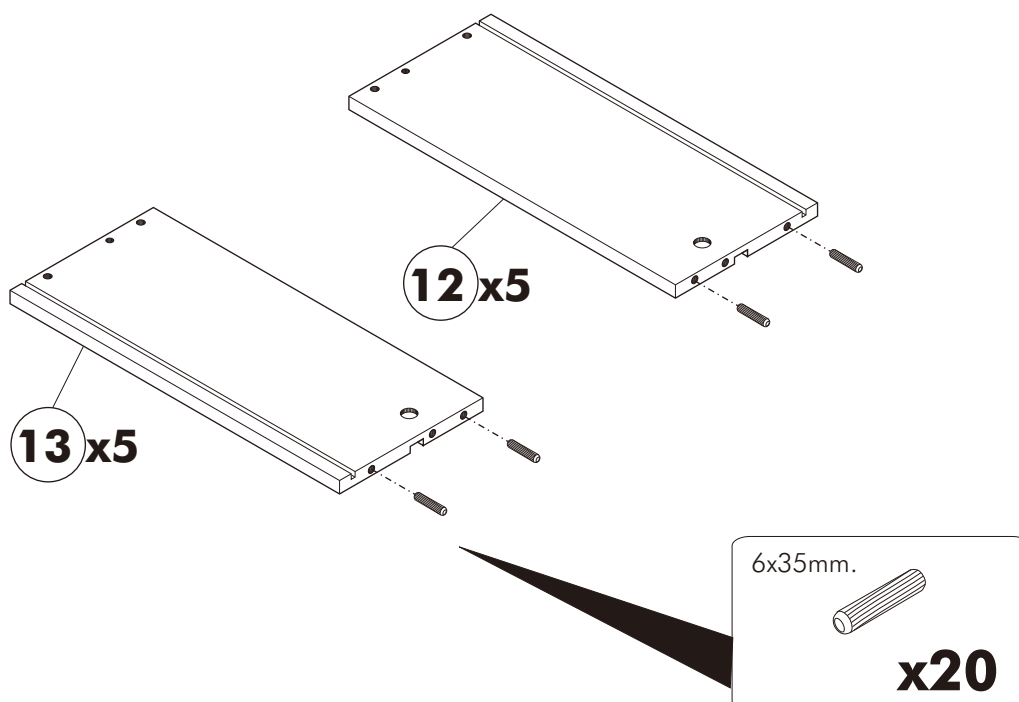


2.

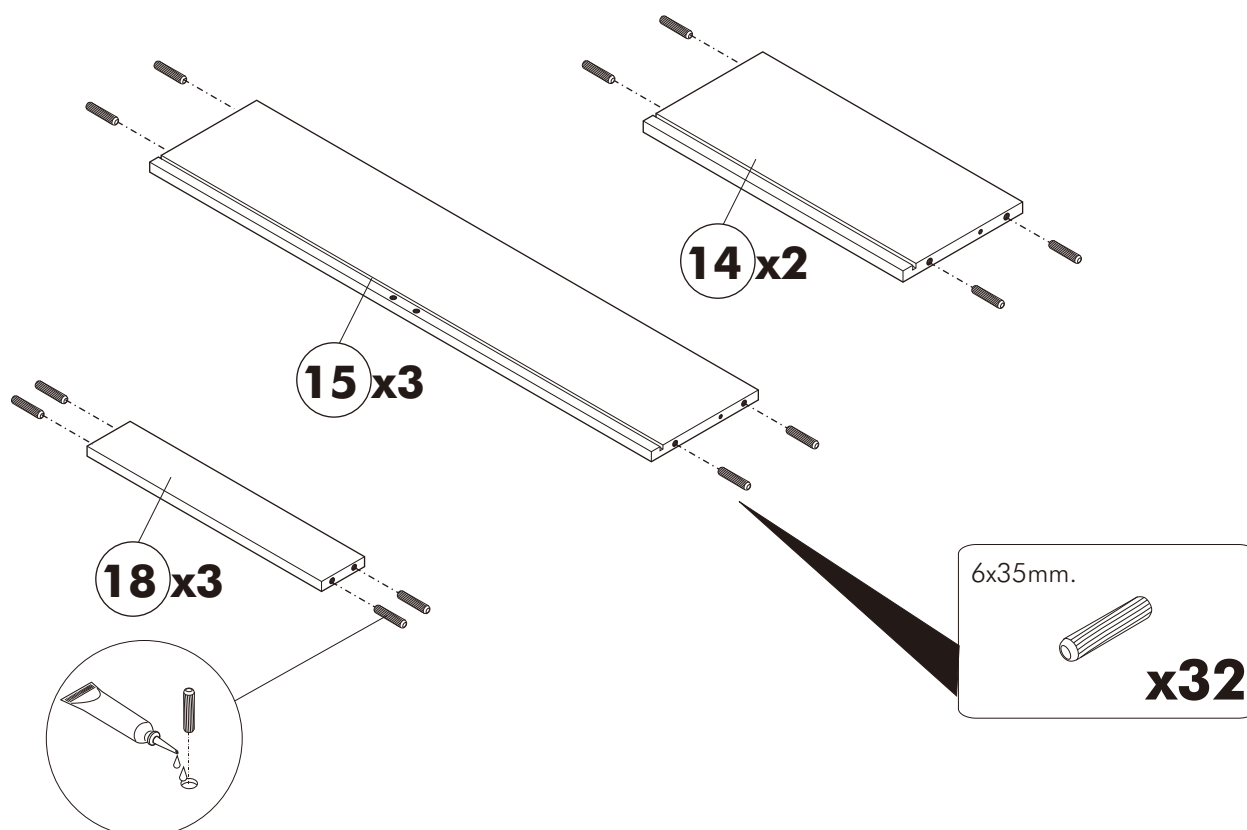


3.

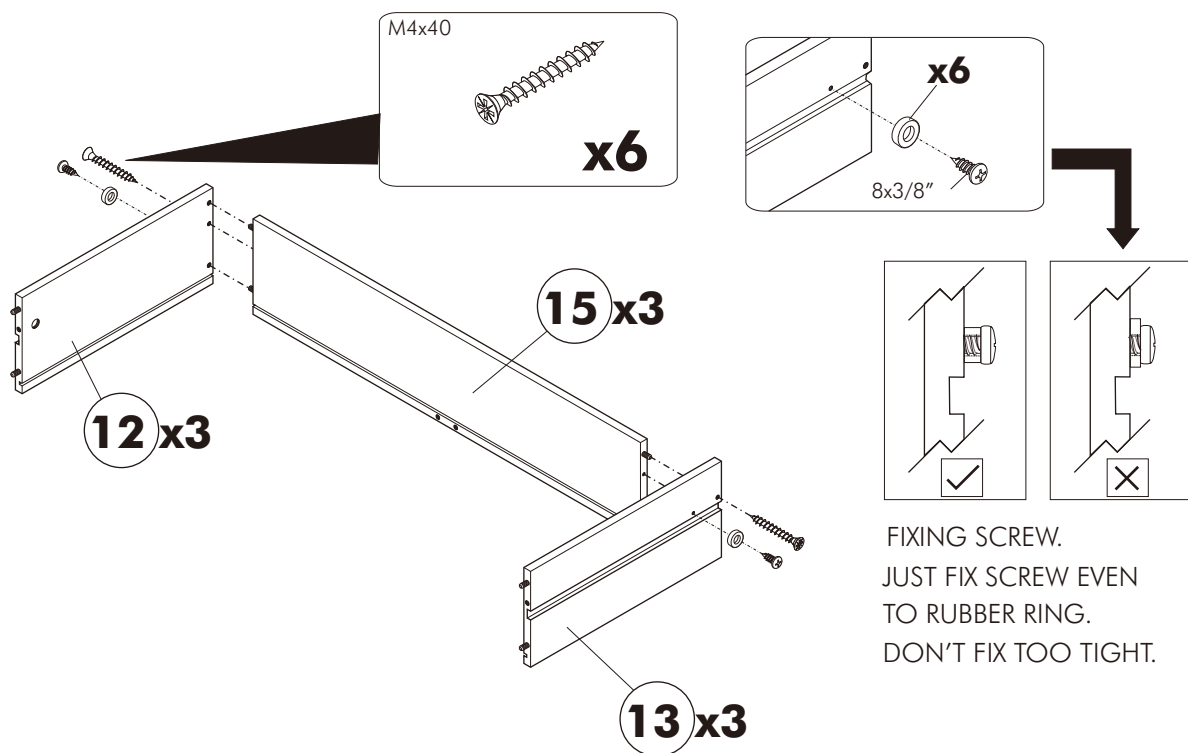


4.

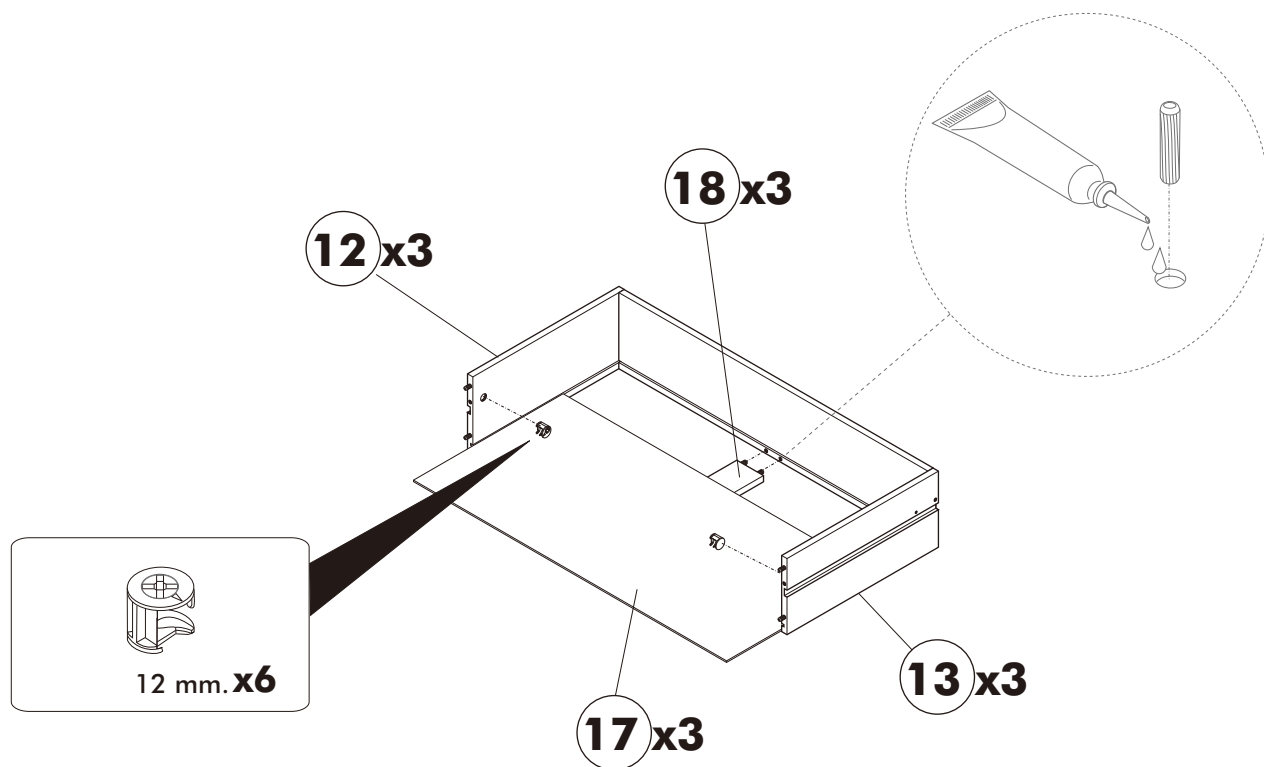


5.

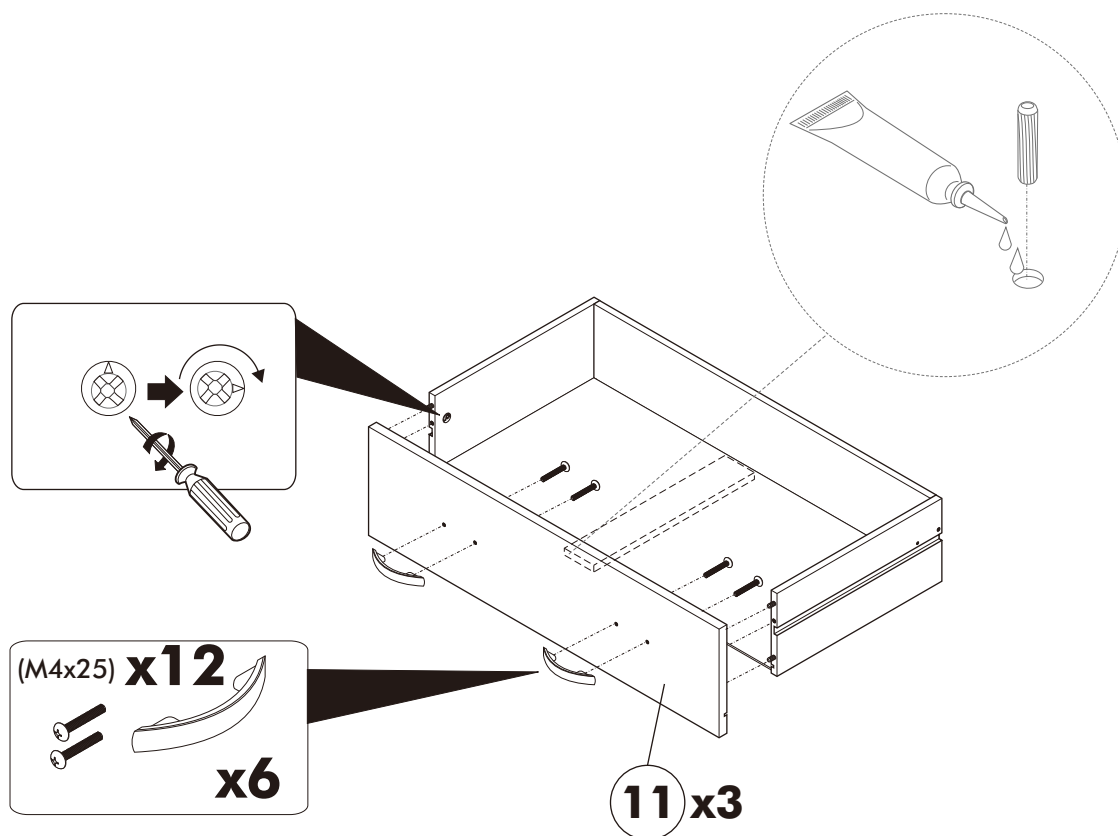


6.

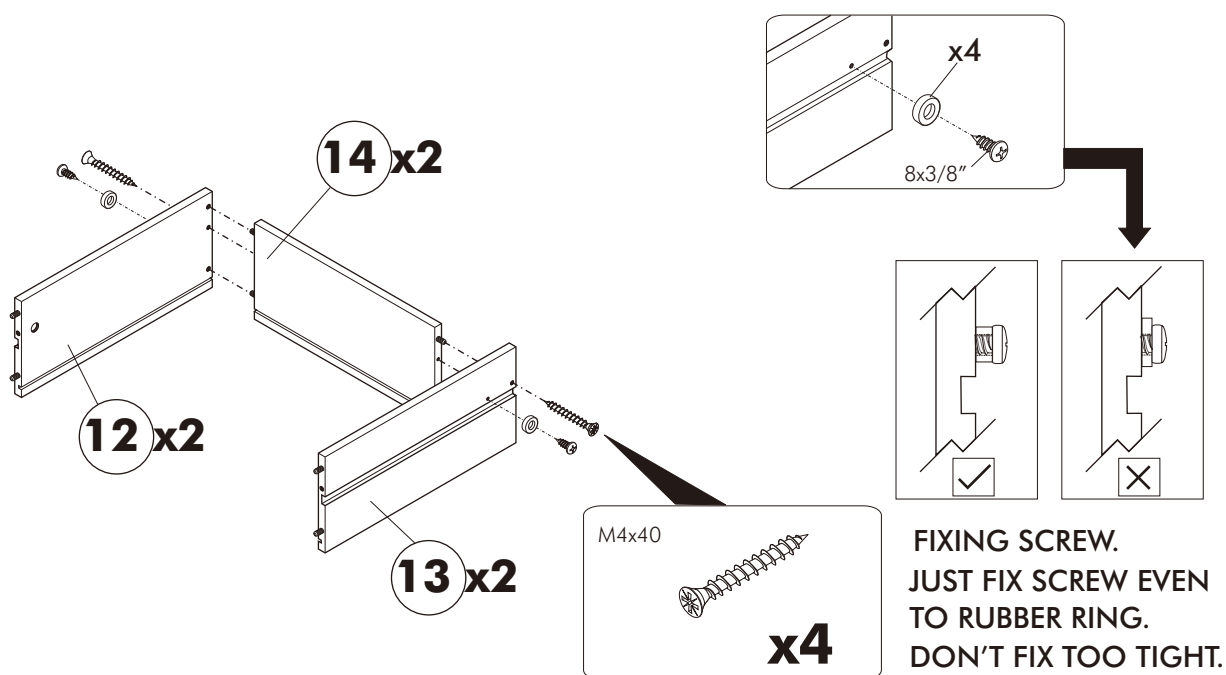


7.

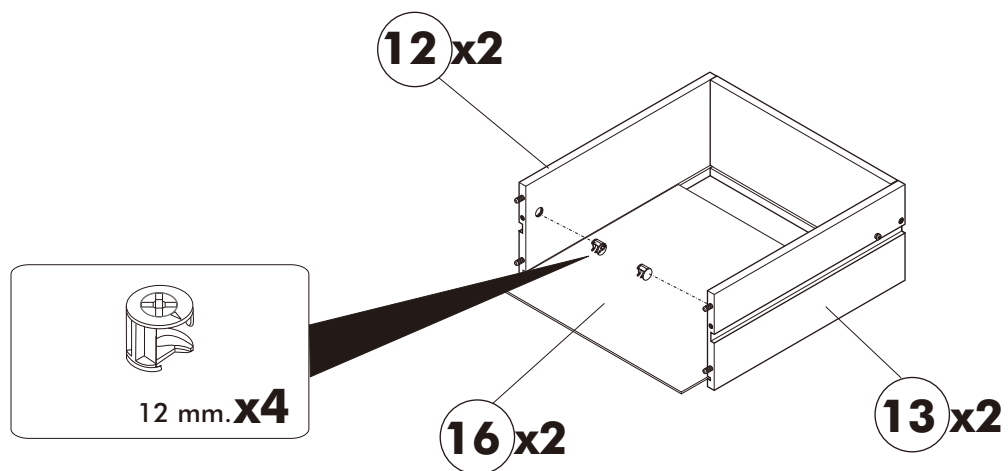


8.

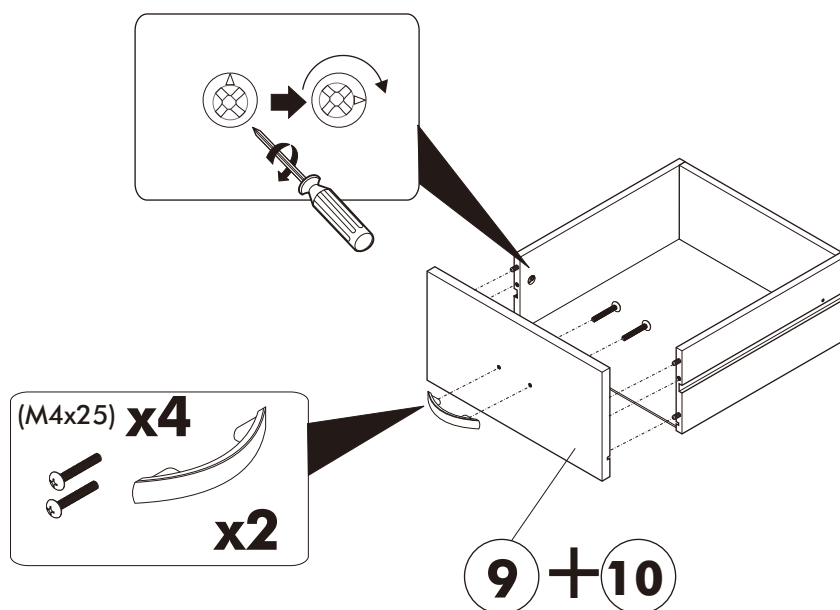


9.

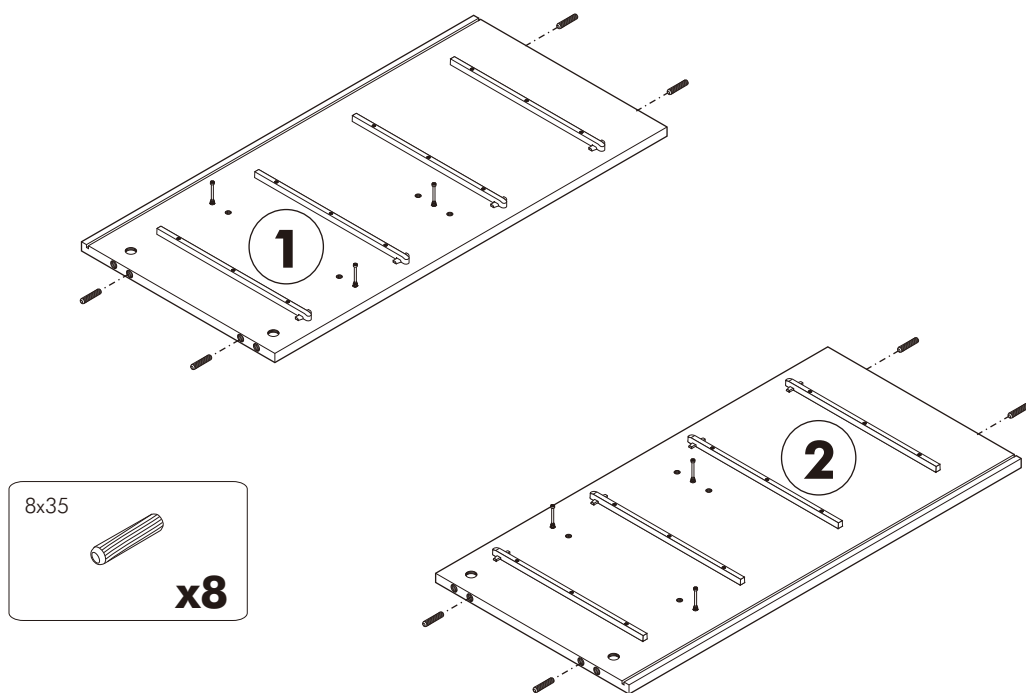


10.

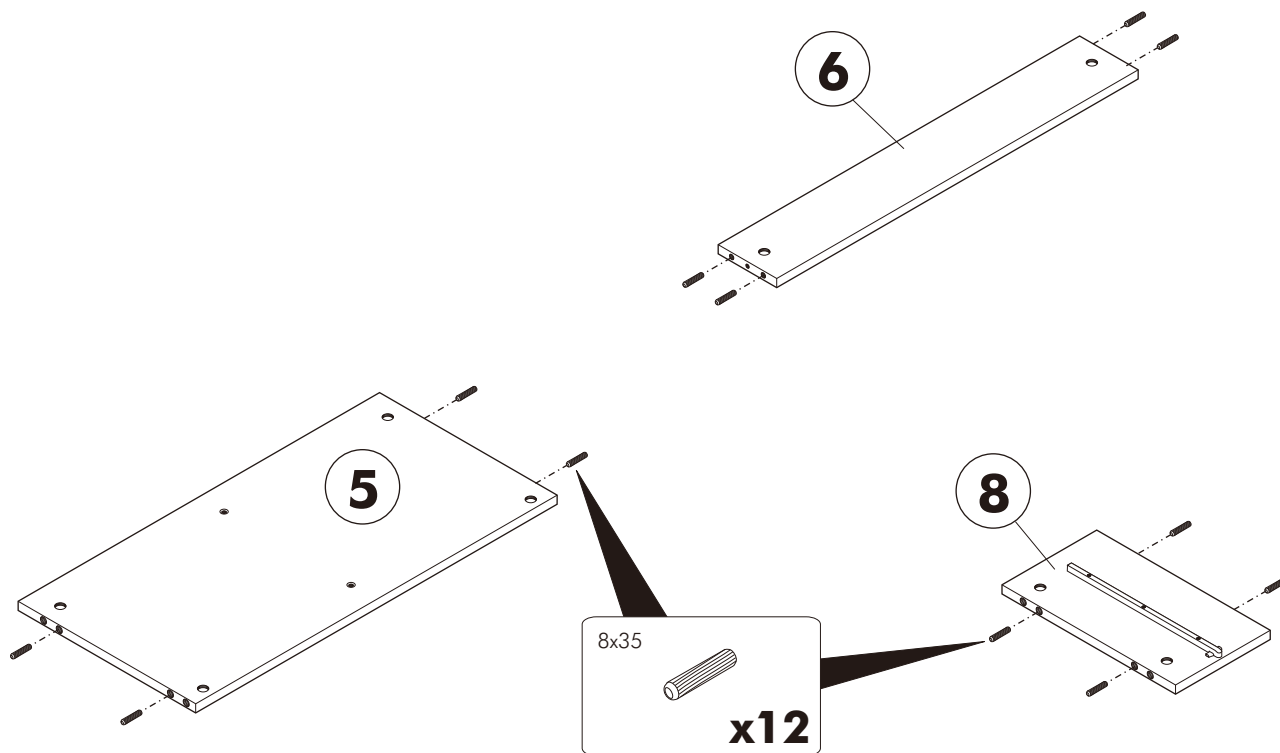


11.

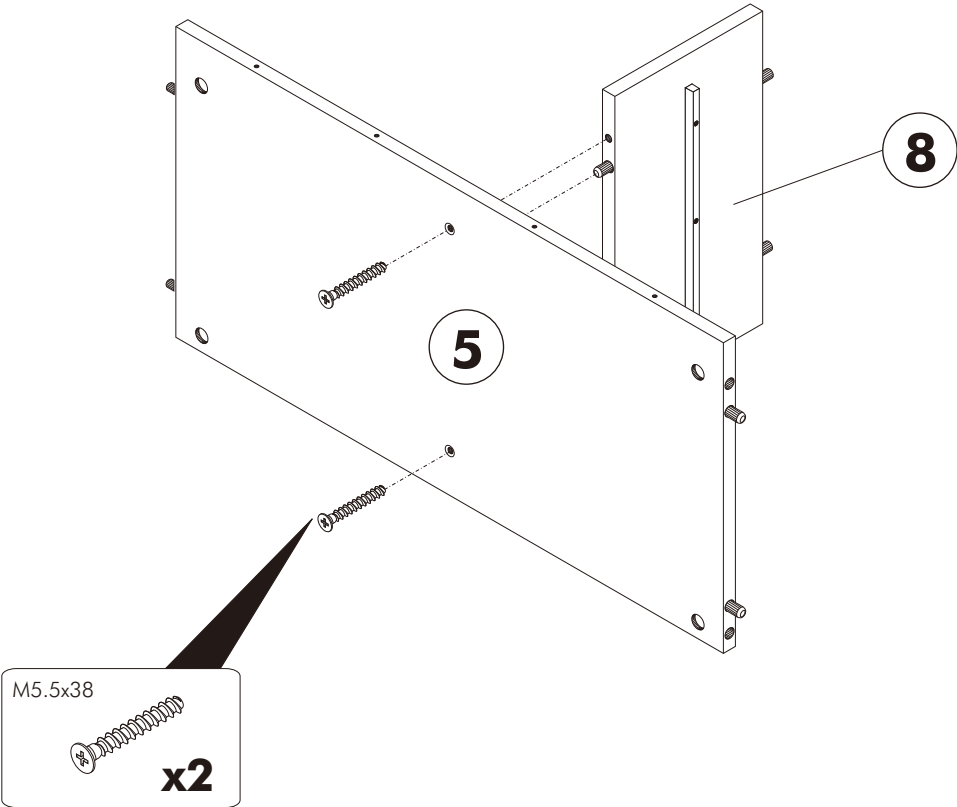


12.

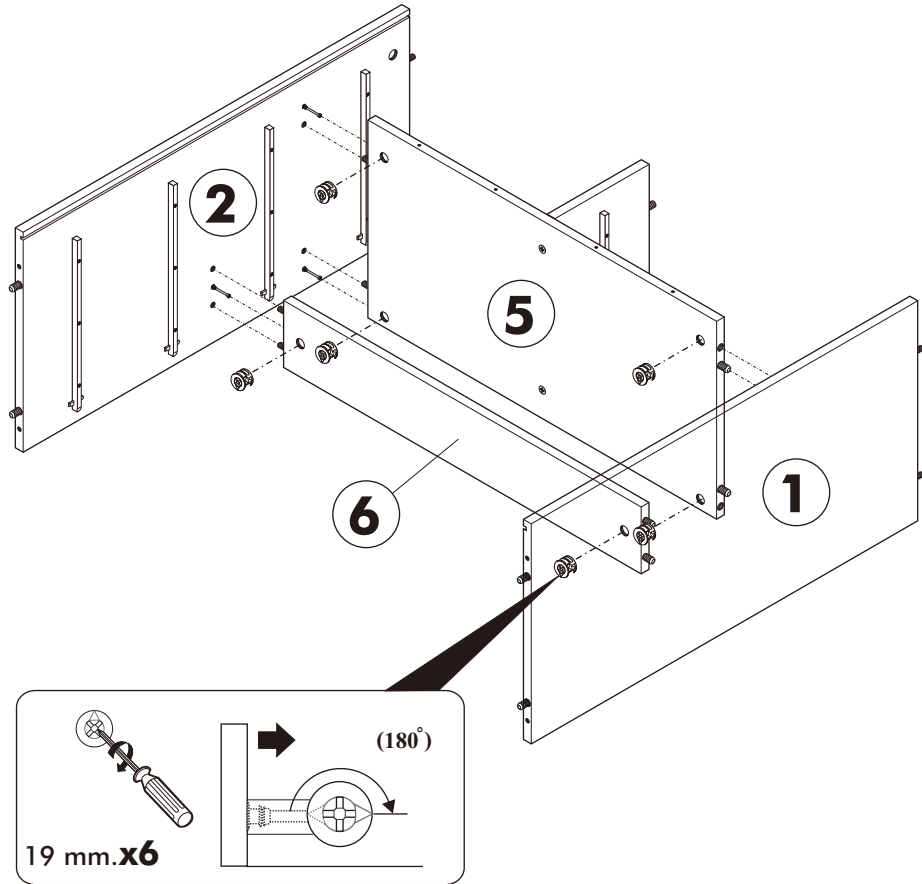


13.

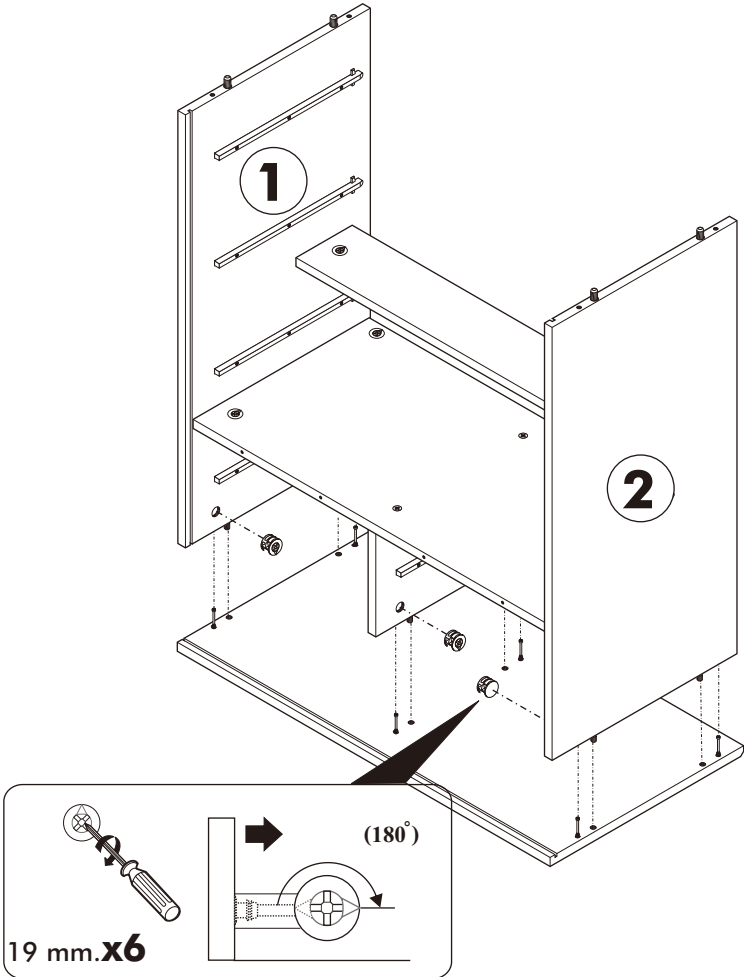

14.

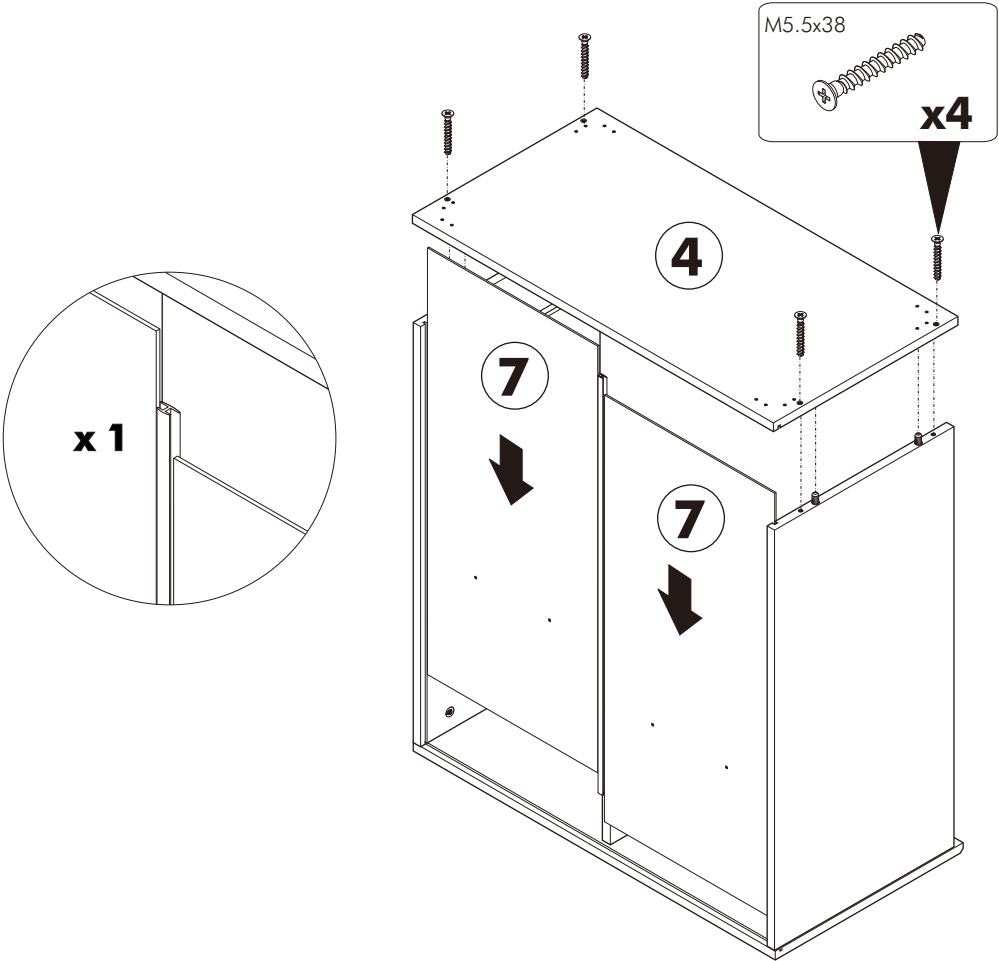


15.

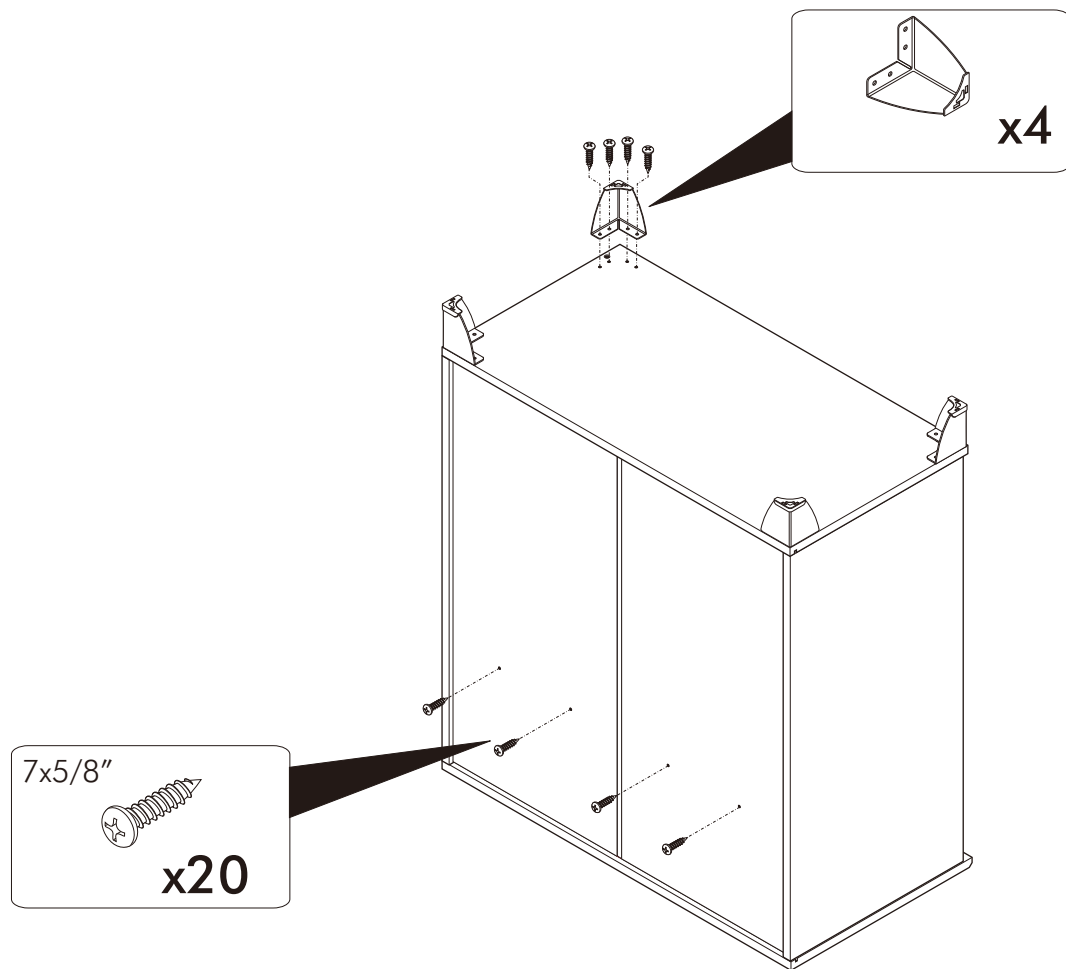

16.

ADJUSTING FOR DRAWER STOPPER SCREW

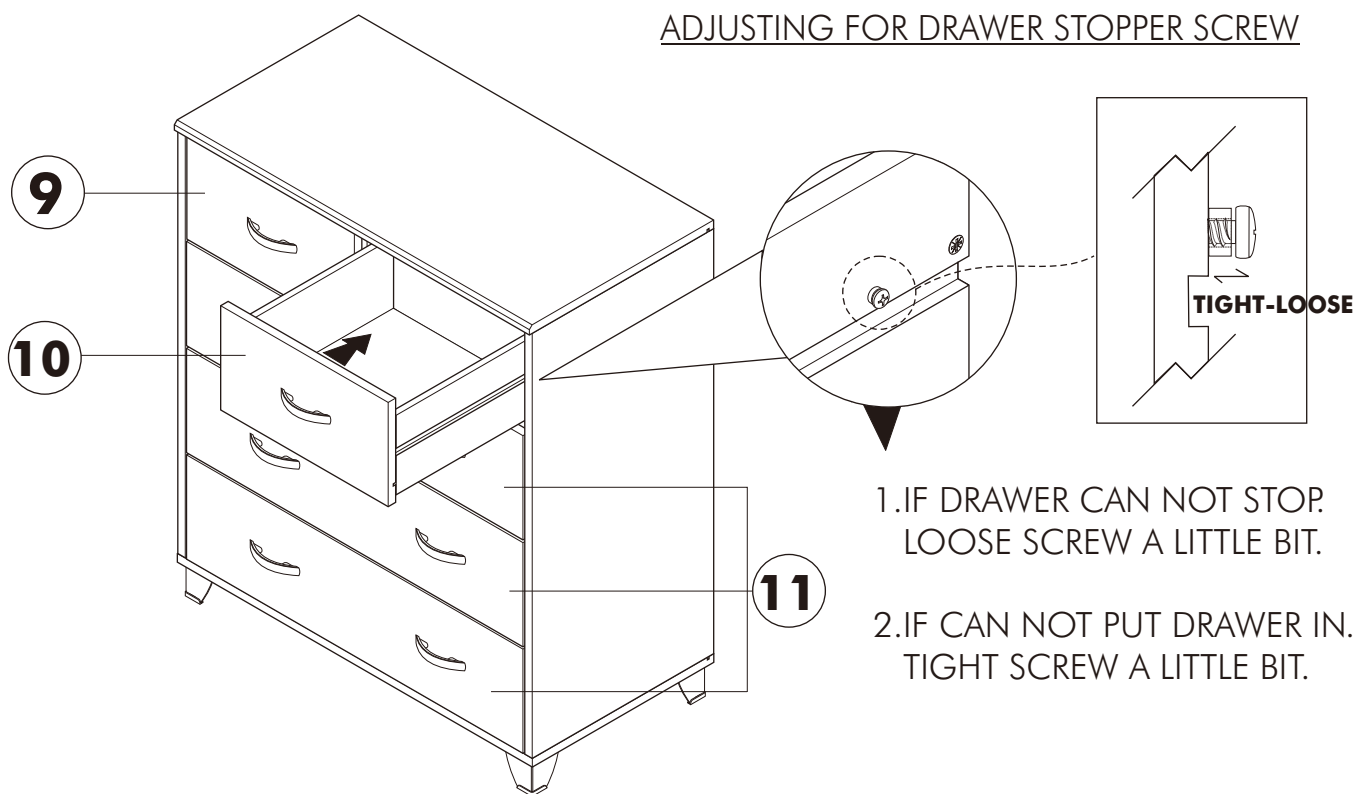

17.

