



NB BALLY-L PLUS-P

Shoe cabinet

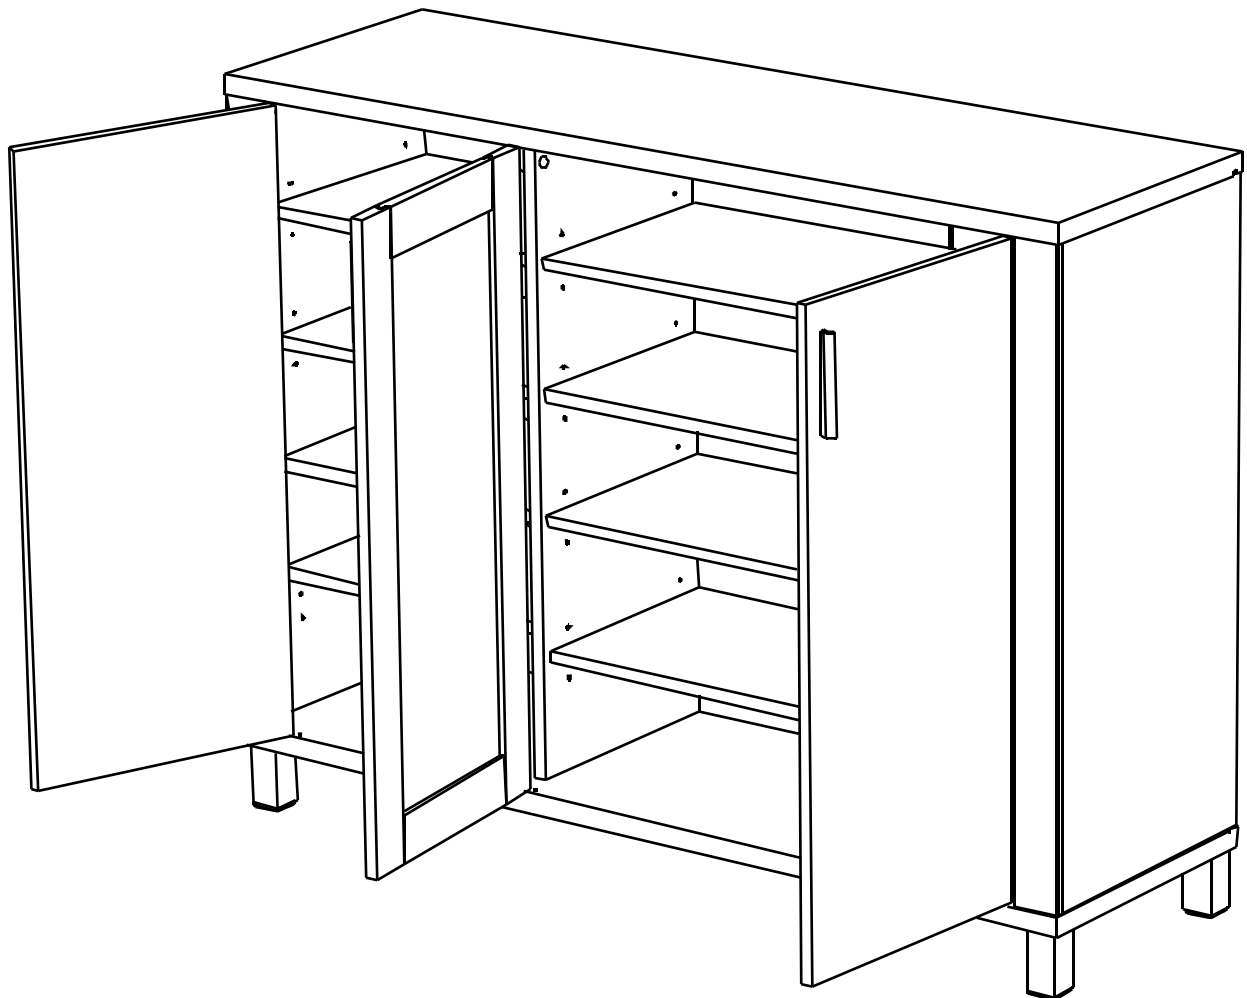


CONNECT SYSTEM

1

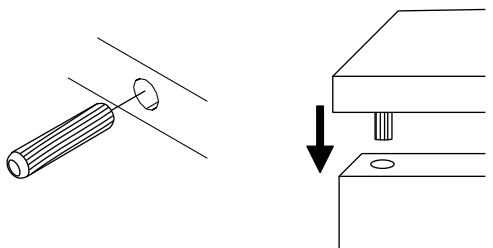


2

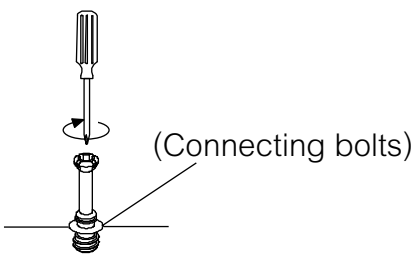


(Connecting bolts)

3

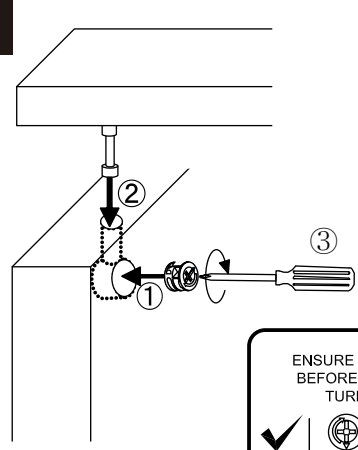


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓				✗
				
	CORRECT	WRONG		

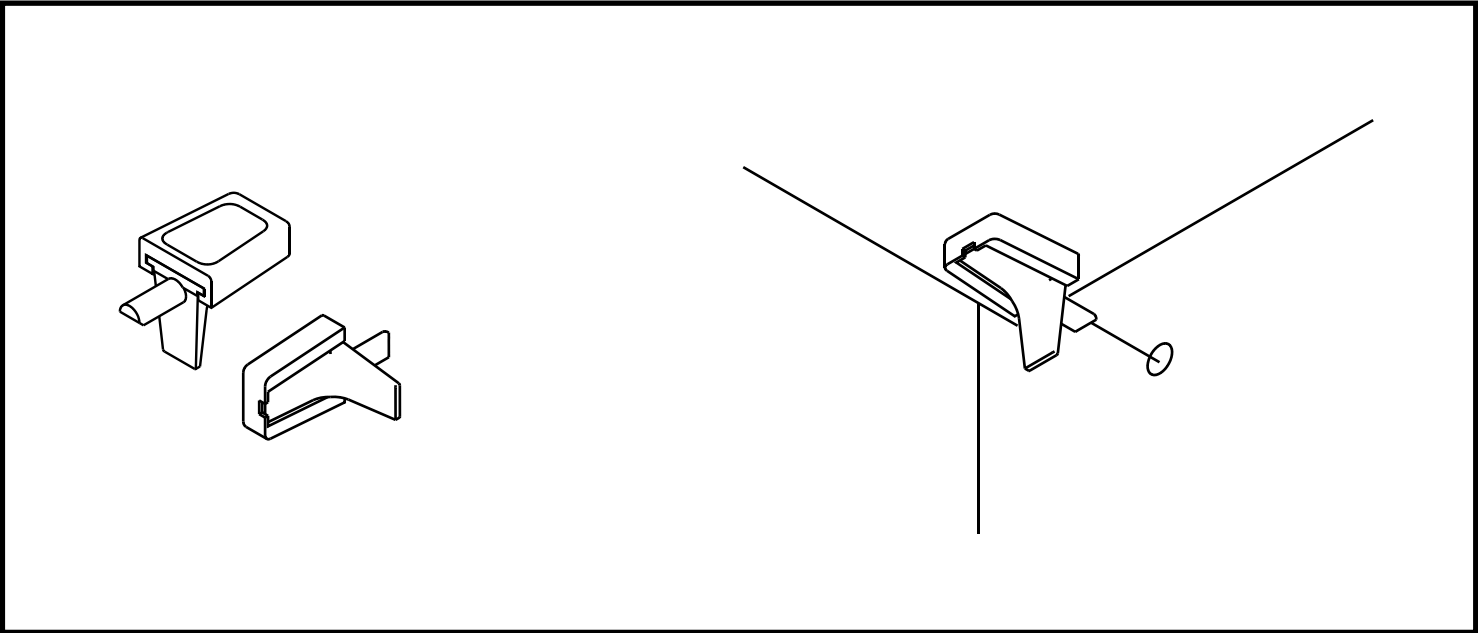


HARDWARE

-BODY SET

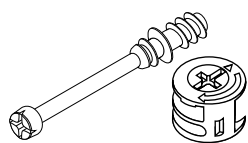


x 10/10



8X35mm.

x 22




4x3/8"


x 6/12



x 4



x 2




x 28




4x3/8"

x 3/3




M3.5X20mm.

x 10/10

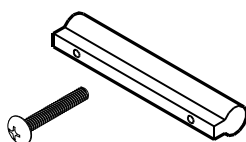

M4X25mm.

x 6/3



x 6




5x1/2"

x 12



7x5/8"



x 16





7x1 1/2"

x 8


1.

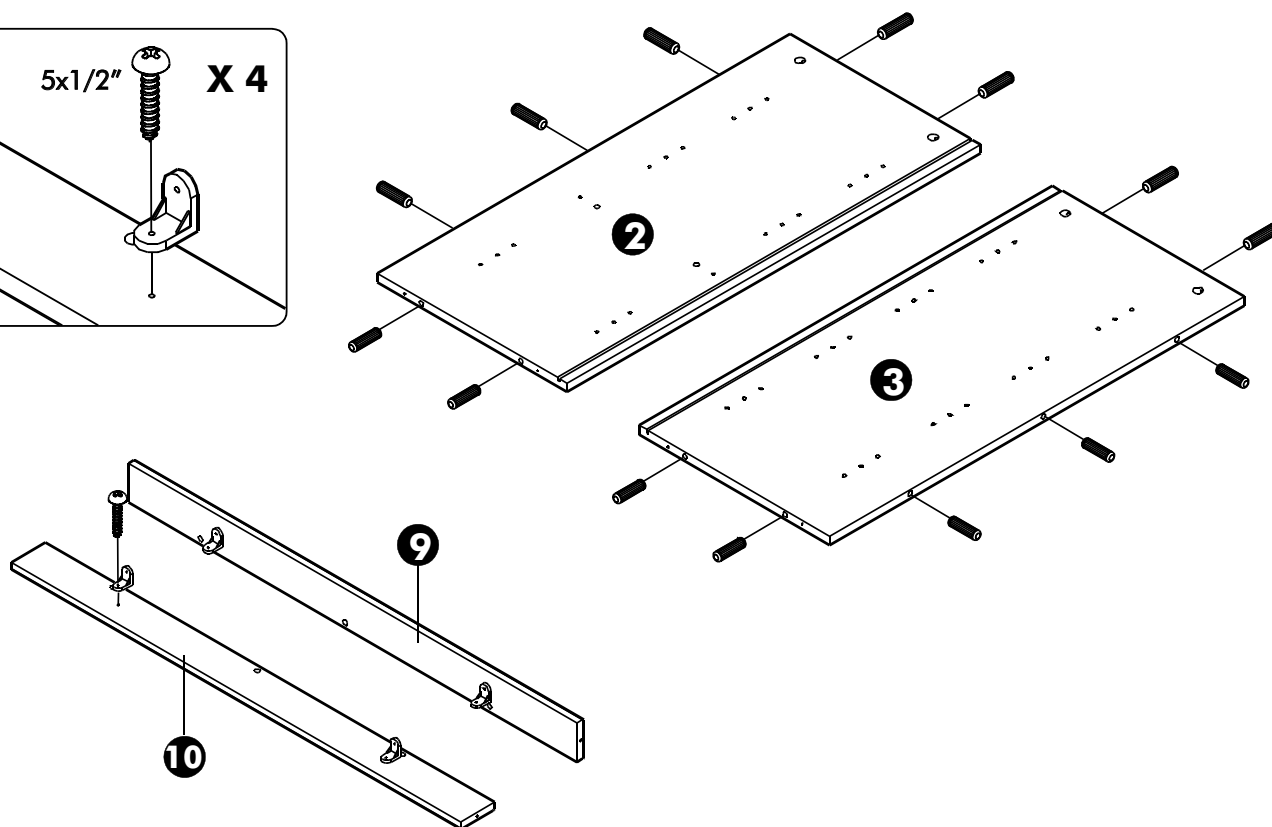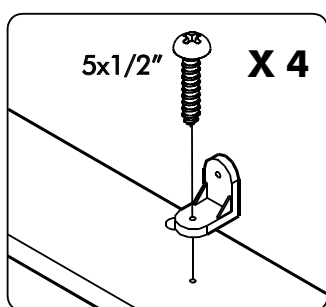


2.

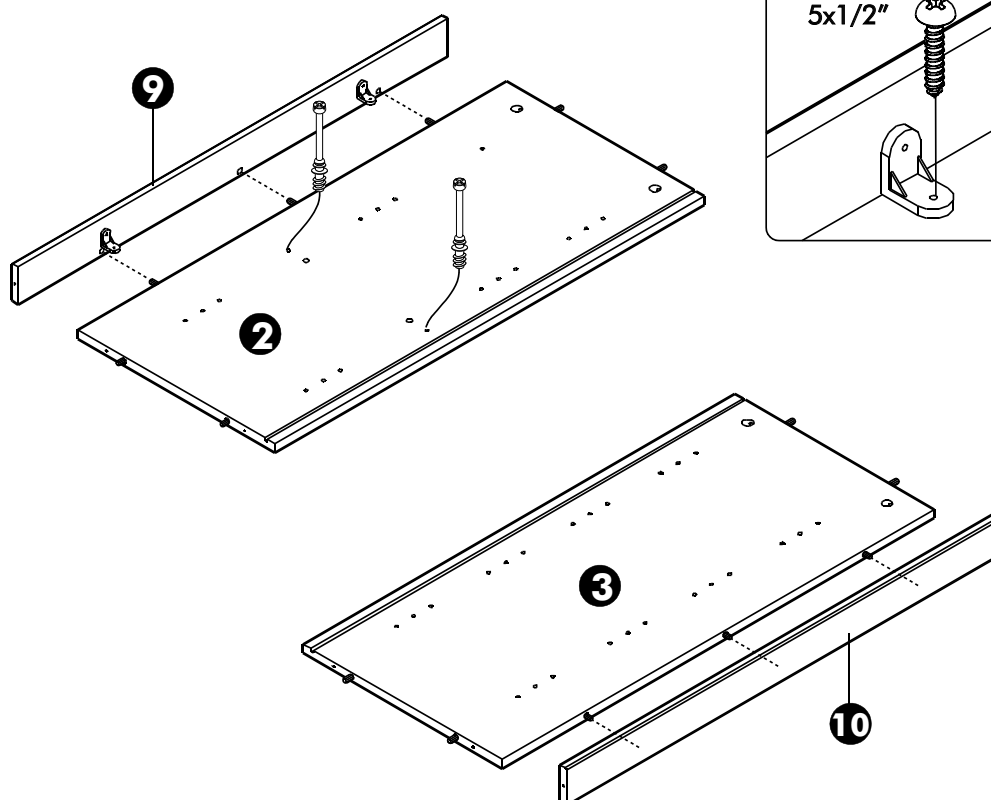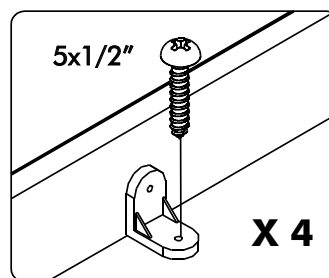


3.

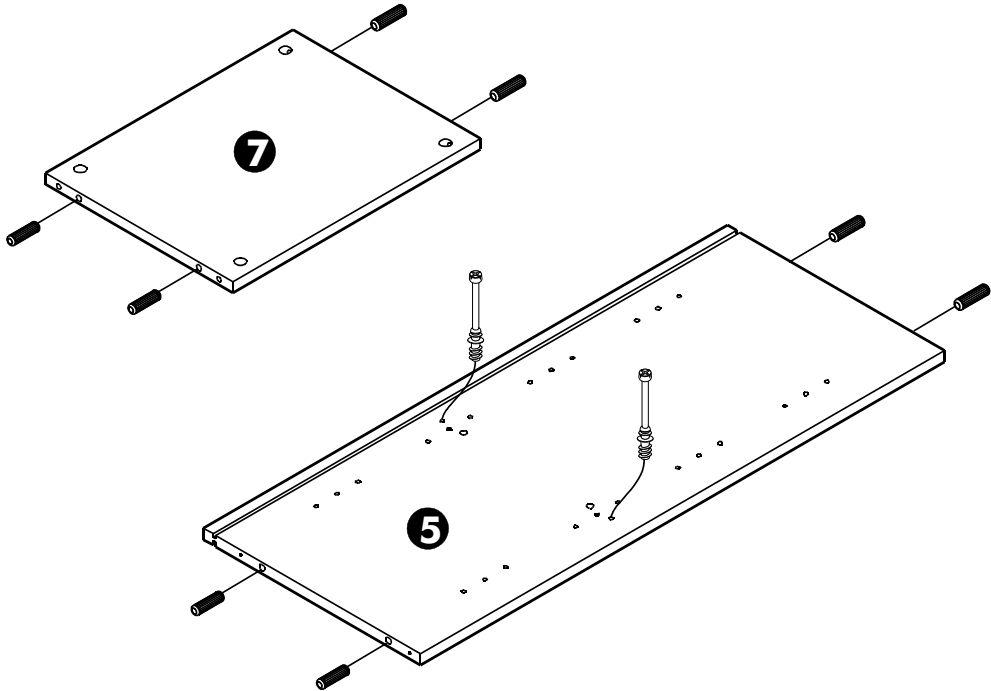


4.

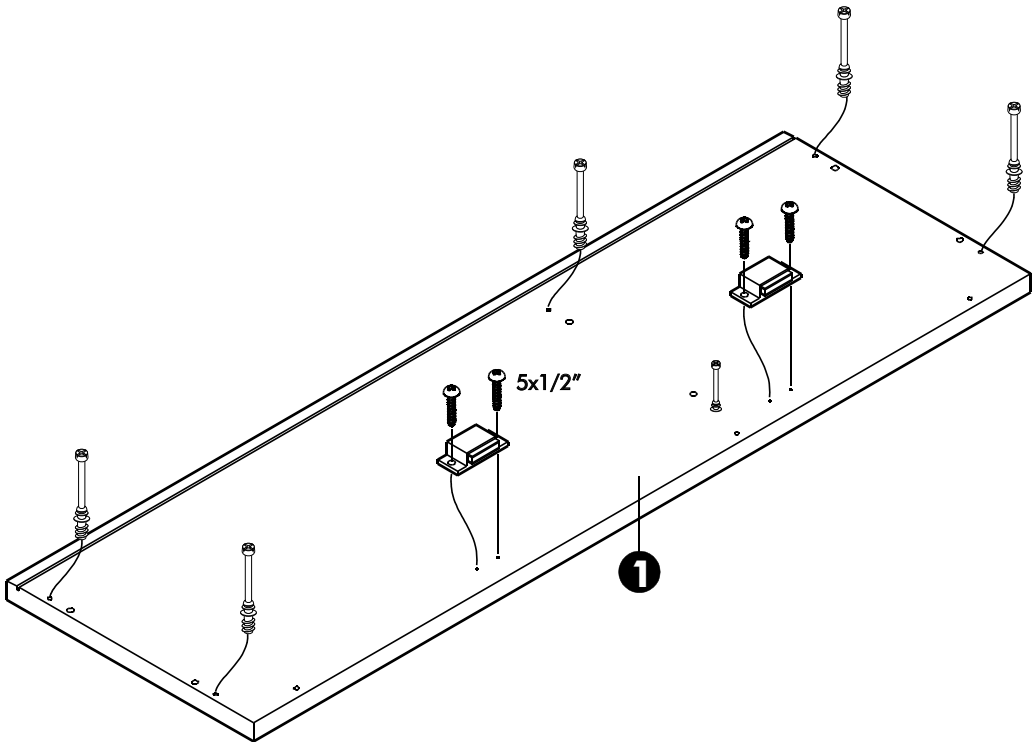




5.

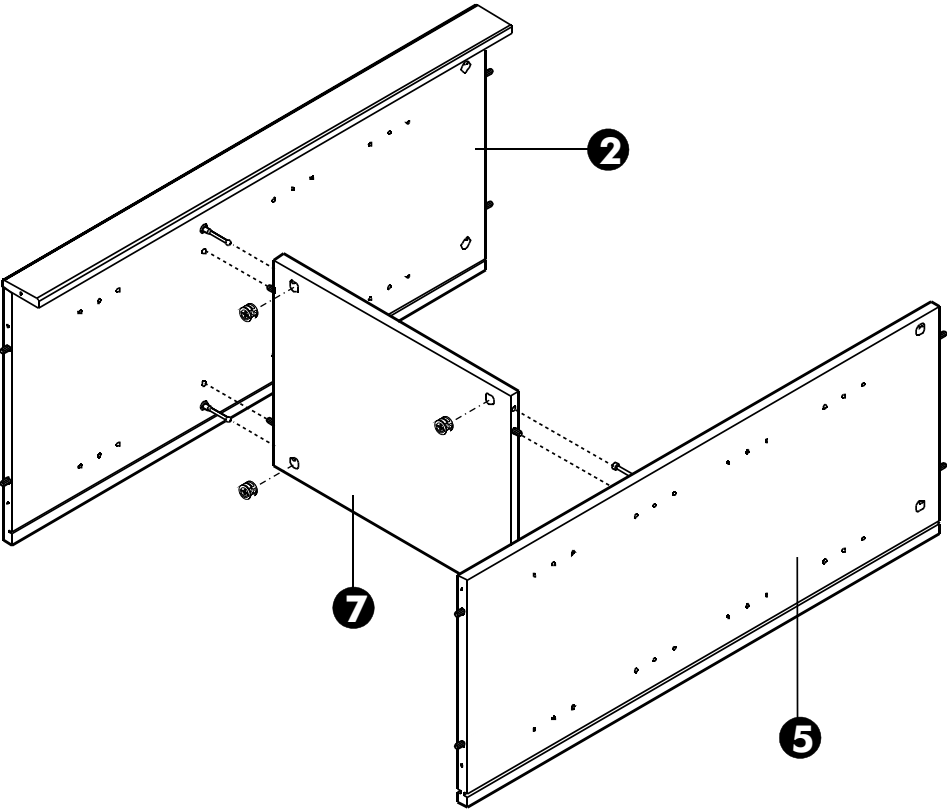


6.

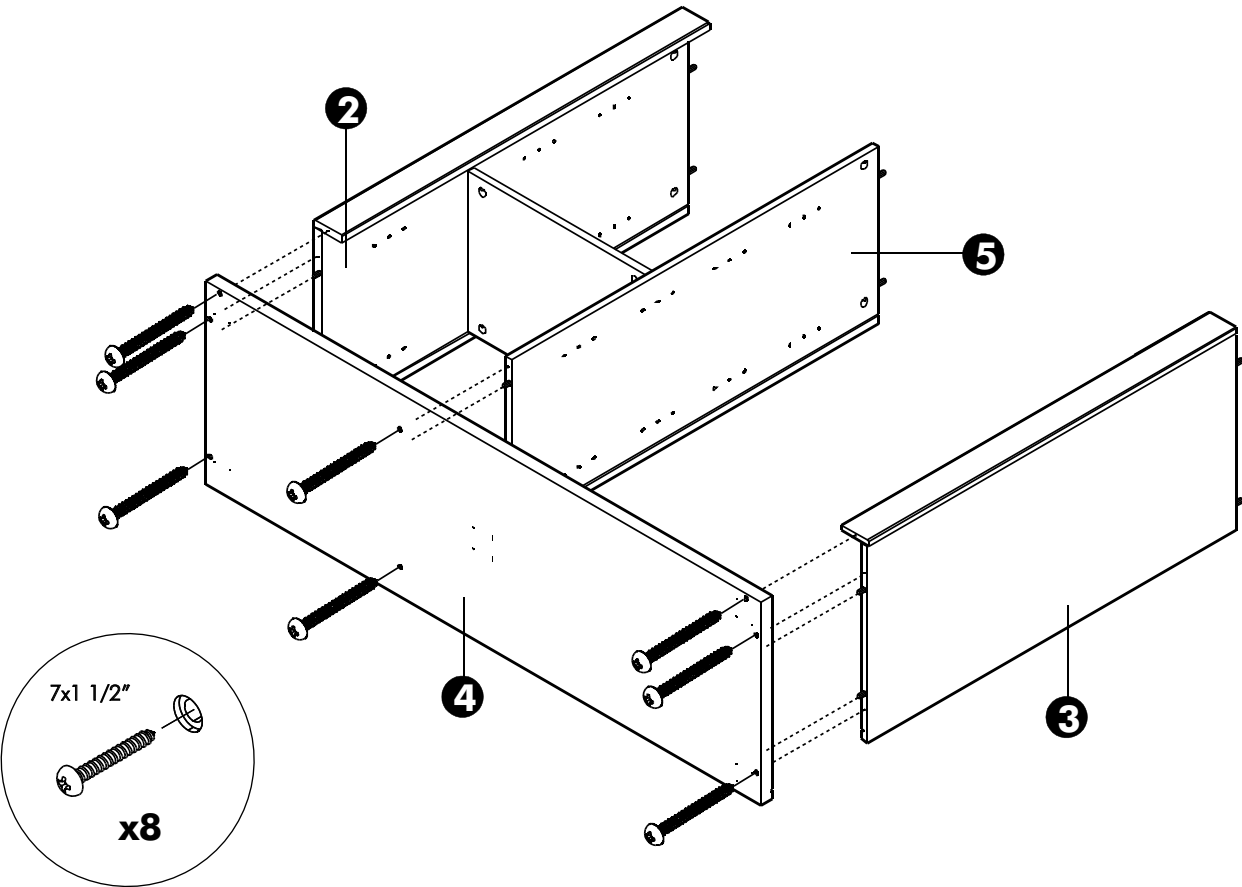


7.

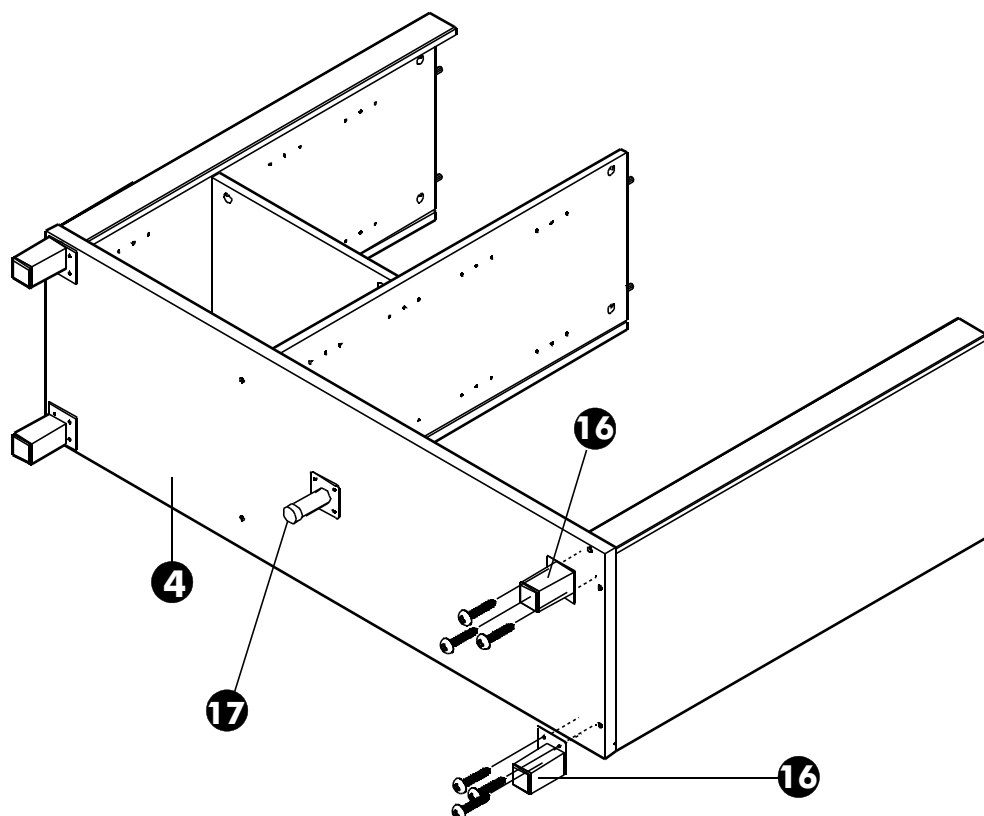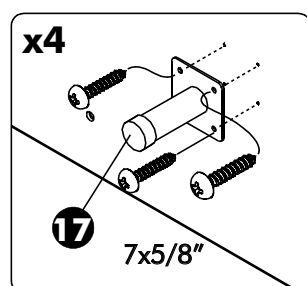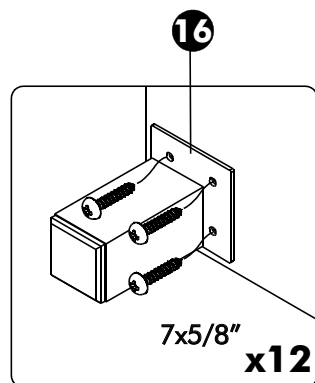


8.

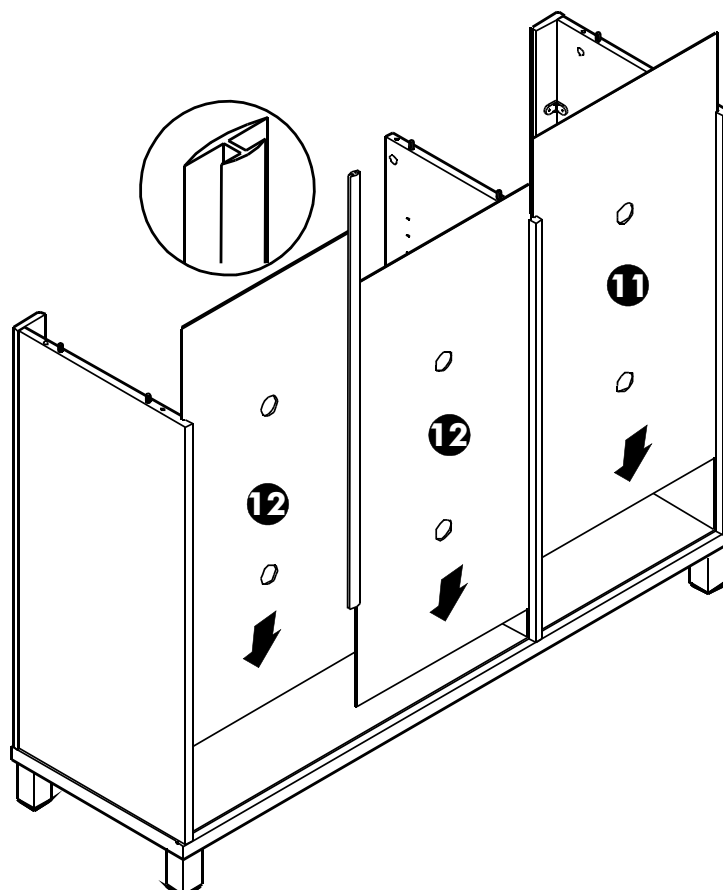


9.

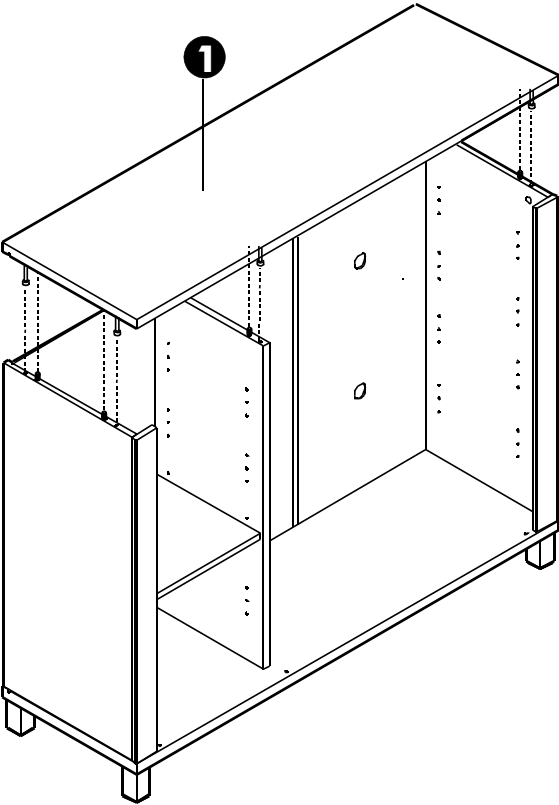


10.

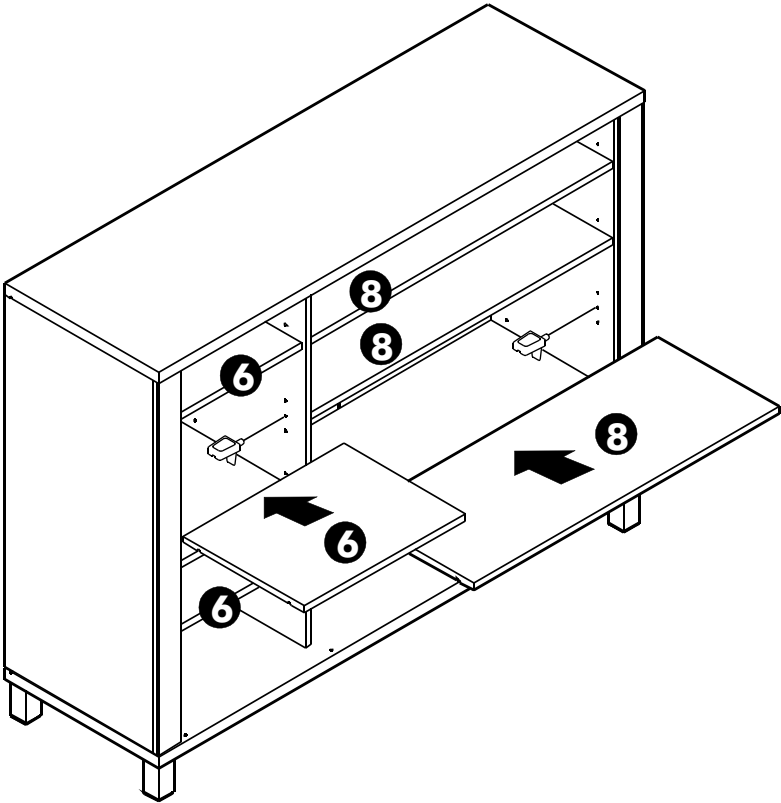


11.

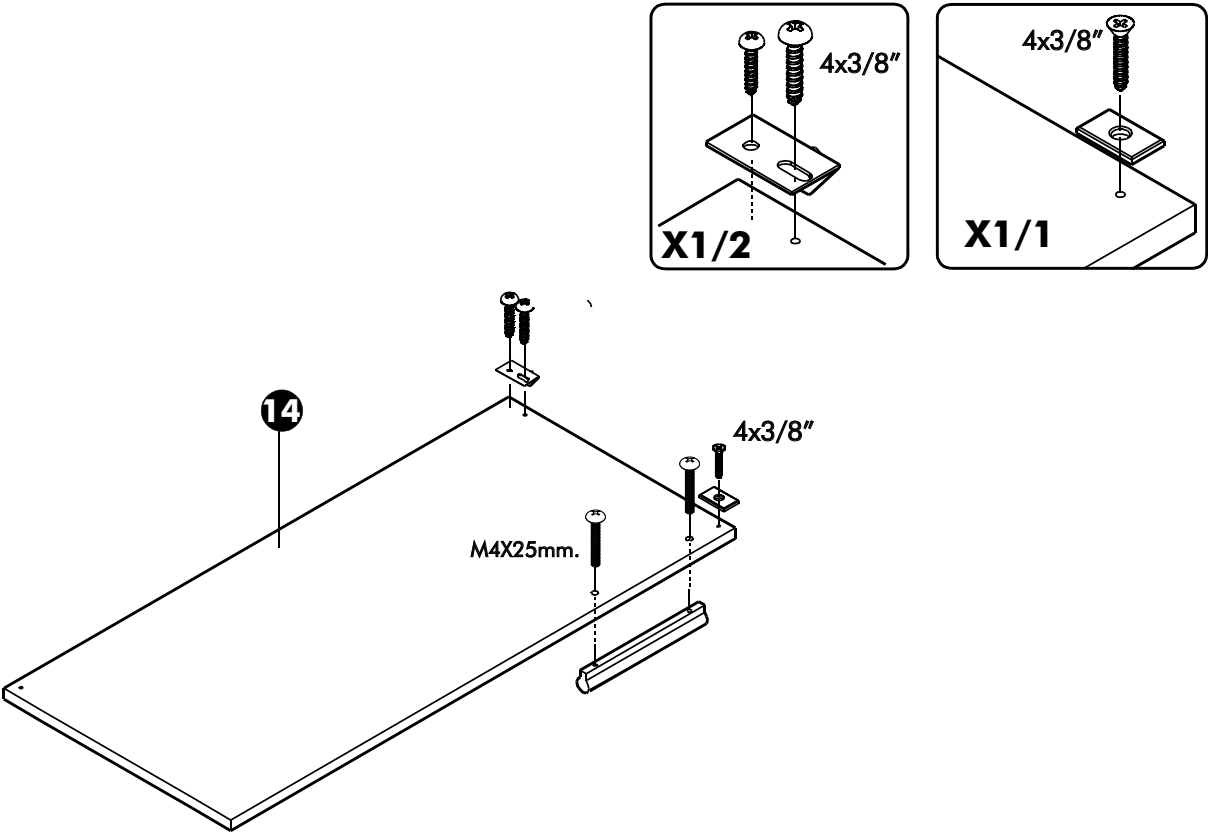

12.

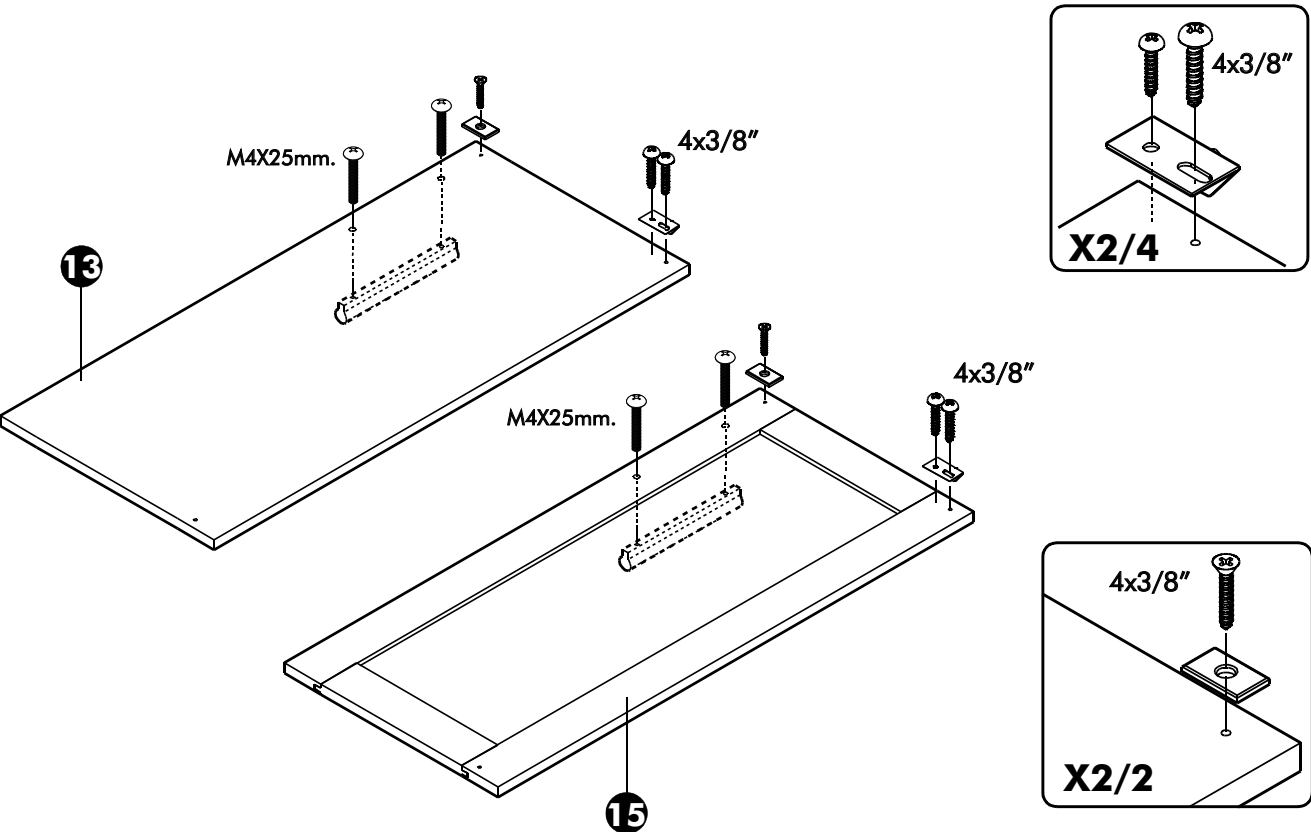

13.

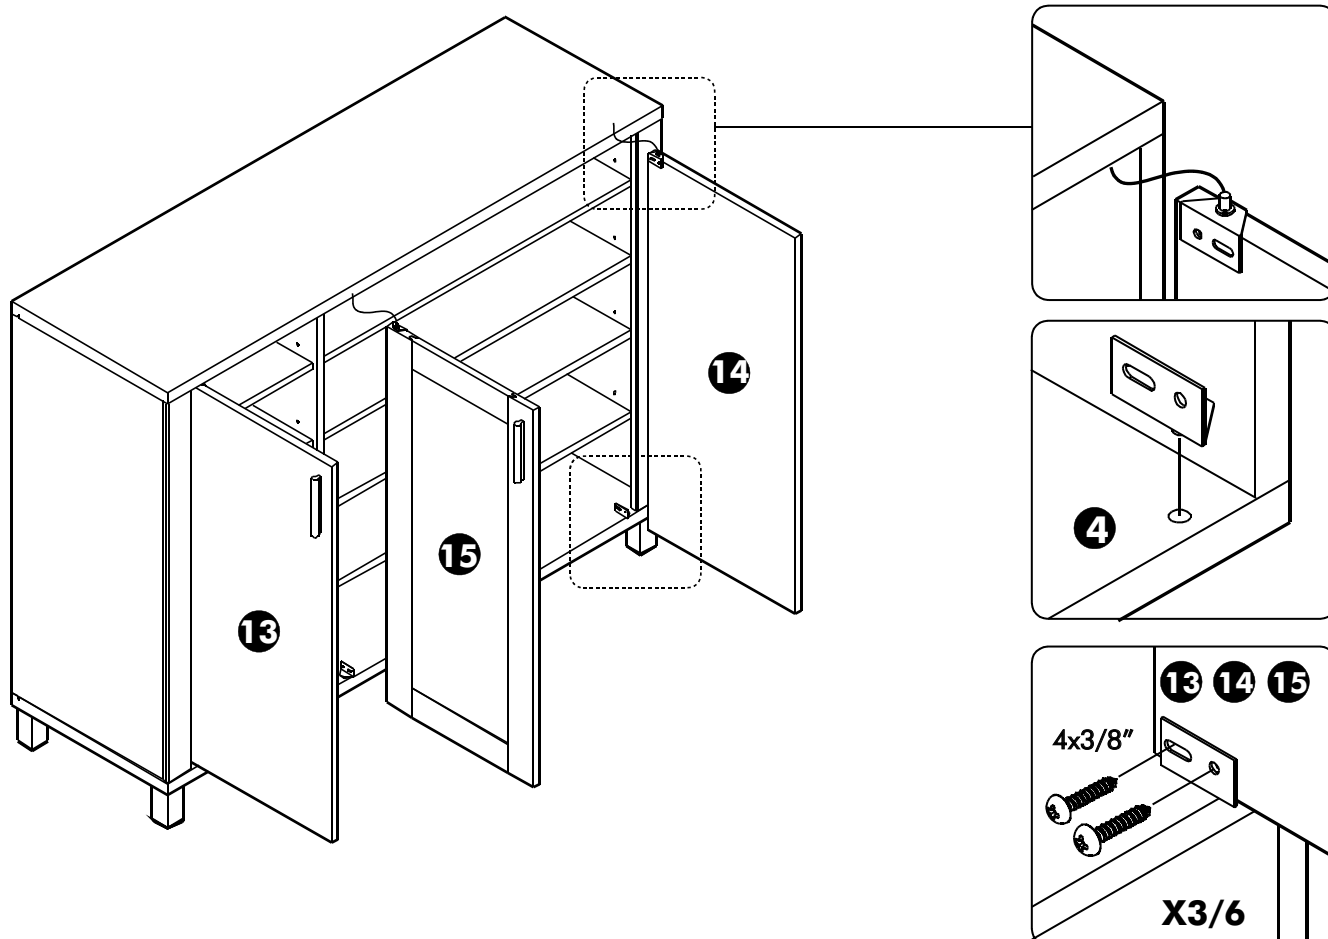

14.

