


# ONE WAY-F-P

## Cabinet

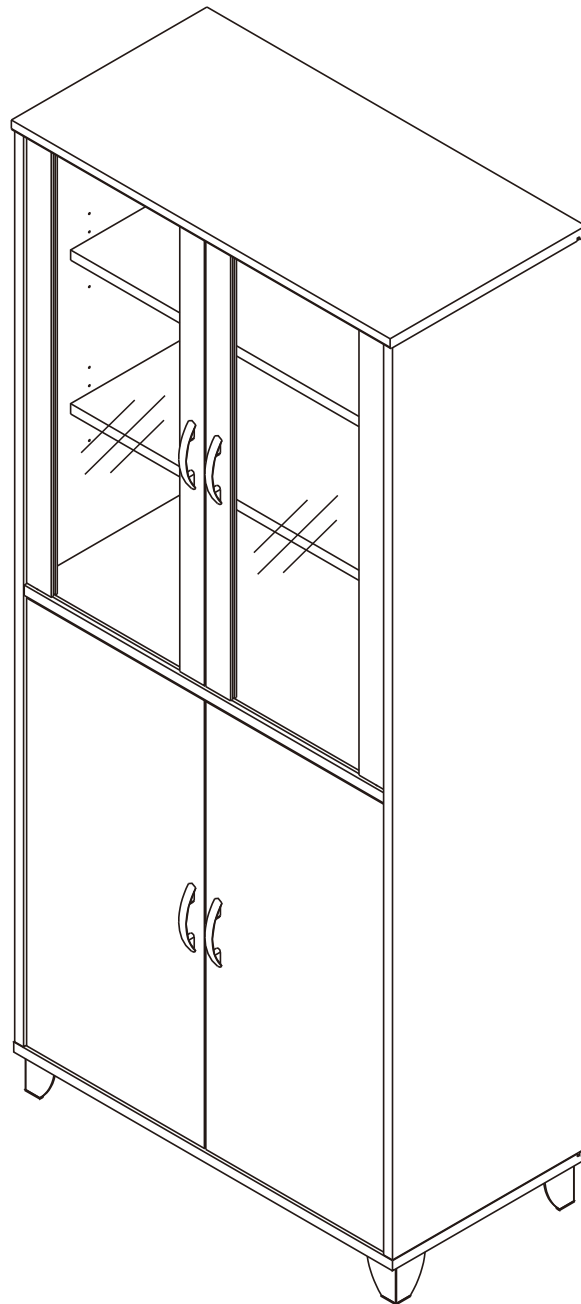

# CONNECT SYSTEM

1

2

(Connecting bolts)




3

**WHEN FITTING CAMS**  
ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING BOLT  
TURN CLOCKWISE UNTIL SECURE

**↑**  
**CORRECT**


**WRONG**

M3.5x20mm.

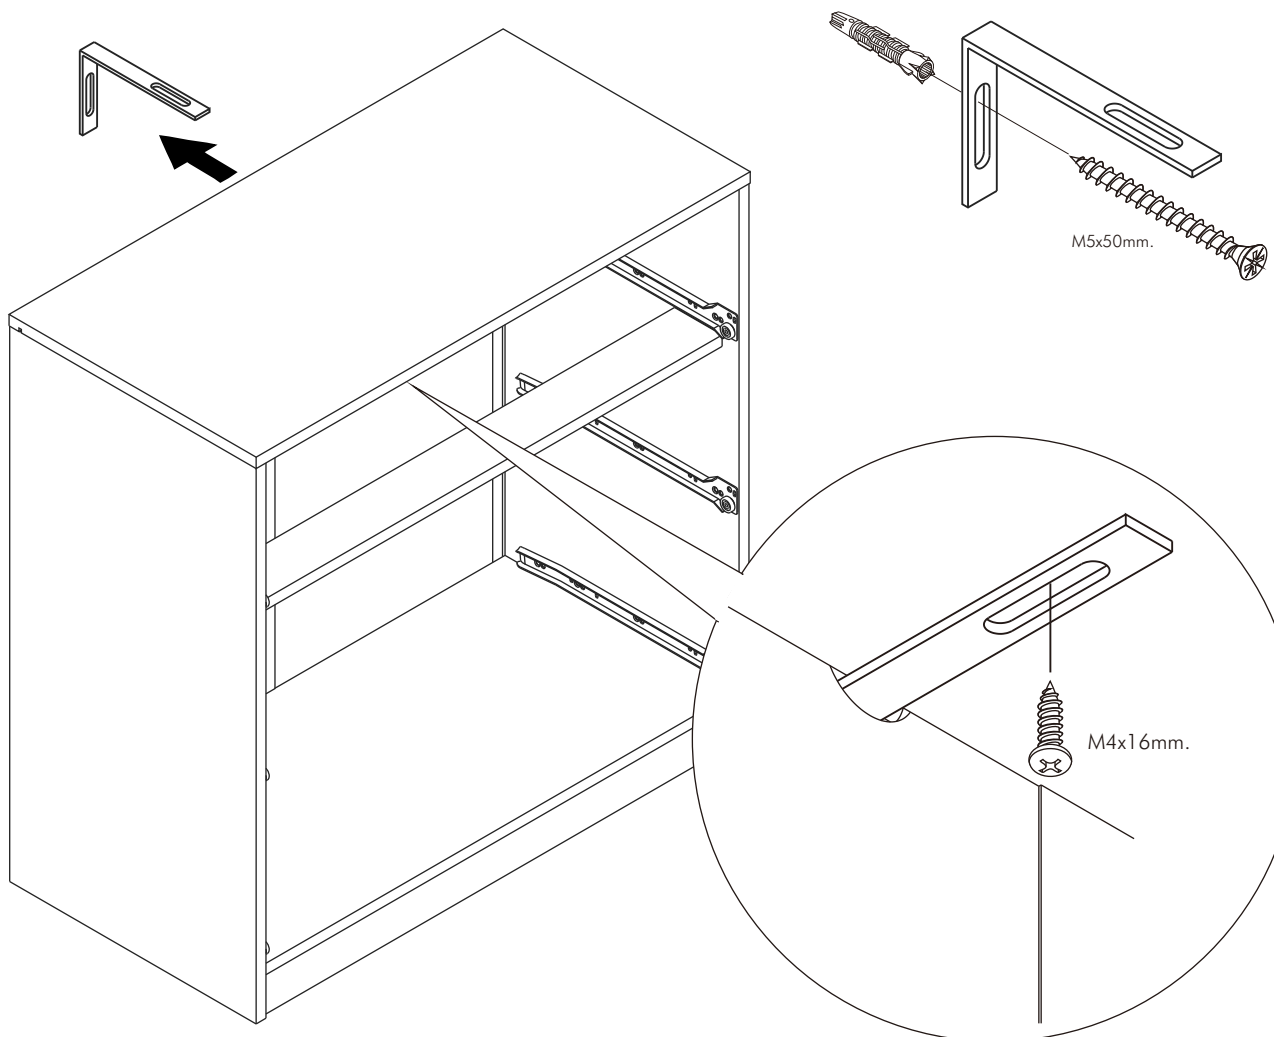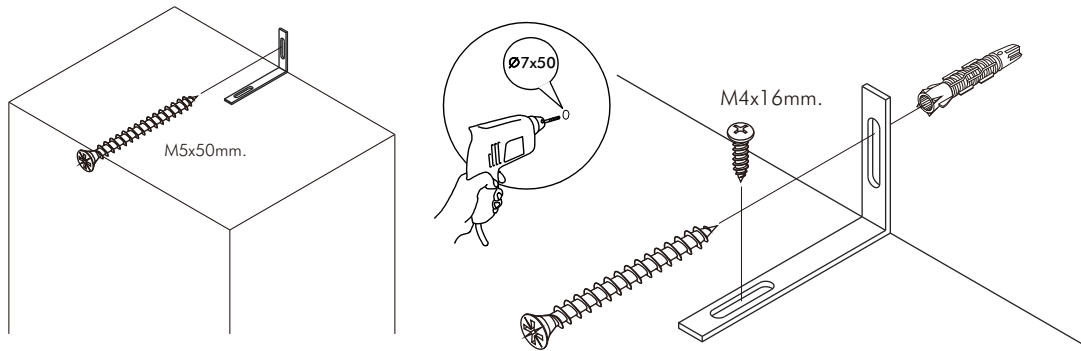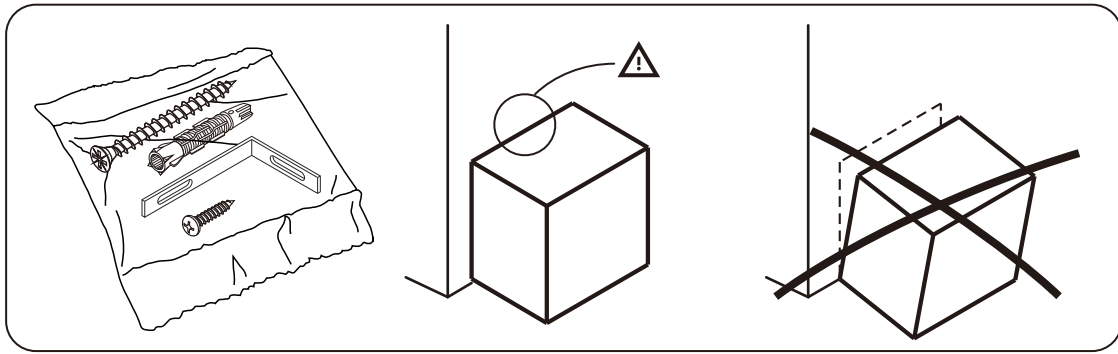


**The Standard for identifying which mounted safety fall protection fitting to use** **Note : That children's products must be installed**


**Category : Cabinet with open doors**

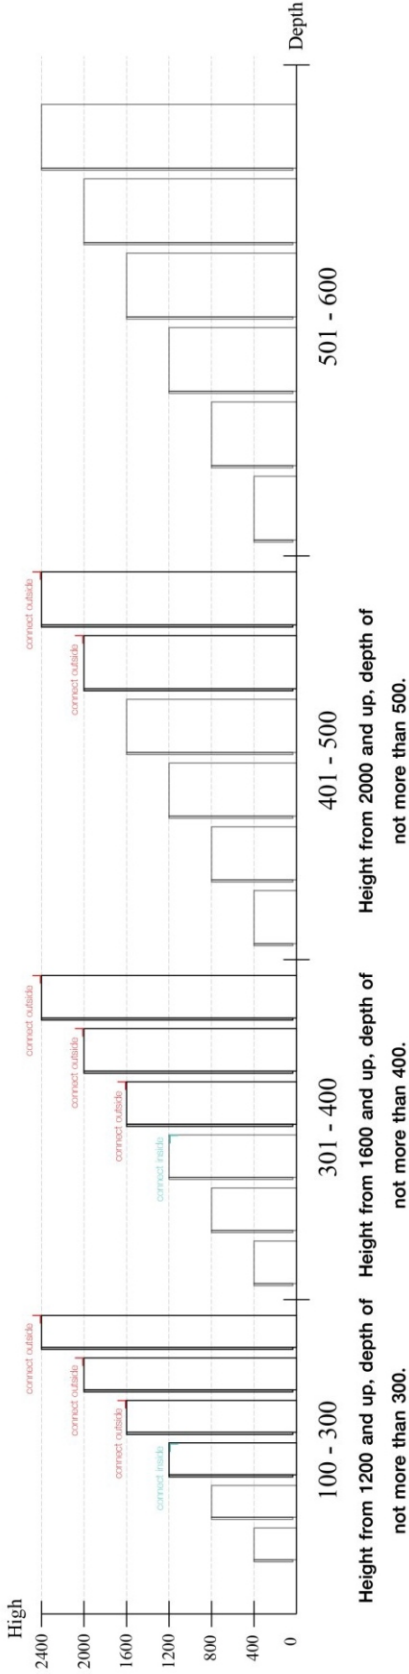


Mounted fall protection fittings

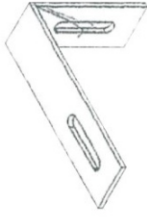

**Category : Chest of drawers**

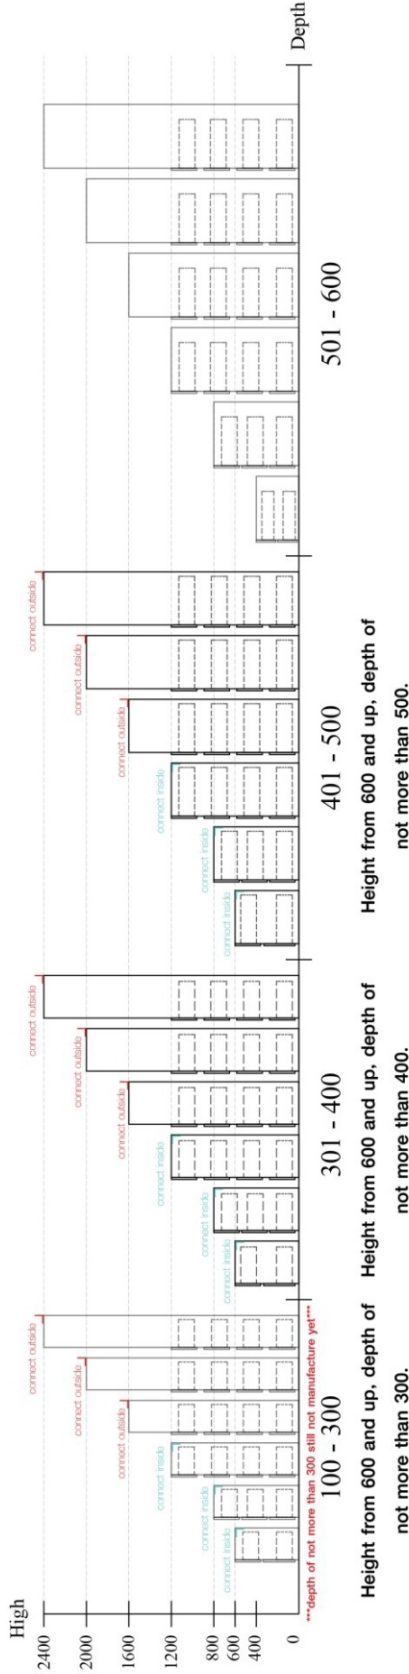


**Category : Sliding door cabinet / Open cabinet**

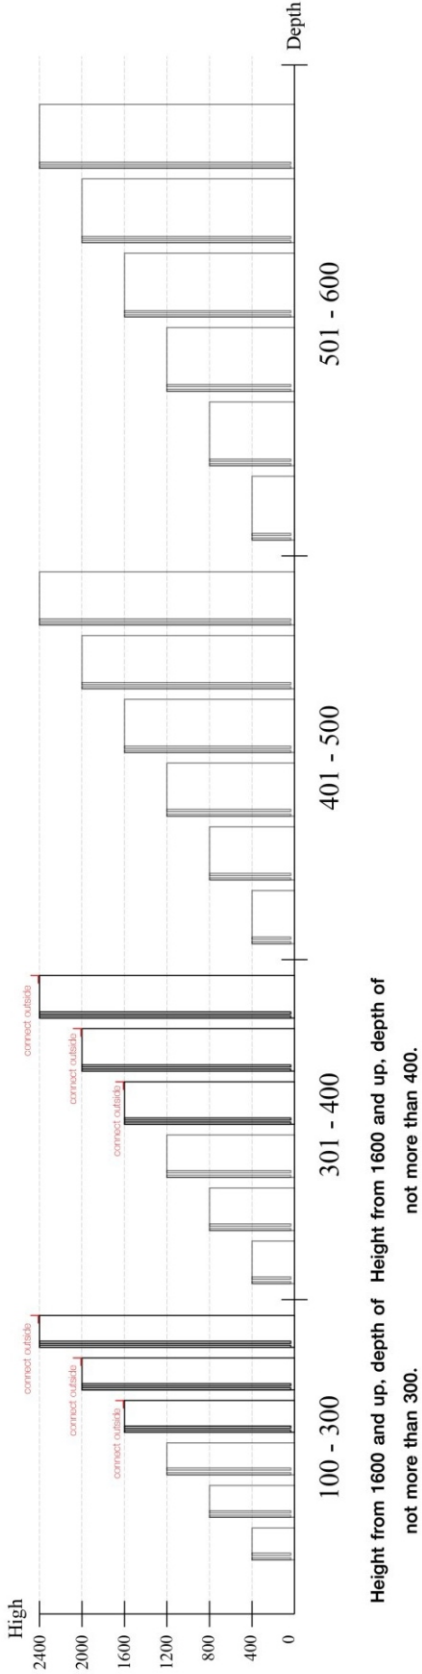

# HARDWARE


## -BODY SET



**x 8**




**x 8**



(8x35)


**x 12**

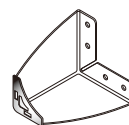

**x 4**



**x 16**




(M5.5x38)

**x 4**



**x 12**




M3.5x20mm.

**x 12**




(7x5/8")

**x 20**




(6x35)


**x 6**



**x 2**




**x 4**



**x 4**



**x 4**



(4x3/8")

**x 4**



(6x1/2")

**x 4**




**x 4**



M4x20 mm.

**x 8**

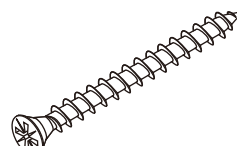

M5x50mm.

**x 1**




**x 1**



M4x16mm.

**x 1**




**x 1**


## ASSEMBLY

-BODY SET


1.

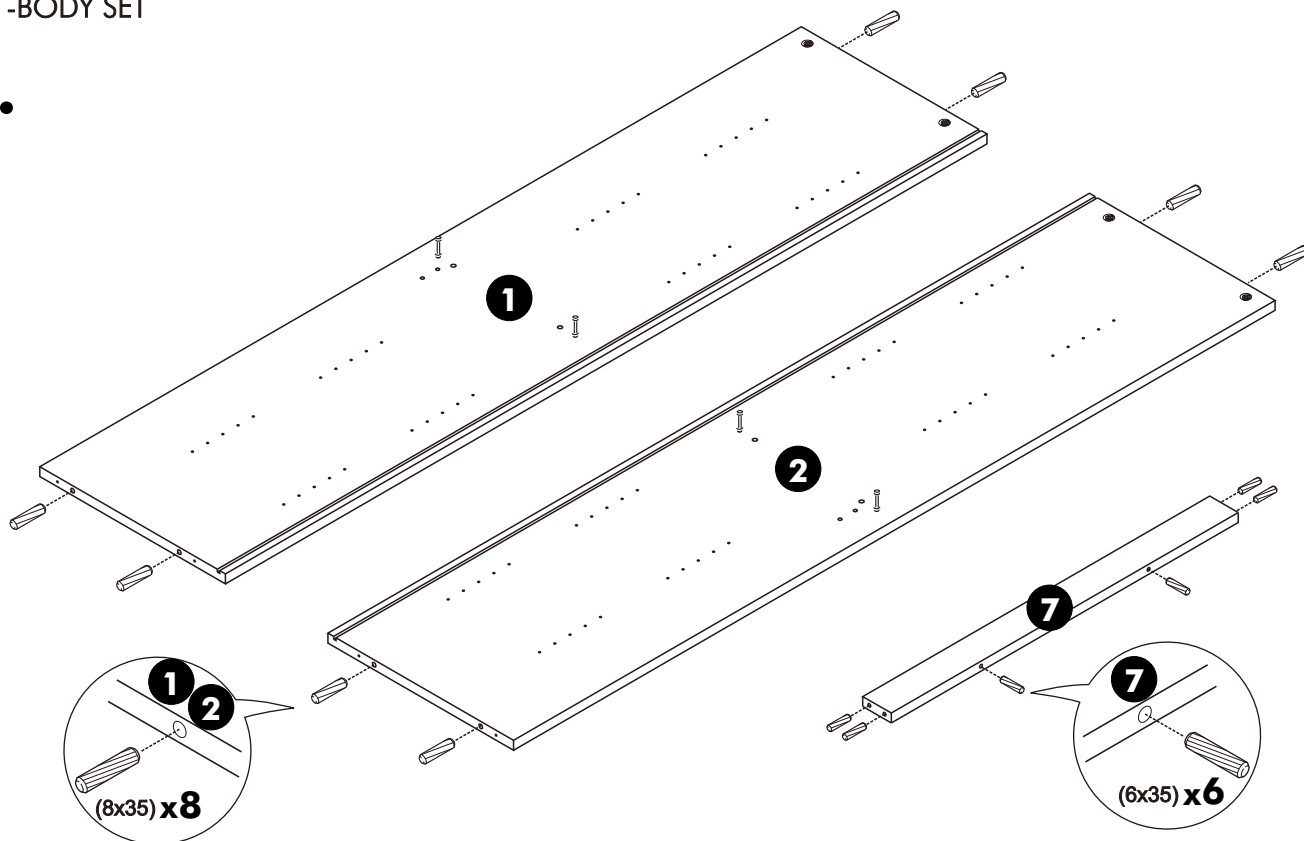


2.

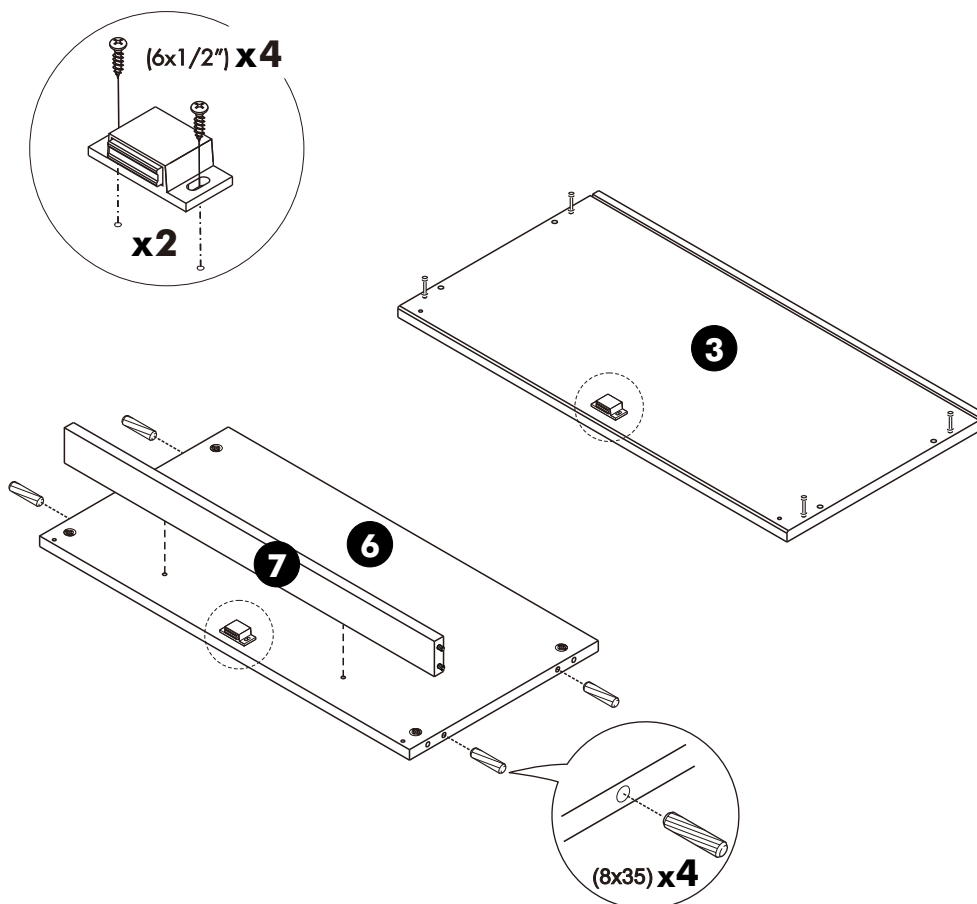


**3.**

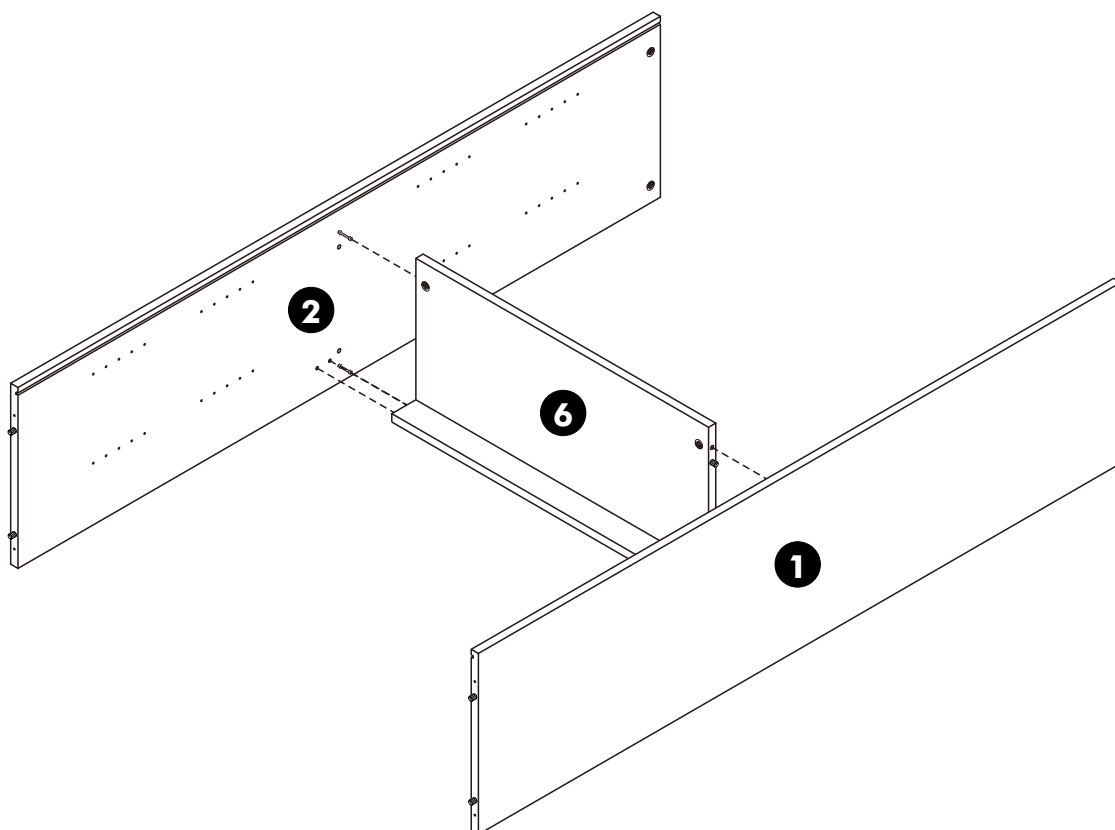


**4.**

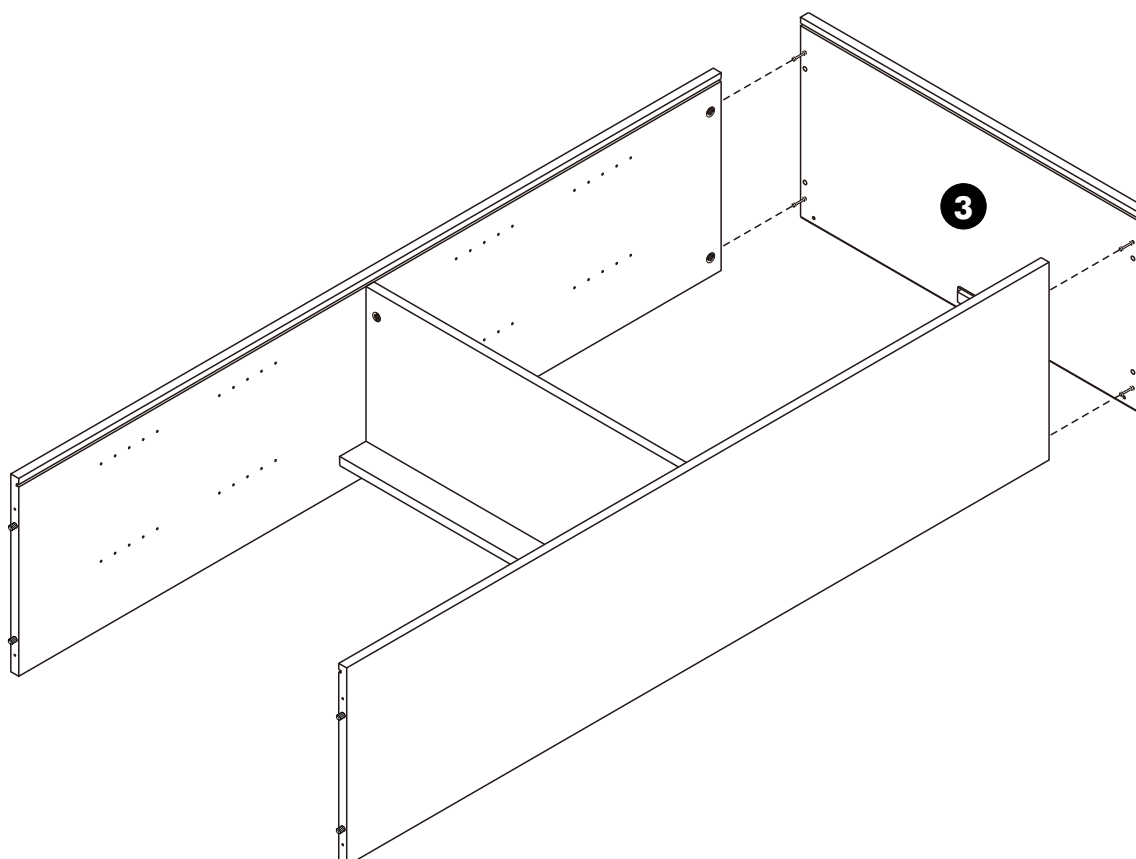

5.

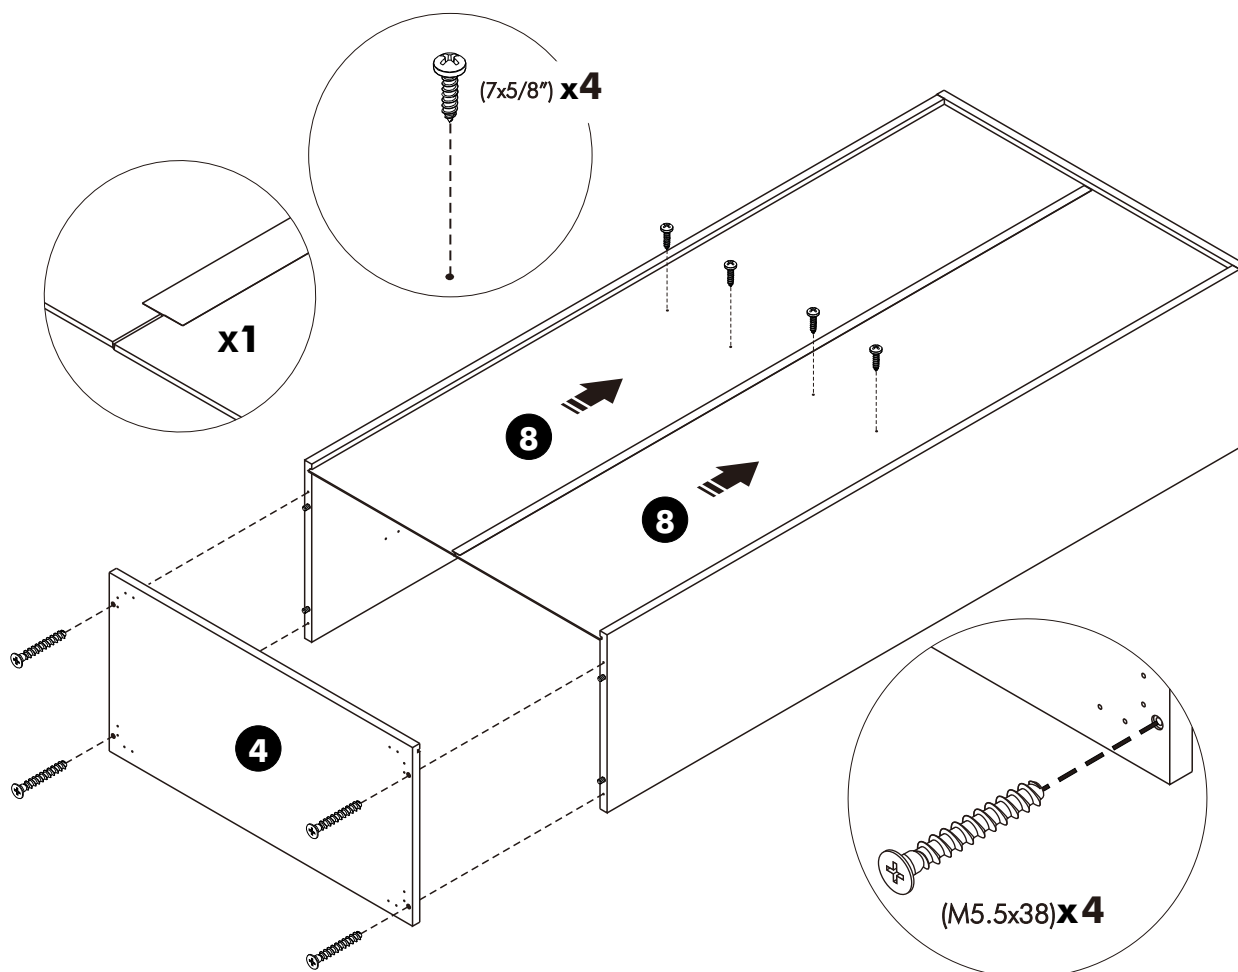


6.

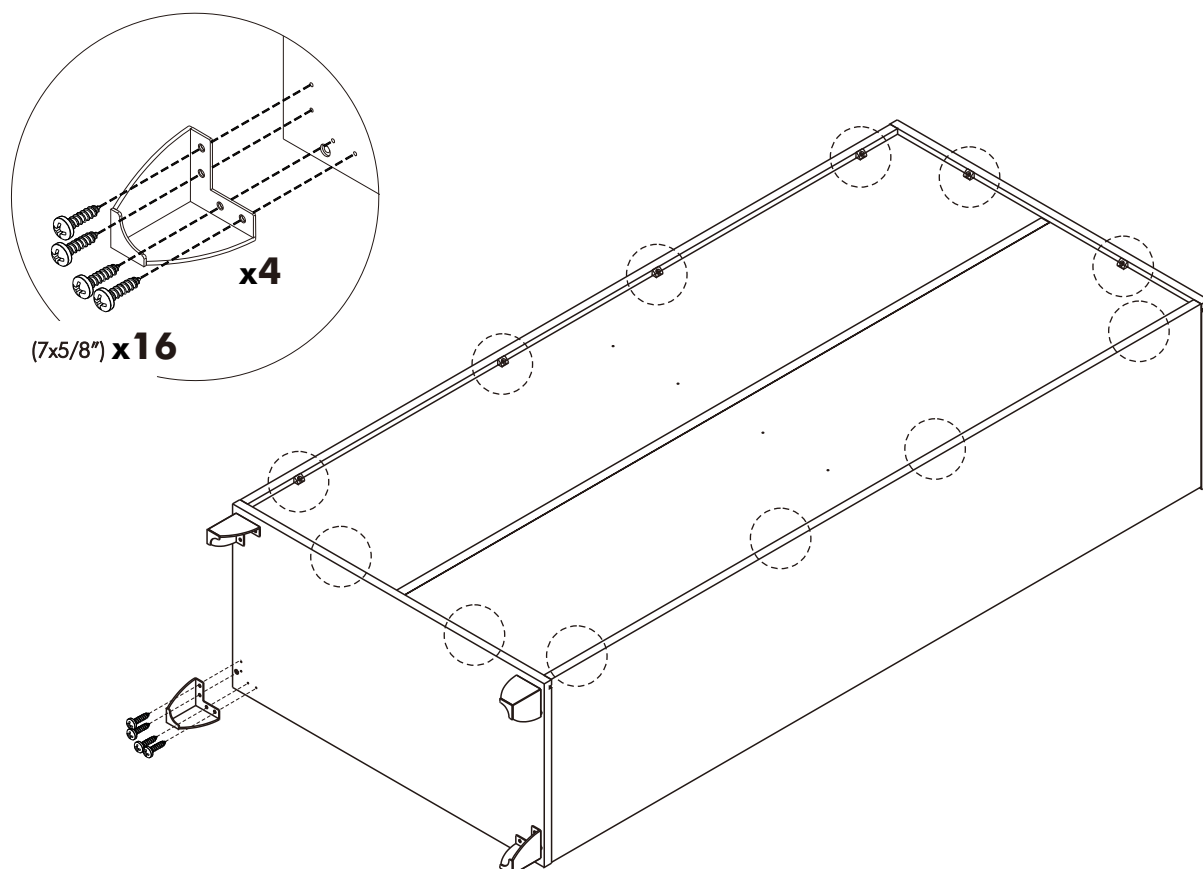




7.

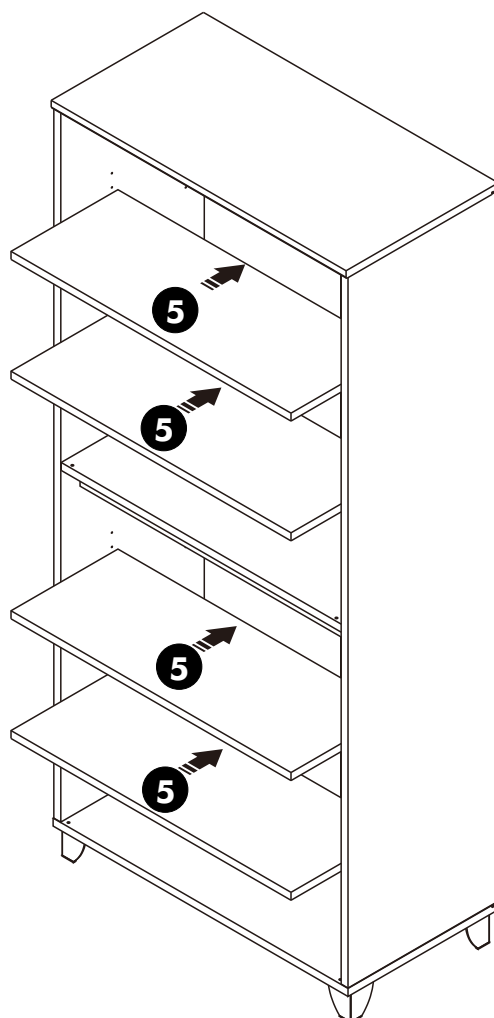

8.

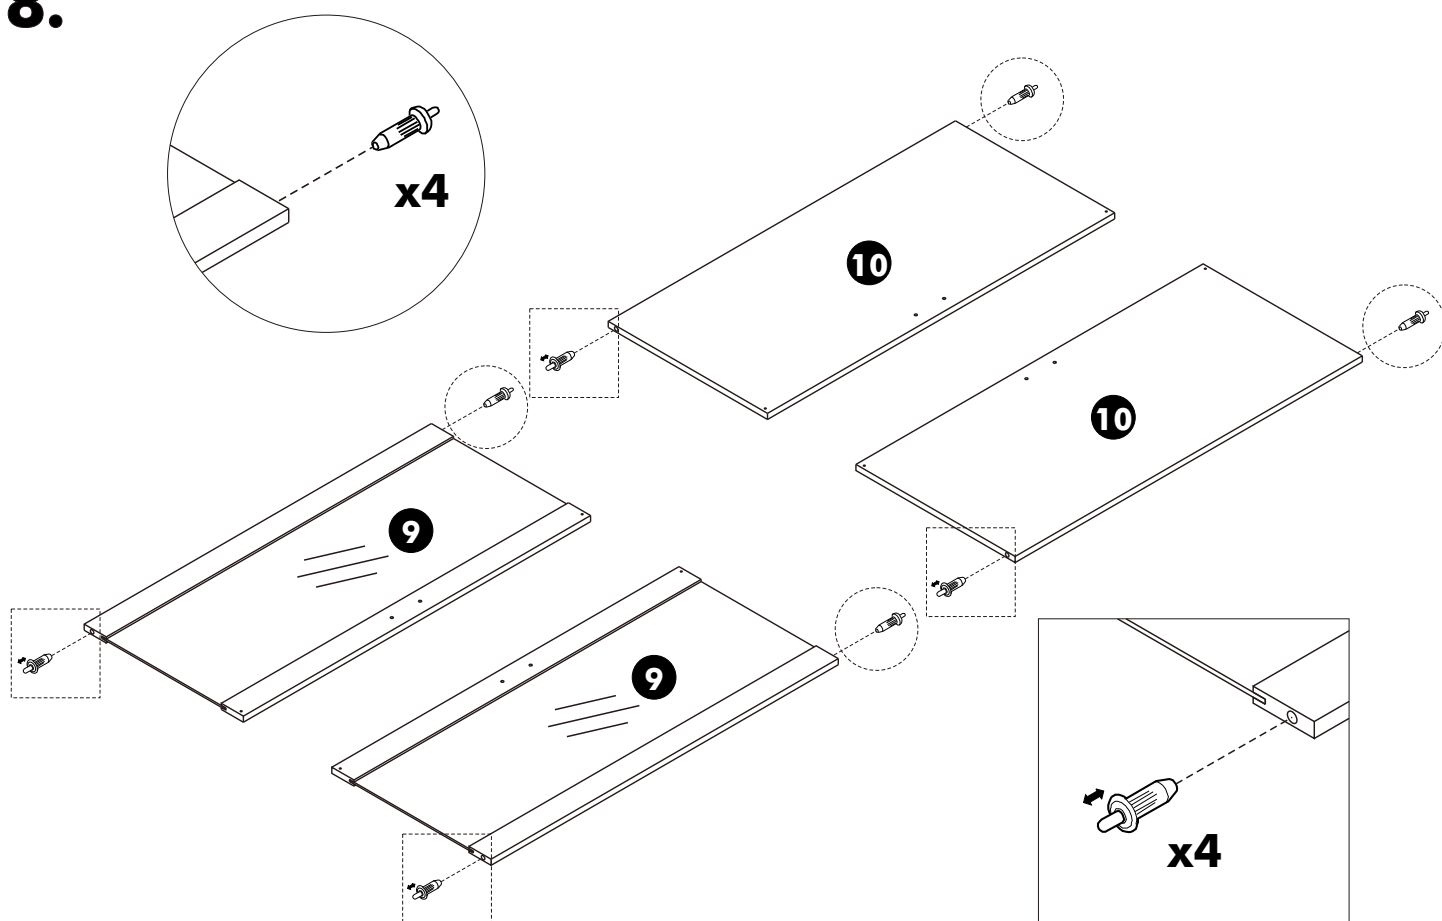

9.

