


KOBE-P


BED 5 ft.

BED 6 ft.

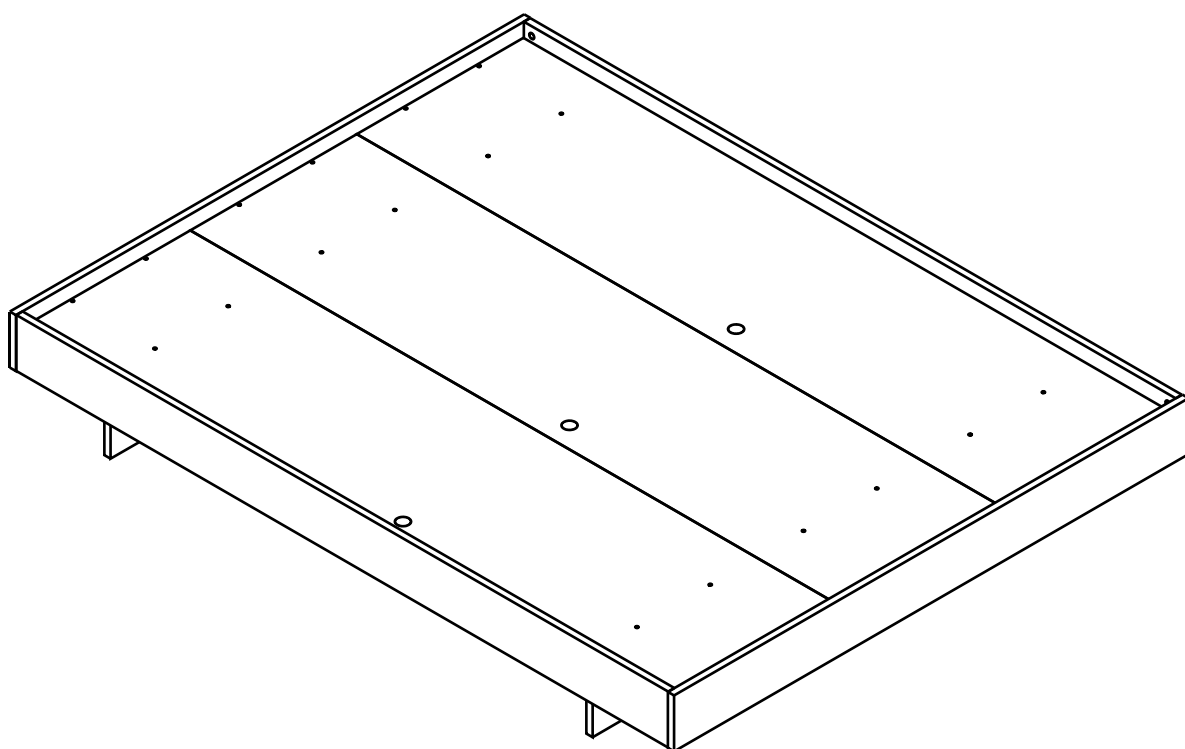


CONNECT SYSTEM


1

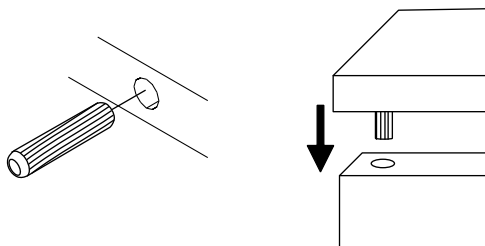





2

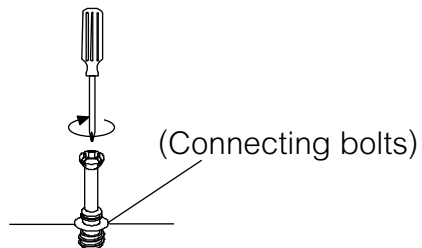

3

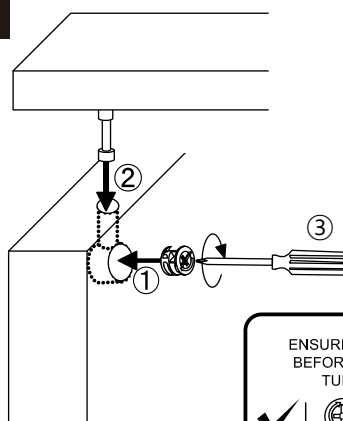


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

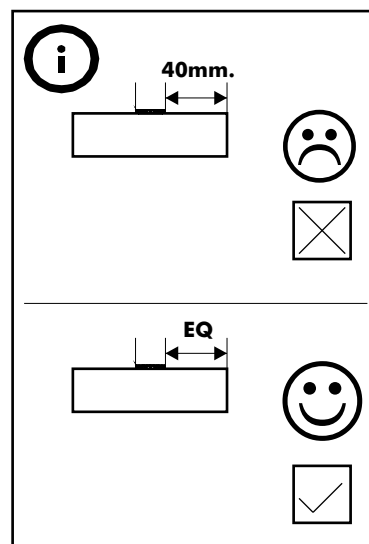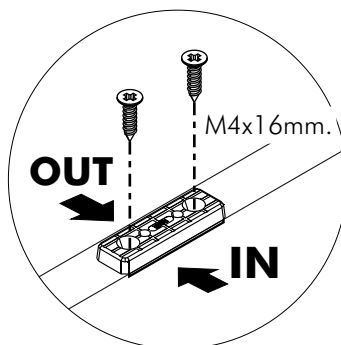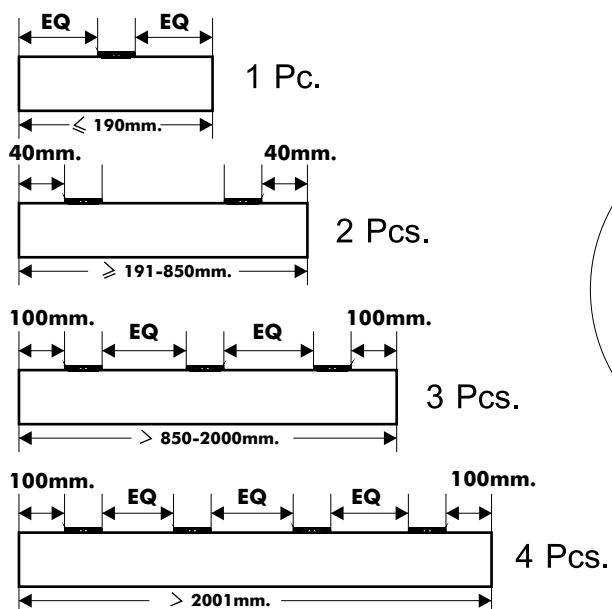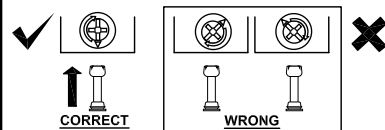

HARDWARE

-BODY SET




x 8



19 mm.

x 8




8*35

x 16



No.10

x 1



M6x45

x 2




#M6

x 2



#M6

x 2



x 8



M4x16

x 36




M4x30

x 58




M4x16mm.

x 16




x 8


1.

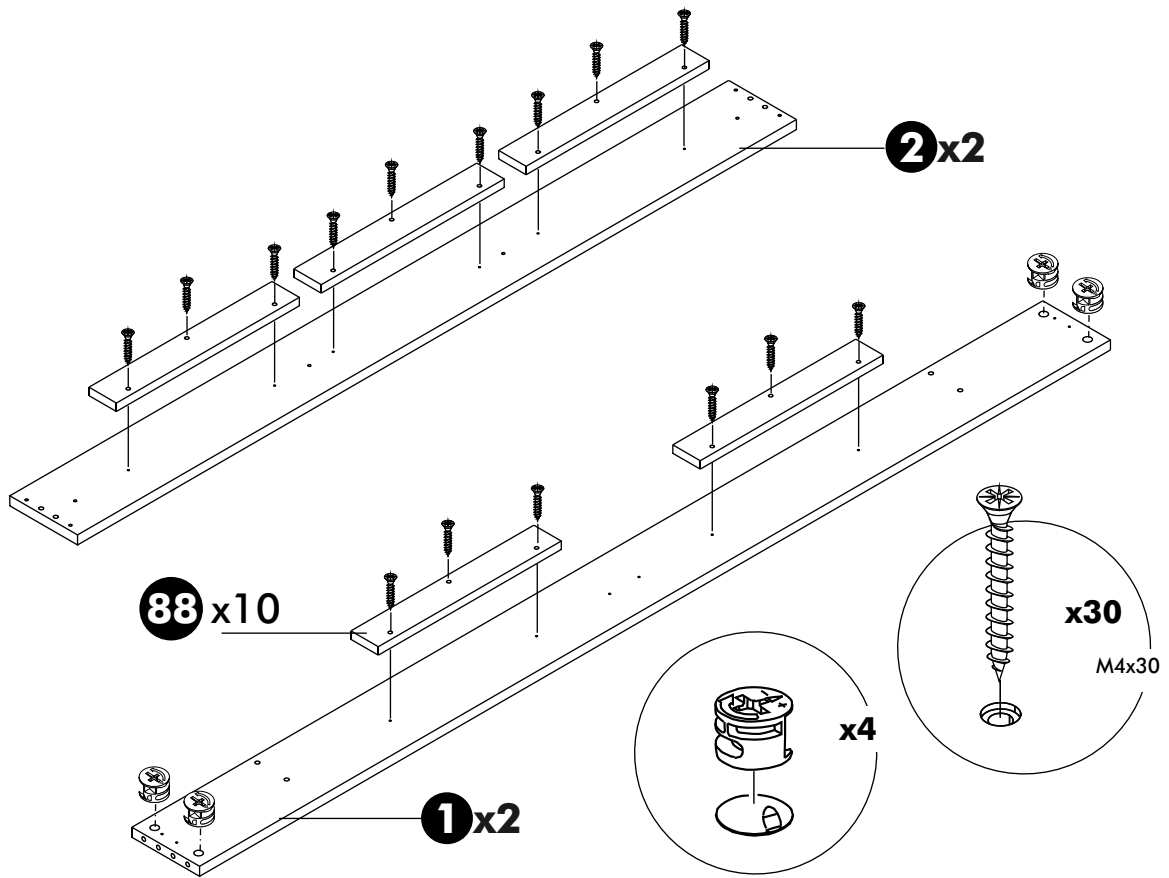


2.

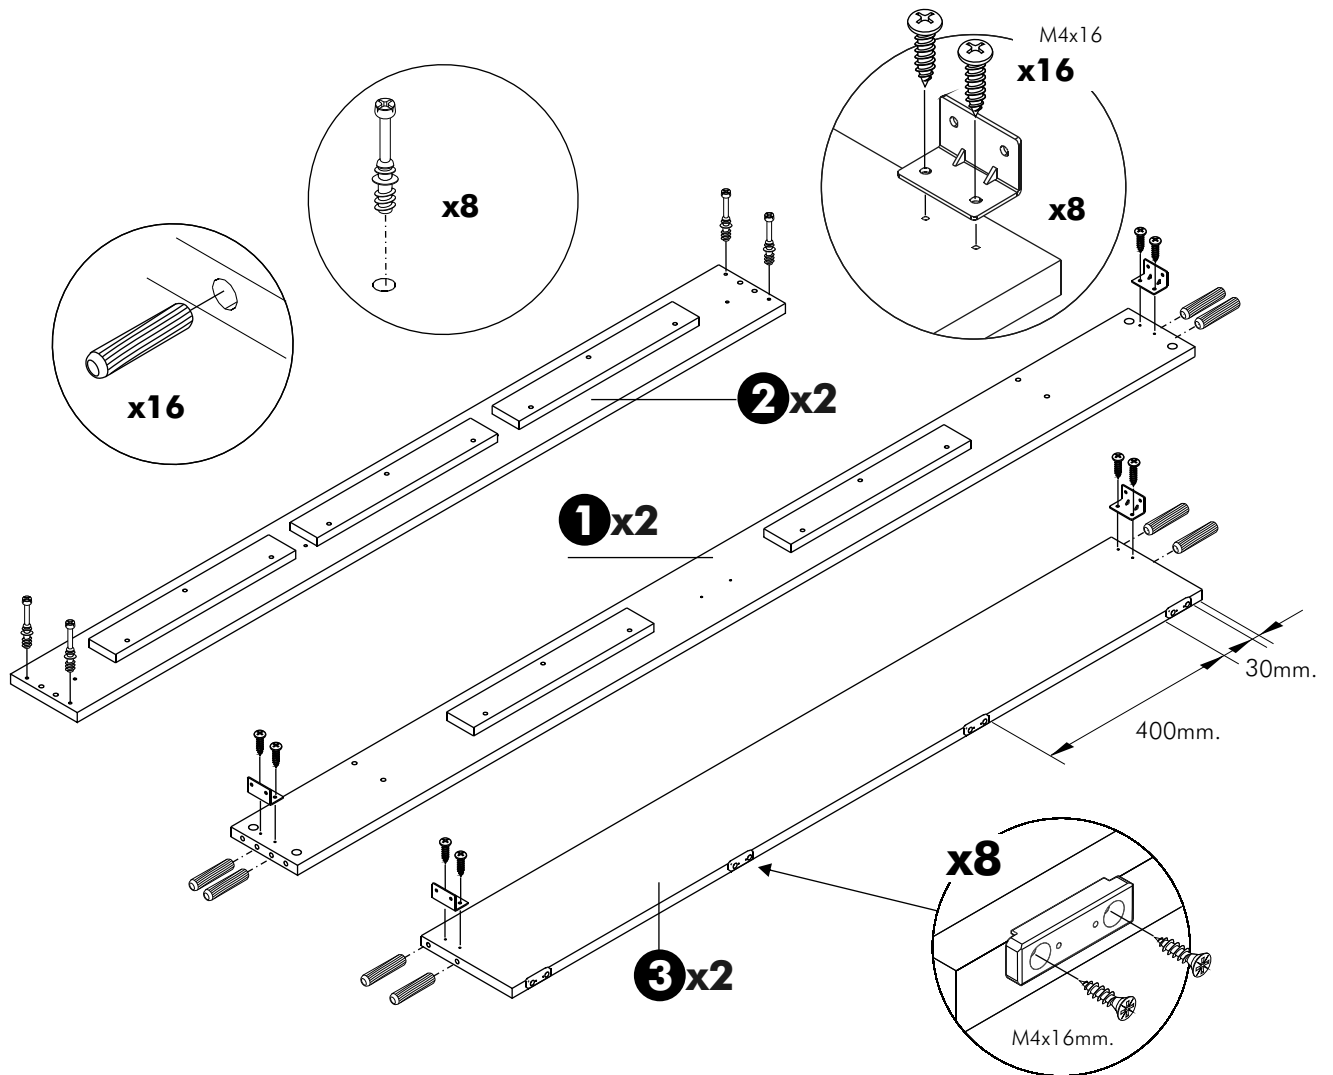


3.

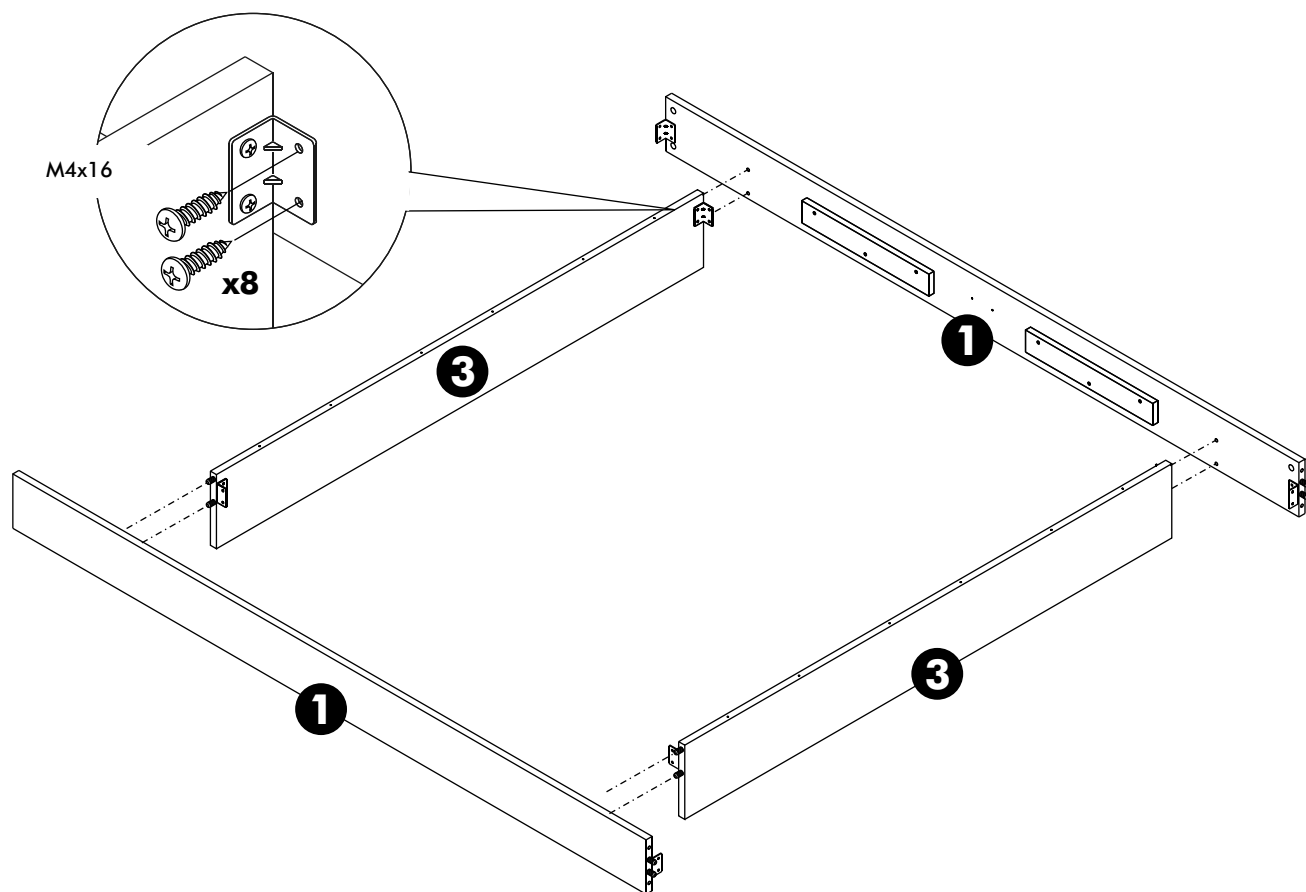

4.

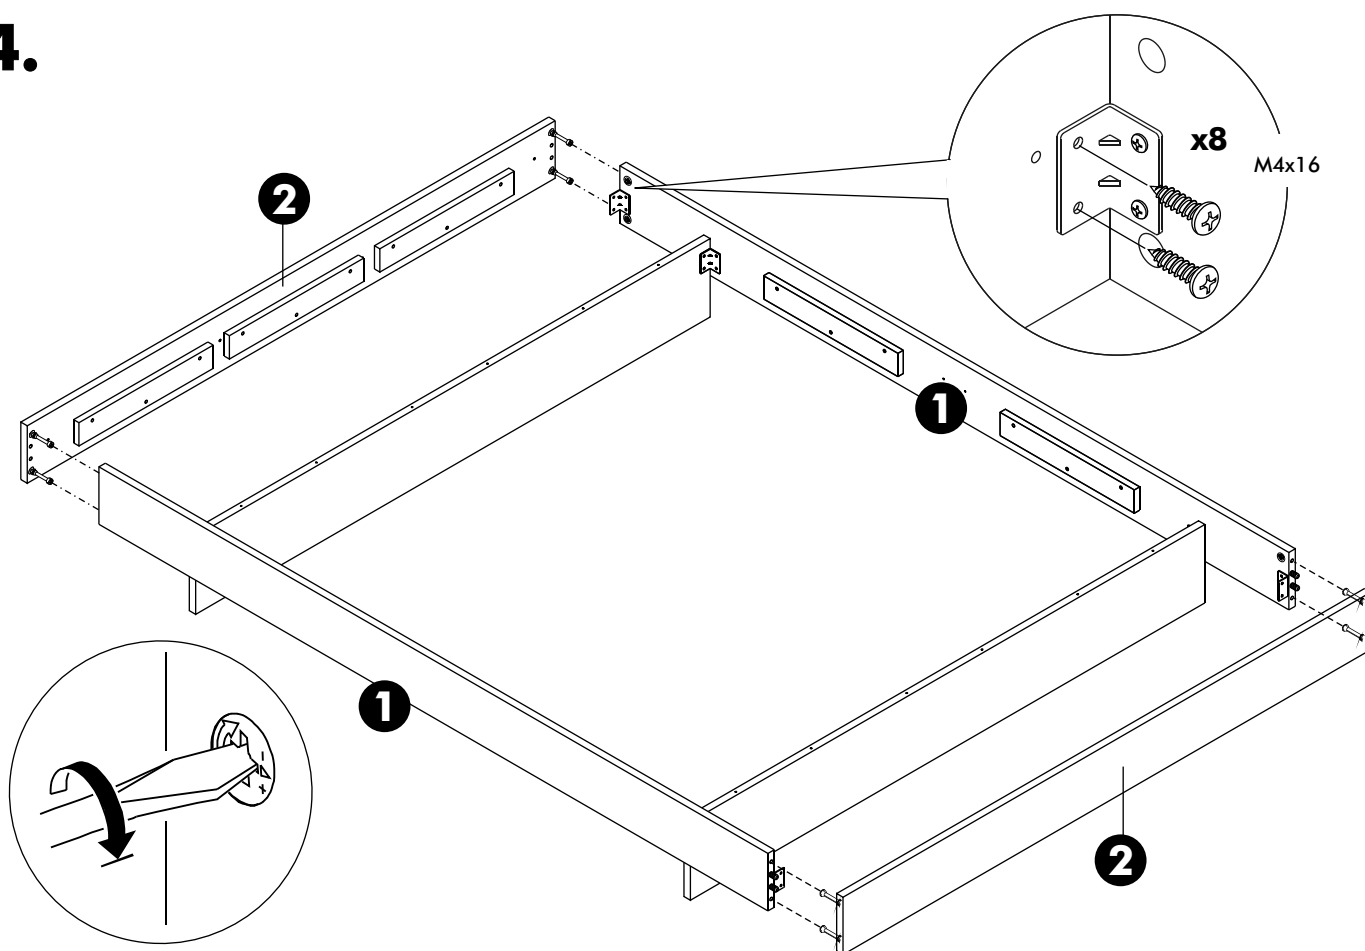

5.

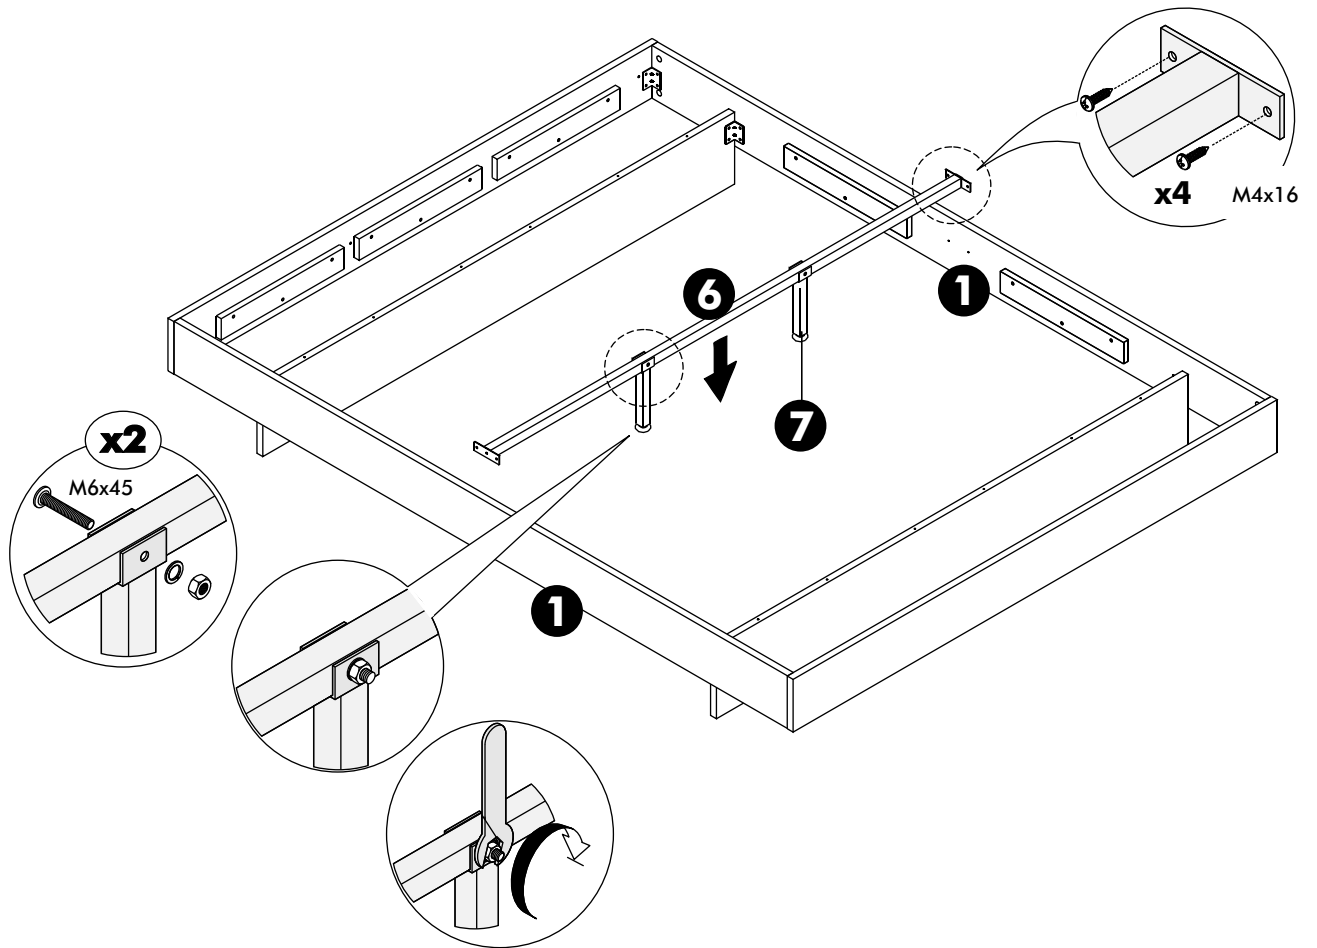

6.

