


# HARSH-P

Stand dresser 60 cm.

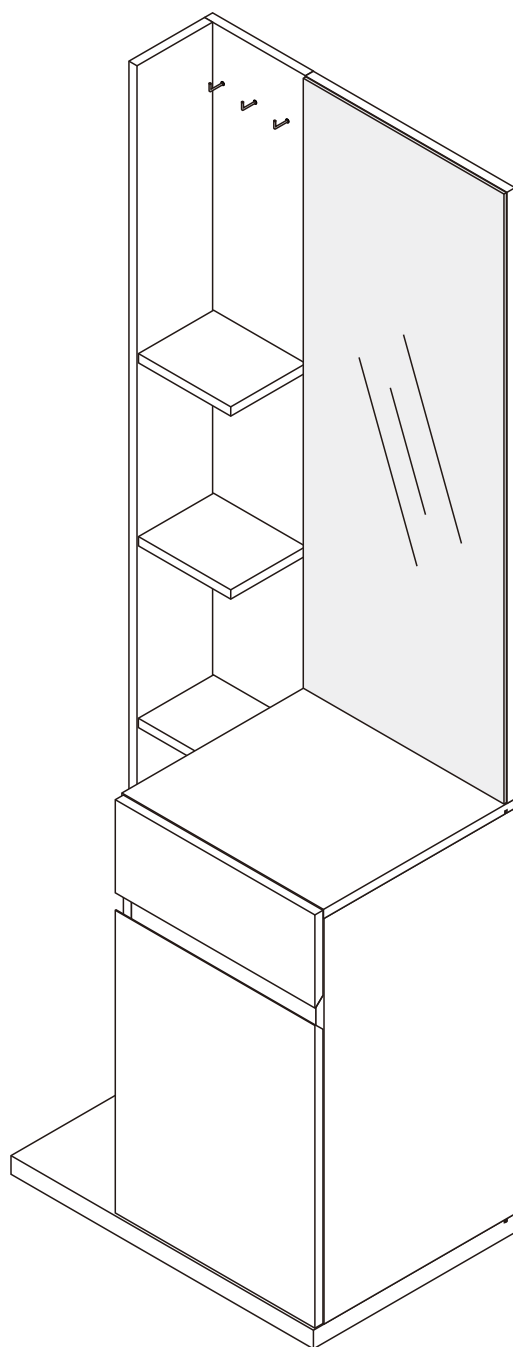

# CONNECT SYSTEM

**1**


**2**

(Connecting bolts)

**3**

**WHEN FITTING CAMS**  
ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING BOLT  
TURN CLOCKWISE UNTIL SECURE


<p>✓</p> <p>↑ <b>CORRECT</b></p>	<p>✗</p> <p>↓ <b>WRONG</b></p>
--------------------------------------	------------------------------------

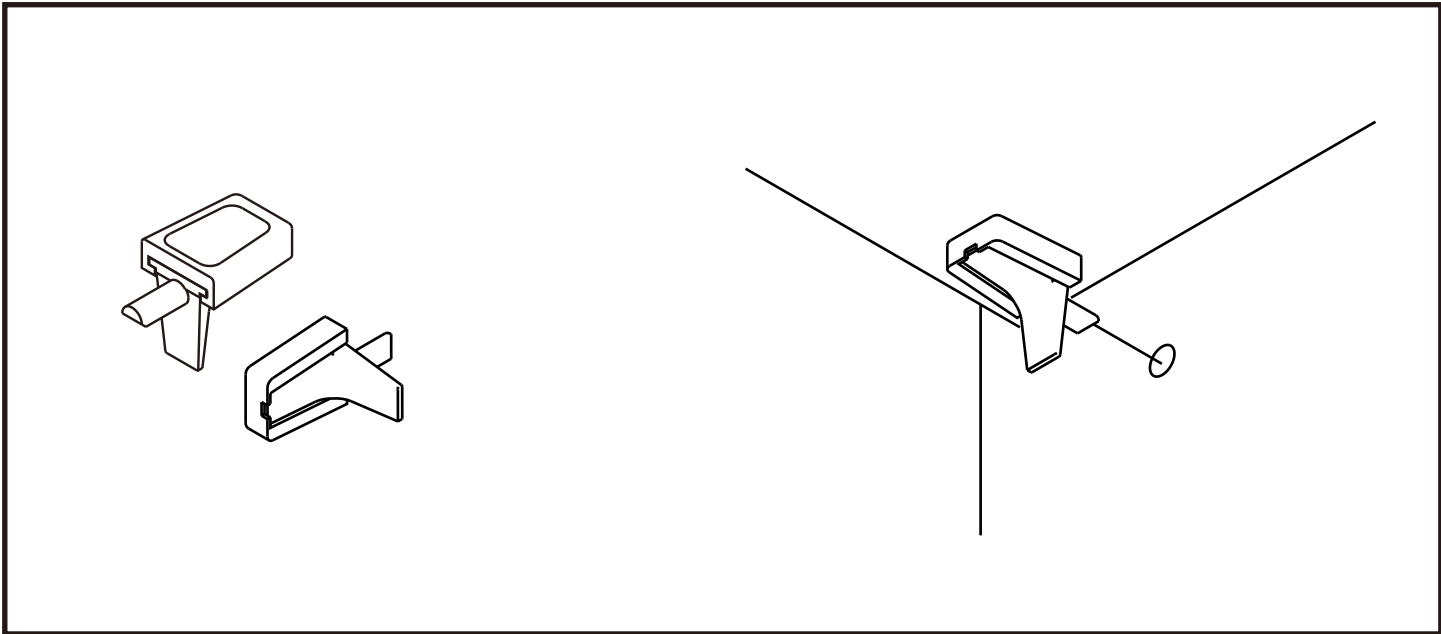

M3.5x13mm.

**1**










**2**



M4x16mm.




DOOR PANEL

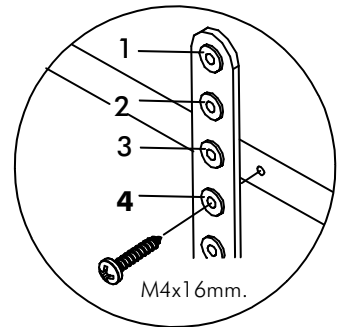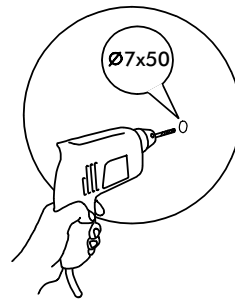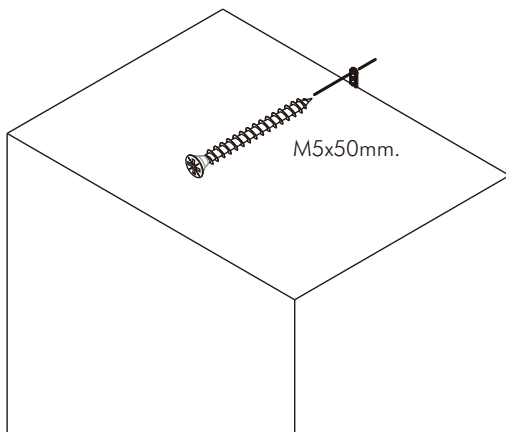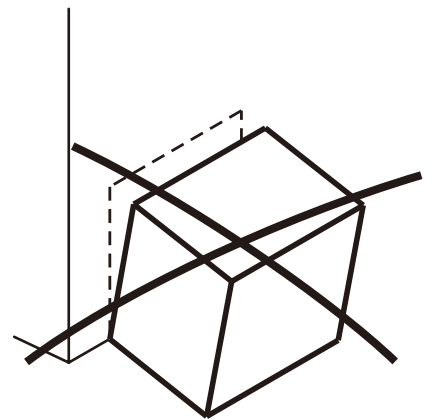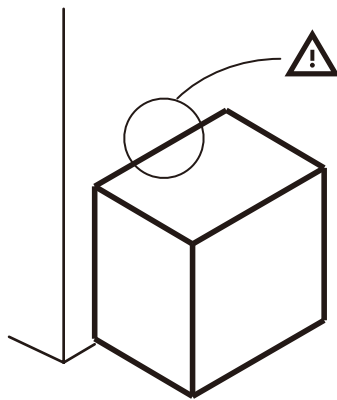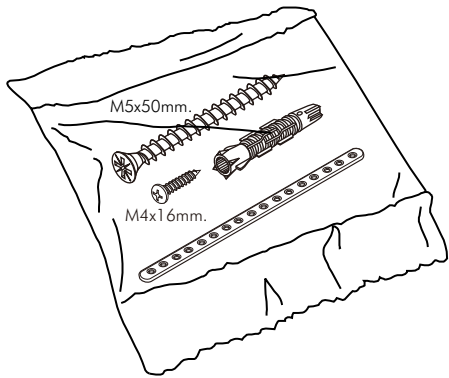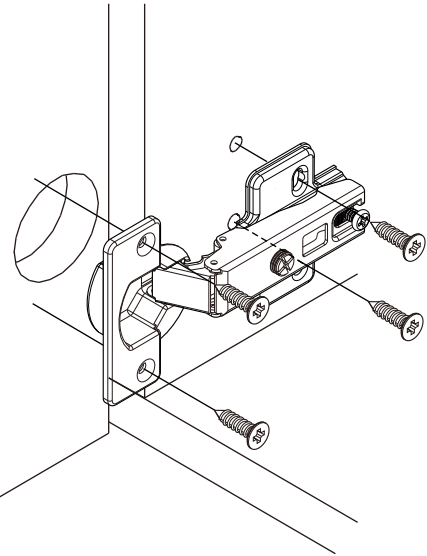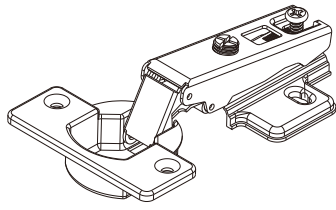

# HARDWARE


## -BODY SET




**x 12**



**x 12**



**x 28**



**x 3**




**x 3**




M4x16mm.

**x 12**




**x 4**

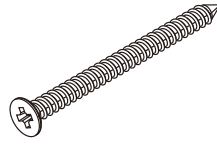

M4x50mm.

**x 21**




**x 6**




M3.5x13mm.


**x 6**



**x 1**

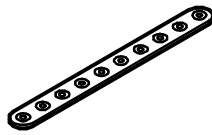

**x 1**

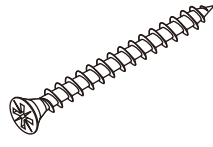

M5x50mm.


**x 1**



M4x16mm.

**x 1**

## -DRAWER SET

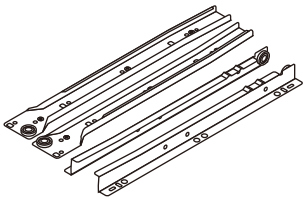


**x 1**



M3.5x13mm.

**x 14**



M4x40mm.

**x 8**



TFL4 M6x23

**x 2**




**x 1**



**x 2**

## -DOOR SET



**x 2**



M4x16mm.

**x 8**




**x 2**


# ASSEMBLY

-BODY SET


1.

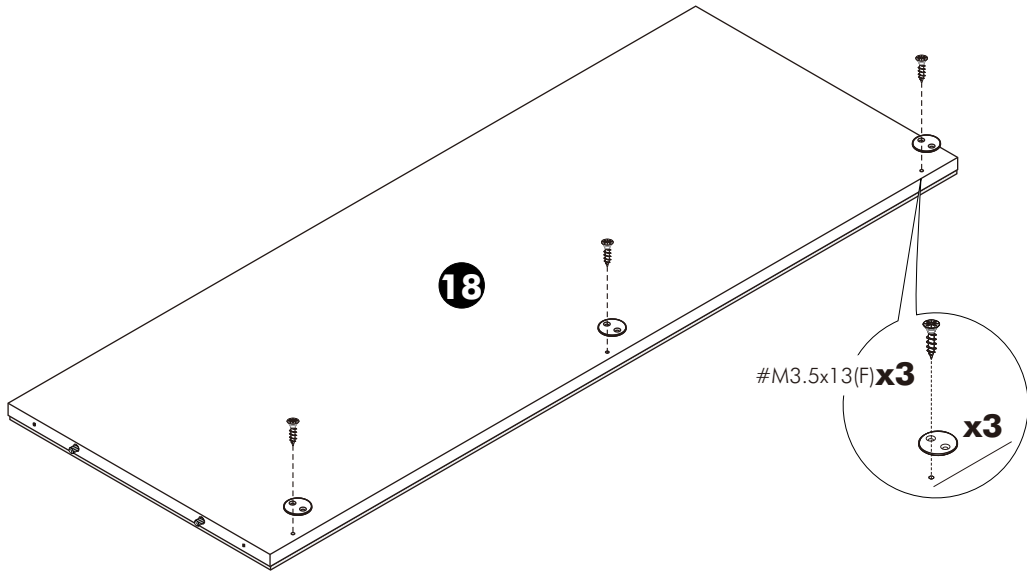


2.

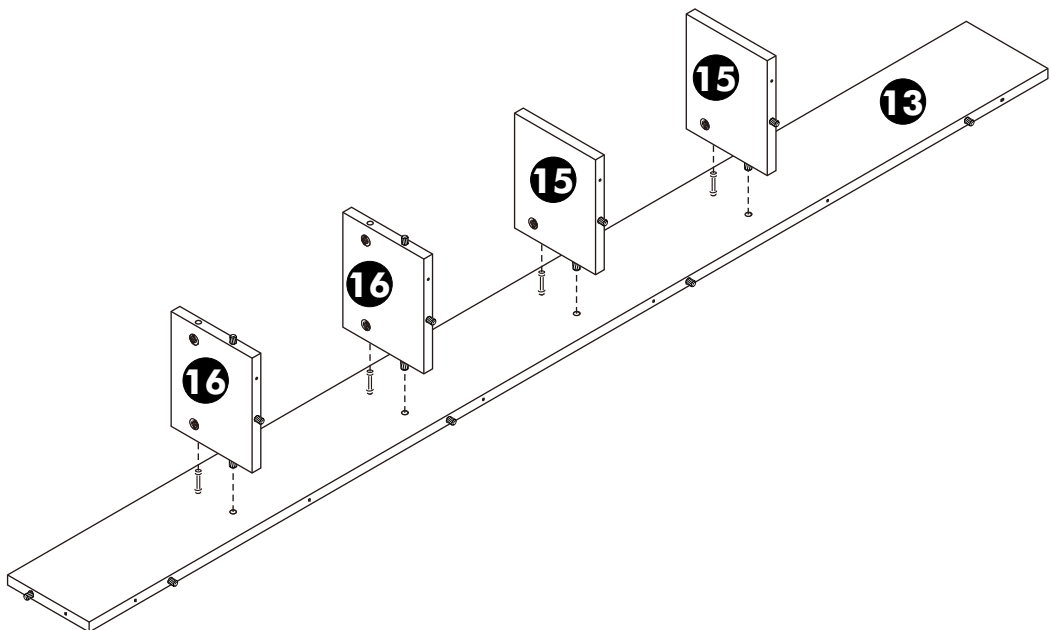


**3.**

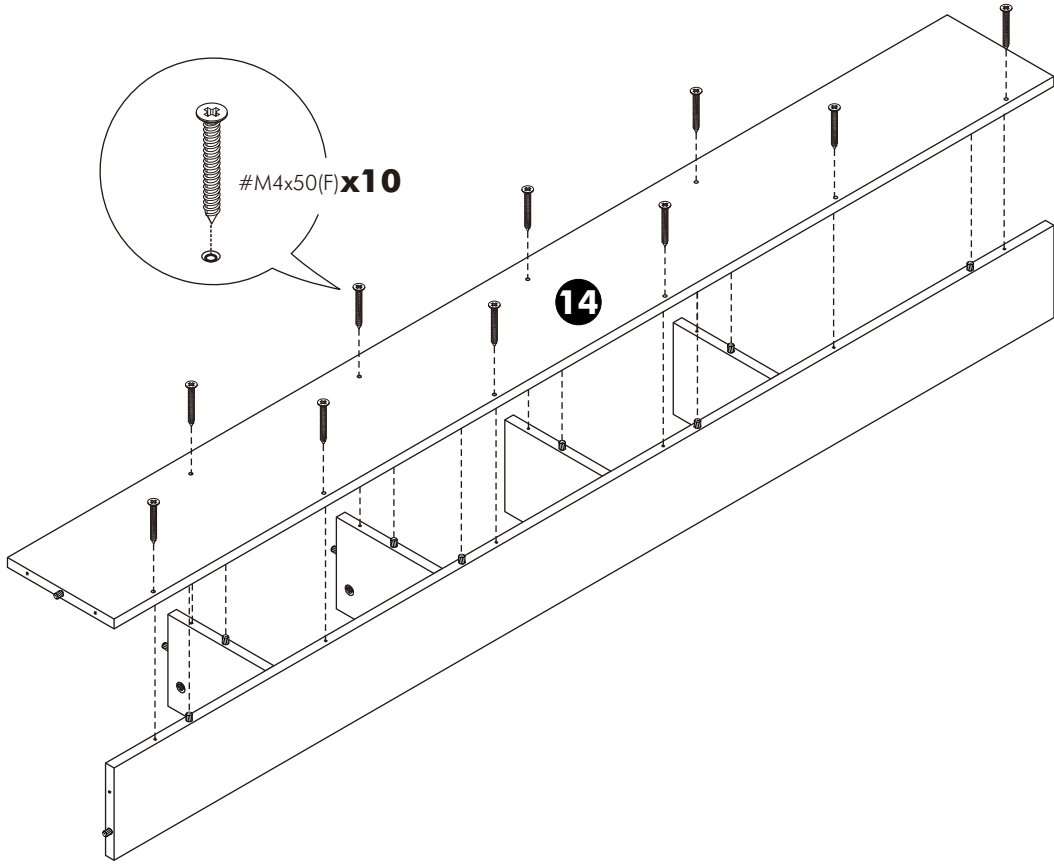


**4.**

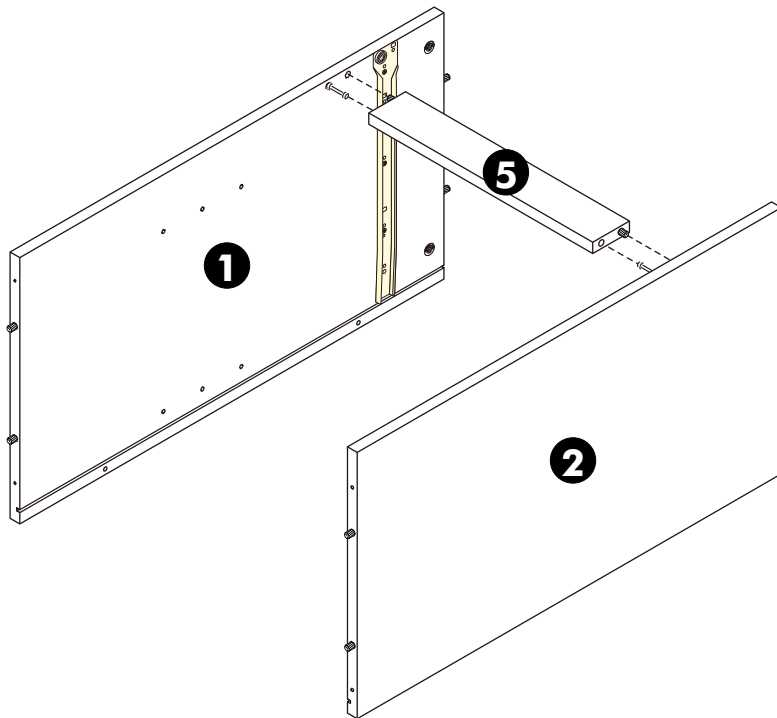


**5.**

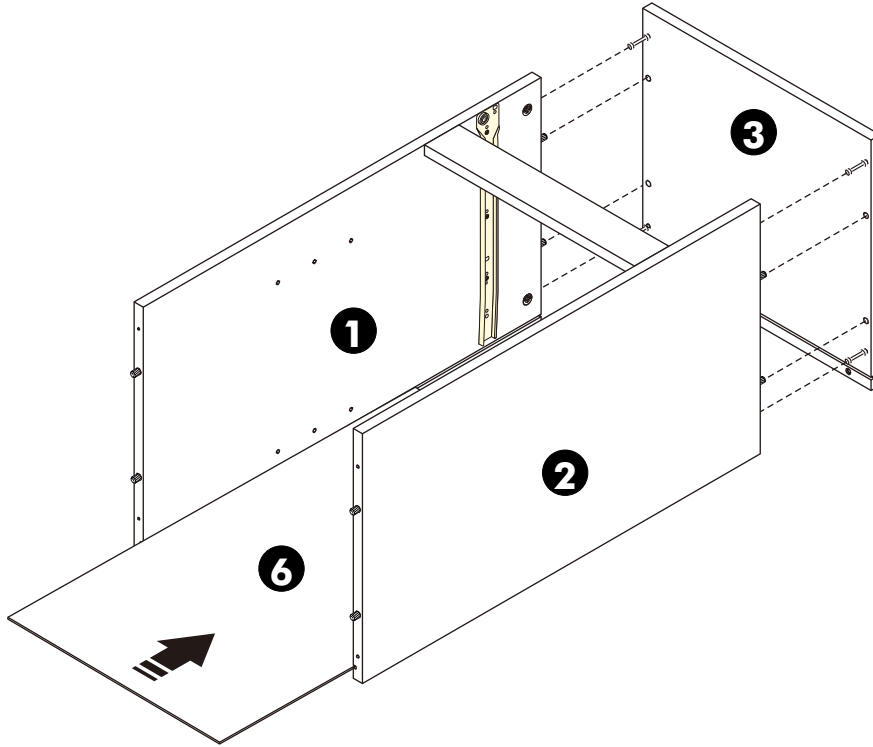


**6.**

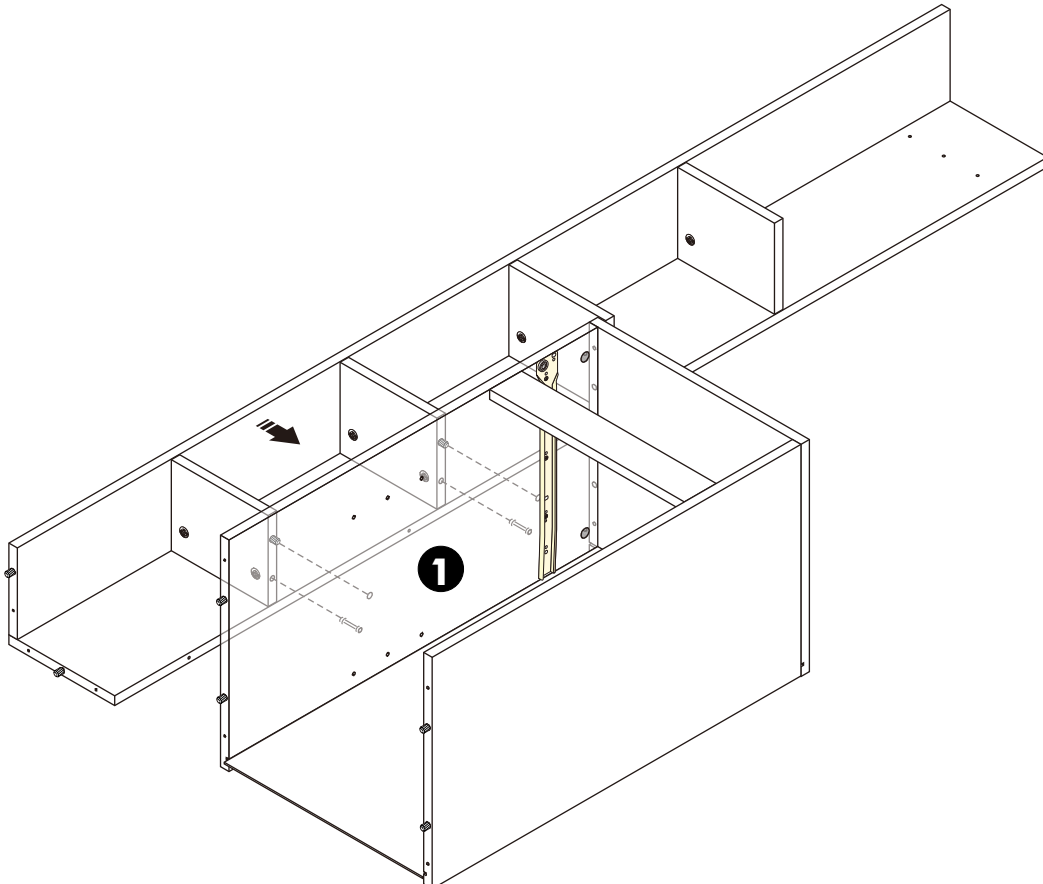


**7.**

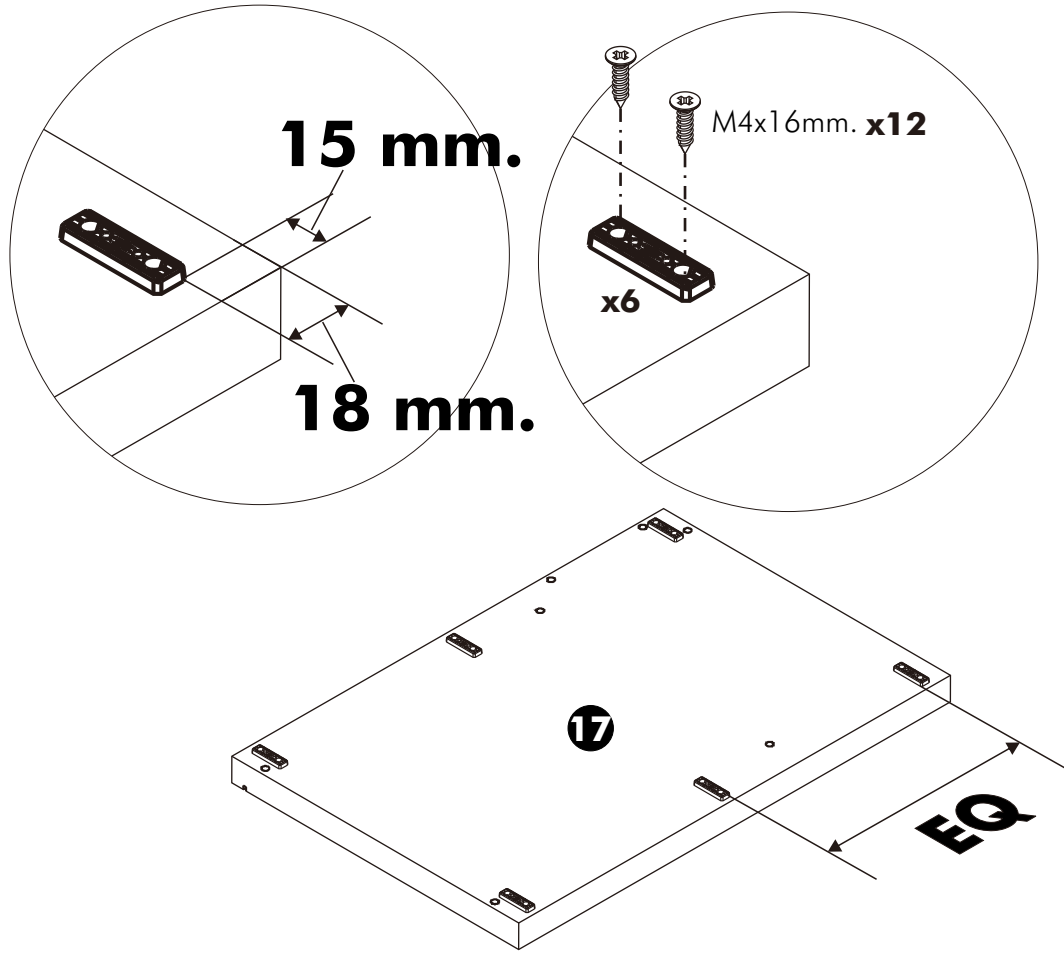


**8.**

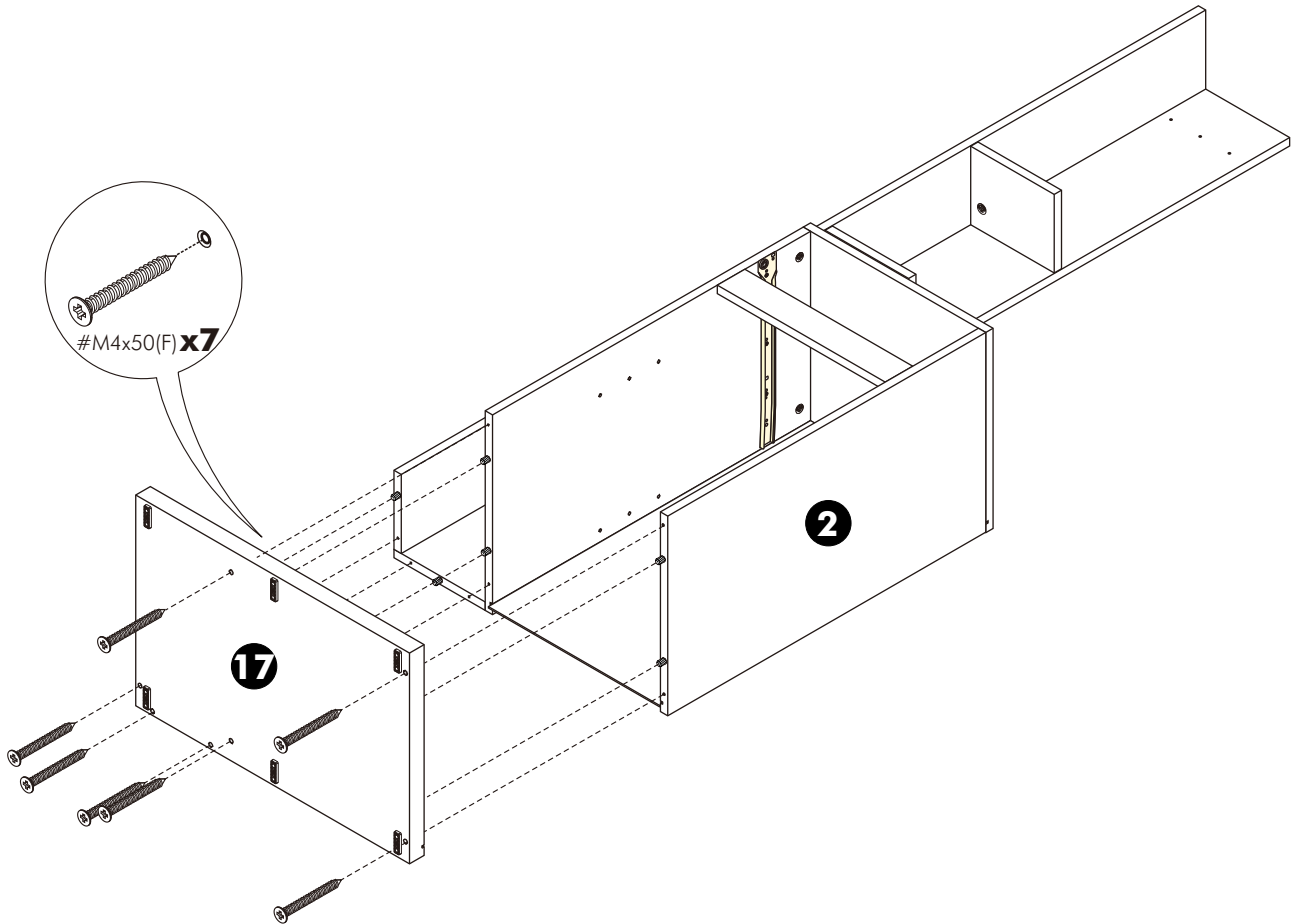


9.

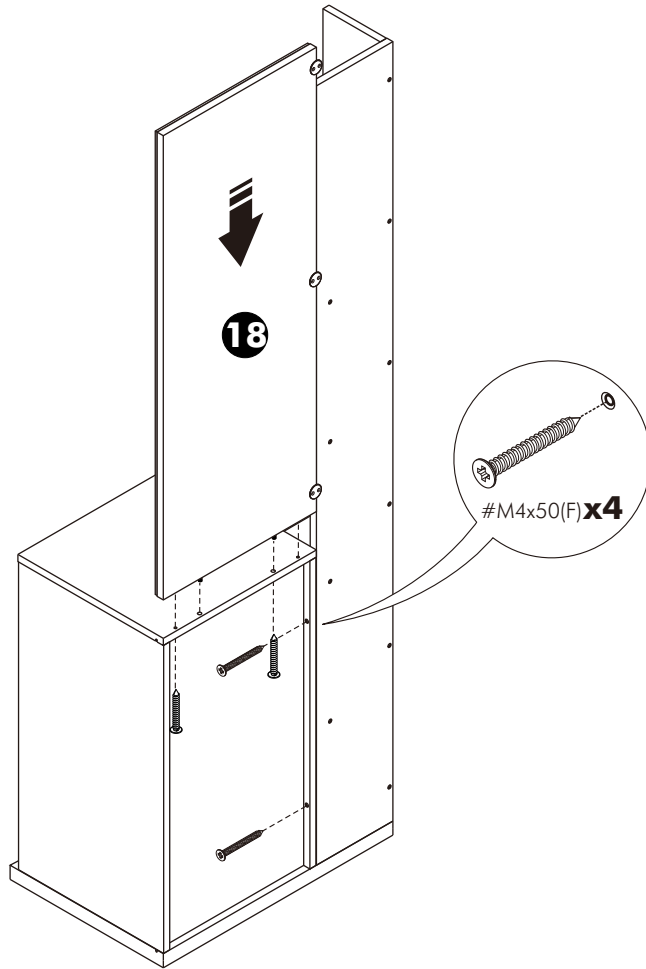

10.


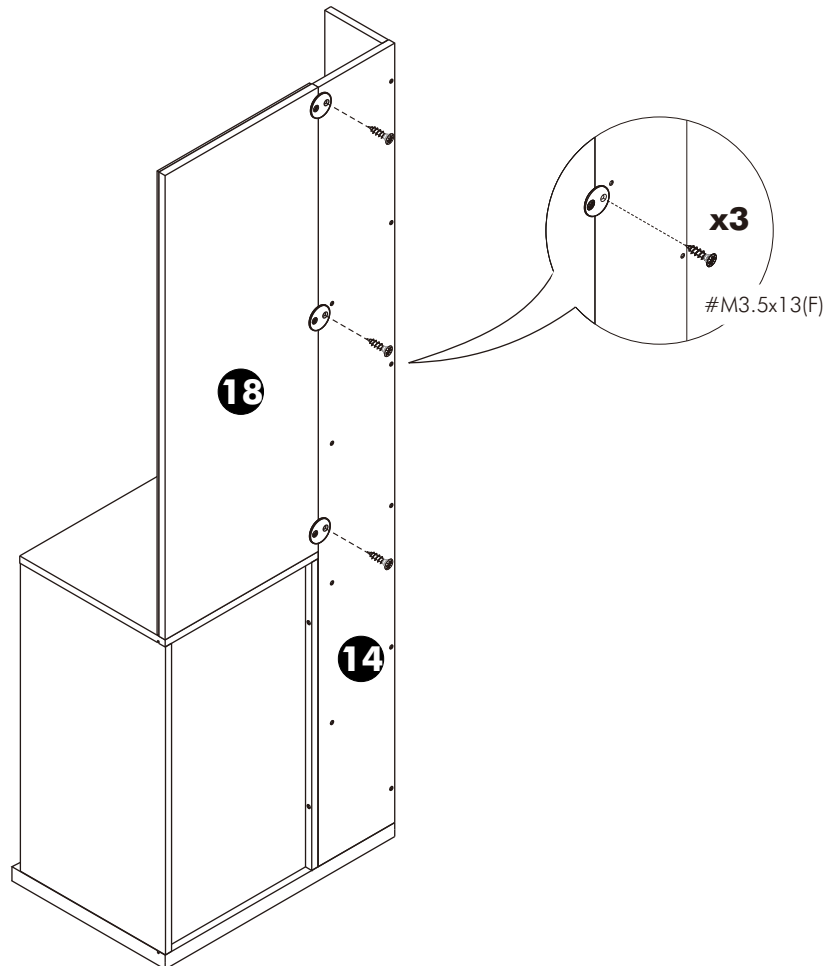



# 11.

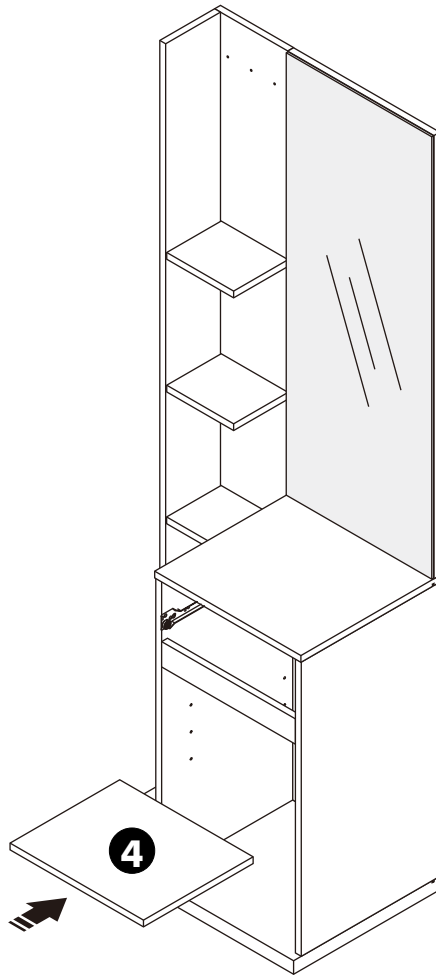

## ASSEMBLY

-DRAWER SET

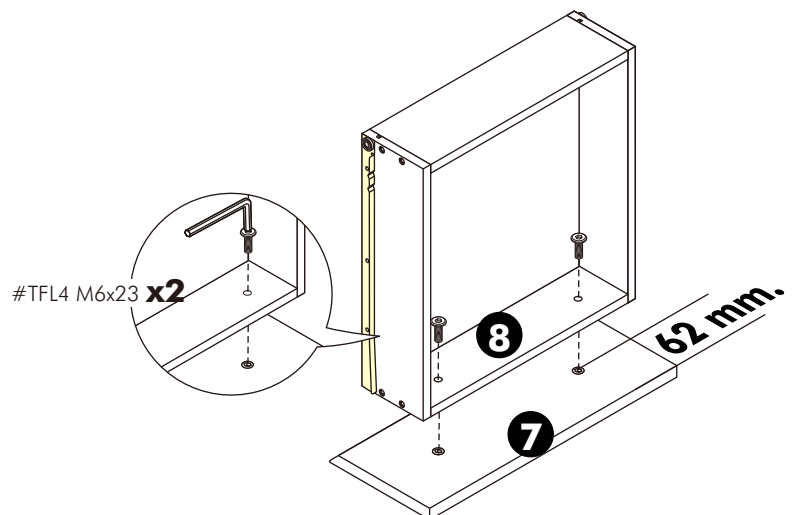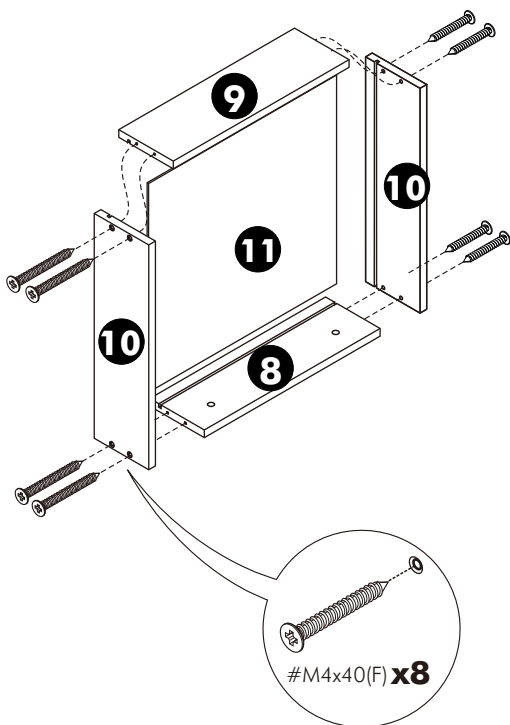

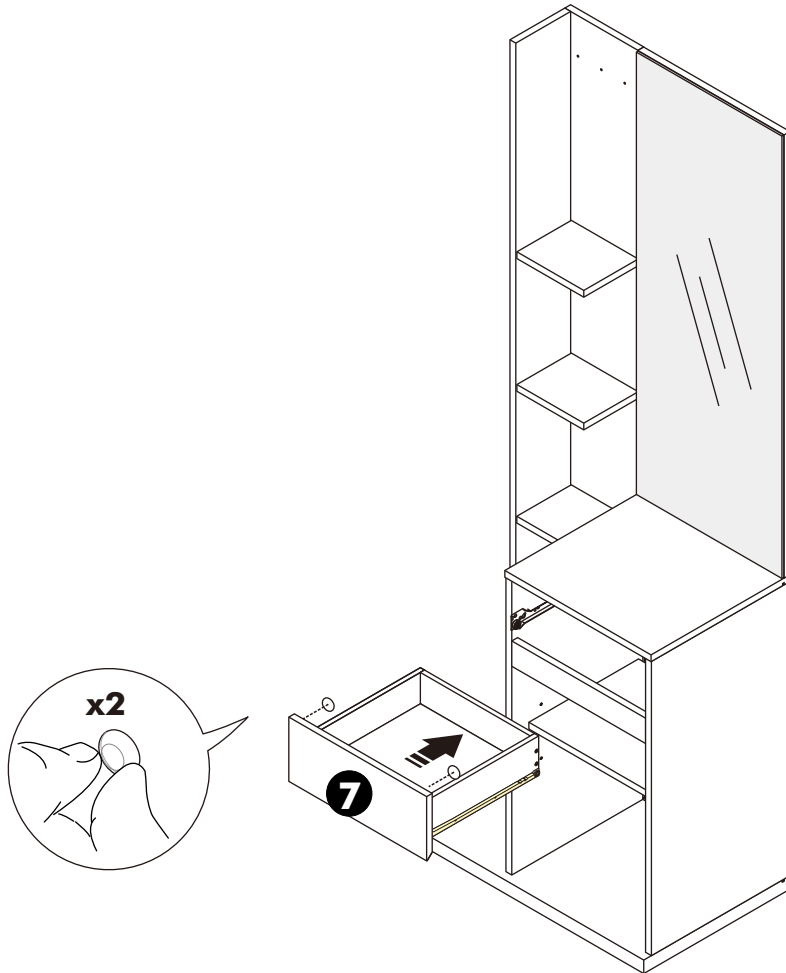

**ASSEMBLY**

-DOOR SET

