



KOBE-P

Buffet cabinet 90 cm

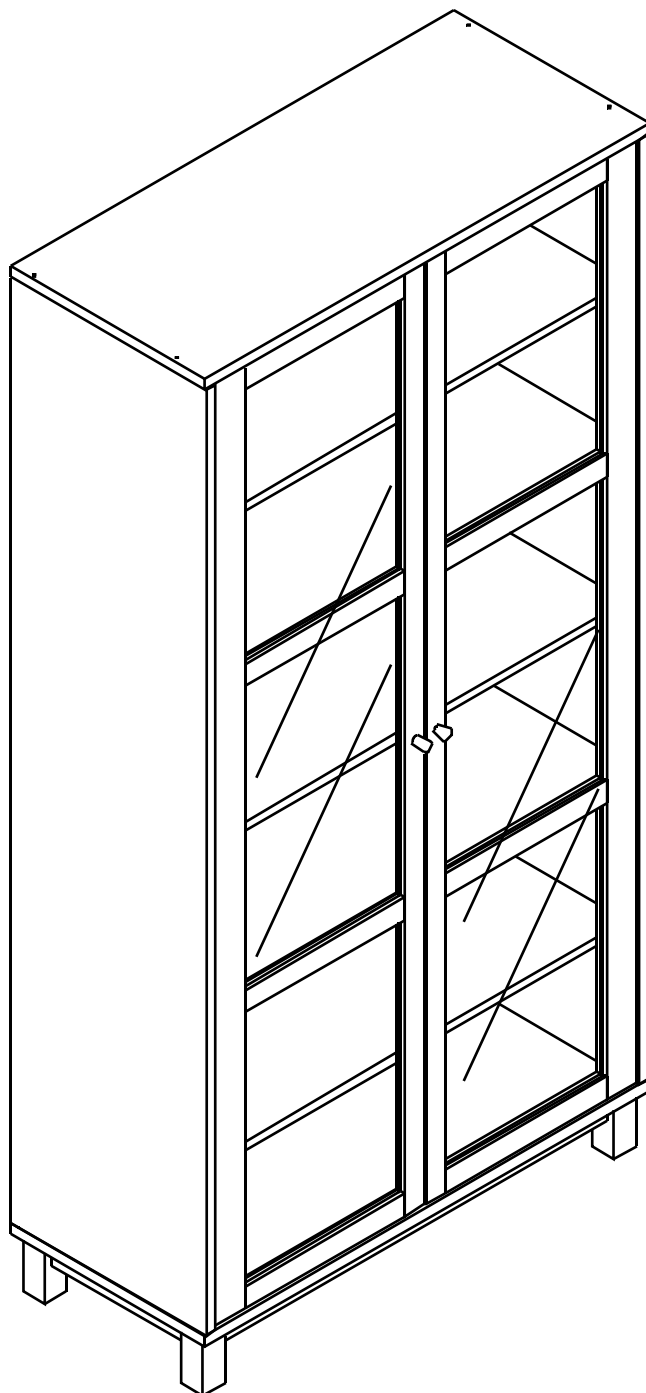


CONNECT SYSTEM

1

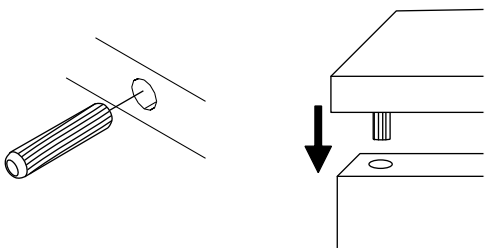


2

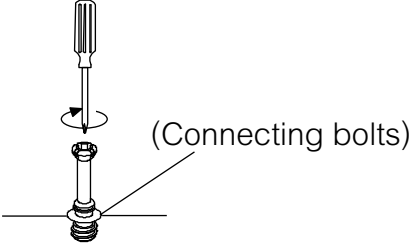

(Connecting bolts)

3

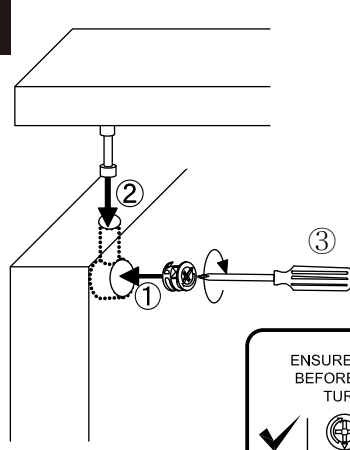

WHEN FITTING CAMS

ENSURE STARTING POSITION IS CORRECT

BEFORE YOU INSERT CONNECTING BOLT

TURN CLOCKWISE UNTIL SECURE

✓



↑

CORRECT






✗


WRONG







M4x16mm.

DOOR PANEL

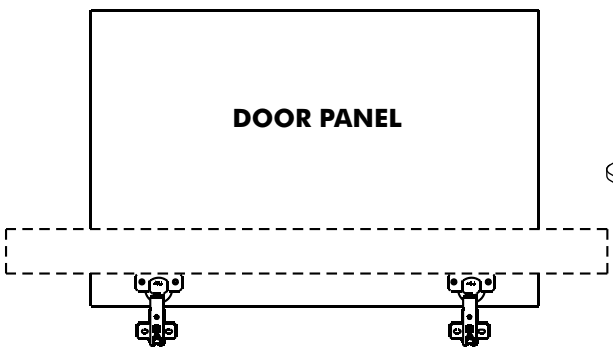

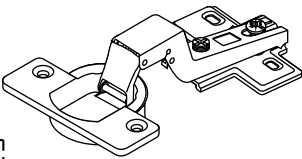


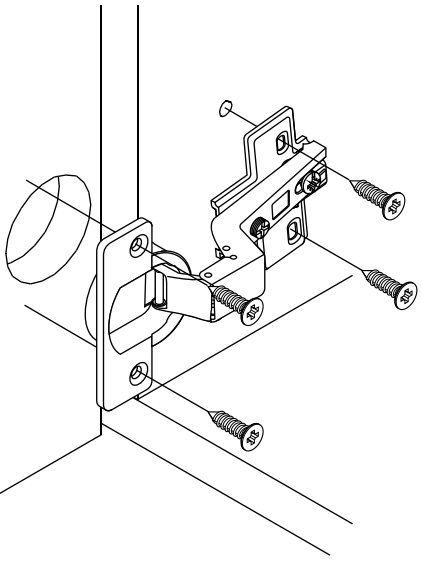

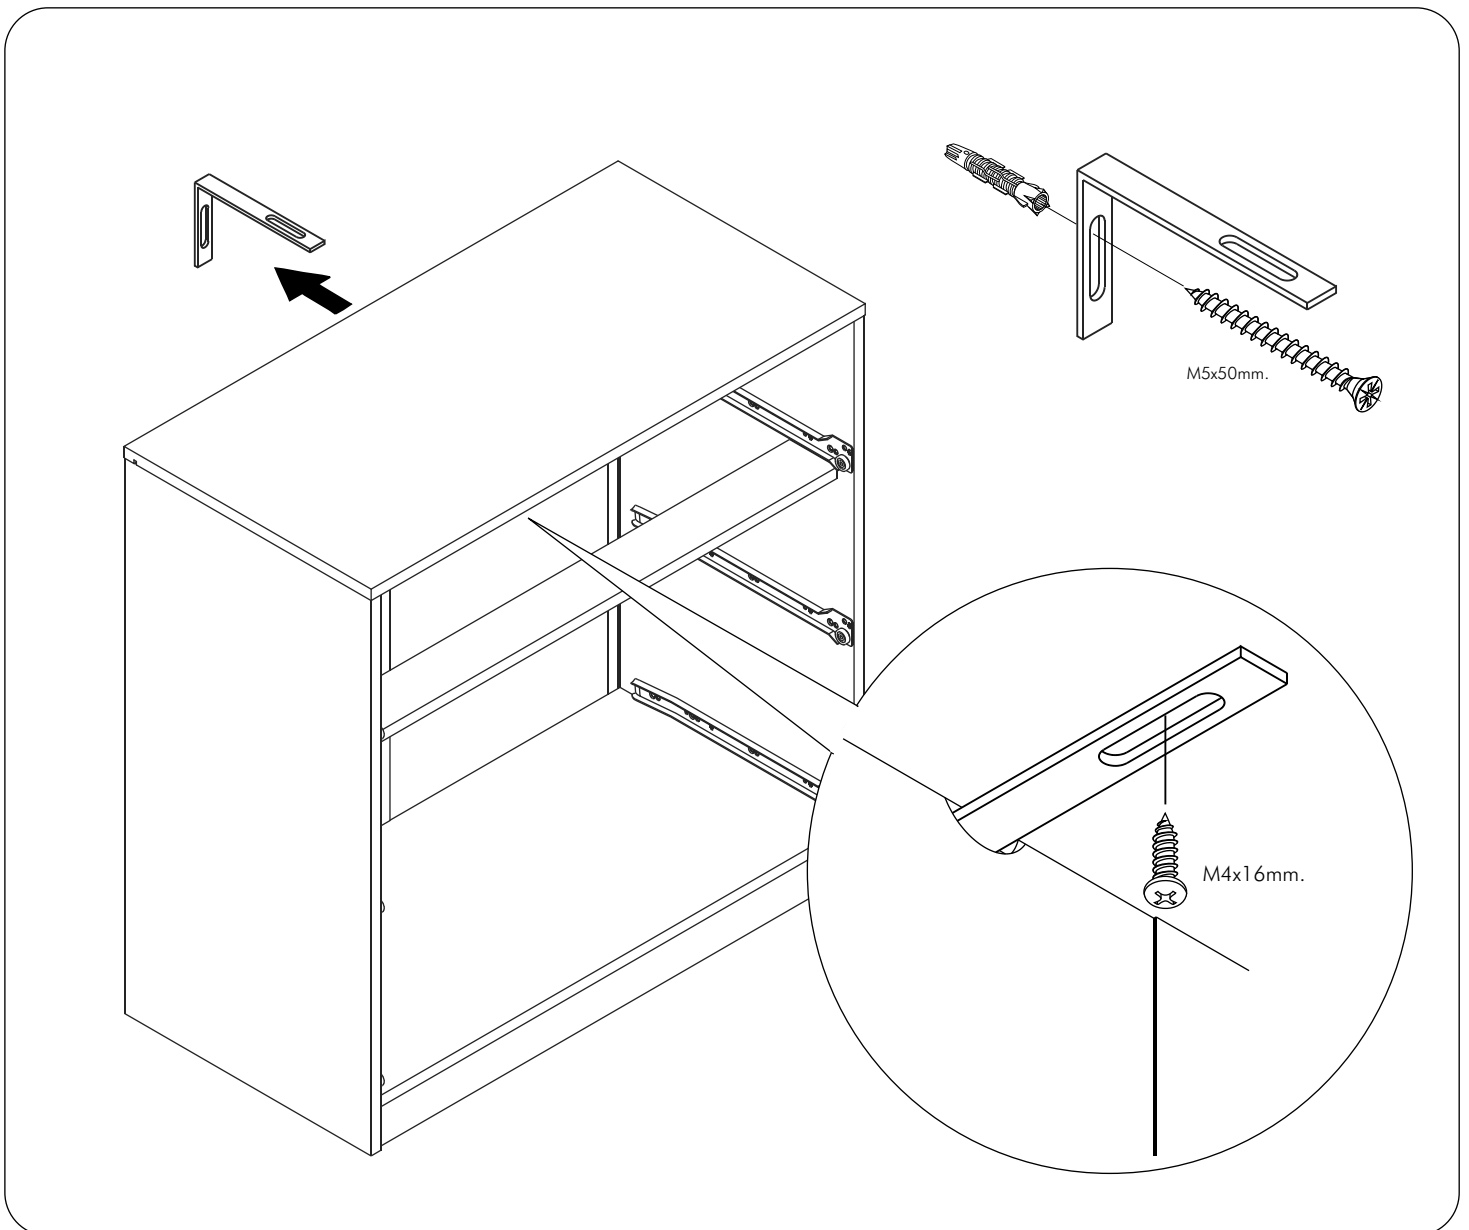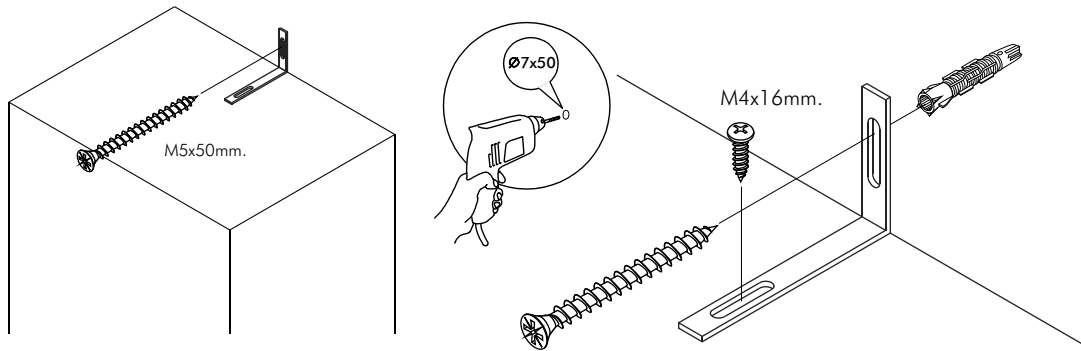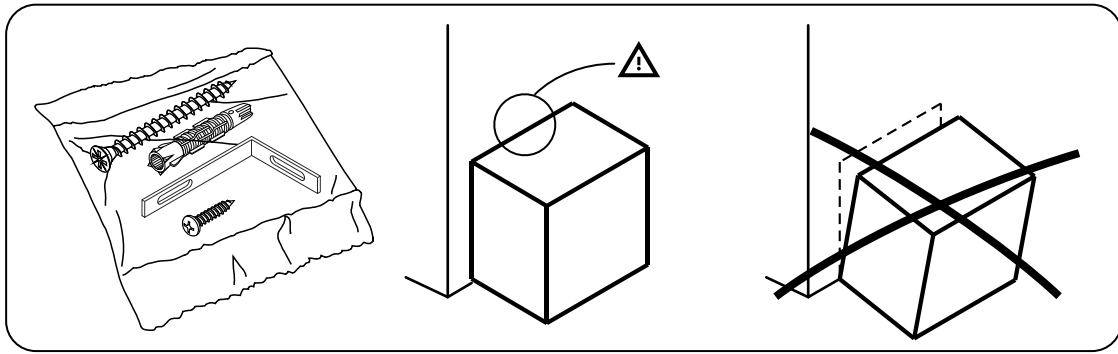

HARDWARE


-BODY SET



x 8




x 8




x 16

(8x35)



M4x40mm.

x 6




x 4



x 1



x 6

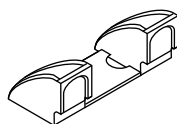

x 2



x 4



x 4



x 4



M3.5x20mm.

x 12




M4x25mm.

x 18




M4x50mm.

x 12

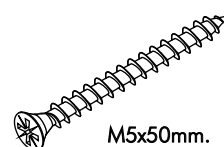

M5x50mm.

x 1



x 12




M4x13mm.

x 4




M4x16mm.

x 5




x 4




M4x35mm.

x 15



x 1

-DRAWER SET



x 6




x 2



M4x16mm.


x 24




M4x35mm.

x 2


1.

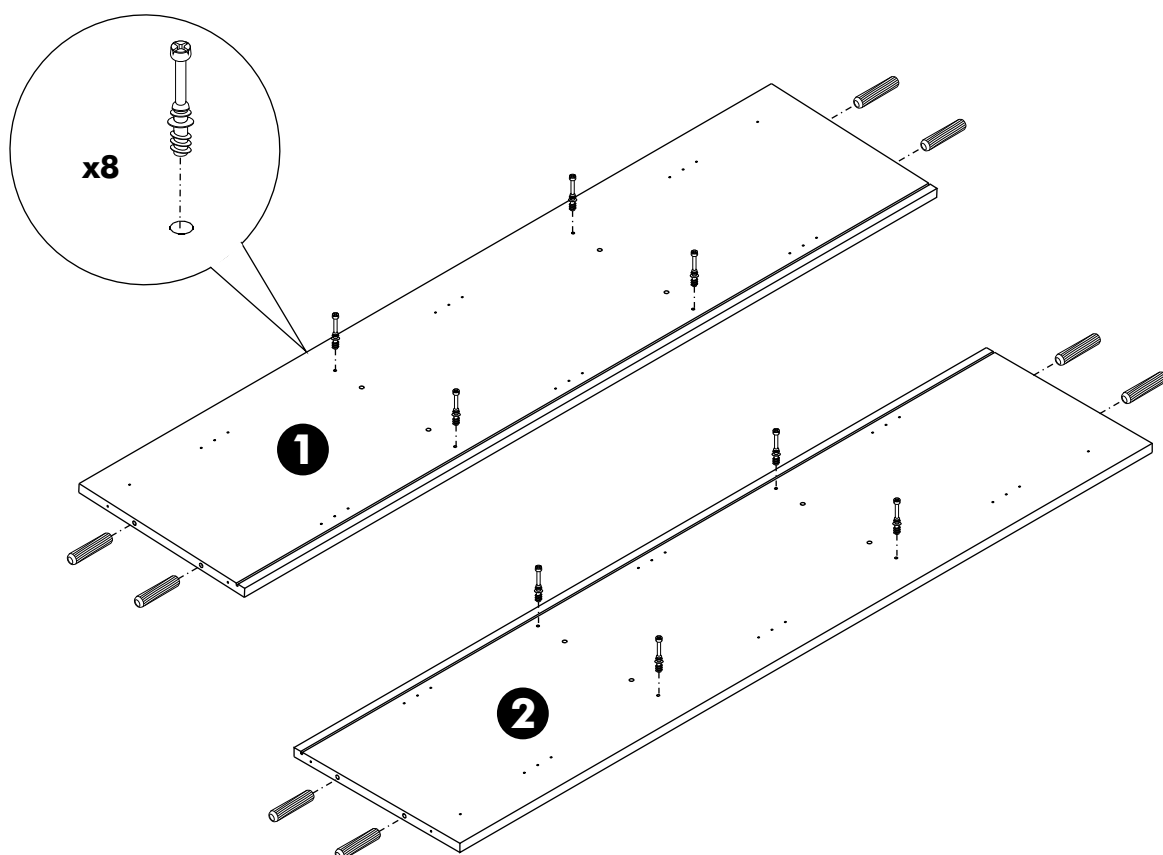


2.

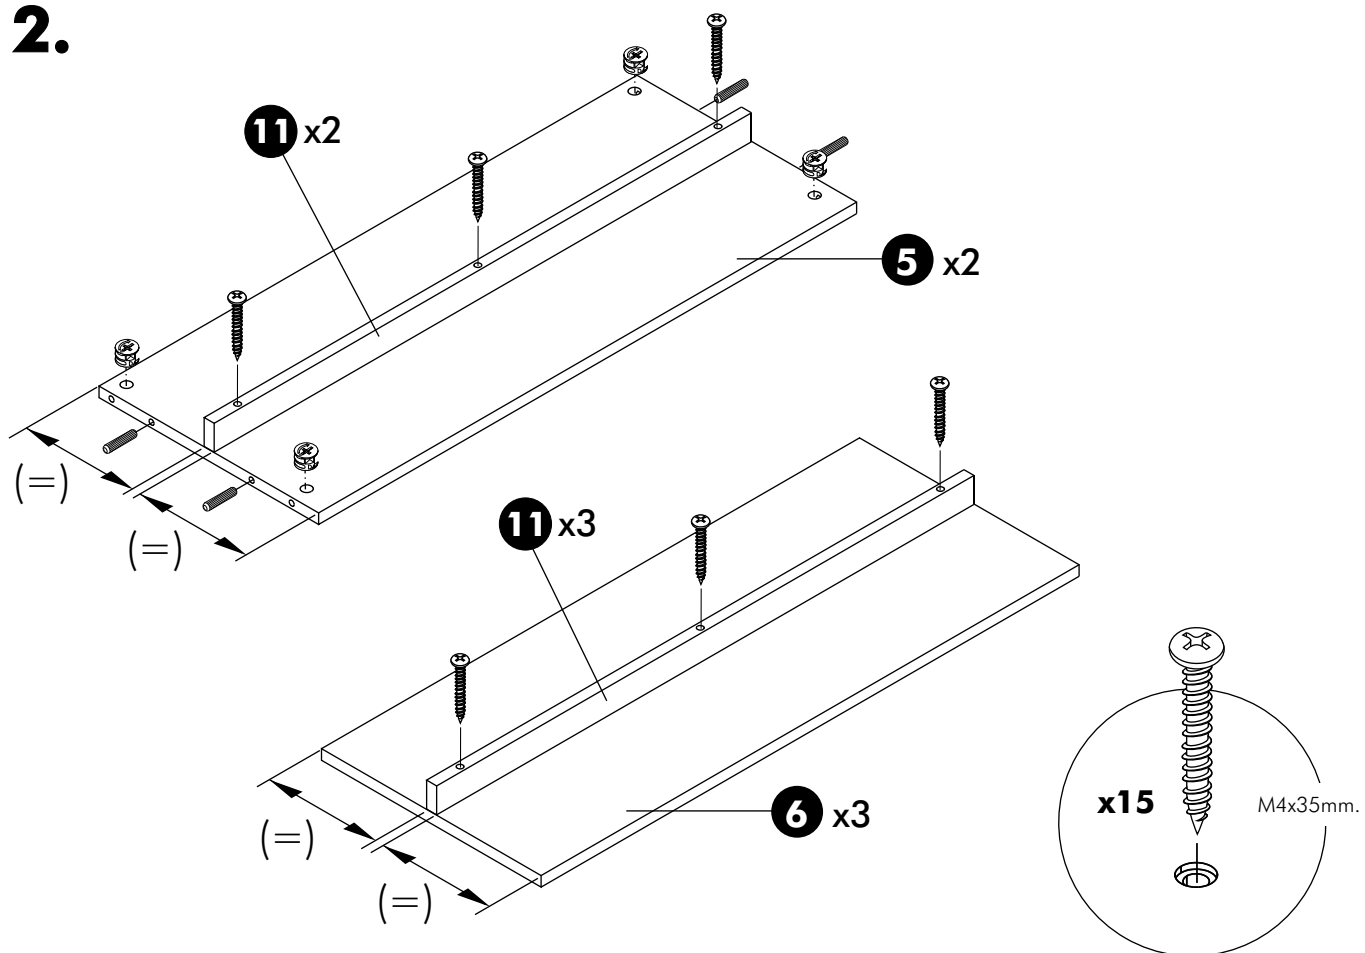


3.

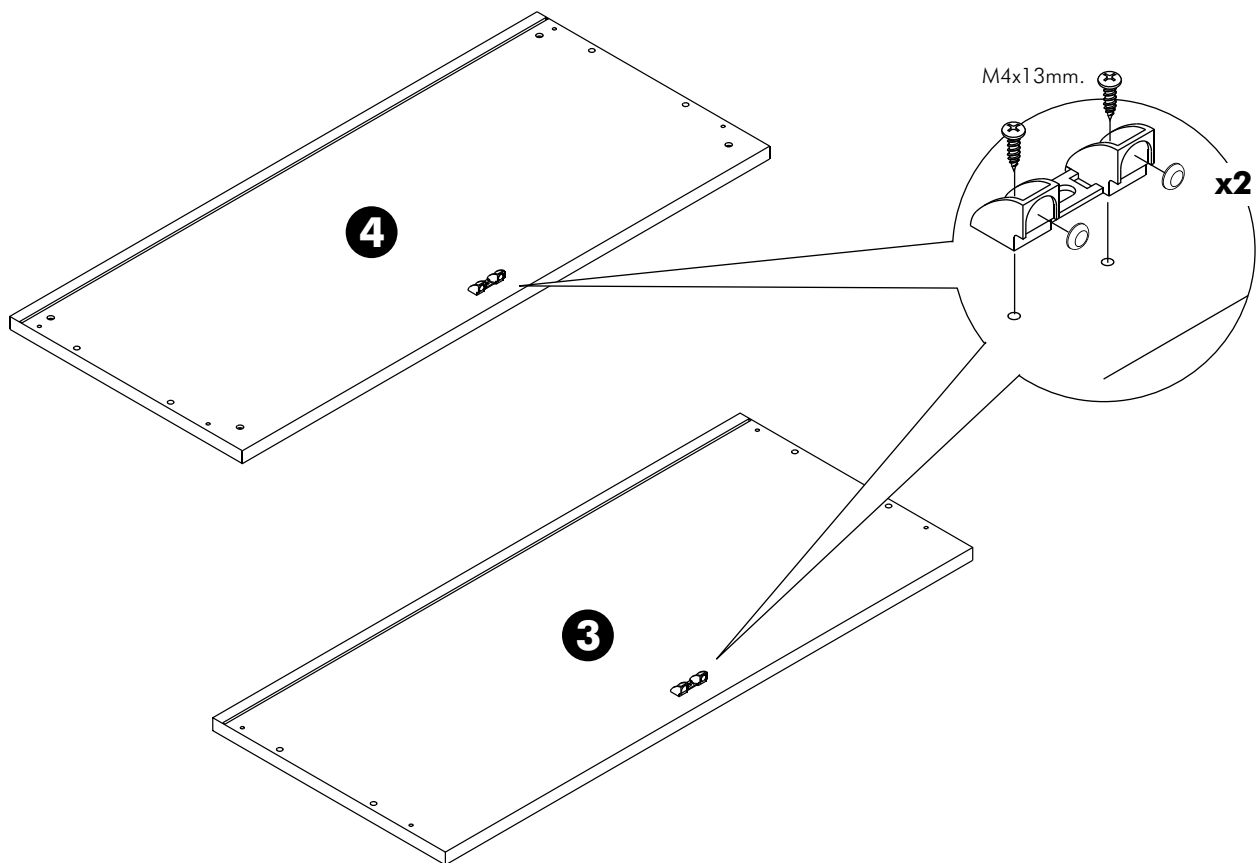


4.

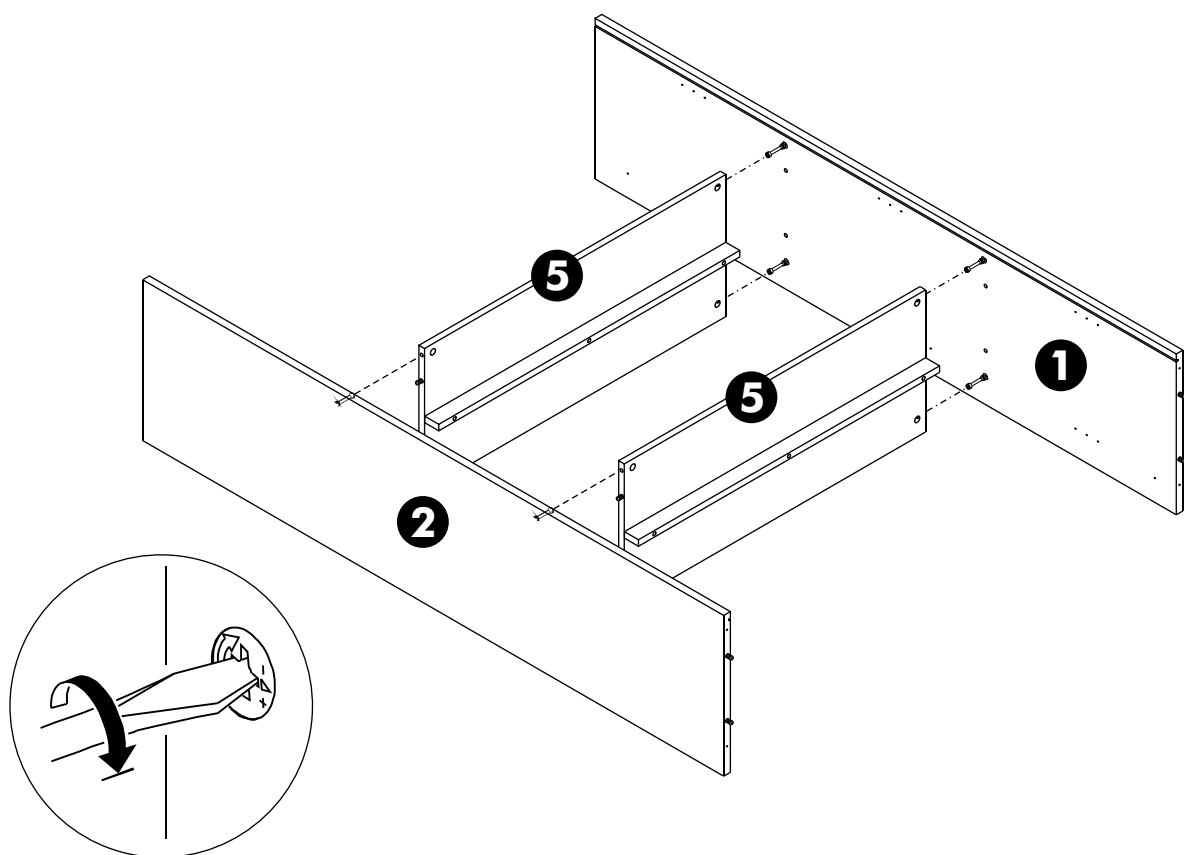


5.

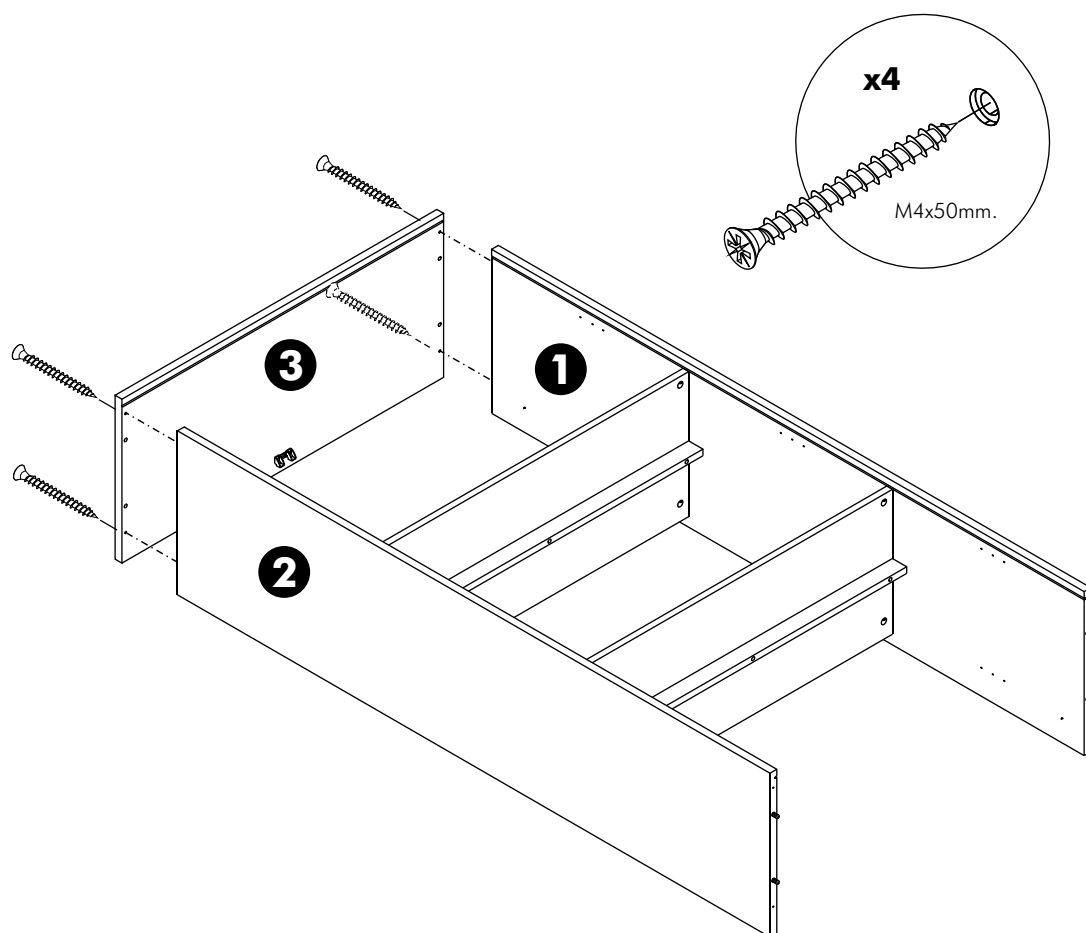


6.

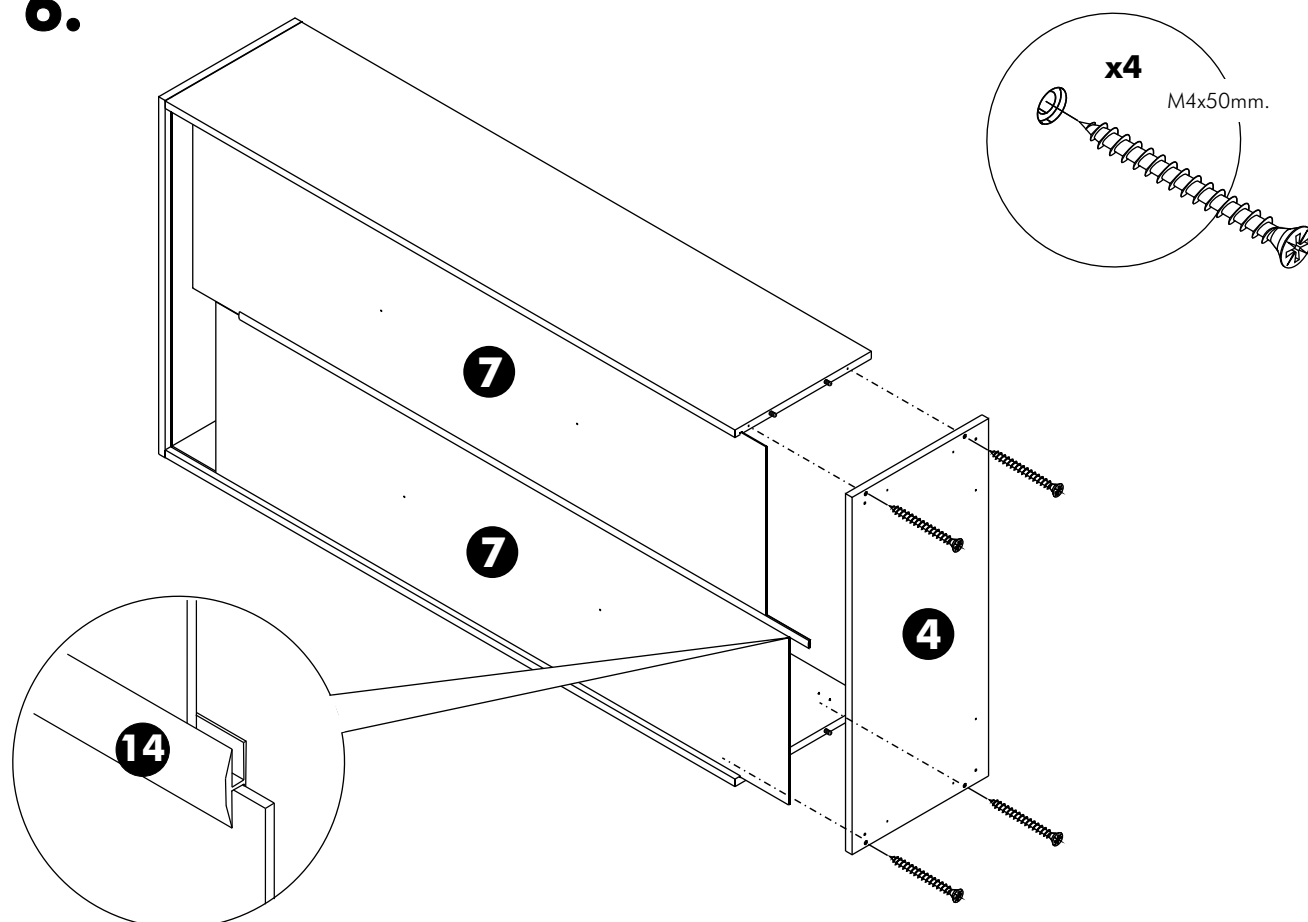


7.

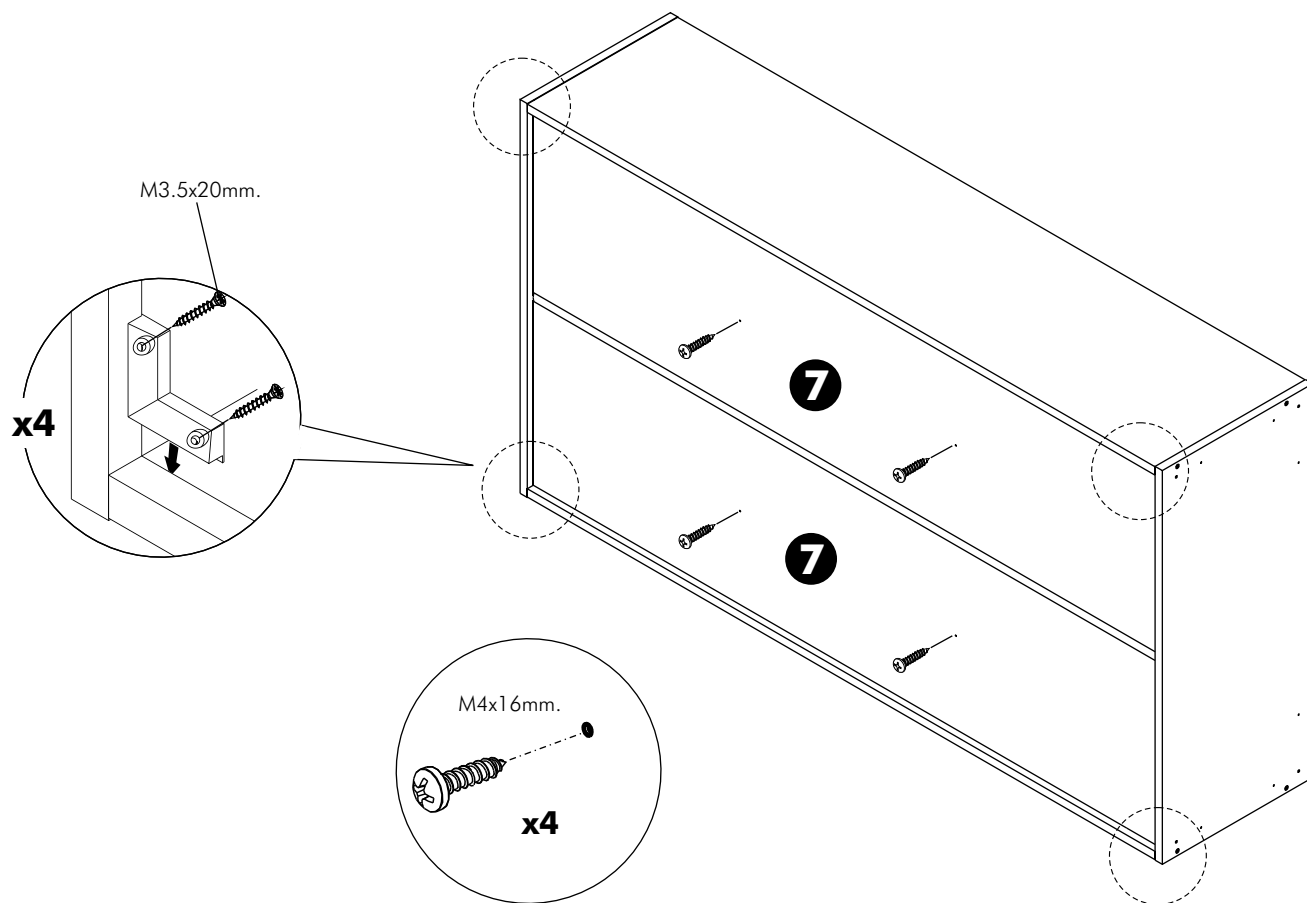


8.

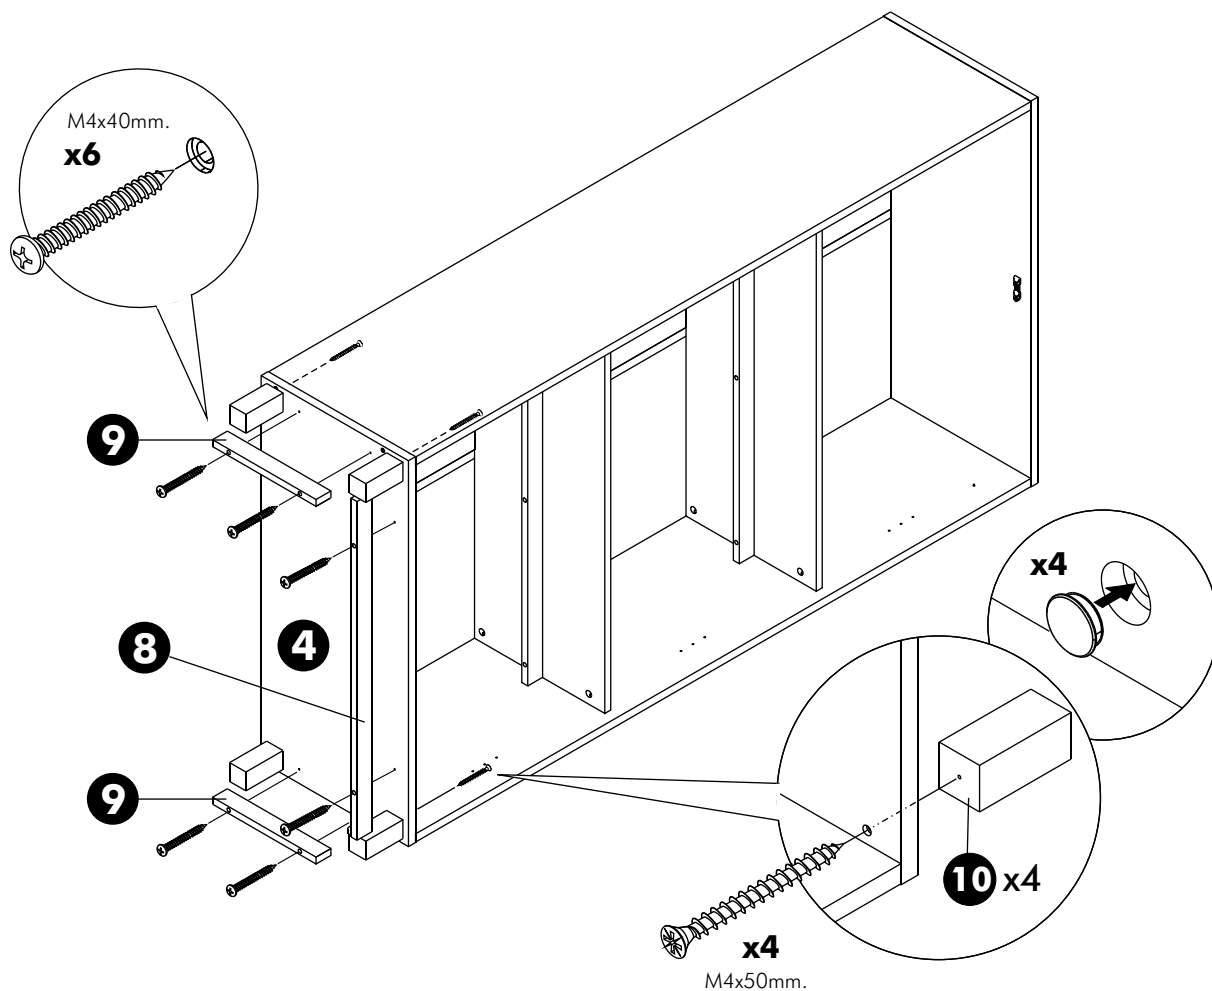


9.

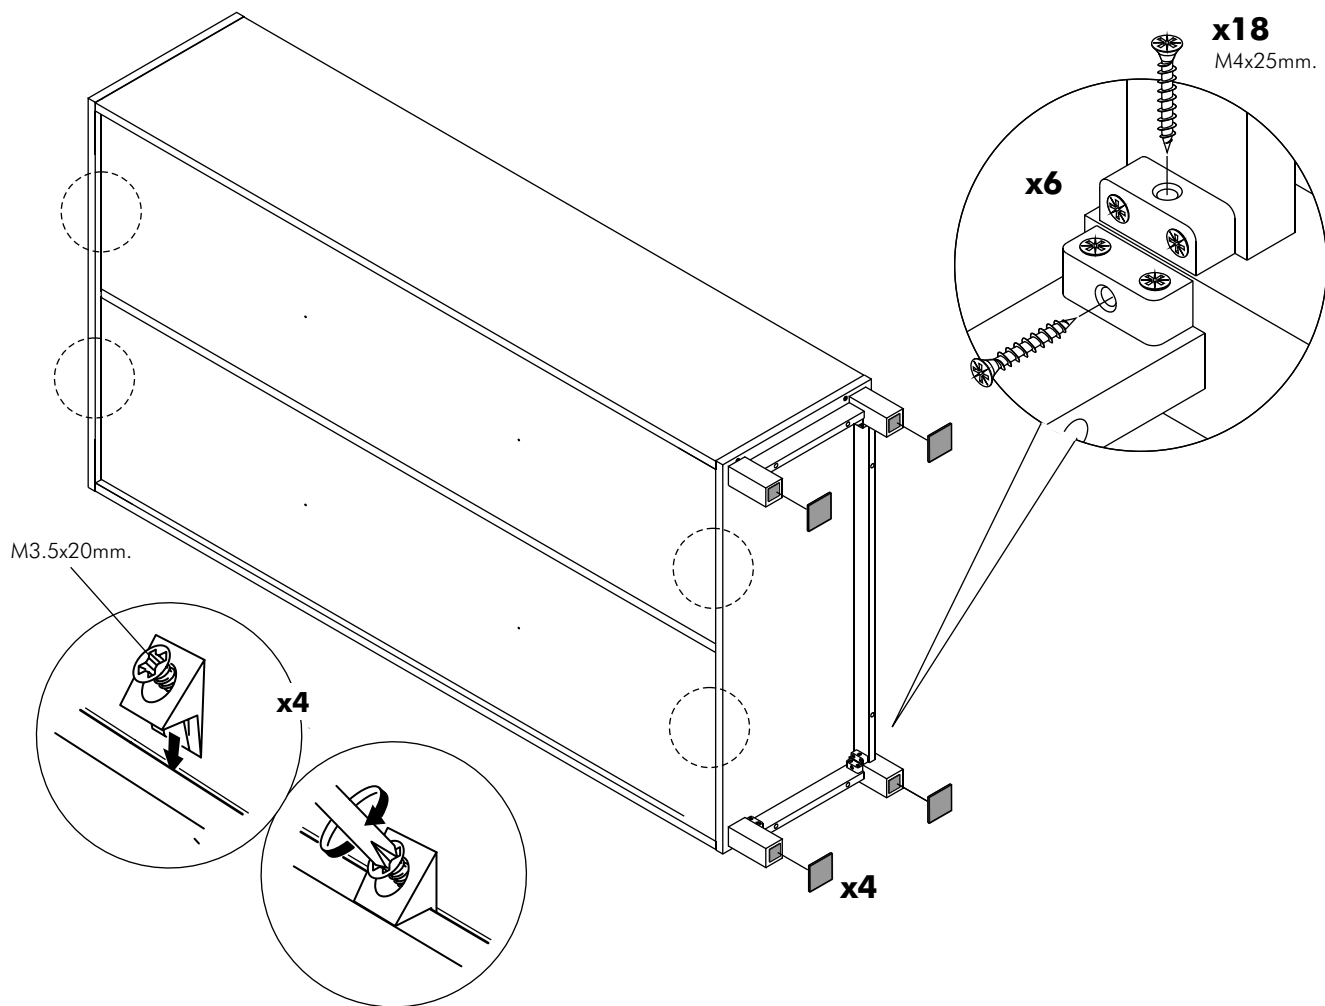

10.

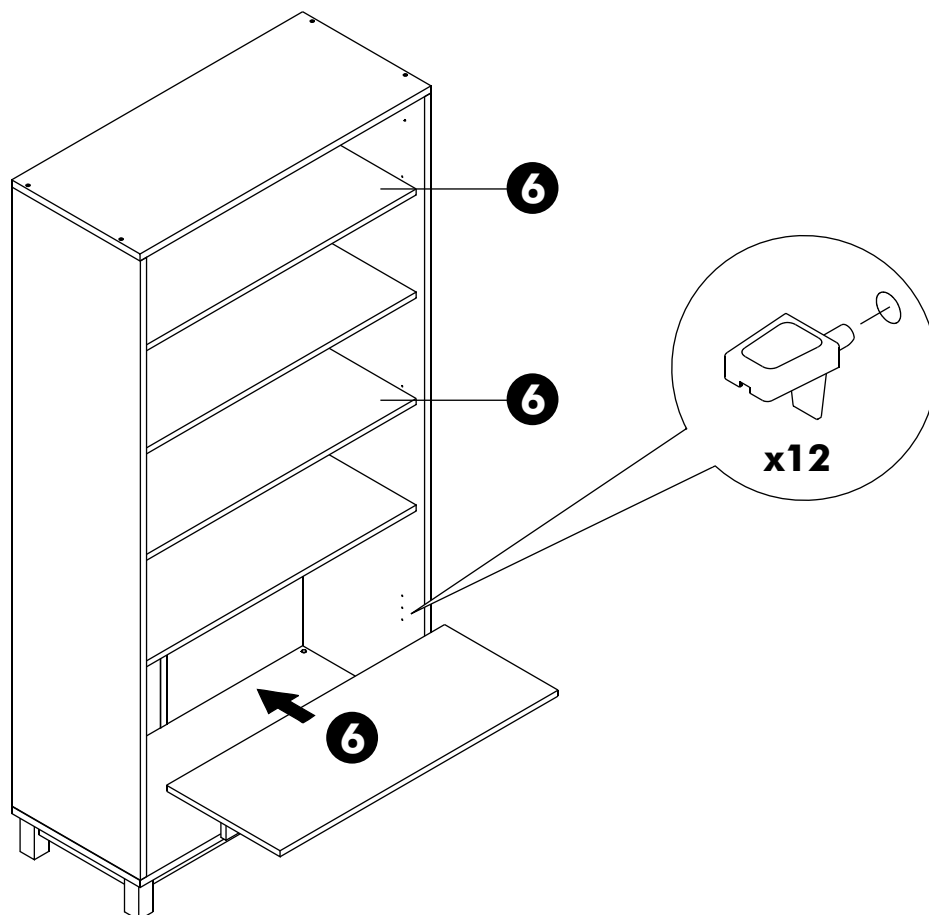

11.

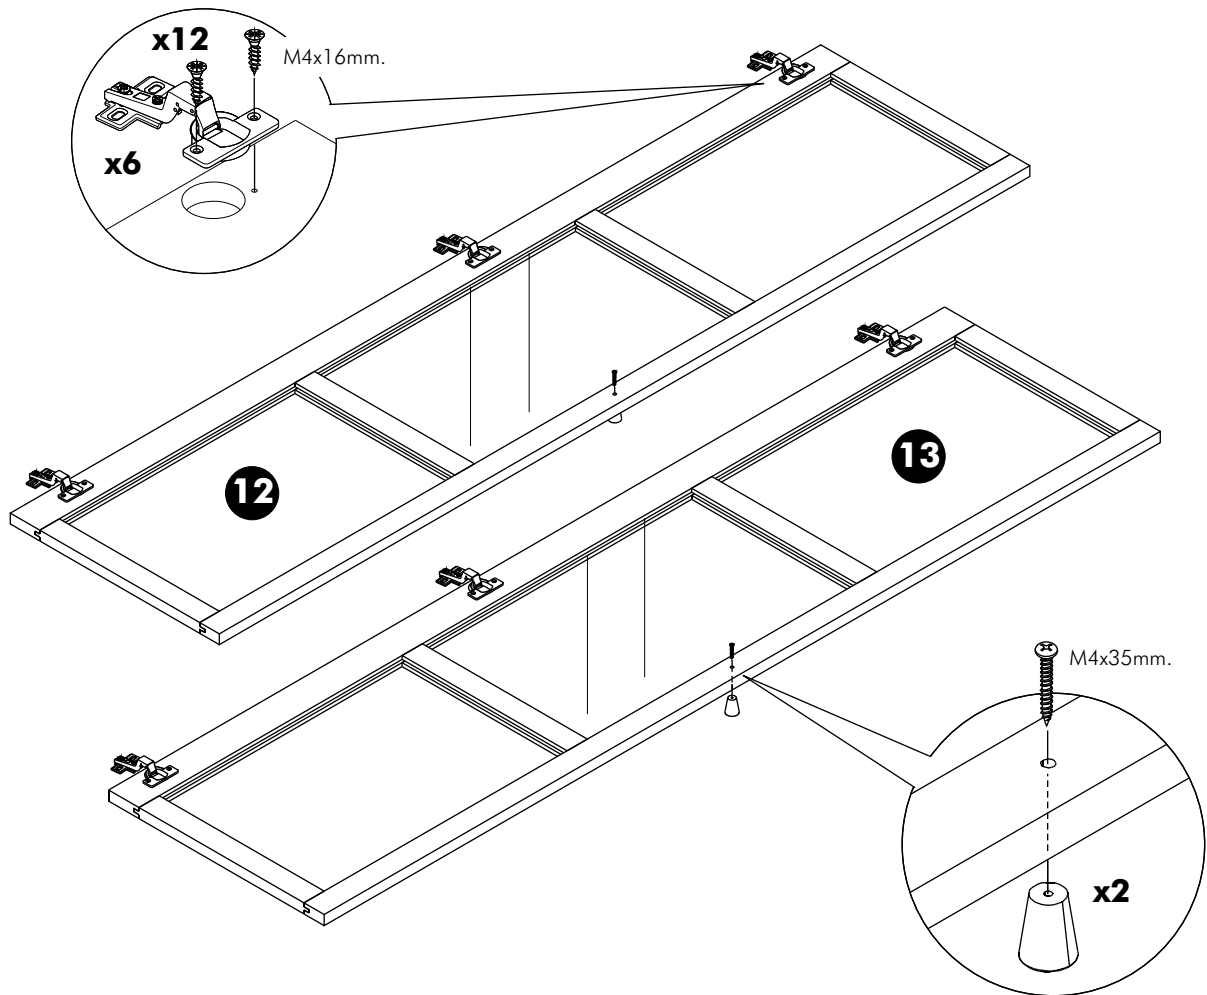

12.

