


BRANO-P

Wardrobe sliding 160 cm

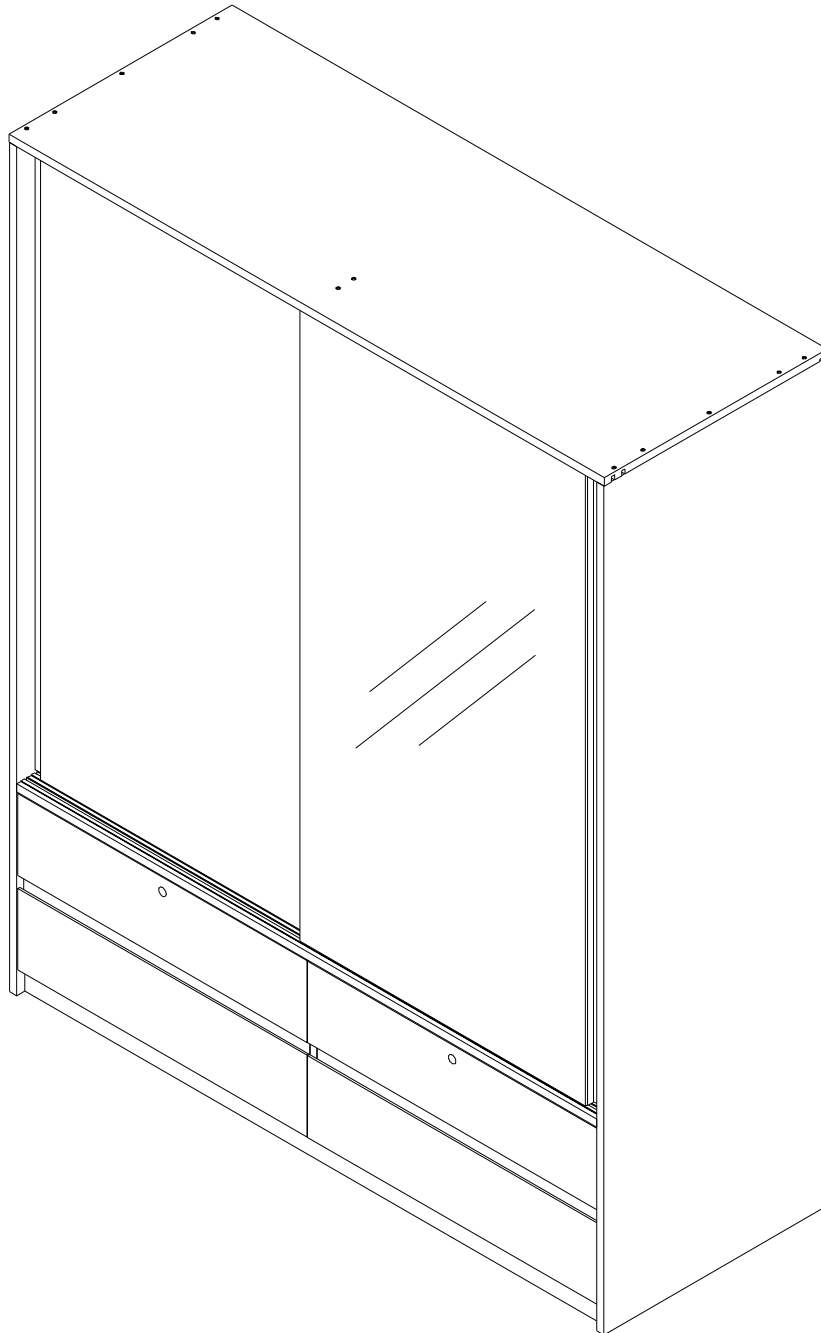

CONNECT SYSTEM

1

2

(Connecting bolts)

3

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓

↑

CORRECT

✗

WRONG

EQ

EQ

1 Pc.

≤ 190mm.

40mm.

40mm.

2 Pcs.

≥ 191-850mm.

100mm.

EQ

EQ

100mm.

3 Pcs.

> 850-2000mm.

100mm.

EQ

EQ

EQ

100mm.

4 Pcs.

> 2001mm.

OUT

IN

M4x16mm.

i

40mm.



✗

EQ

✓


M4x16mm.

M3.5x13mm.

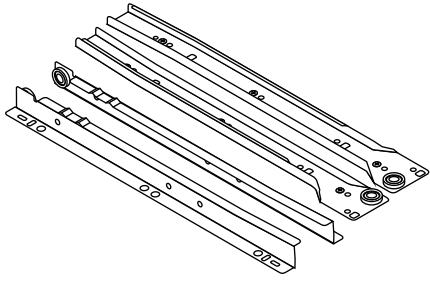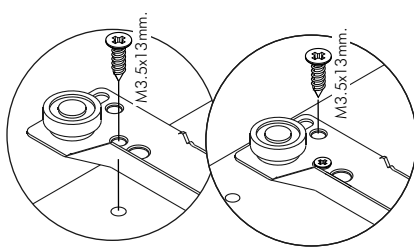


28mm.



1

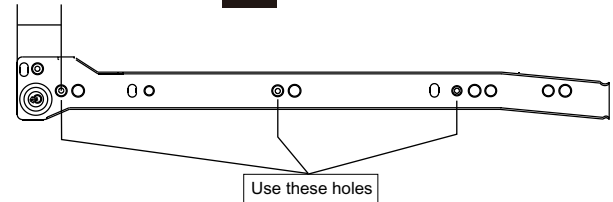

2

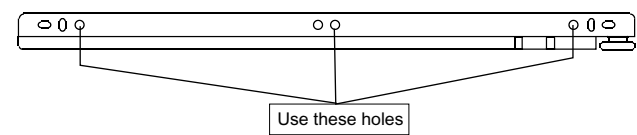


M3.5x20mm.

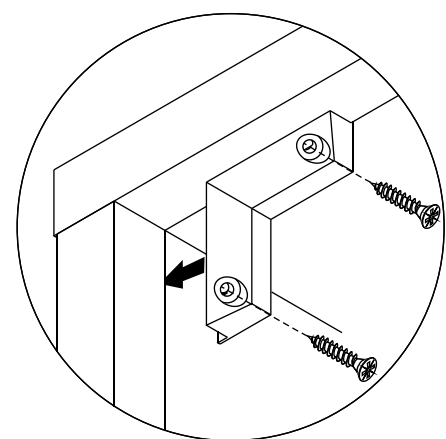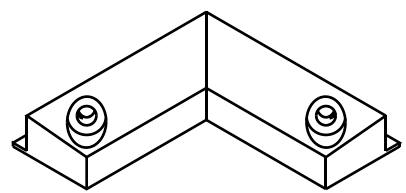

HARDWARE


-BODY SET




x 15




#M4x16
x 144



x 30

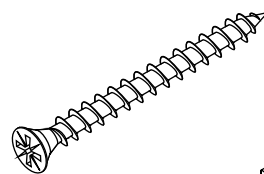


M4x50mm.
x 17



x 2




M3.5x20mm.
x 4

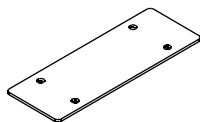

x 2



M4x25mm.
x 6



x 1




x 2



M3.5x13mm.
x 4




M4x16mm.
x 25




x 12



M4x13mm.
x 12

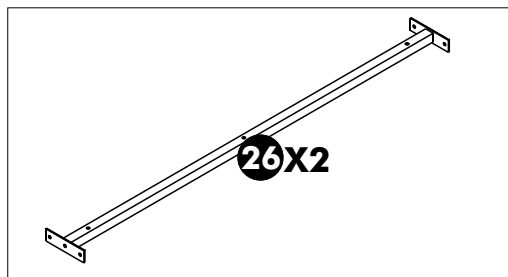


-DRAWER SET

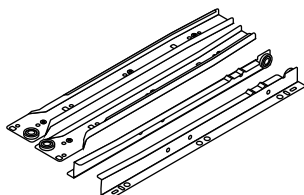


x 4




M3.5x13mm.
x 60

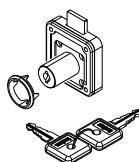

x 2




x 2



M4x40mm.
x 40



M3.5x20mm.
x 8




TFL4 M6x23
x 12



x 1

-DOOR SET

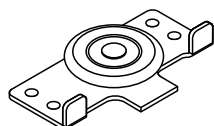


x 4



x 4



M4x16mm.
x 24



M4x30mm.
x 15




x 8


ASSEMBLY

-BODY SET


1.

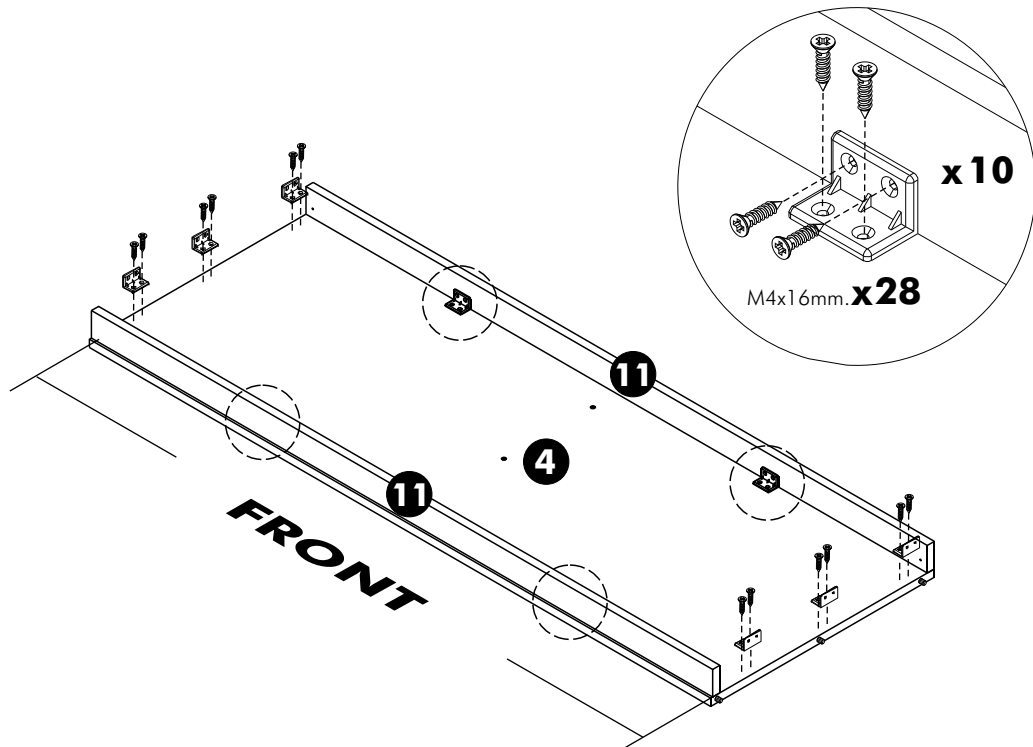


2.

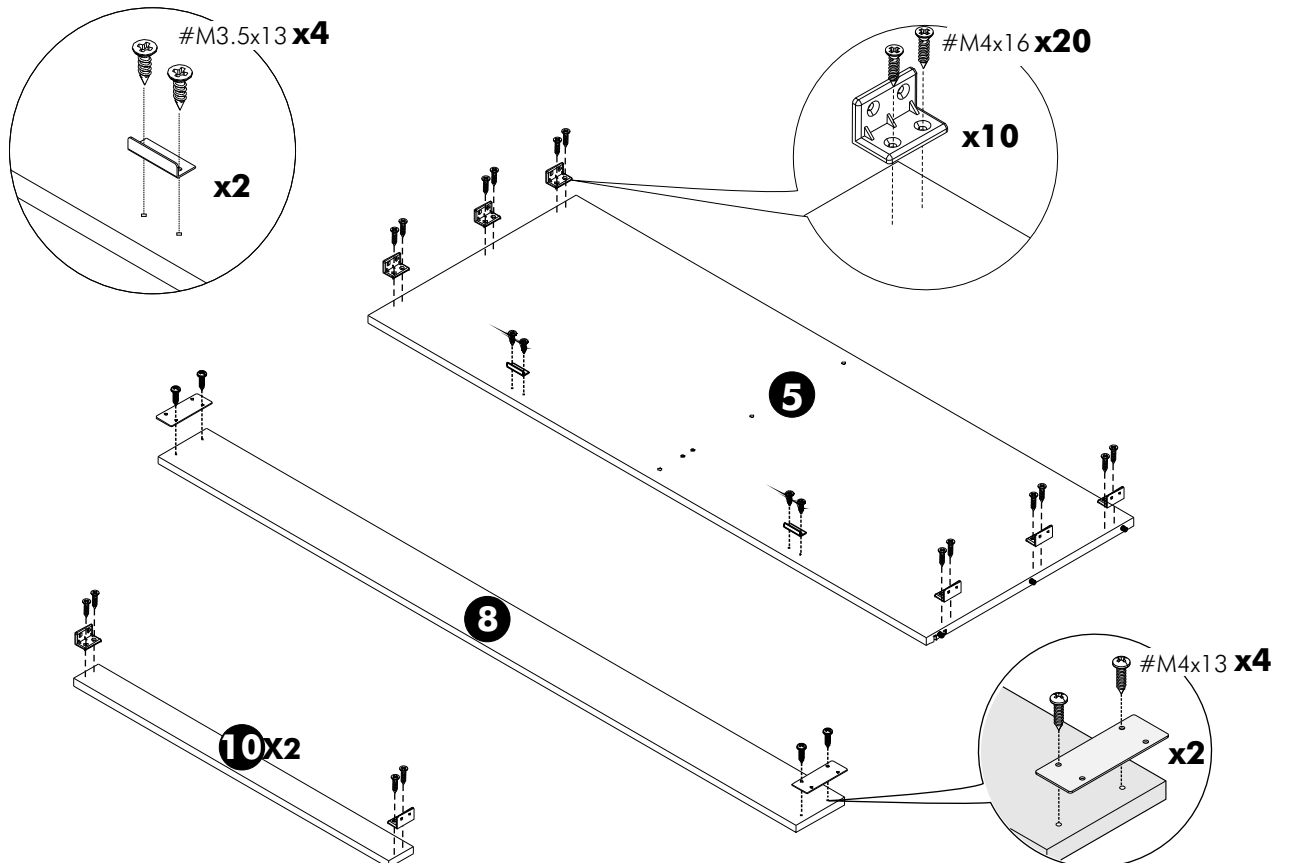


3.

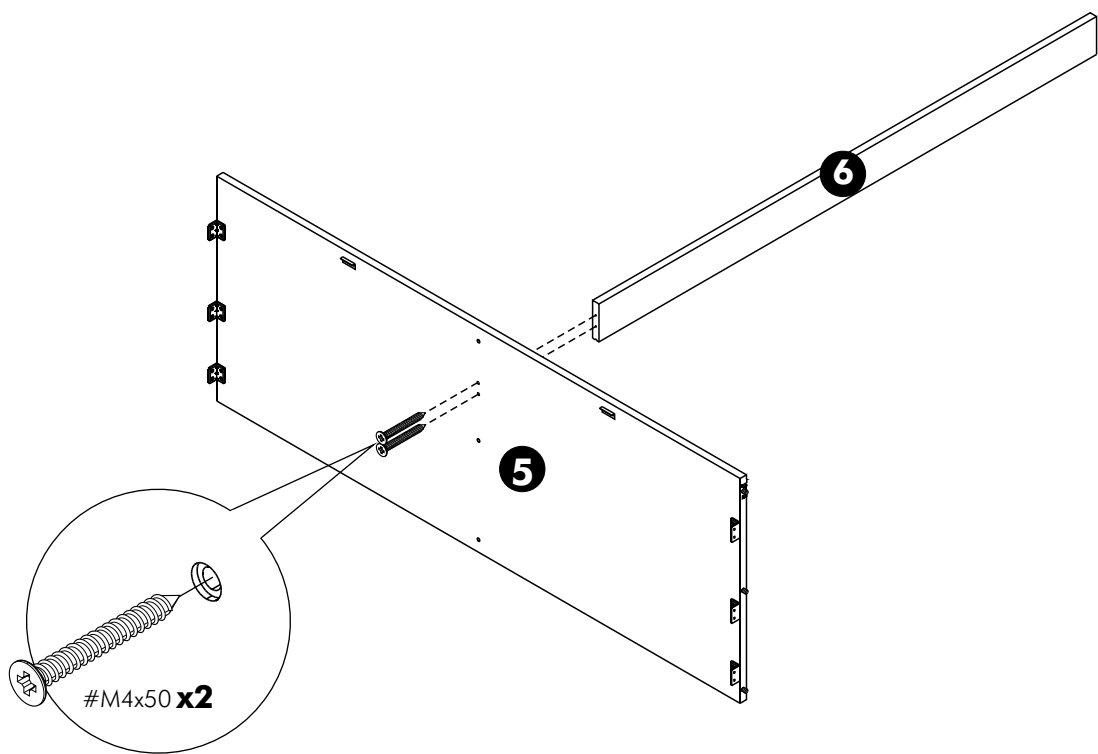


4.

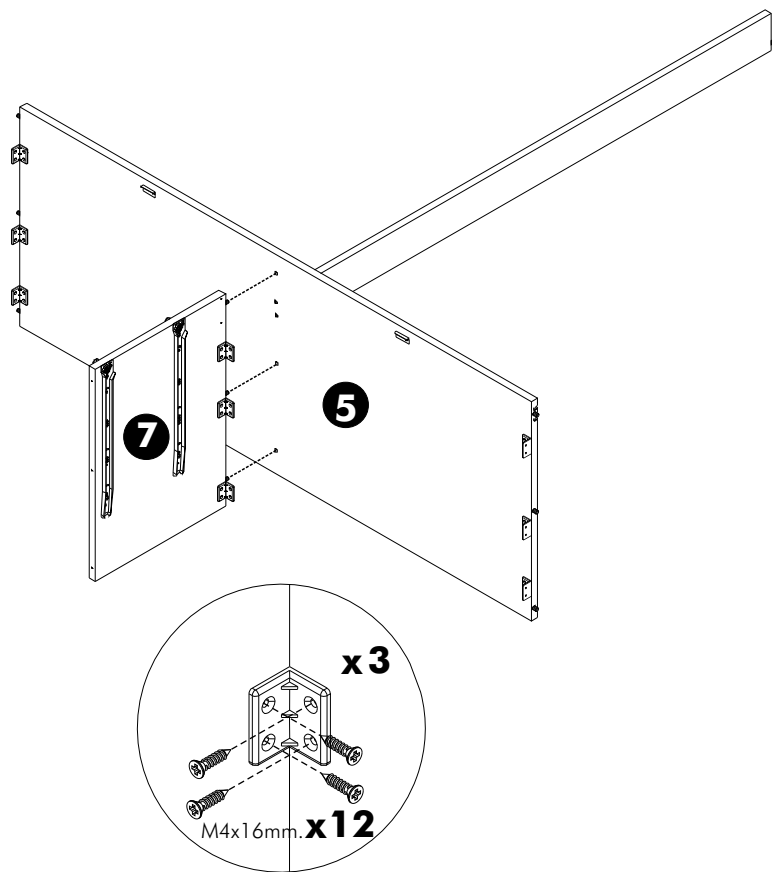


5.

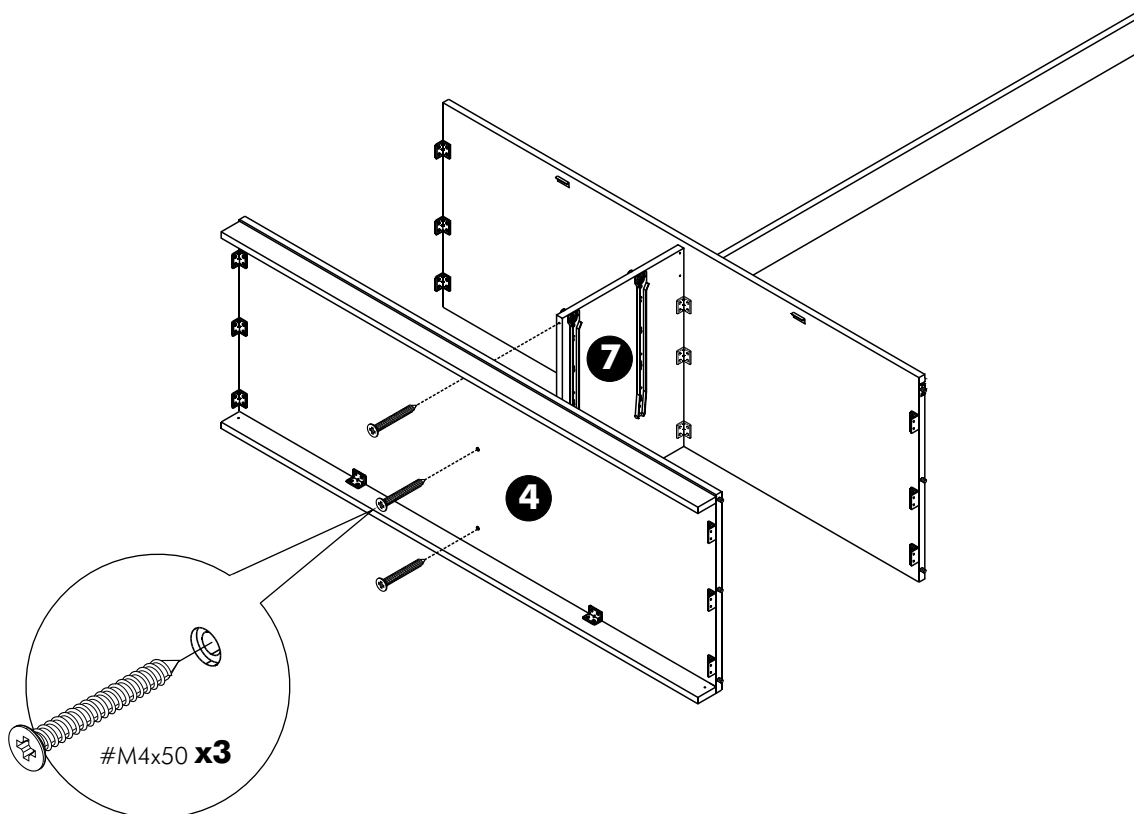


6.

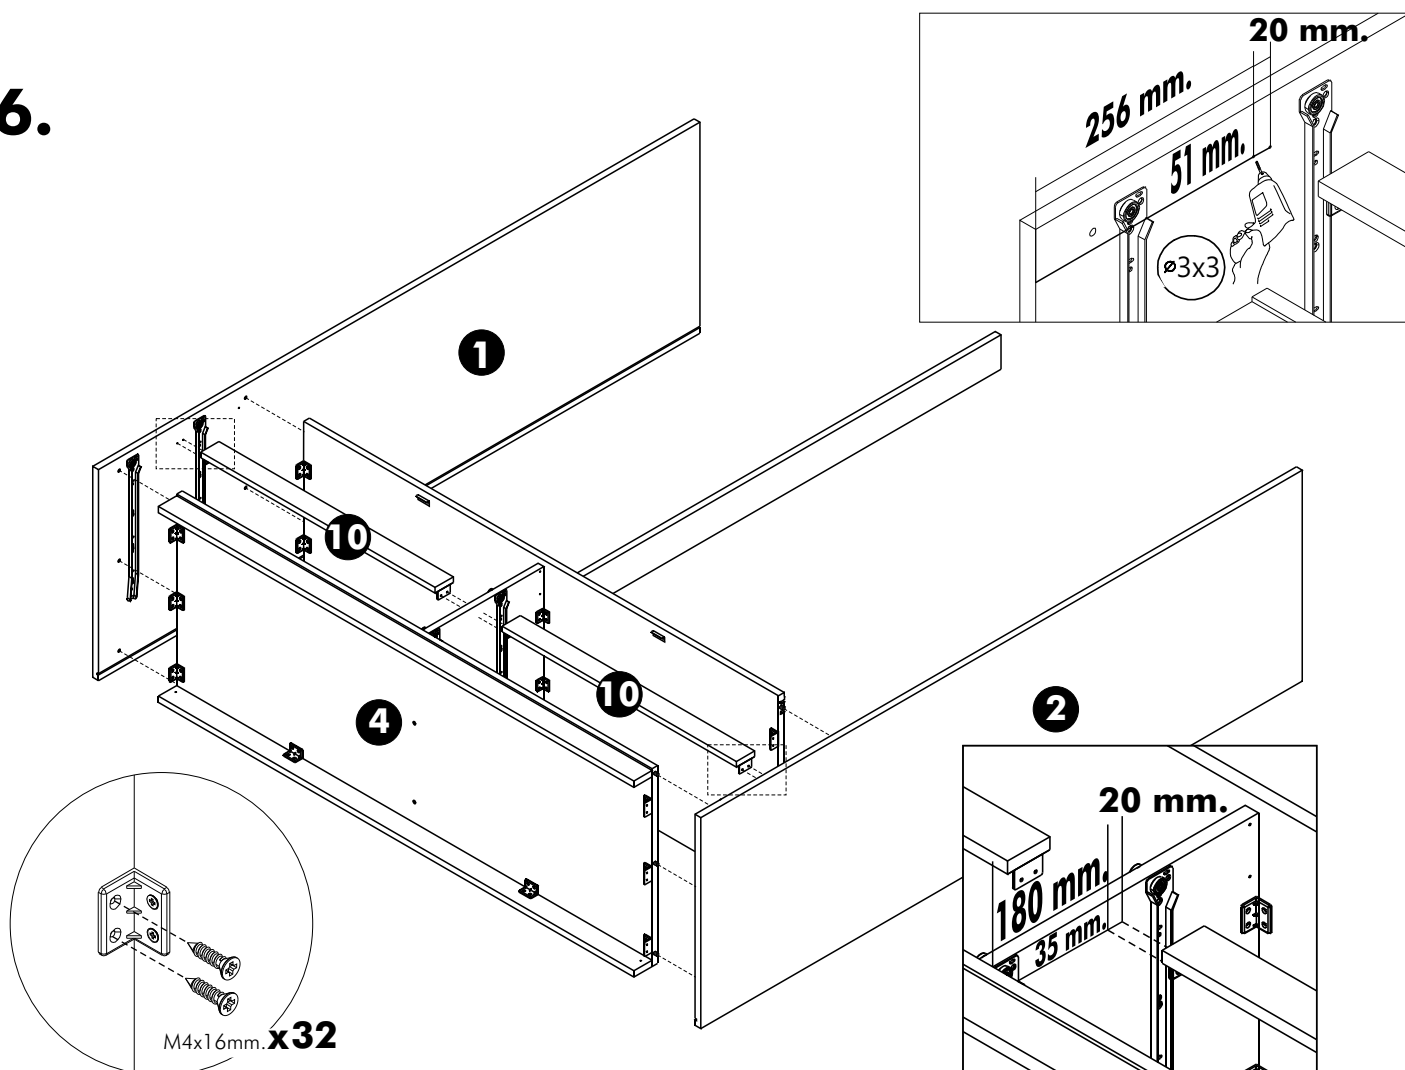


5.

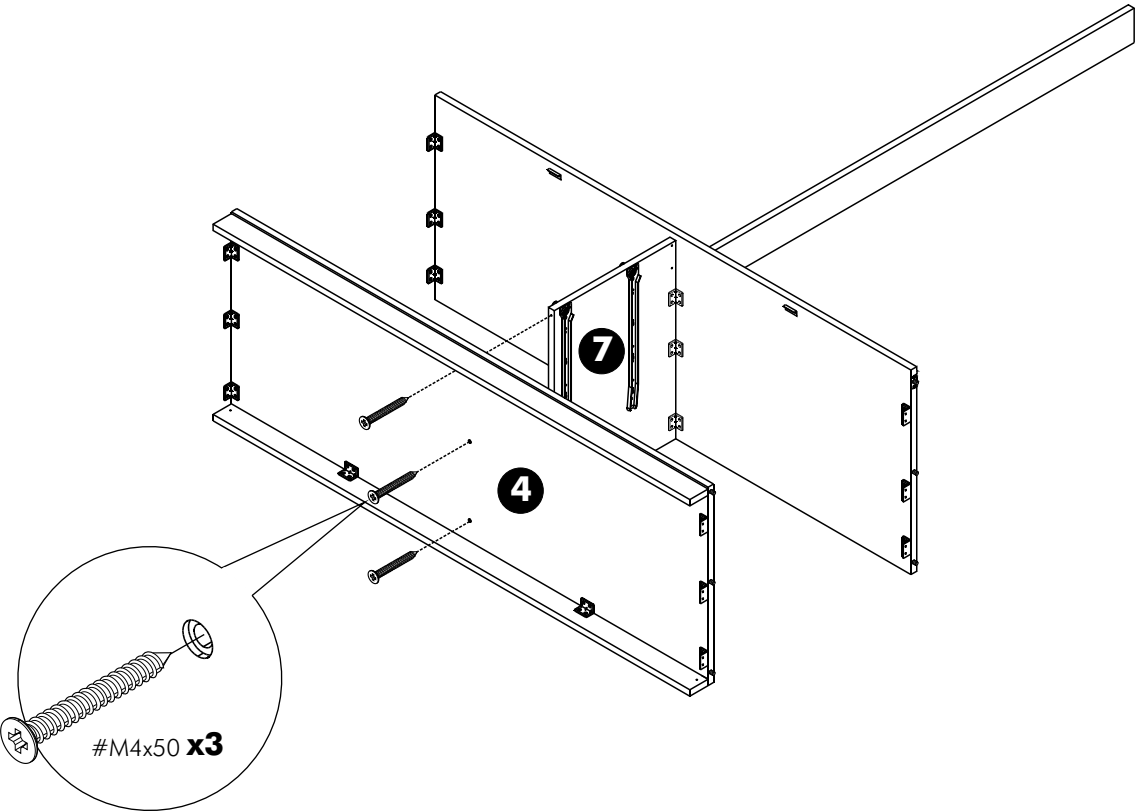


6.

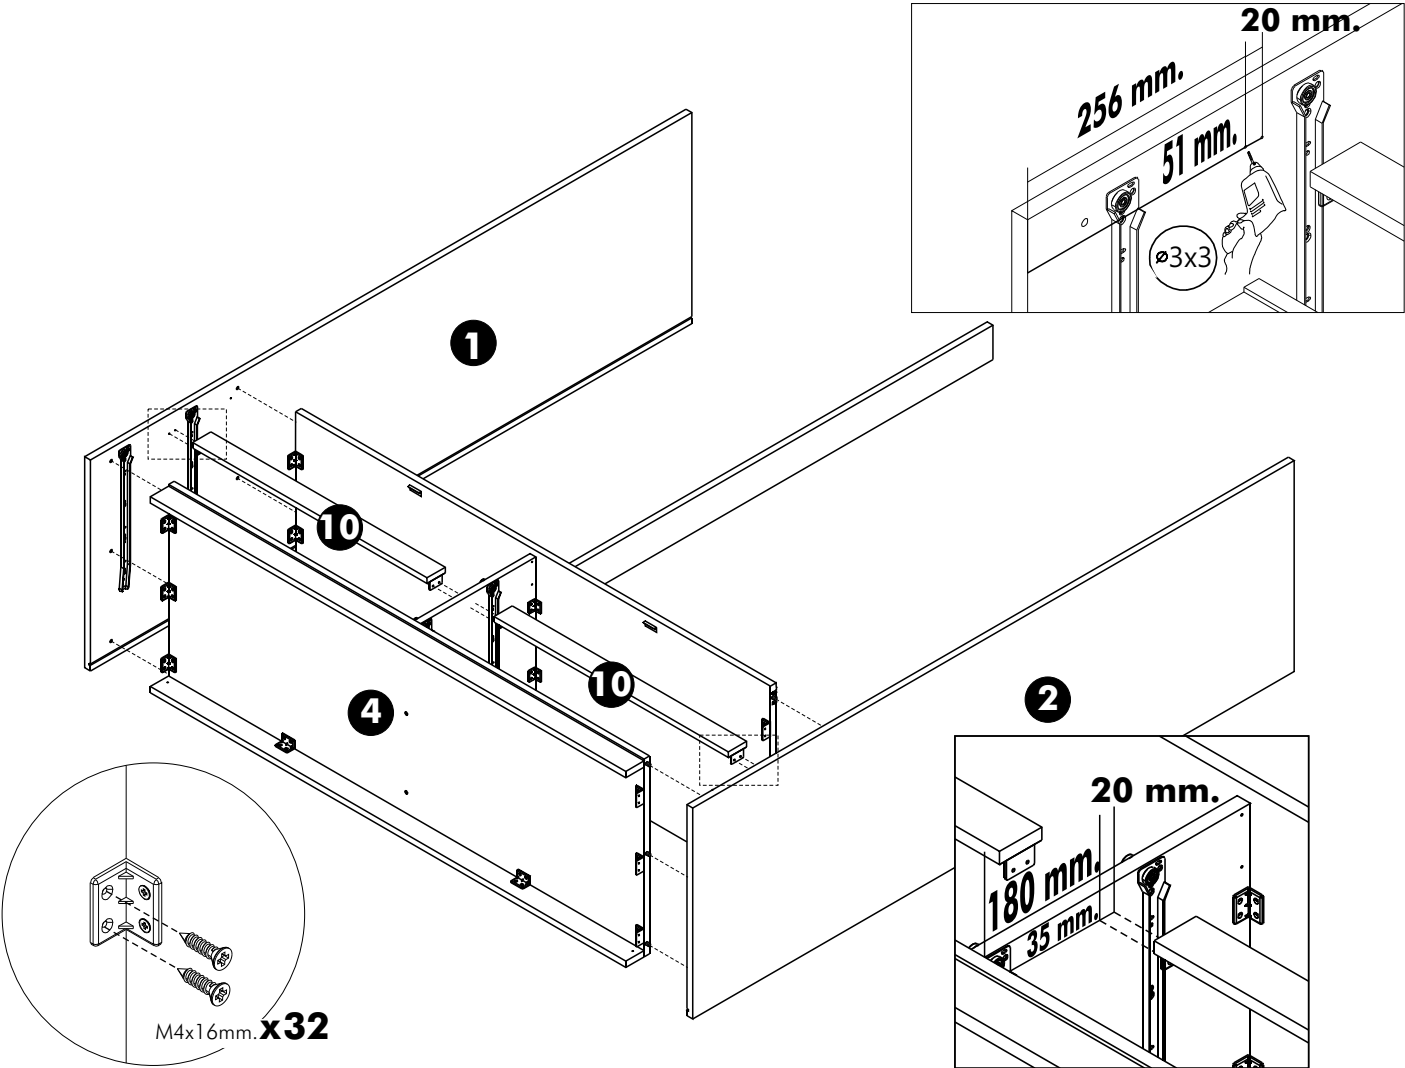


7.

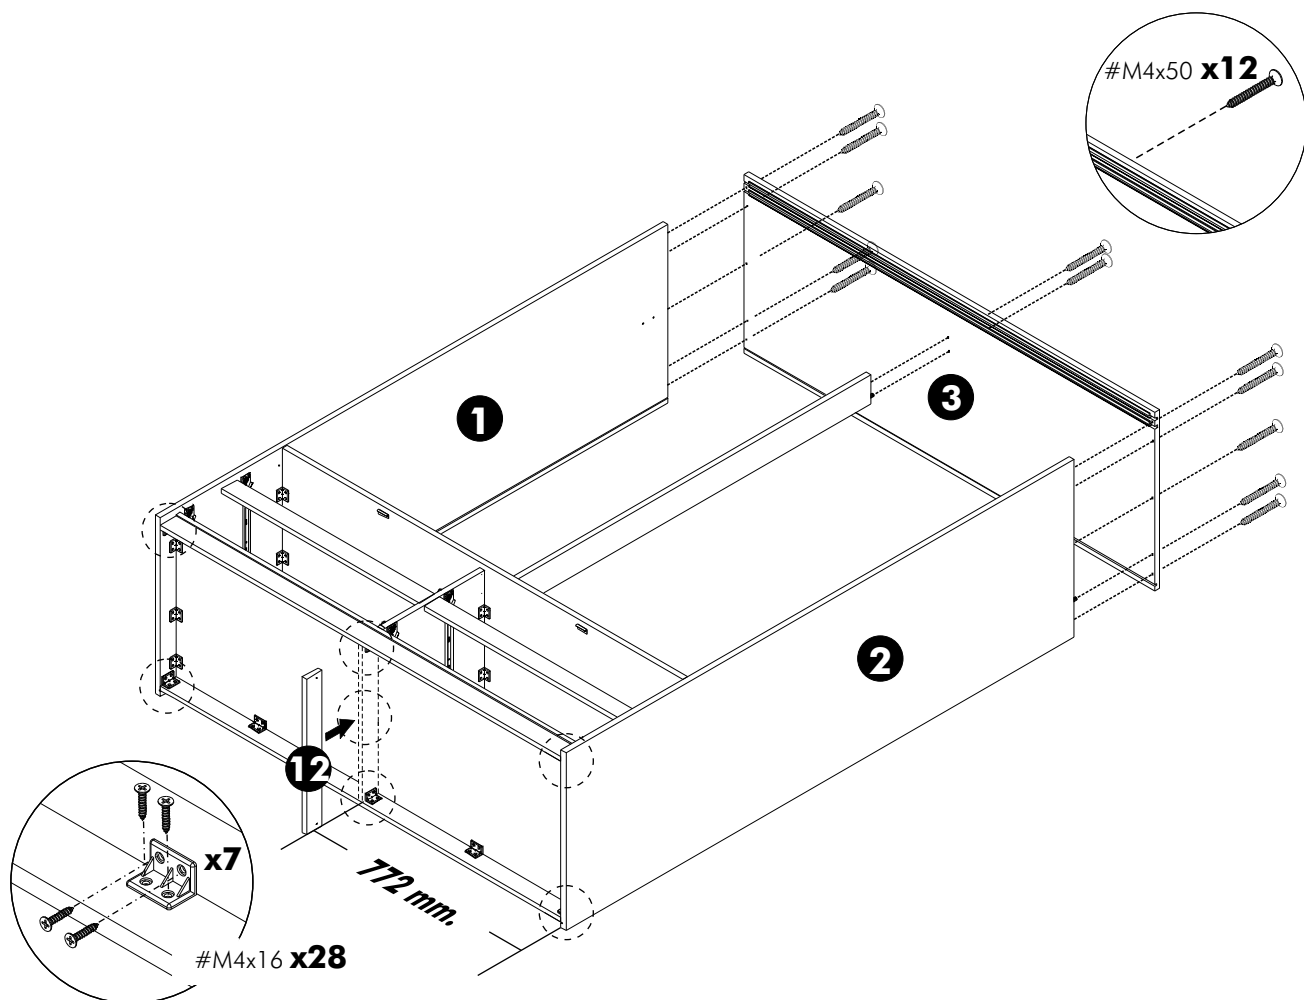


8.

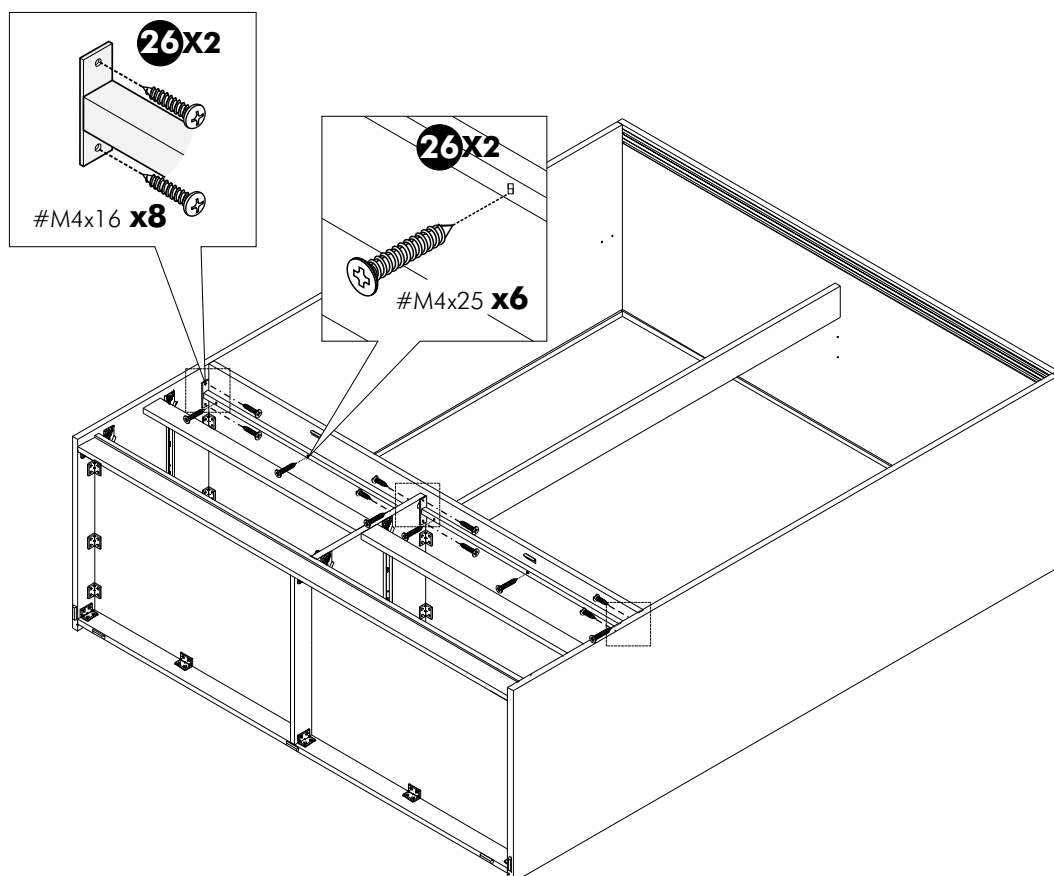


9.

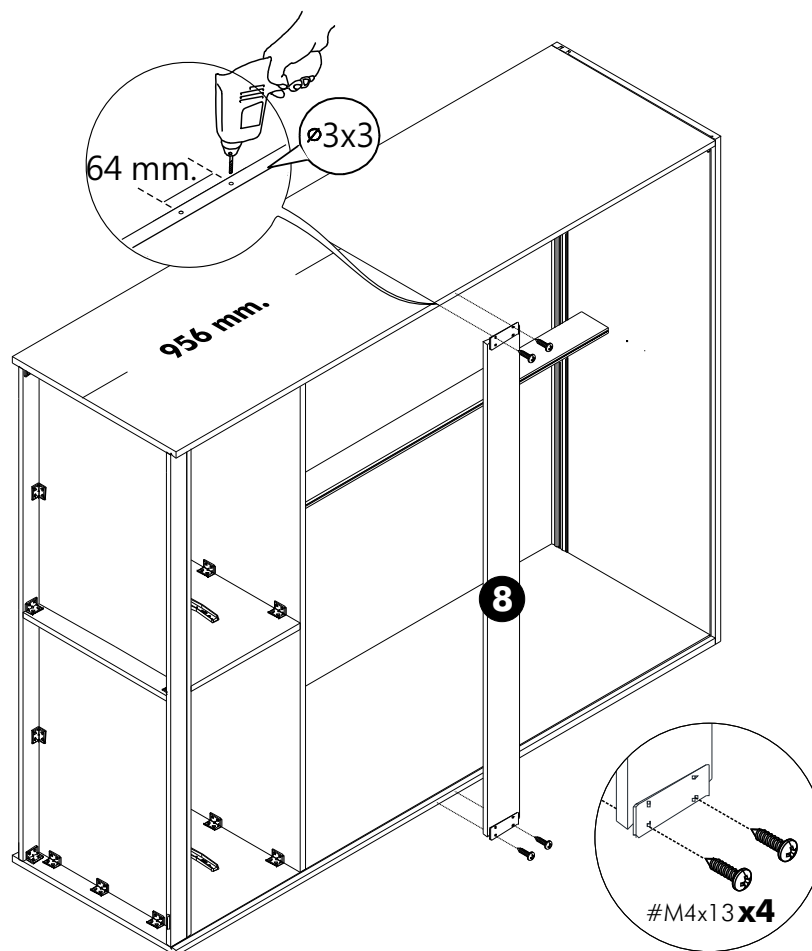

10.

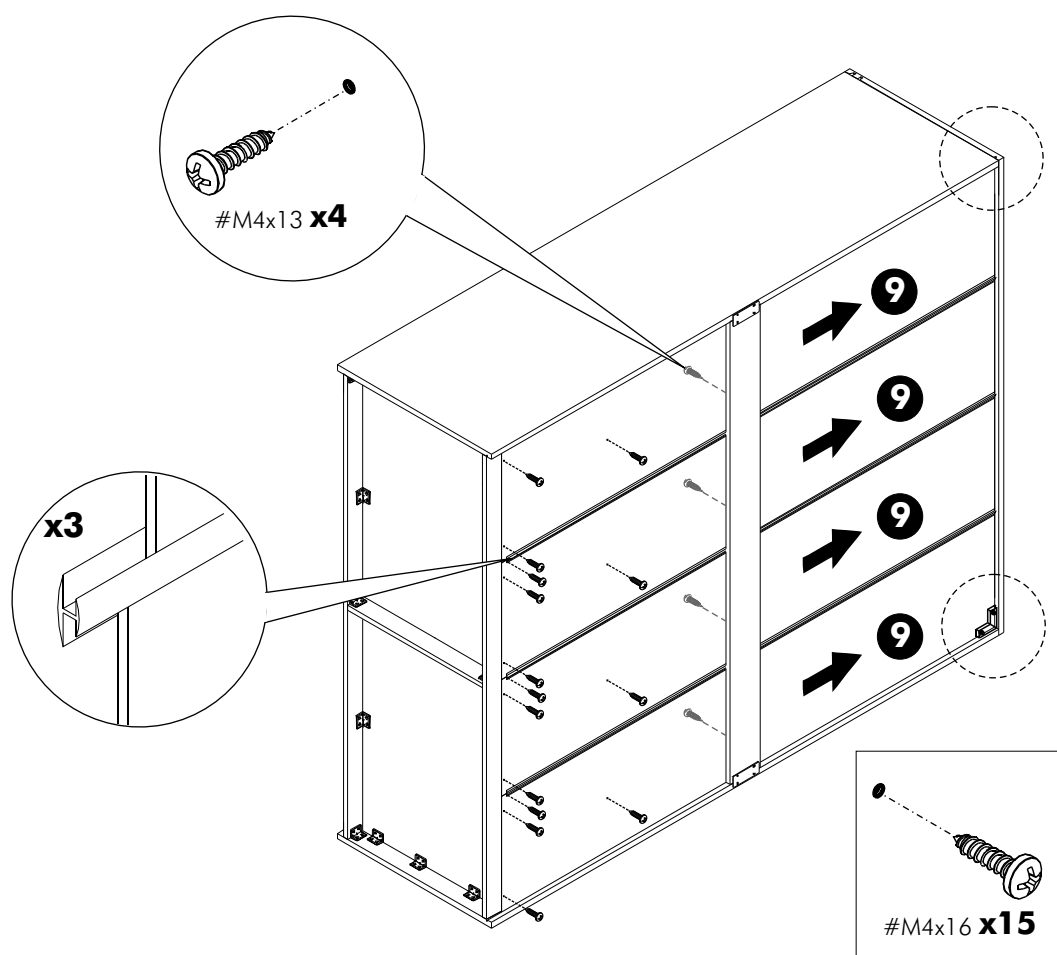

11.

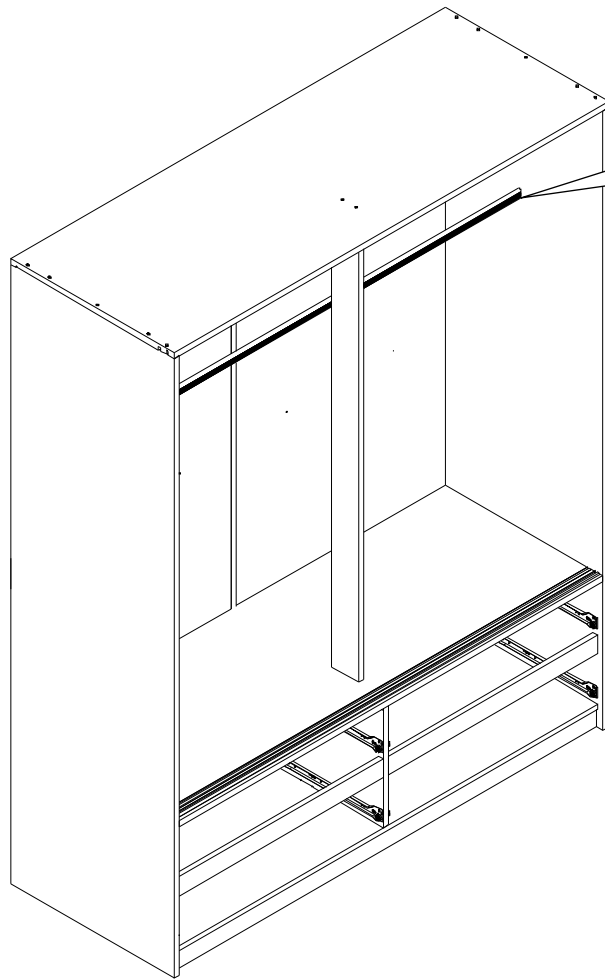

#M3.5x13 **x4**

x2

x1


#M4x16 **x2**

x1

ASSEMBLY

-DRAWER SET



#M4x40 **x20**

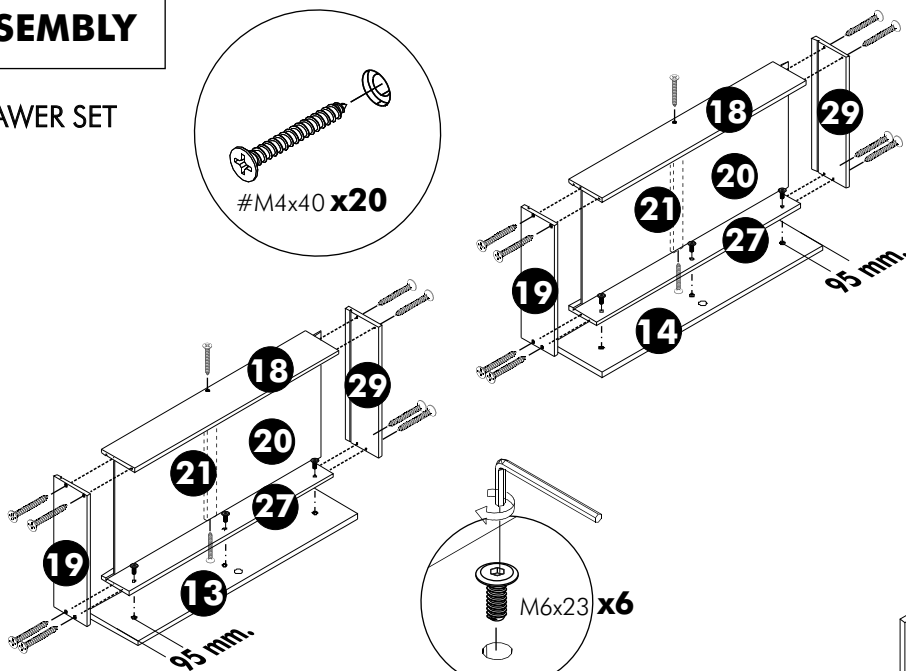


M6x23 **x6**

x 2

M3.5x20mm **x8**

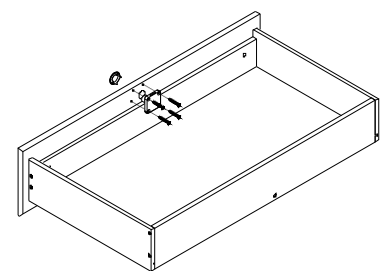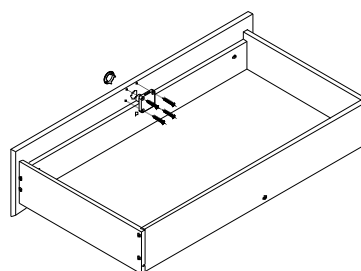

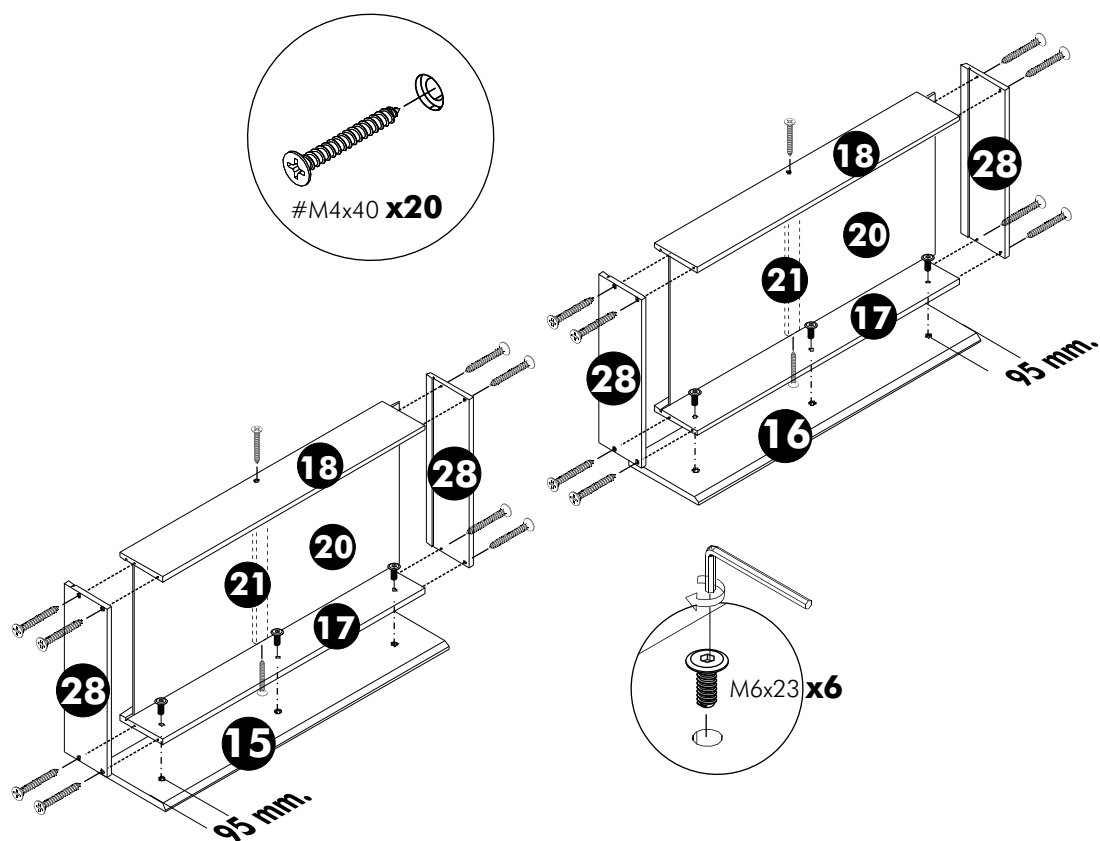

ASSEMBLY

-DOOR SET

