



STACKO-P

Low cabinet

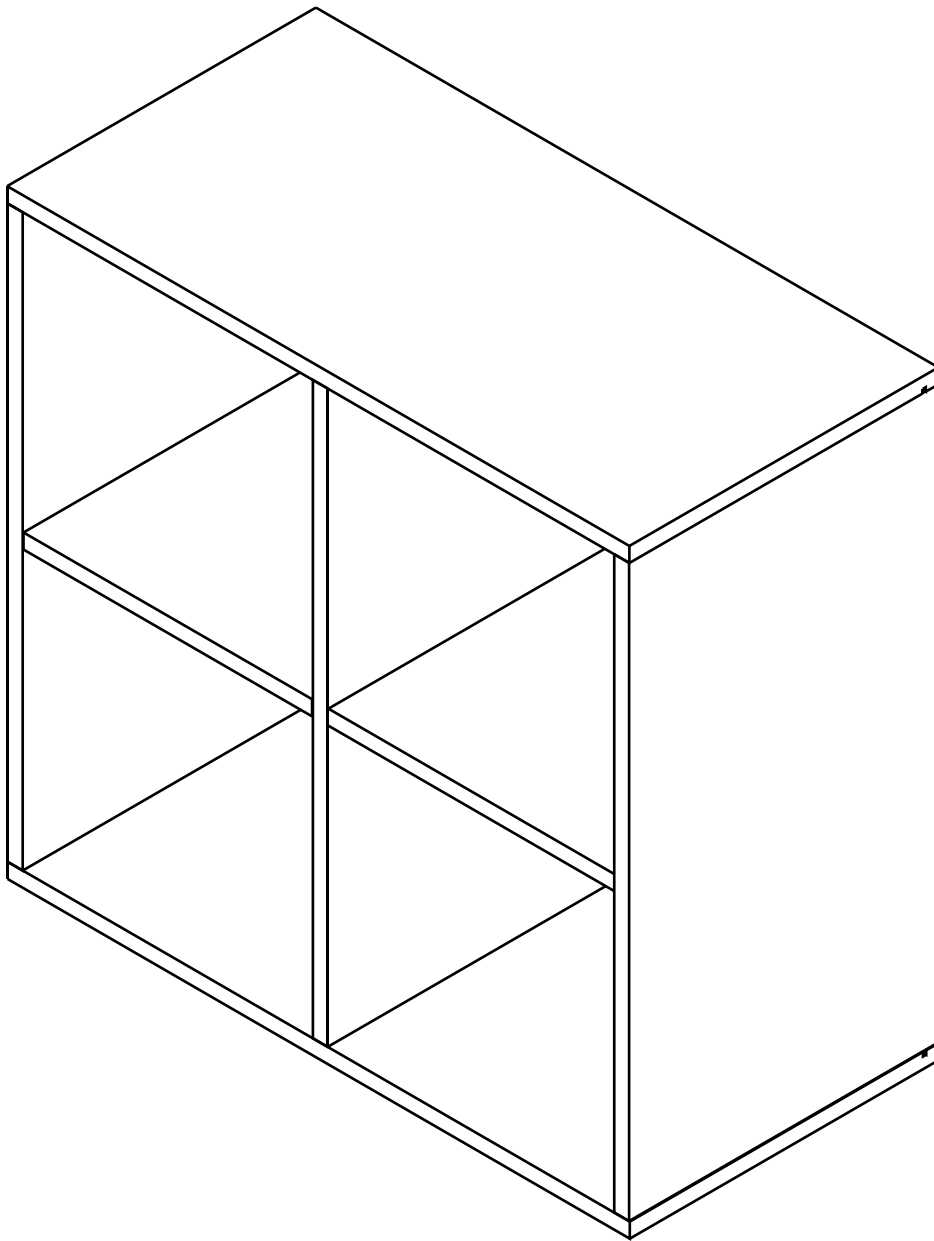


CONNECT SYSTEM


1

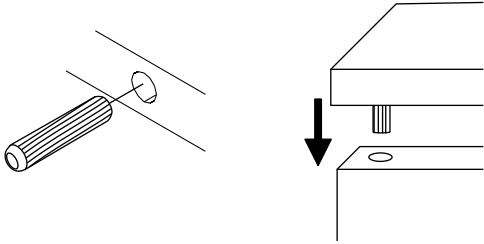

2

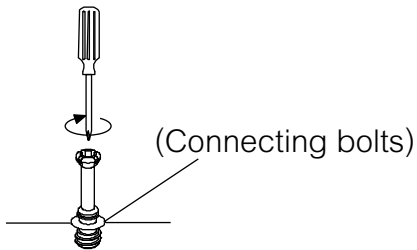

3

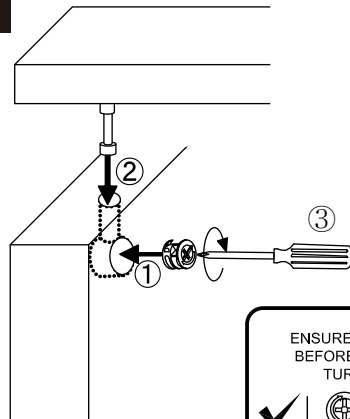


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓				✗
	CORRECT	WRONG		

HARDWARE


-BODY SET




x 14



x 14




x 20

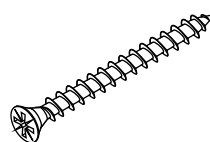

M4x50mm.

x 6



x 6




x 6


ASSEMBLY

-BODY SET


1.

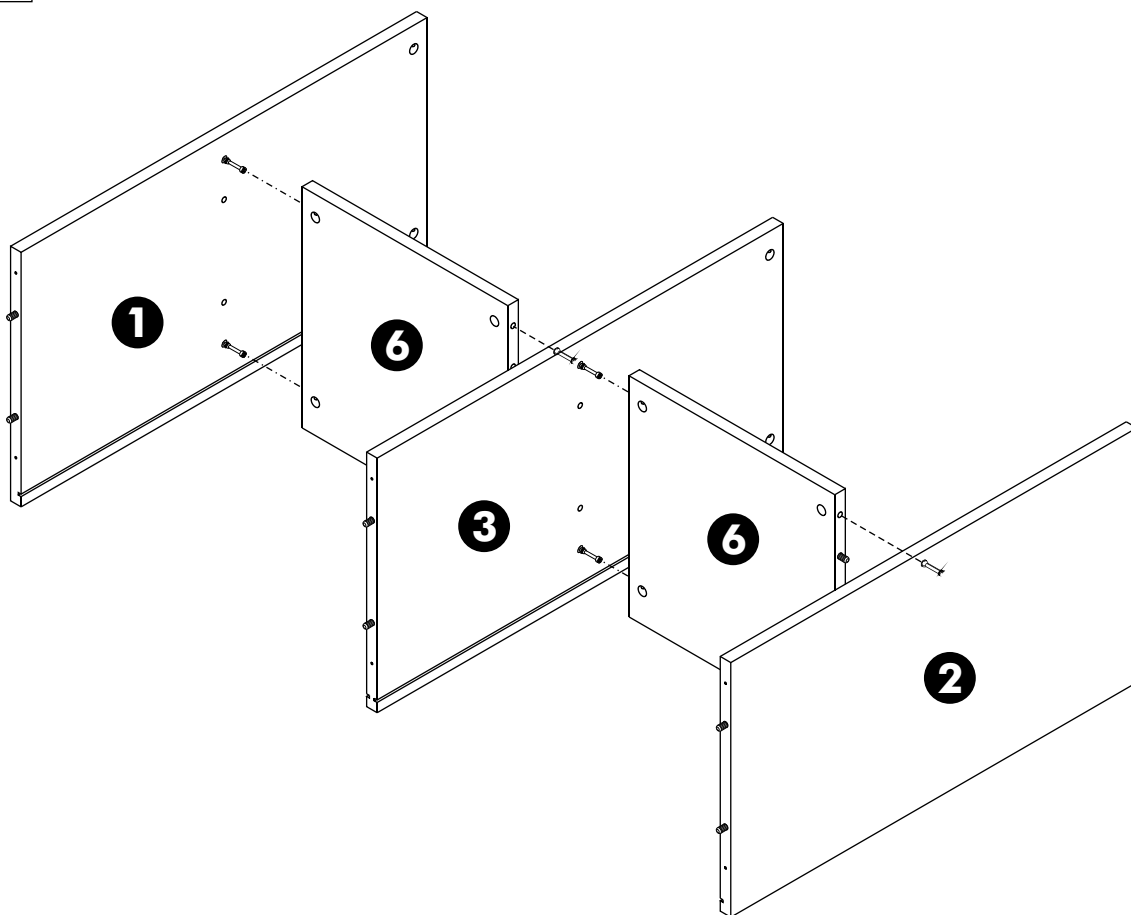


2.

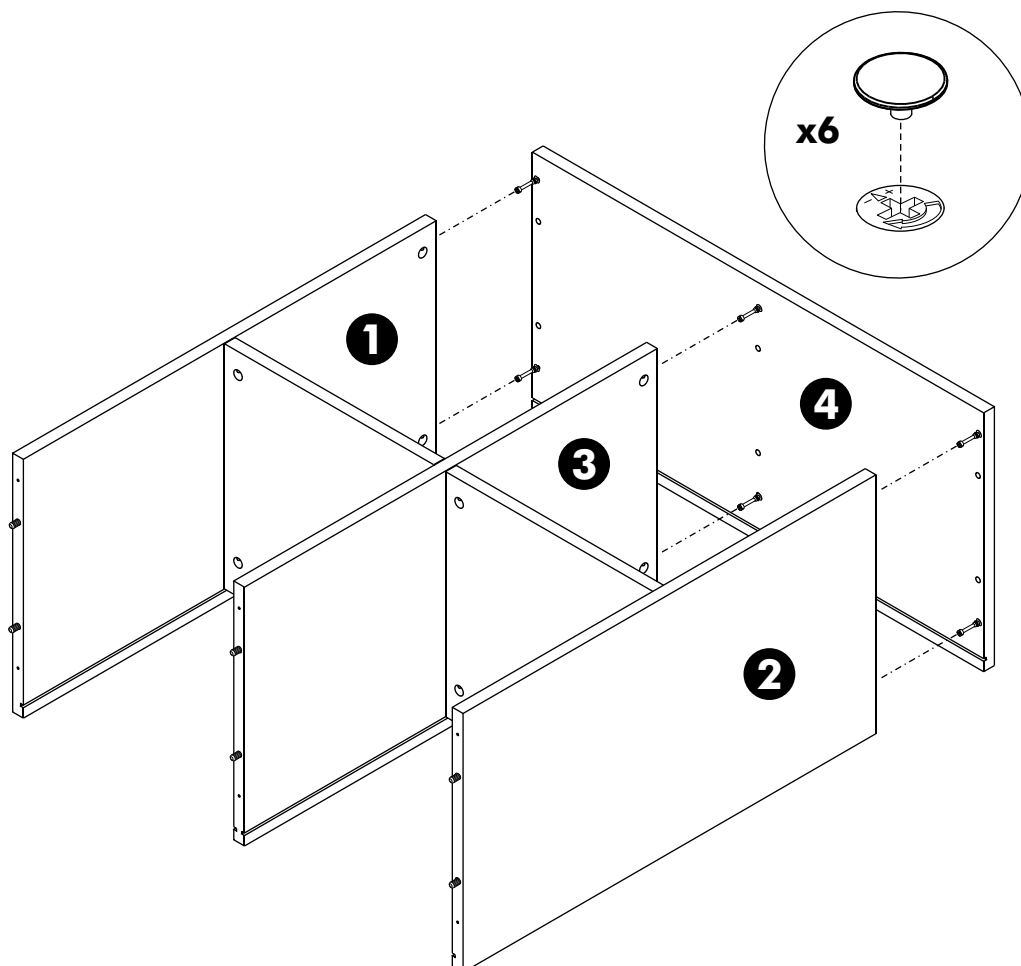

3.

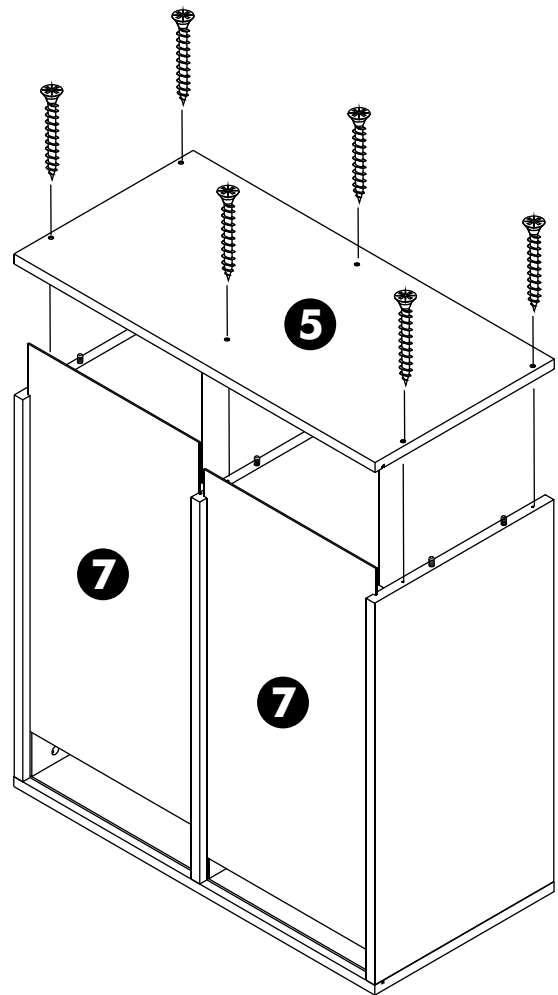

M4x50mm. **X 6**

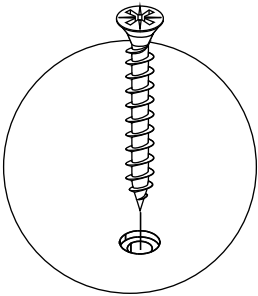

4.

