


# VIVO

**BED 5 ft.**

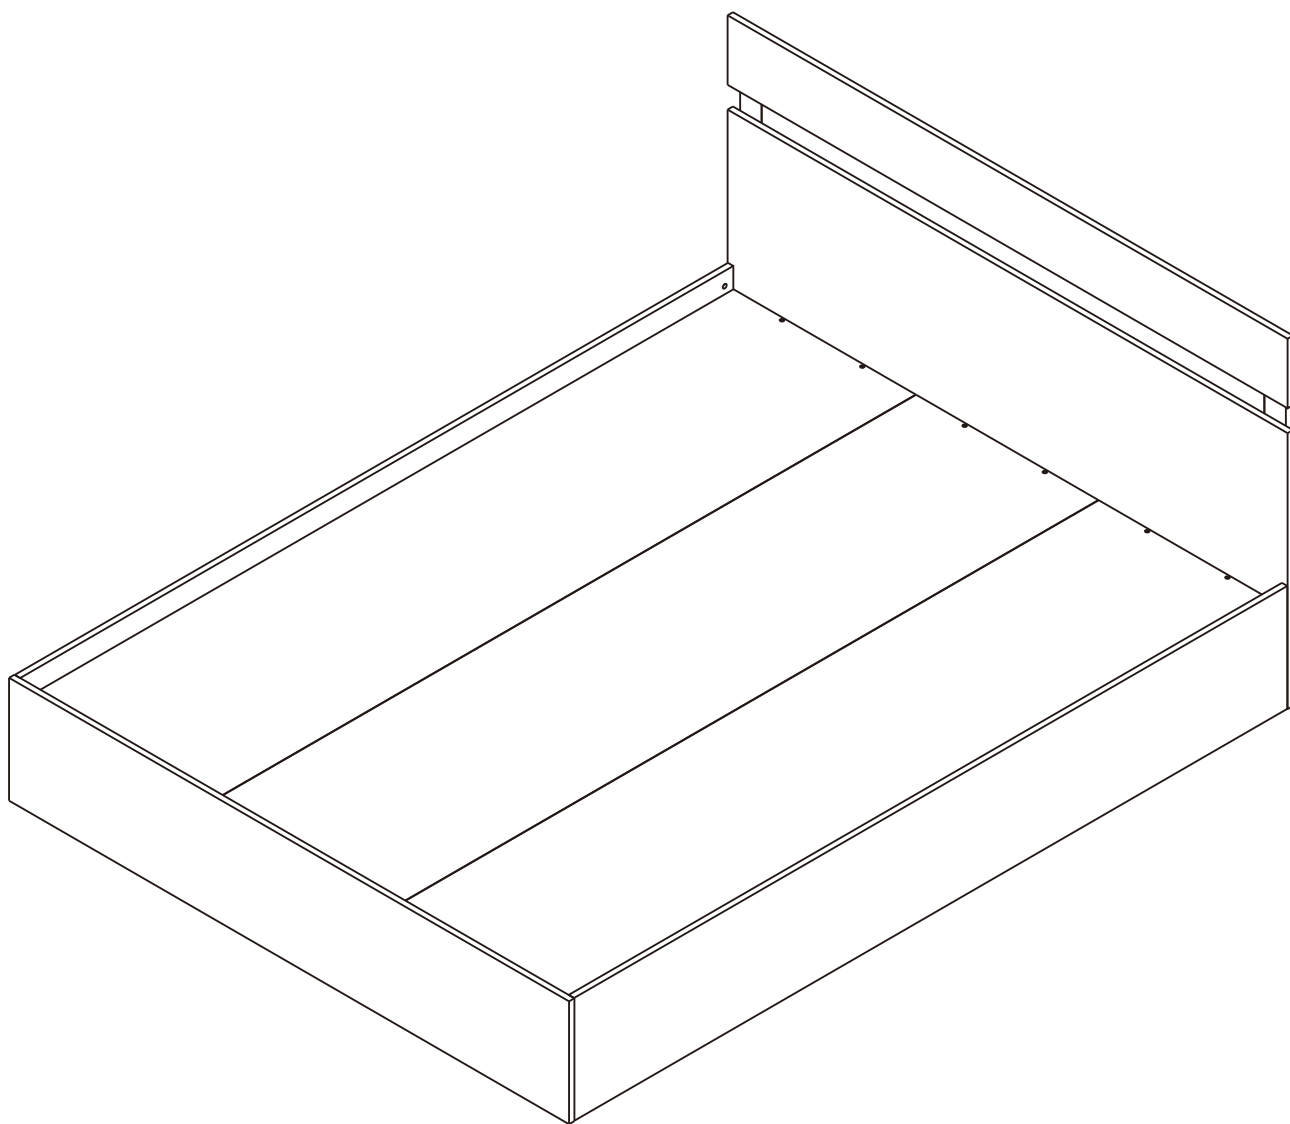

# CONNECT SYSTEM

**1**

**3**

**2**

(Connecting bolts)

**WHEN FITTING CAMS**  
ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING BOLT  
TURN CLOCKWISE UNTIL SECURE

✓					✗
	↑	↓	←	→	
	<b>CORRECT</b>	<b>WRONG</b>			

**i**

M6x45mm.


M6

M6

M4x16mm.

# HARDWARE


## -BODY SET



**x 4**




**x 4**



#8x35

**x 12**

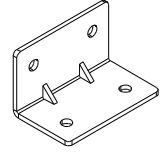

**x 8**



No.1

**x 3**




#M6

**x 4**




#M6

**x 4**



No.10

**x 1**



**x 12**



M4x16mm.

**x 24**



M4x16mm.

**x 43**




M4x25mm.

**x 22**



M4x30mm.

**x 48**



#M6x45

**x 4**



# JCB+ M6x60


**x 6**




# ASSEMBLY

-BODY SET


## 1.

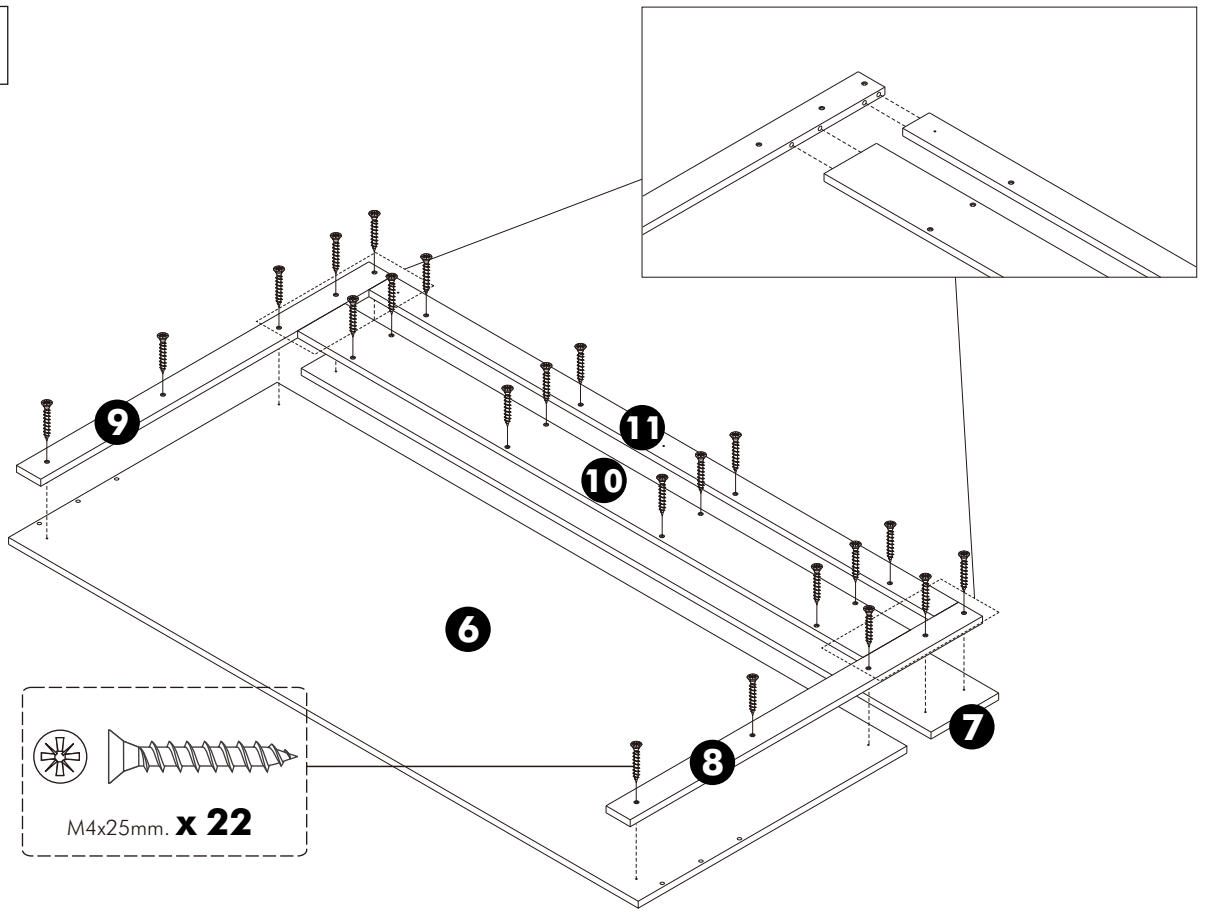

## 2.

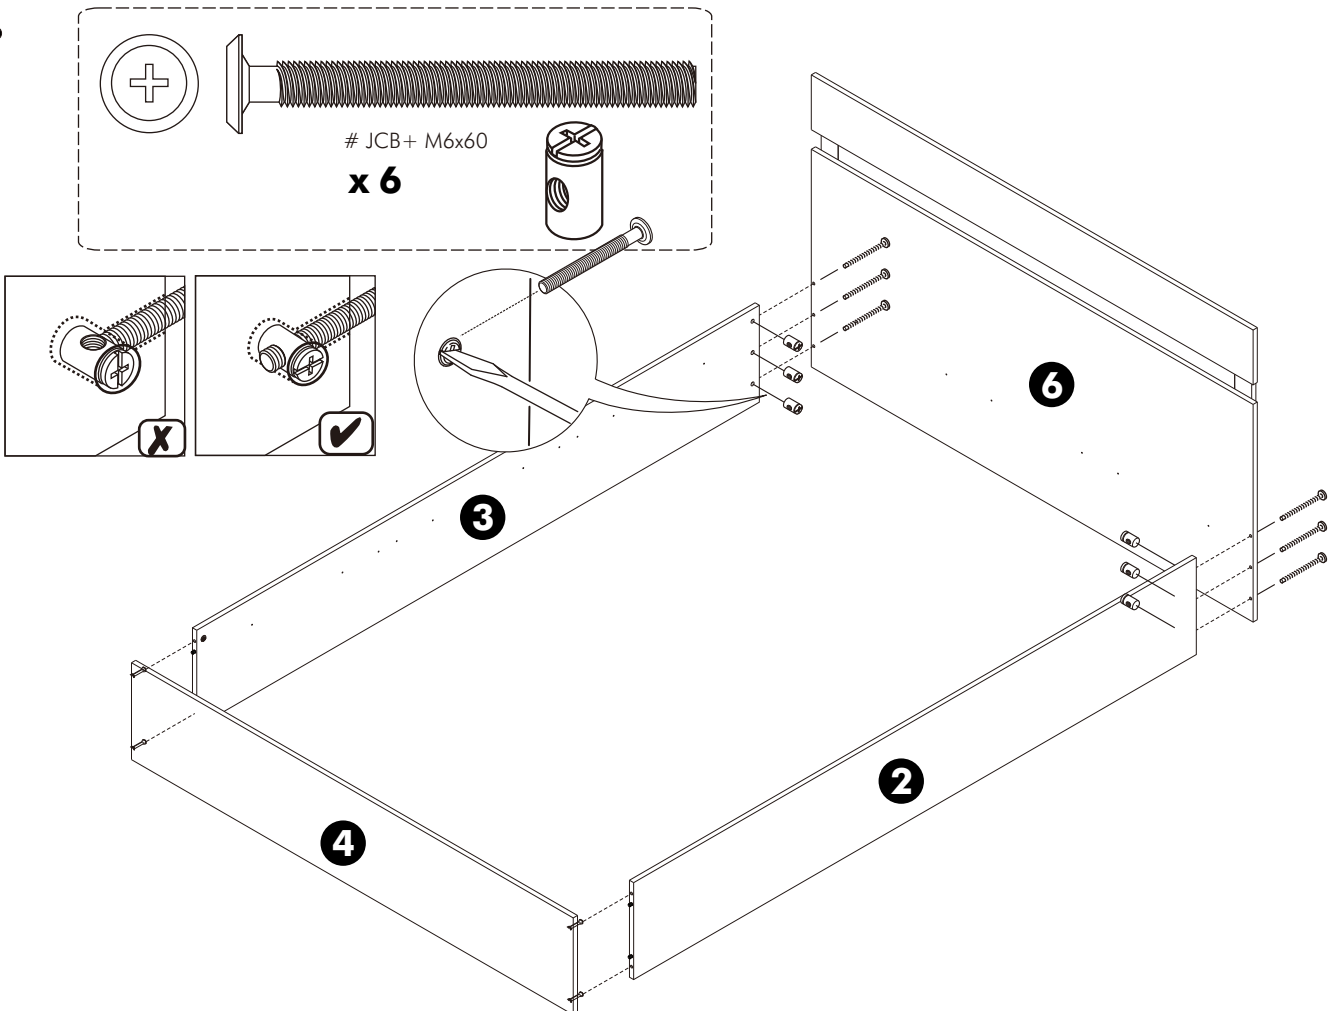

**3.**

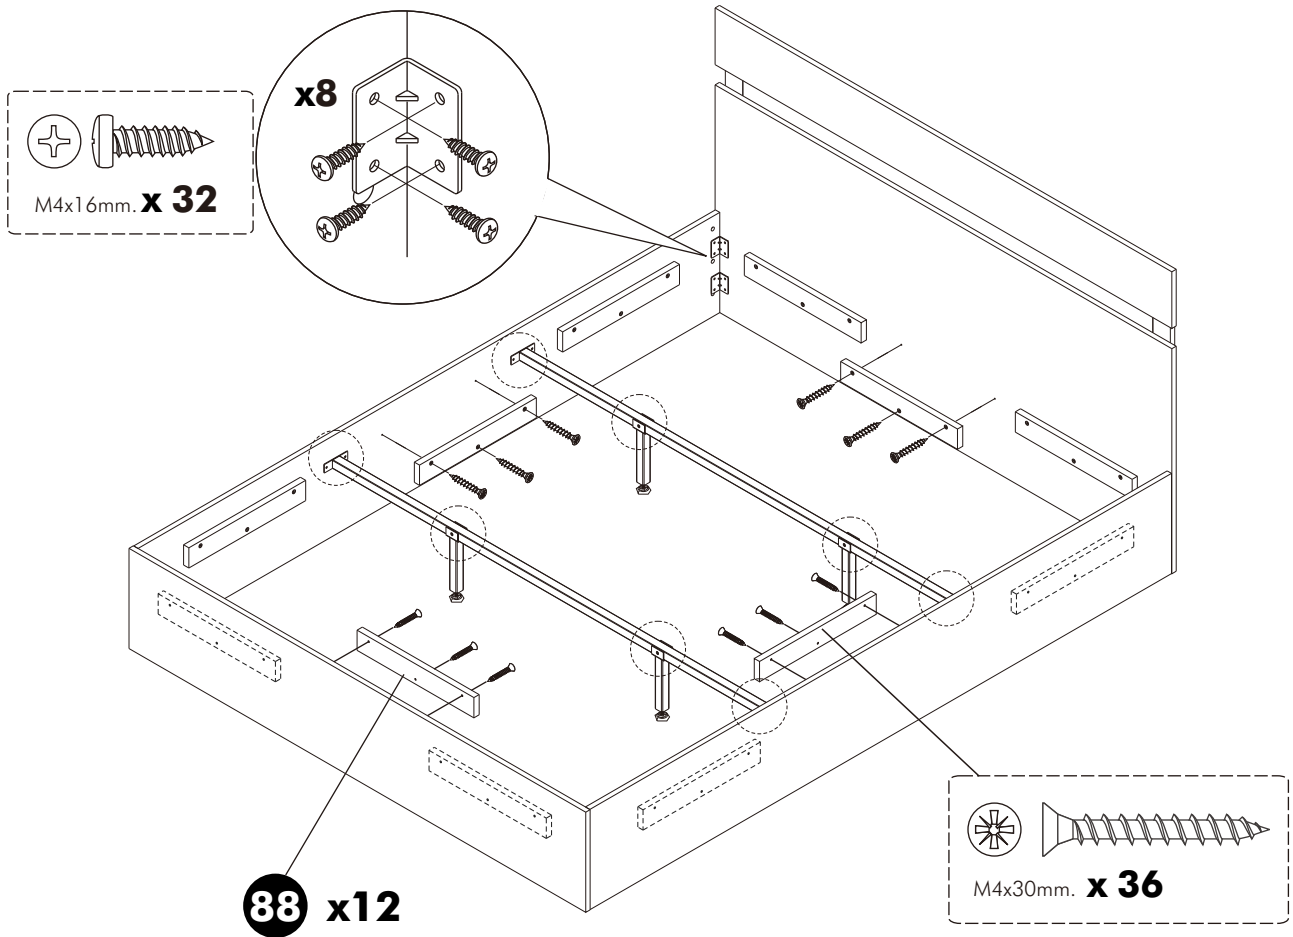

**4.**

