


# VIVO

**BED 6 ft.**

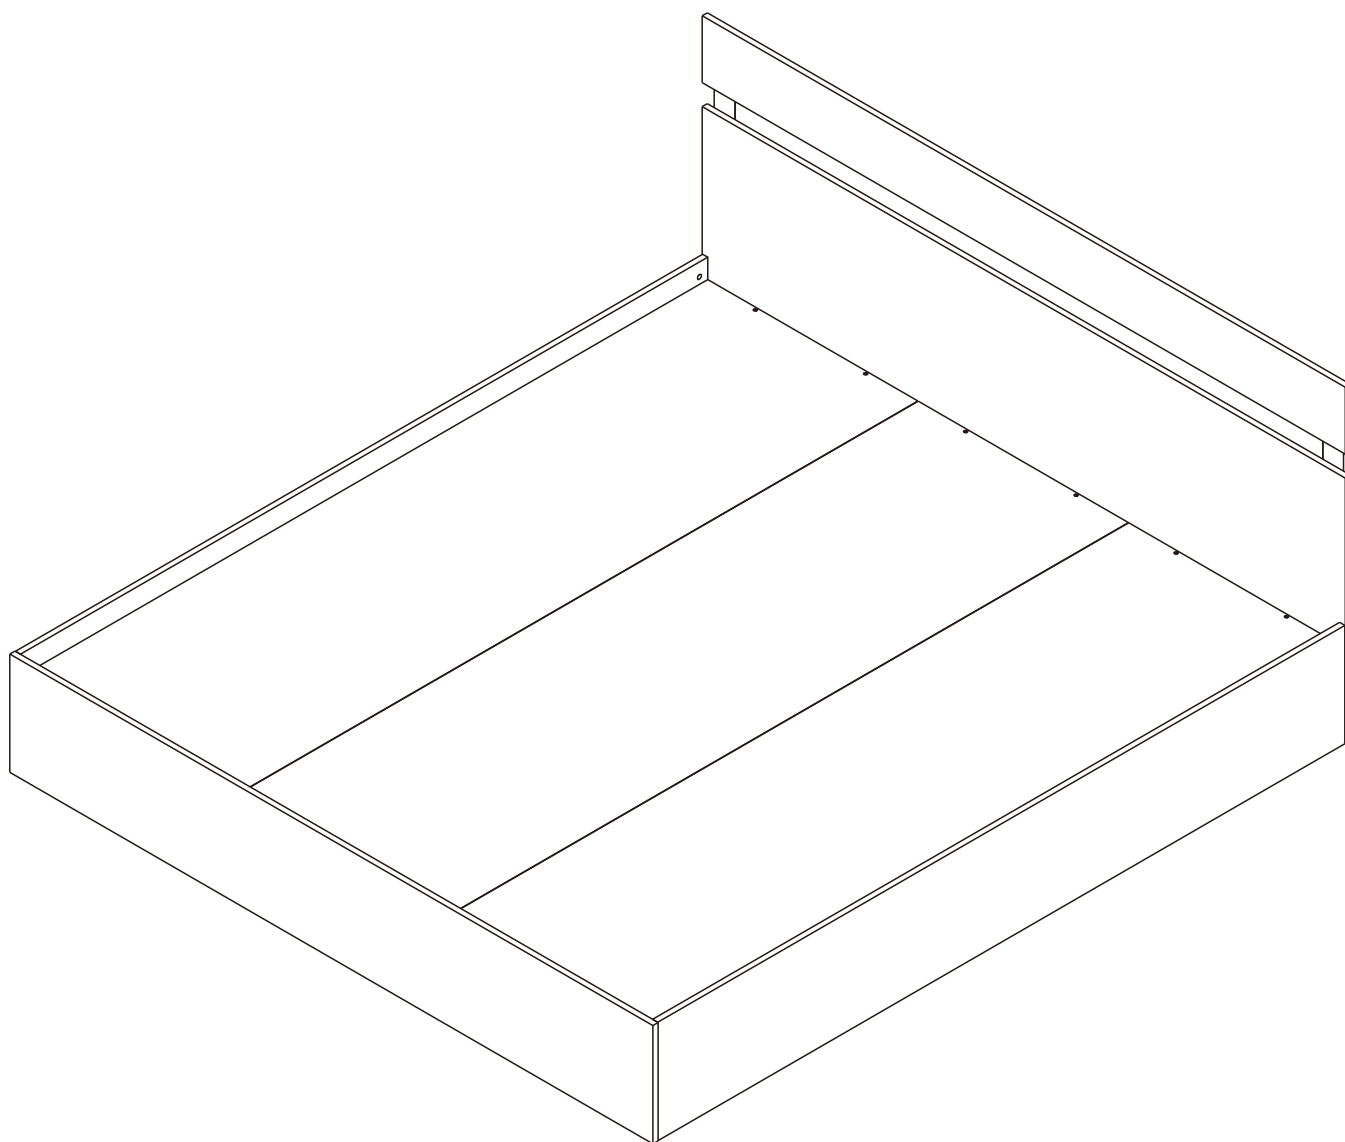

# CONNECT SYSTEM

**1**

**3**

**2**

(Connecting bolts)

**WHEN FITTING CAMS**  
ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING BOLT  
TURN CLOCKWISE UNTIL SECURE

✓				✗
↑				
<b>CORRECT</b>		<b>WRONG</b>		

1 Pc. EQ EQ ≤ 190mm.

40mm. 40mm. 2 Pcs. ≥ 191-850mm.

100mm. EQ EQ 100mm. 3 Pcs. > 850-2000mm.

100mm. EQ EQ EQ 100mm. 4 Pcs. > 2001mm.

**i**

40mm.

☹

☒

---

EQ

☺

☑

OUT

M4x16mm.

IN

M6x45mm.


M6

M6

M4x16mm.

# HARDWARE


## -BODY SET



**x 4**




**x 4**



#8x35

**x 12**

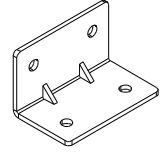

**x 8**



No.1

**x 3**




#M6

**x 4**




#M6

**x 4**



No.10

**x 1**




**x 12**



M4x16mm.

**x 24**



M4x16mm.

**x 43**




M4x25mm.

**x 22**



M4x30mm.

**x 48**



#M6x45

**x 4**



# JCB+ M6x60


**x 6**




# ASSEMBLY

-BODY SET




## 1.

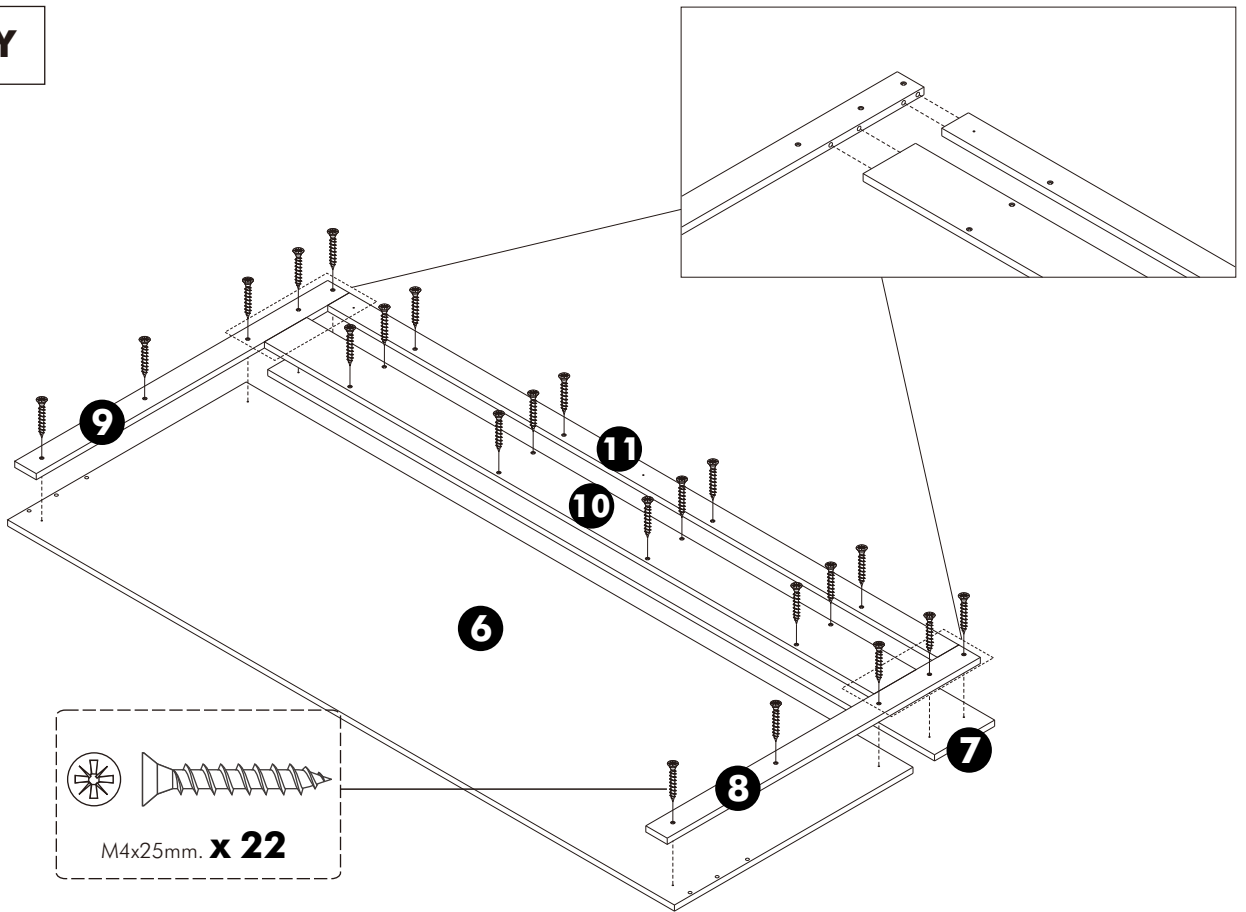

## 2.

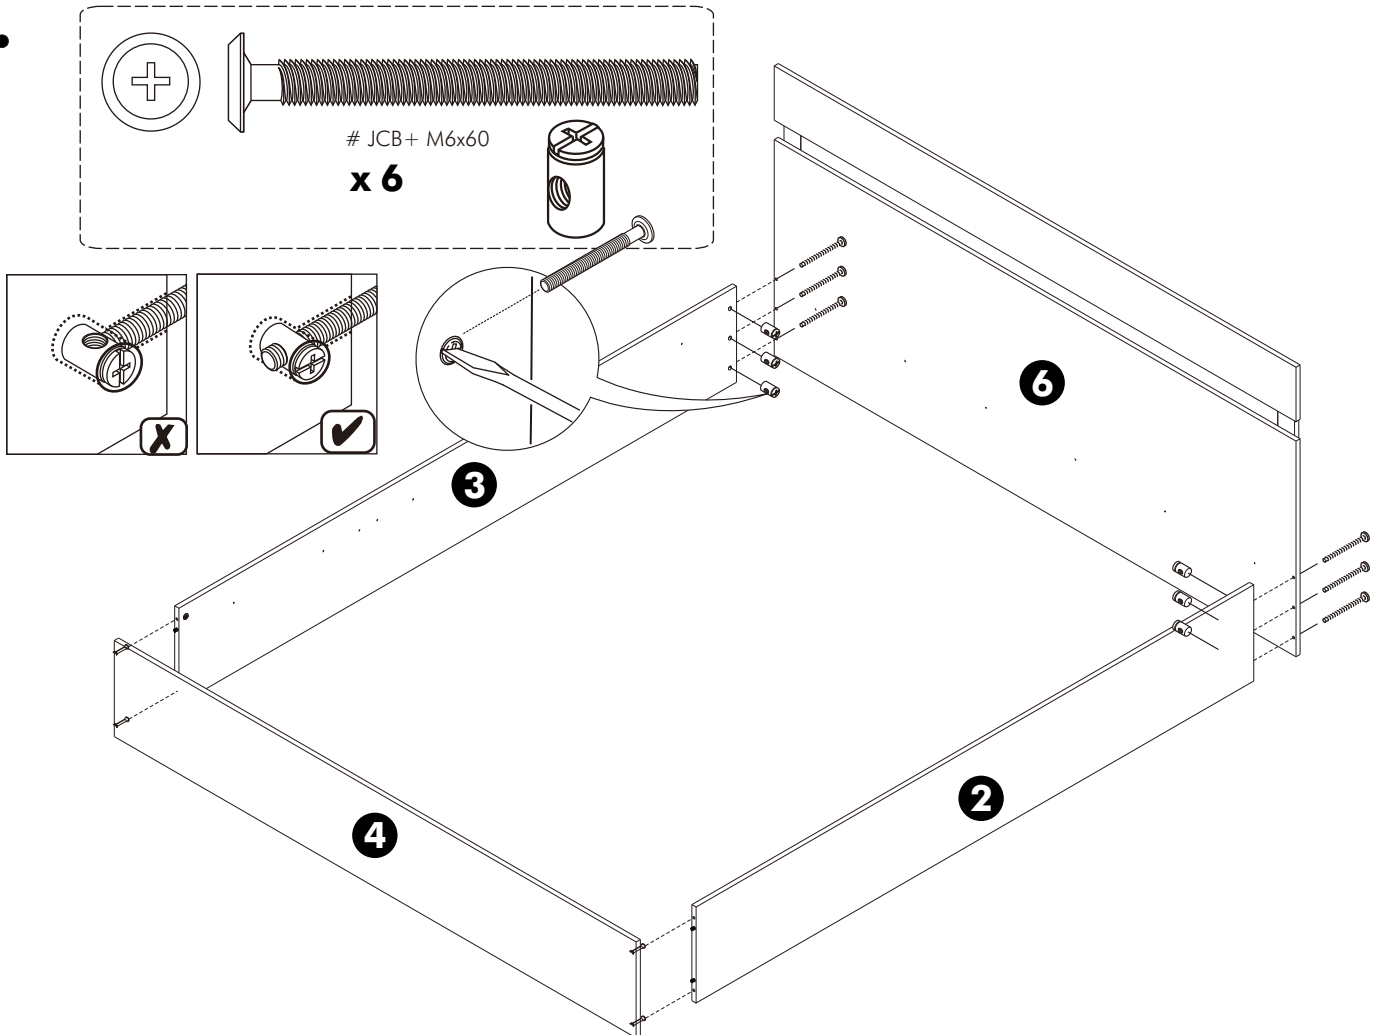

**3.**

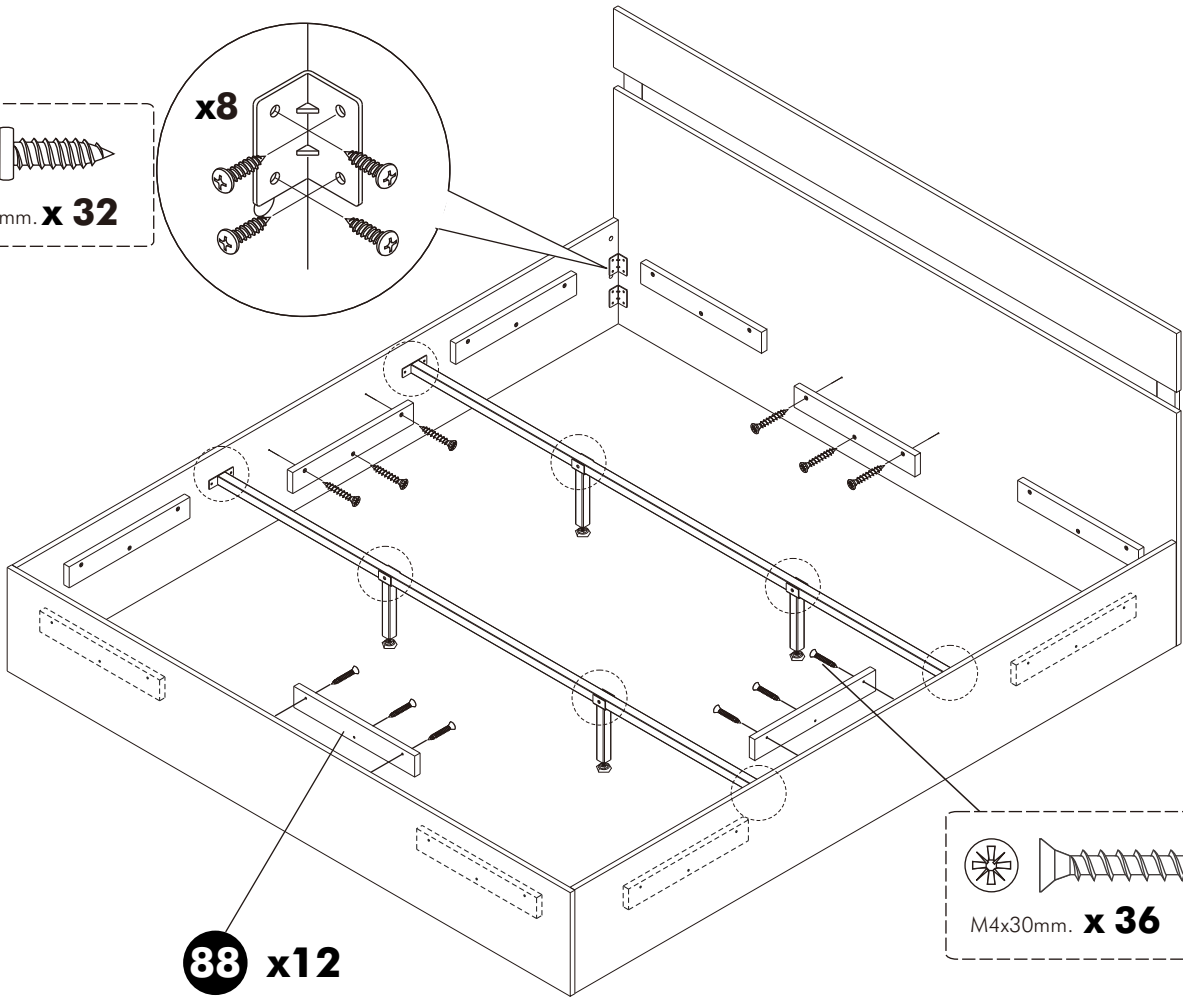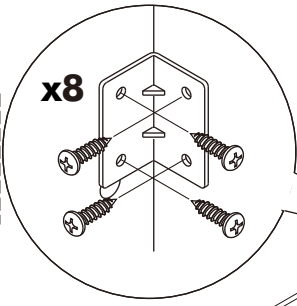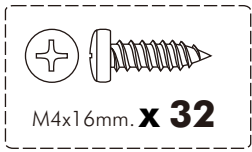

**4.**

