



ONE WAY-B-P

Cabinet

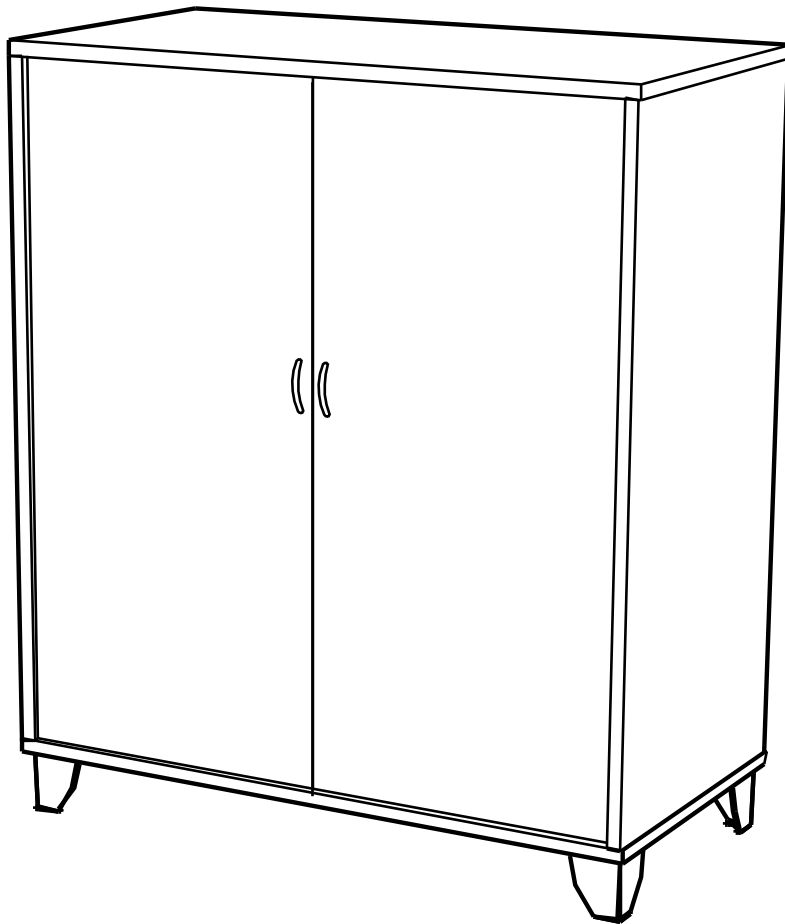


CONNECT SYSTEM

1

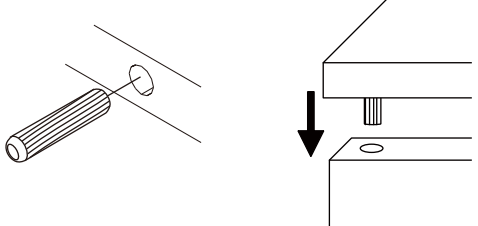


2

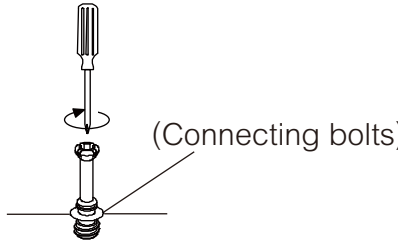

(Connecting bolts)

3

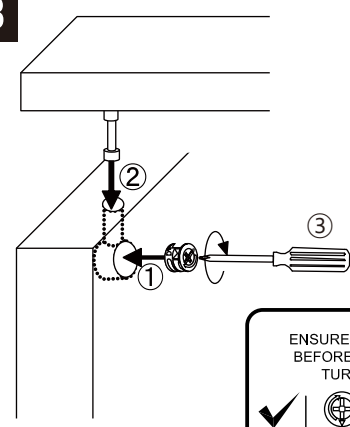

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓



↑


CORRECT

✗





✗


WRONG



M3.5x20mm.

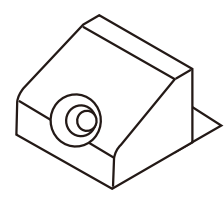


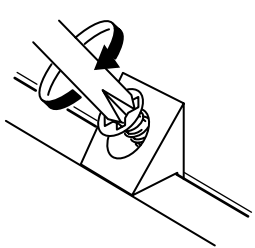

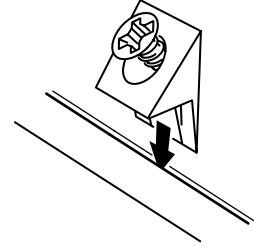

HARDWARE


-BODY SET




x 4



x 4




x 8



x 8




x 12

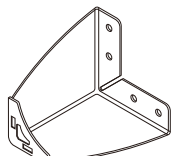

x 4




x 8



x 6



x 16




x 4


-DOOR SET



x 2




x 2




x 2




x 4



x 2

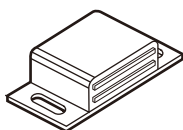

x 1



x 2




x 2


ASSEMBLY

-BODY SET


1.

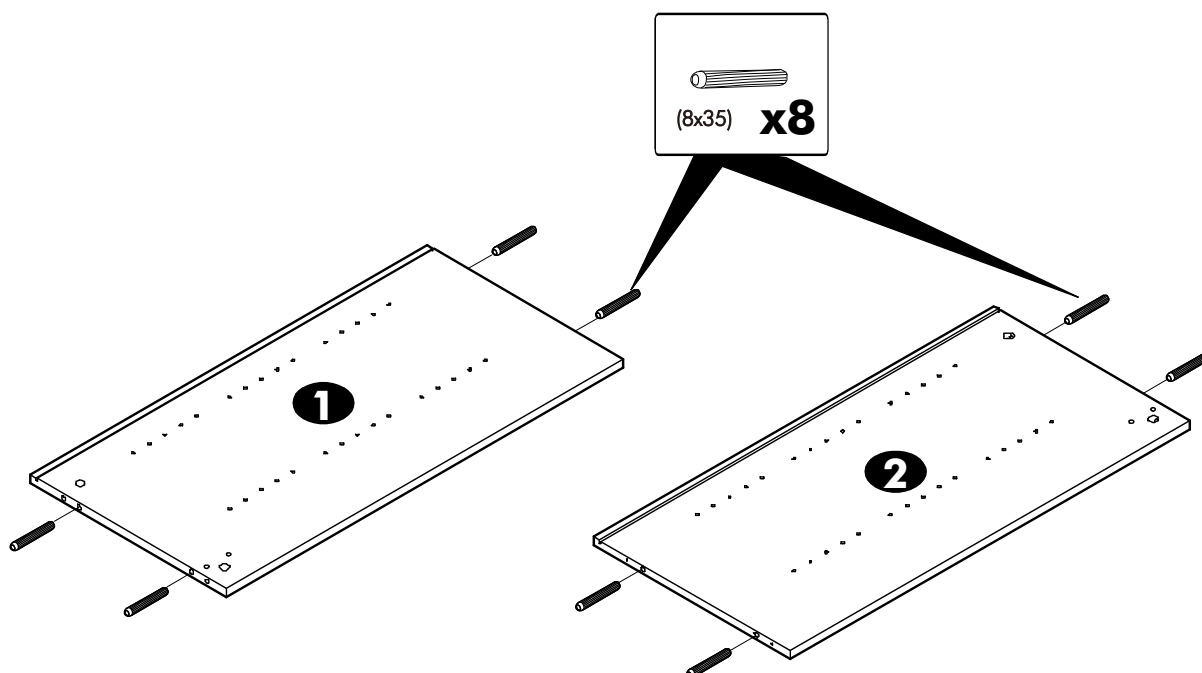


2.

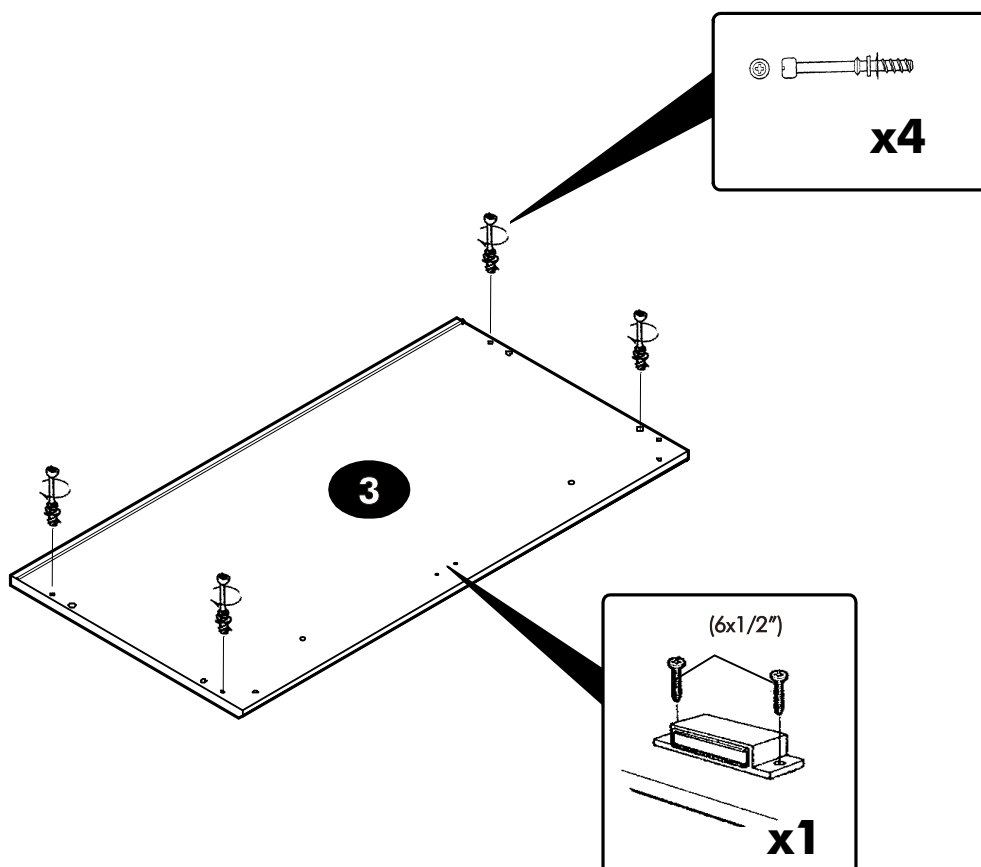


3.

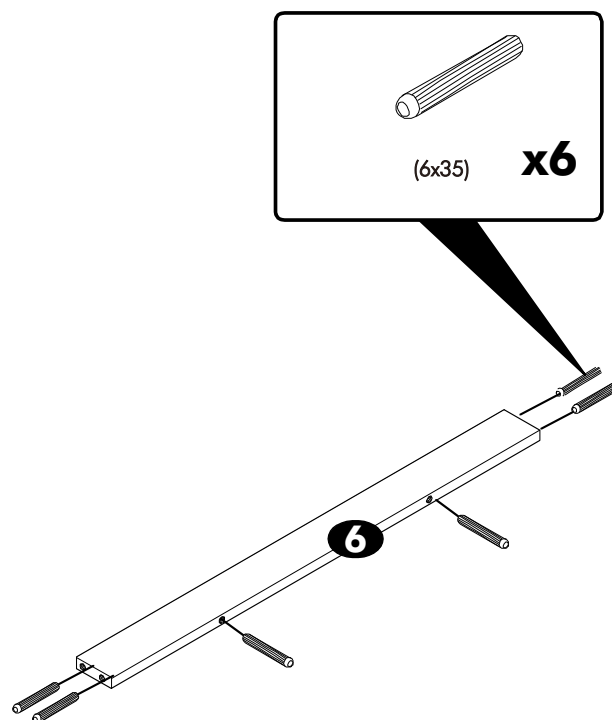


4.

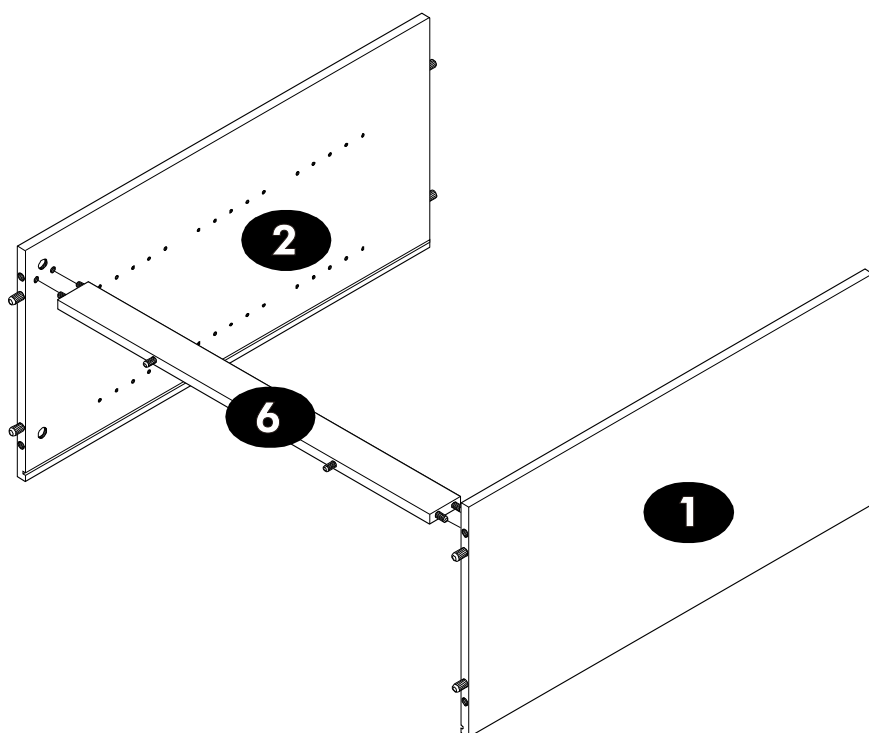


5.

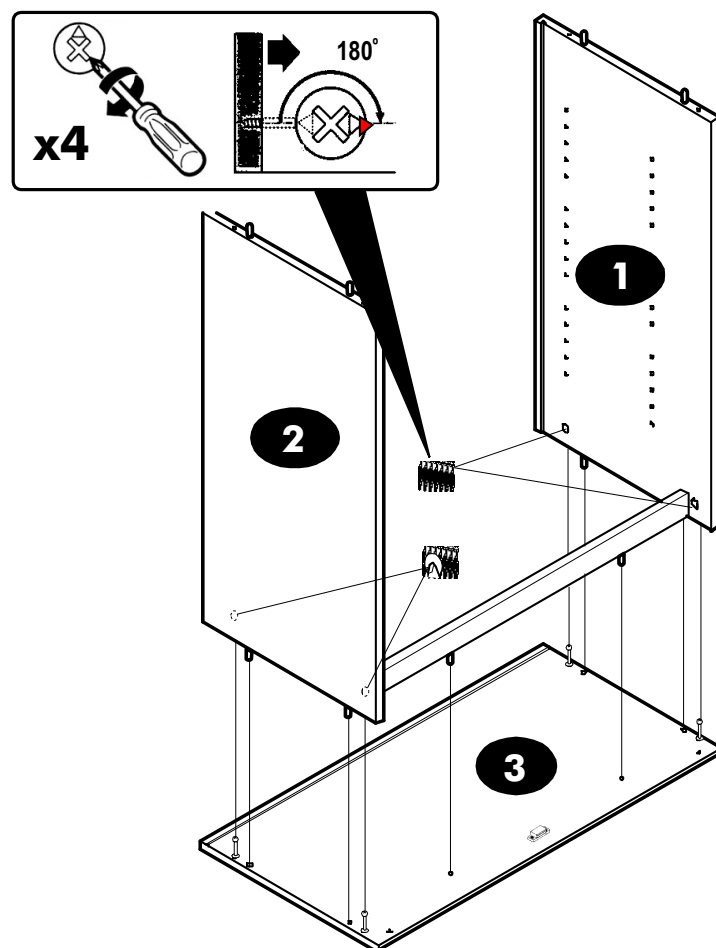


6.

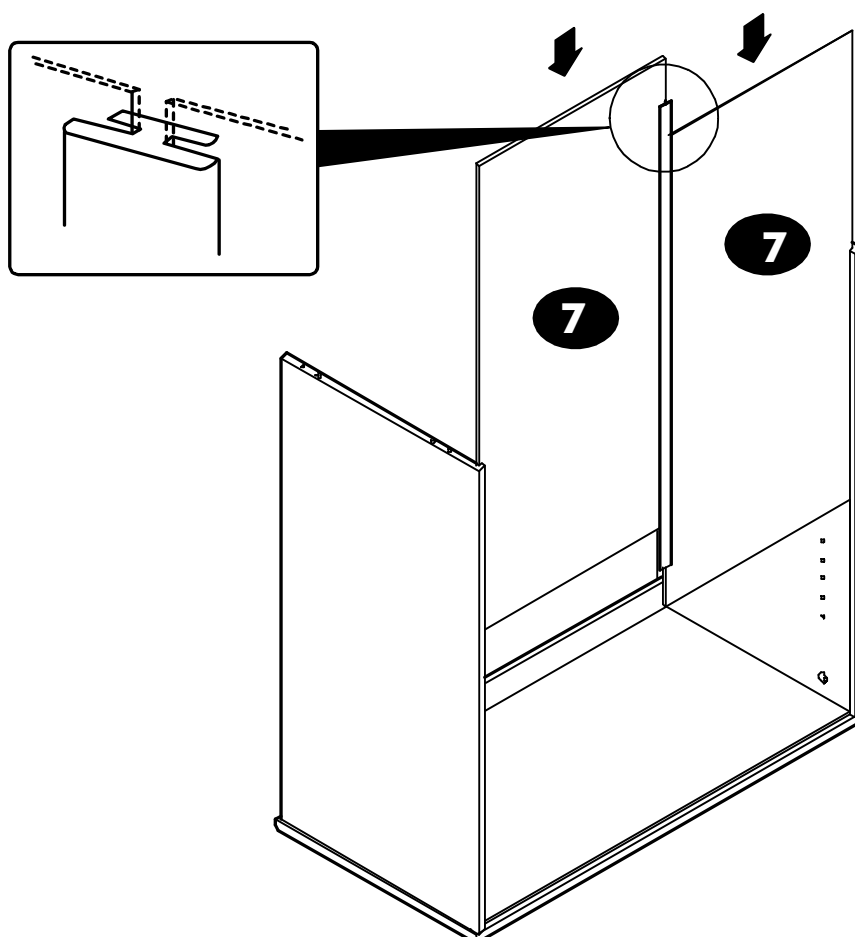


7.

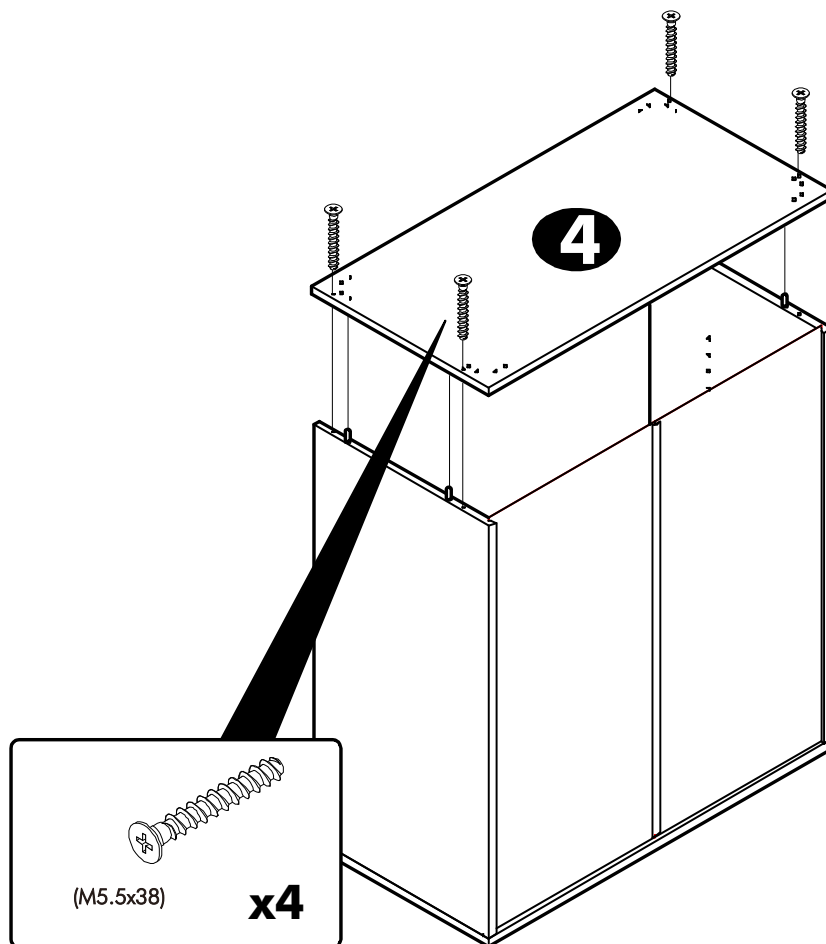


8.

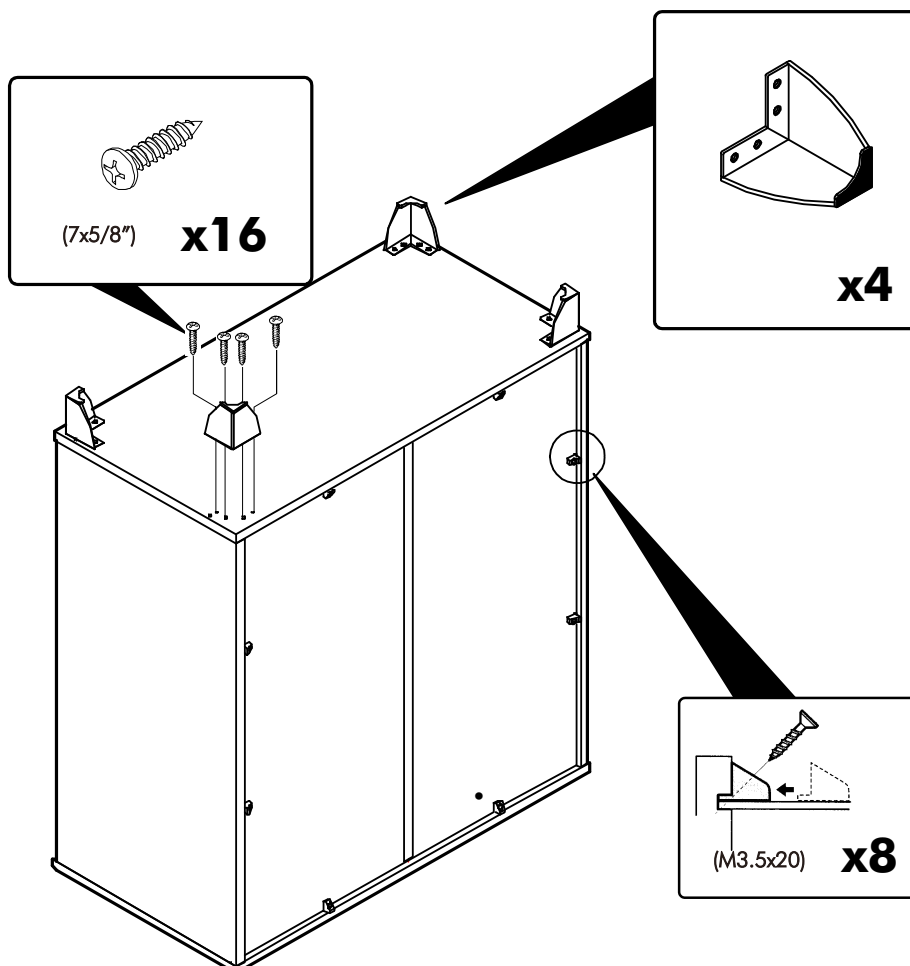

9.

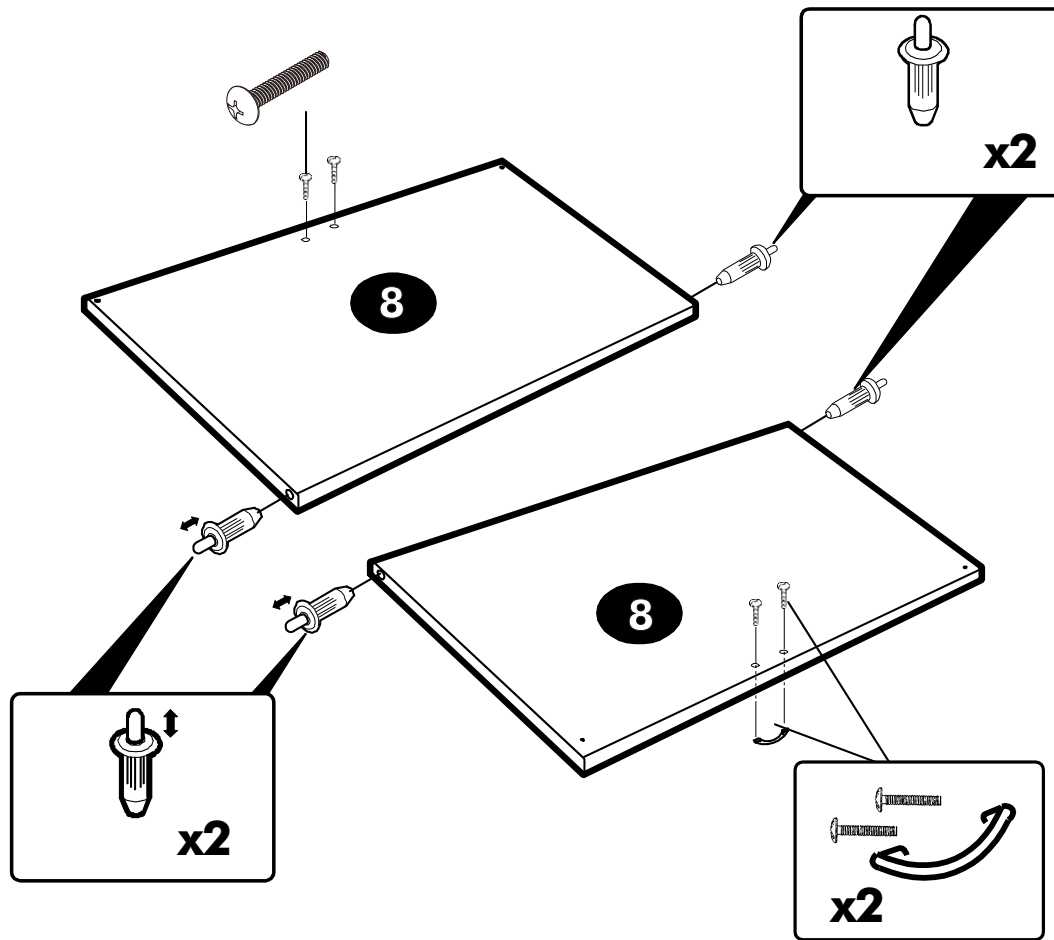

10.

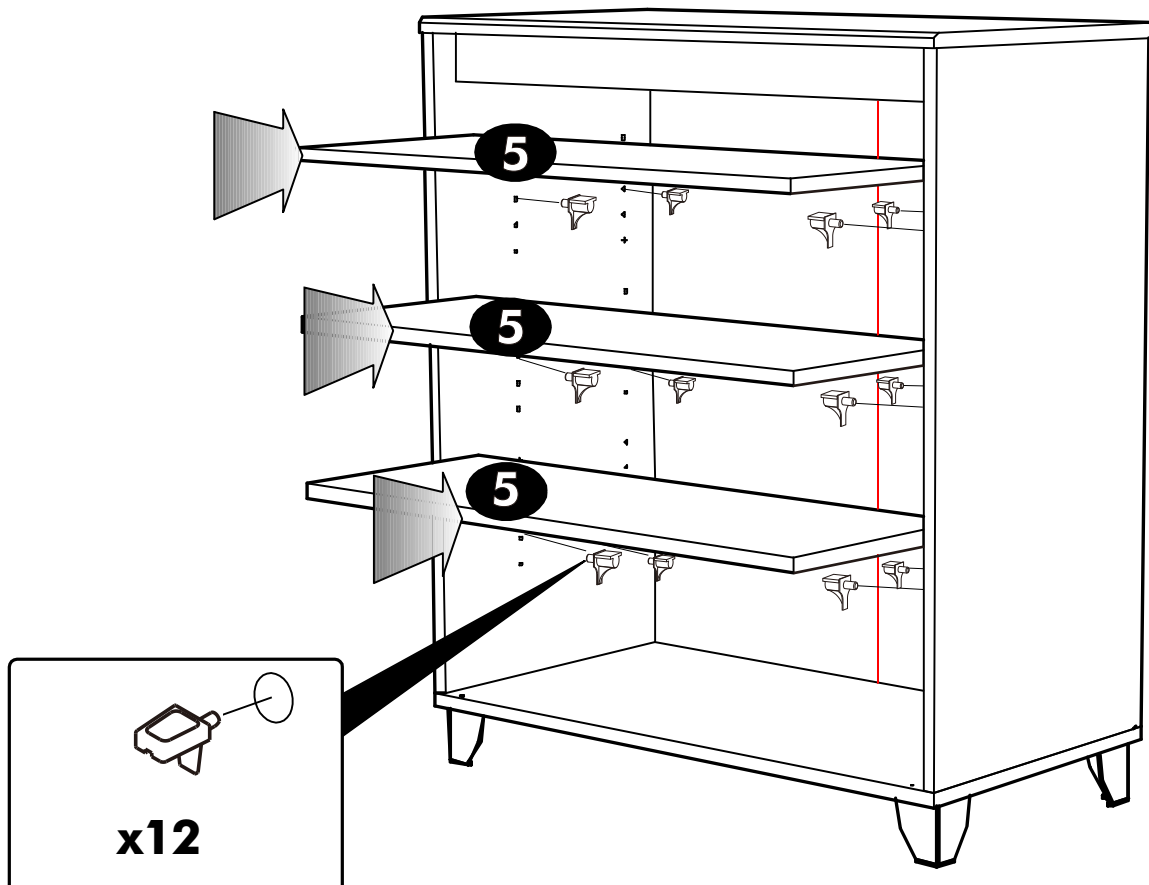

11.

