


# BERLIN

**BED 5 ft.**

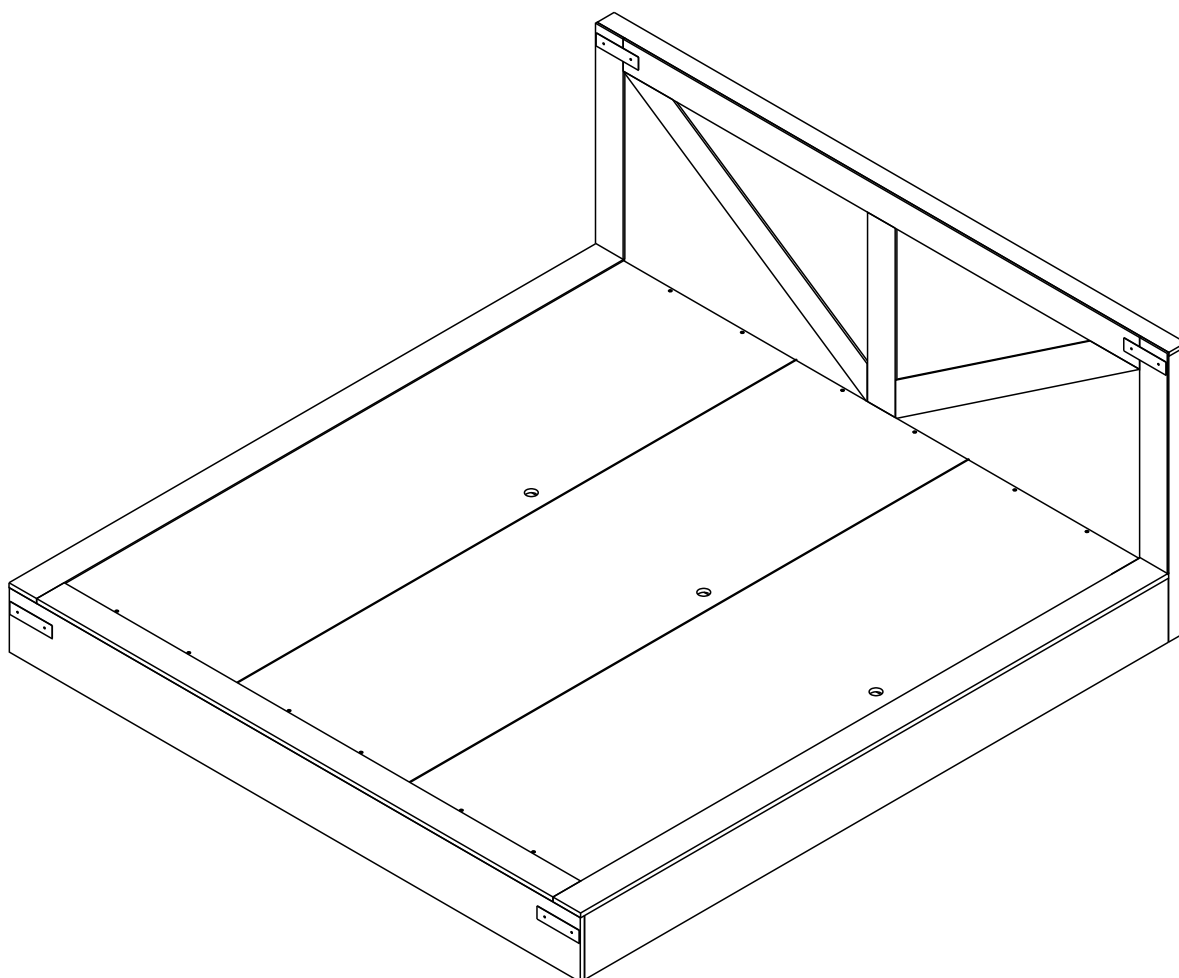

# CONNECT SYSTEM

1

2

(Connecting bolts)

3

| WHEN FITTING CAMS<br>ENSURE STARTING POSITION IS CORRECT<br>BEFORE YOU INSERT CONNECTING BOLT<br>TURN CLOCKWISE UNTIL SECURE |                |              |
|------------------------------------------------------------------------------------------------------------------------------|----------------|--------------|
| ✓                                                                                                                            |                | ✗            |
| ↑                                                                                                                            | <b>CORRECT</b> | <b>WRONG</b> |

M4x16mm.

OUT

IN

M4x16mm.

i

40mm.

EQ

M4x16mm.

OUT

IN


M4x16mm.

40mm.

EQ

# HARDWARE


## -BODY SET



**x 8**




**x 8**



#8x35

**x 20**

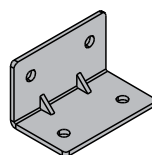


**x 12**




No.1

**x 3**




#8x50


**x 4**



**x 33**

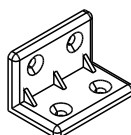

**x 49**



**x 2**




M4x16mm.

**x 262**



M4x30mm.

**x 9**



M4x40mm.

**x 12**



M3.5x13mm.(BLACK)

**x 4**




M4x16mm.

**x 51**


## ASSEMBLY

-BODY SET


1.

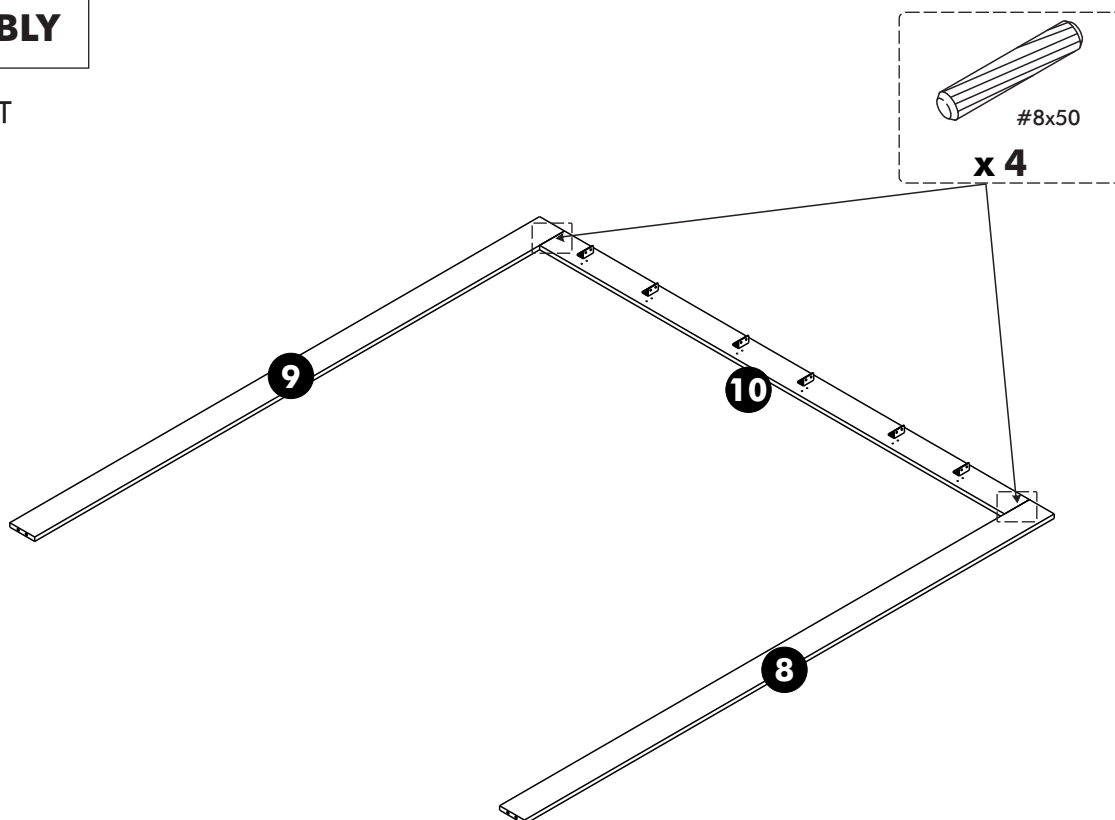


2.

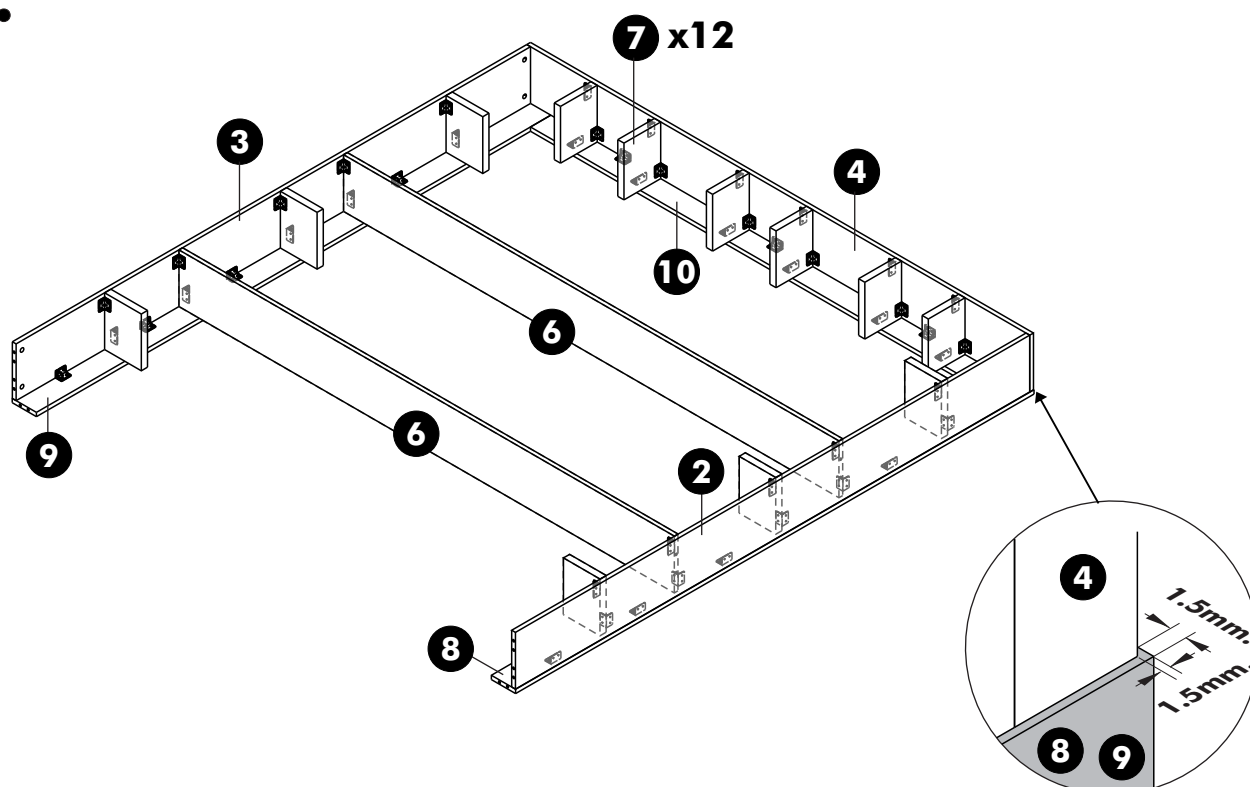


3.

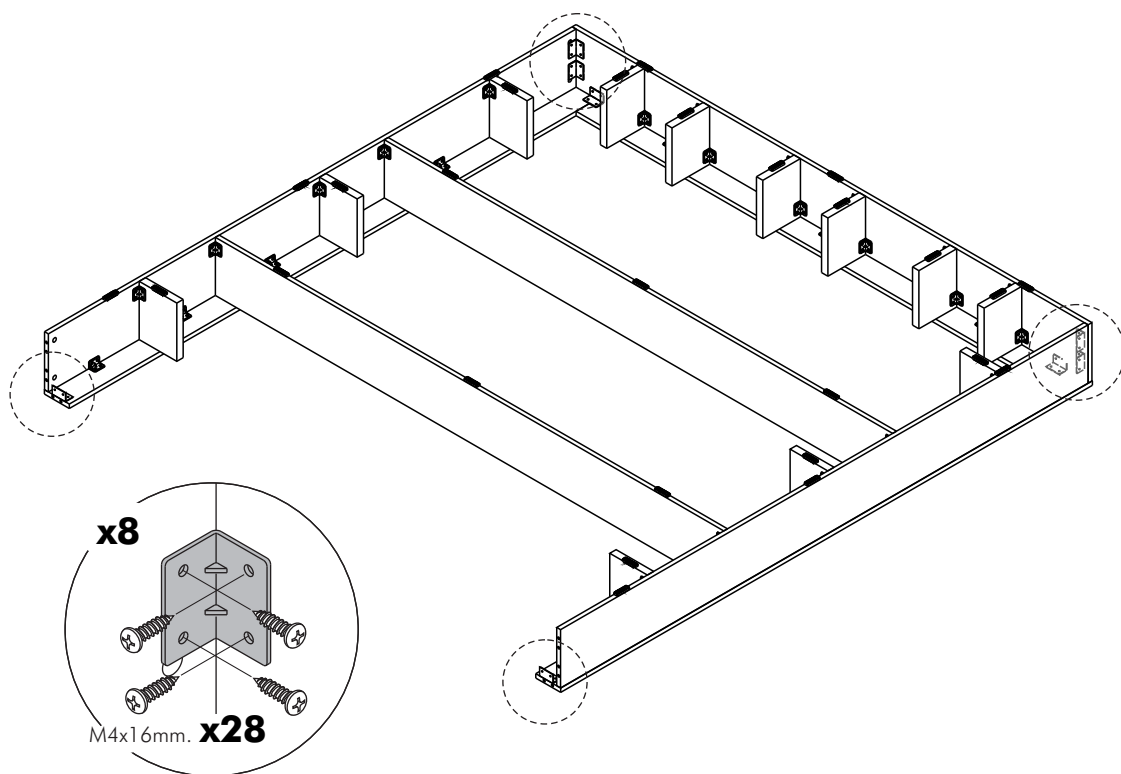

4.

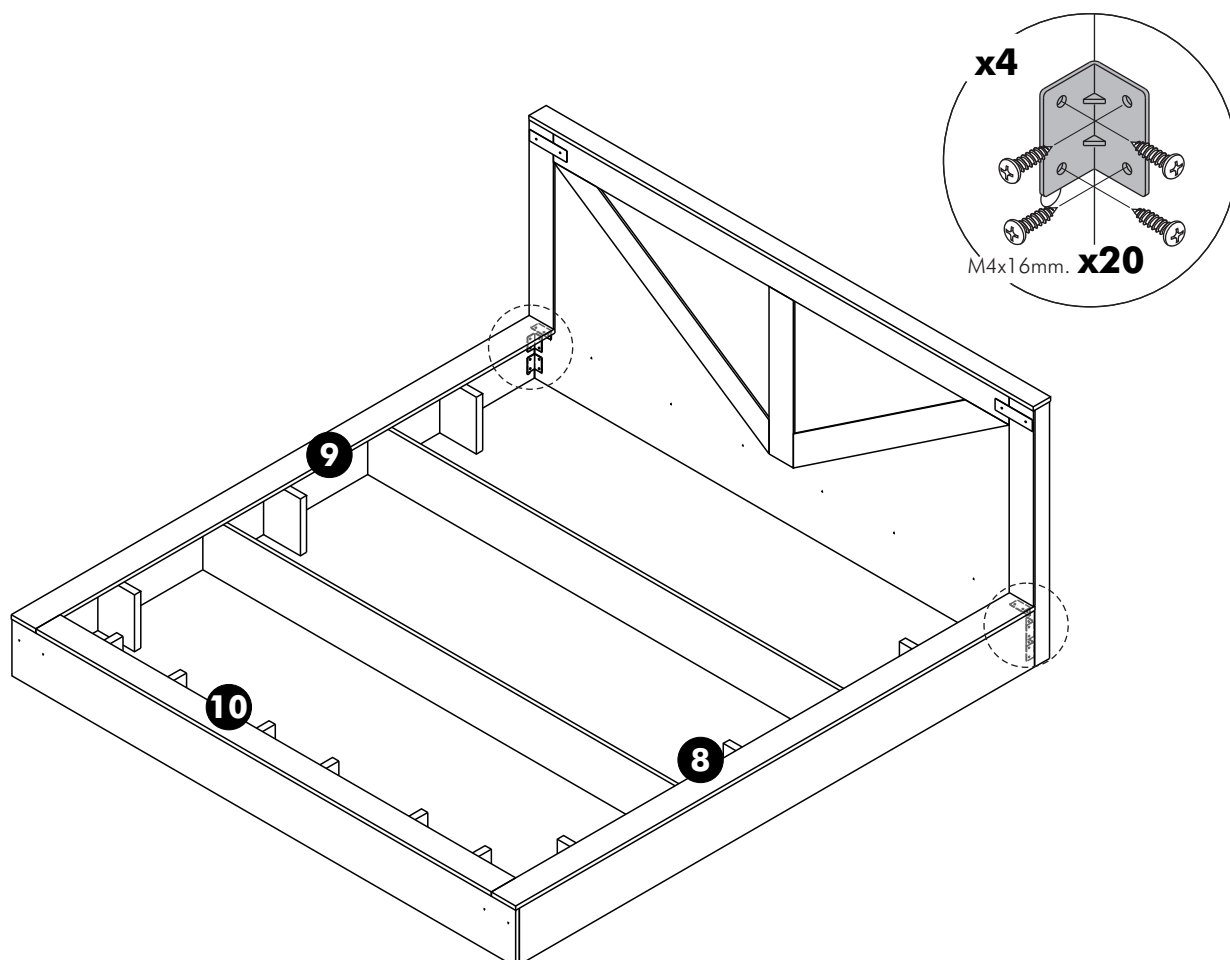

5.

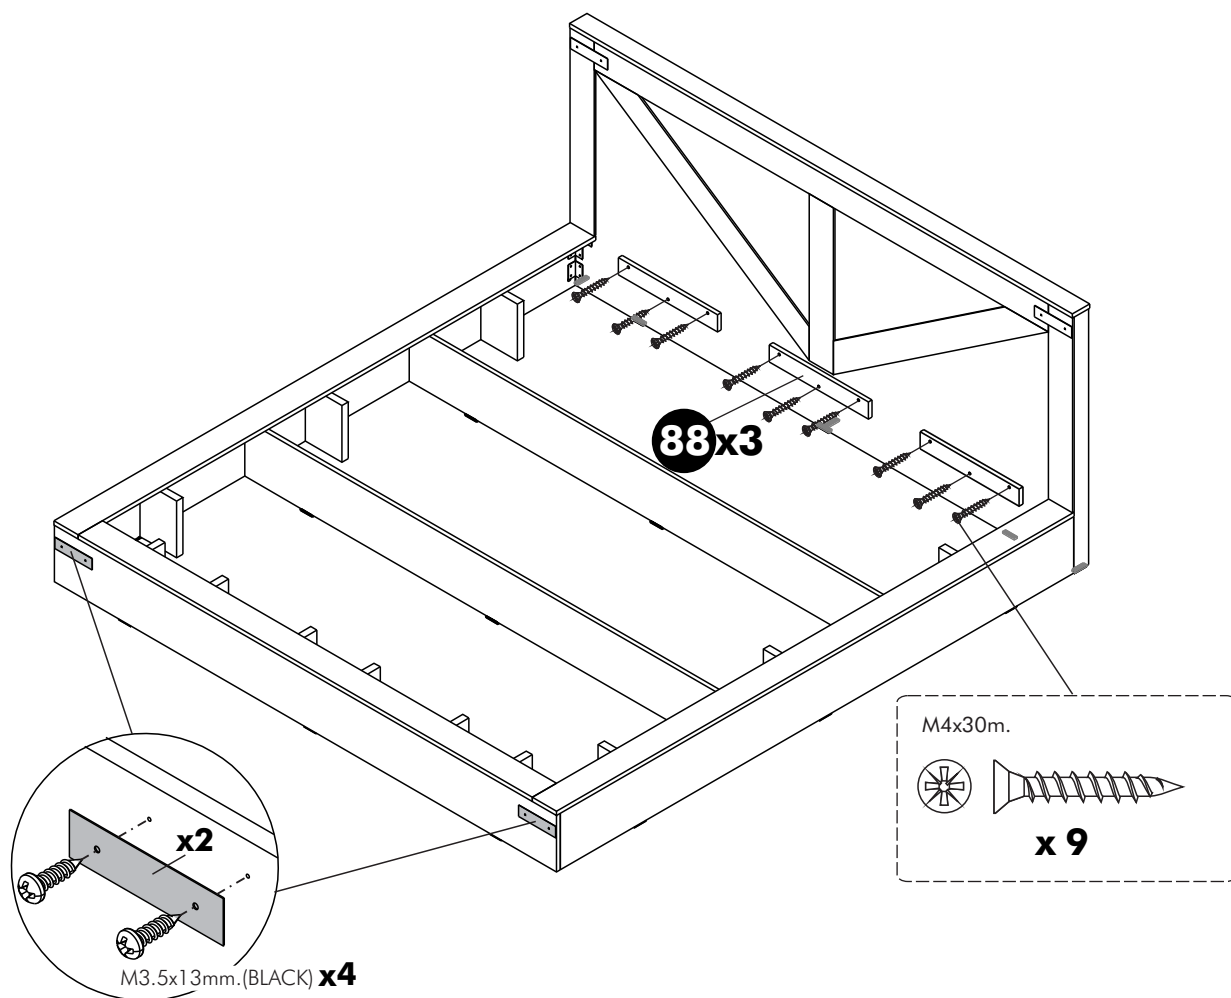

6.

