


# VAVA-P

**Wardrobe slide 120 cm.**

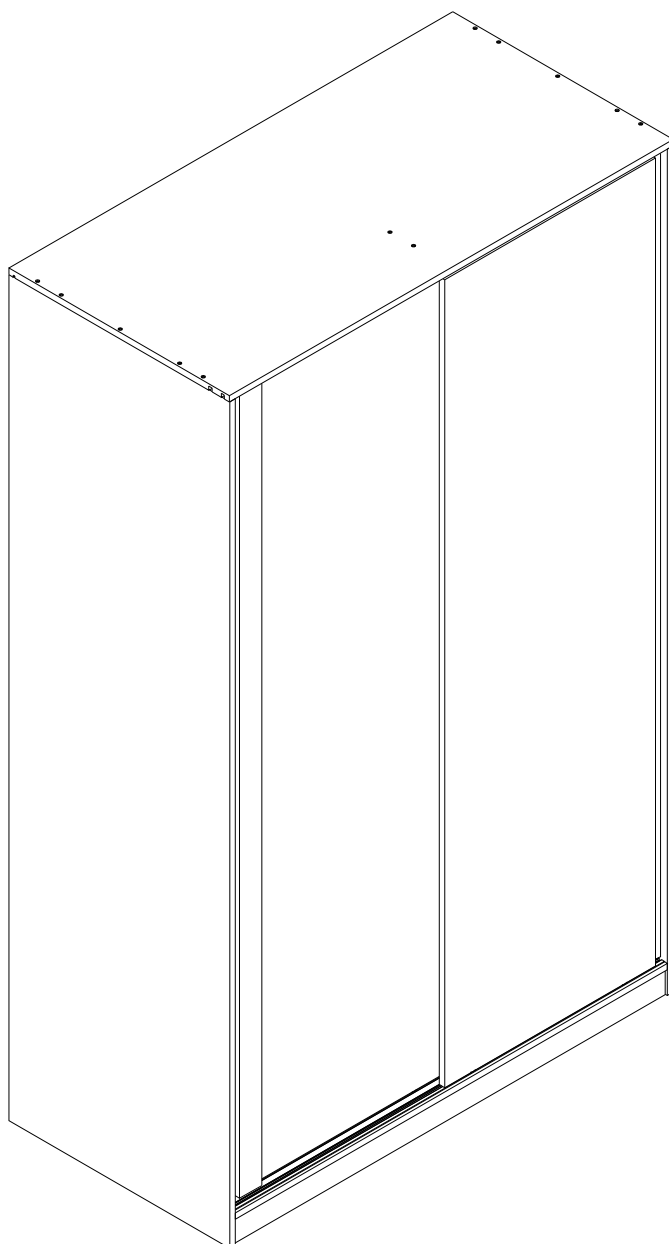

# CONNECT SYSTEM

**1**

**3**

**2**

(Connecting bolts)

**WHEN FITTING CAMS**  
 ENSURE STARTING POSITION IS CORRECT  
 BEFORE YOU INSERT CONNECTING BOLT  
 TURN CLOCKWISE UNTIL SECURE

✓		✗		✗		✗
↑						
<b>CORRECT</b>			<b>WRONG</b>			

M4x16mm.

**i**

40mm.

☹️


☒

EQ




😊

☑️

M4x16mm.



M3.5x20mm.

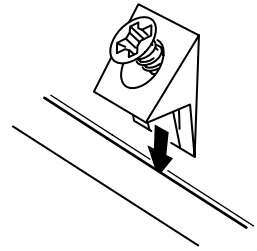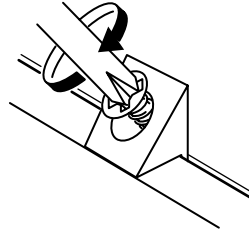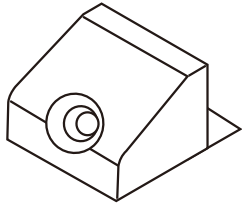

**x2**



**The Standard for identifying which mounted safety fall protection fitting to use** **Note : That children's products must be installed with all anti-falling fittings.**

■ Mounted fall protection fittings



■ Category : Cabinet with open doors



■ Category : Chest of drawers



■ Category : Sliding door cabinet / Open cabinet



# HARDWARE

## -BODY SET



**x 7**




**x 7**




#8x35


**x 12**

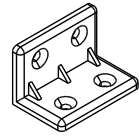


**x 15**




**x 12**



**x 4**



**x 1**

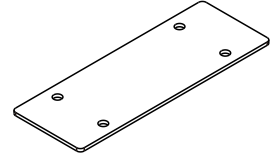


**x 5**




**x 8**



**x 3**



**x 2**

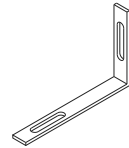

**x 2**



M4x16mm.

**x 84**



M4x13mm.

**x 20**



M3.5x20mm.

**x 8**



M4x45mm.

**x 6**



M3.5x13mm.

**x 8**



M4x13mm.

**x 18**



M4x50mm.

**x 18**



M4x16mm.

**x 2**



M5x50mm.


**x 2**




**x 4**

# HARDWARE

-DOOR SET

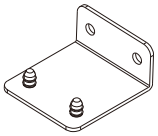


**x 2**



**x 4**



**x 4**



M4x13mm.

**x 24**



M4x25mm.

**x 20**



M4x13mm.

**x 4**




**x 8**




# ASSEMBLY

-BODY SET

1.

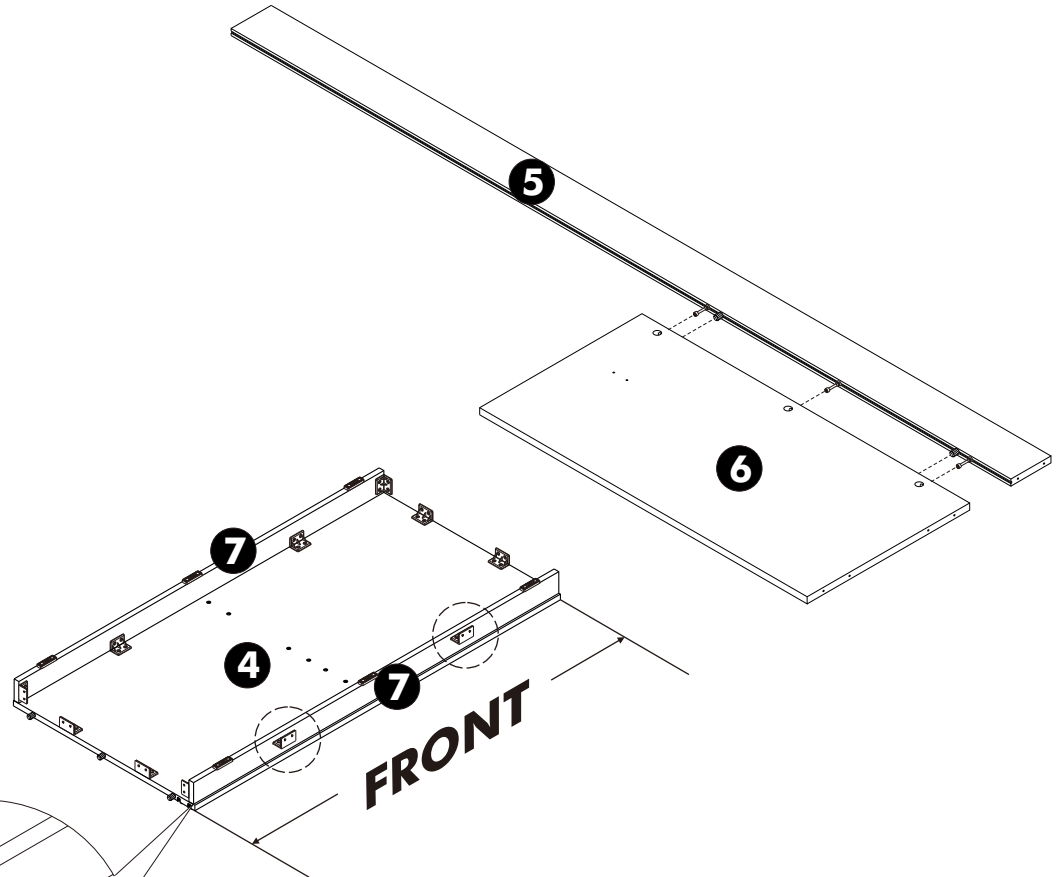


2.

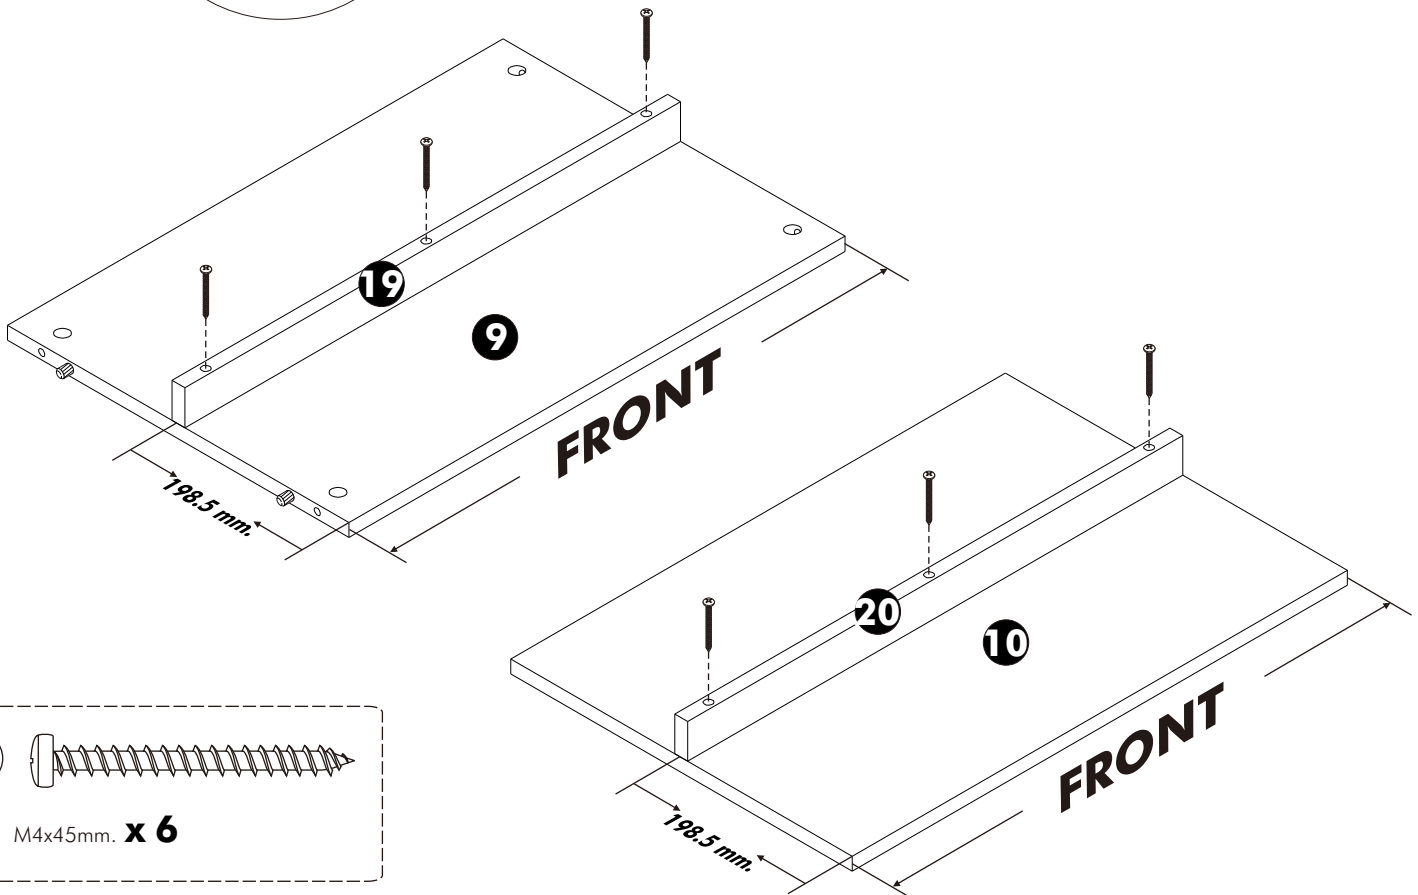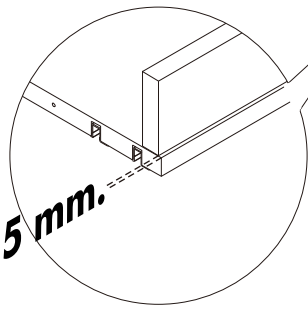


M4x45mm. **x 6**


**3.**

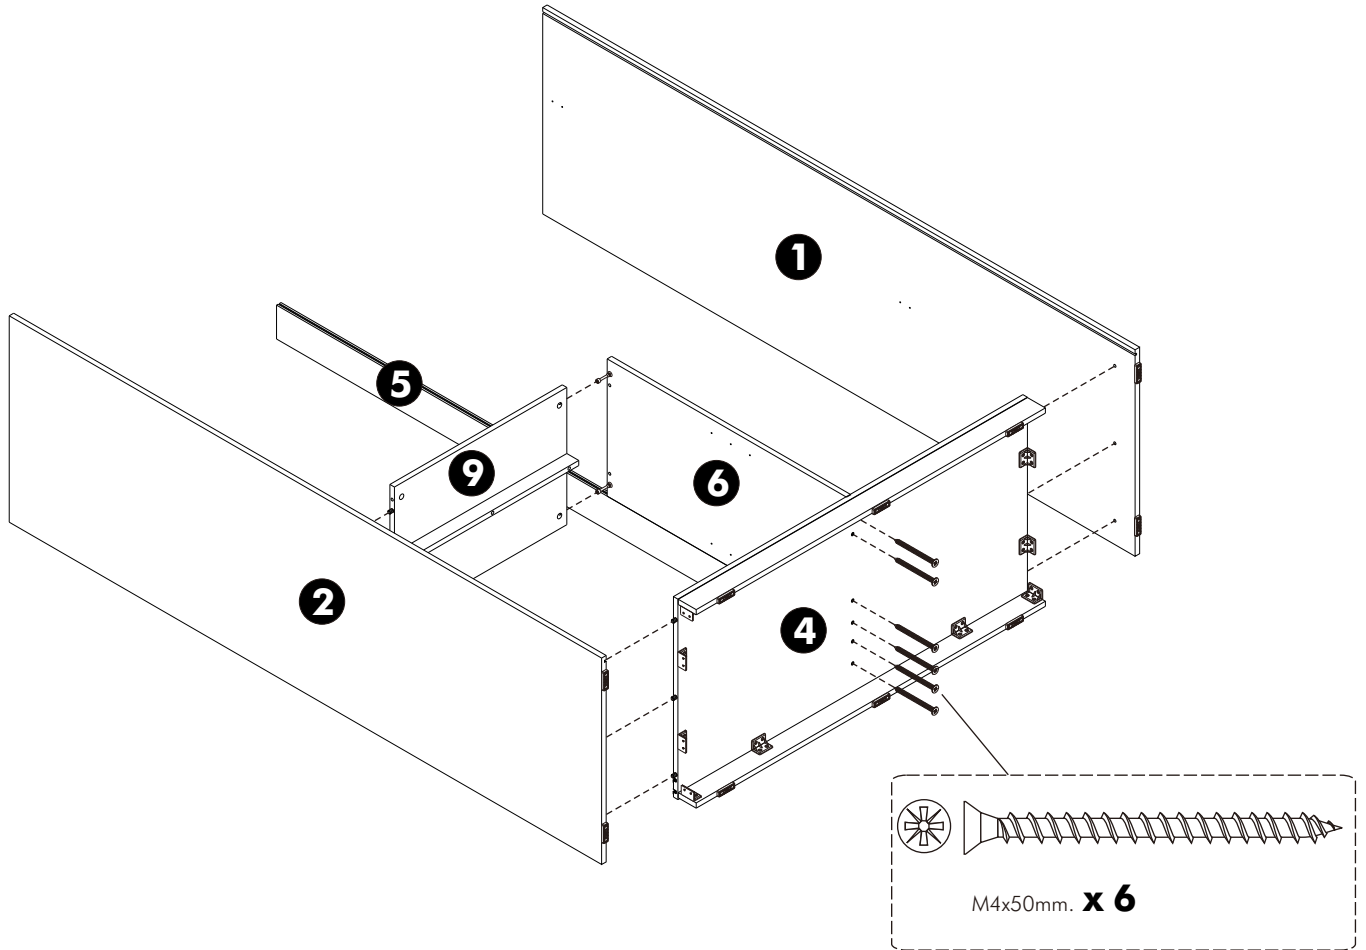


**4.**

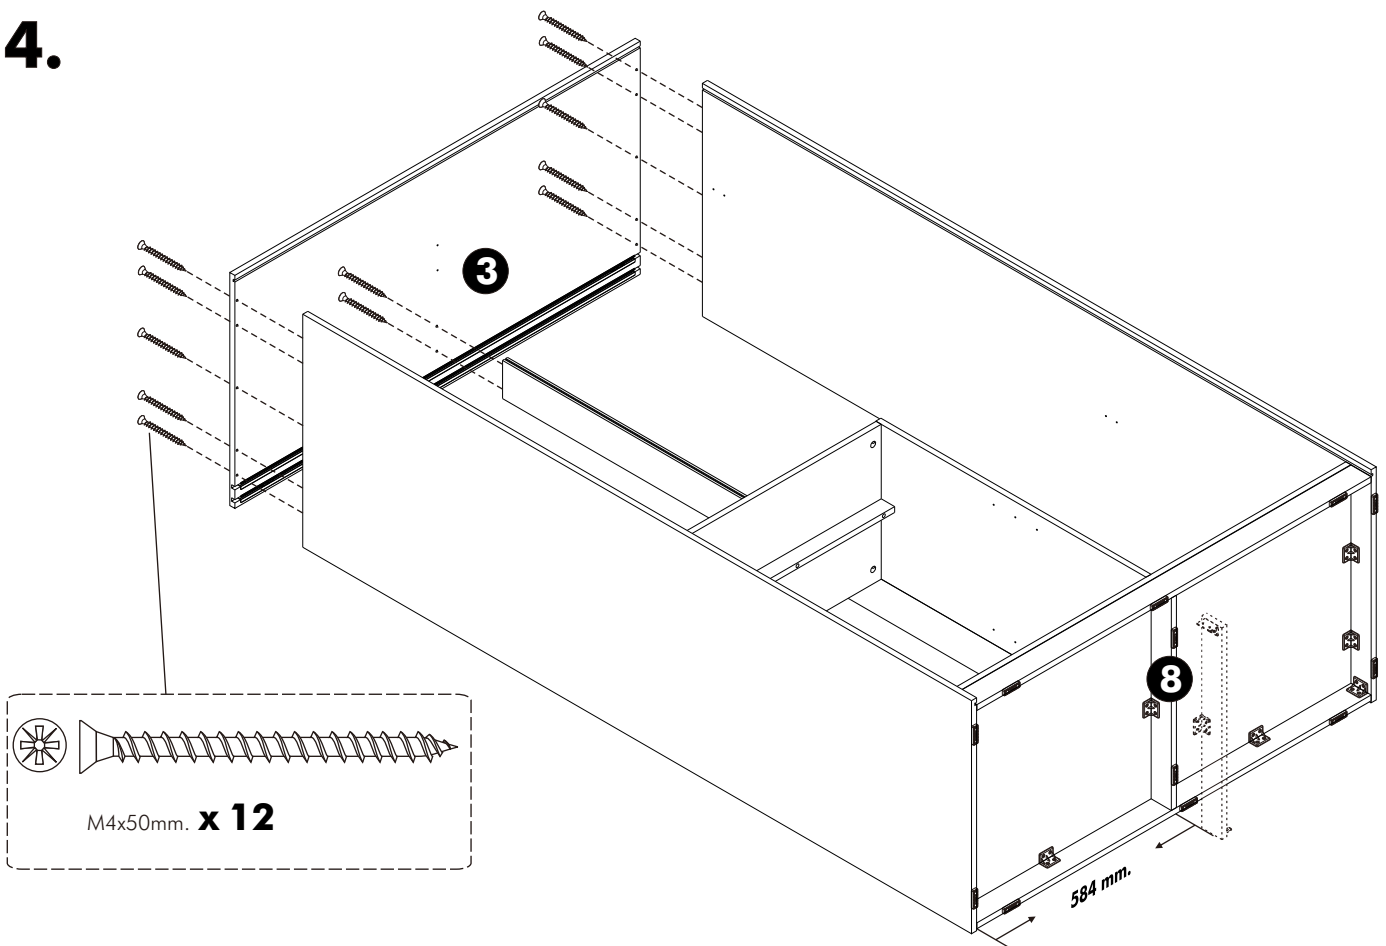







**5.**

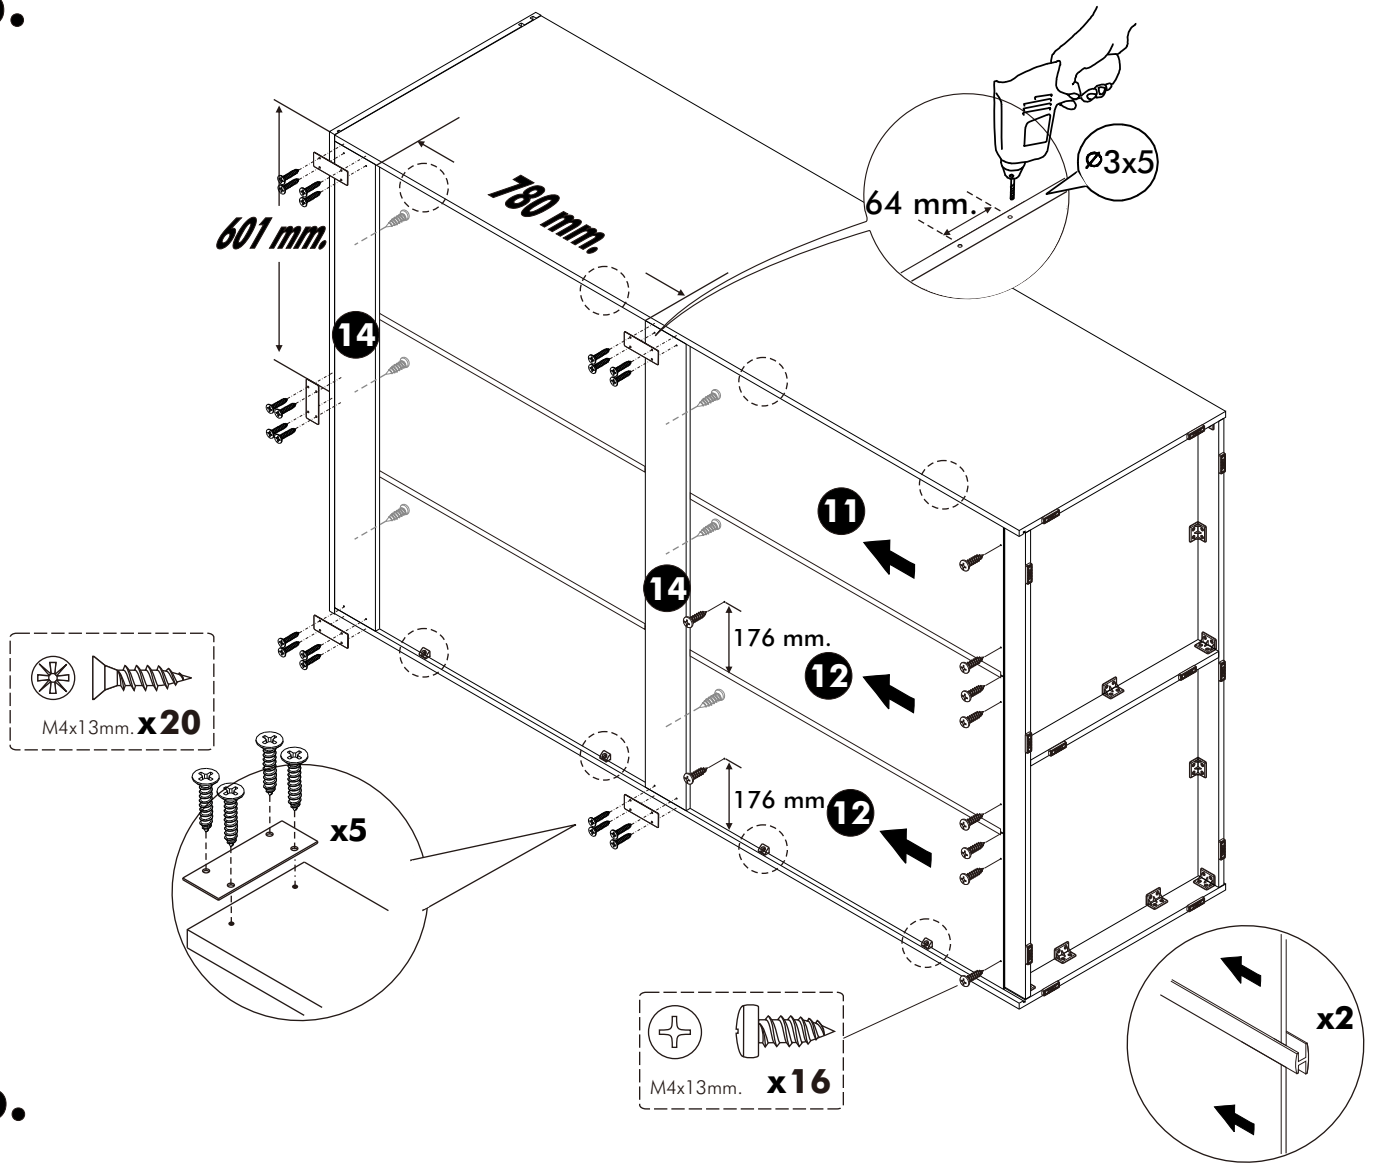

**6.**

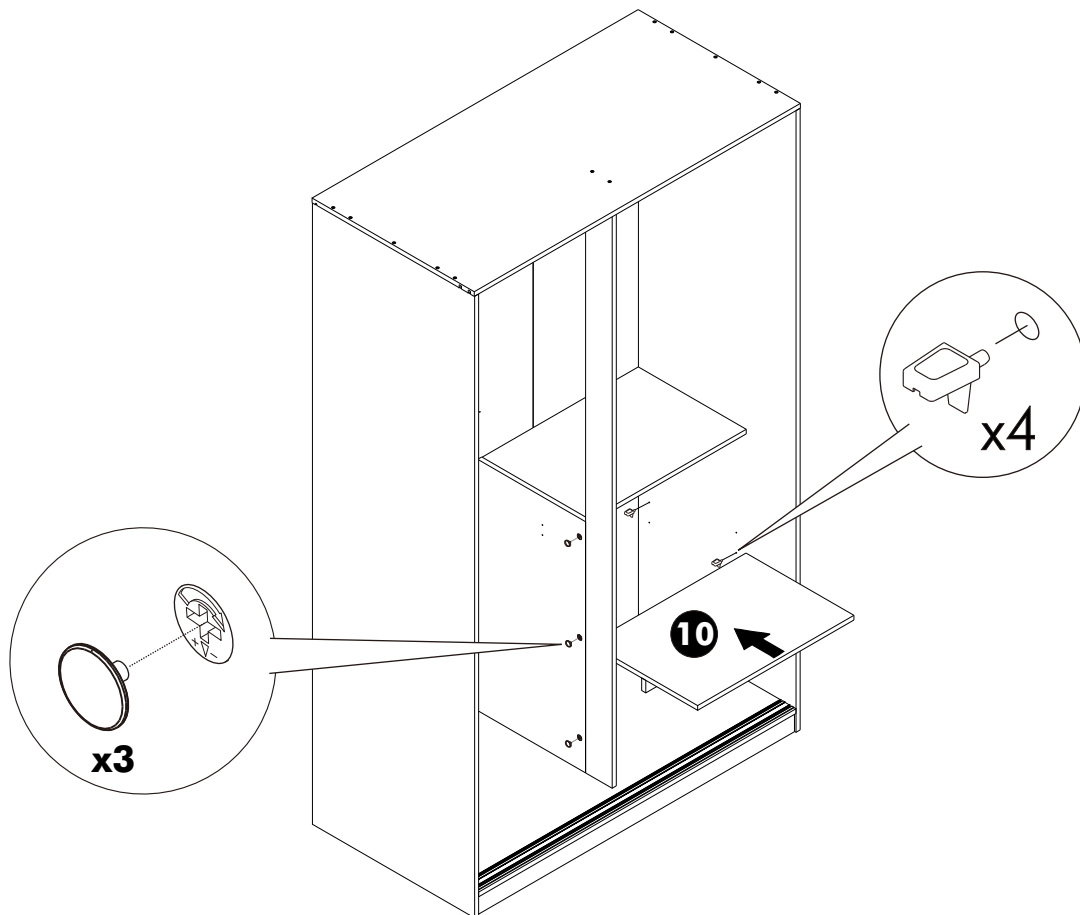







7.

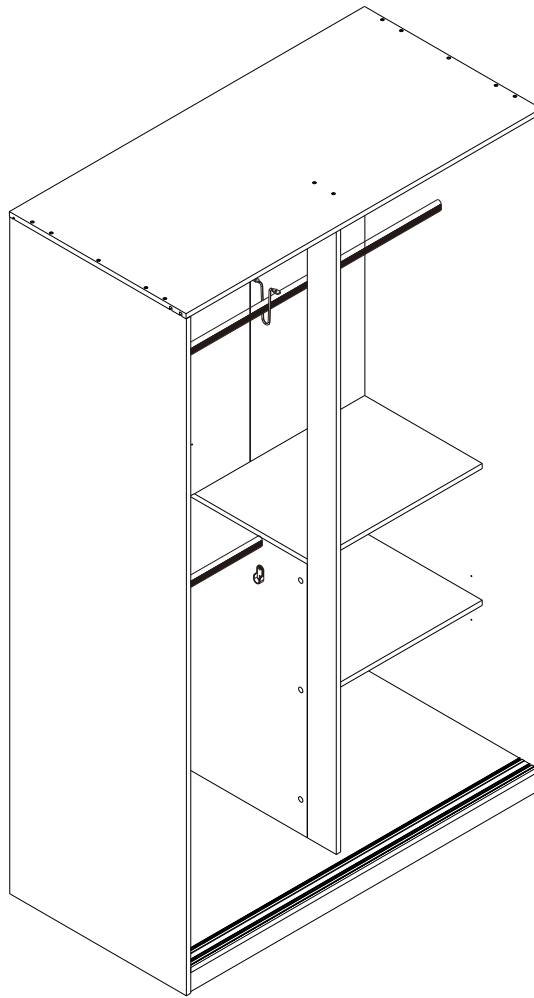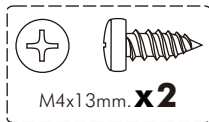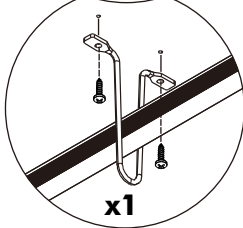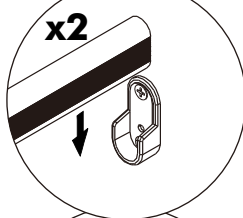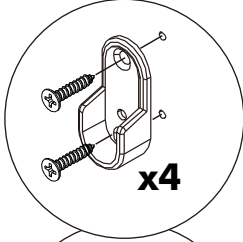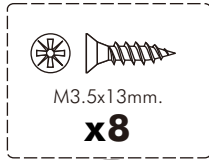

**ASSEMBLY**


8.

-DOOR SET

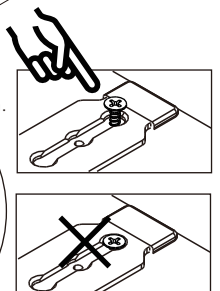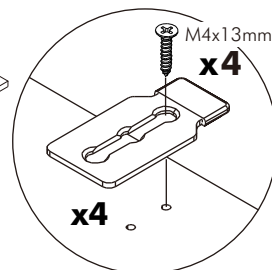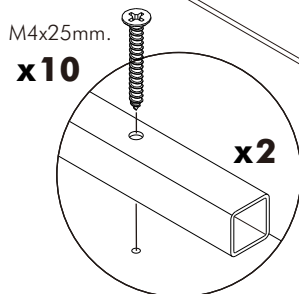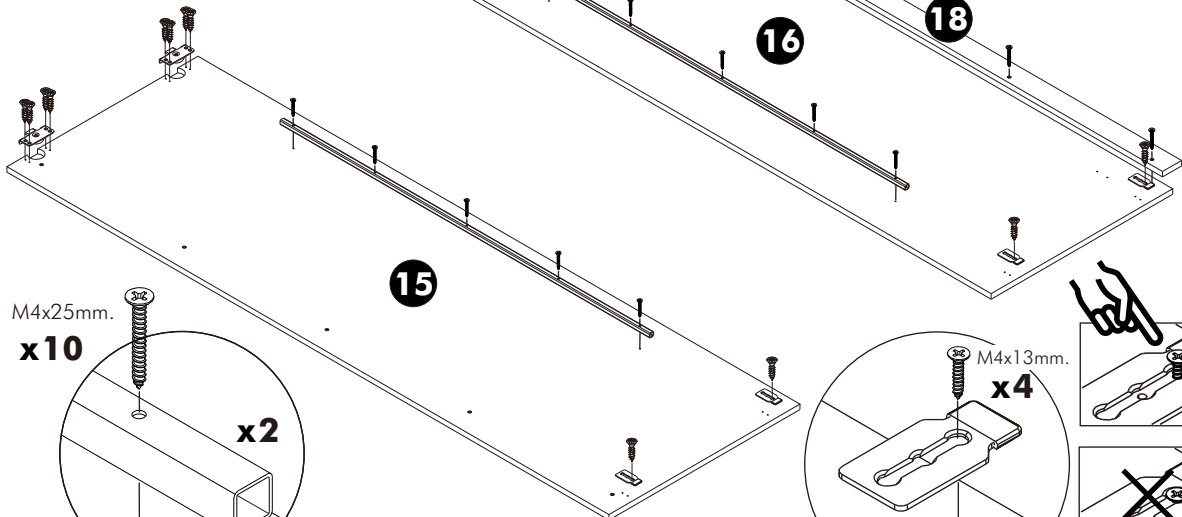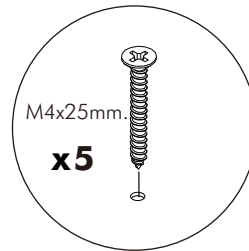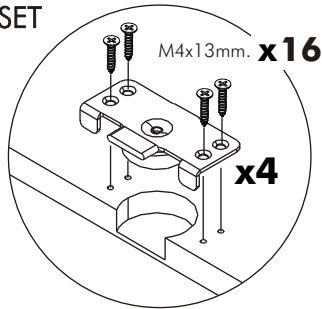




**11.**

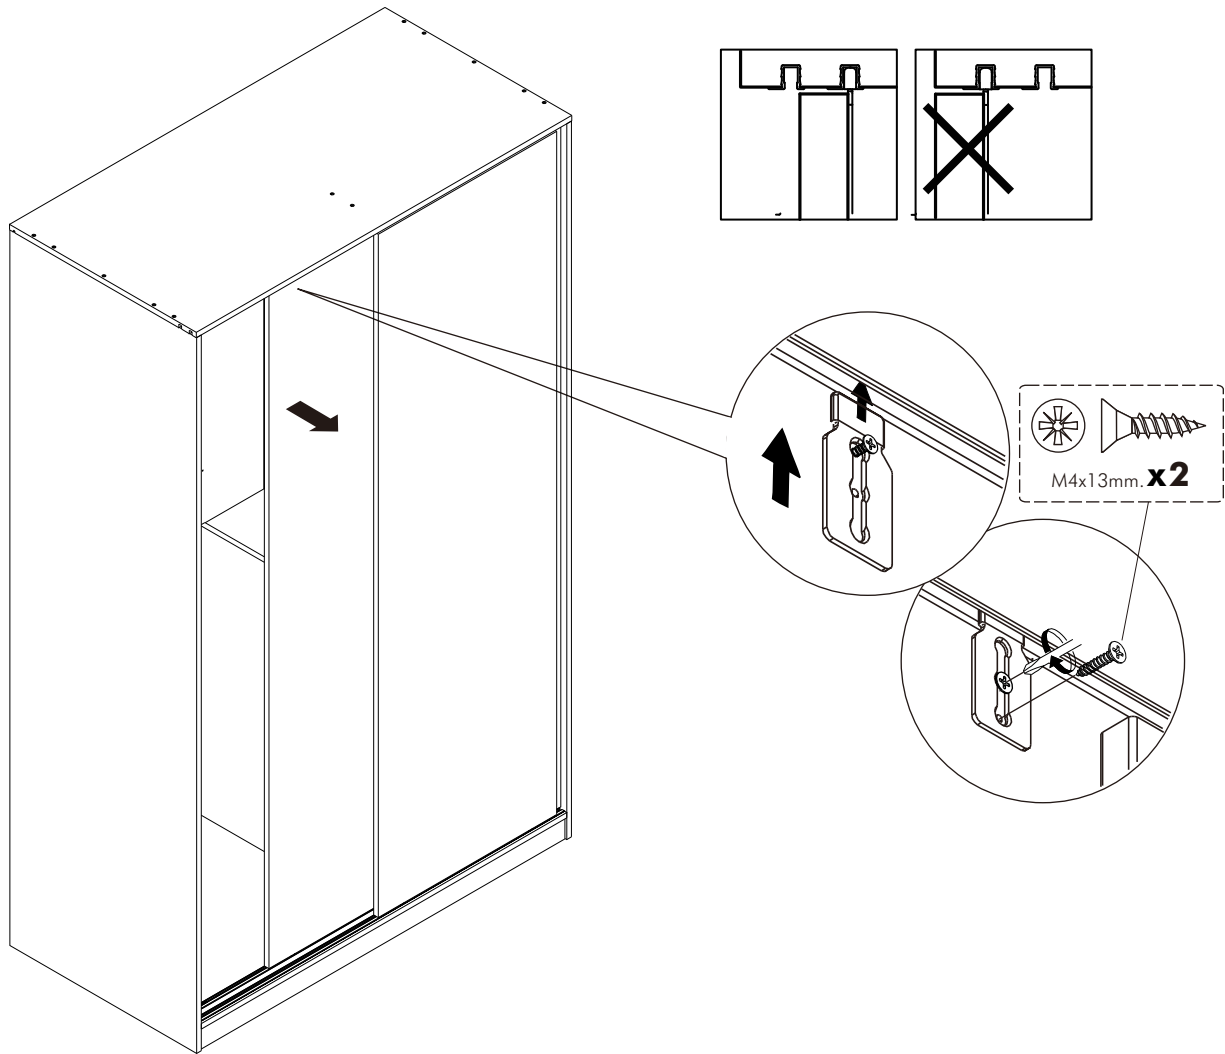

**12.**

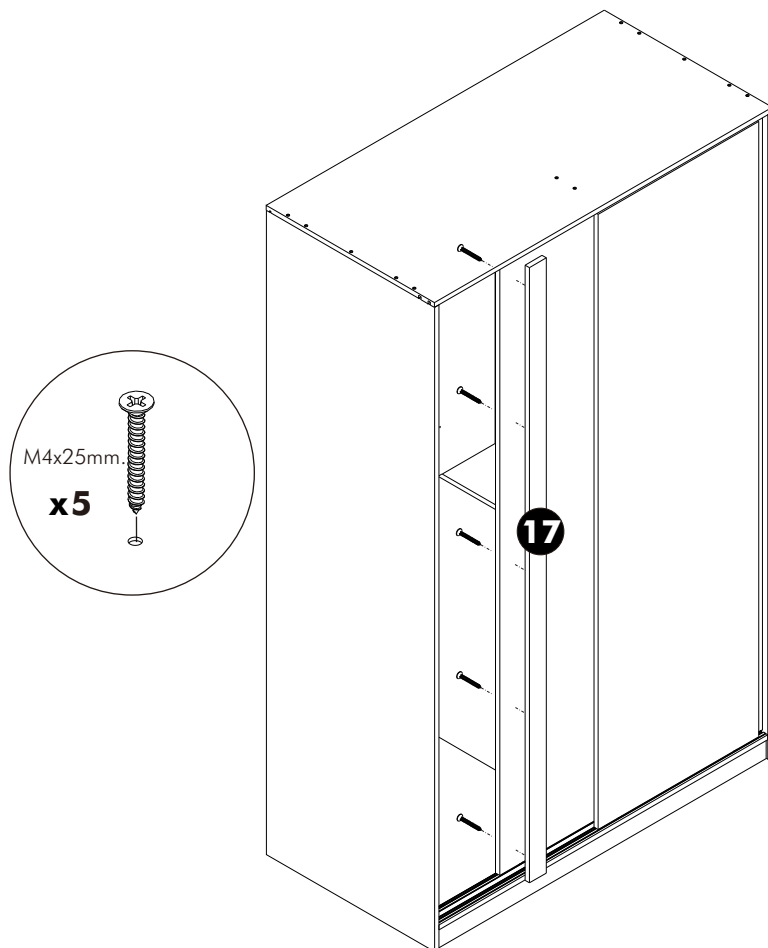

**13.**

