



SYDNEY

BED 5 ft.

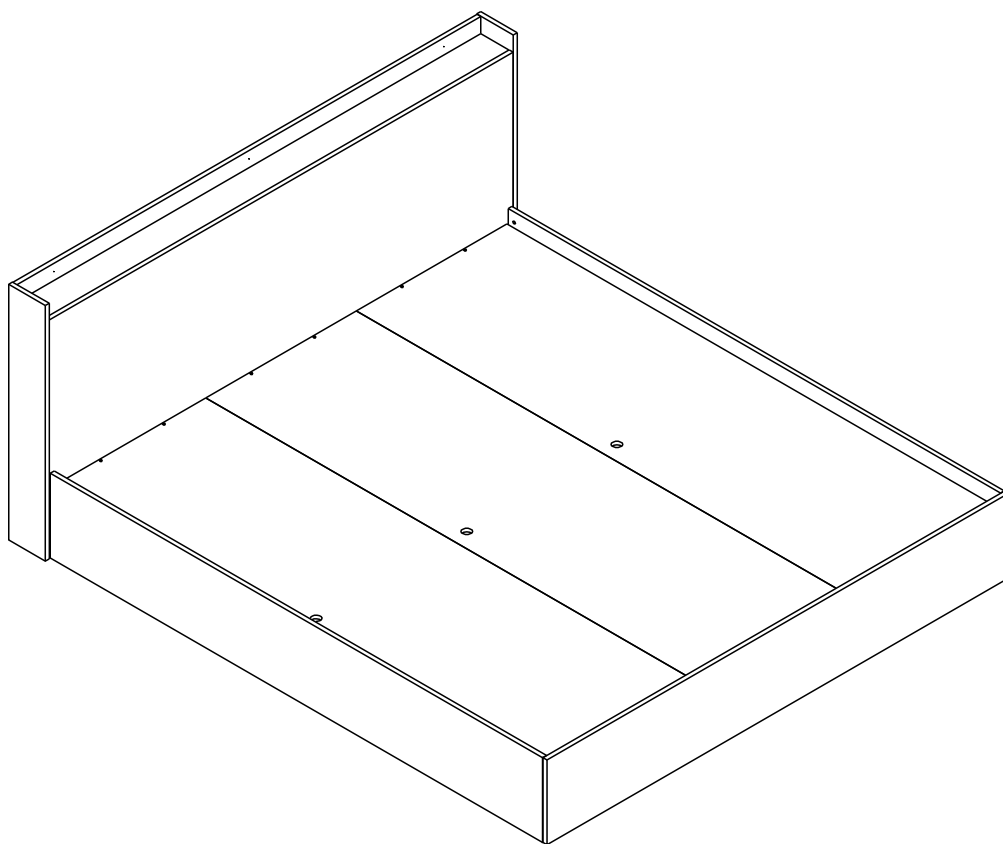


CONNECT SYSTEM


1

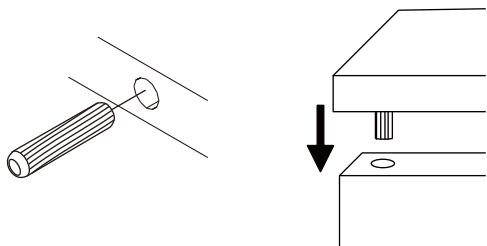



2

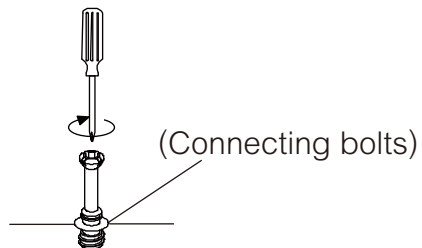



3

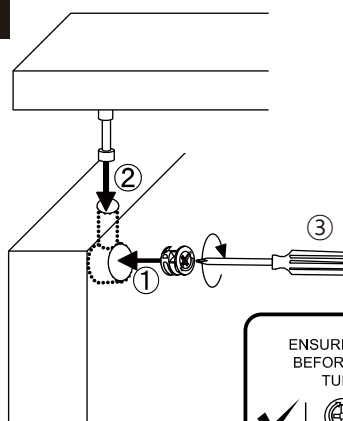


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

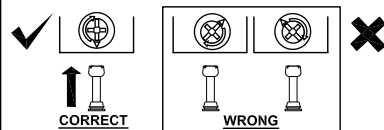

M4x16mm.

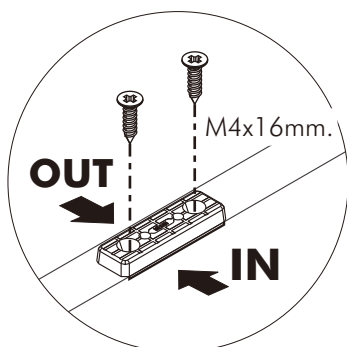



M6x45mm.





M6





M6

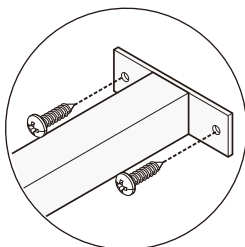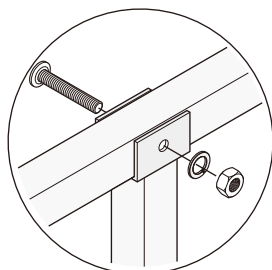




M4x16mm.

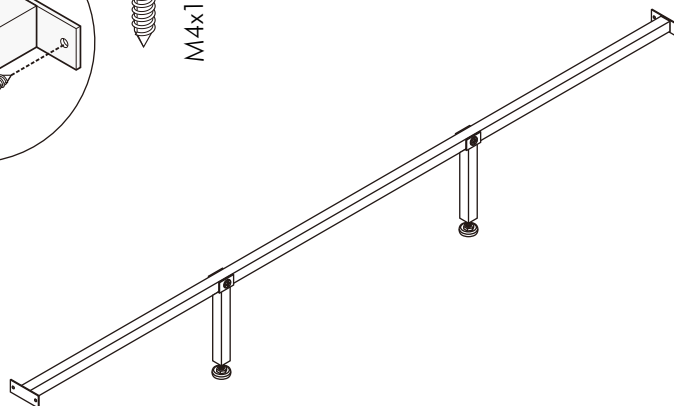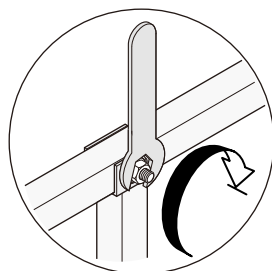

P+M4x16mm.

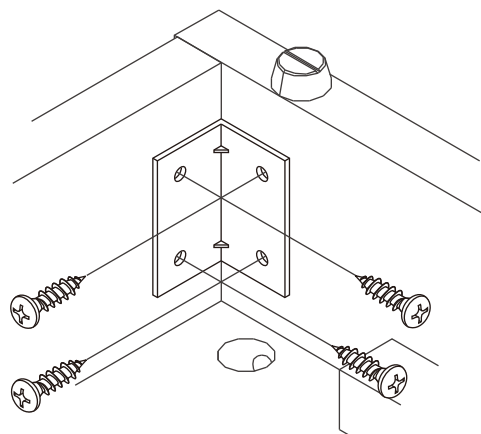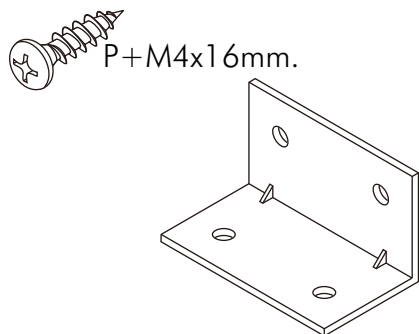


JBC+M6x60+CROSS

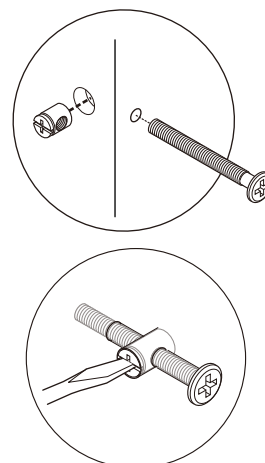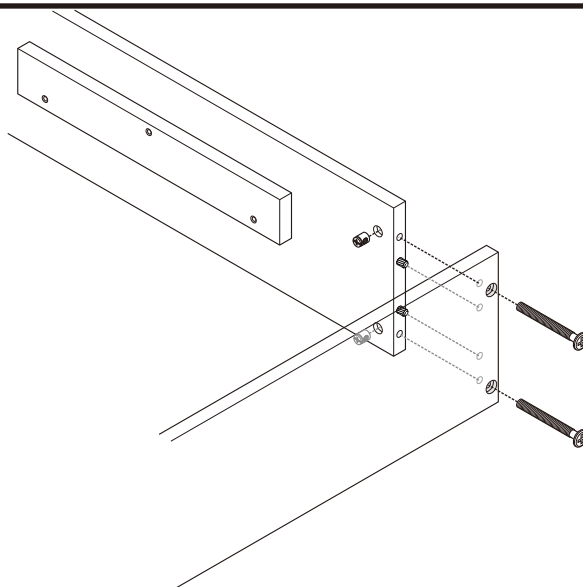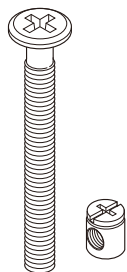

HARDWARE

-BODY SET




x 4




16mm.

x 4



#8x35

x 8

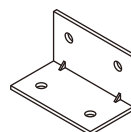


x 8



No.1

x 3



x 15



M4x16mm.

x 30




M4x30mm.

x 48




M4x16mm.

x 43



TF+M6x45

x 4

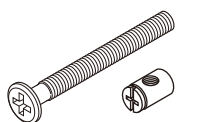

JCB+ M6x60

x 4



#M6

x 4




#M6

x 4


ASSEMBLY

-BODY SET

1.

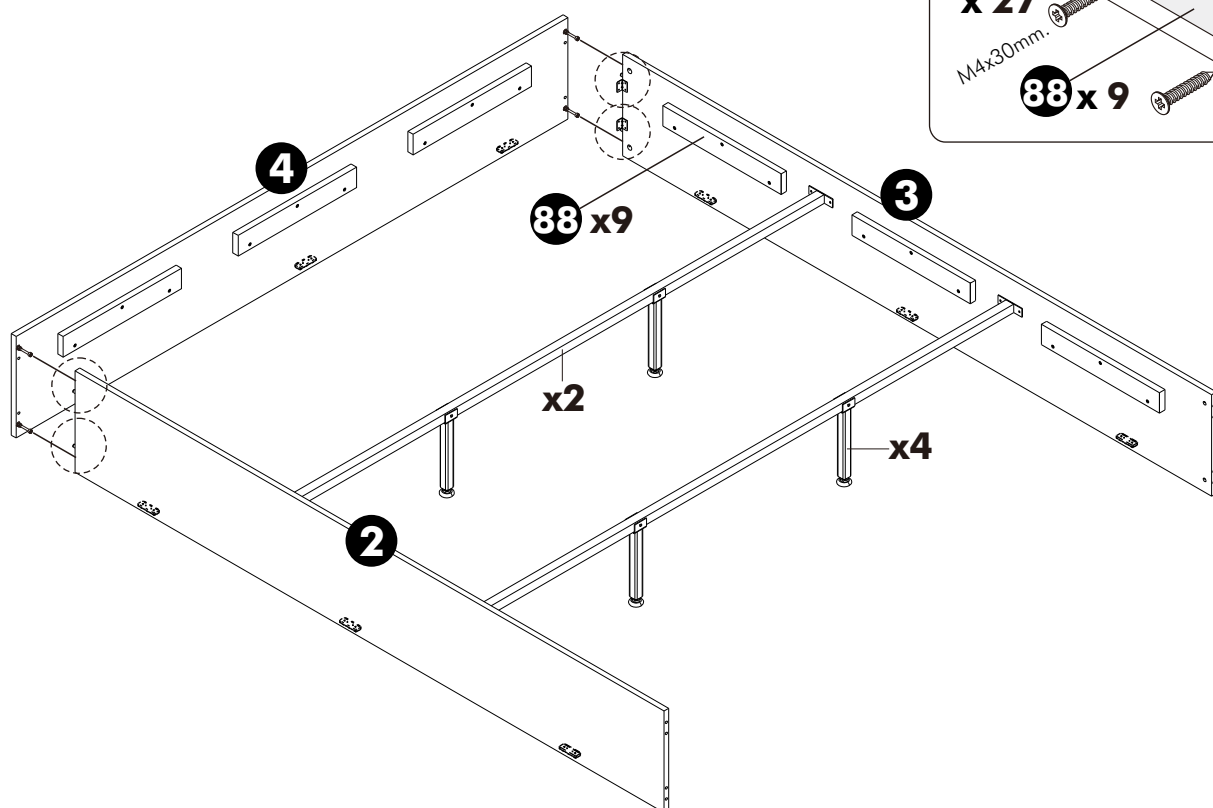

2.

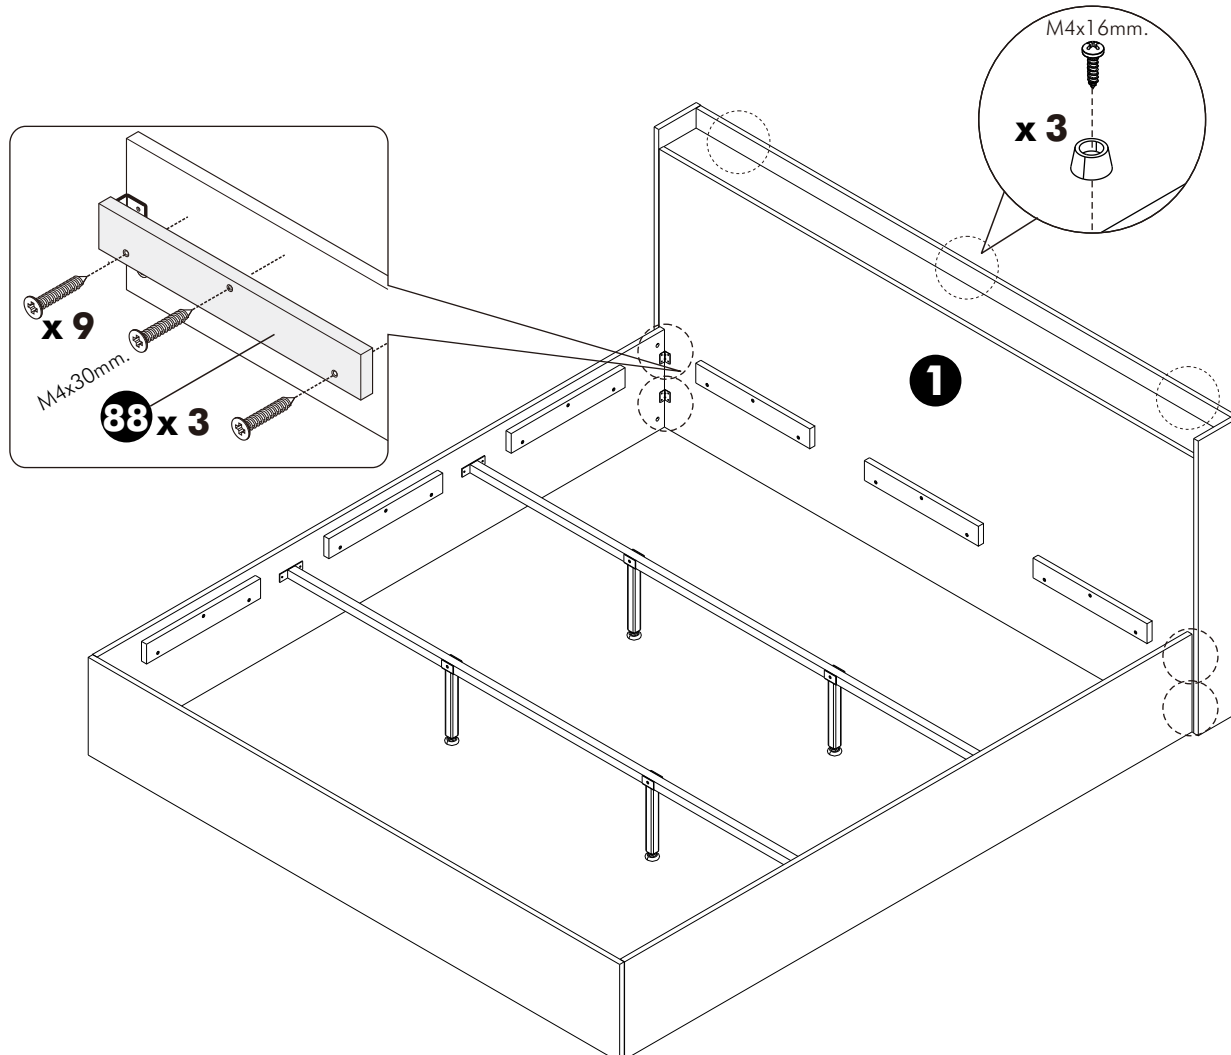

3.

