



FLORIN

Working Table 140 cm.

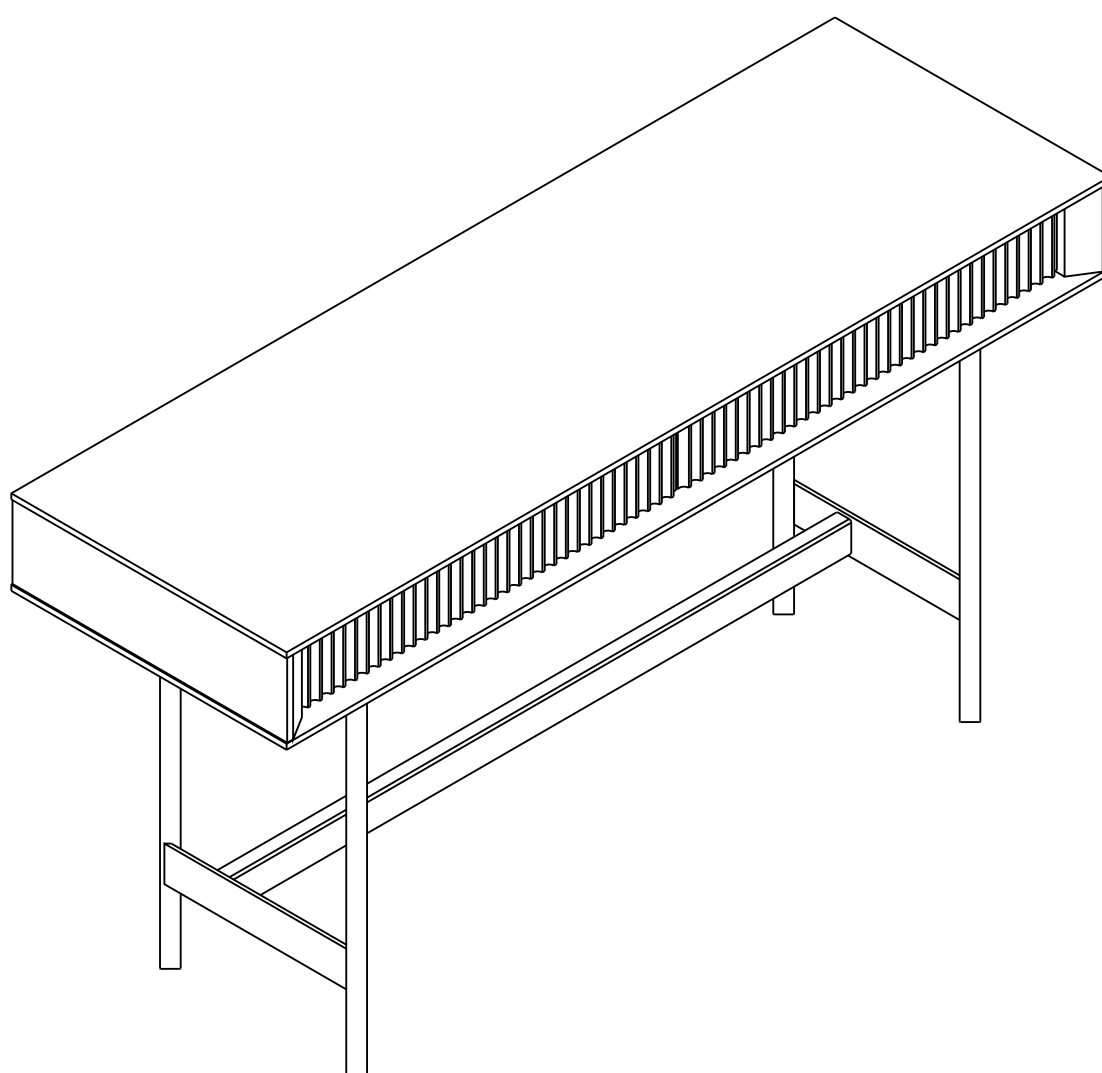


CONNECT SYSTEM





1

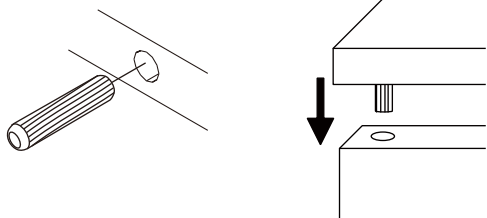




2

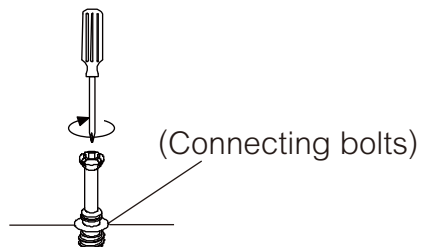

3

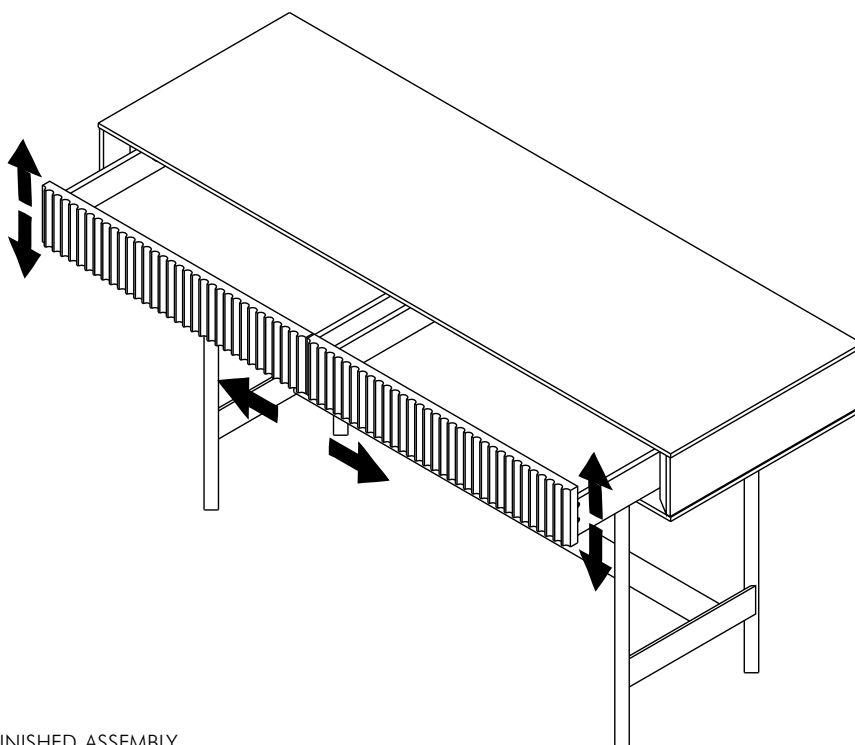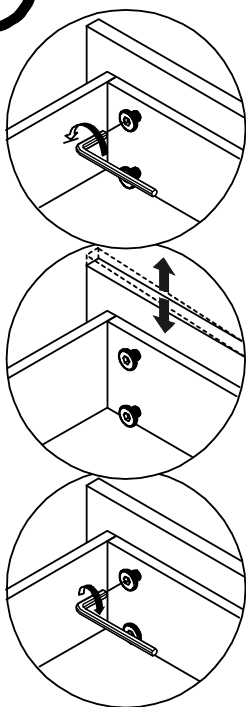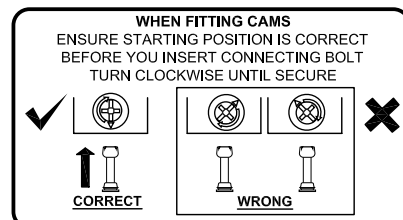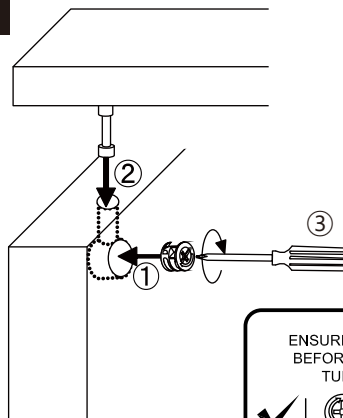


AFTER FINISHED ASSEMBLY.
INCASE OF GAP BETWEEN DRAWERS ARE NOT ALIGN.
PLEASE ADJUST AS BELOW.
1. LOOSE SCREW A LITTLE BIT.
2. THEN MOVE FRONT DRAWER TO ALIGNMENT POSITION.
3. TIGHTEN SCREW.

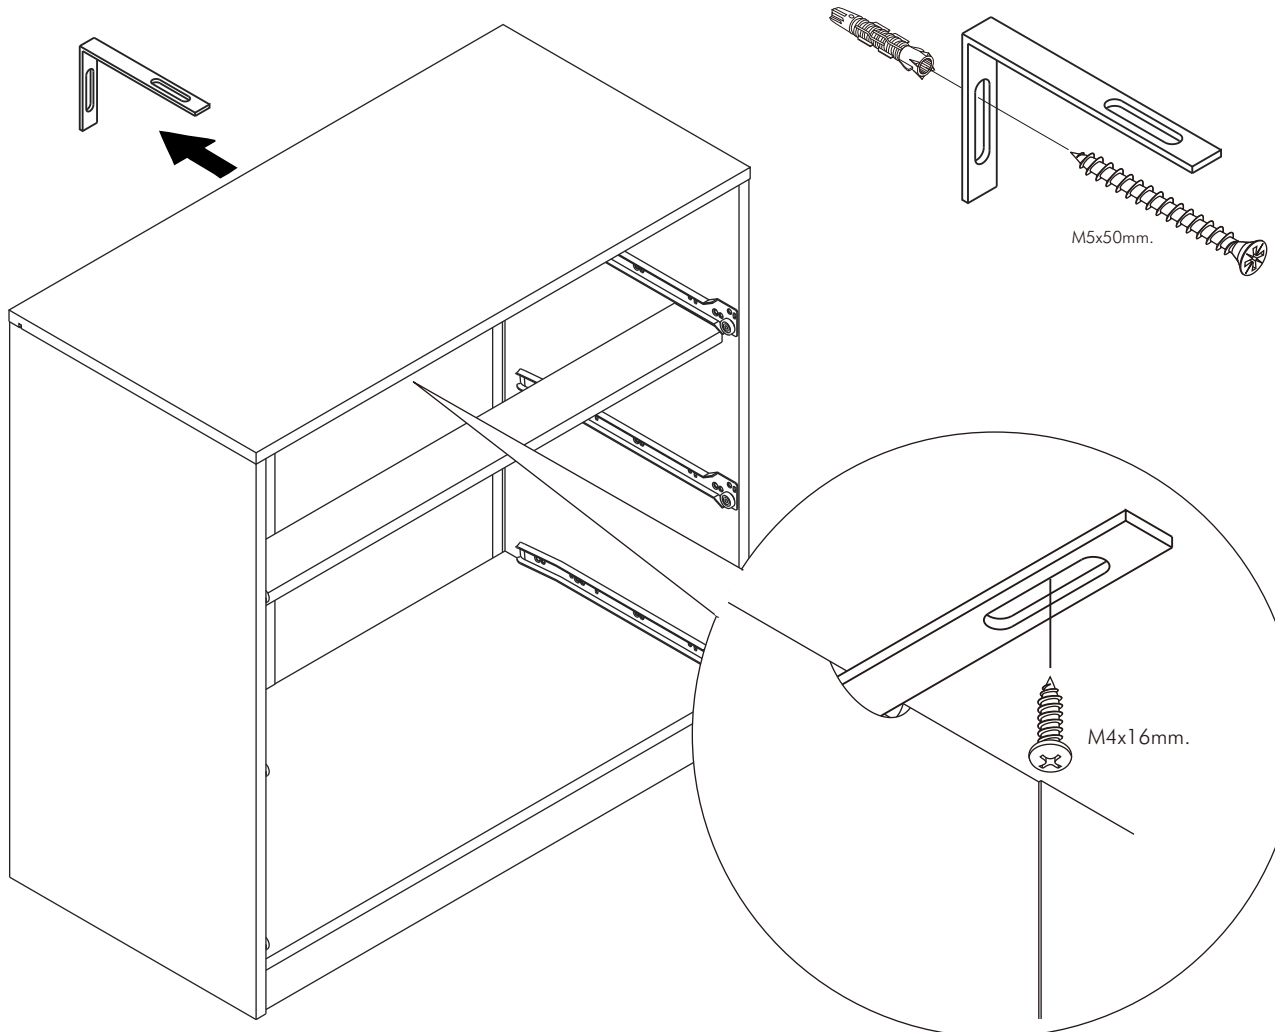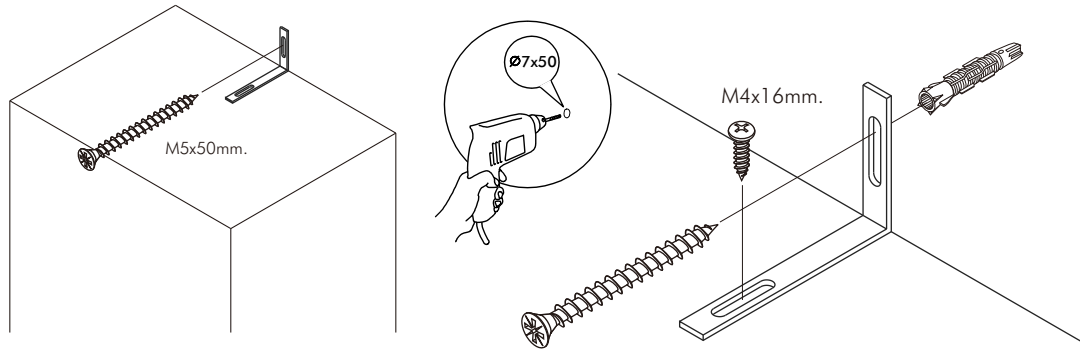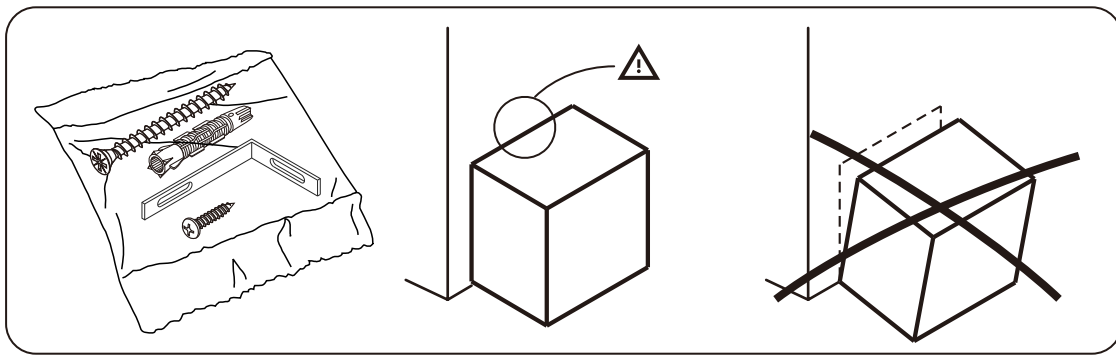


The Standard for identifying which mounted safety fall protection fitting to use **Note : That children's products must be installed with all anti-falling fittings.**


Category : Cabinet with open doors

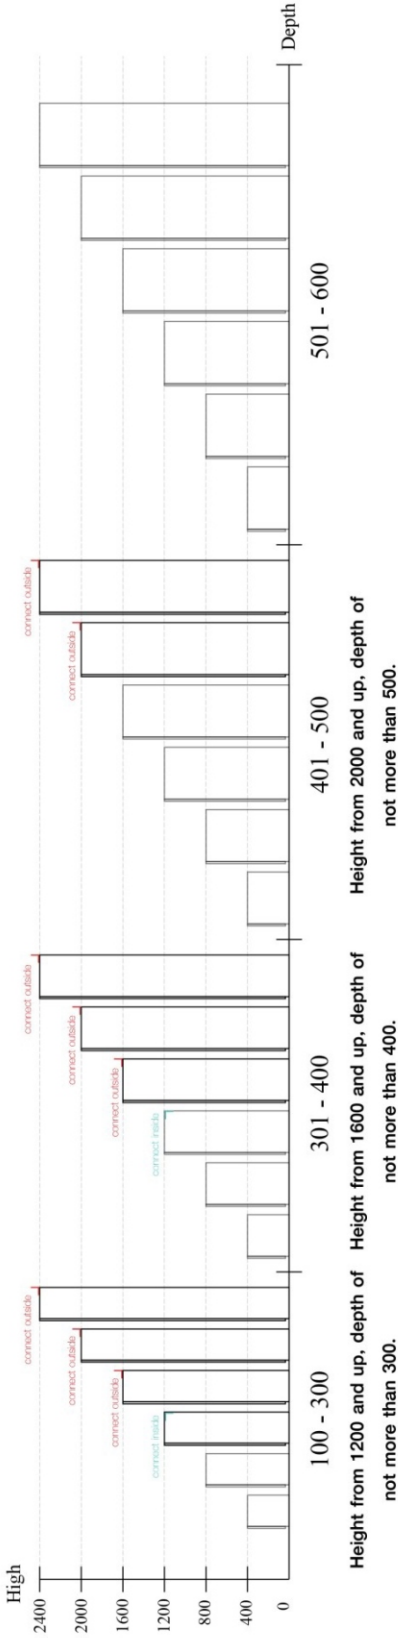


Category : Chest of drawers

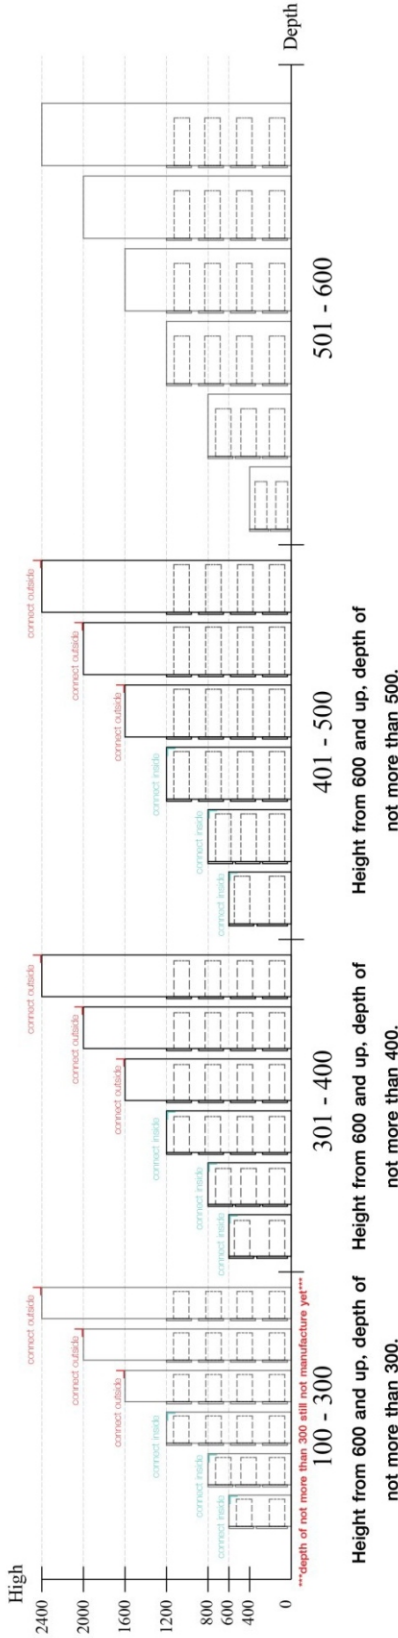

Category : Sliding door cabinet / Open cabinet

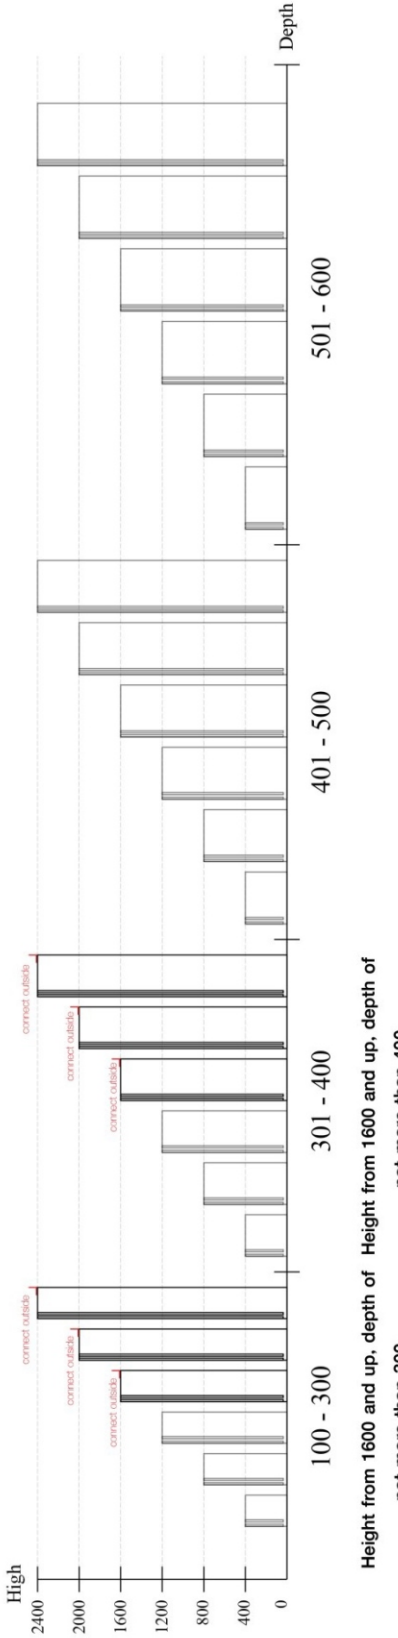


Mounted fall protection fittings

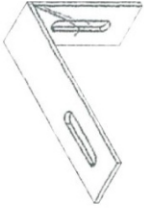

HARDWARE


-BODY SET



x 12




x 12




#8x35

x 12

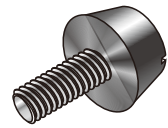


#M6

x 4



x 1




x 1



#M6

x 4

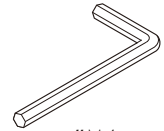

#M4

x 1



#M8

x 4




Ø7mm.

x 4



#M8

x 4




x 4




#30mm.

x 4



F+M5x50mm.

x 1



#M4x40

x 33




M4x16mm.

x 16




P+M4x16mm.

x 1



M4x20mm.


x 10



#M6x23

x 4

-DRAWER SET

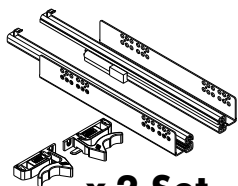


x 2 Set




#M4x13

x 12




#M4x40

x 4




#M6x23

x 6



#M3.5x35

x 8




#M3.5x25

x 16


ASSEMBLY

-BODY SET


1.

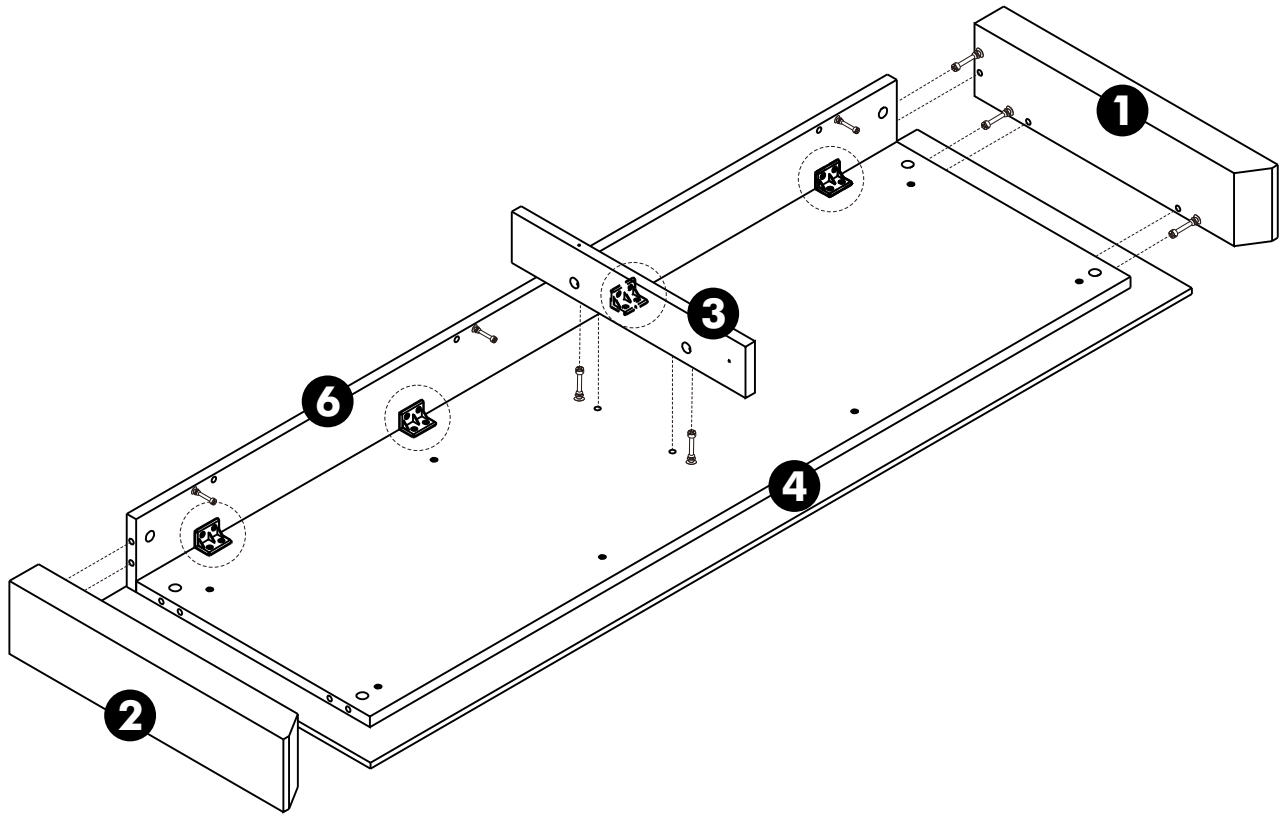


2.

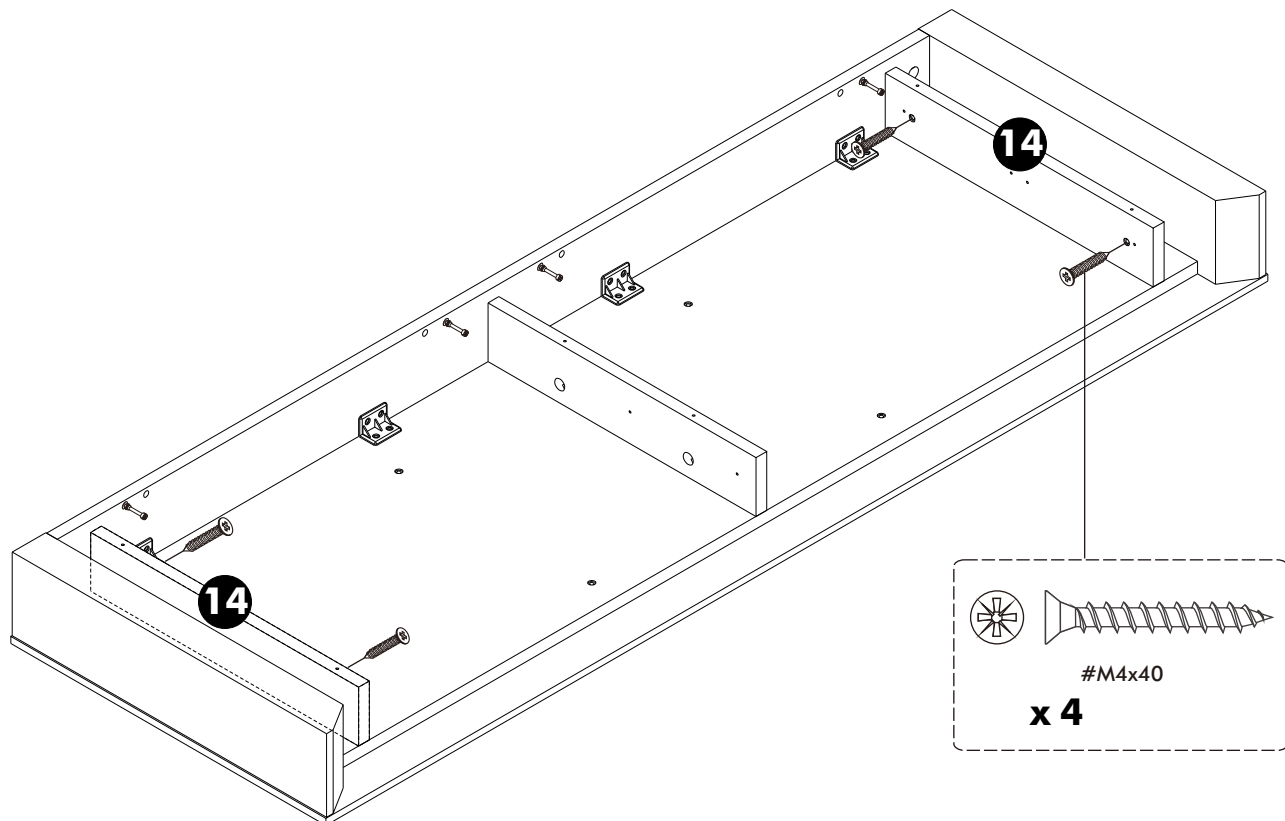


3.

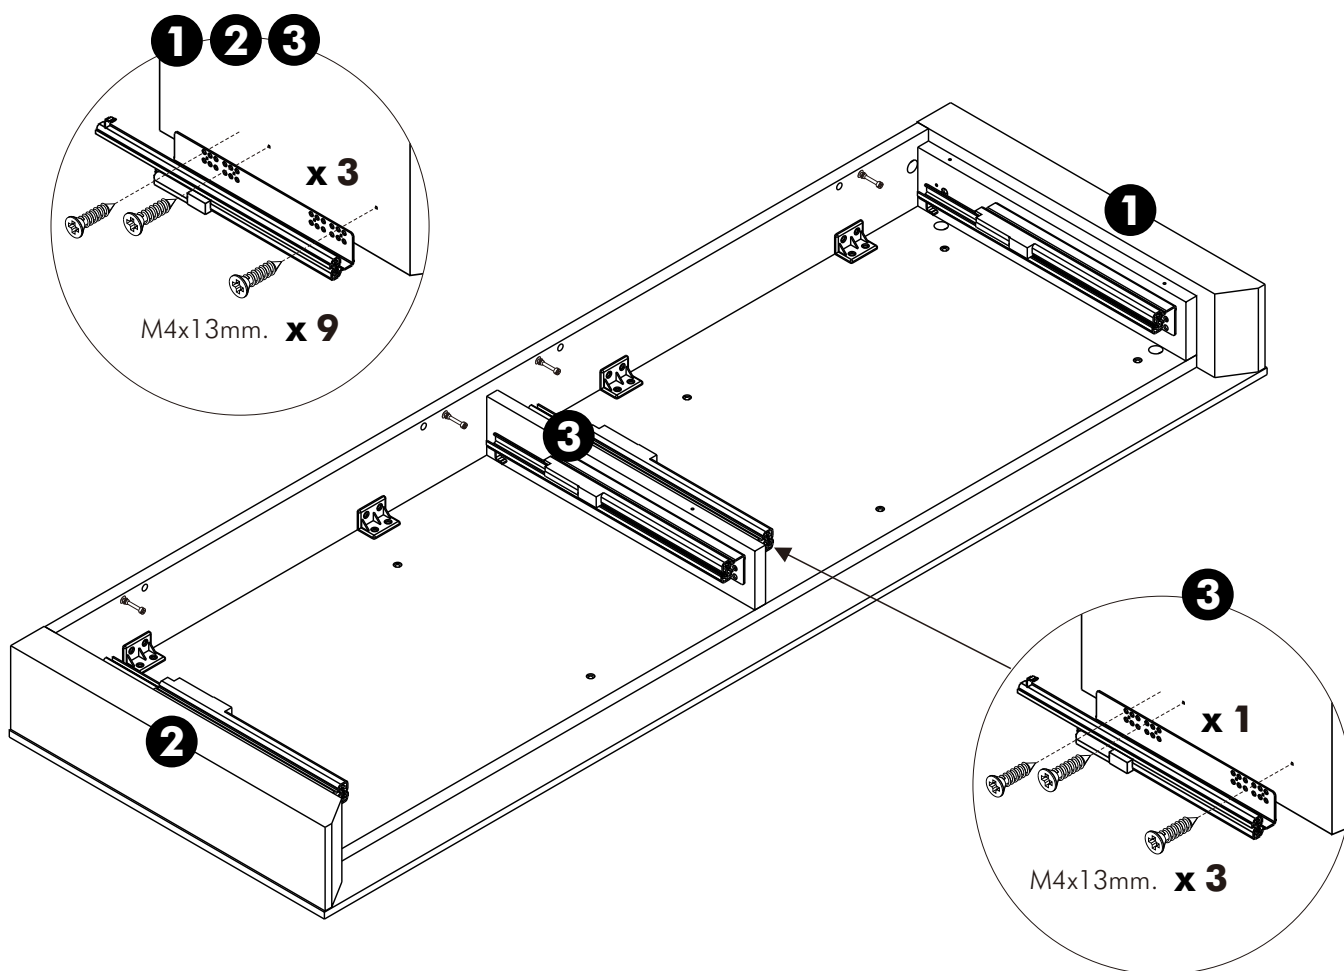


4.

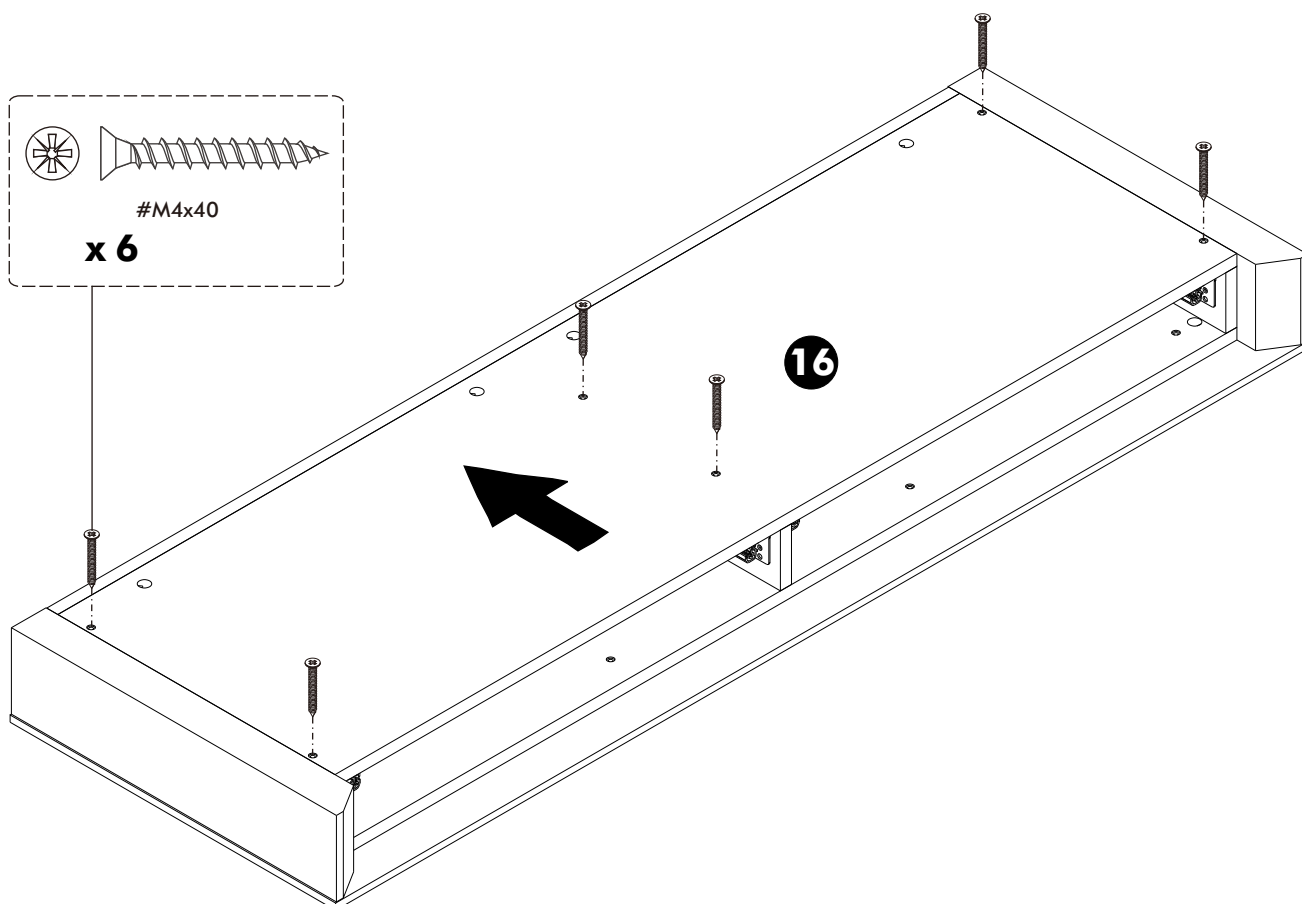


5.

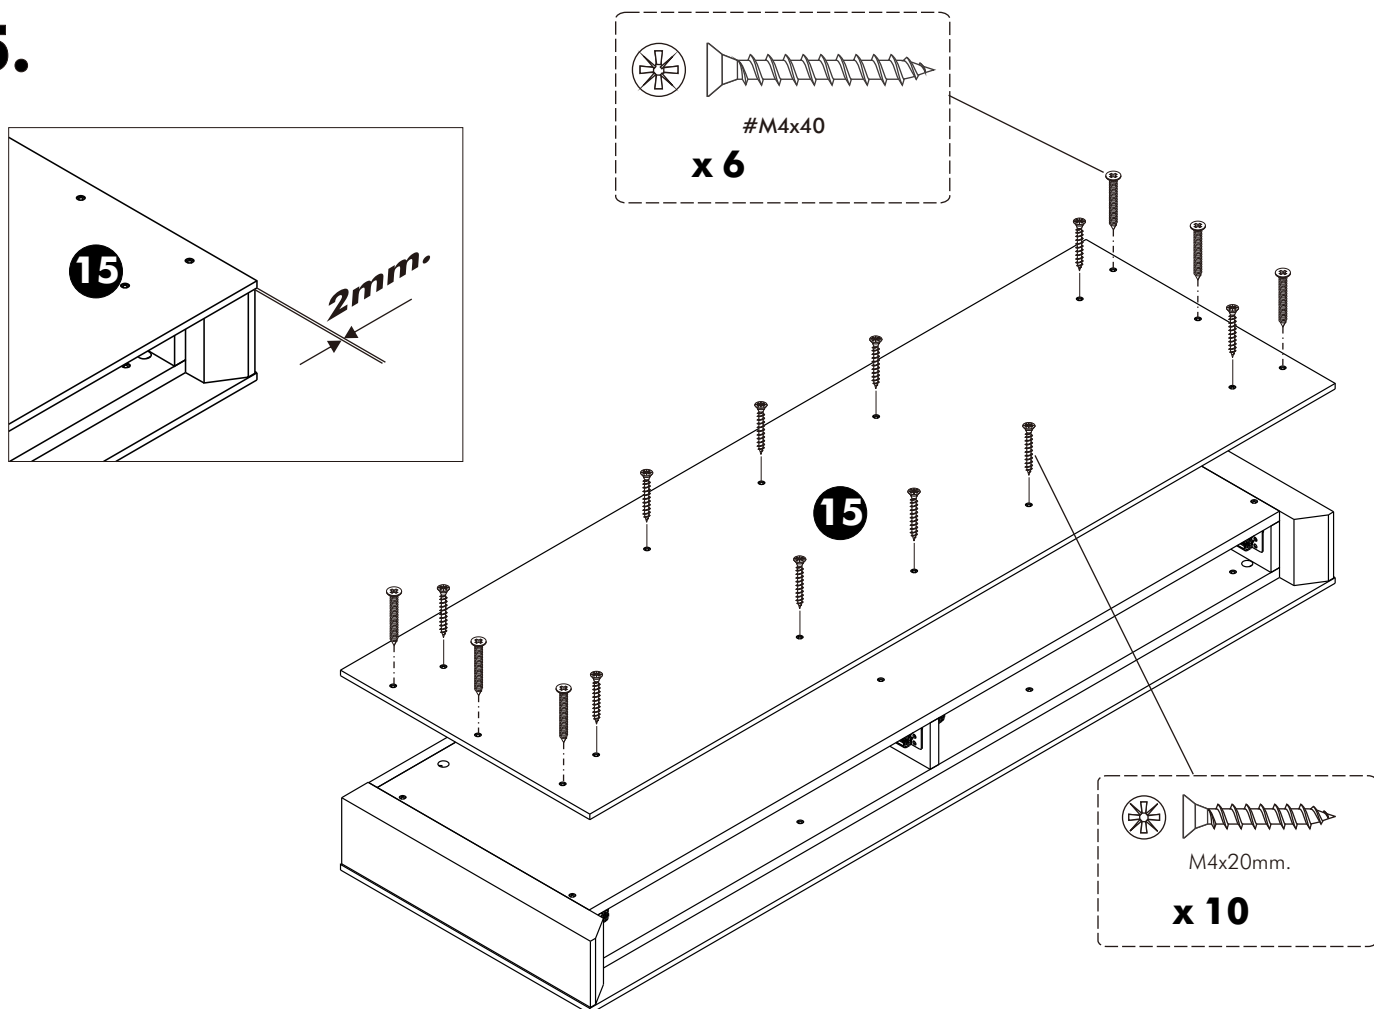


6.

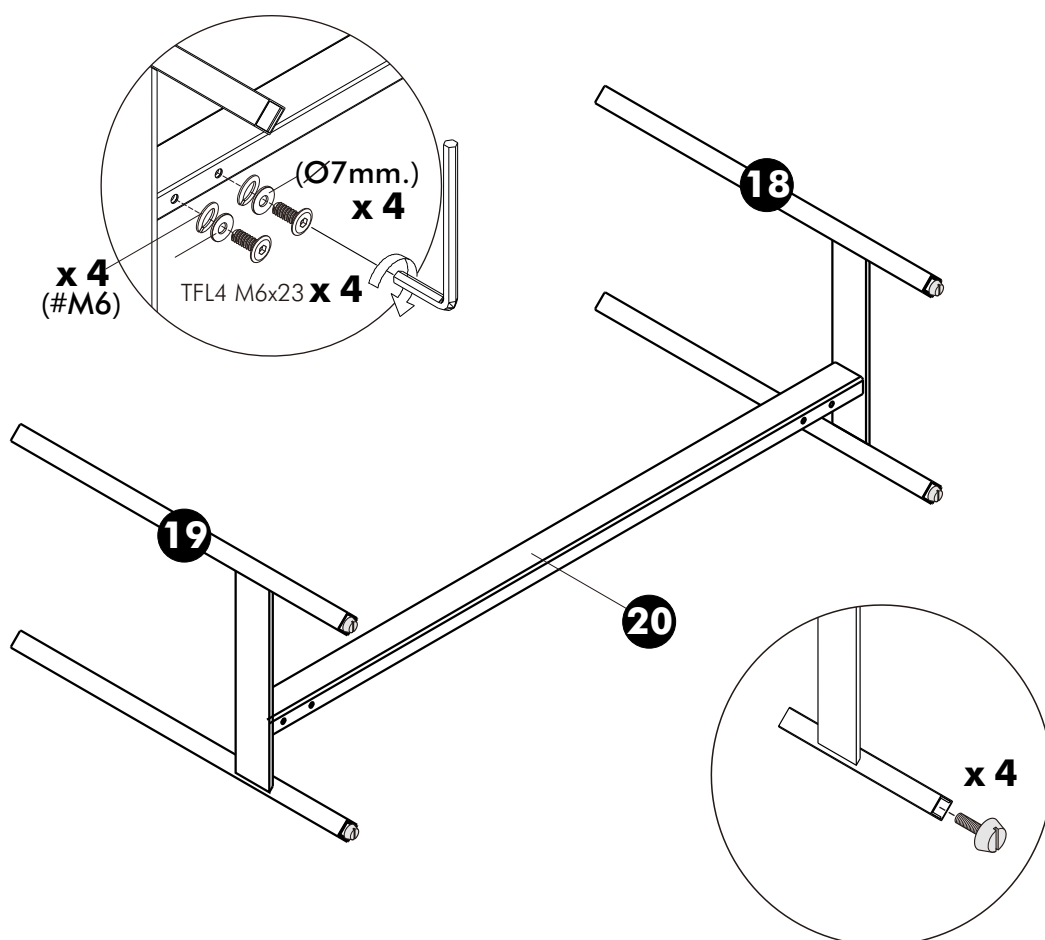

7.

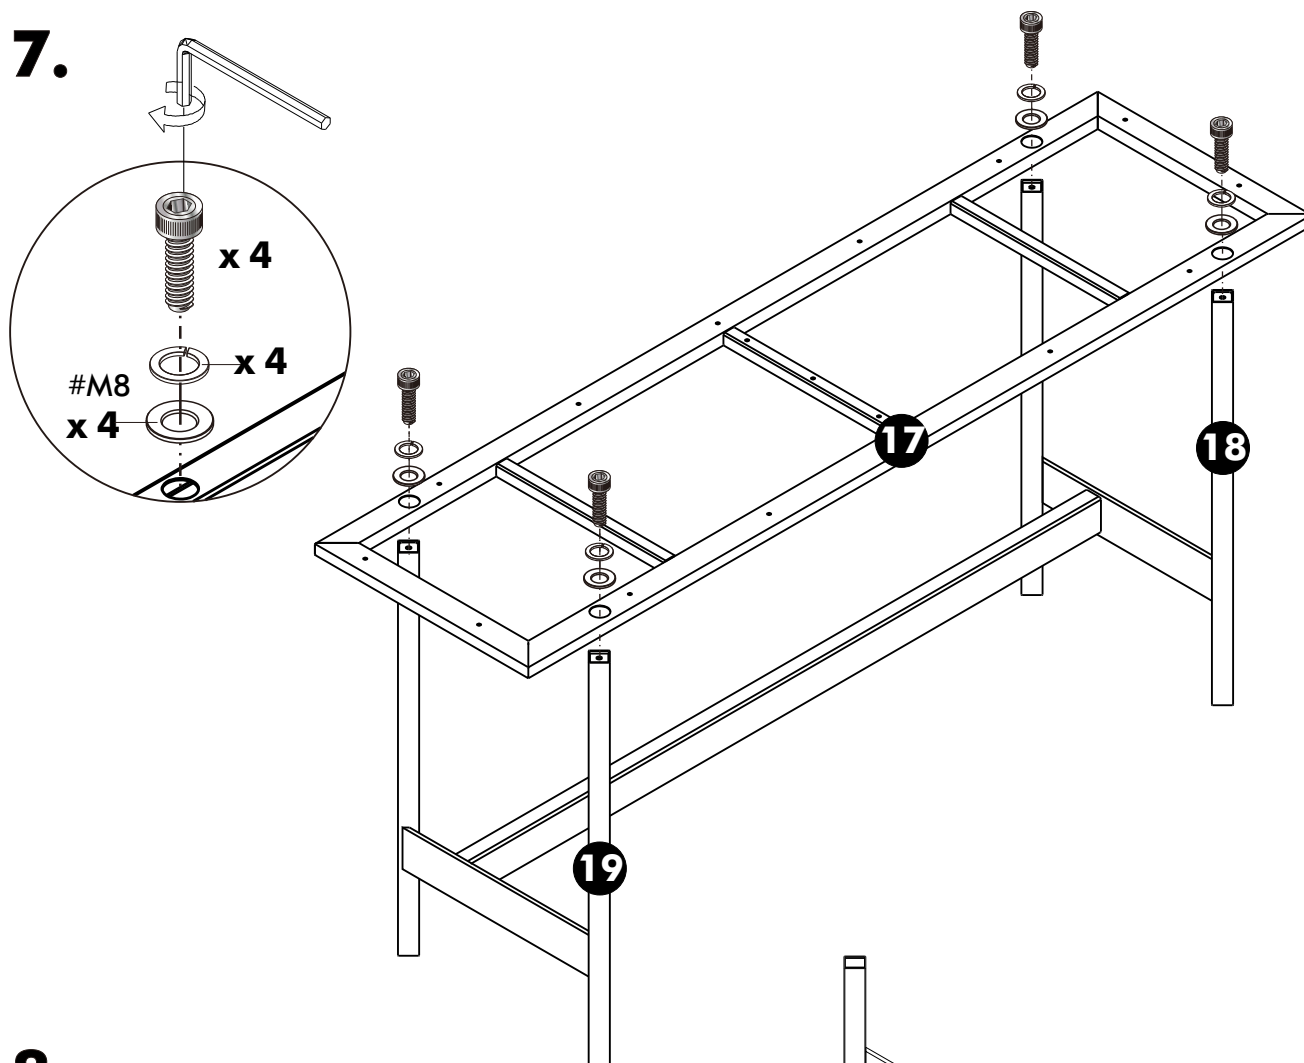



8.

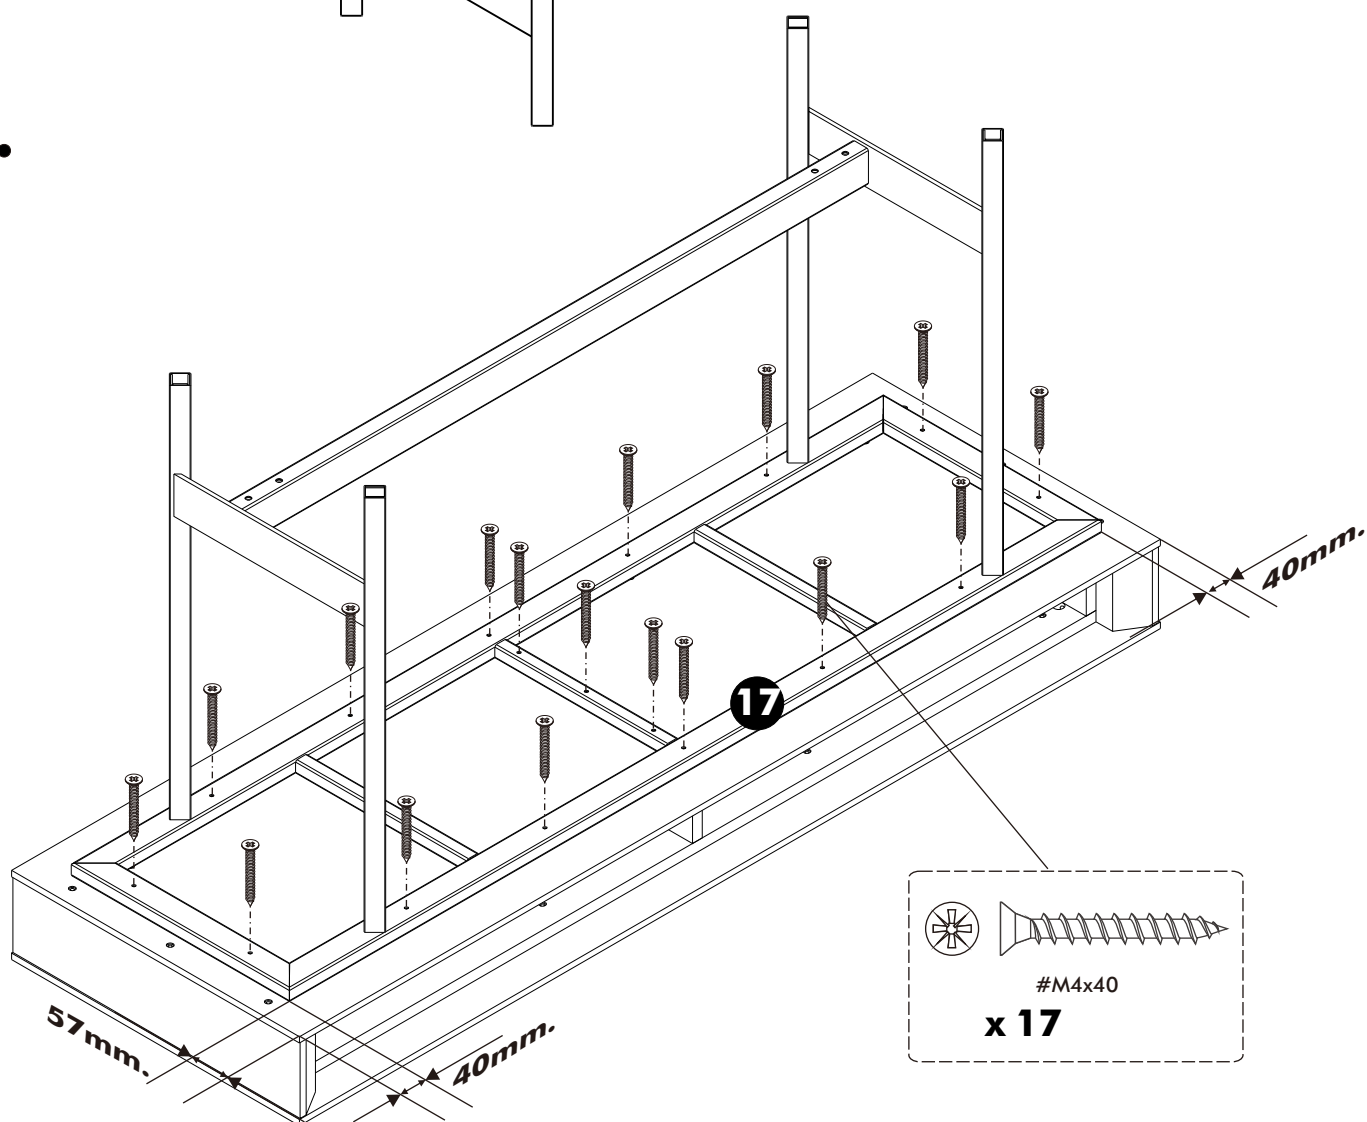

ASSEMBLY



-DRAWER SET

1.

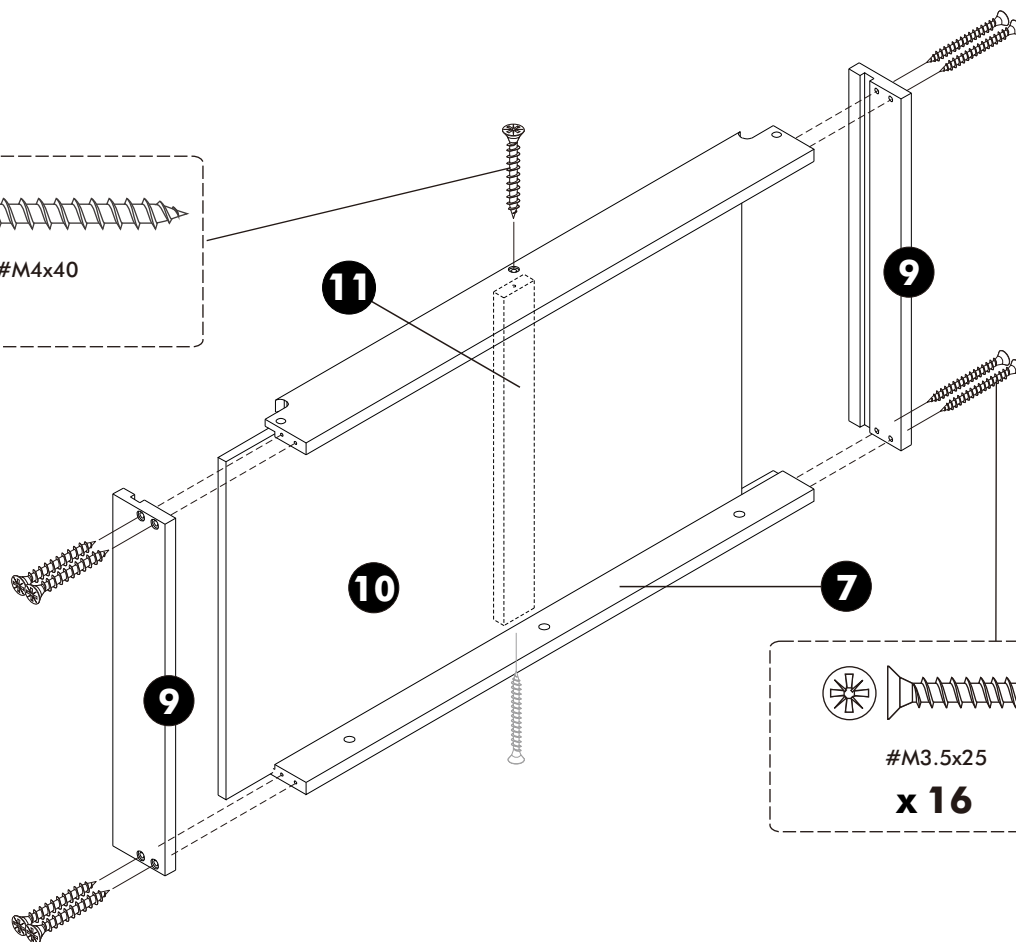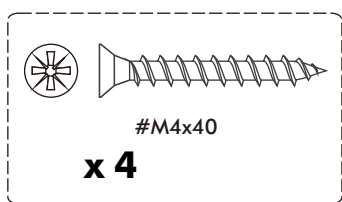




2 Set

2.


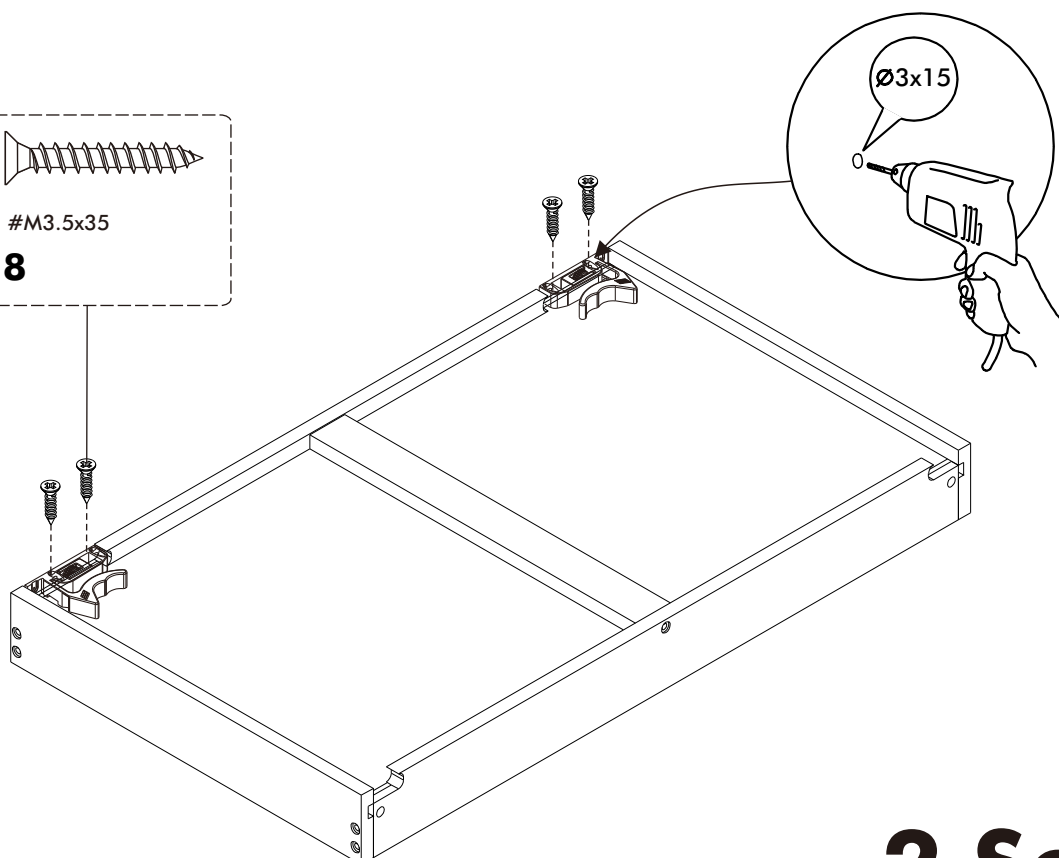
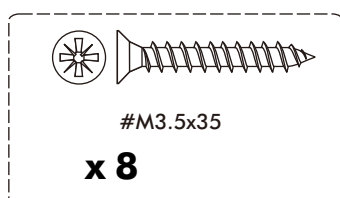


2 Set

3.

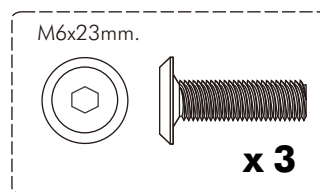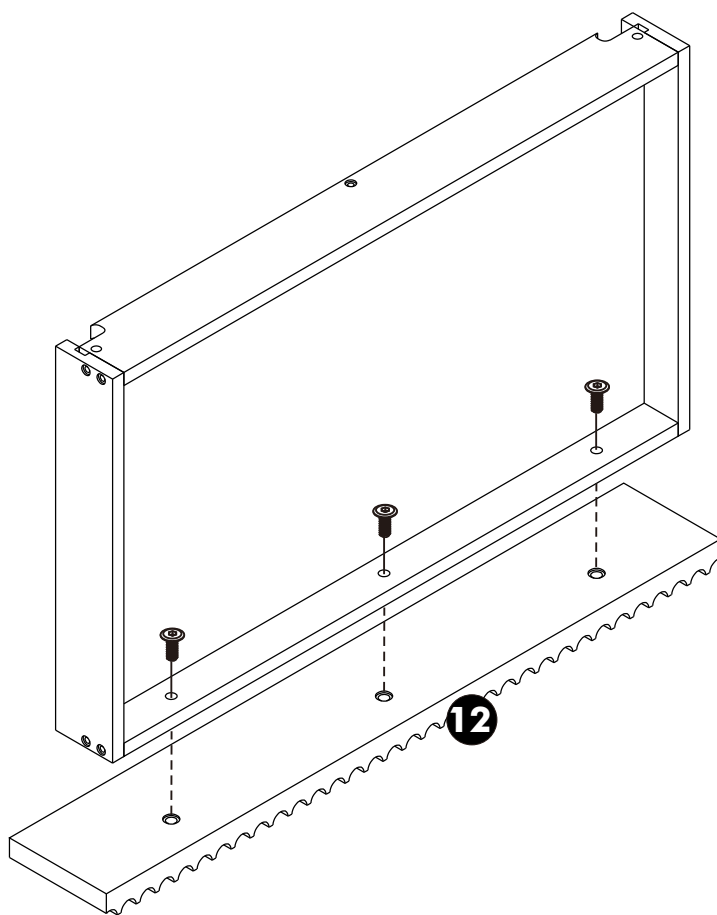

4.

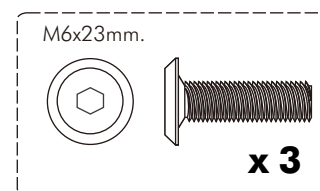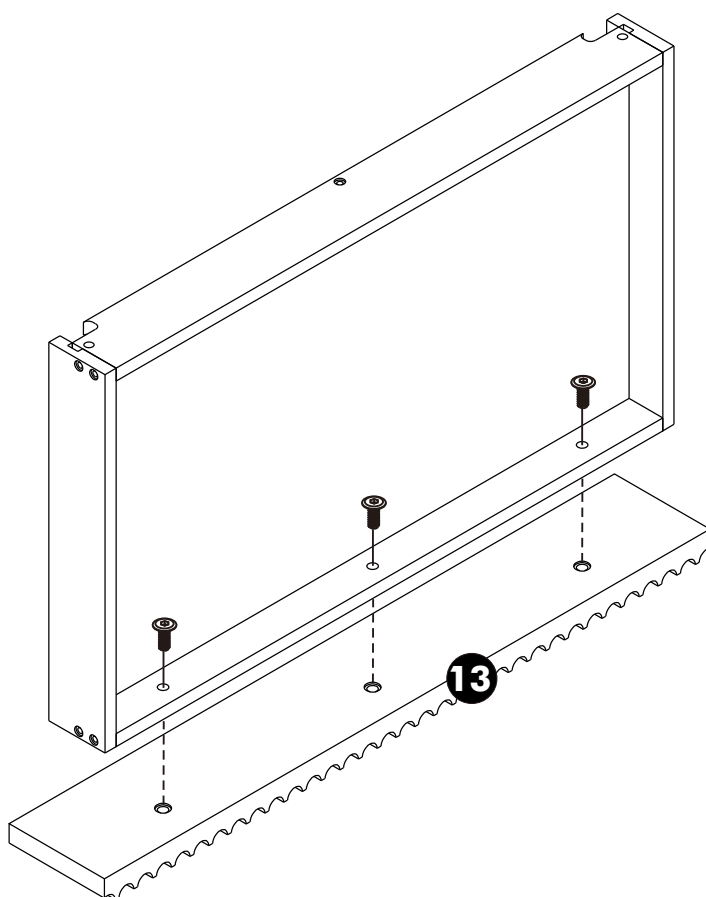

5.

