



SMART KIT

Base Cabinet 30/40/50/60

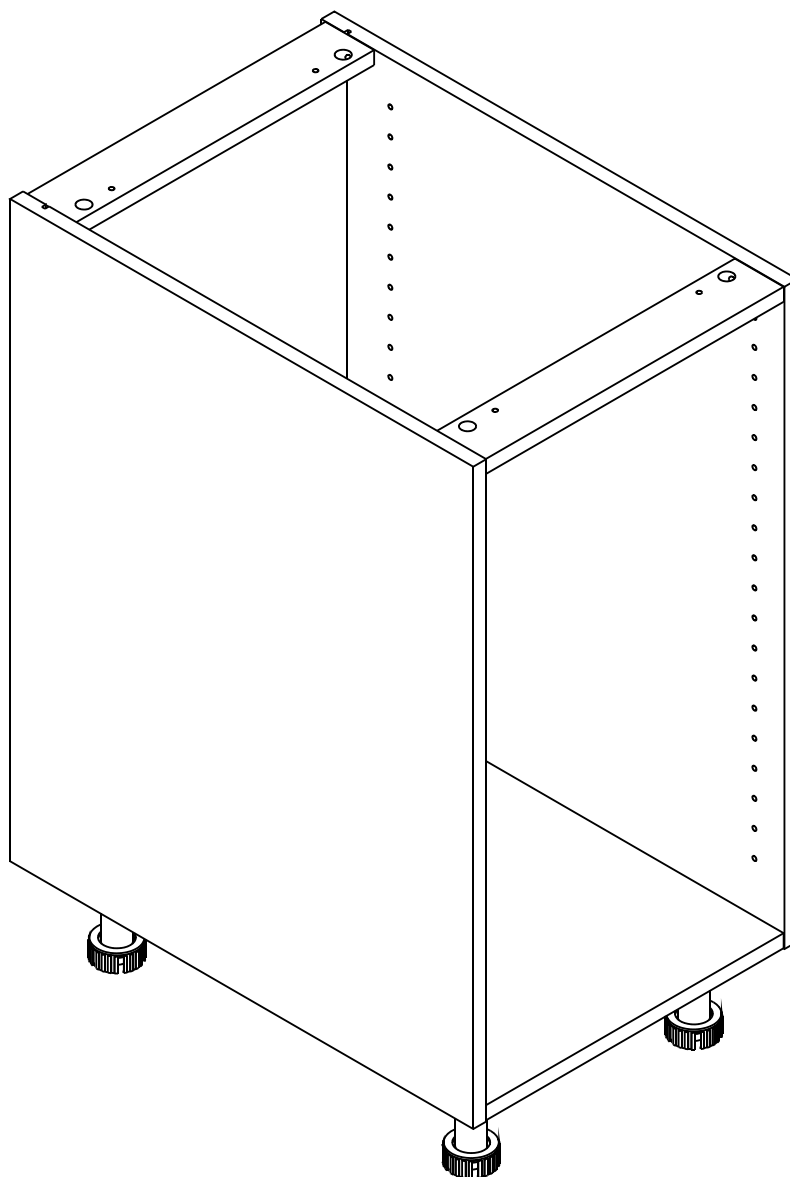


CONNECT SYSTEM

1

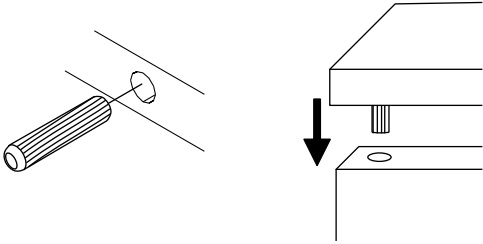


2

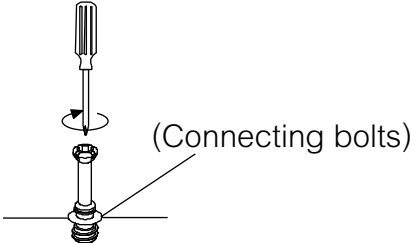

(Connecting bolts)

3

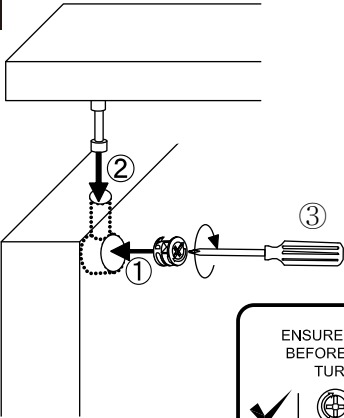

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓



↑


CORRECT






WRONG

✗

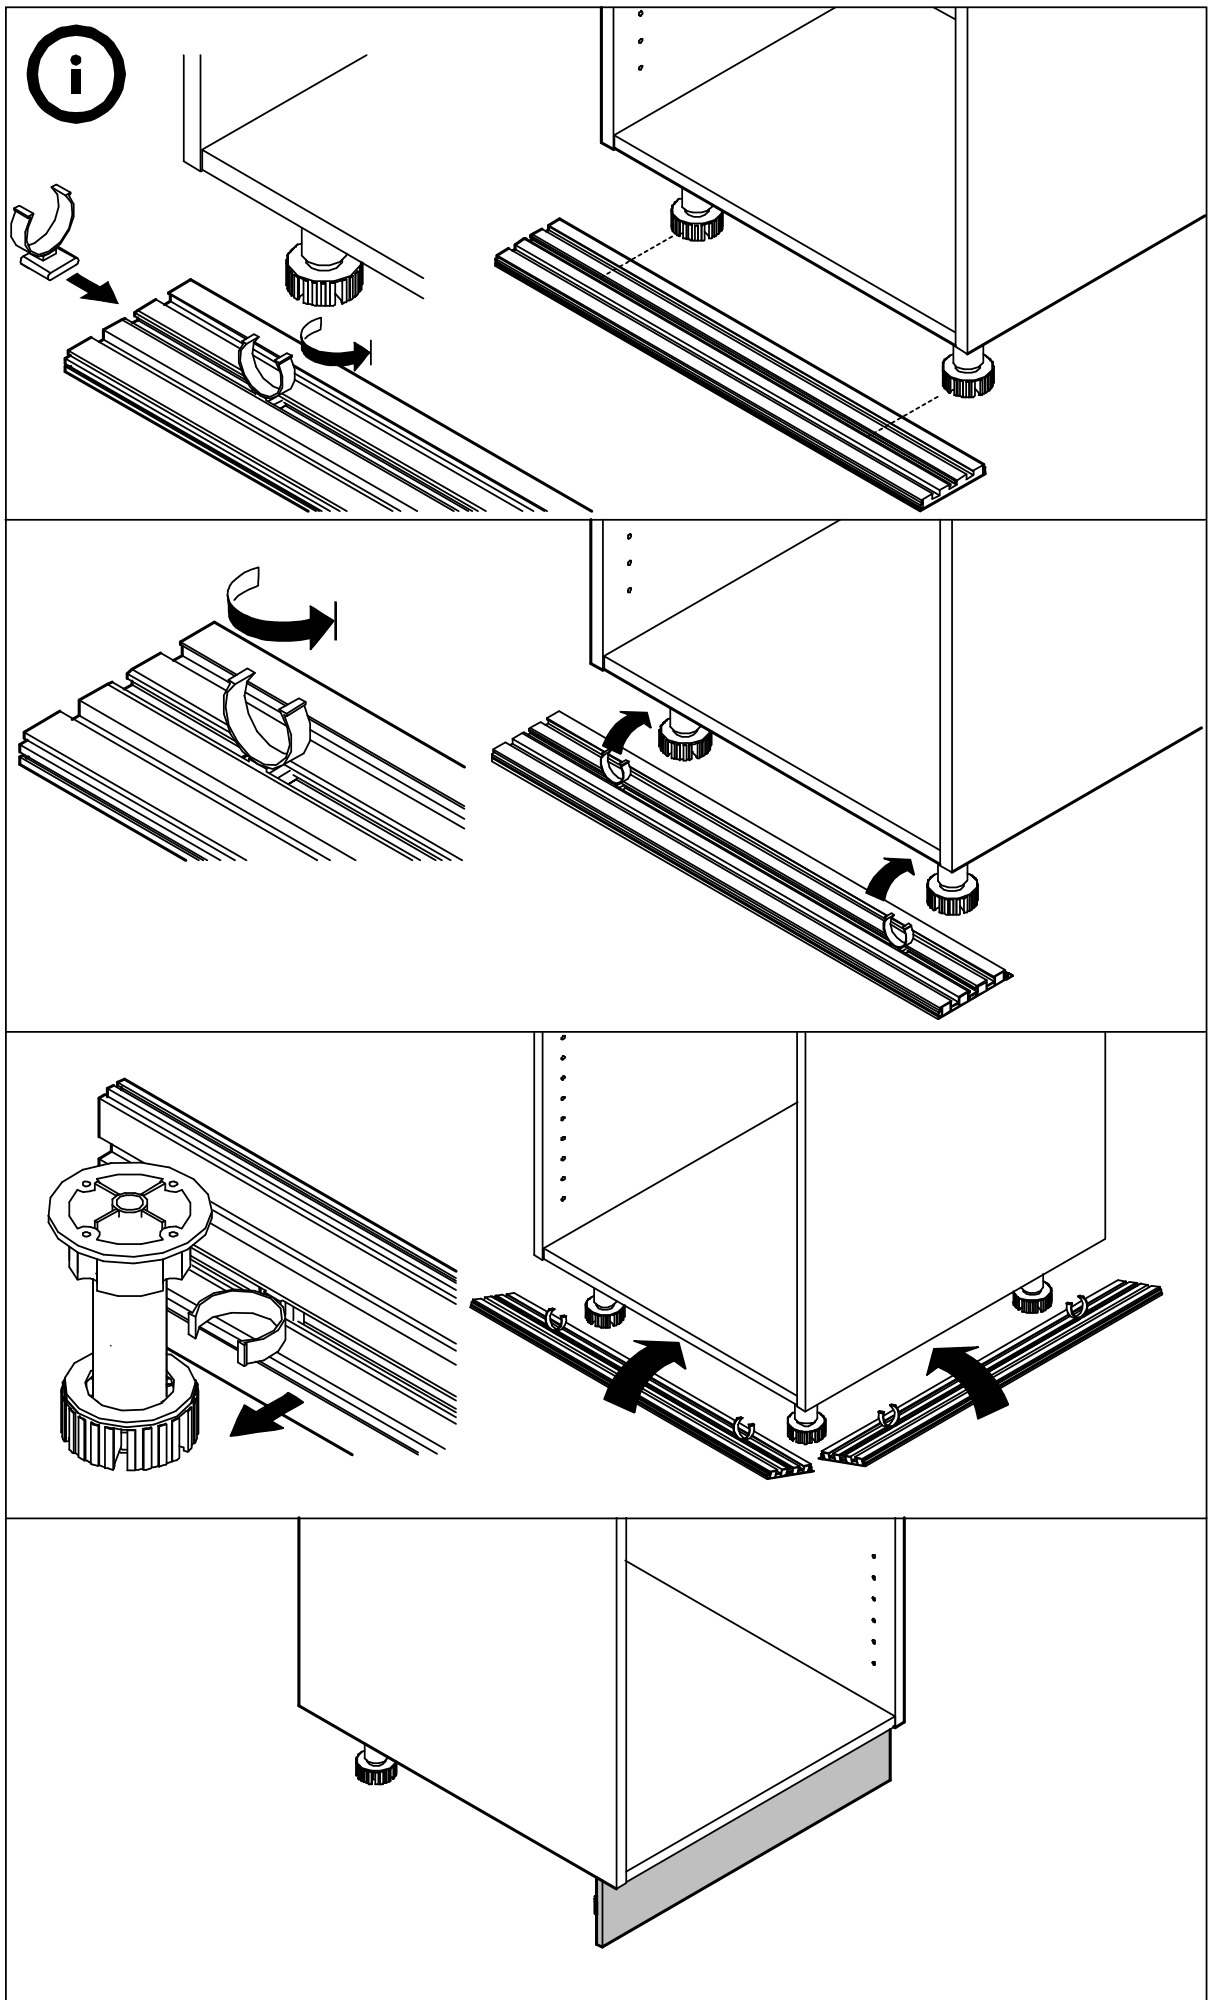

HARDWARE


-BODY SET



x 8



x 8



(8x35)

x 10



M4x30mm.

x 8




M4x16mm.


x 16



x 4




x 2

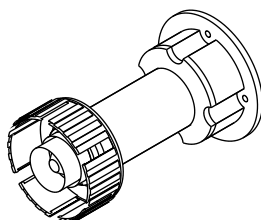


x4



1.

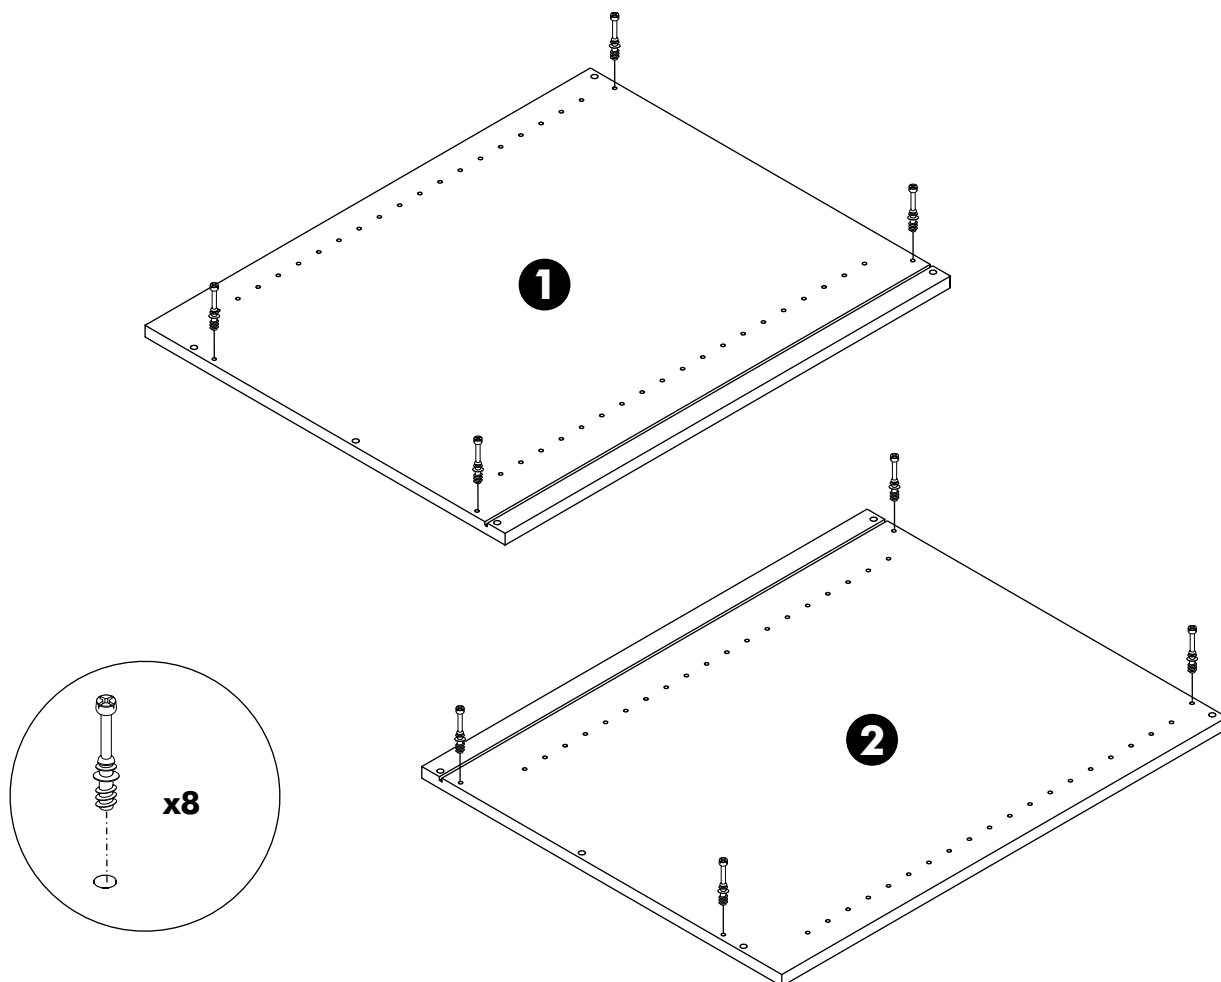


2.

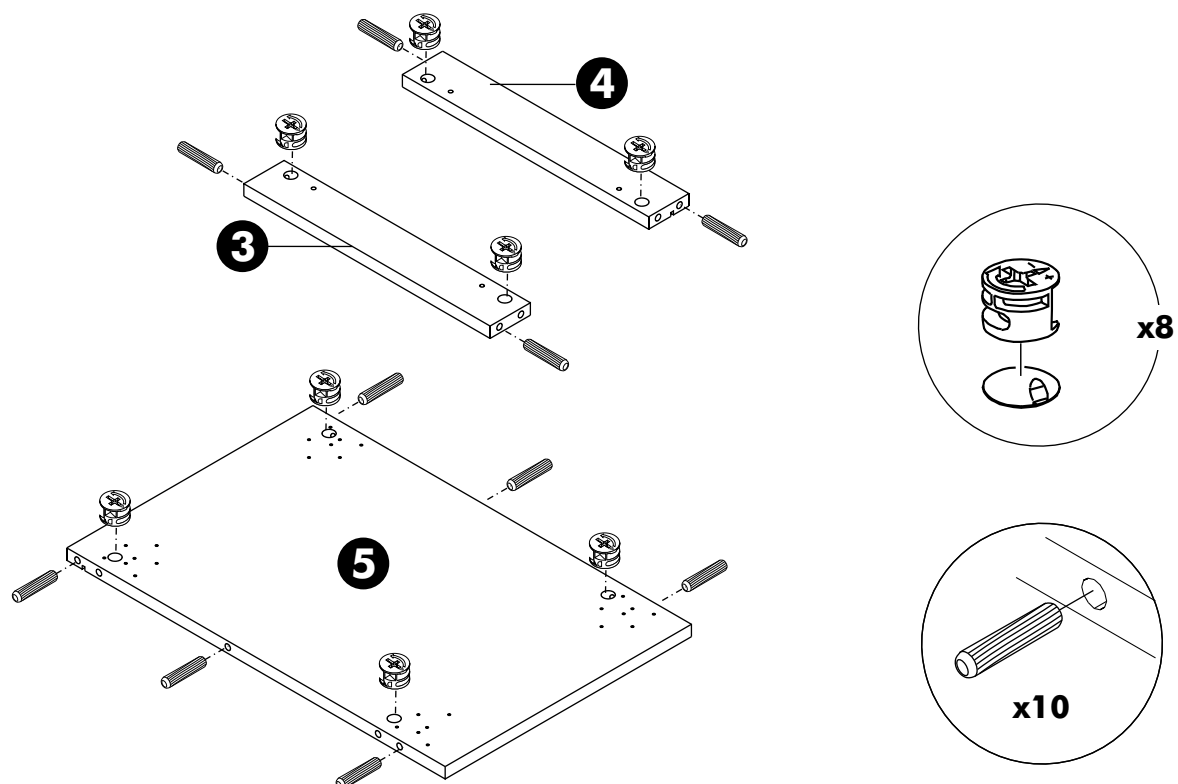

3.

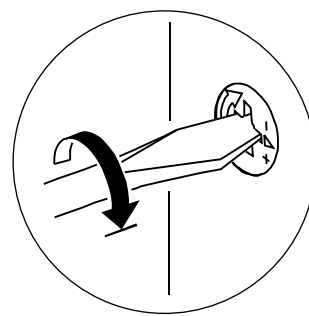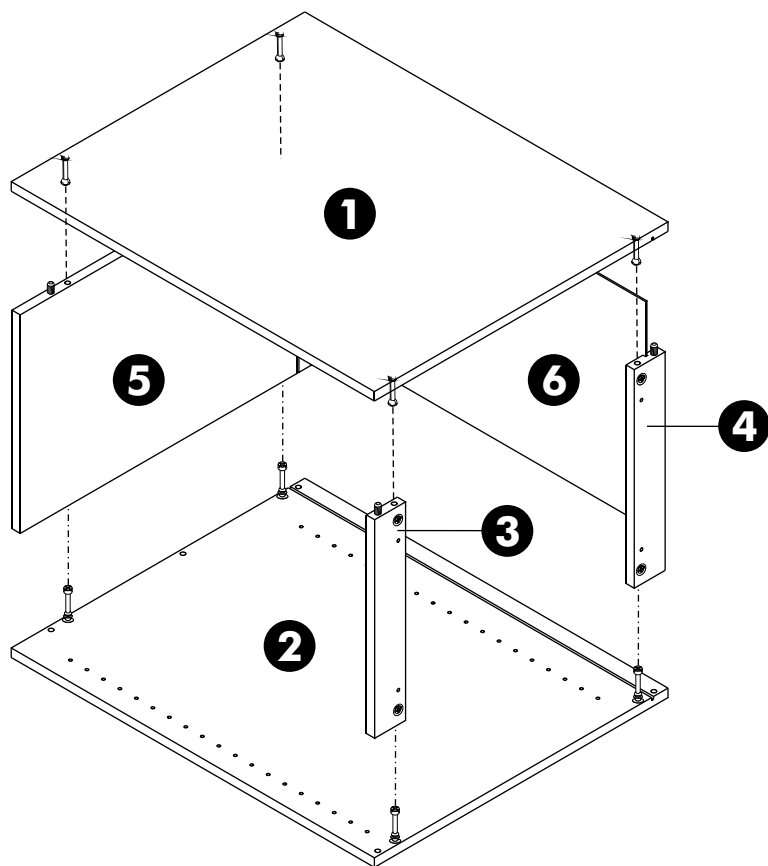




4.(A)







M4x16mm.

x16





x4

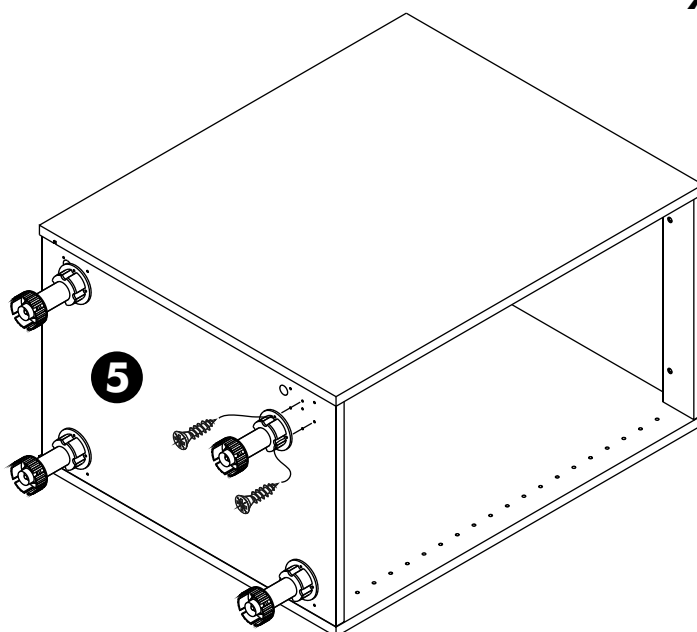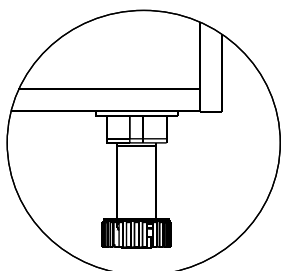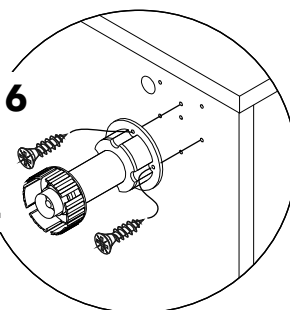


4.(B)

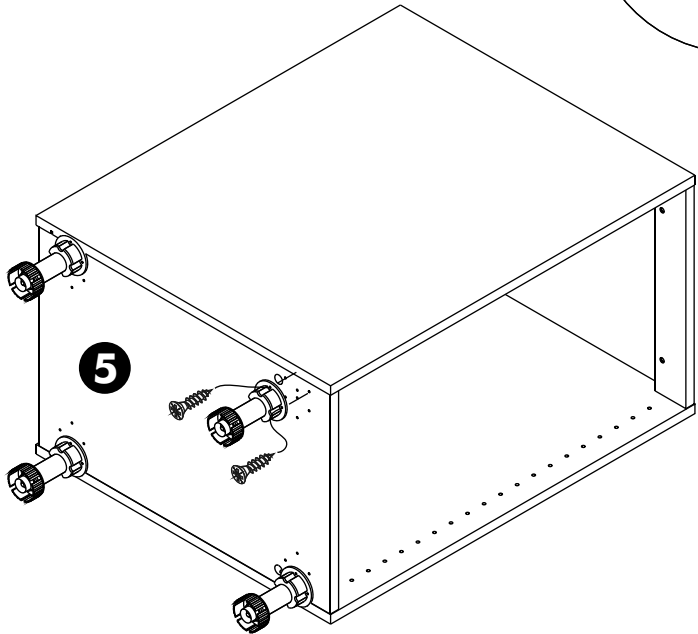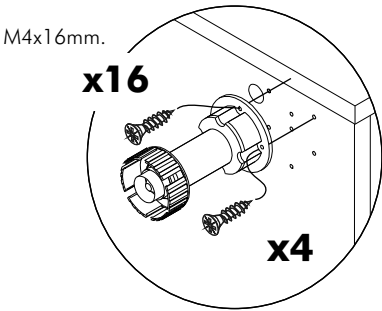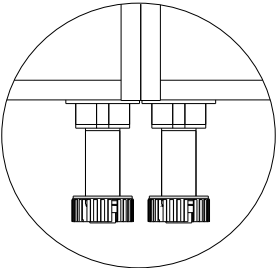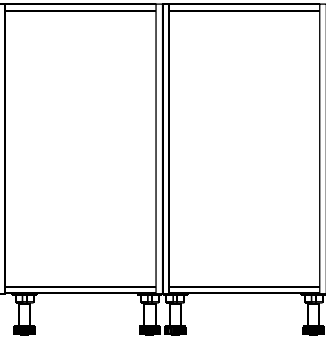



5.

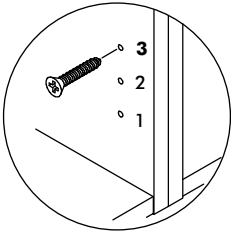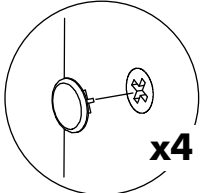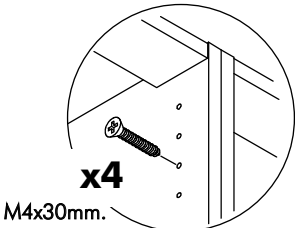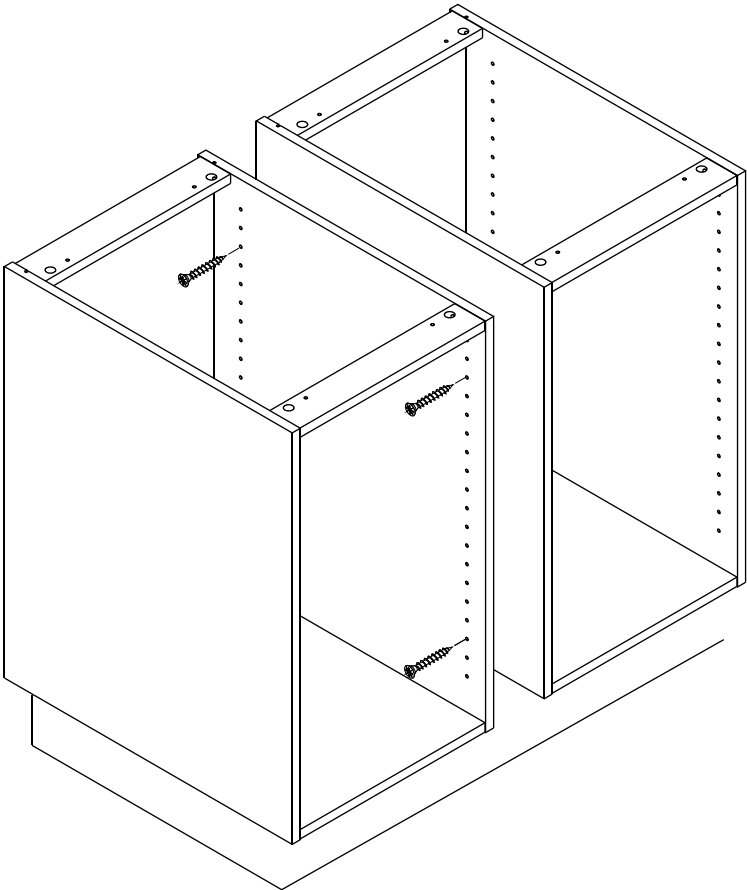

6.

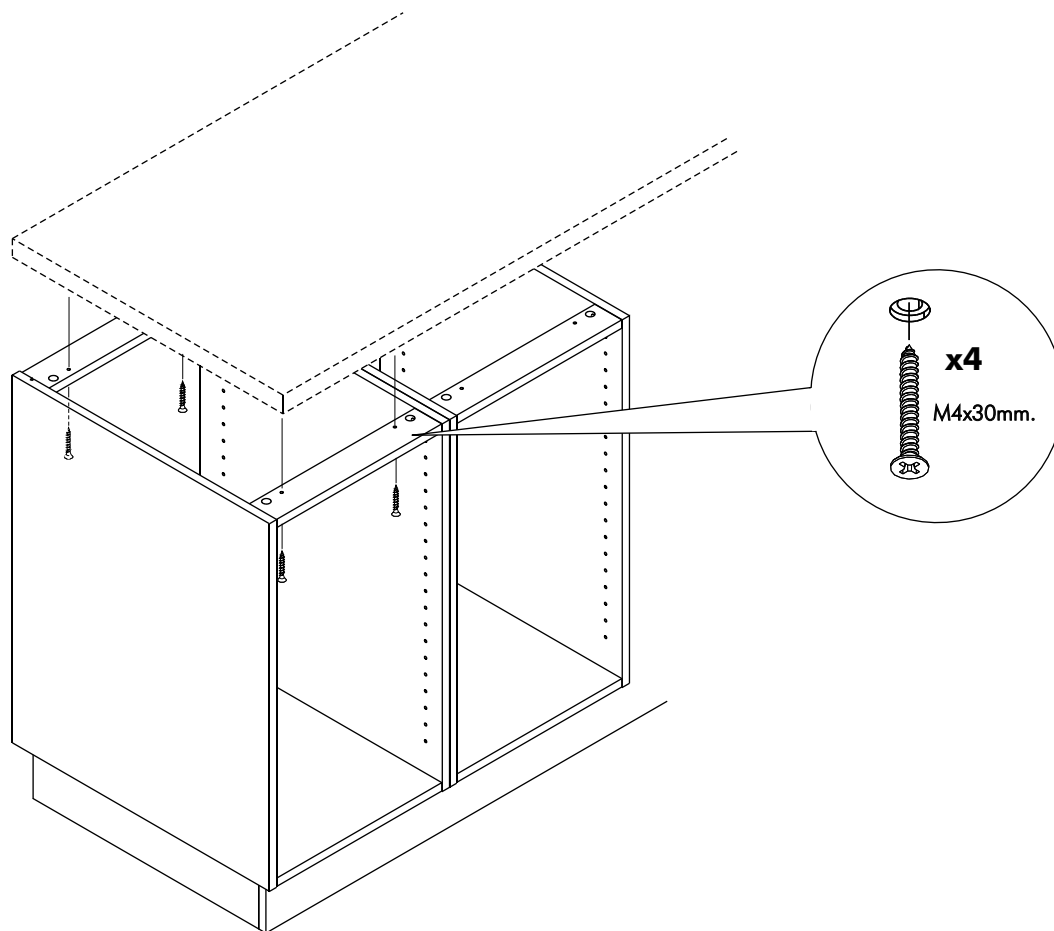

A.

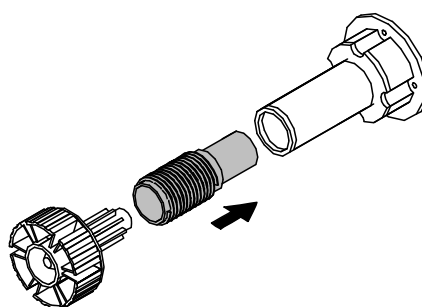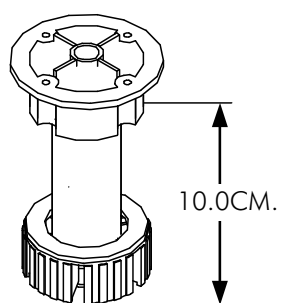

B.

