



SMART KIT

Base Cabinet 30/40/50/60

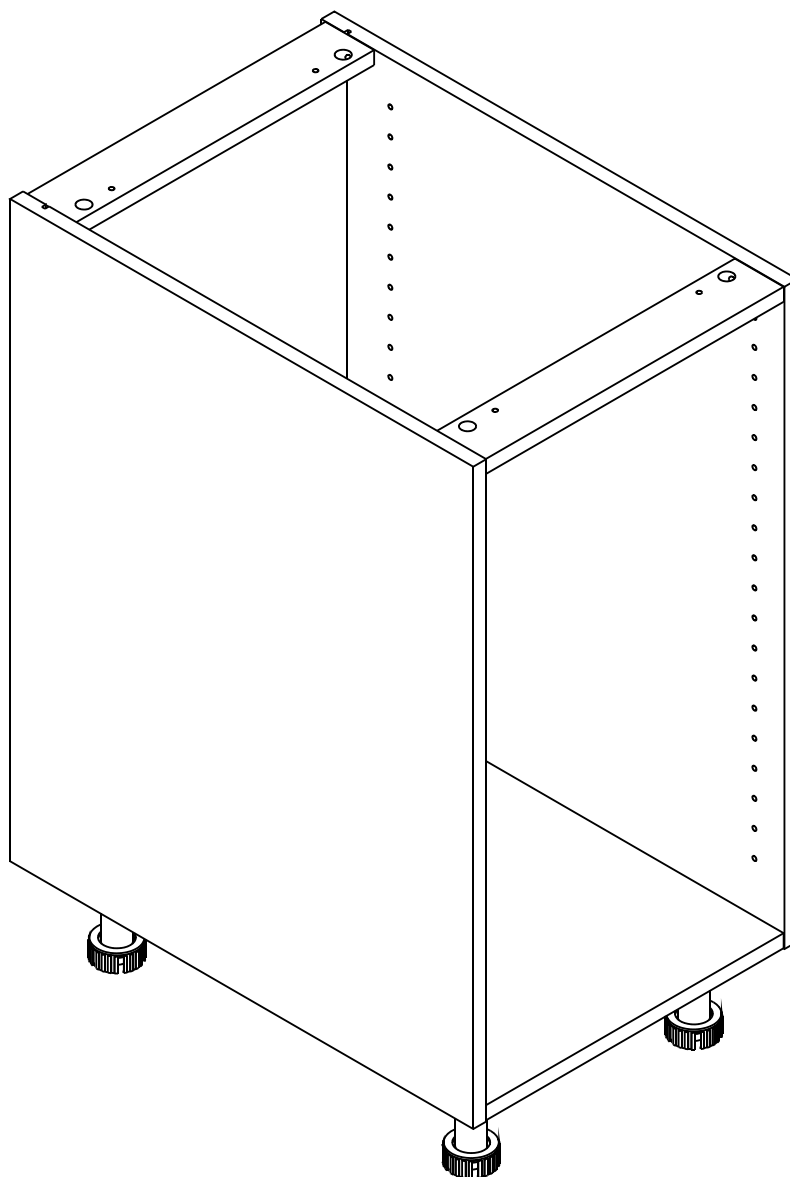


CONNECT SYSTEM


1

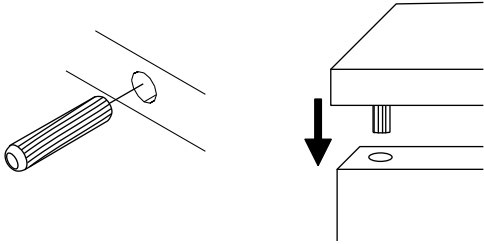

2

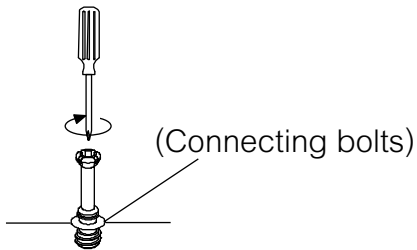


3

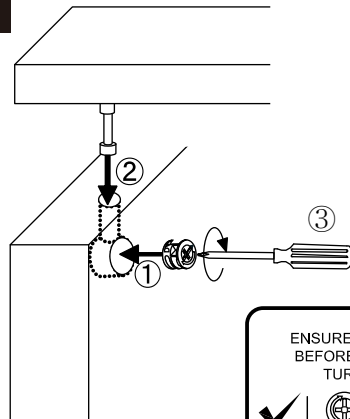


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓				✗
	CORRECT	WRONG		

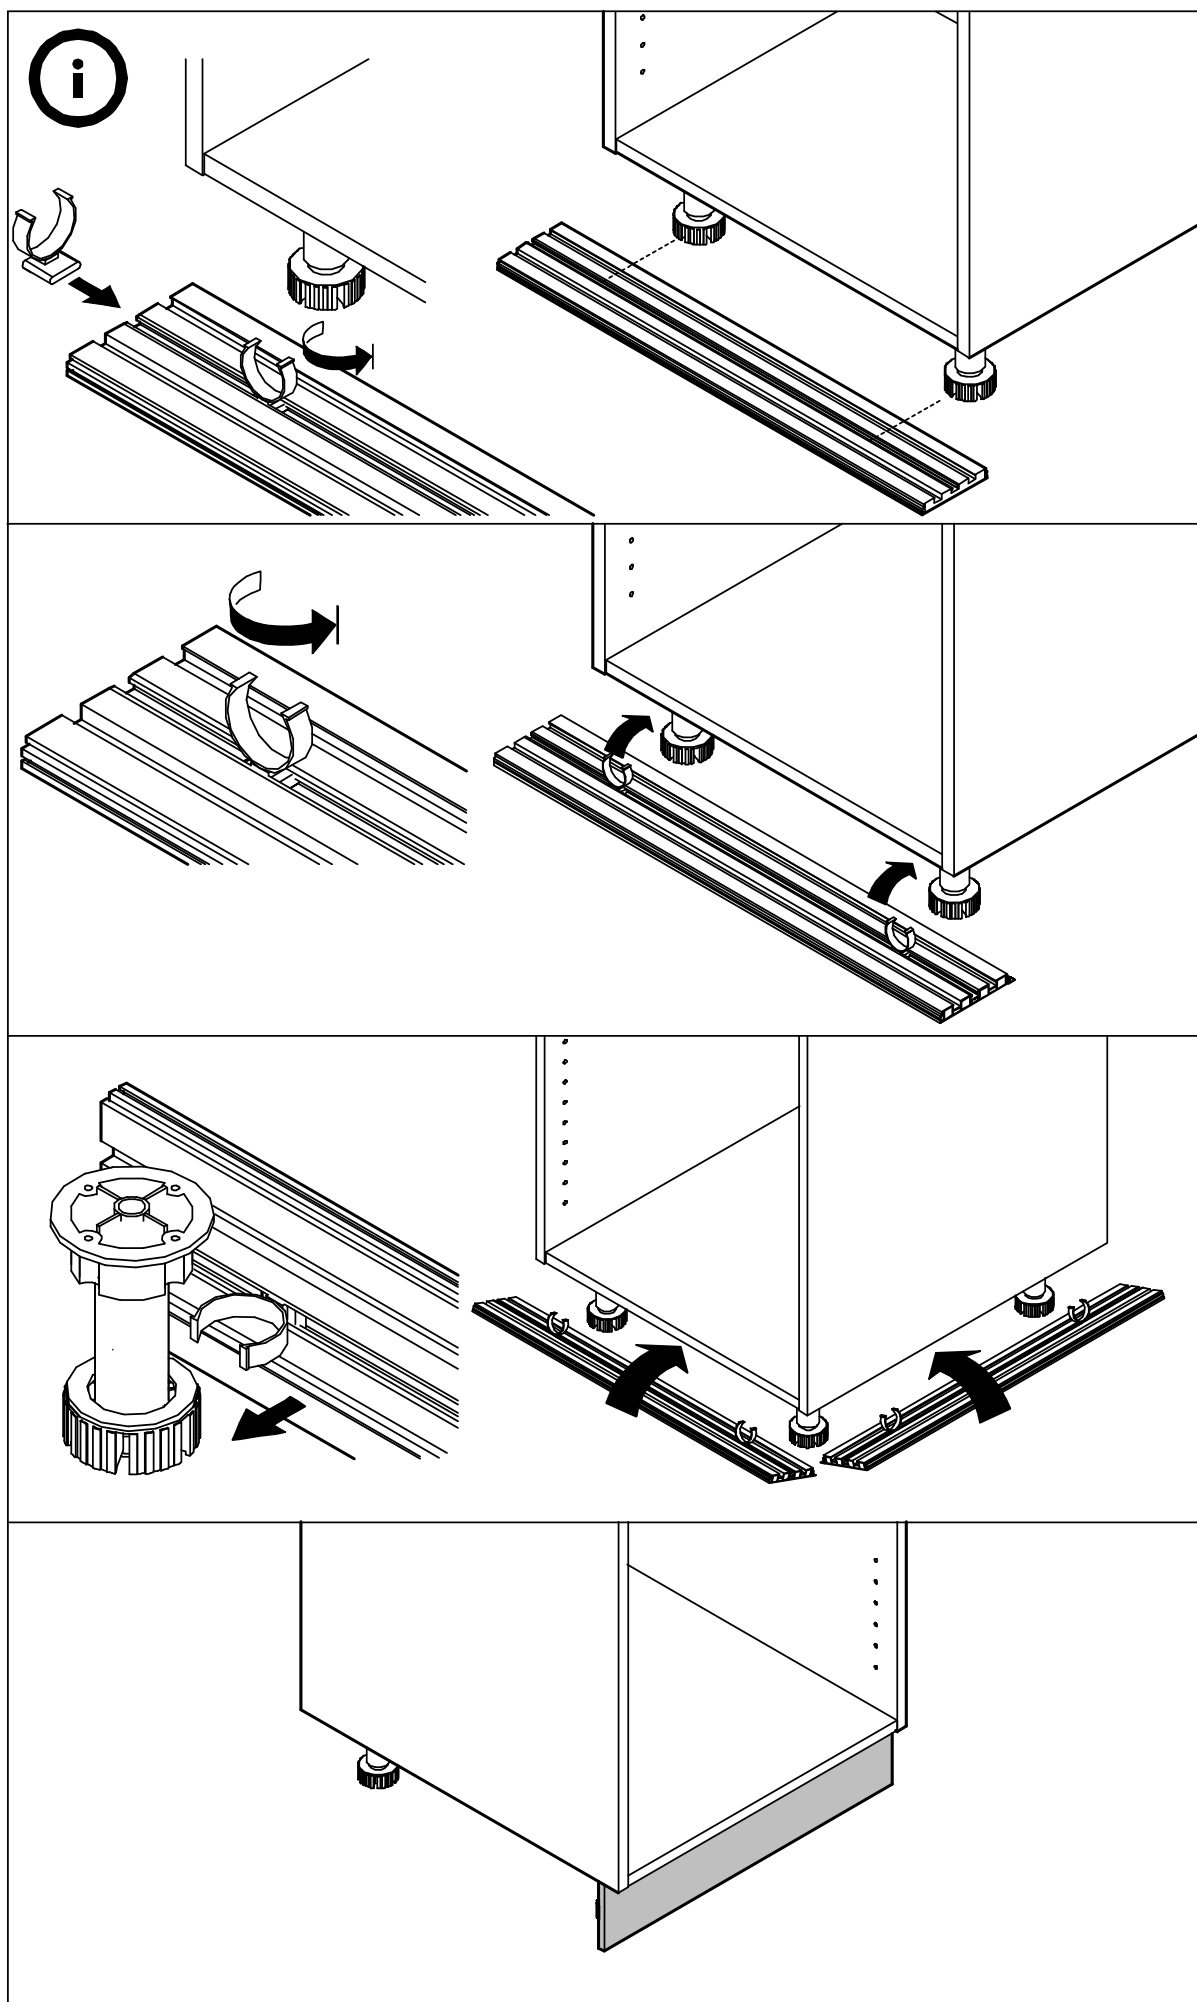

HARDWARE


-BODY SET



x 8



x 8



(8x35)

x 10



M4x30mm.

x 8




M4x16mm.


x 16



x 4




x 2

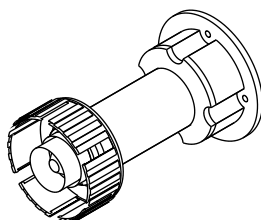


x4



1.

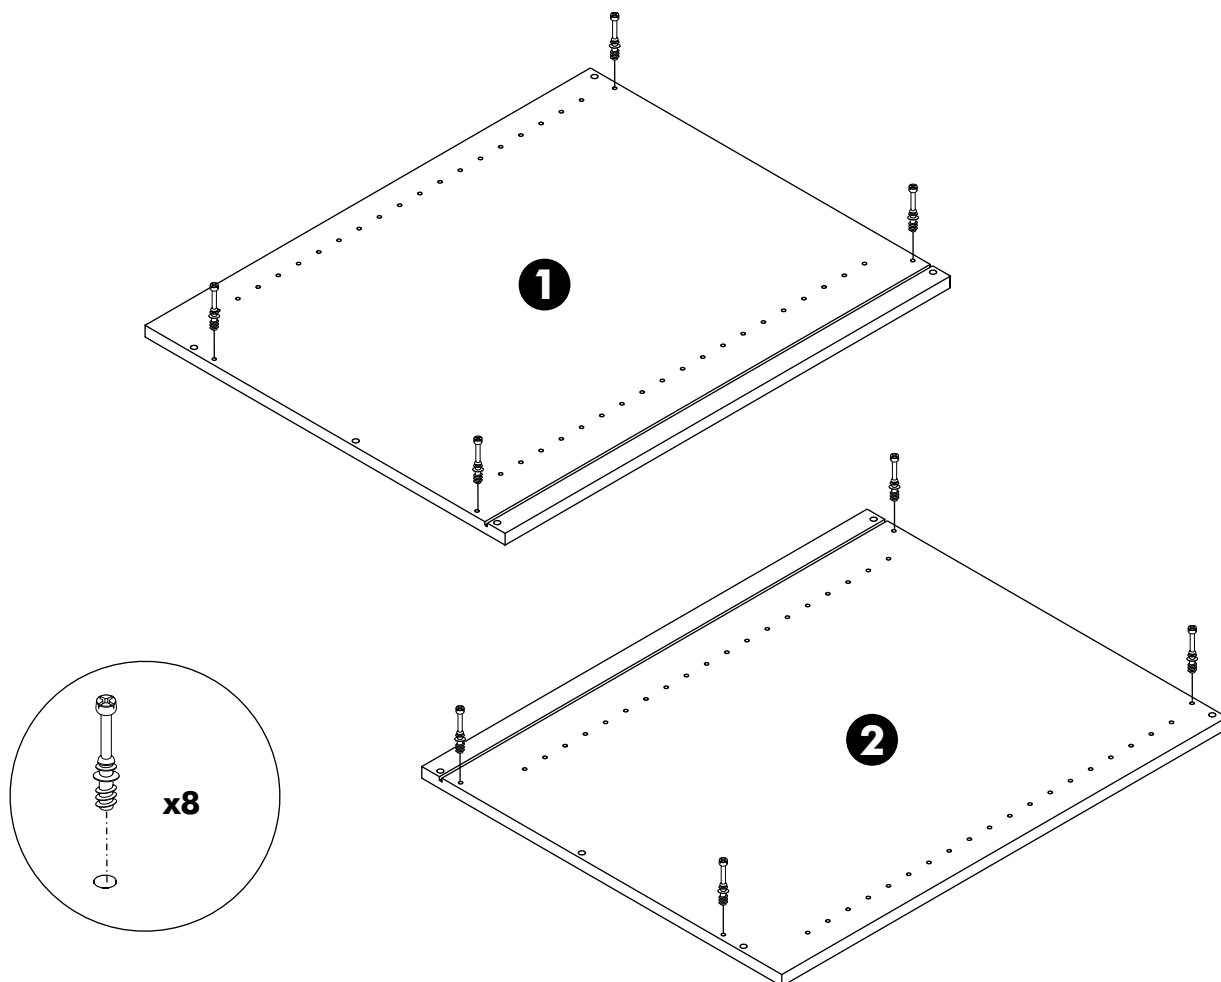


2.

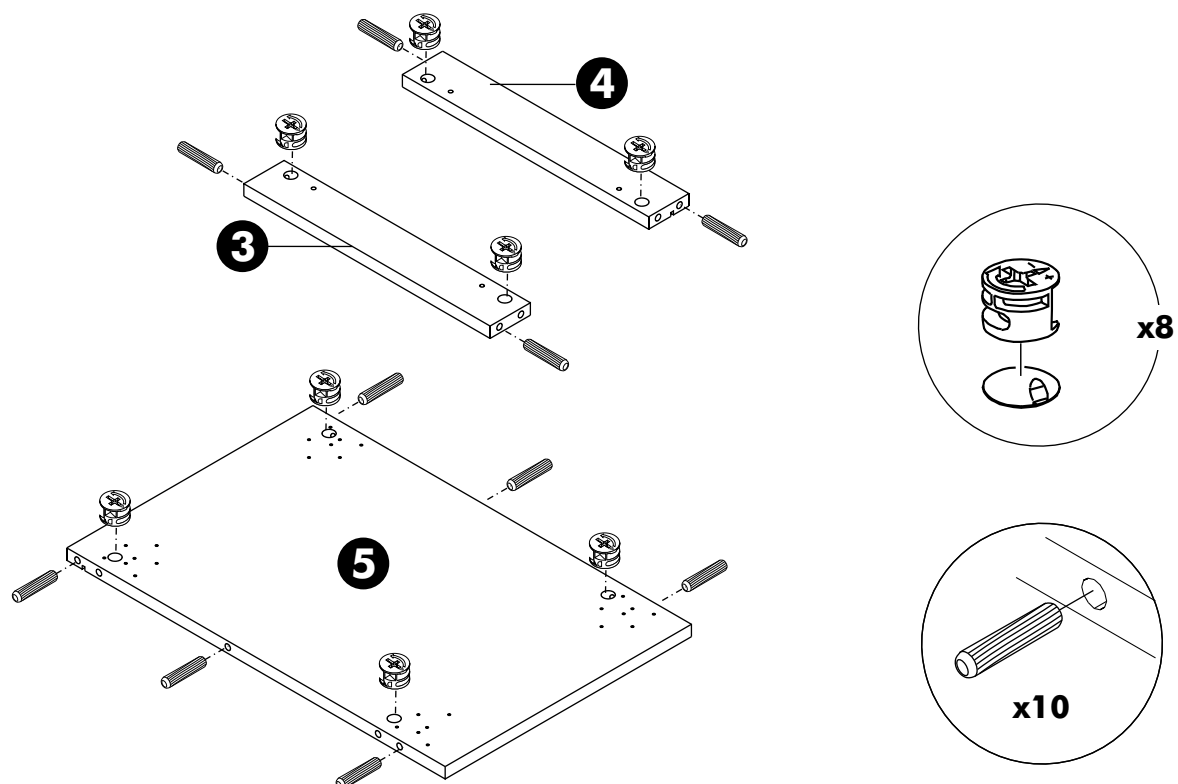

3.

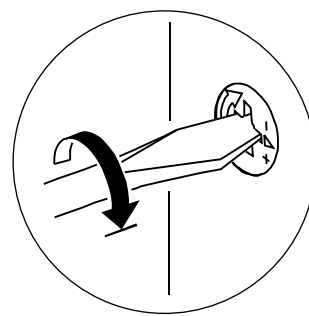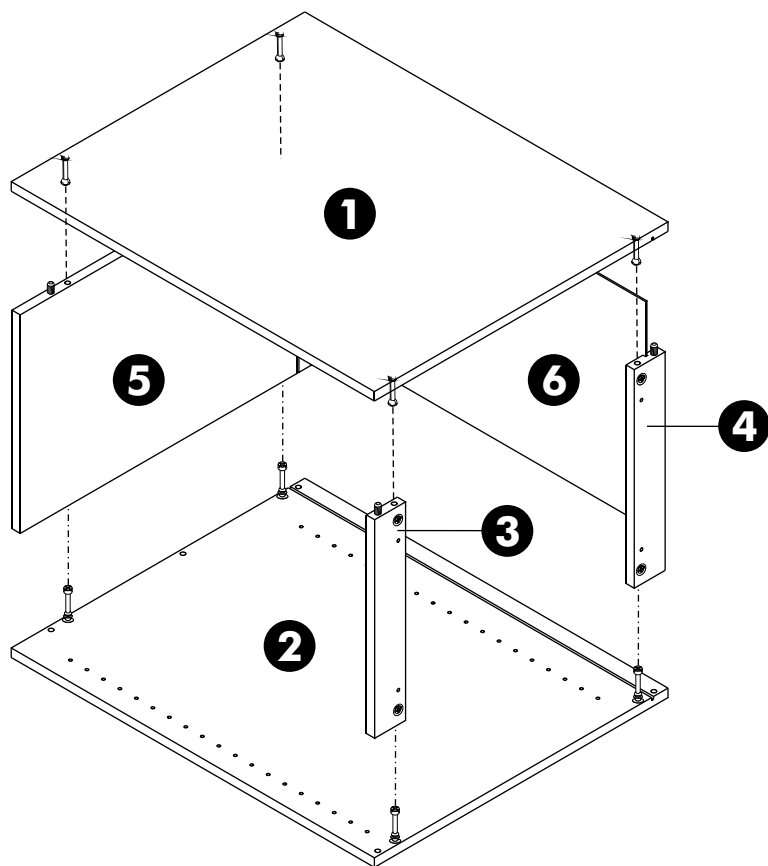




4.(A)






M4x16mm.

x16



x4

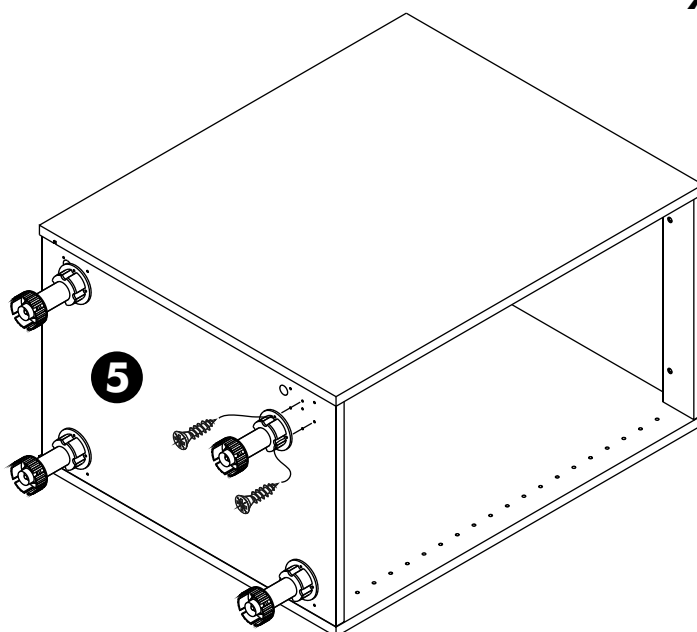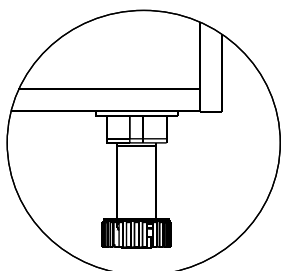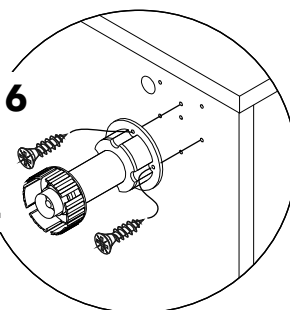


4.(B)

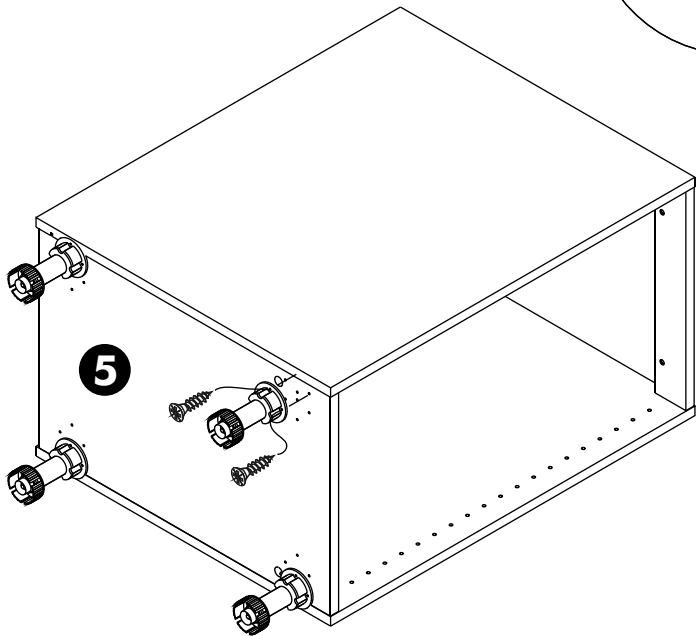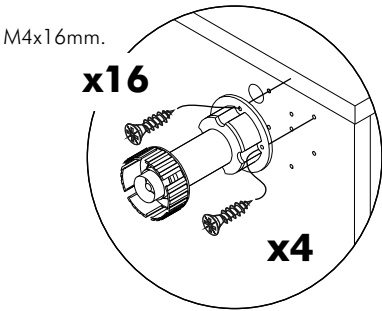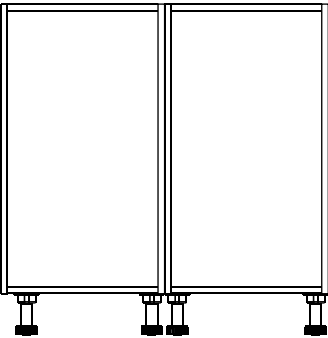



5.

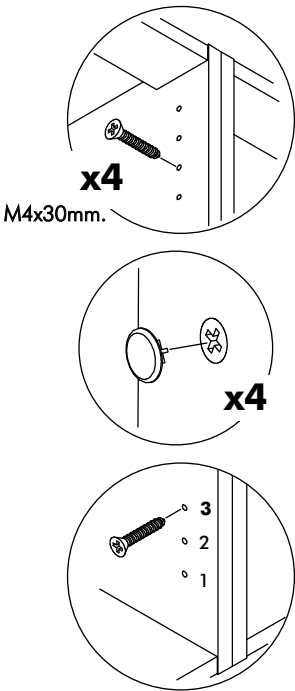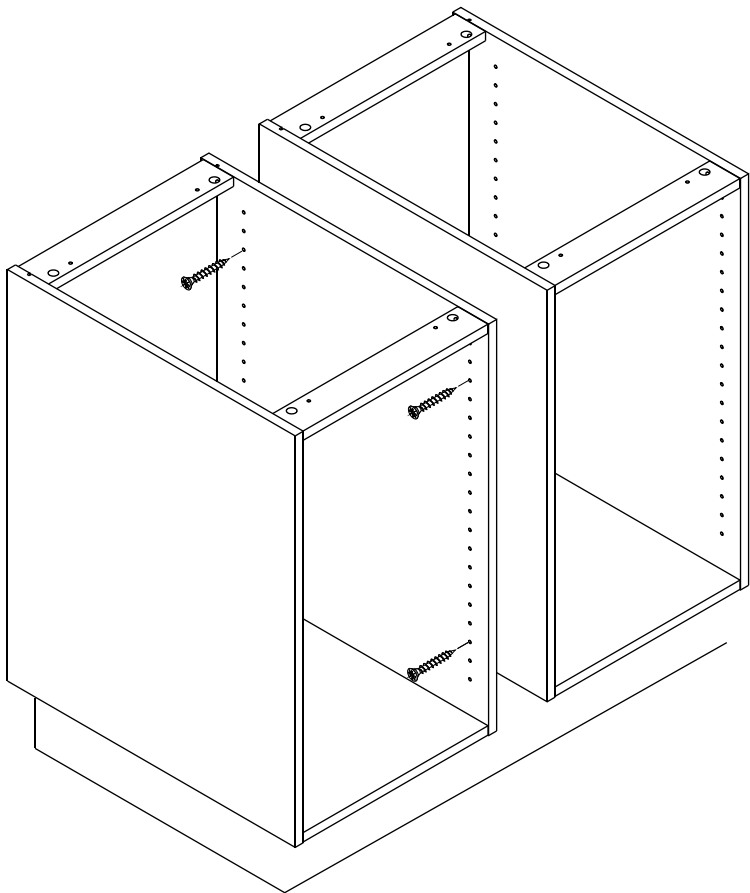

6.

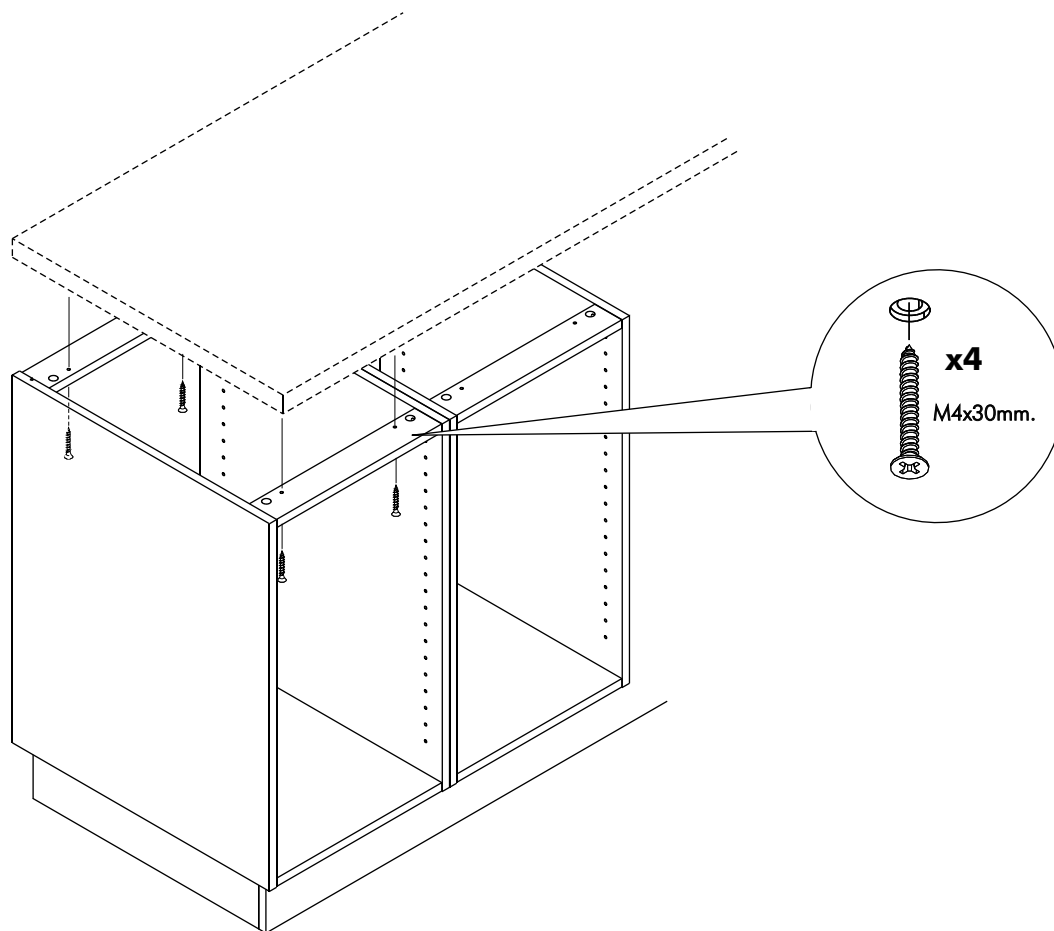

A.

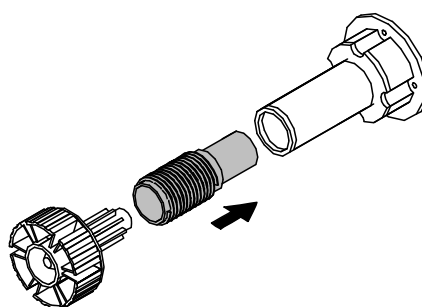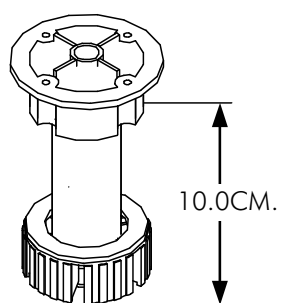

B.

