



SMART KIT

High Cabinet W600xH1347

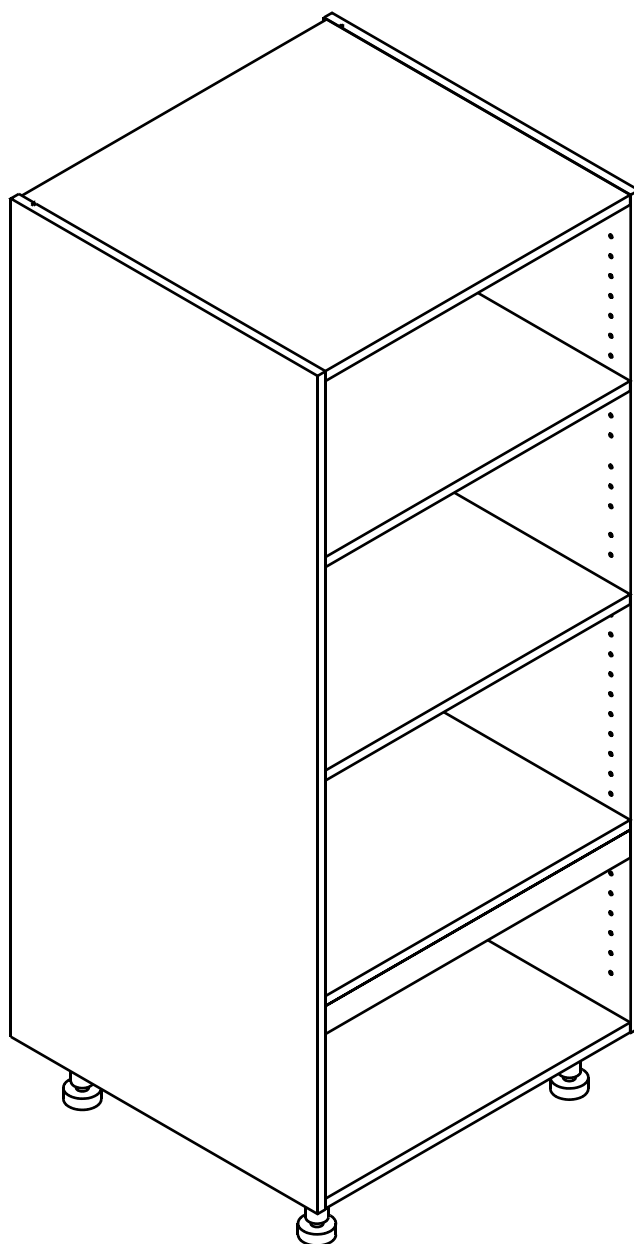


CONNECT SYSTEM

1

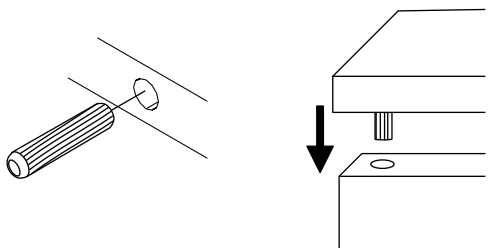


2

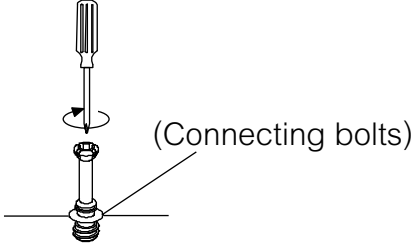



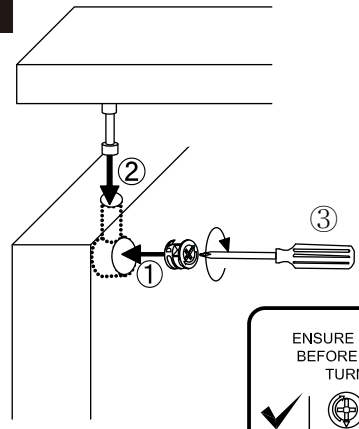



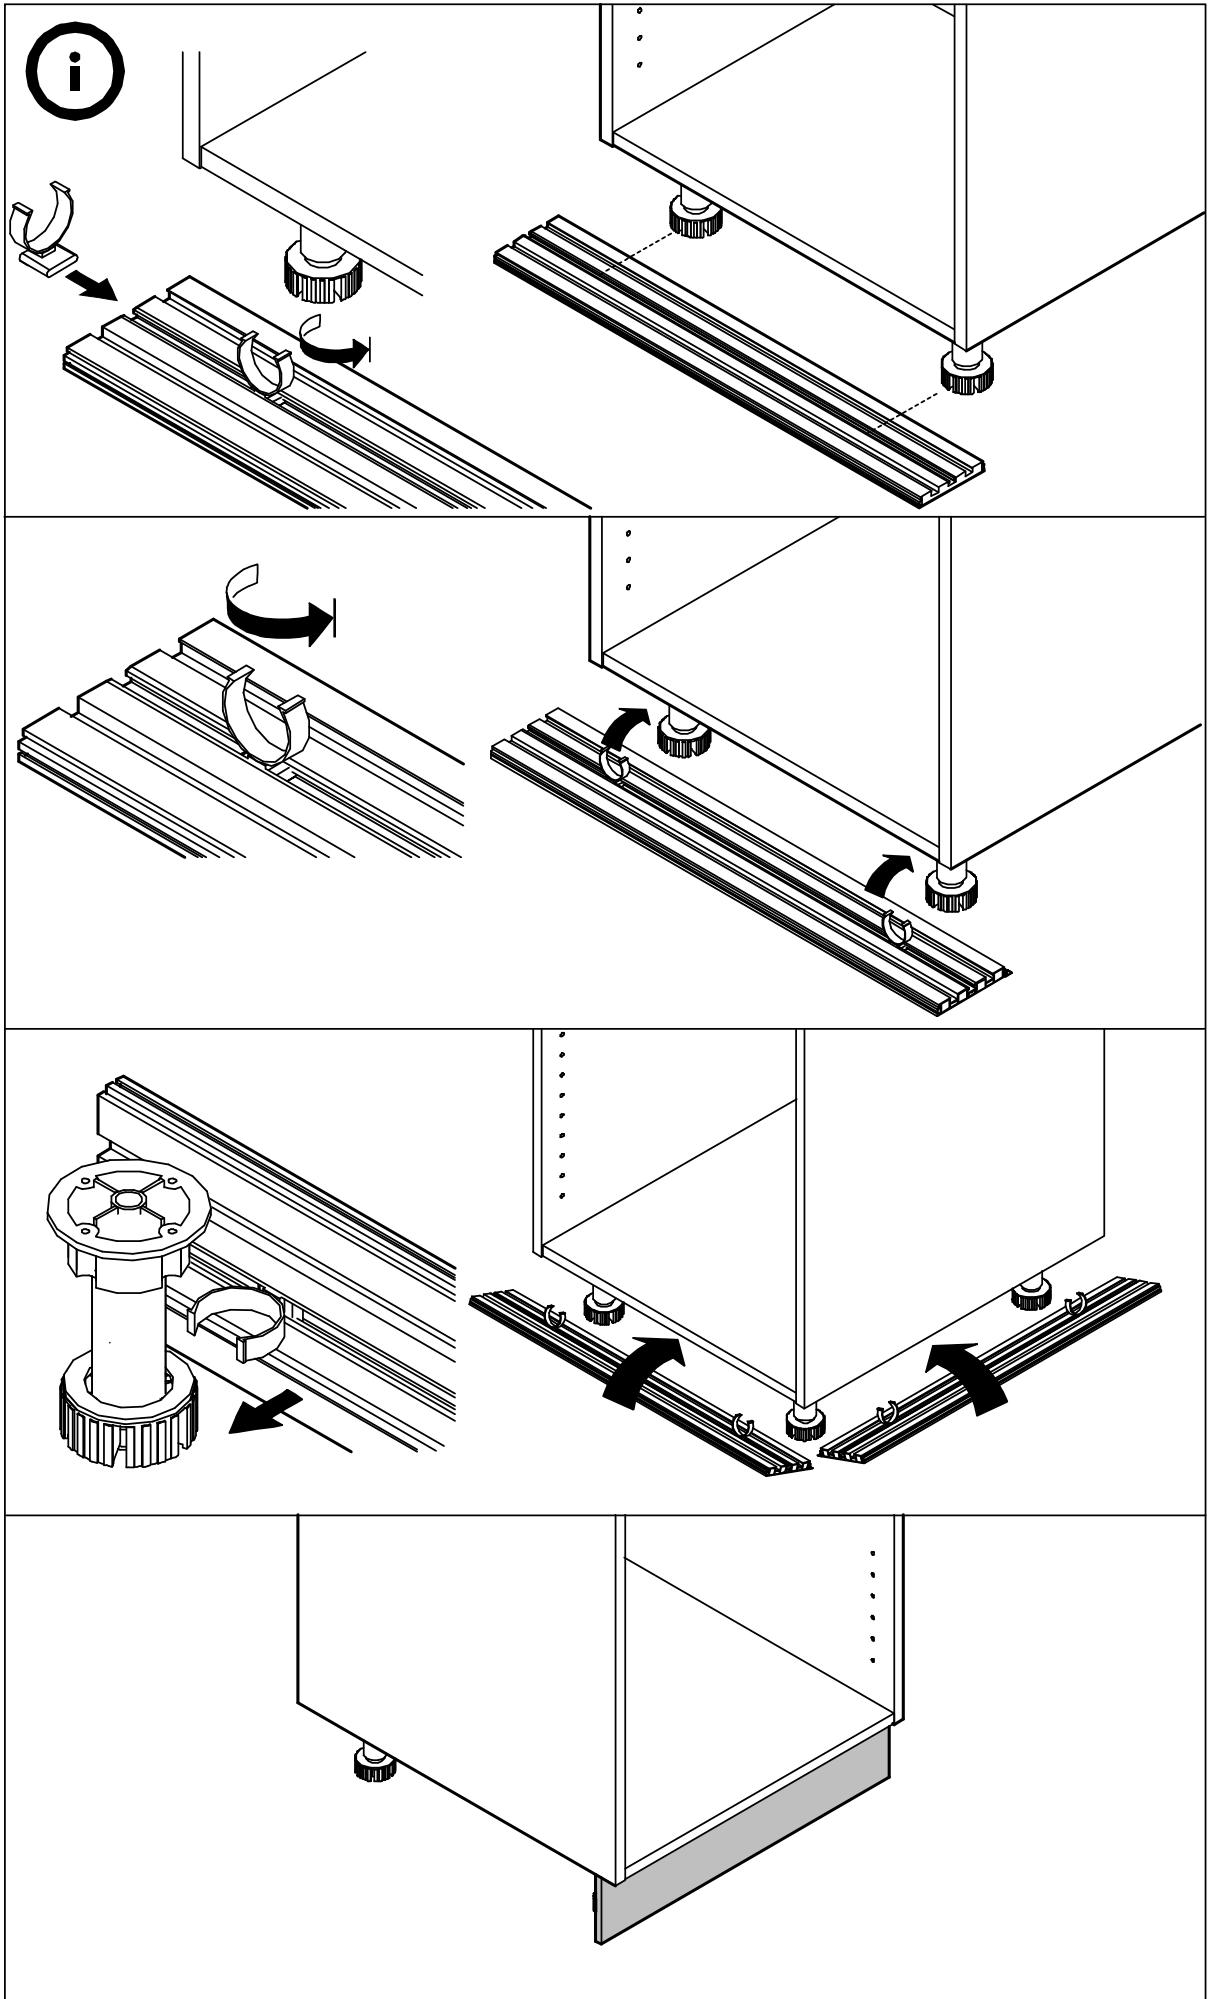
(Connecting bolts)

3




WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓				✗
				
	CORRECT	WRONG		



HARDWARE


-BODY SET



x 8



x 8



(8x35)

x 12



M4x30mm.

x 4




M4x16mm.


x 28



x 4




x 2




x 12





x 12

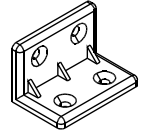






x 3

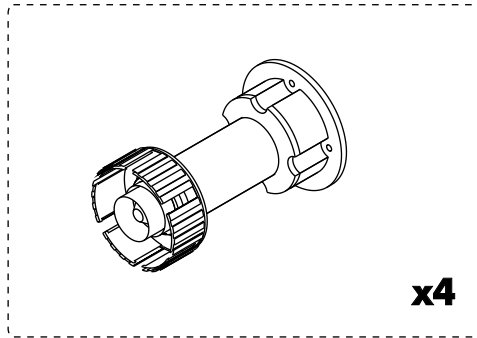



x4

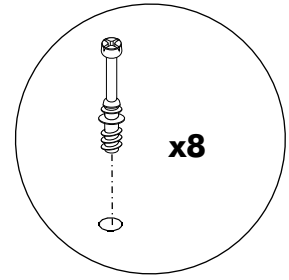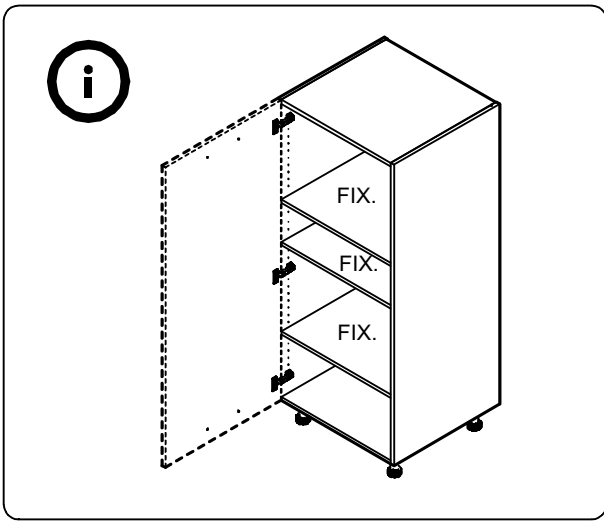



1.

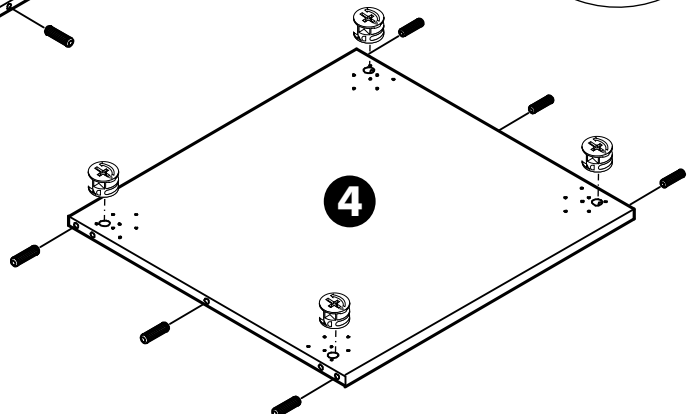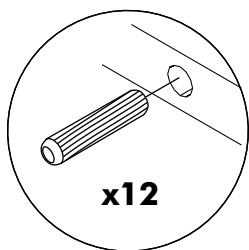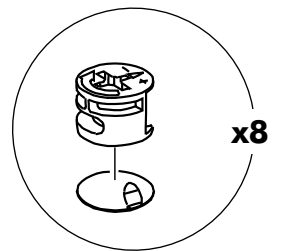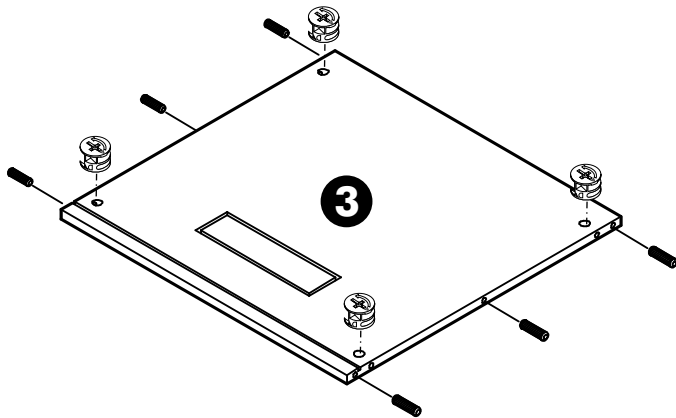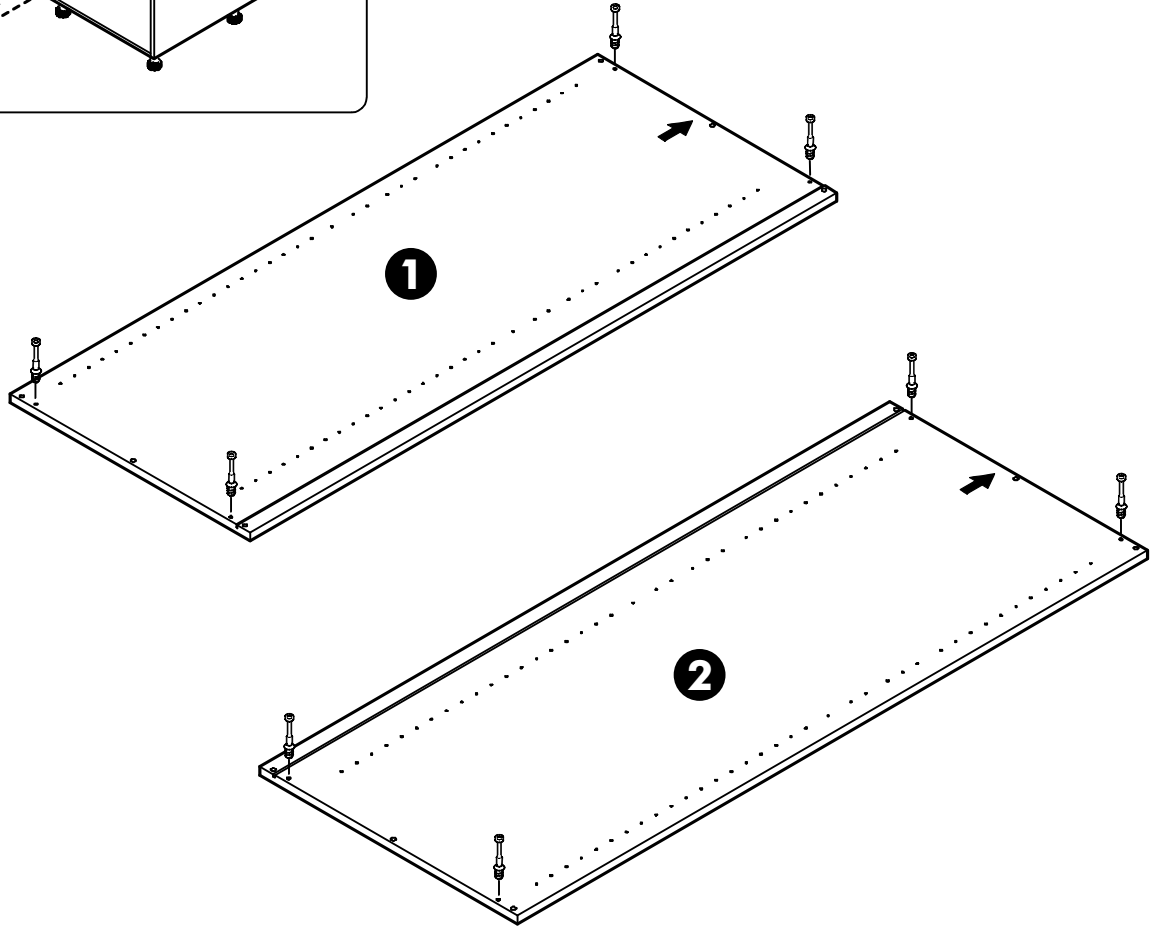



2.

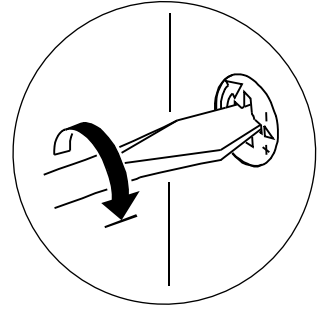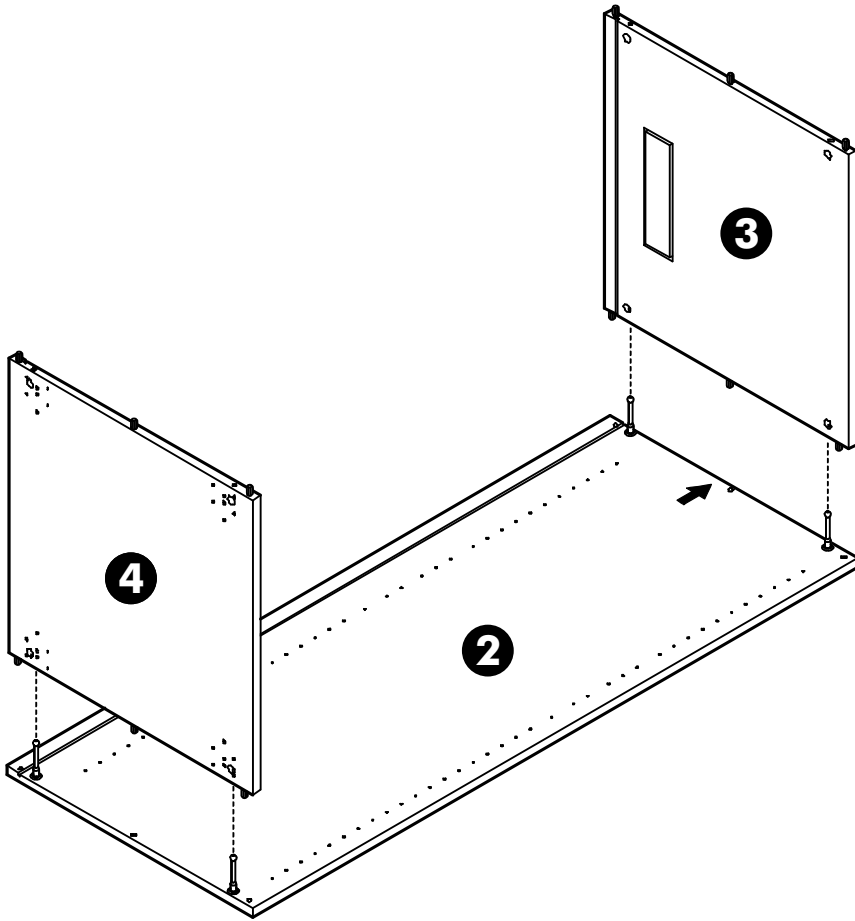



3.

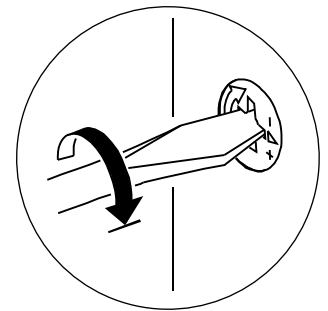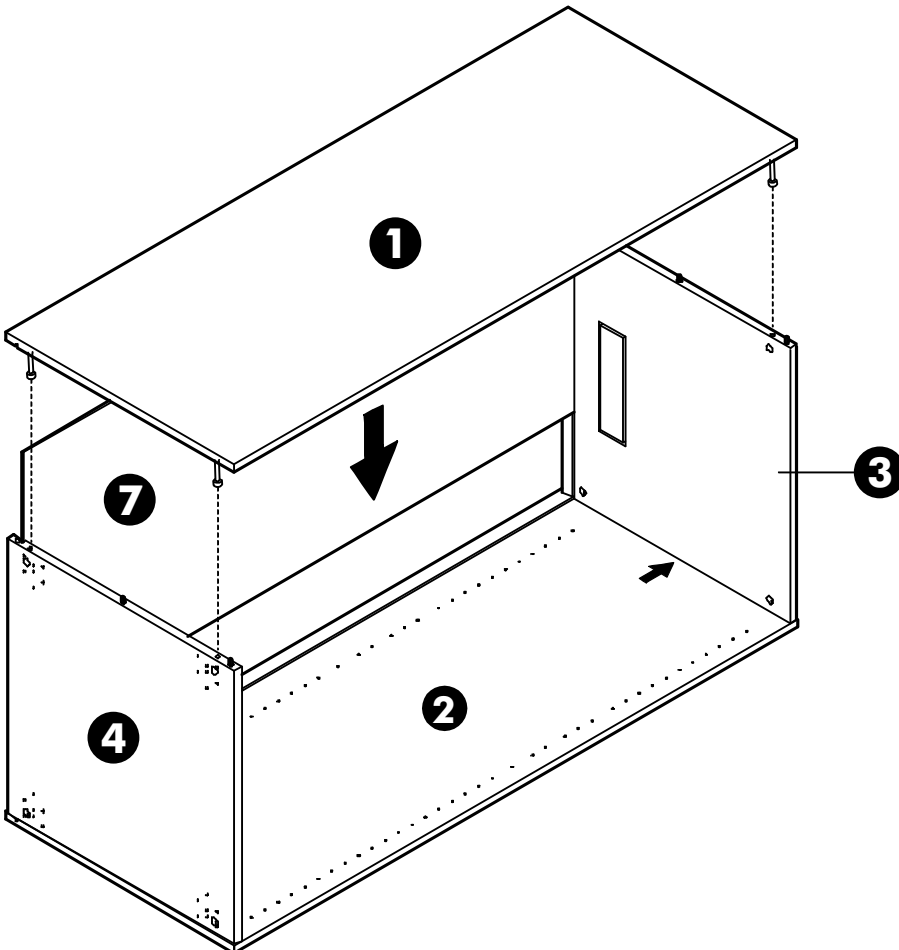


4.(A)

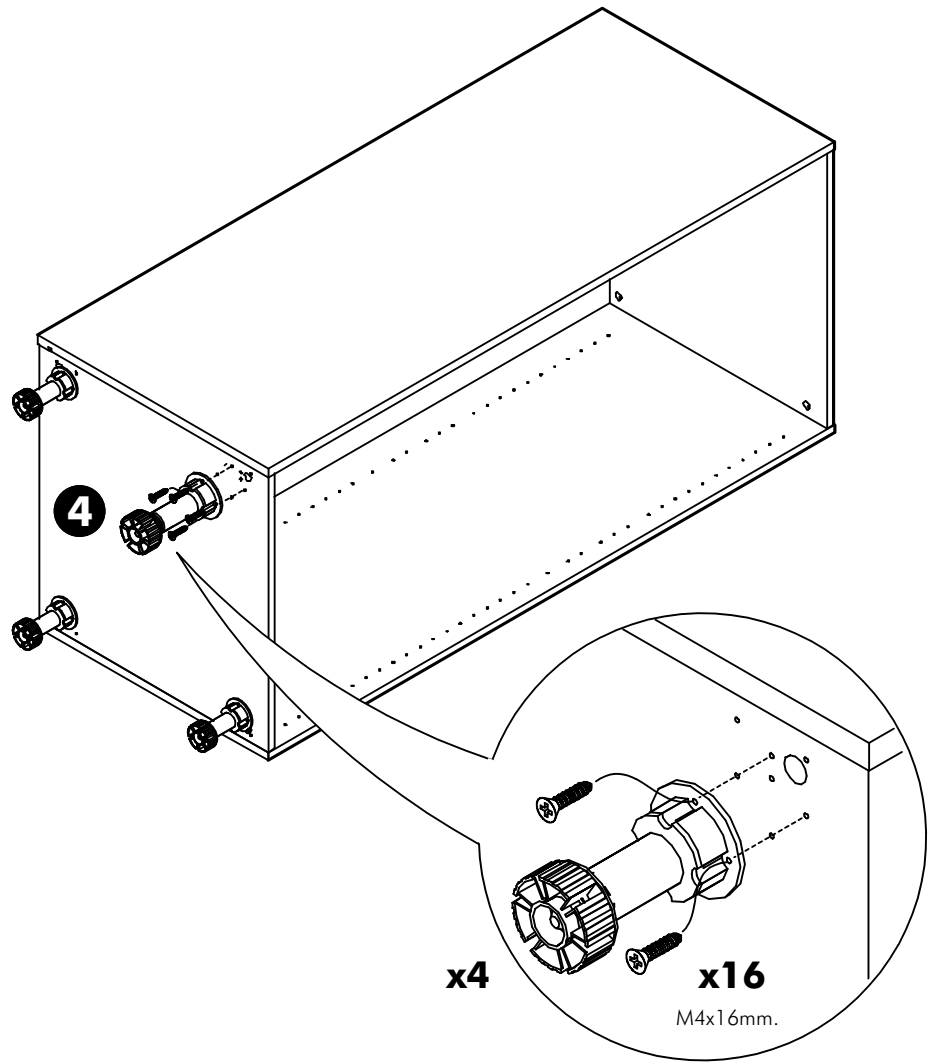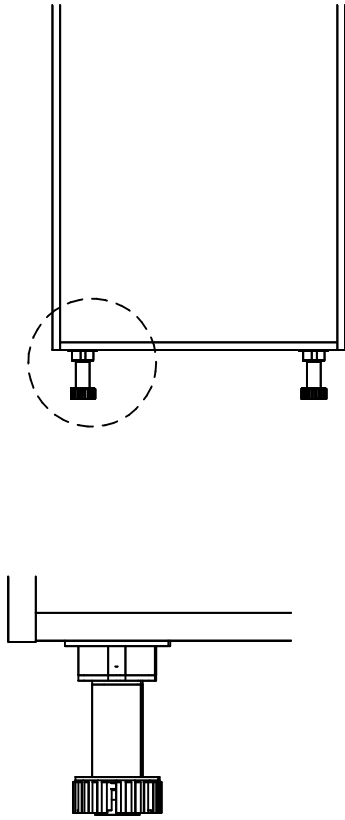


4.(B)

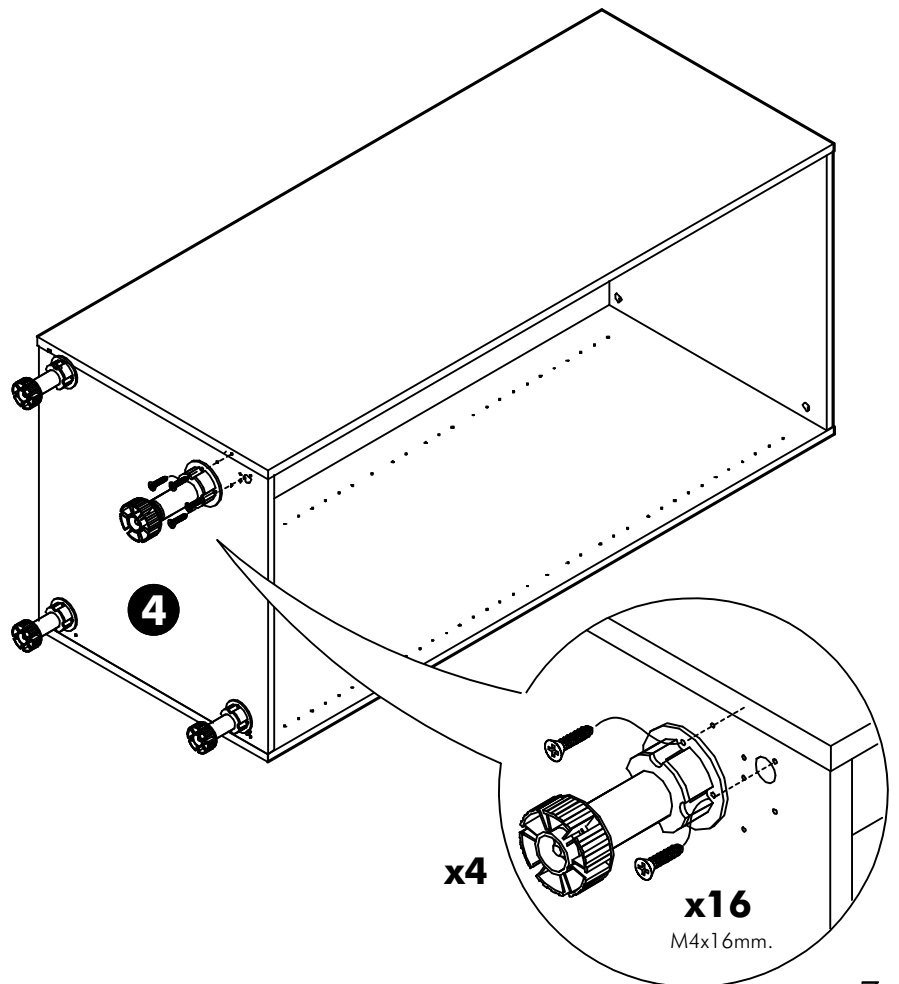
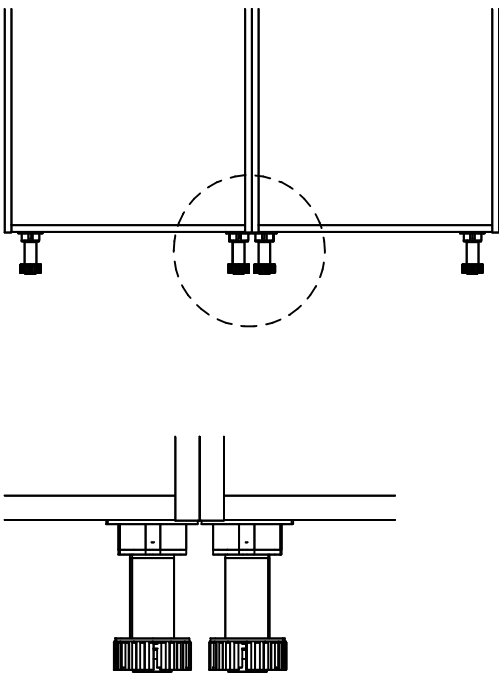


5.

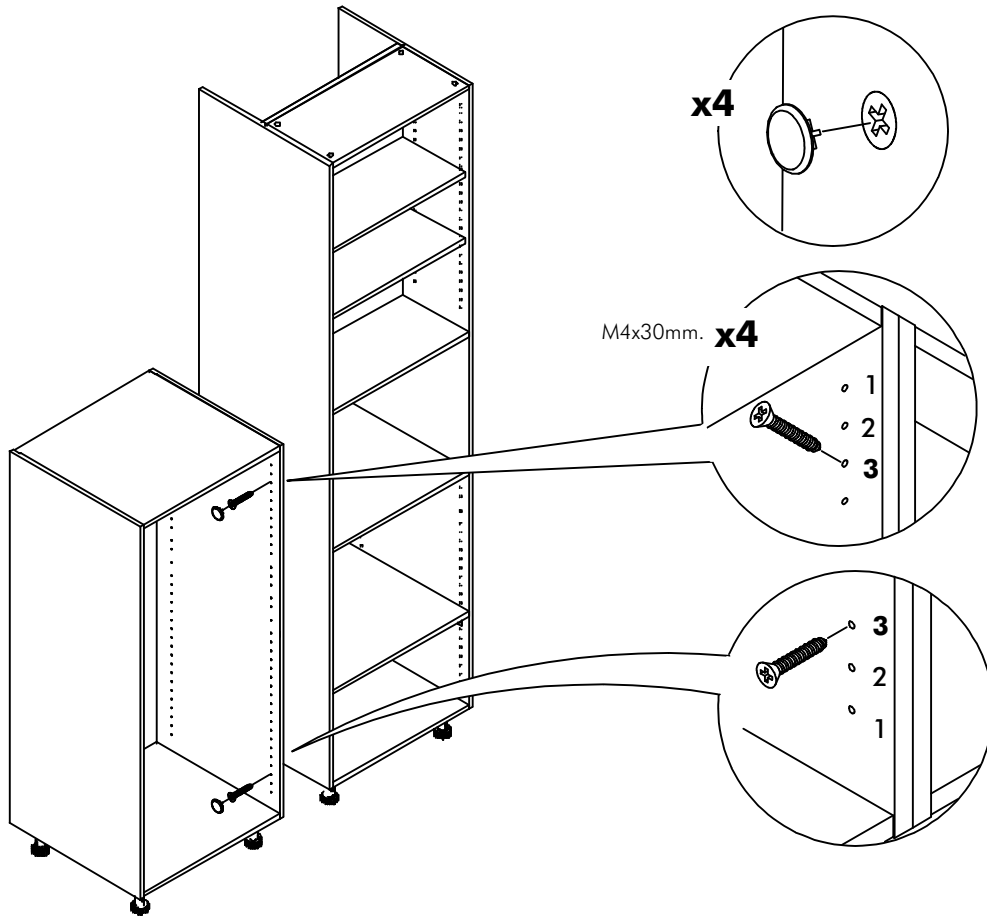

6.

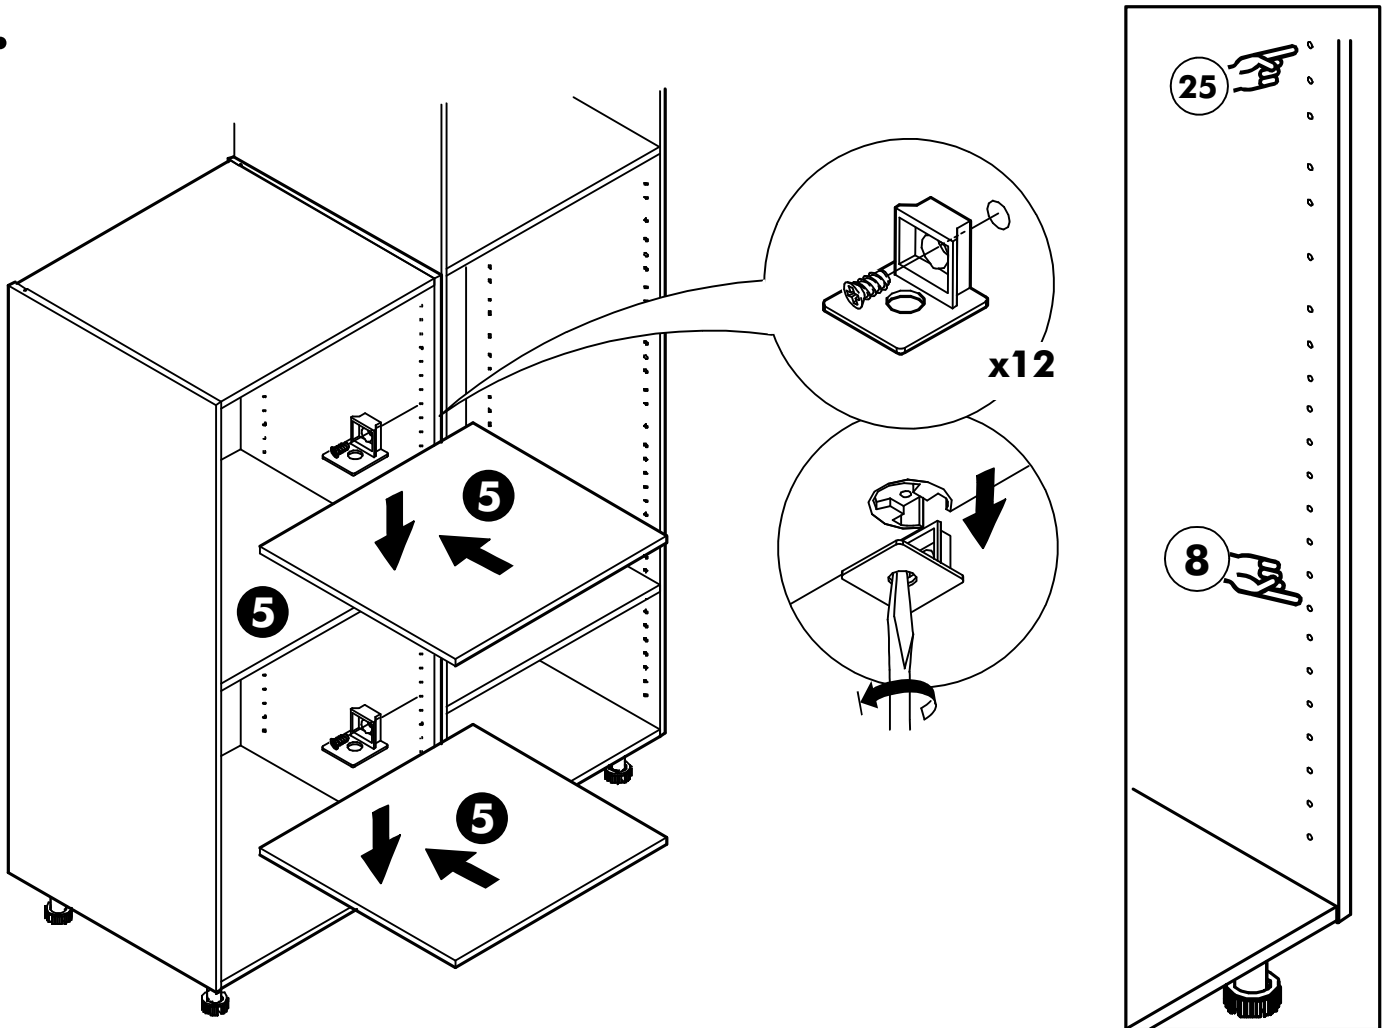


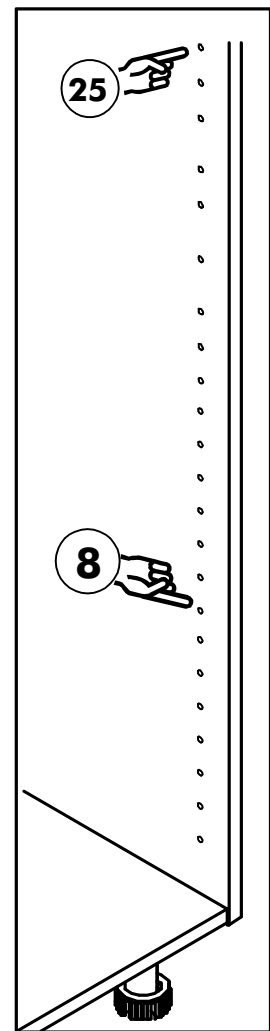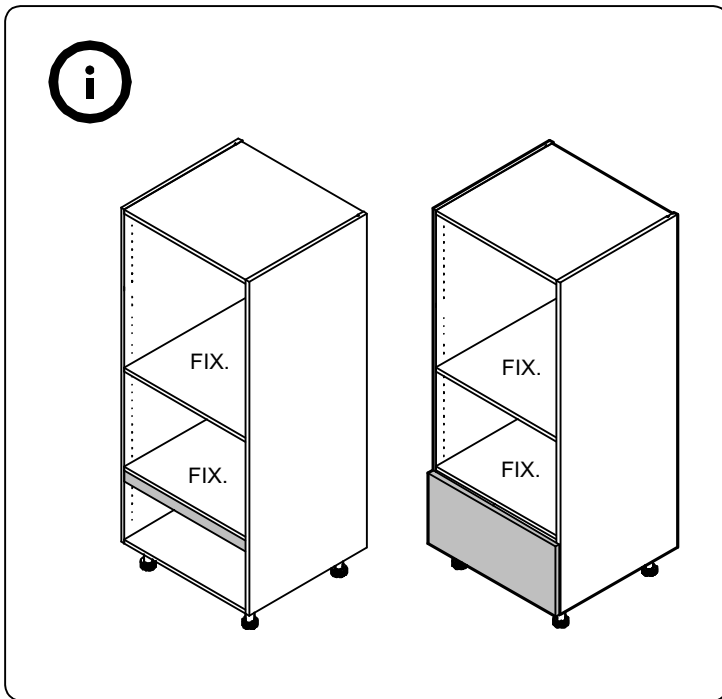




Option 1.

- POMODORO
- PORRO PLUS
- RICOTTA
- PERA
- OLIVA




1.


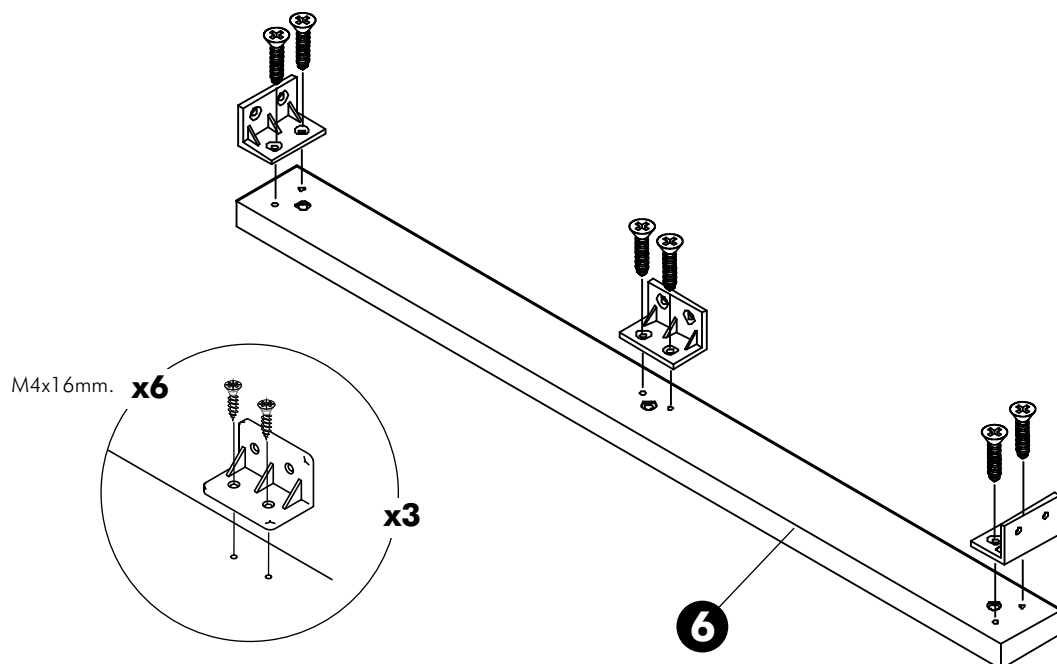


2.

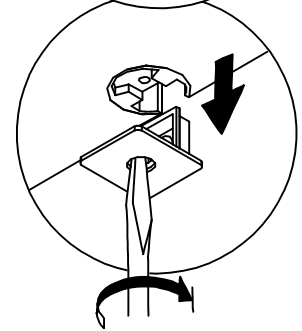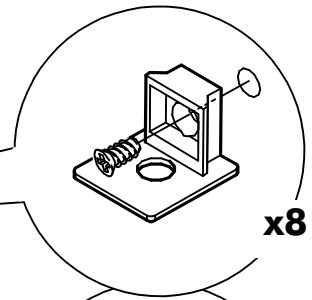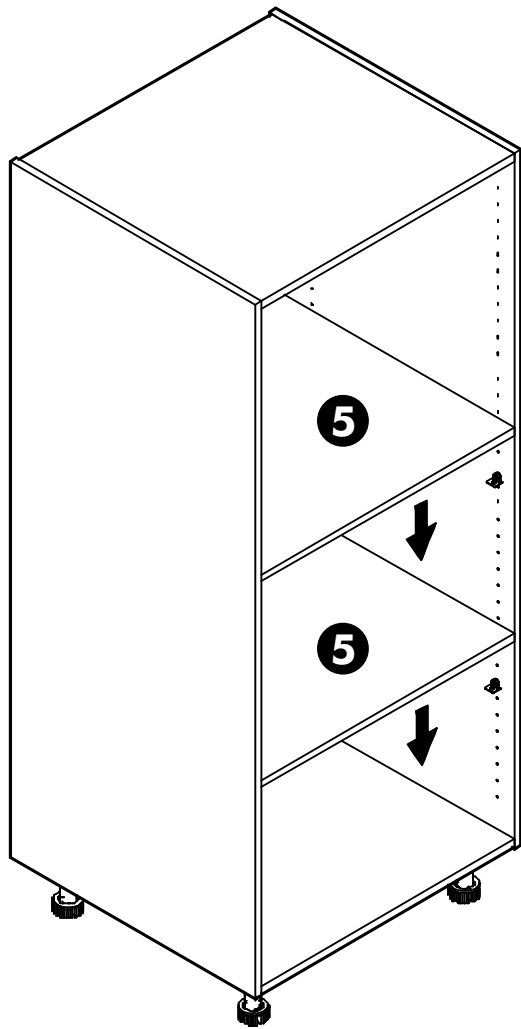

3.

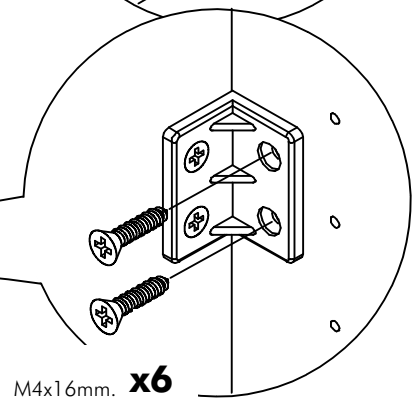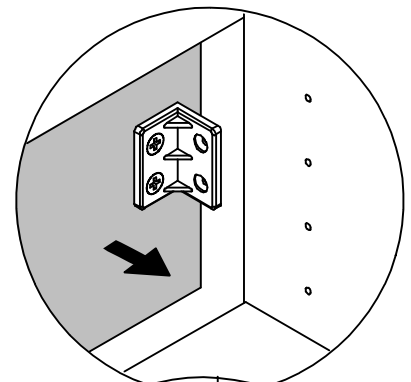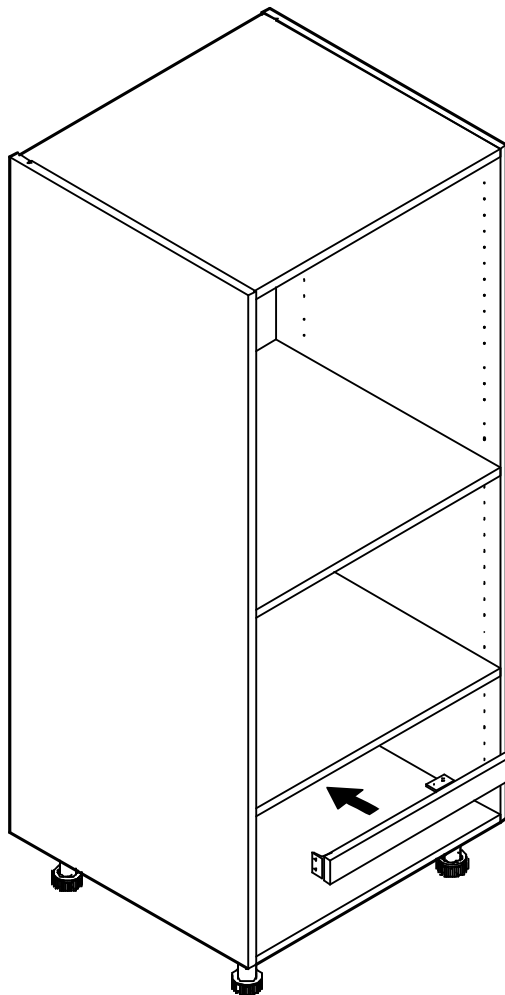


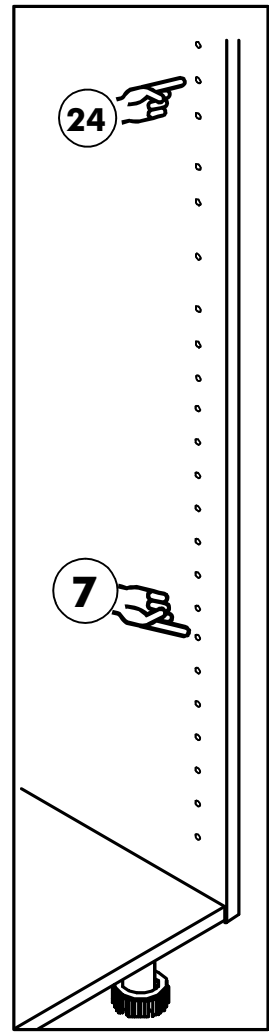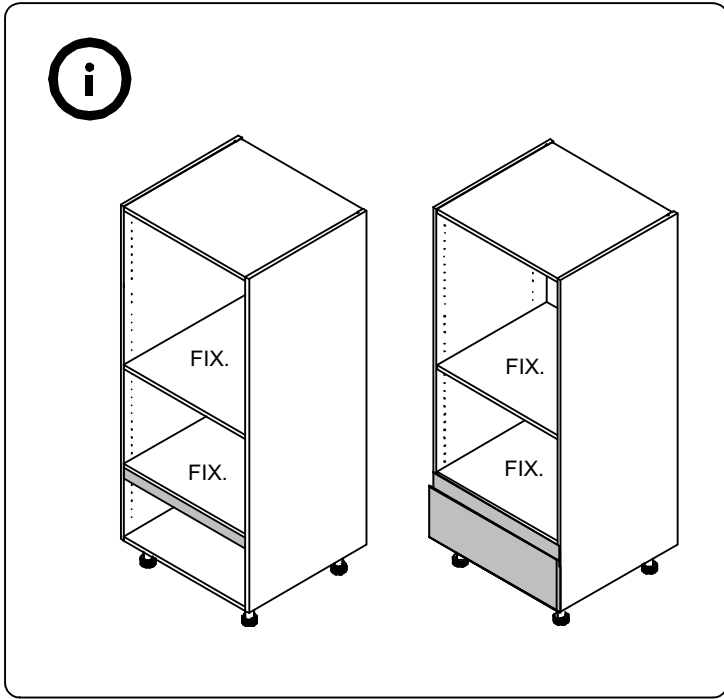


Option 2.

- ILLUSION


1.


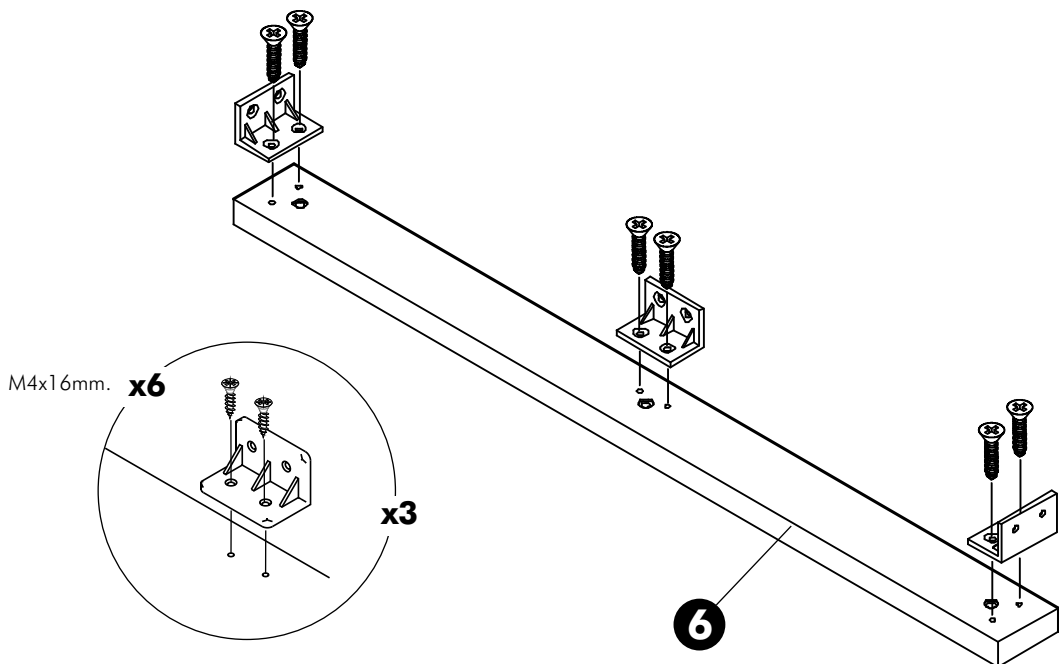


2.

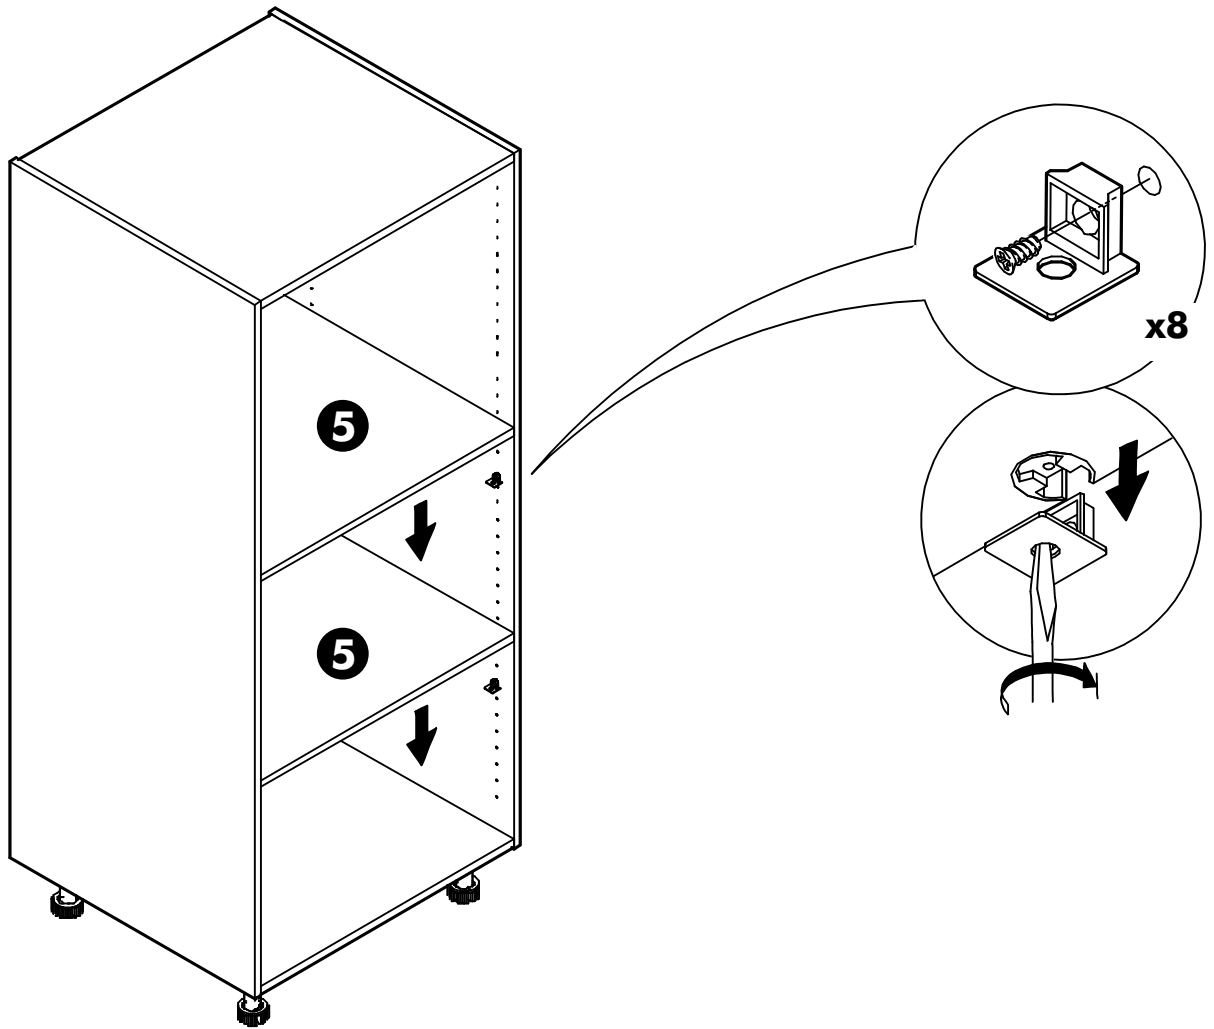




3.


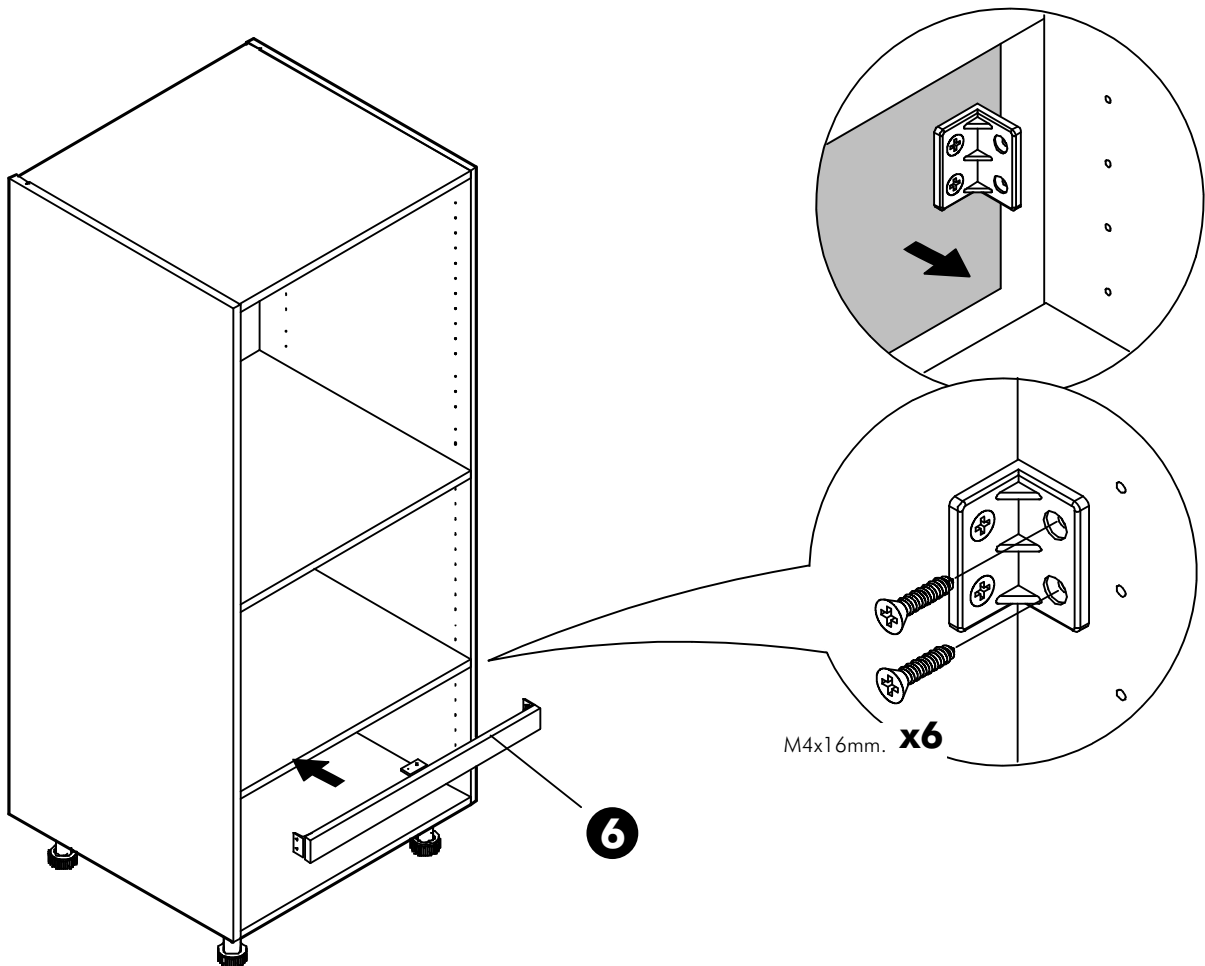


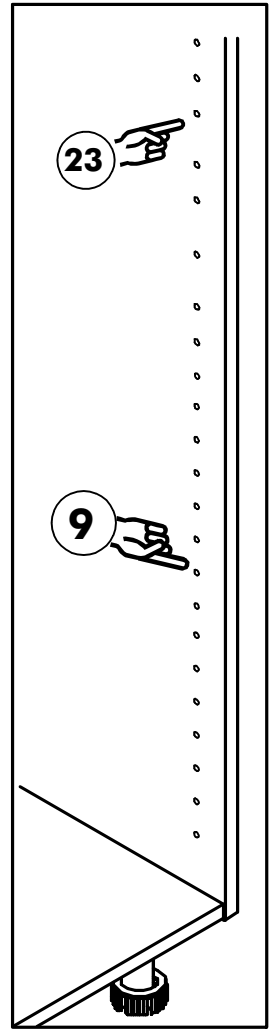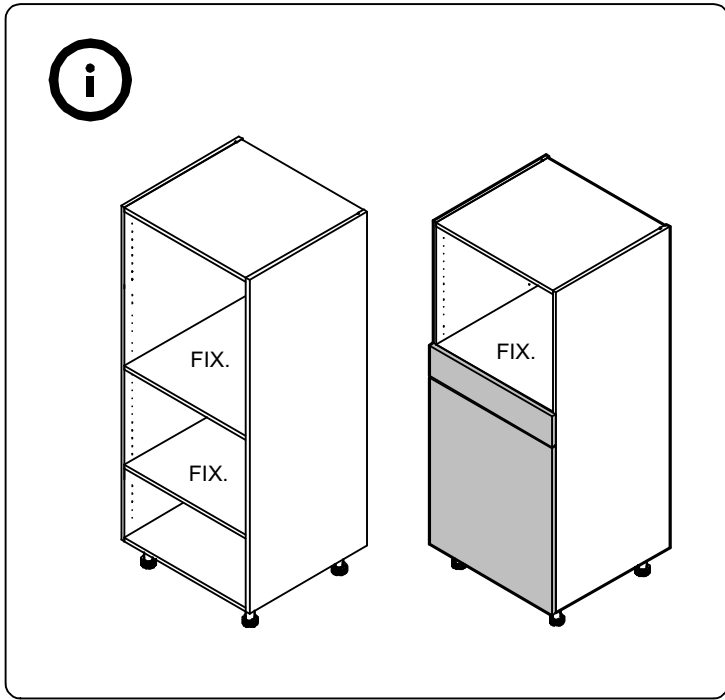

Option 3.


- GELATO
- POMODORO
- PORRO PLUS
- RICOTTA
- PERA
- OLIVA

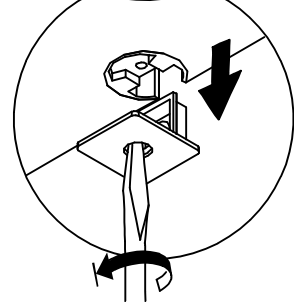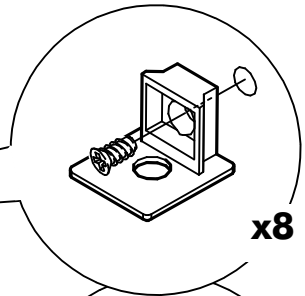
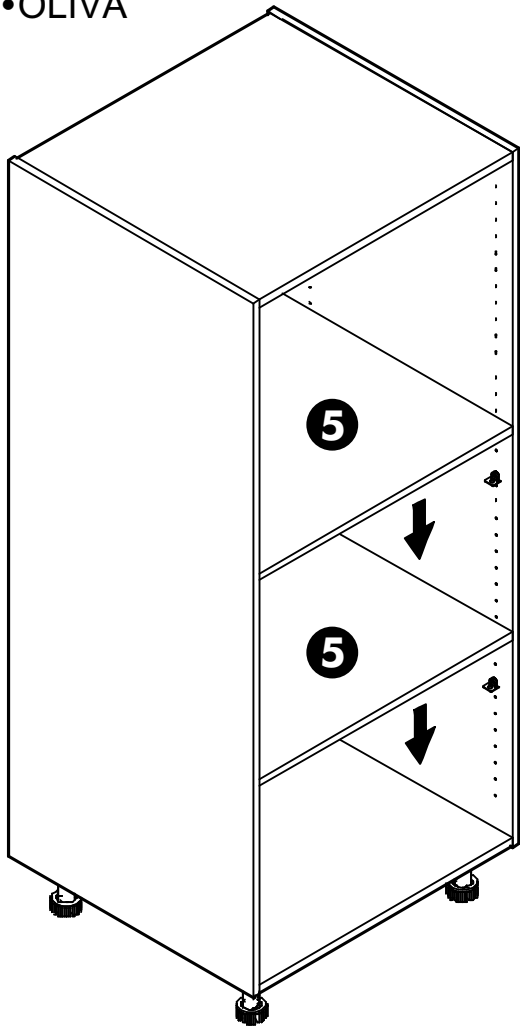


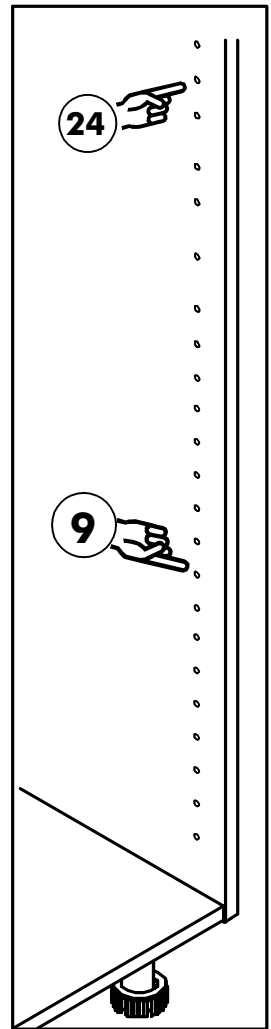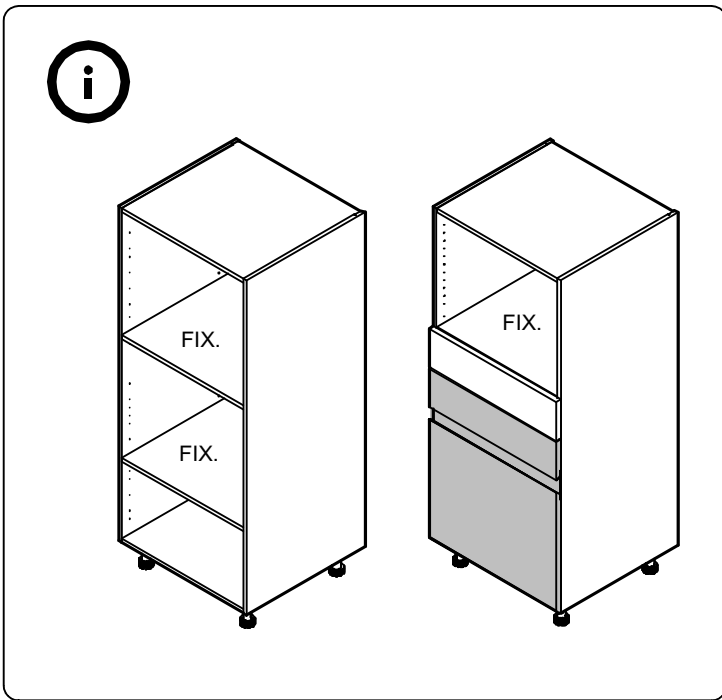

Option 4.



- ILLUSION

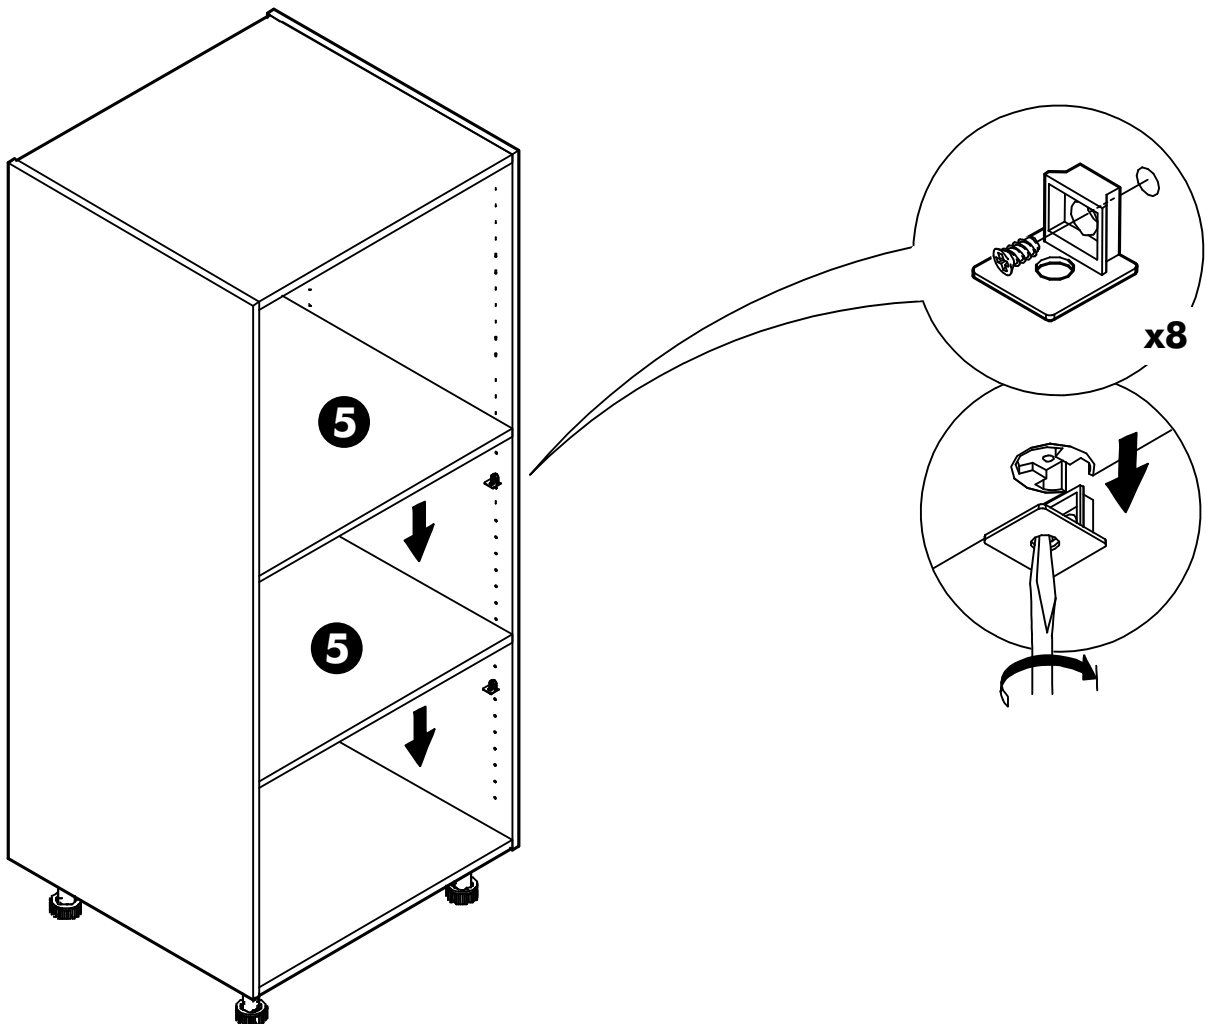

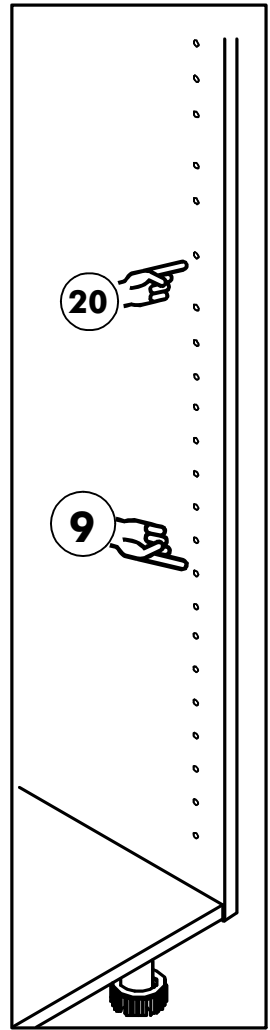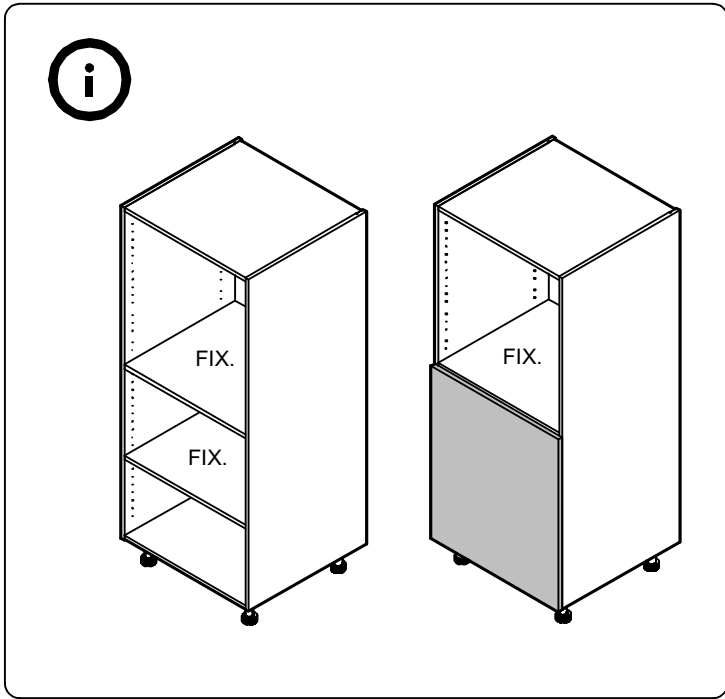



Option 5.

- POMODORO
- PORRO PLUS
- ILLUSION
- RICOTTA
- PERA
- OLIVA

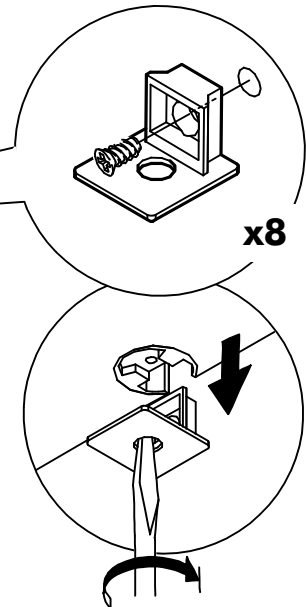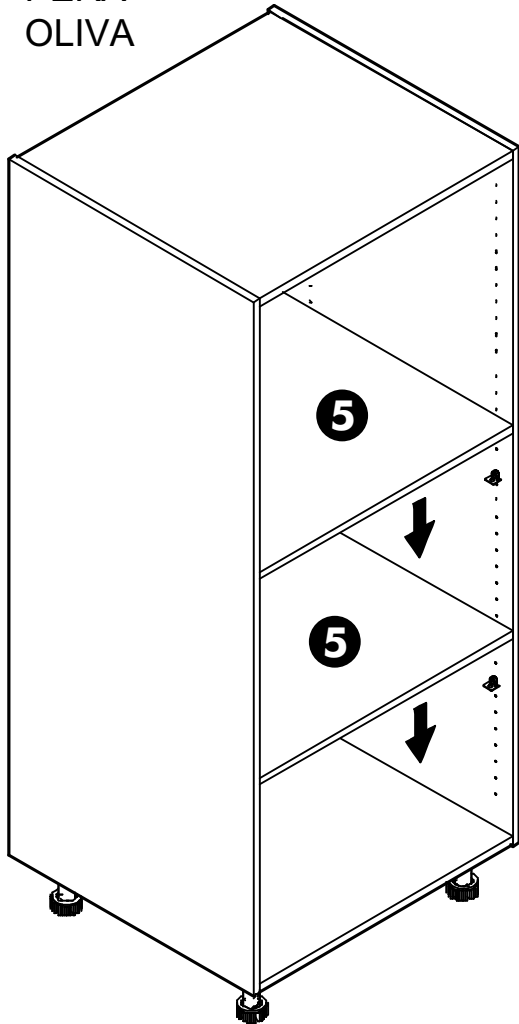



A.

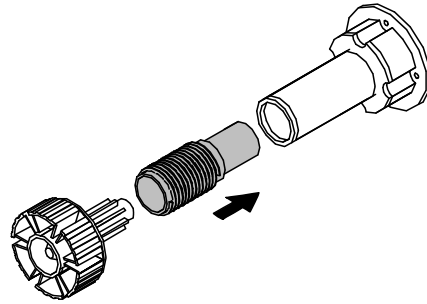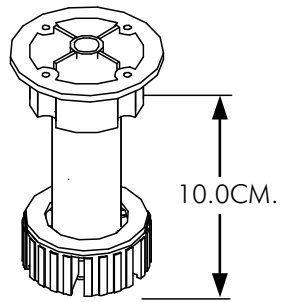

B.

