


SMART KIT


High Cabinet+LED W300-400xH2047

High Cabinet+LED W500-600xH2047

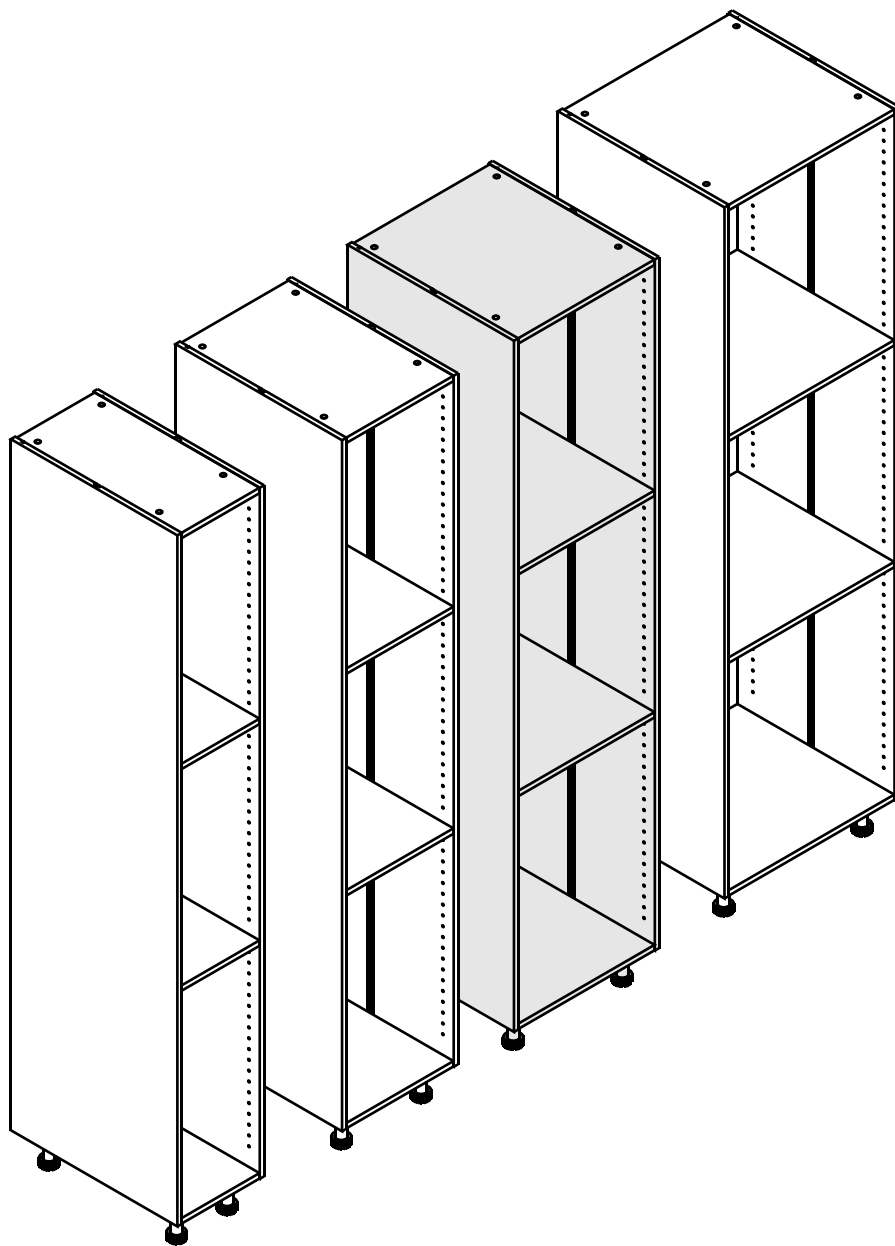


CONNECT SYSTEM


1

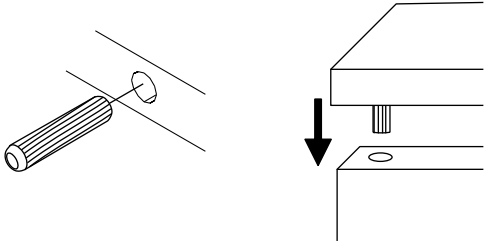

2

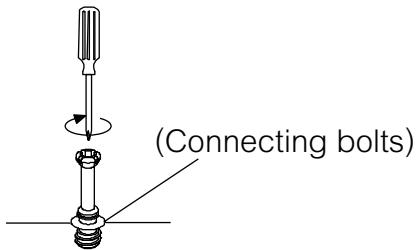


3

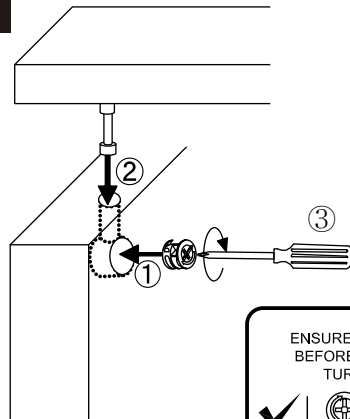


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓				✗
	CORRECT	WRONG		

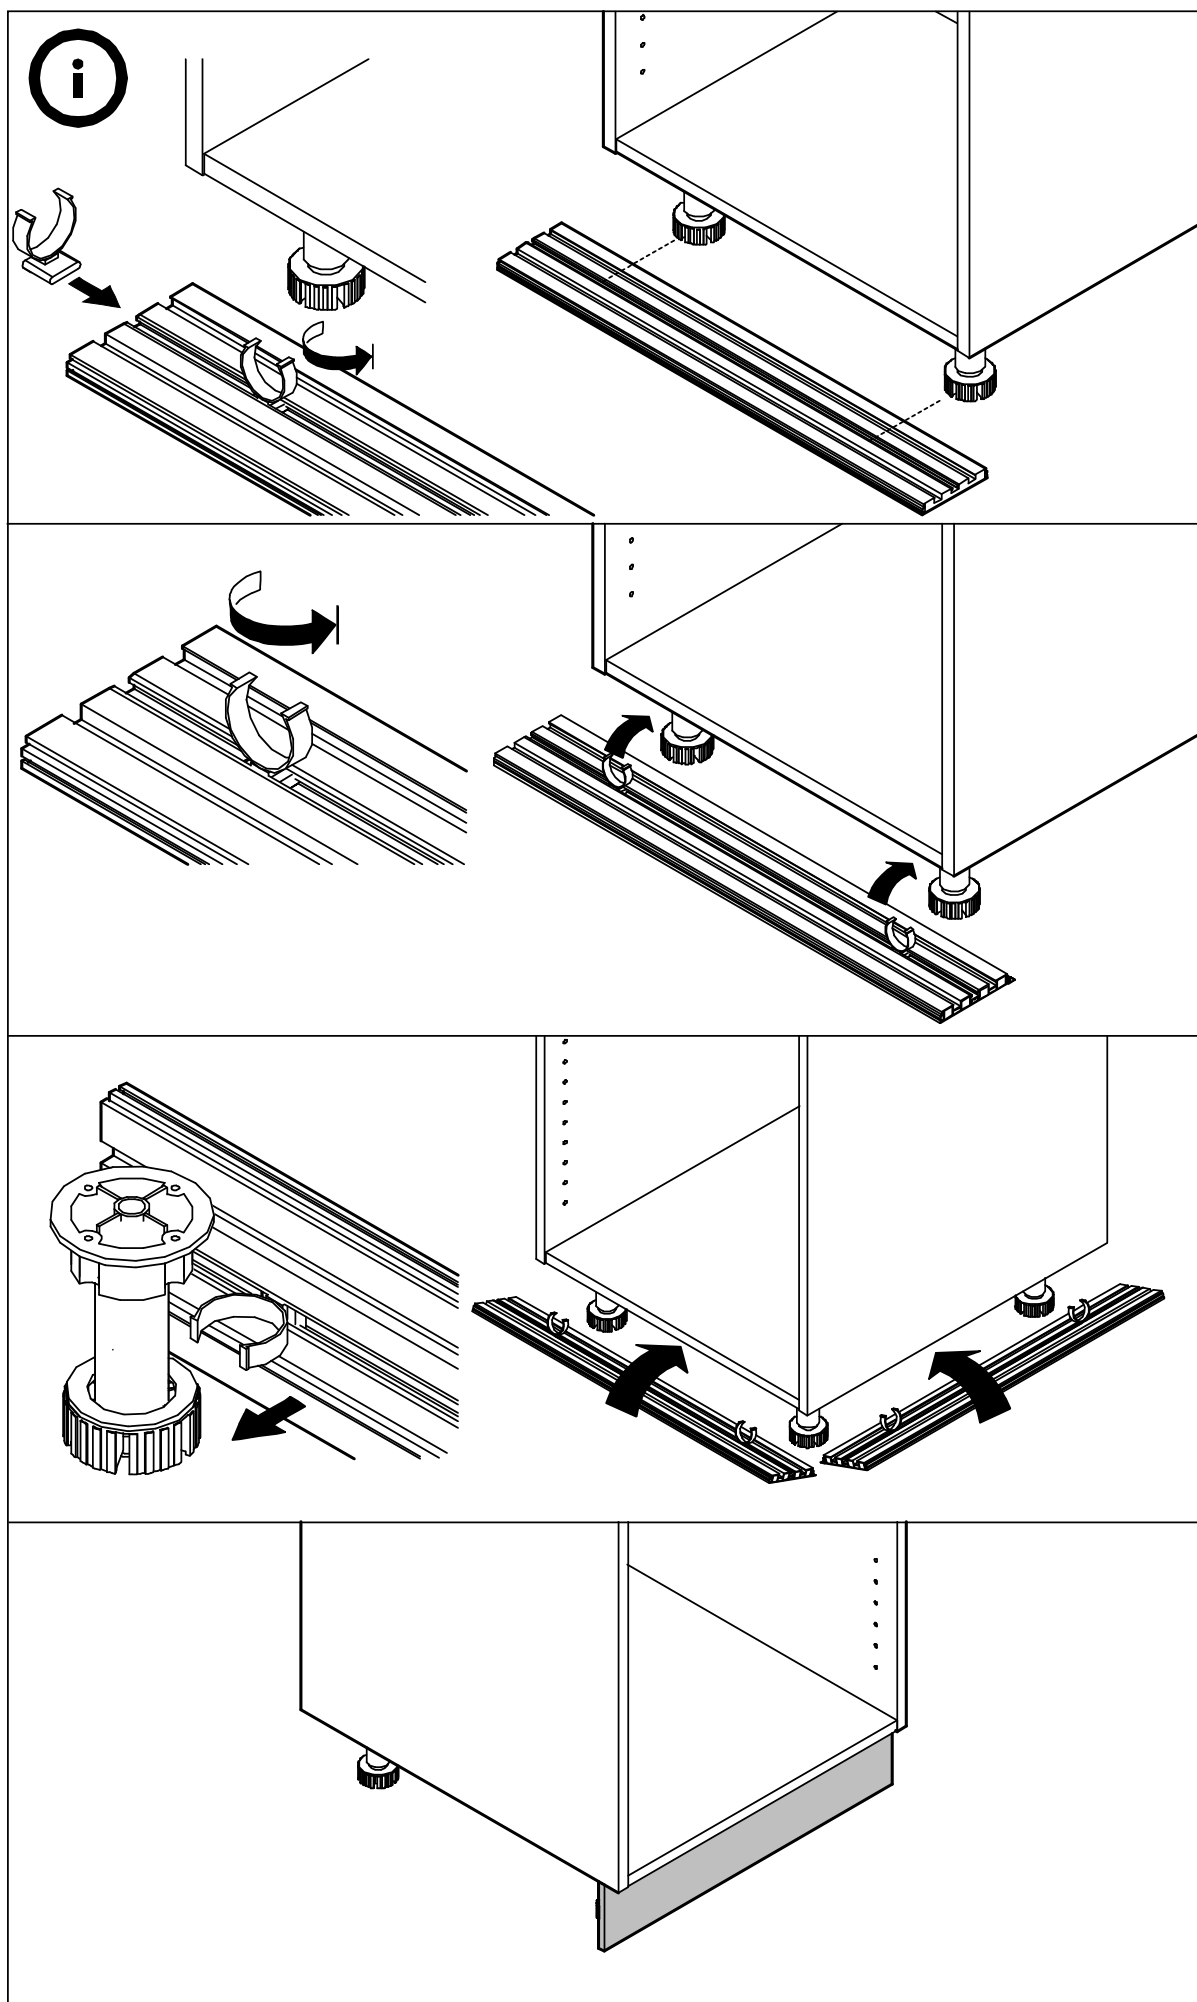

HARDWARE


-BODY SET



x 10



x 10



x 16




x 8




x 16



x 8




x 2




x 8




x 8



x 5

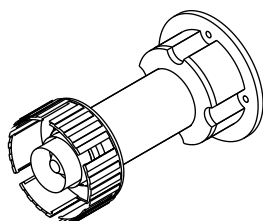


x4

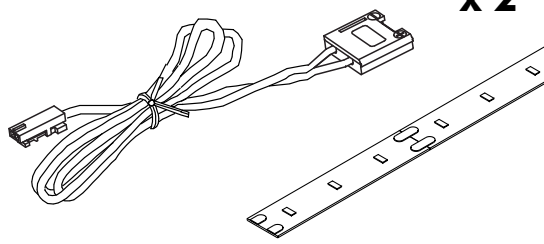


x 2


1.

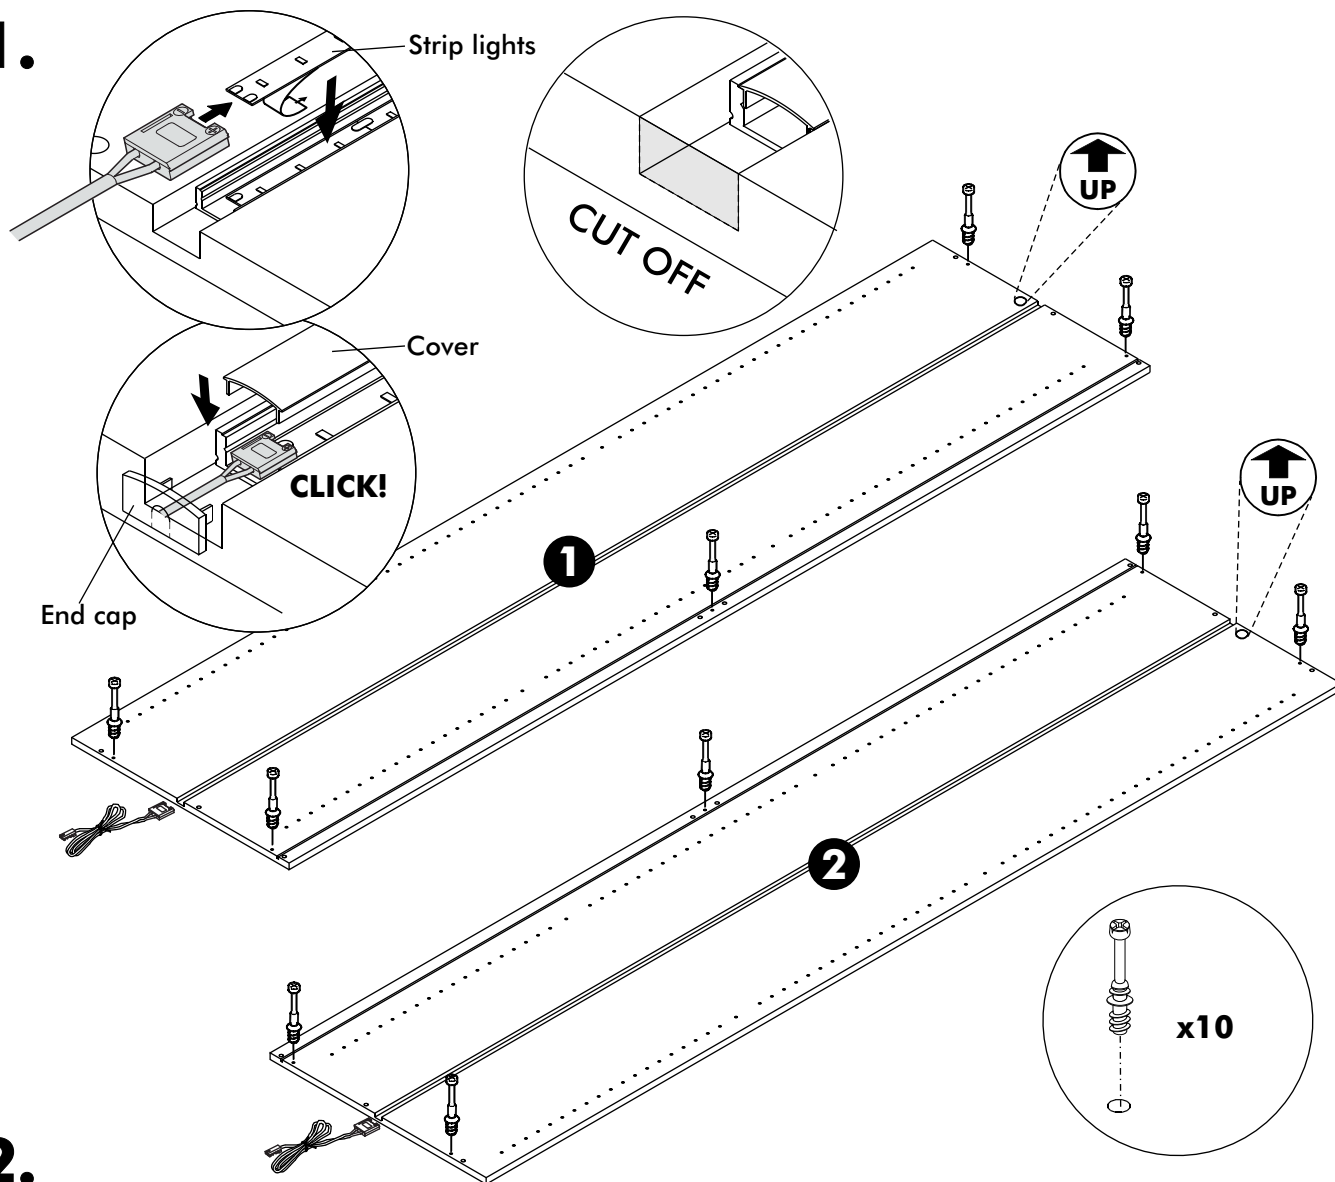


2.

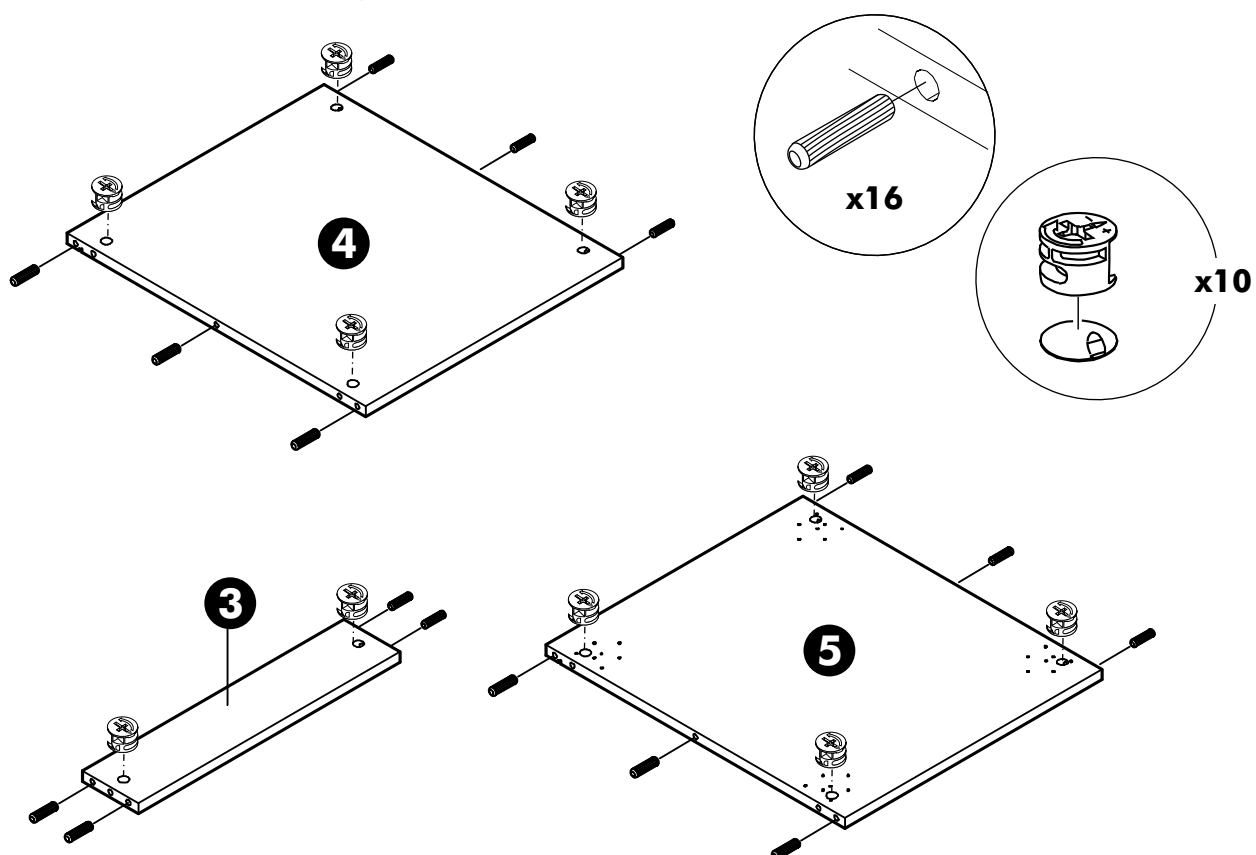



3.

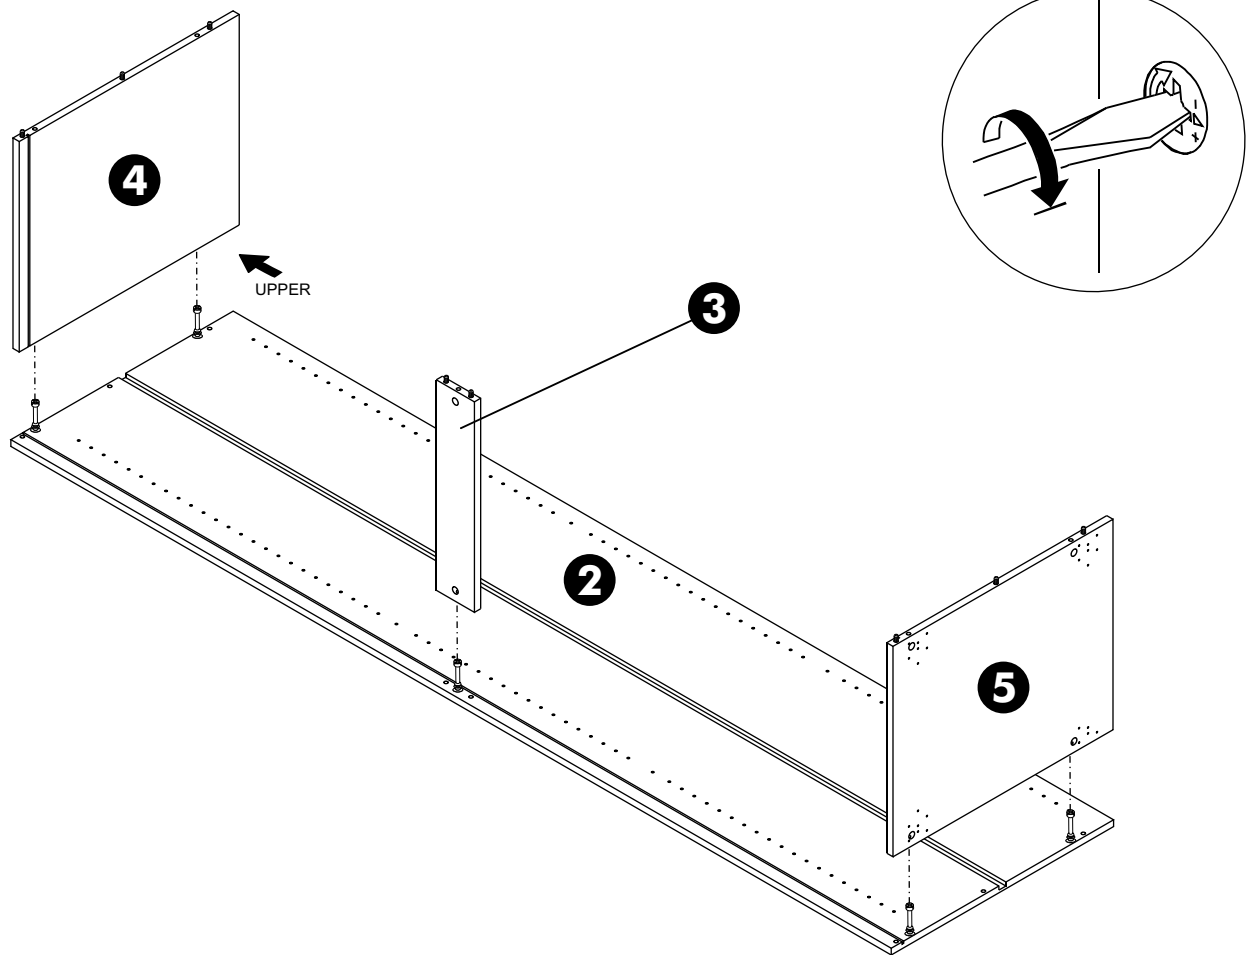




4.

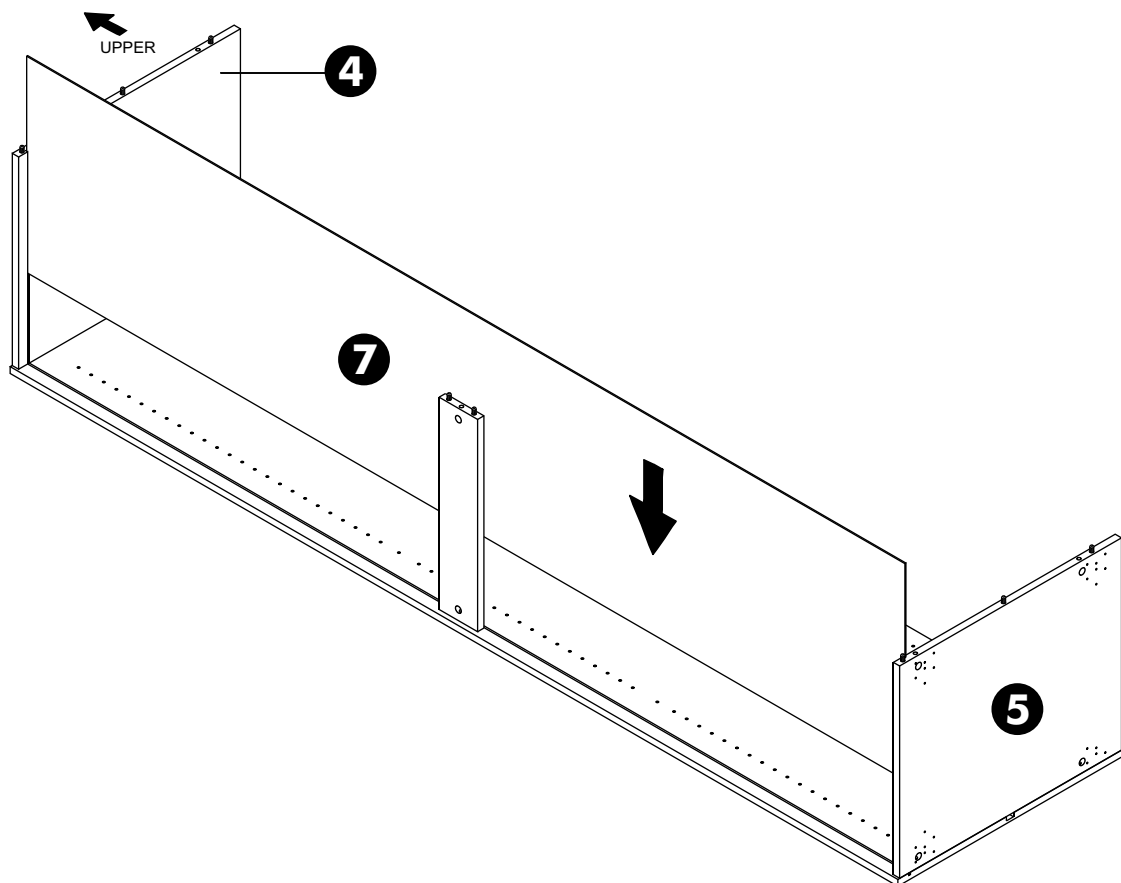

5.

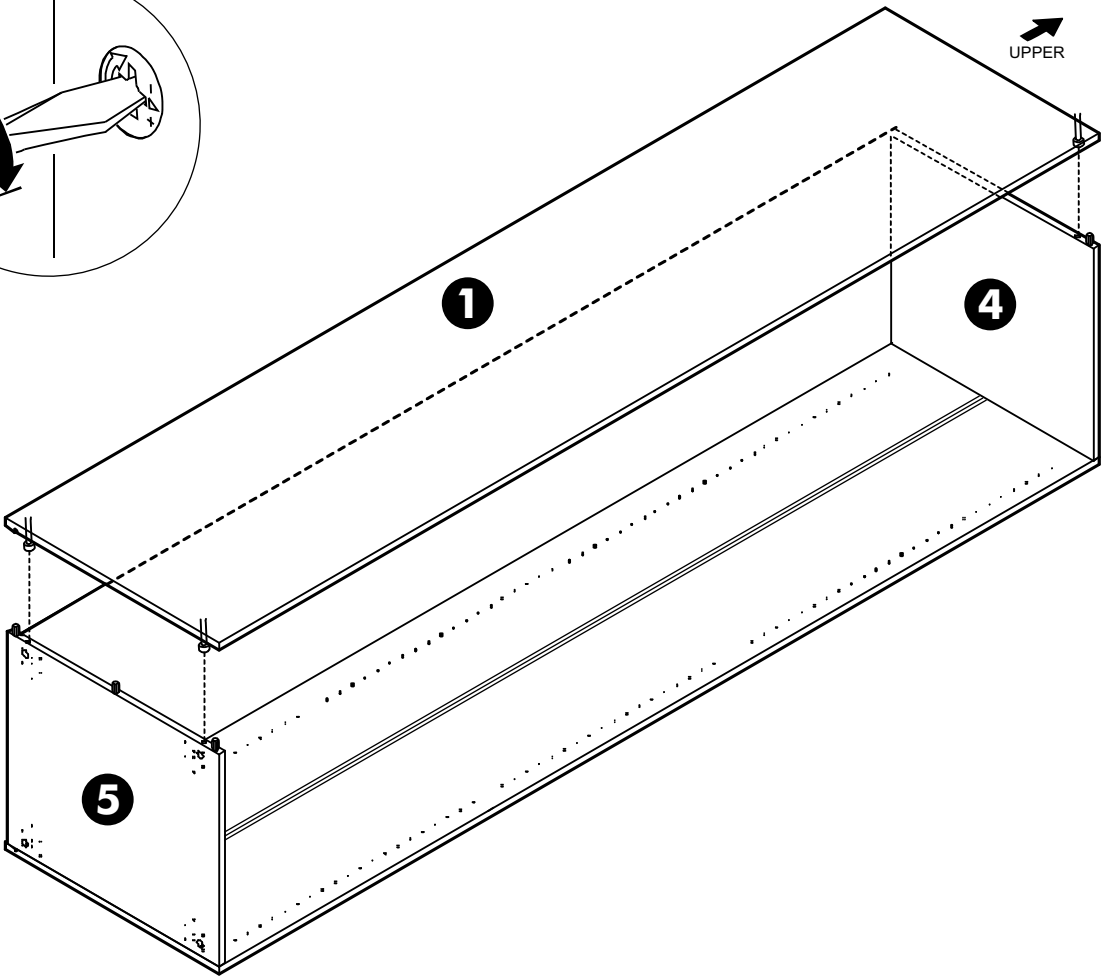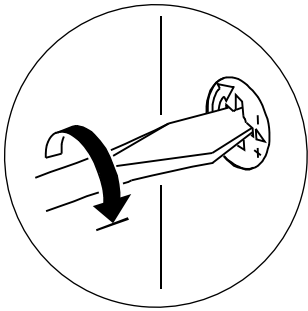

6.(A)

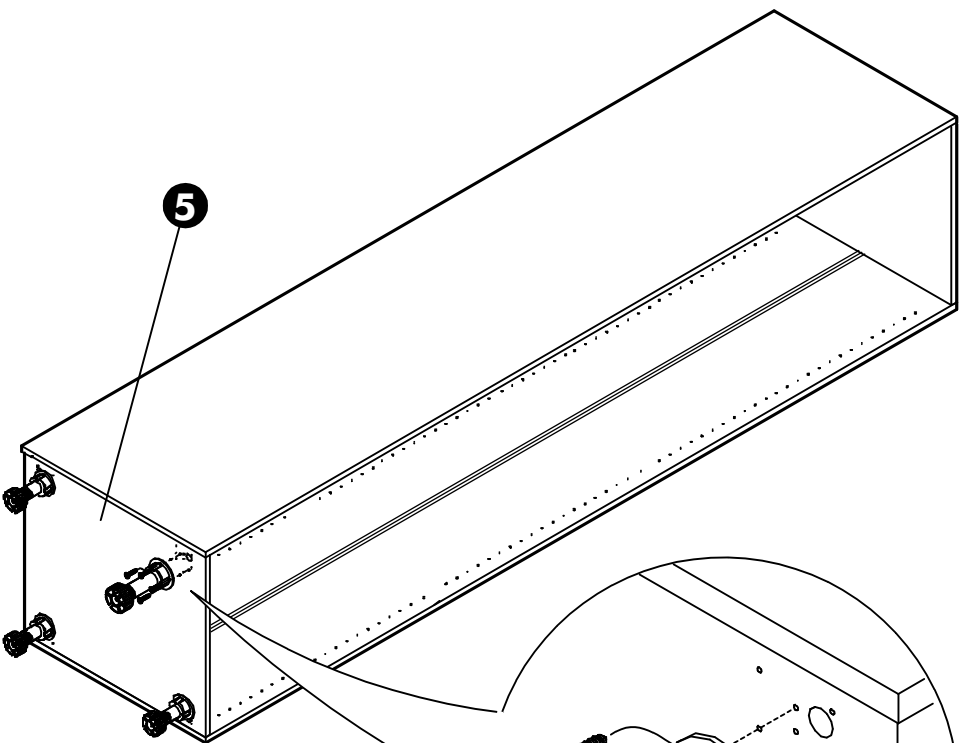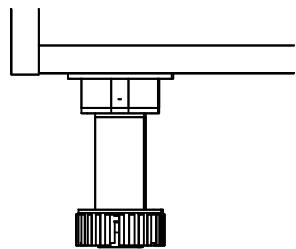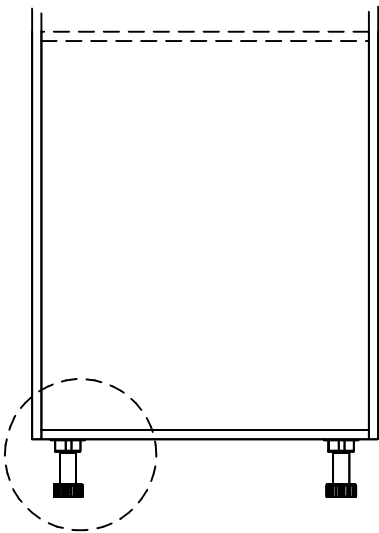


x4


x16

M4x16mm.


6.(B)


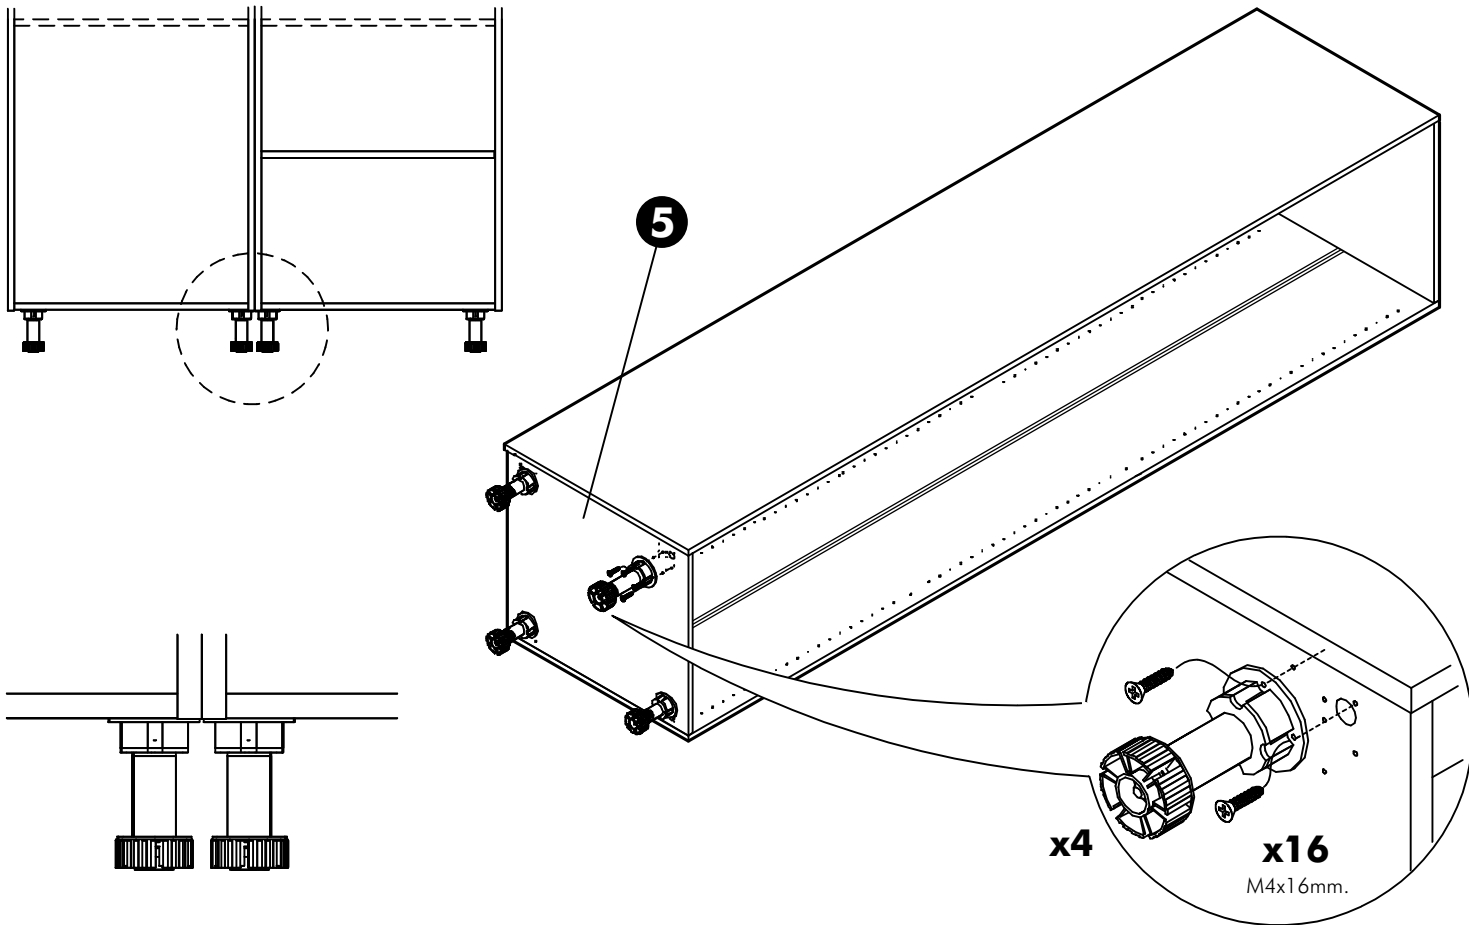


7.

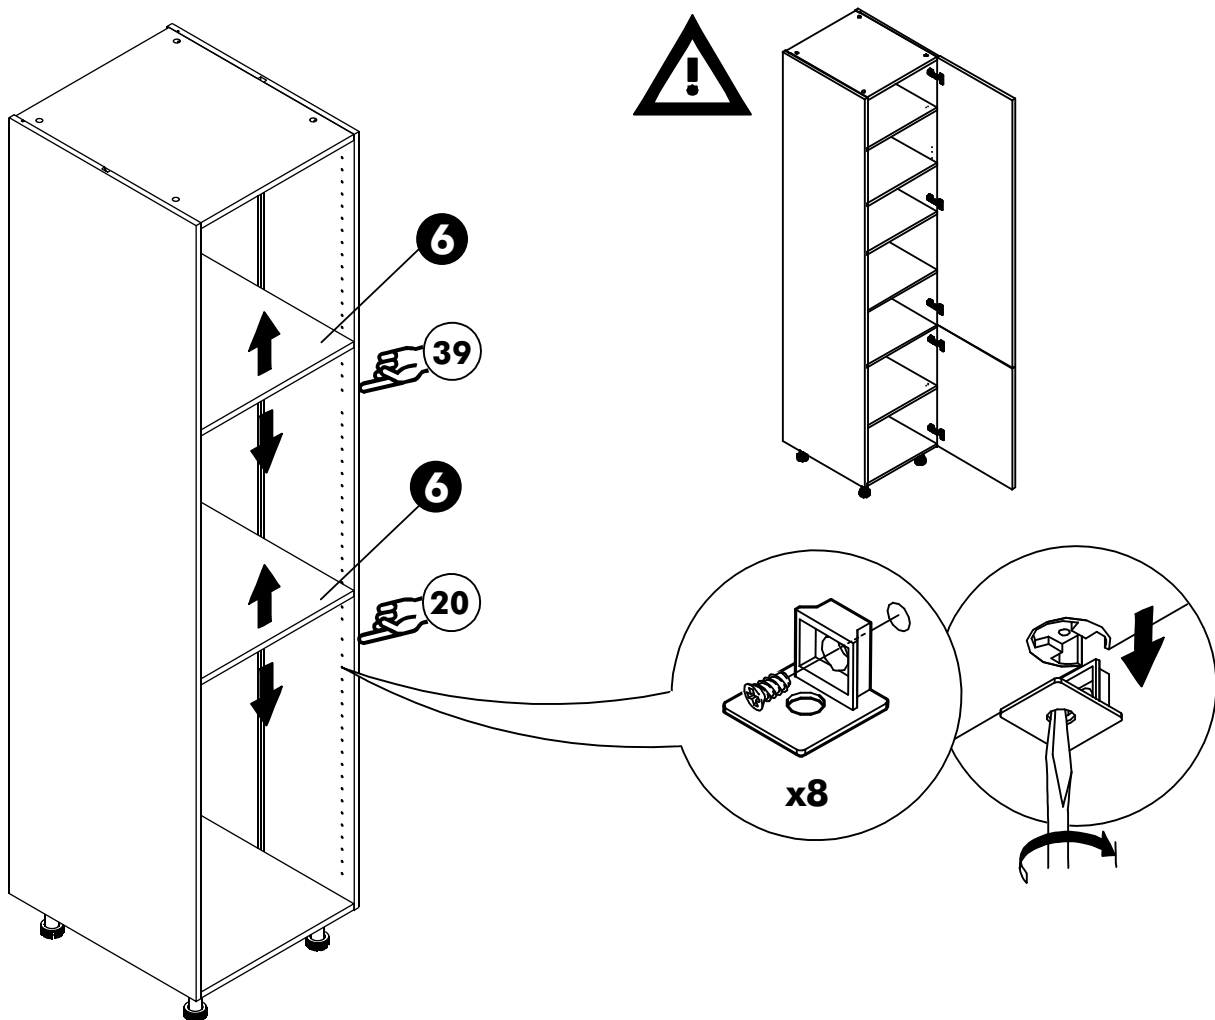



8.

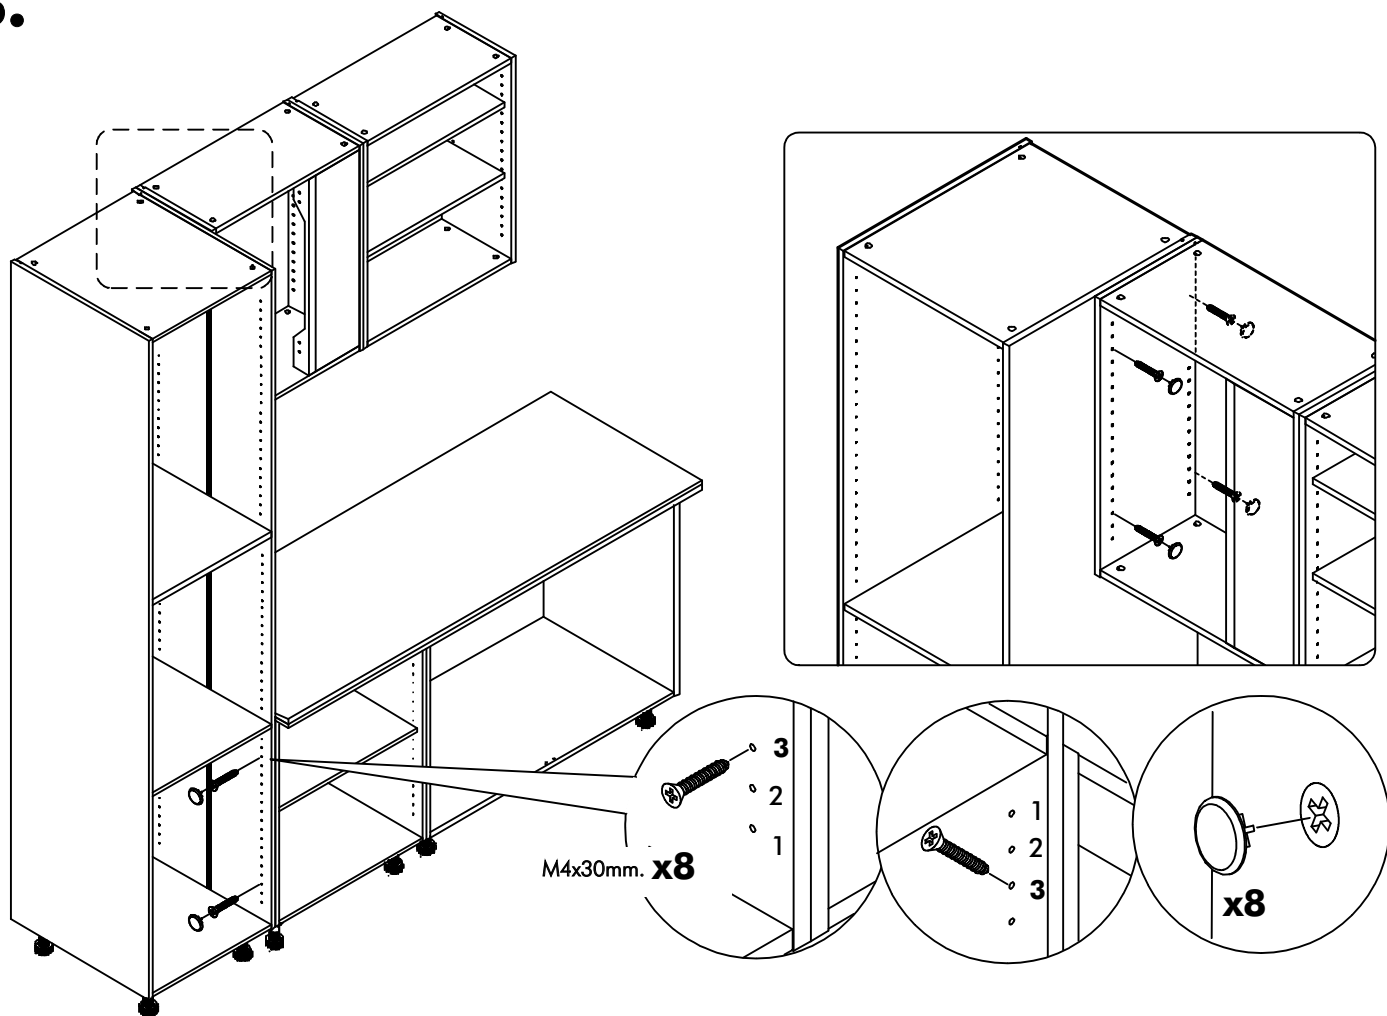

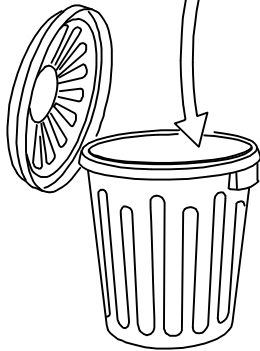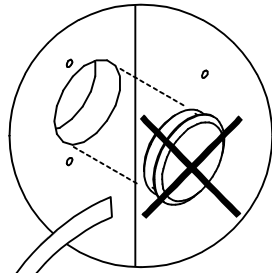



Door high cabinet


Door for base

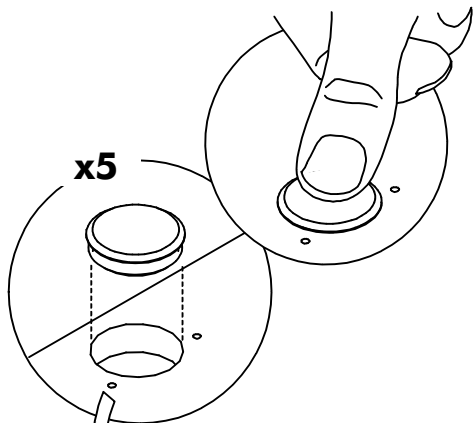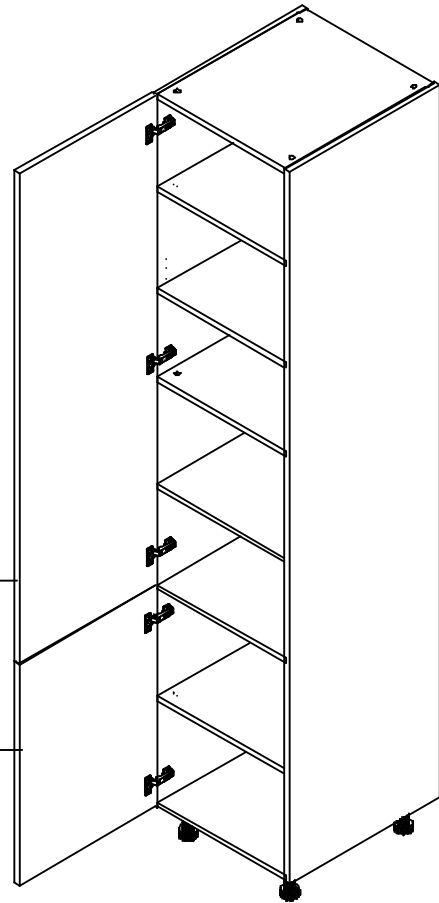


Door high cabinet

Door for base

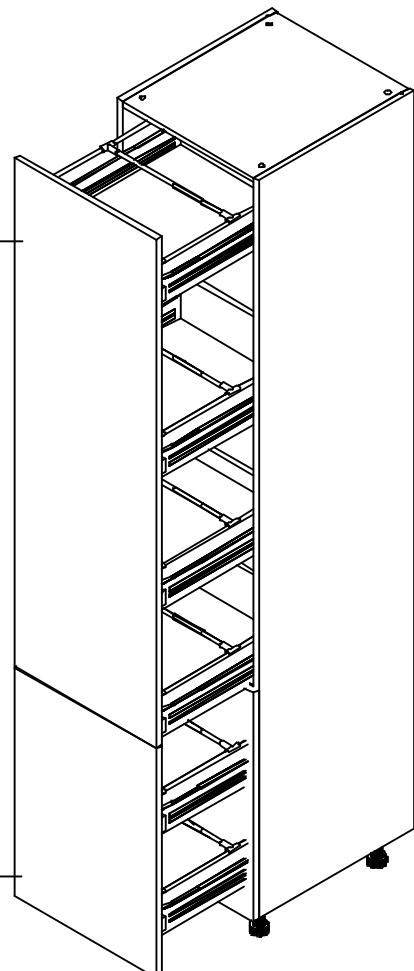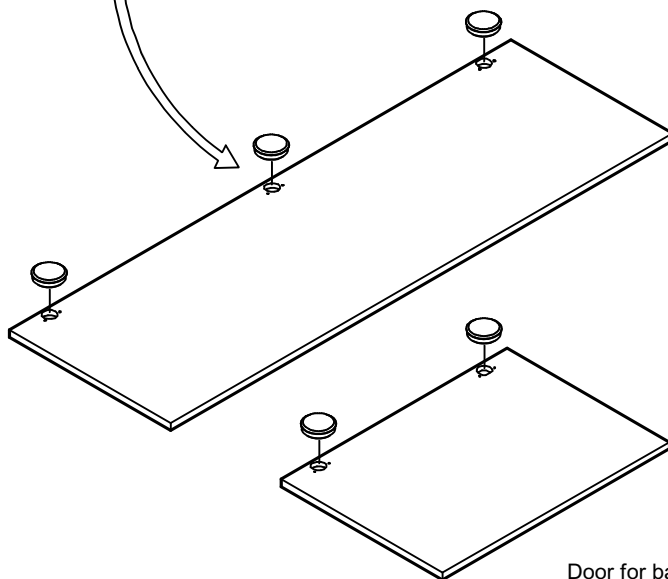


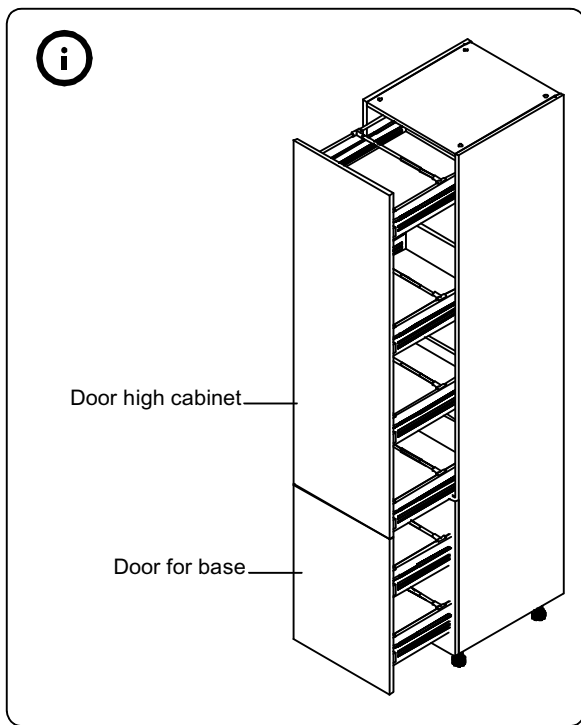


1.

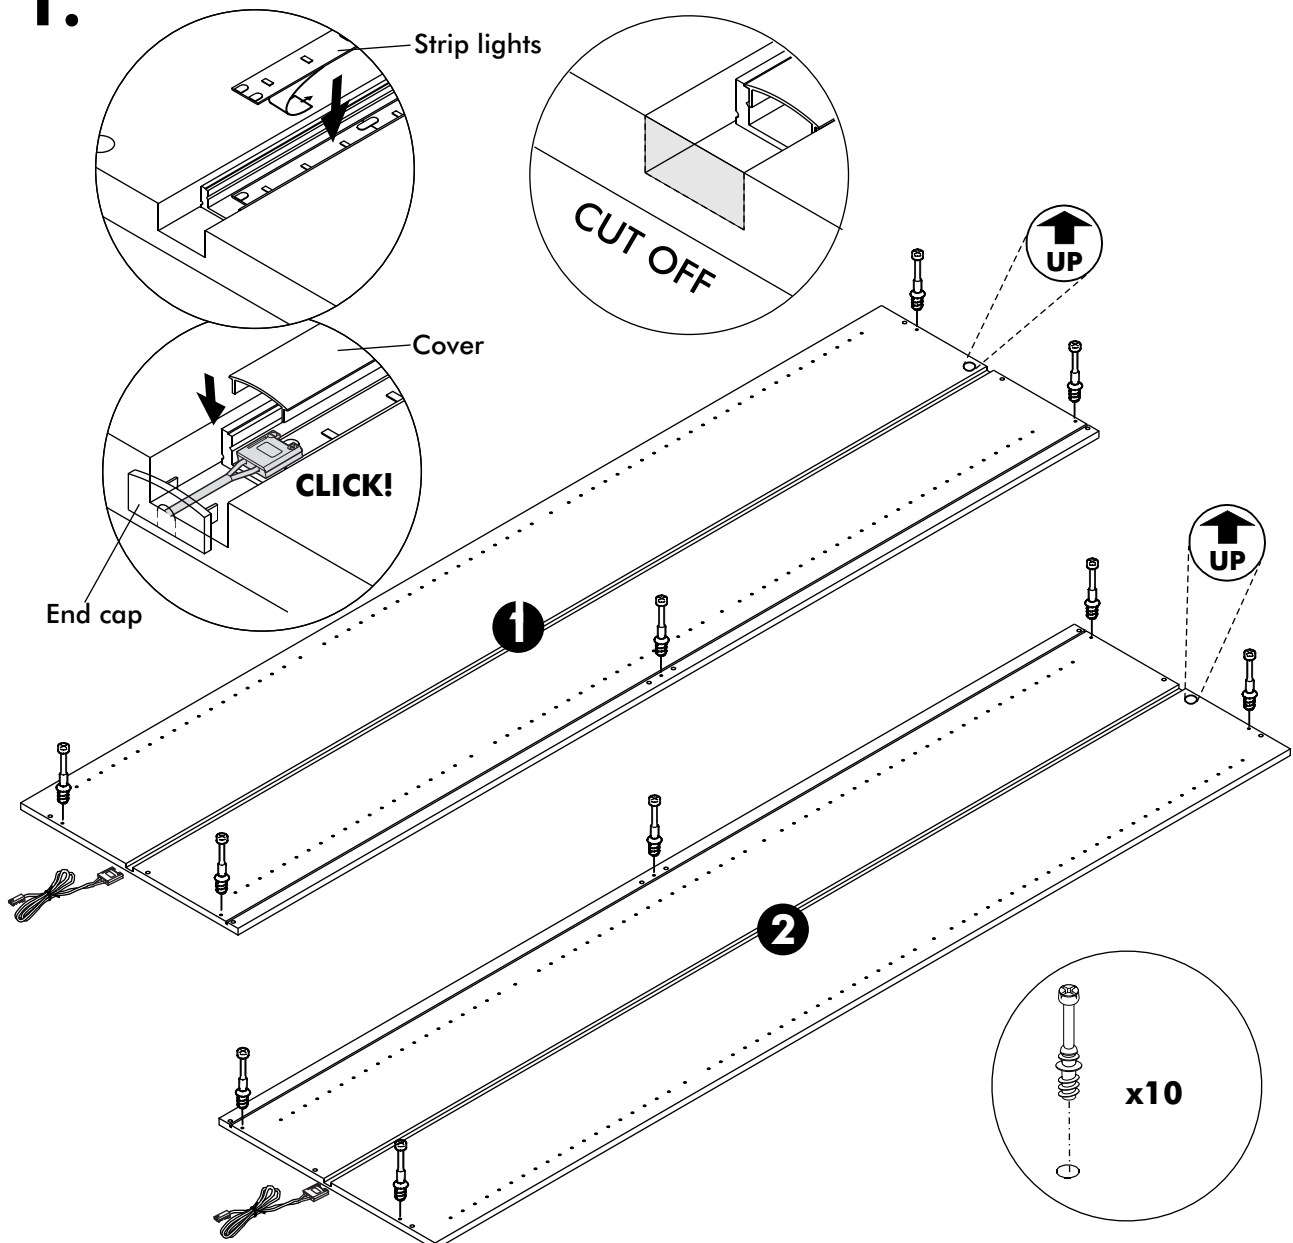


2.

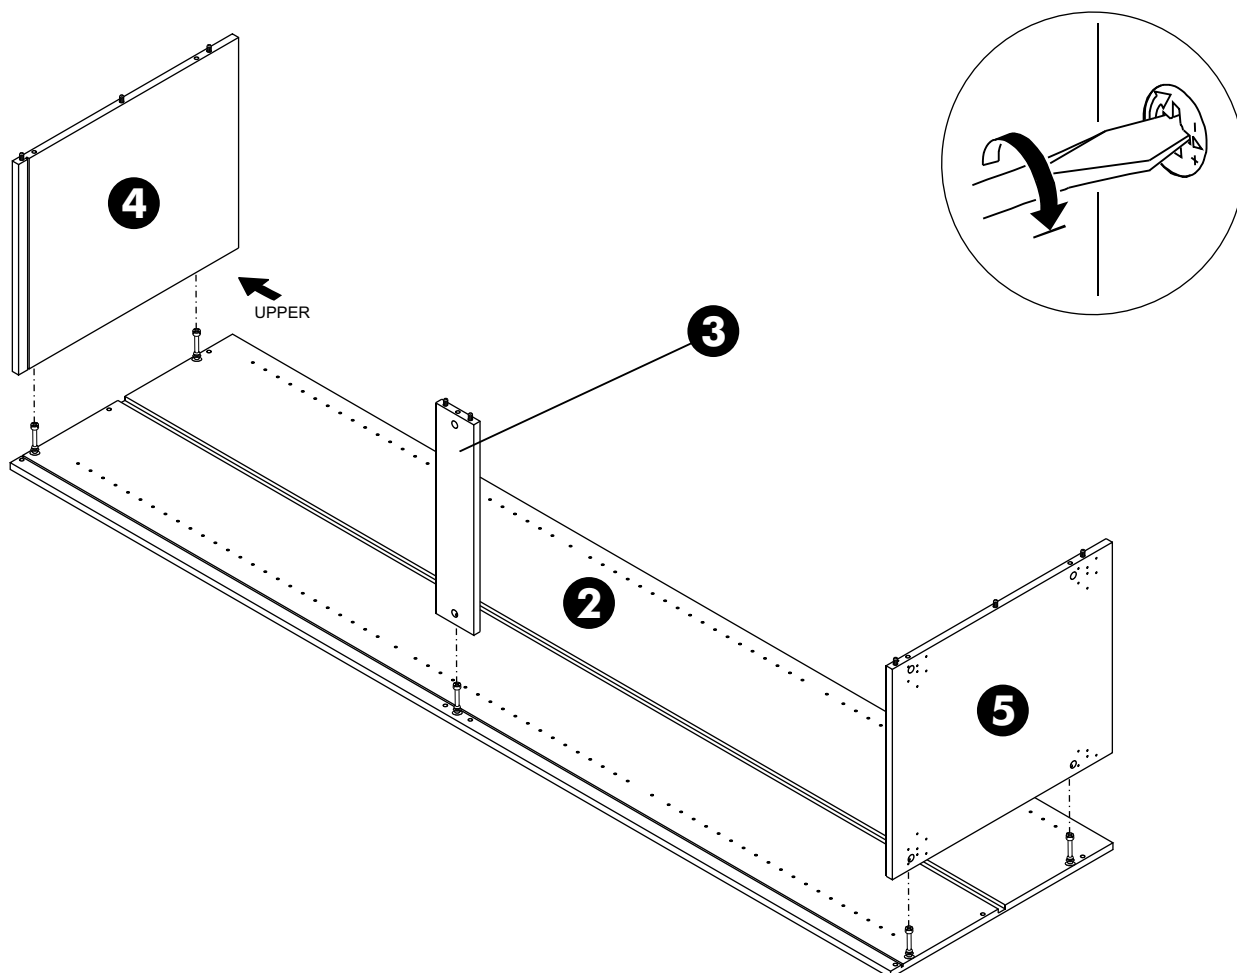

3.

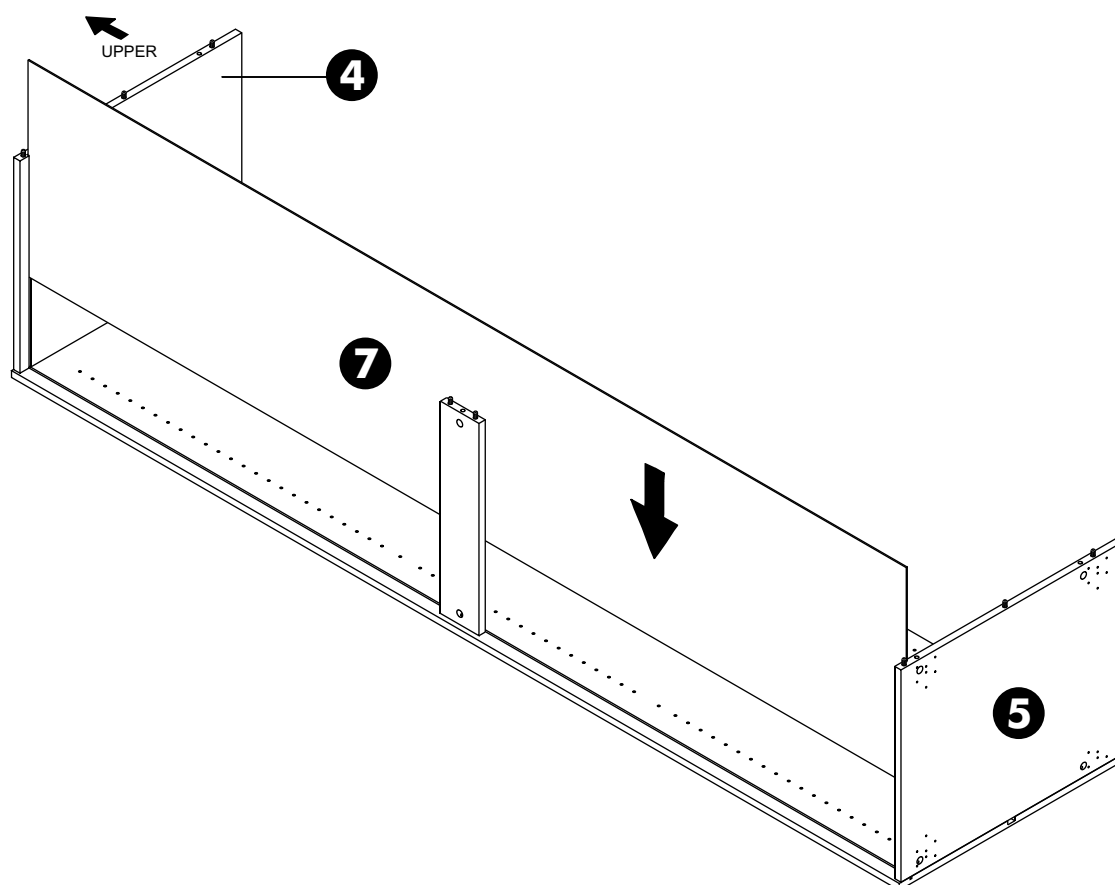


4.

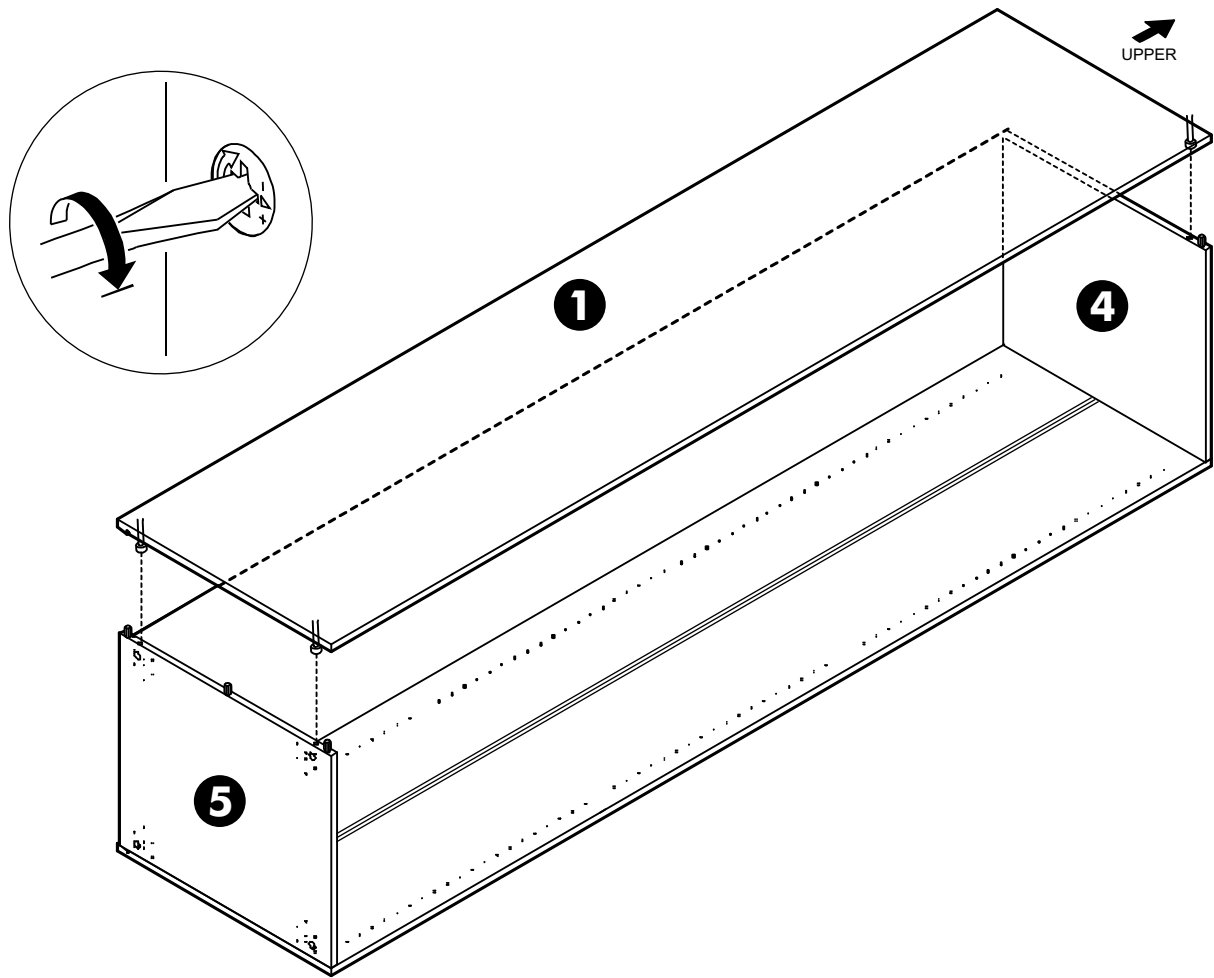

i

A.

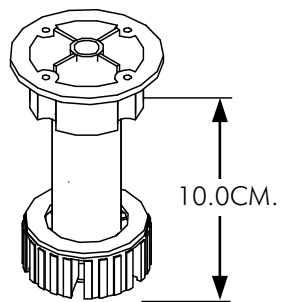

B.

