


SMART KIT


High Cabinet W300-400xH2257

High Cabinet W500-600xH2257

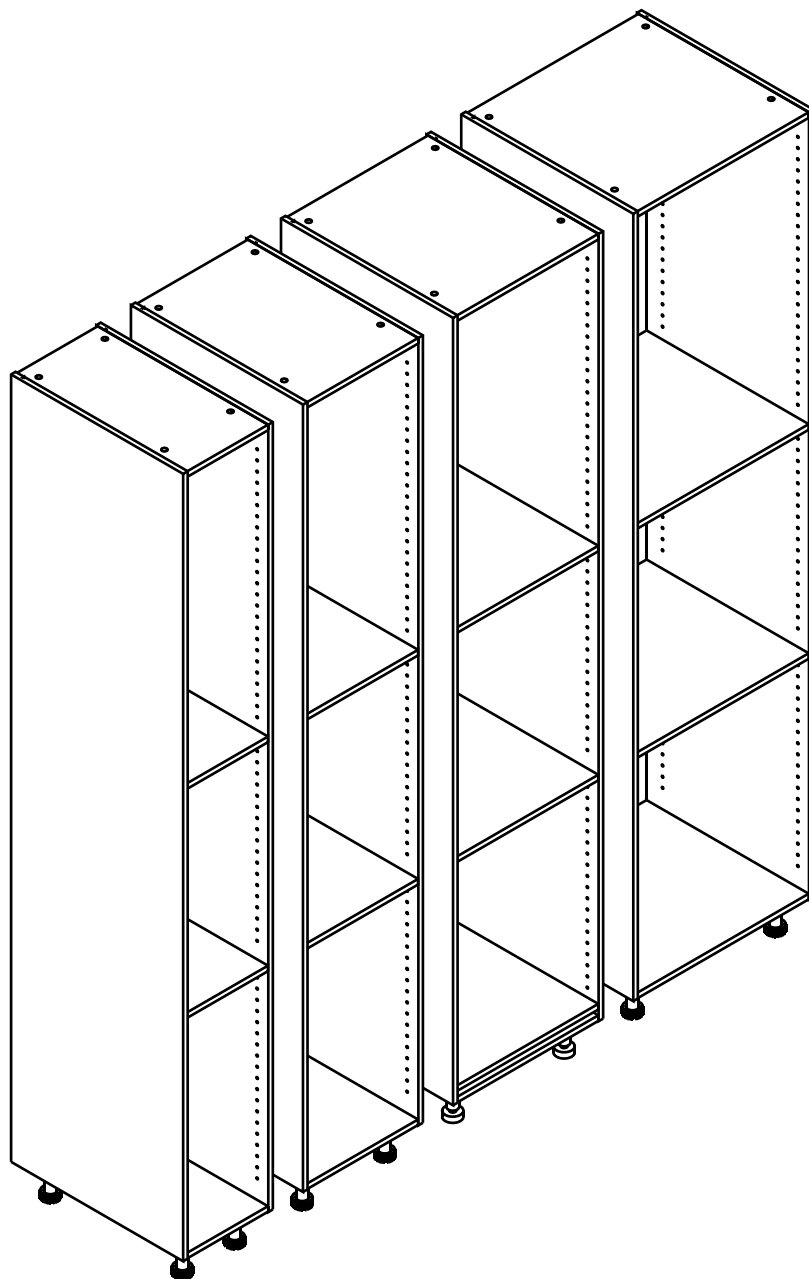


CONNECT SYSTEM

1

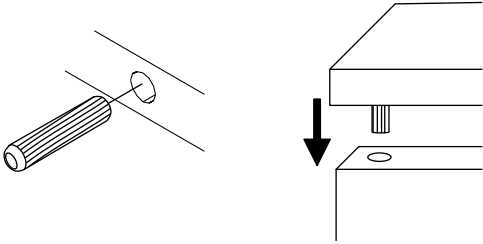


2

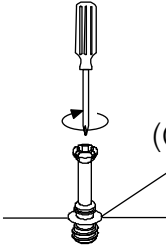

(Connecting bolts)

3

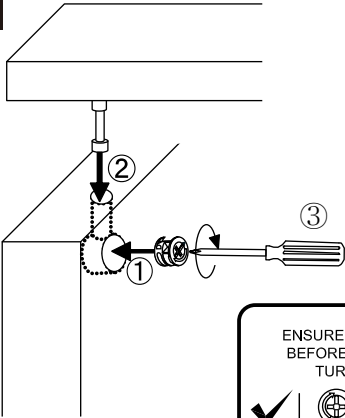

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓
↑
CORRECT






WRONG


✗

2

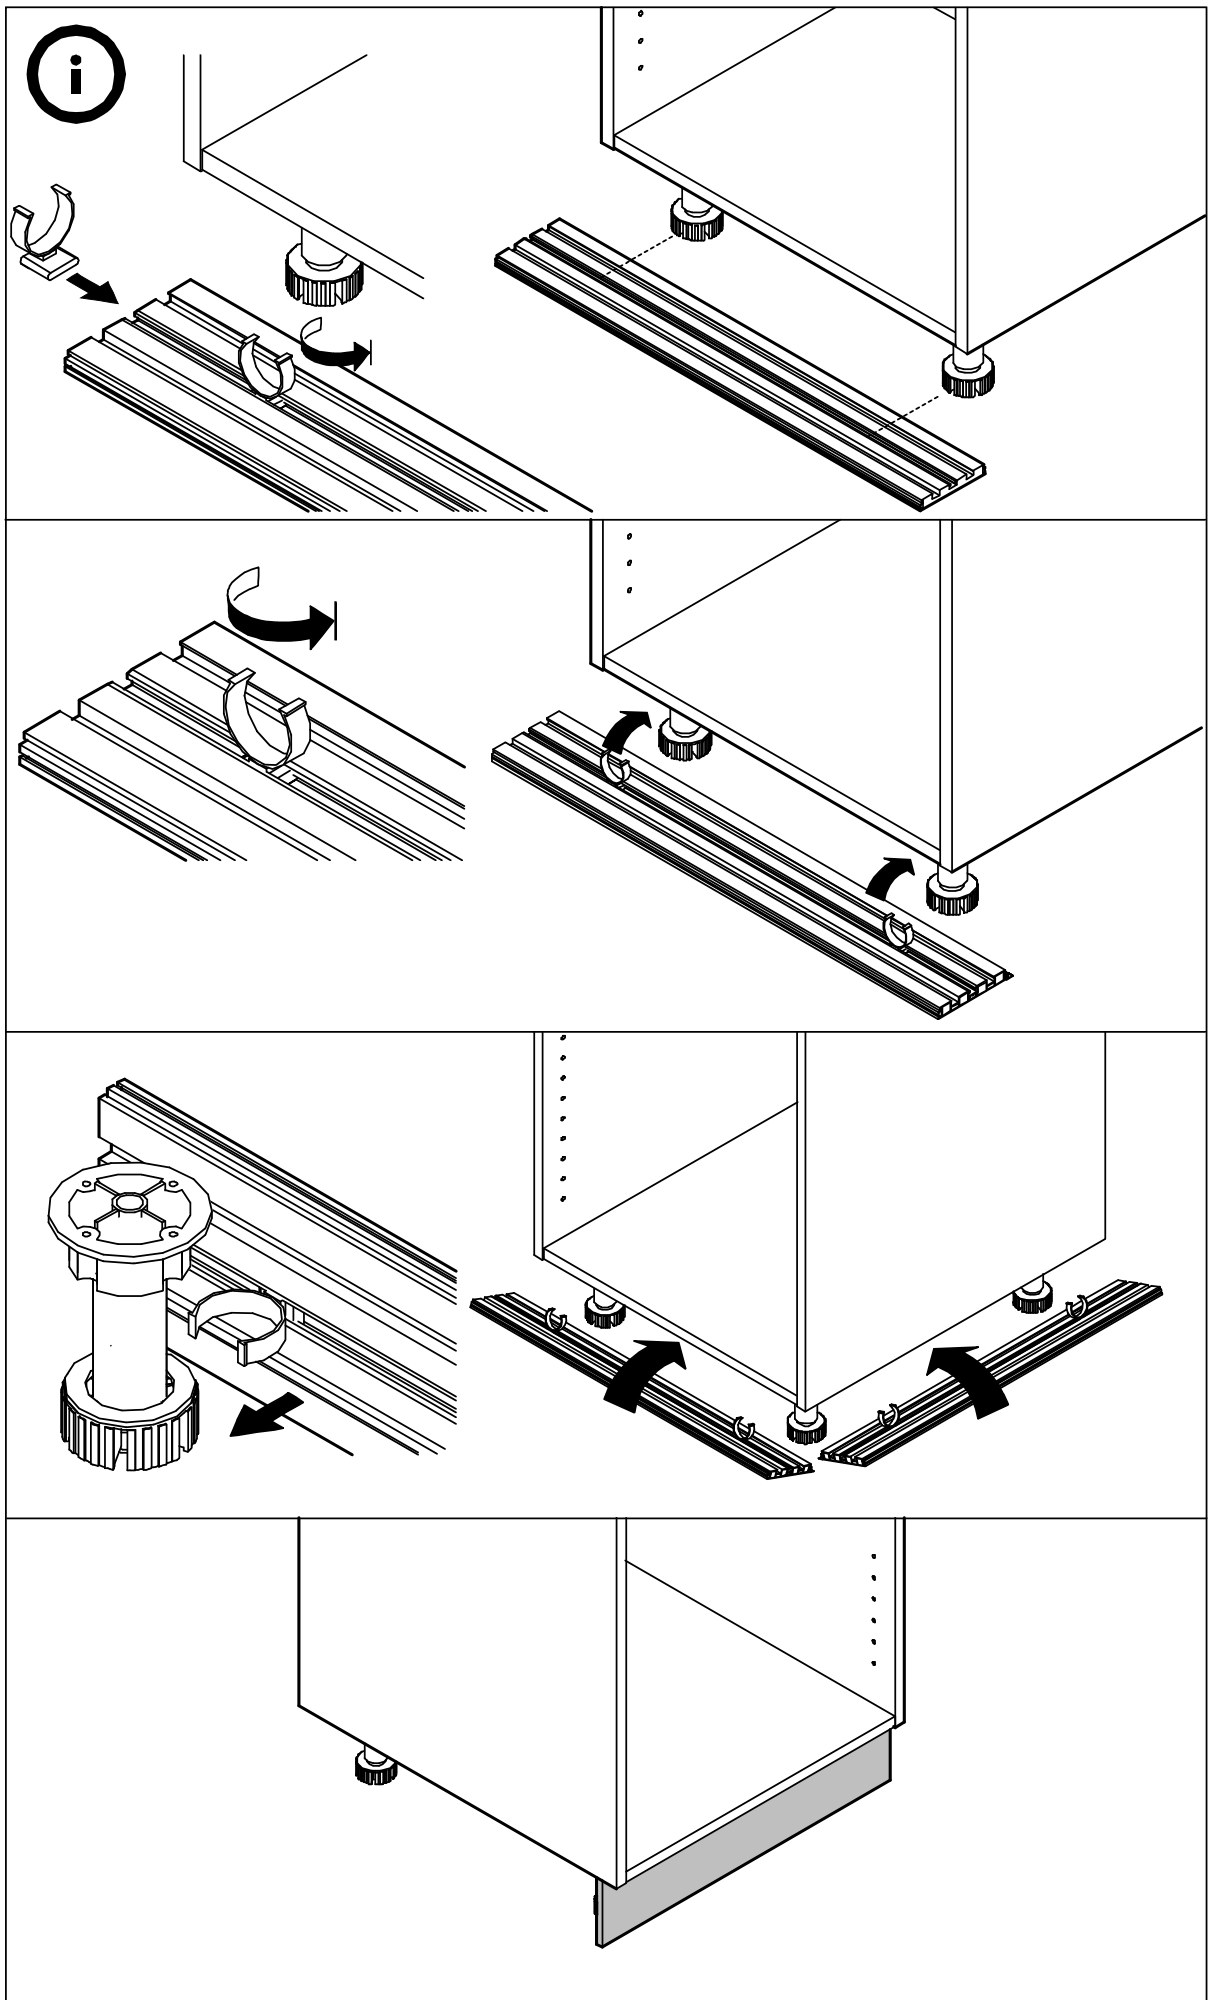

HARDWARE


-BODY SET



x 10



x 10



(8x35)

x 16



M4x30mm.

x 8




M4x16mm.


x 16



x 8




x 2




x 8



x 8




x 5

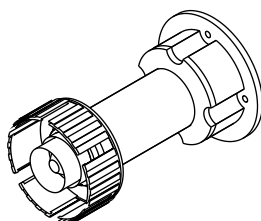


x4


1.

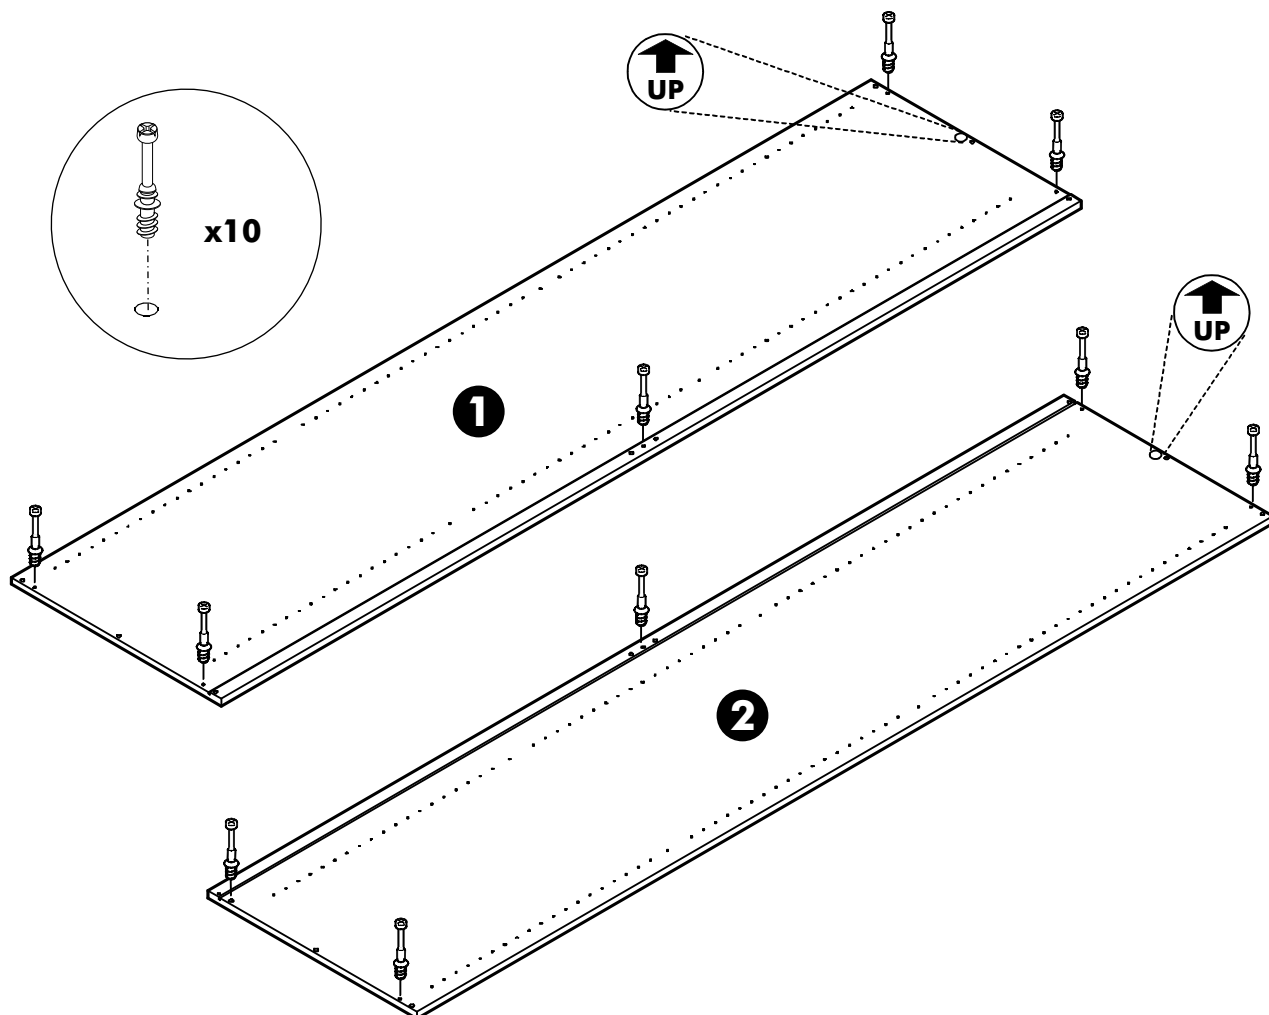


2.

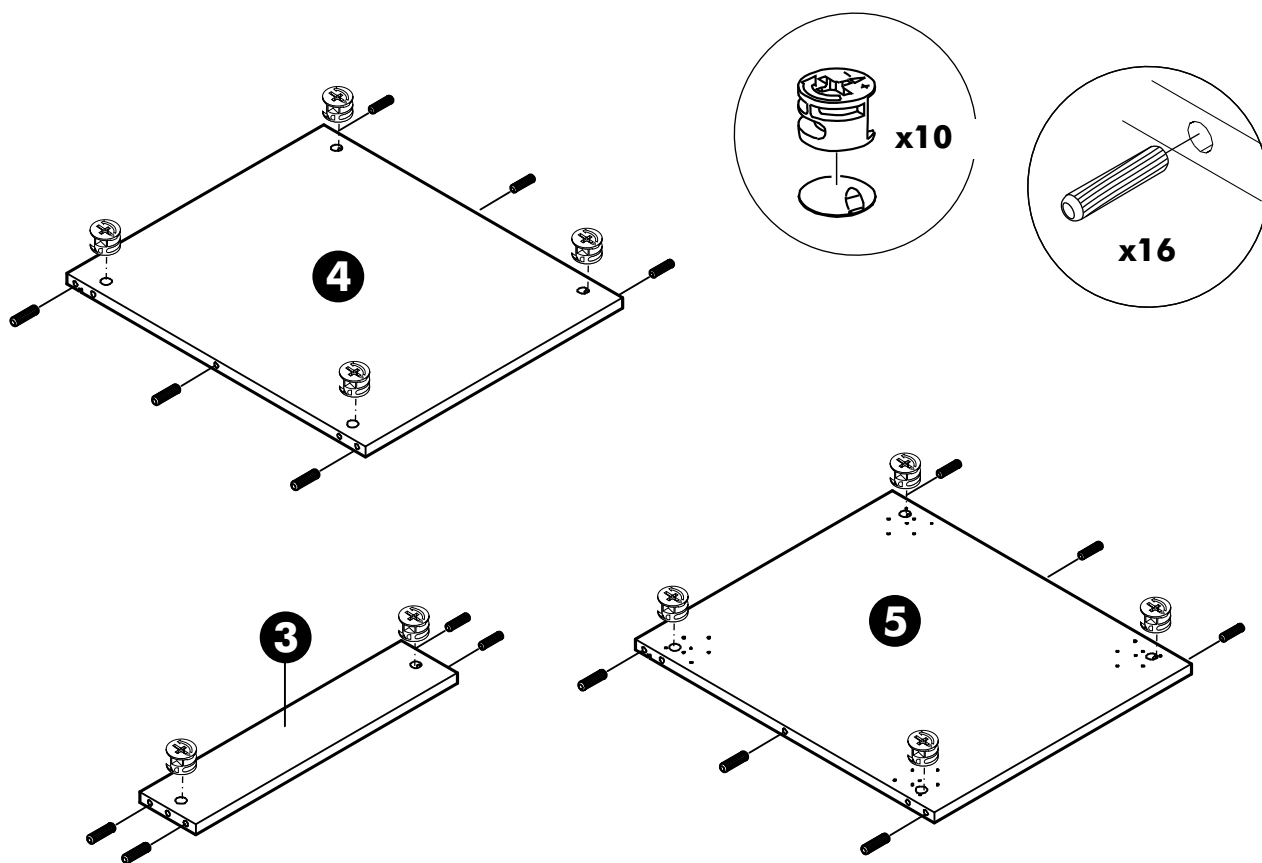


3.

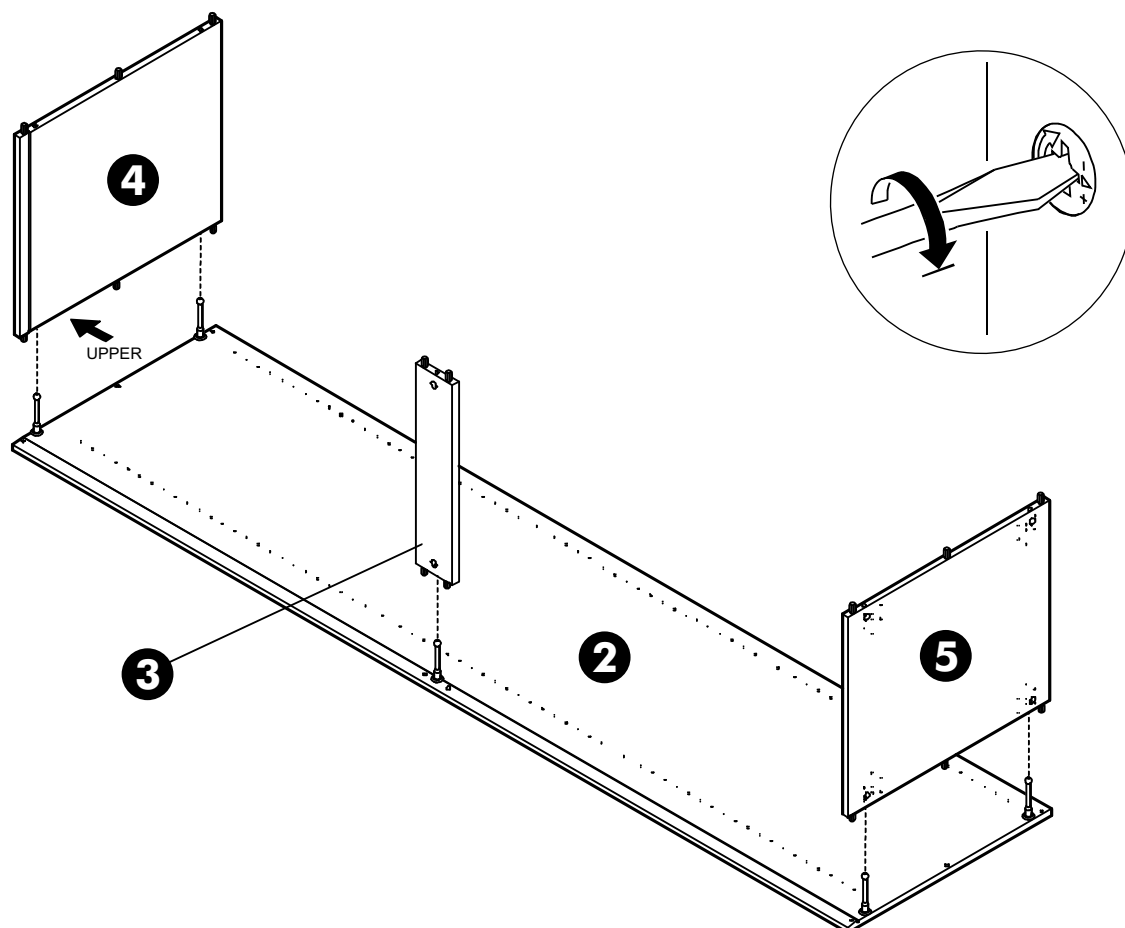


4.

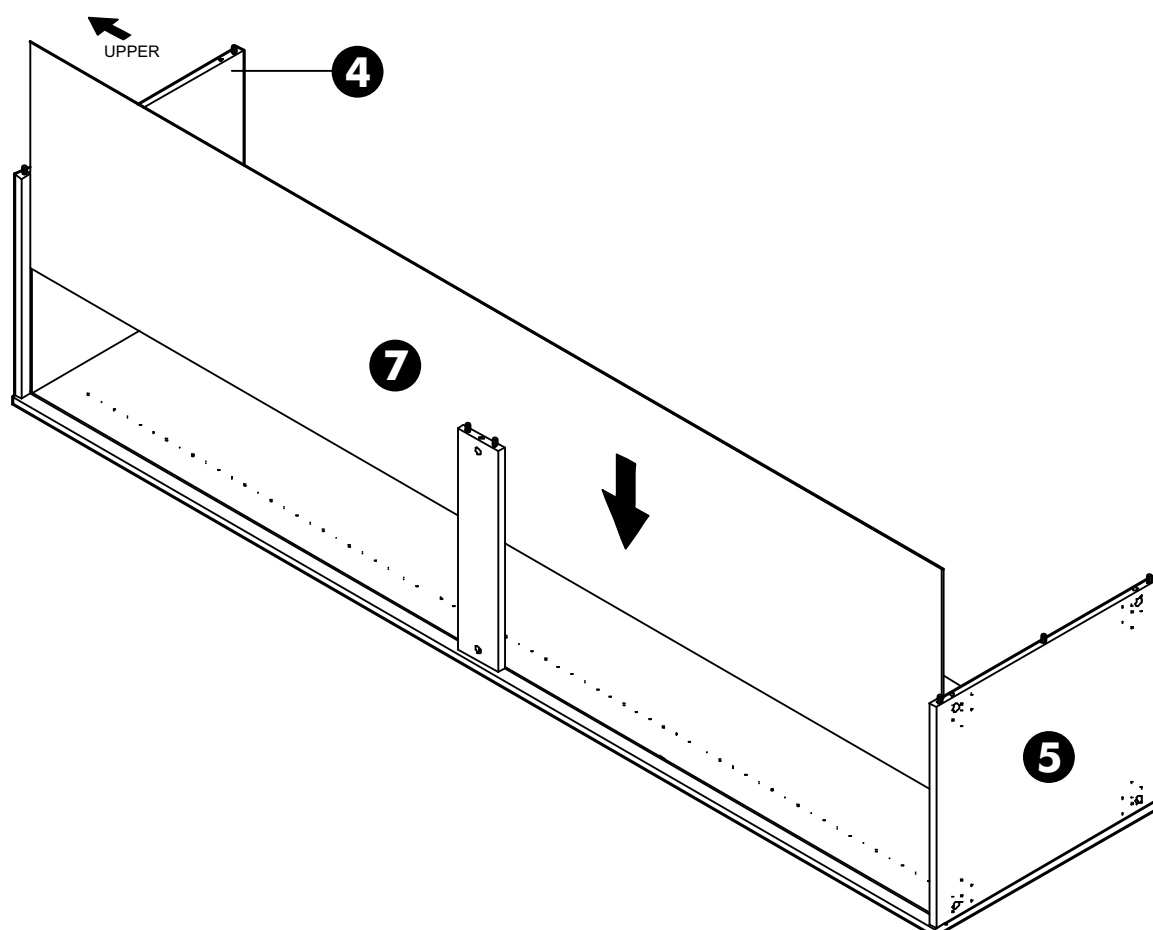


5.

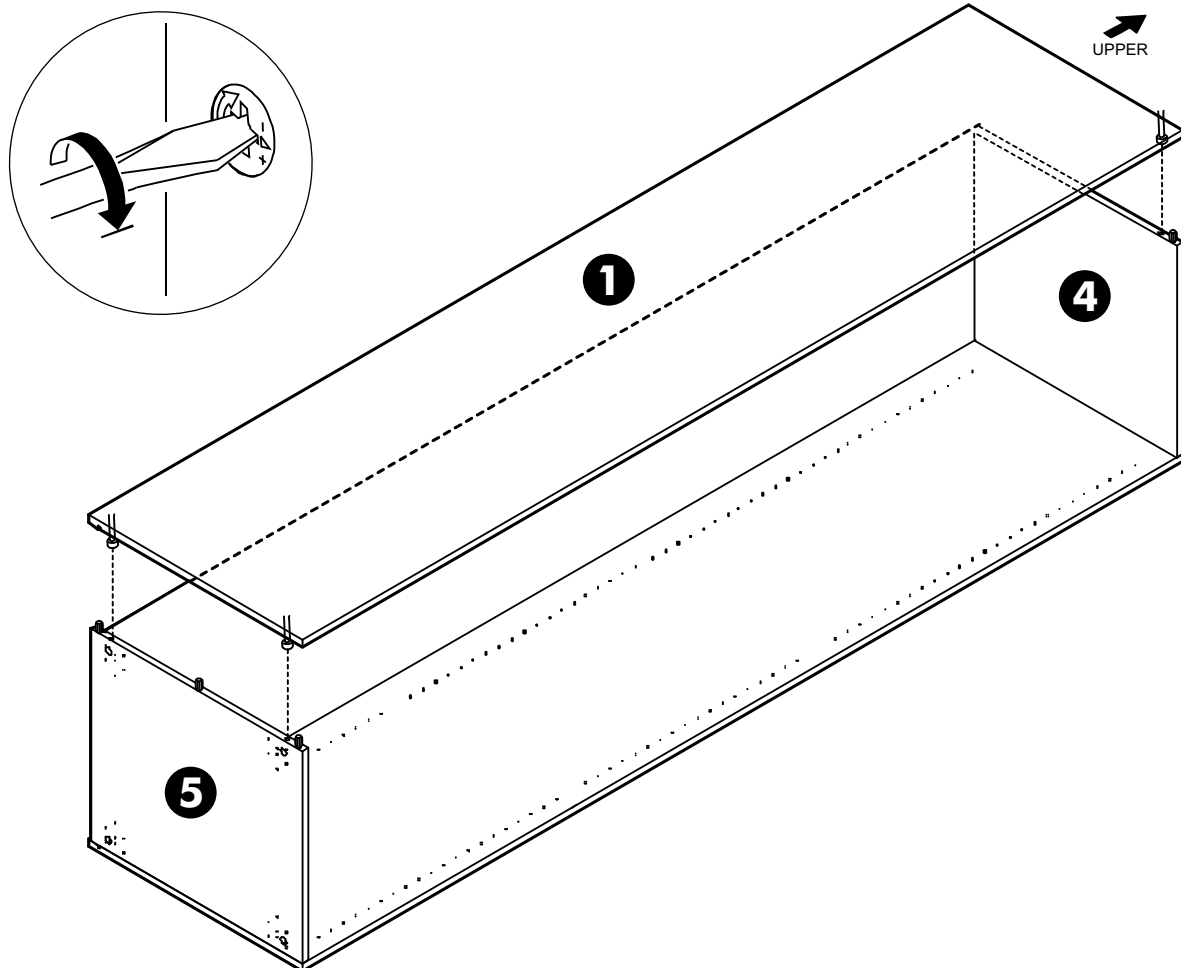


6.(A)

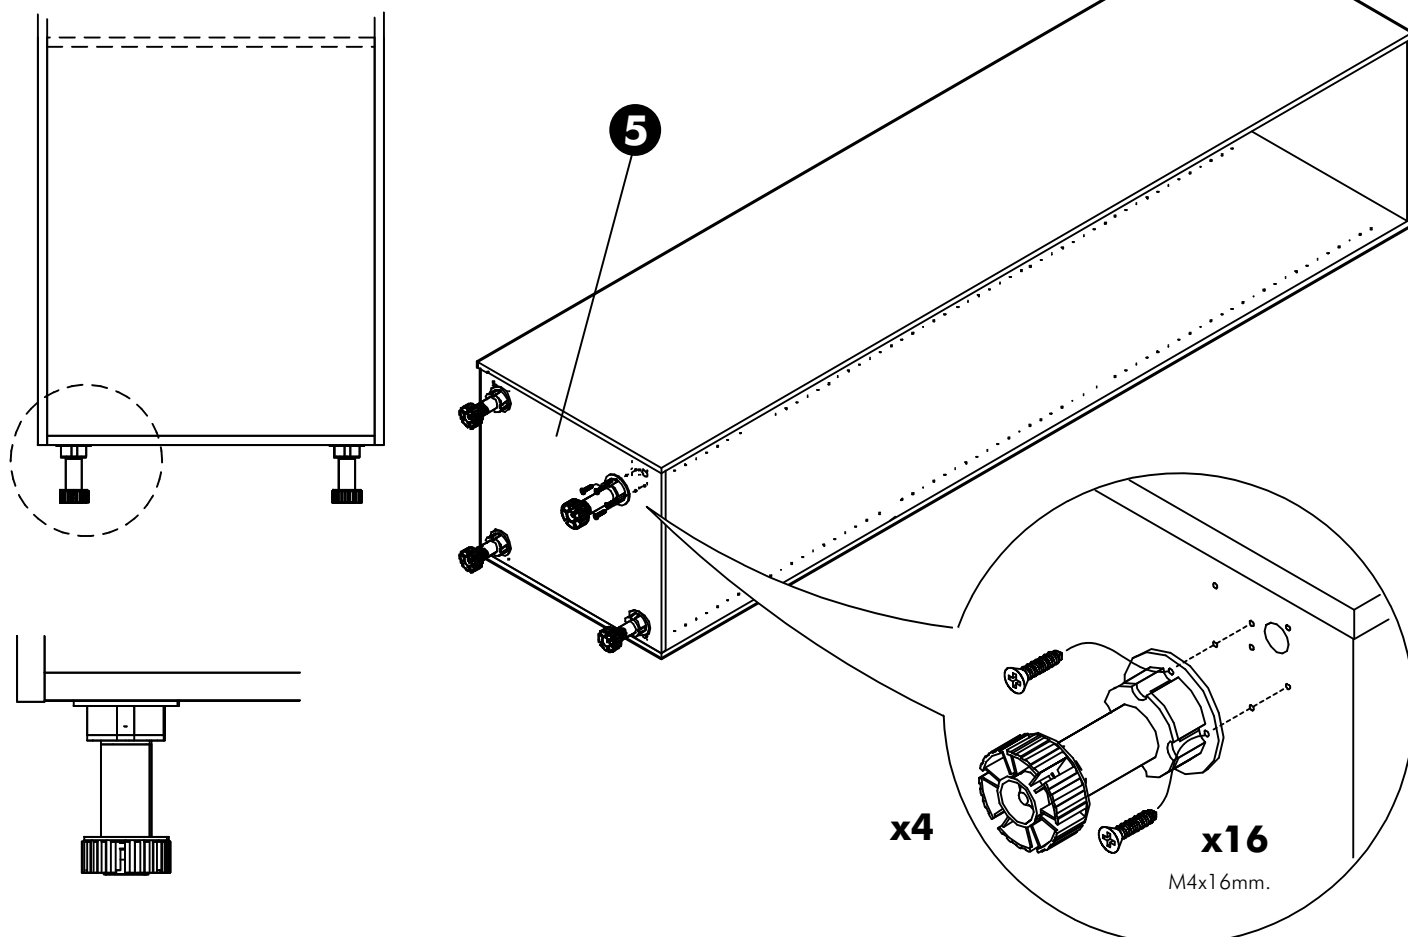


6.(B)

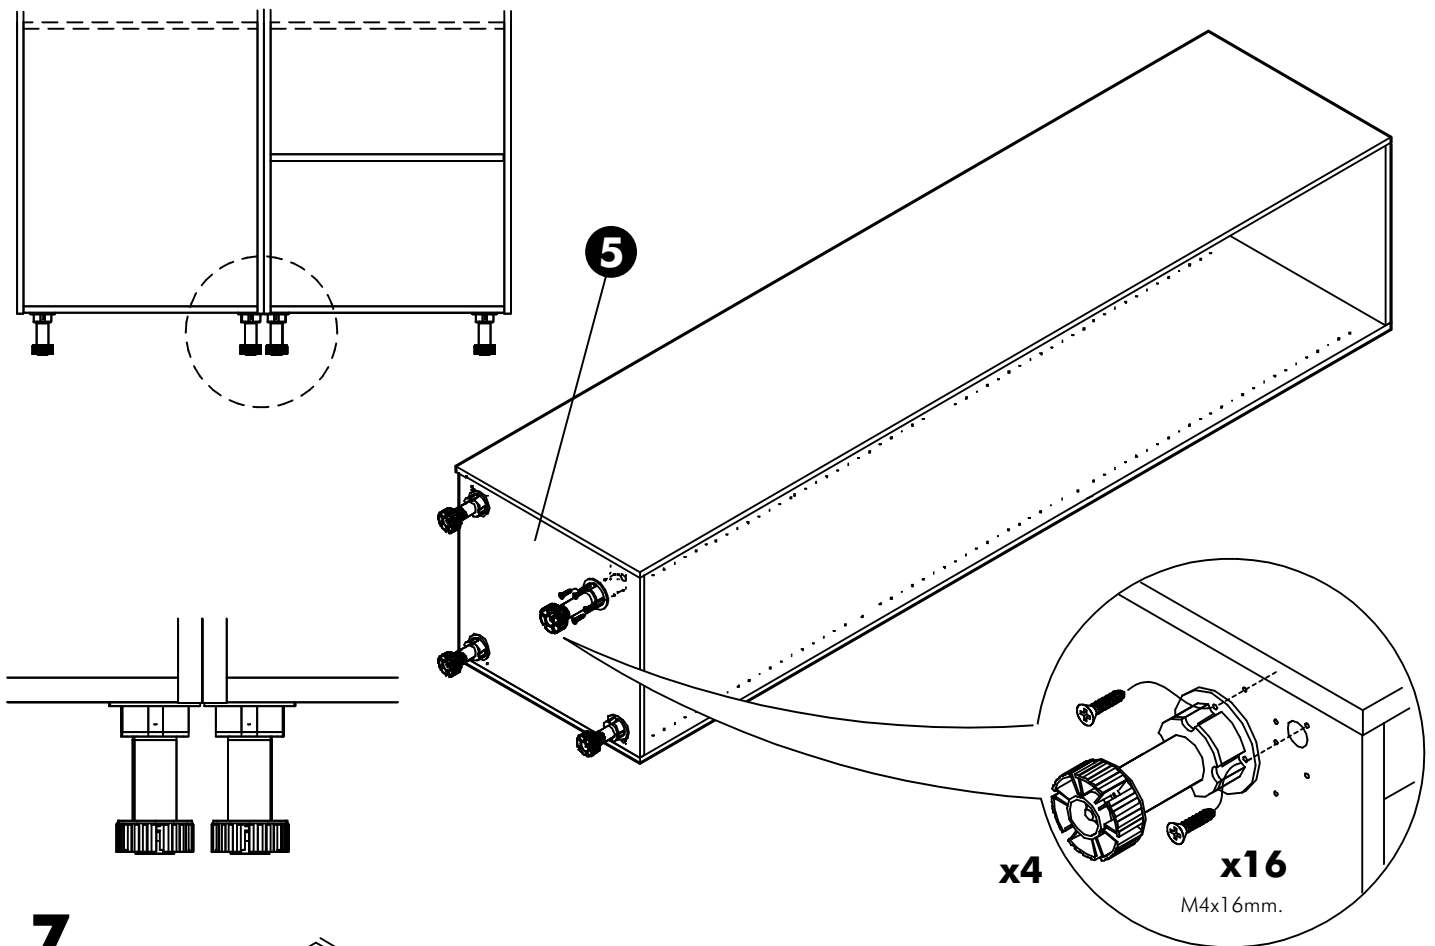


7.



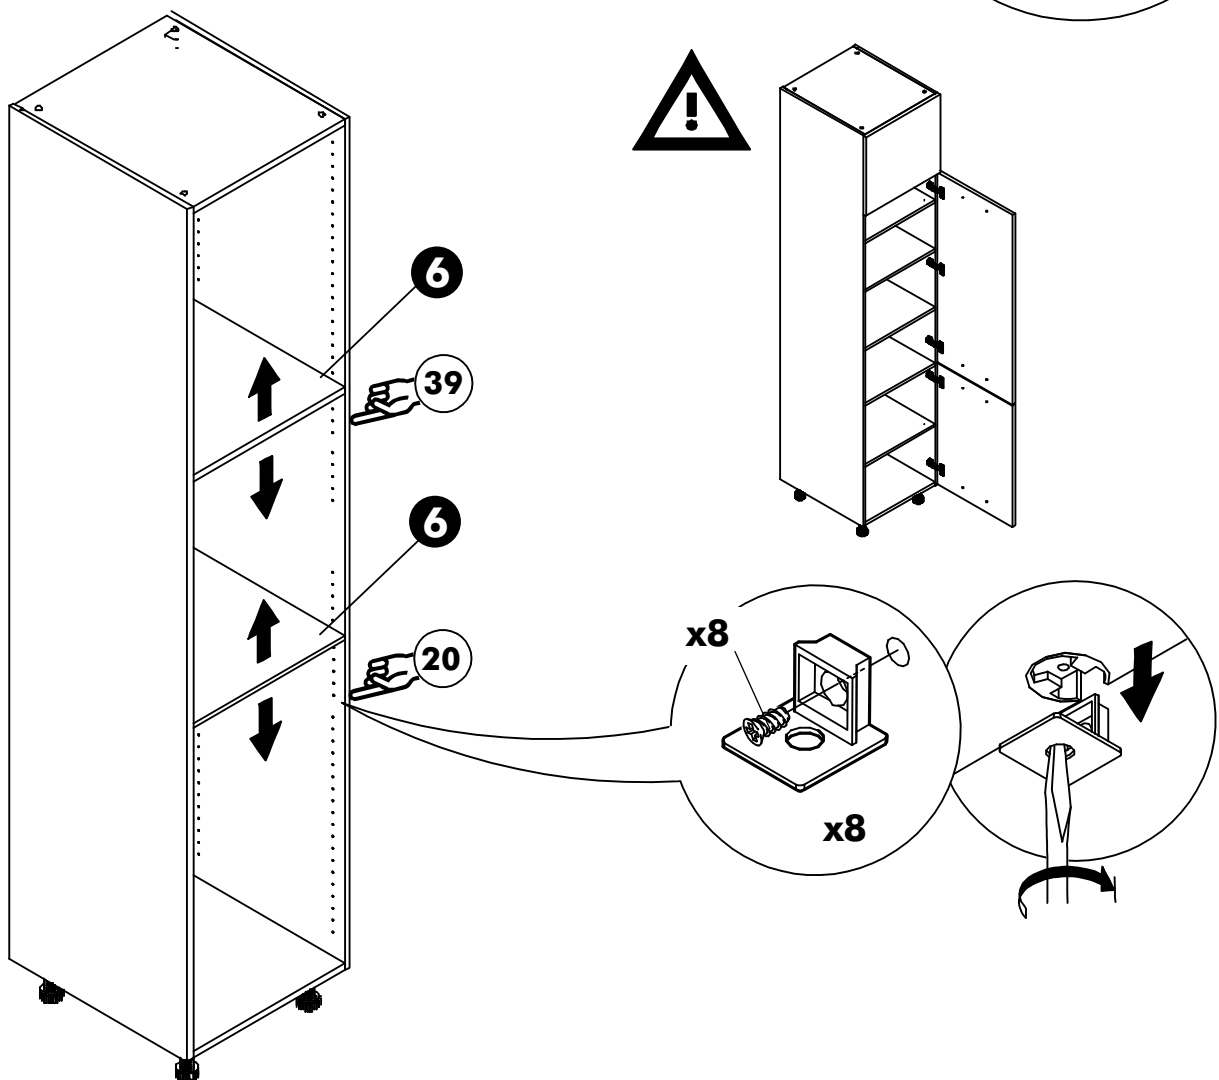



8.

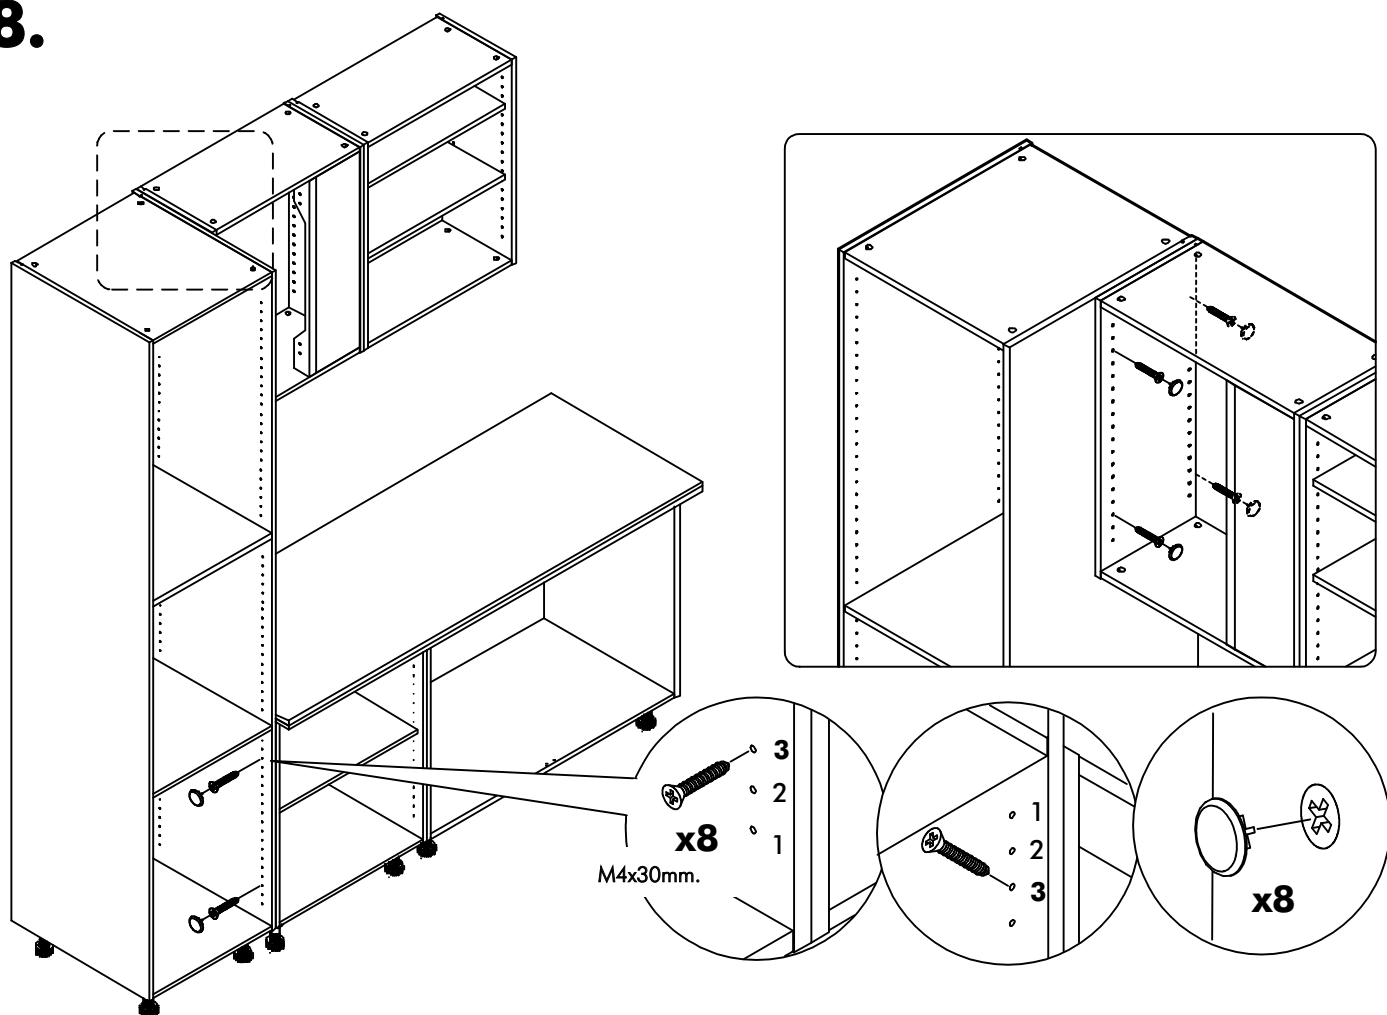

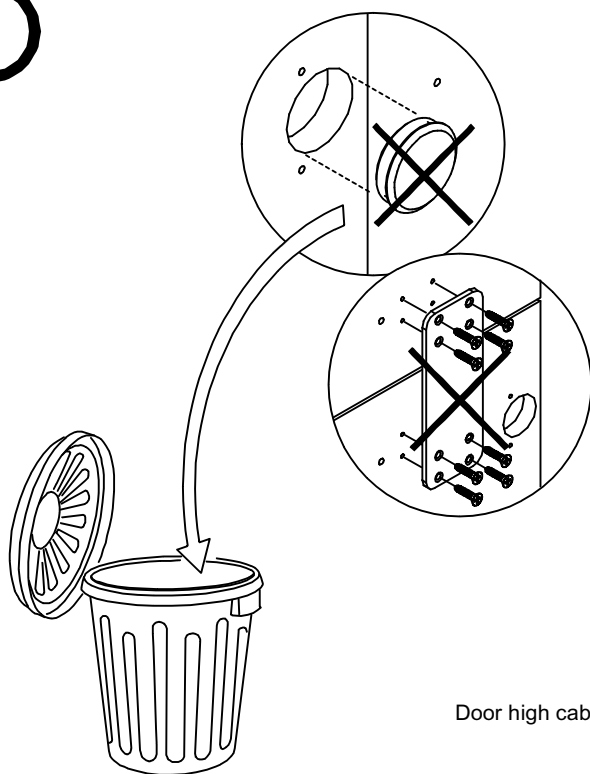


Door high cabinet

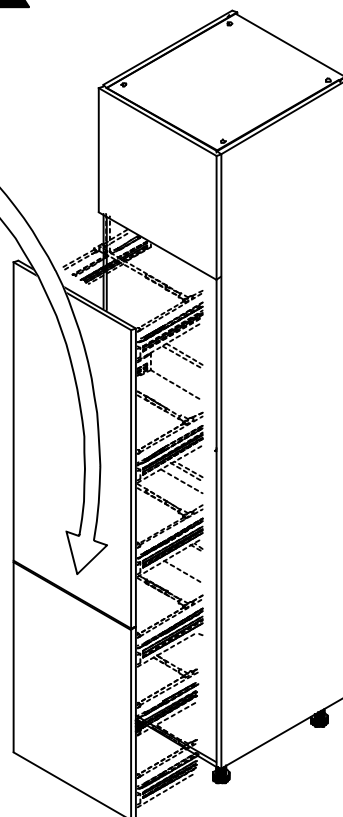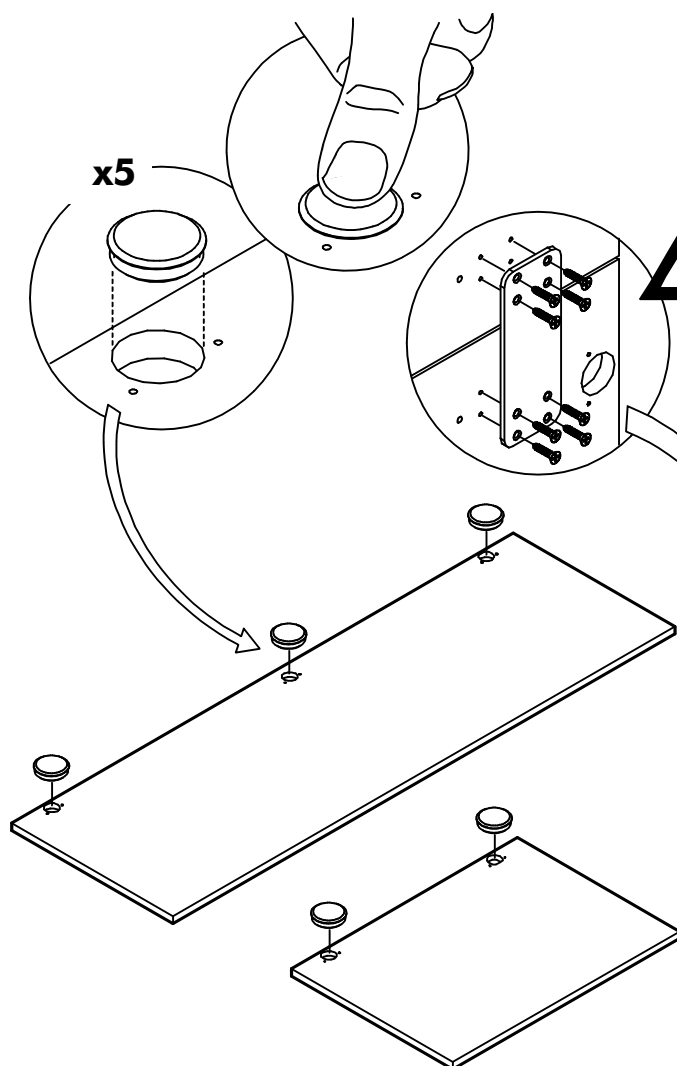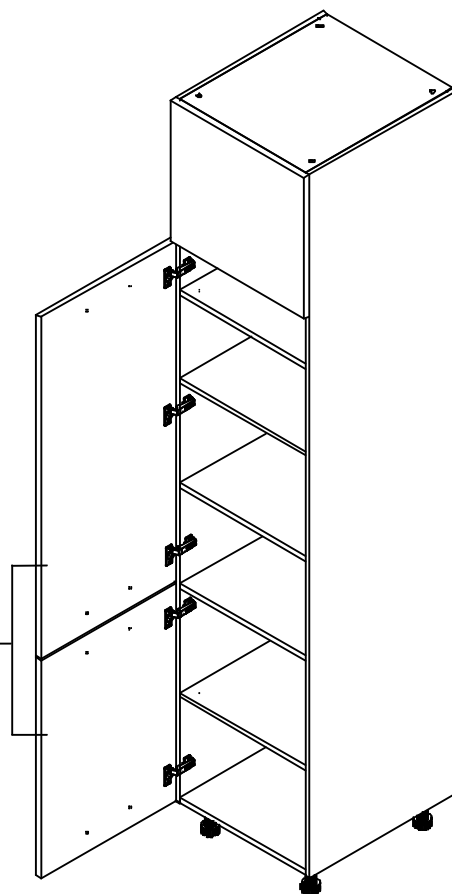


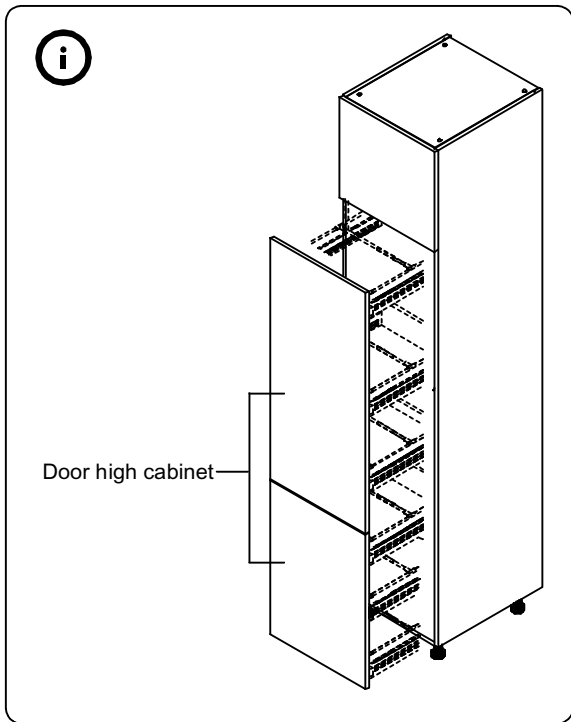


1.

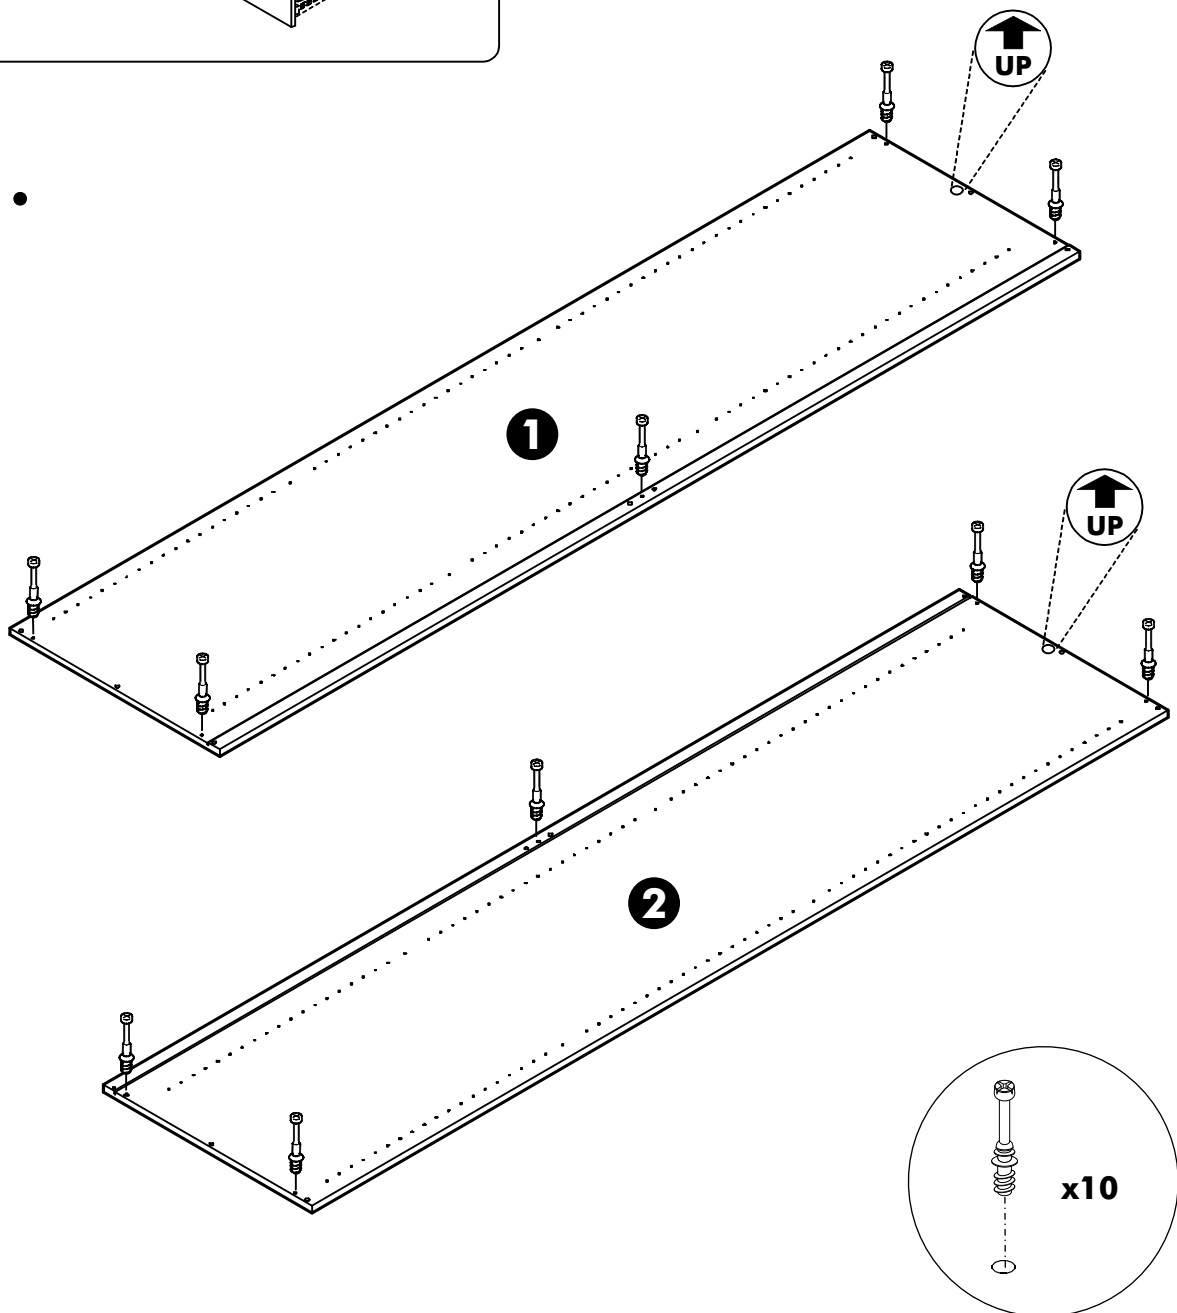


2.

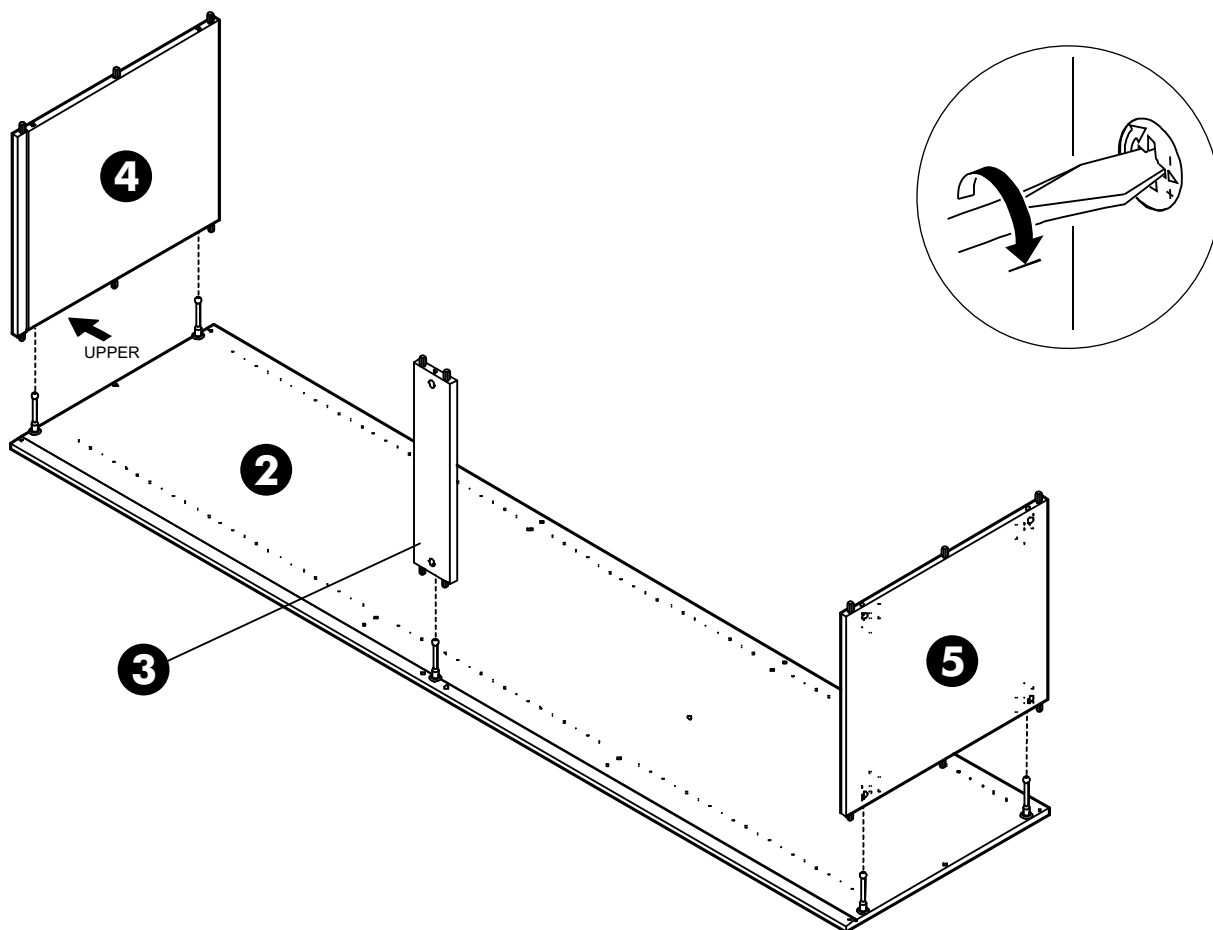

3.


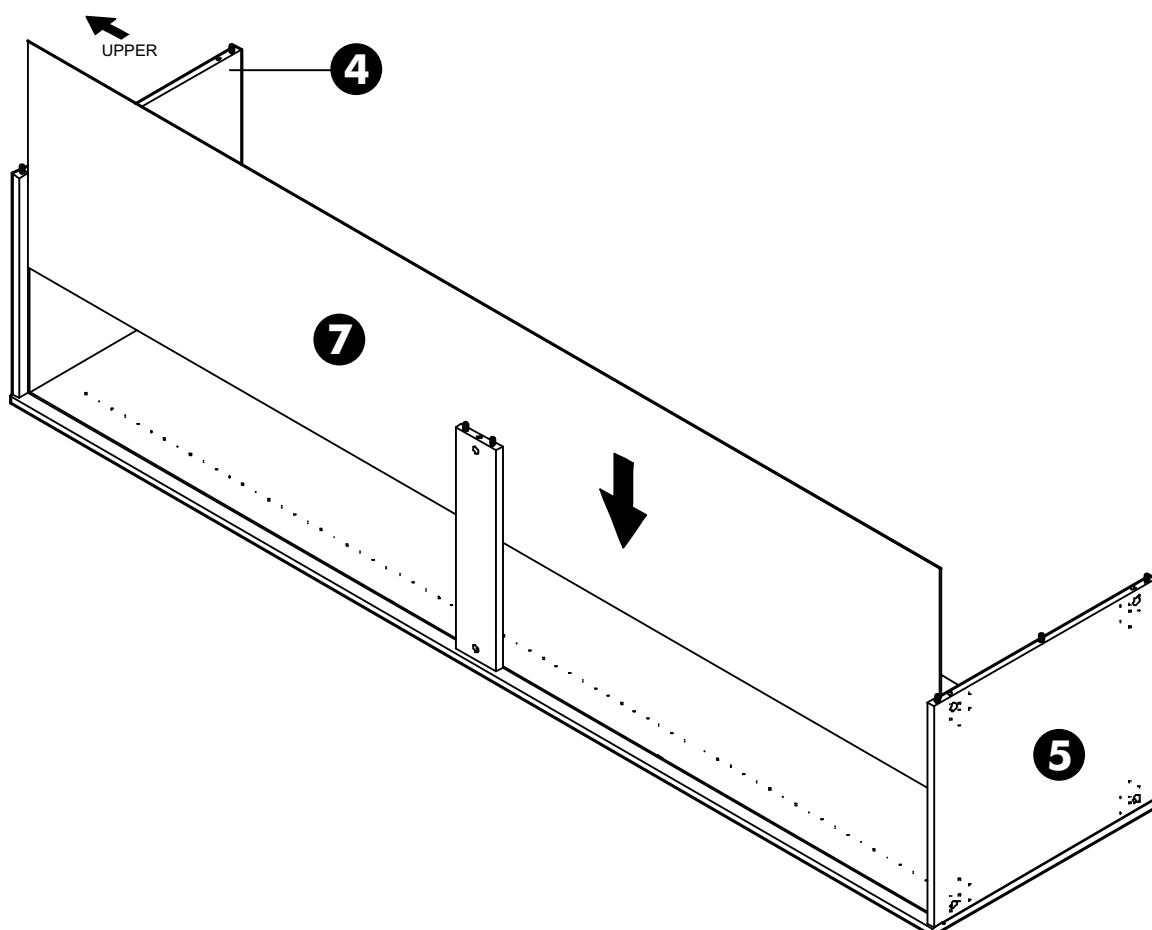


4.

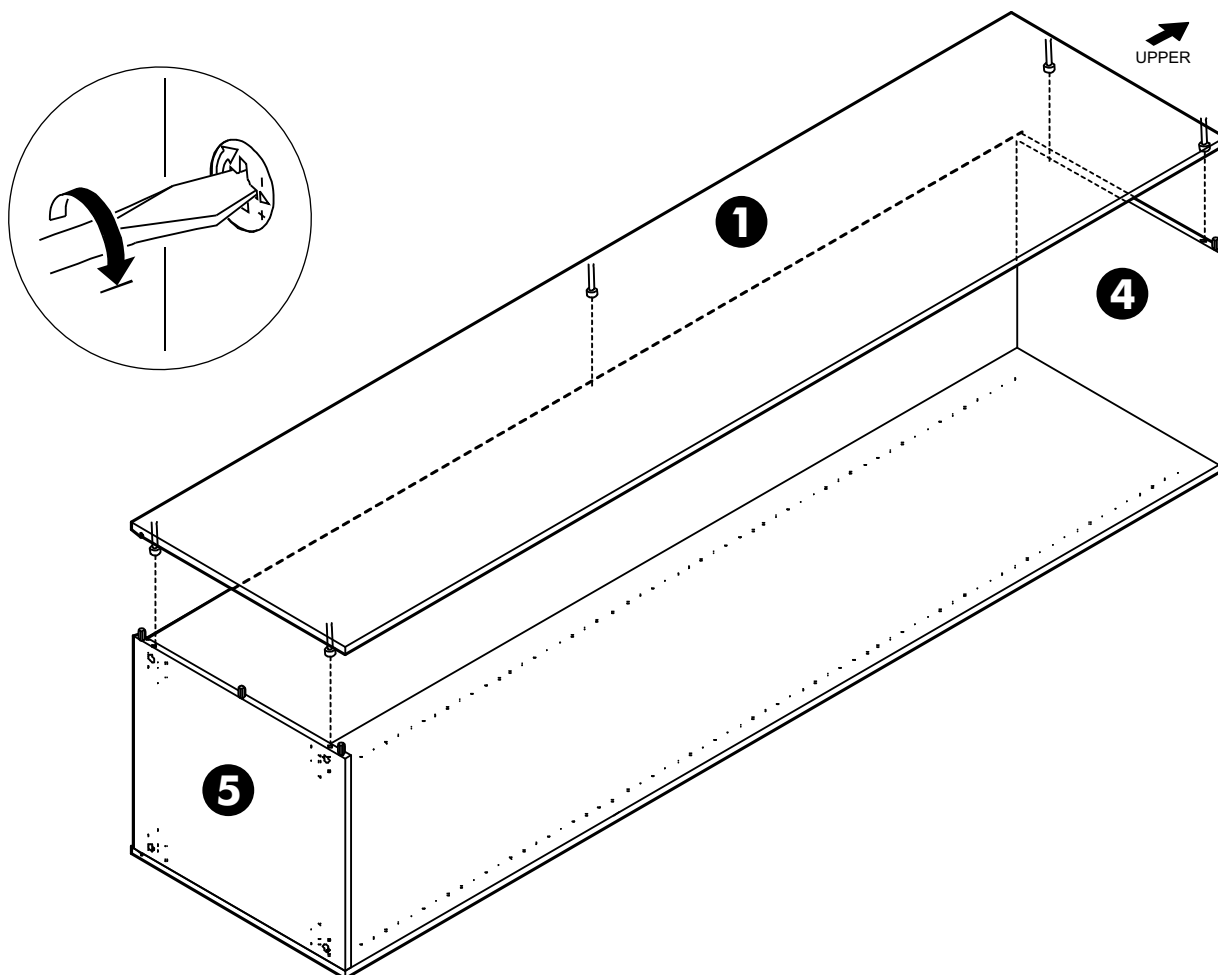

i

A.

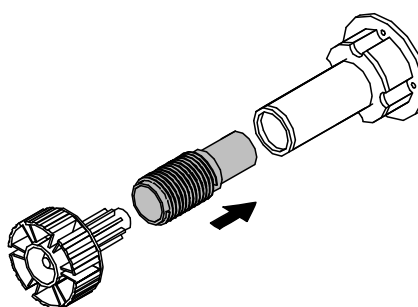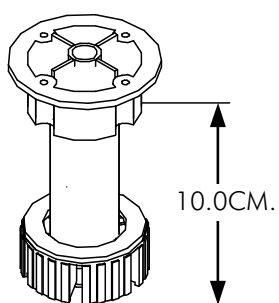

B.

