



BELINDA-P

Kitchen 1.2M

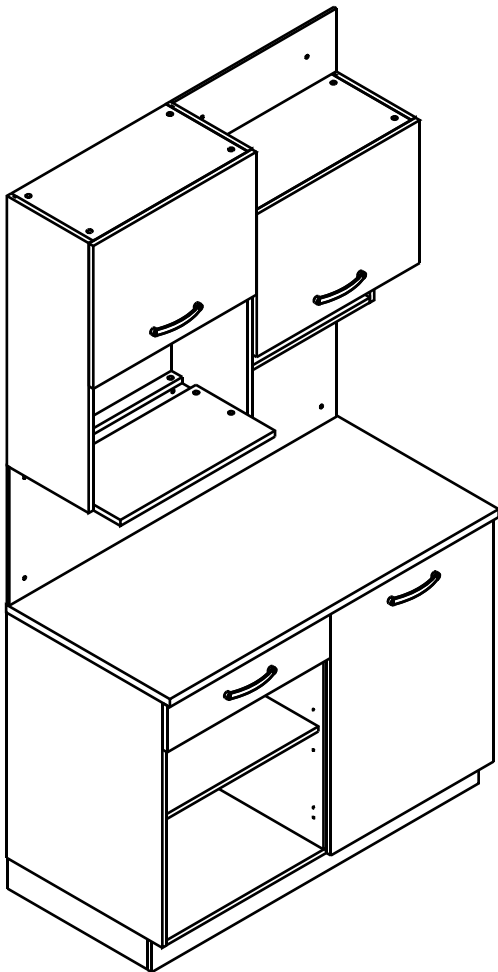

TYPE:LEFT

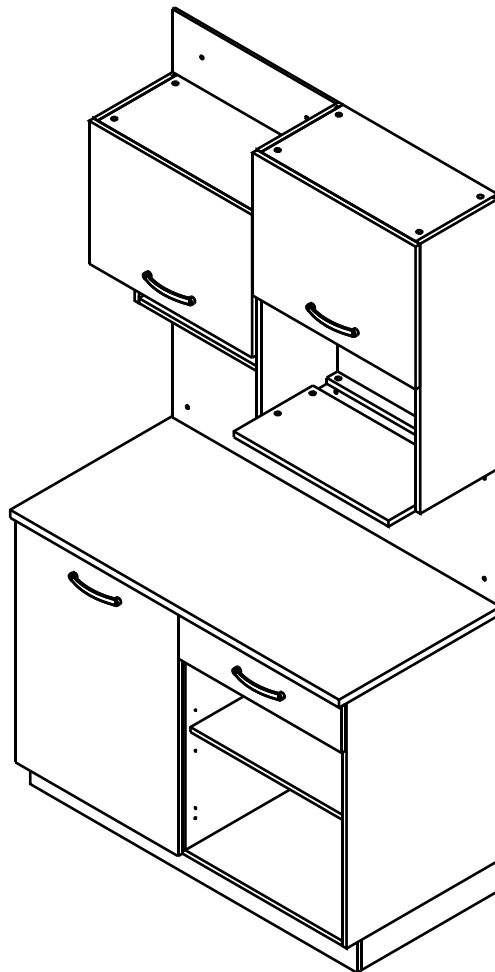

TYPE:RIGHT

CONNECT SYSTEM

1

2

(Connecting bolts)

3

WHEN FITTING CAMS
 ENSURE STARTING POSITION IS CORRECT
 BEFORE YOU INSERT CONNECTING BOLT
 TURN CLOCKWISE UNTIL SECURE

↑
CORRECT

WRONG

M4x16mm.

DOOR PANEL

EQ EQ

1 Pc.

≤ 190mm.

40mm. 40mm.

EQ EQ EQ EQ

2 Pcs.

≥ 191-850mm.

100mm. EQ EQ 100mm.

3 Pcs.

> 850-2000mm.

100mm. EQ EQ EQ EQ 100mm.

4 Pcs.

> 2001mm.

OUT **IN** M4x16mm.

40mm.

☹️

❌


EQ

😊

✅




TYPE:LEFT

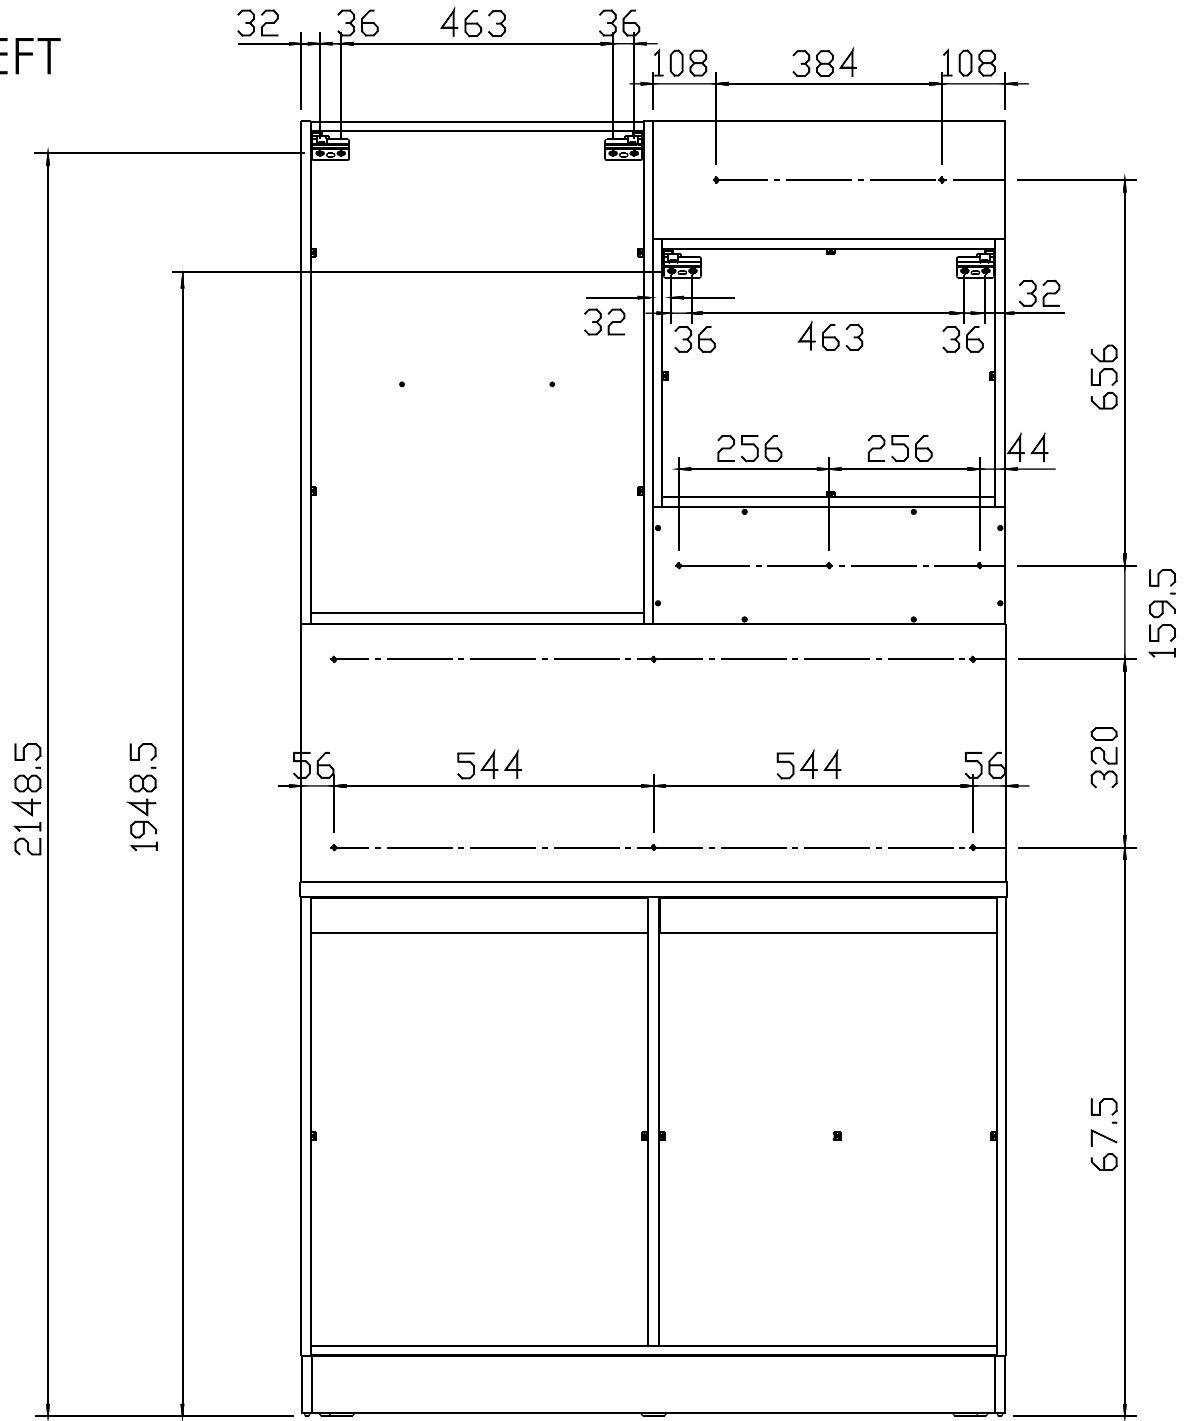




TYPE:RIGHT

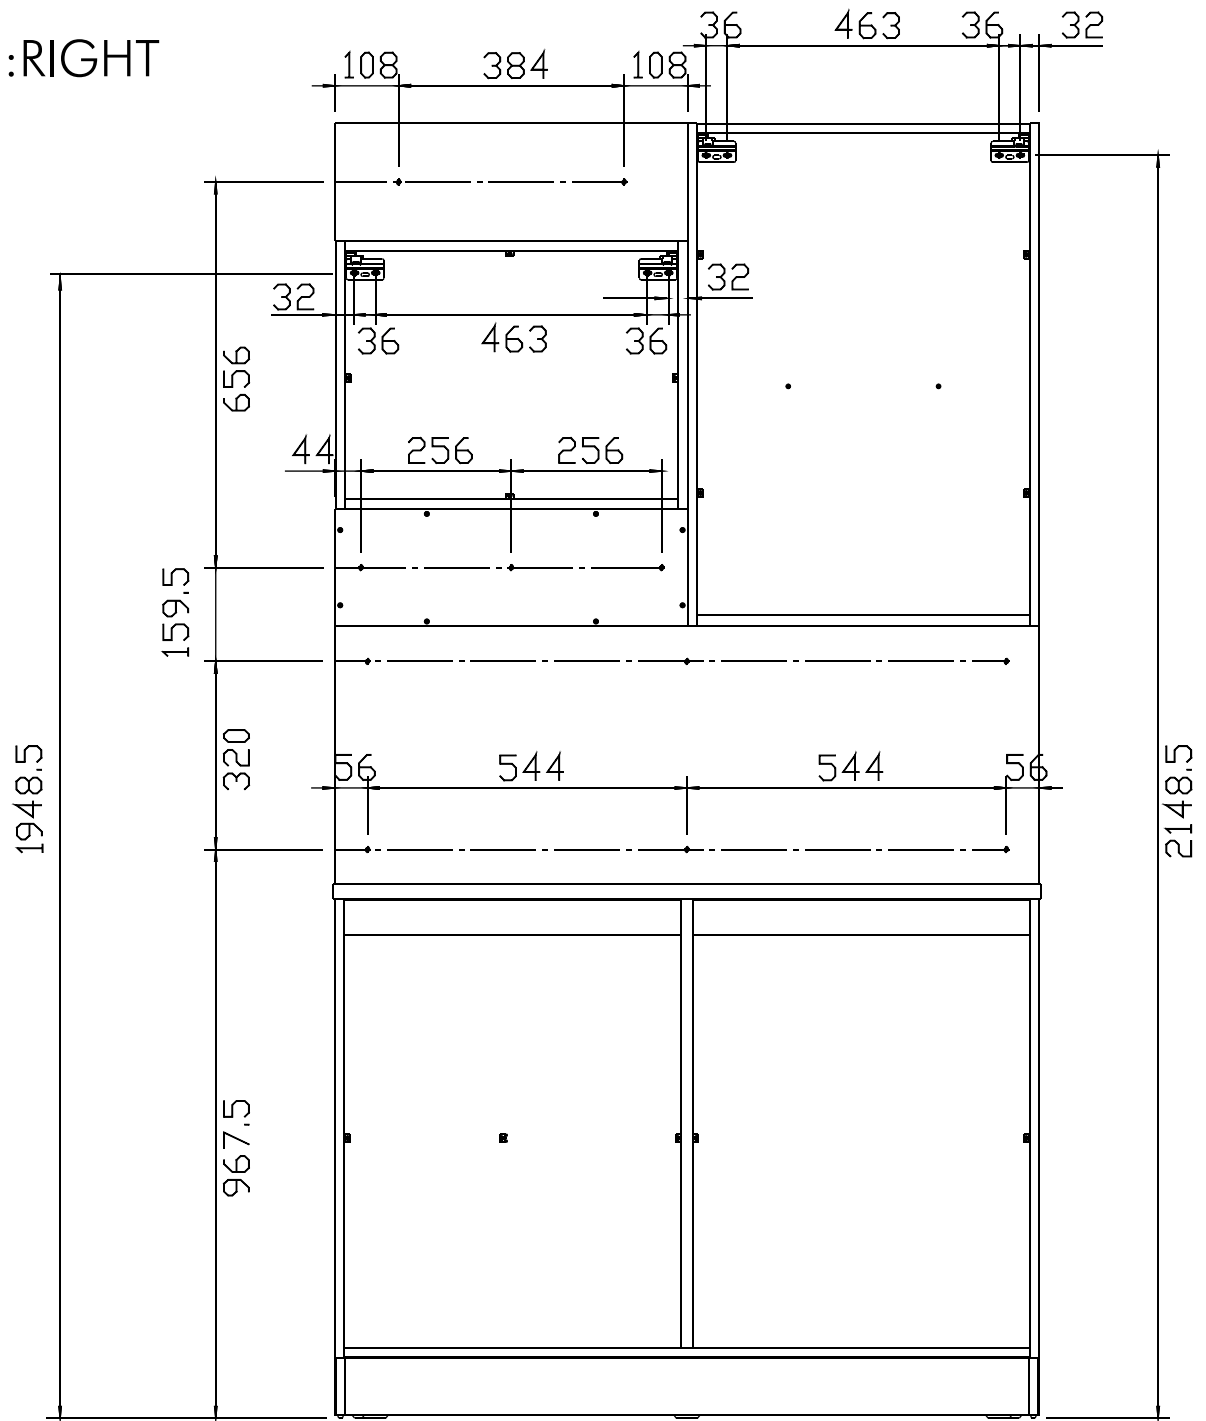

HARDWARE


-BODY SET




x 36




x 36



x 64



x 12

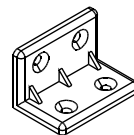

x 25




x 16



x 13



x 12

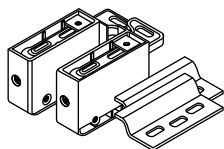

x 2



x 6



x 3




x 8



x 2



x 19

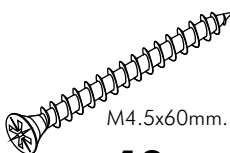

x 19




x 124




x 13




x 1



x 12




x 8

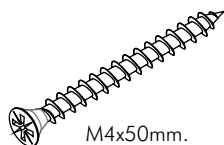

x 2


-DRAWER SET

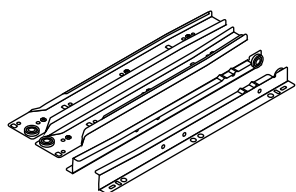

x 1



x 8

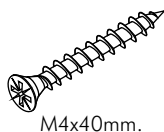

x 10



x 3




x 1



x 6


-DOOR SET



x 6



x 24

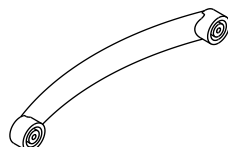


x 4




x 8


1.

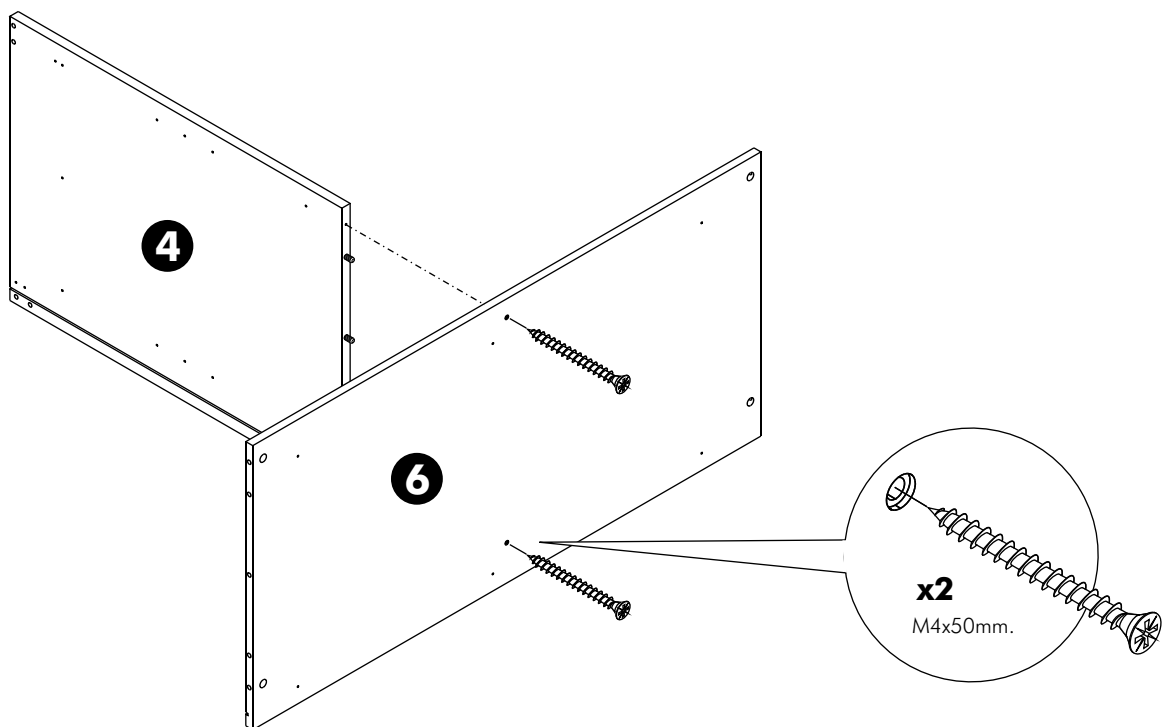


2.

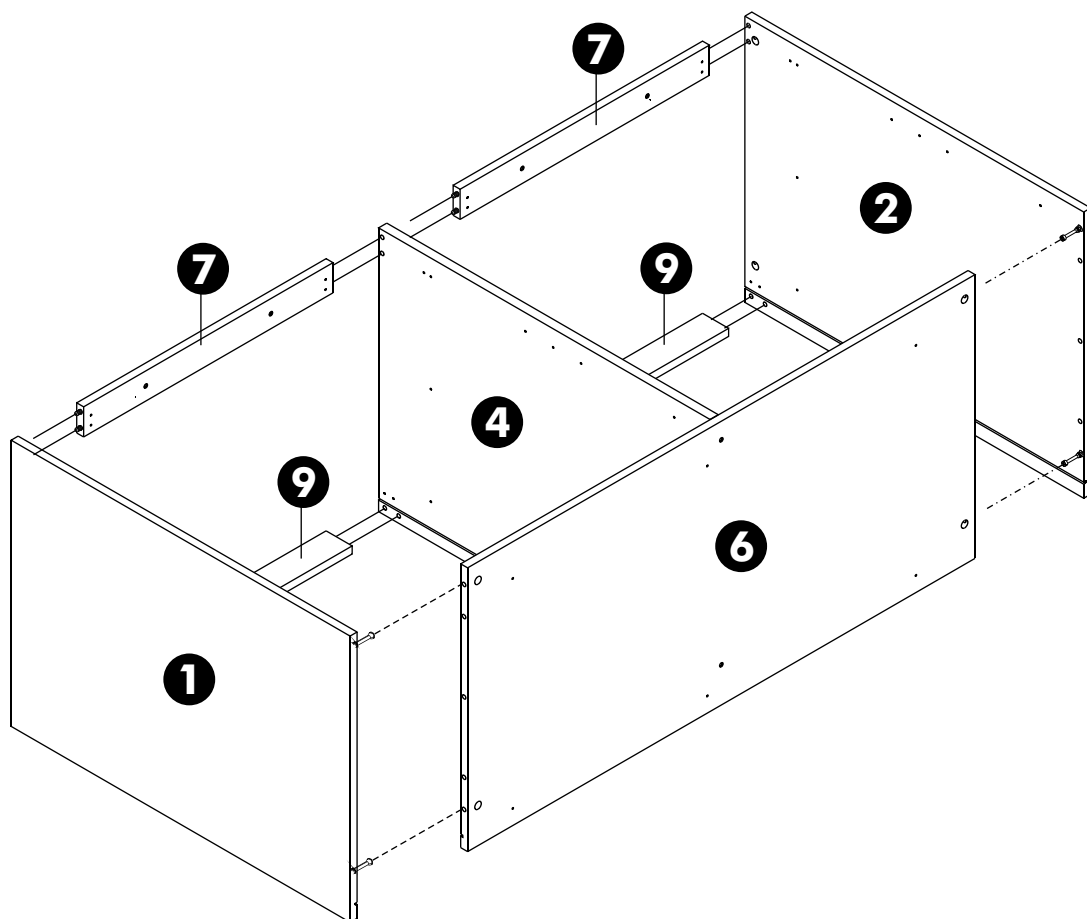


3.

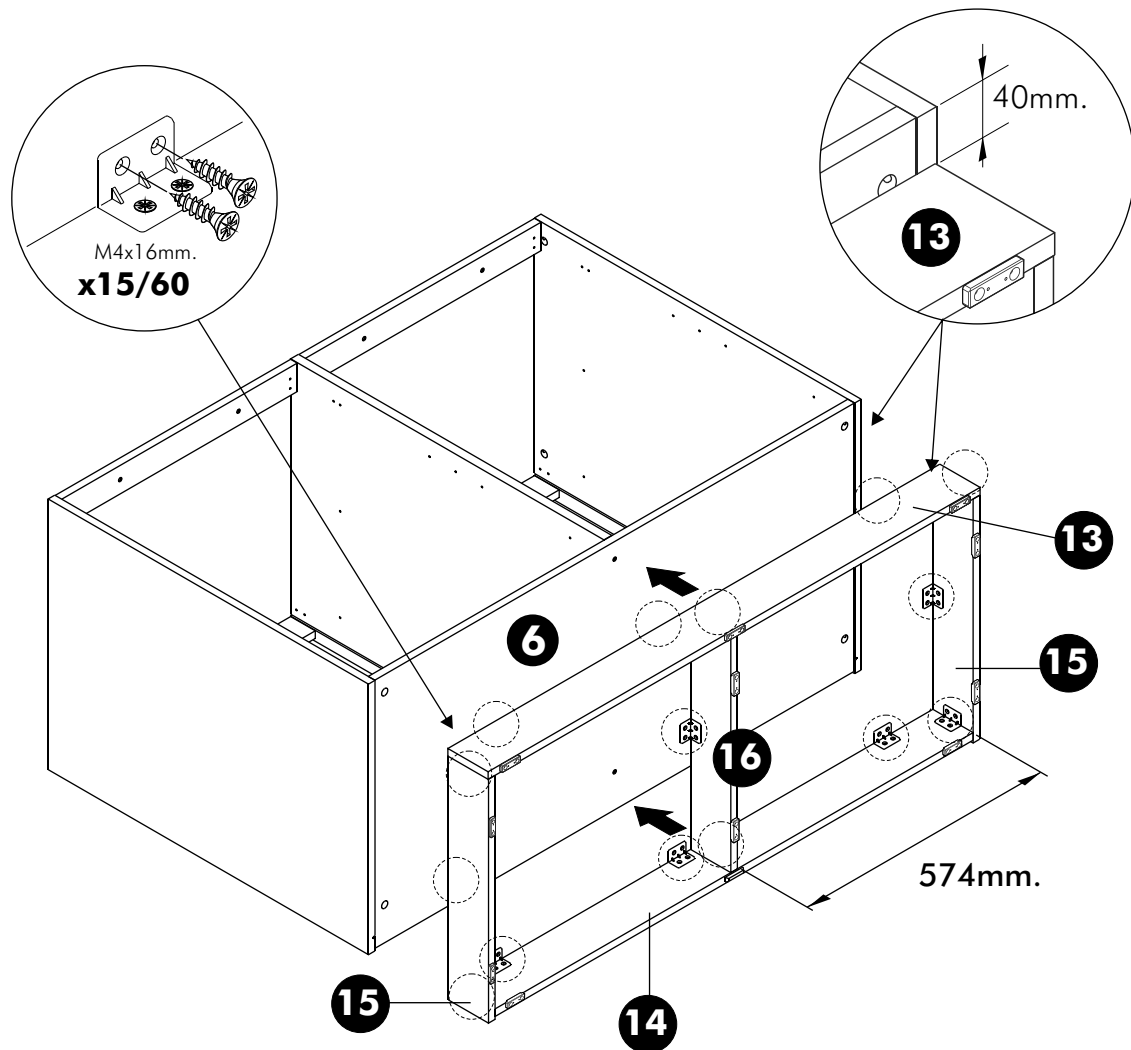


4.

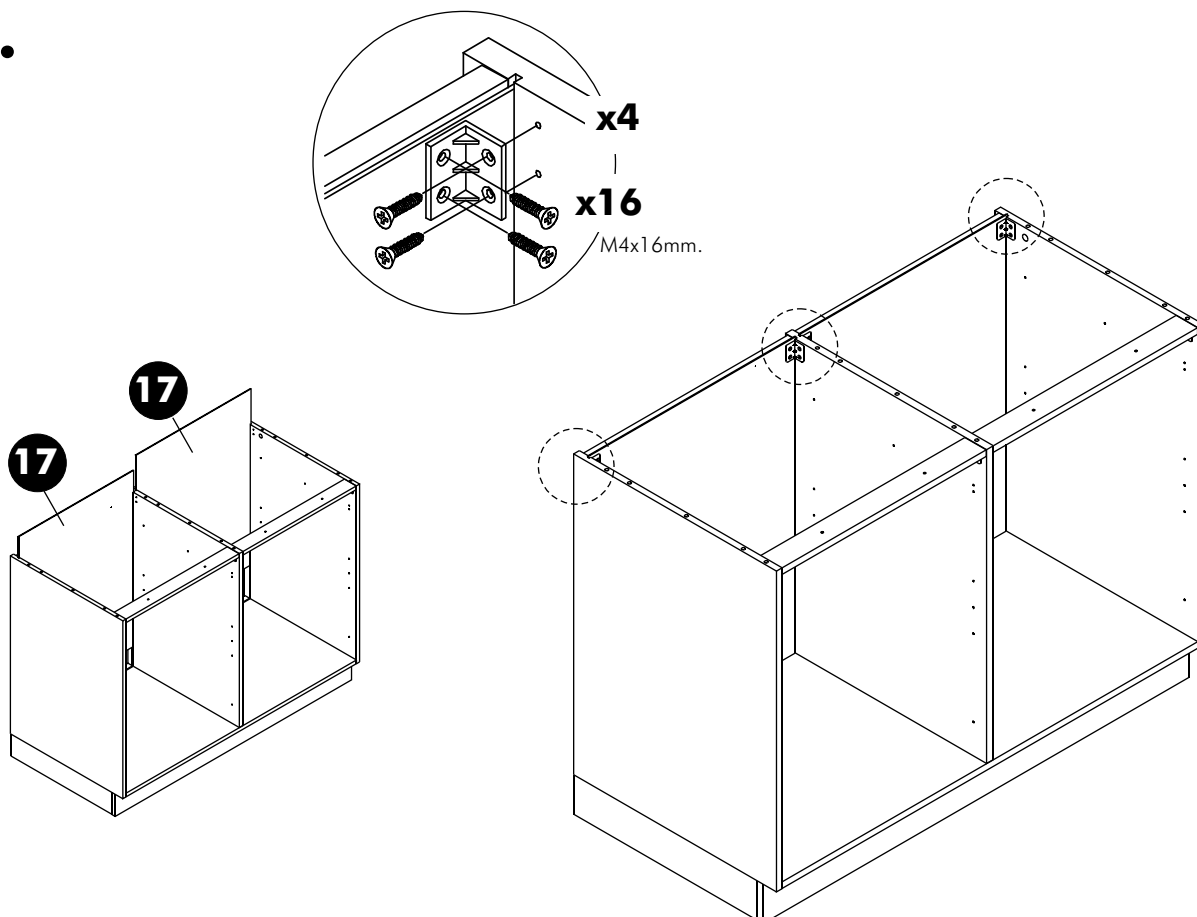




5.

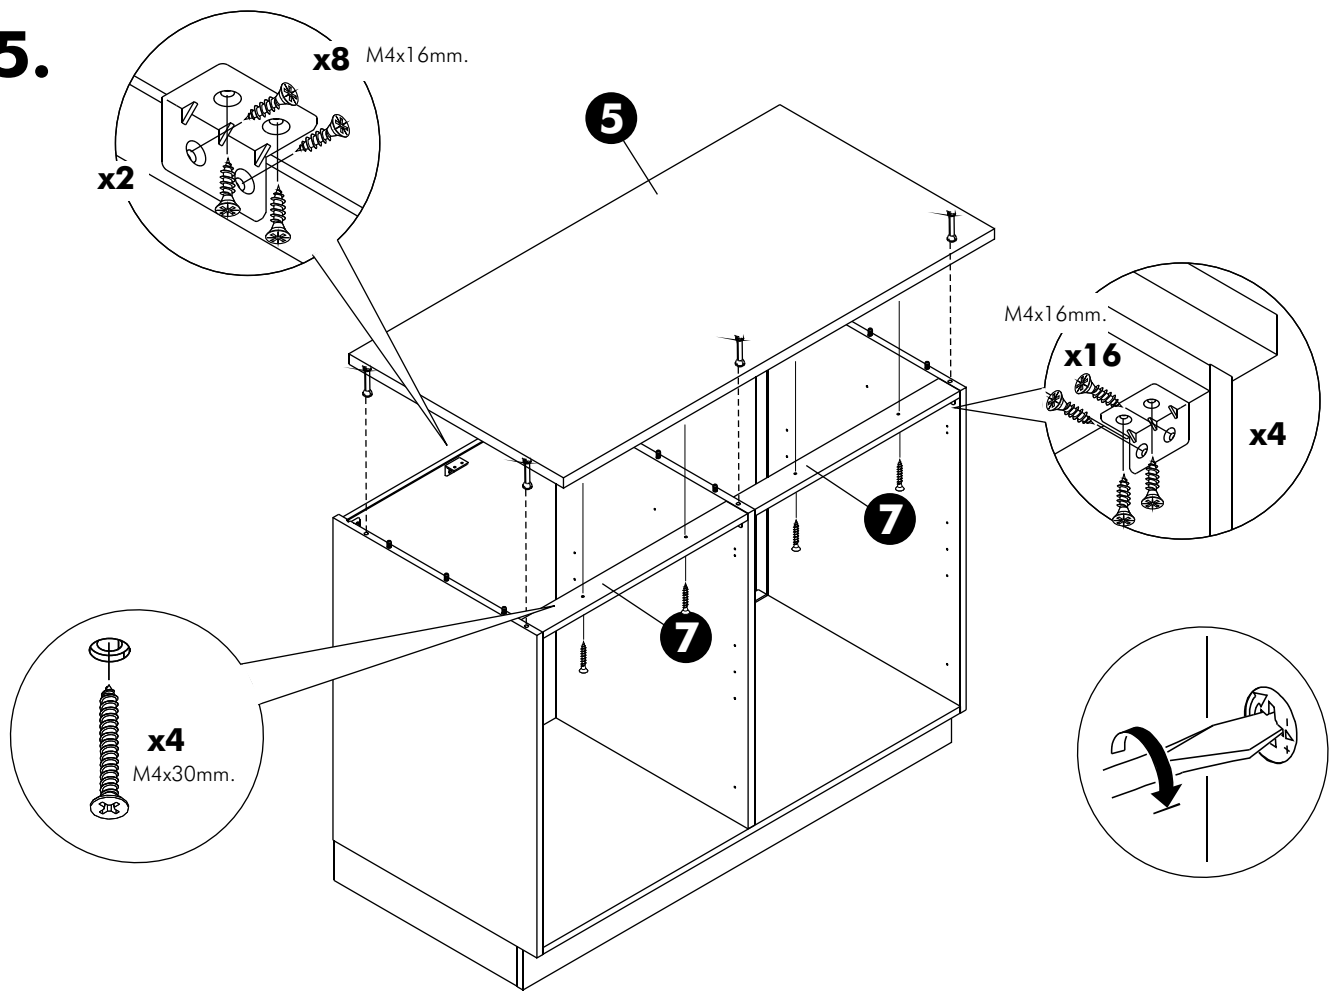



6.

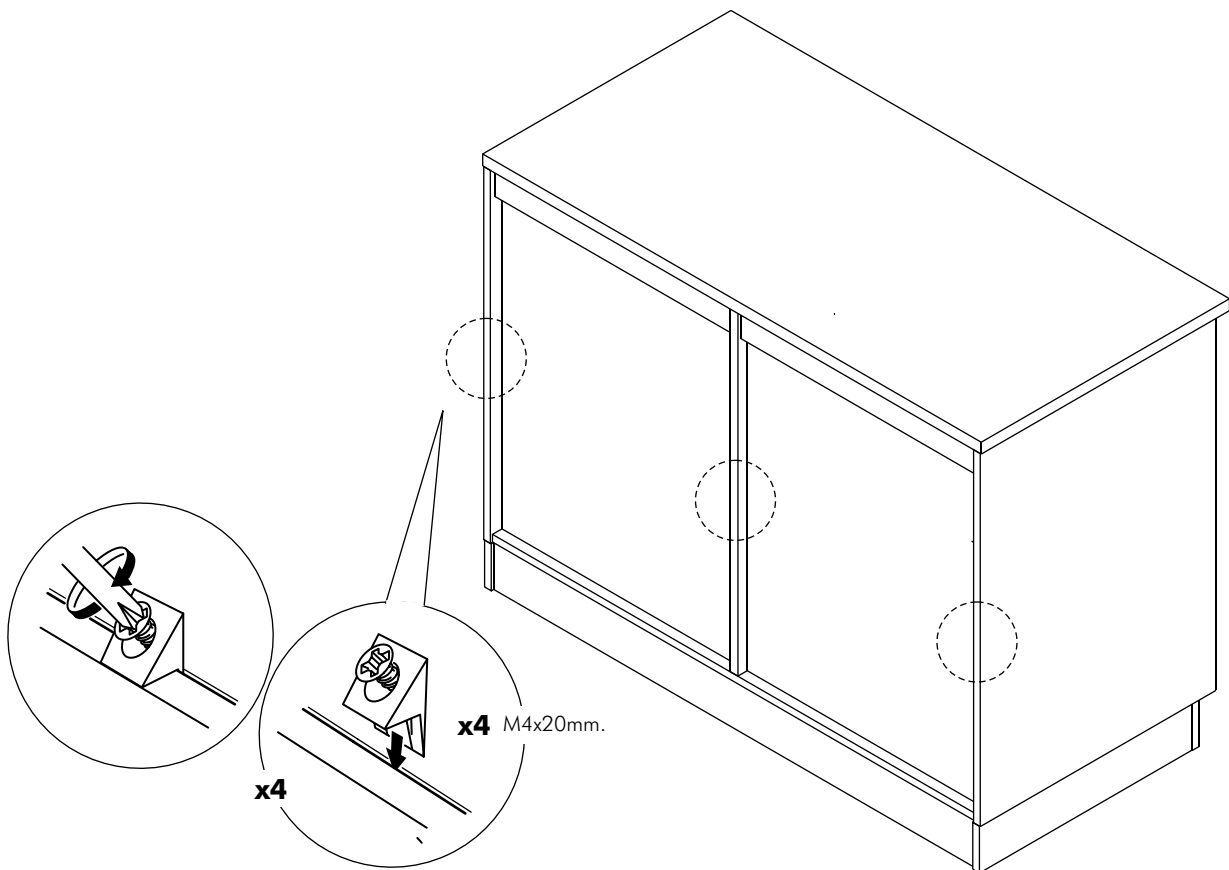


7.

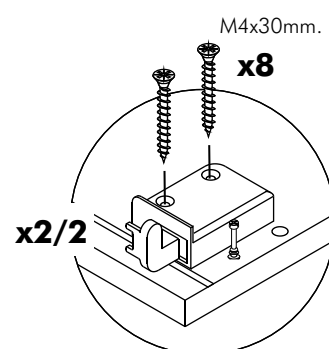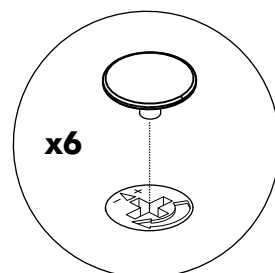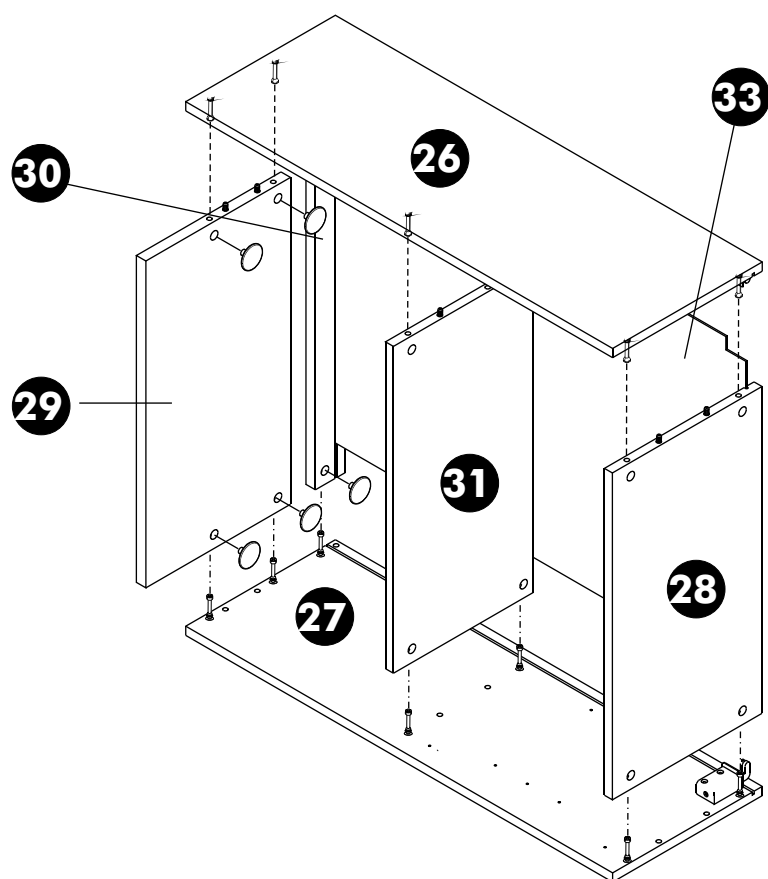


8.

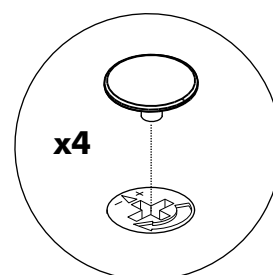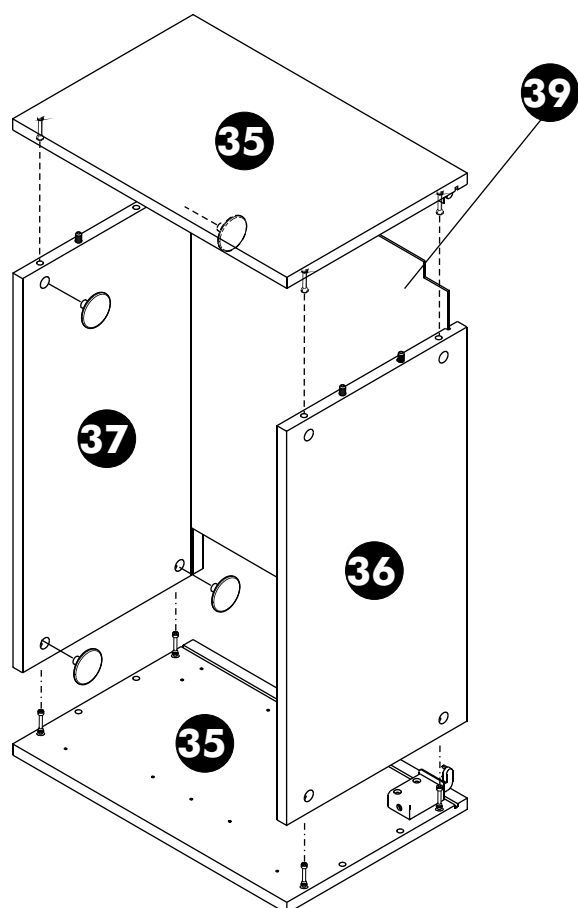


9.

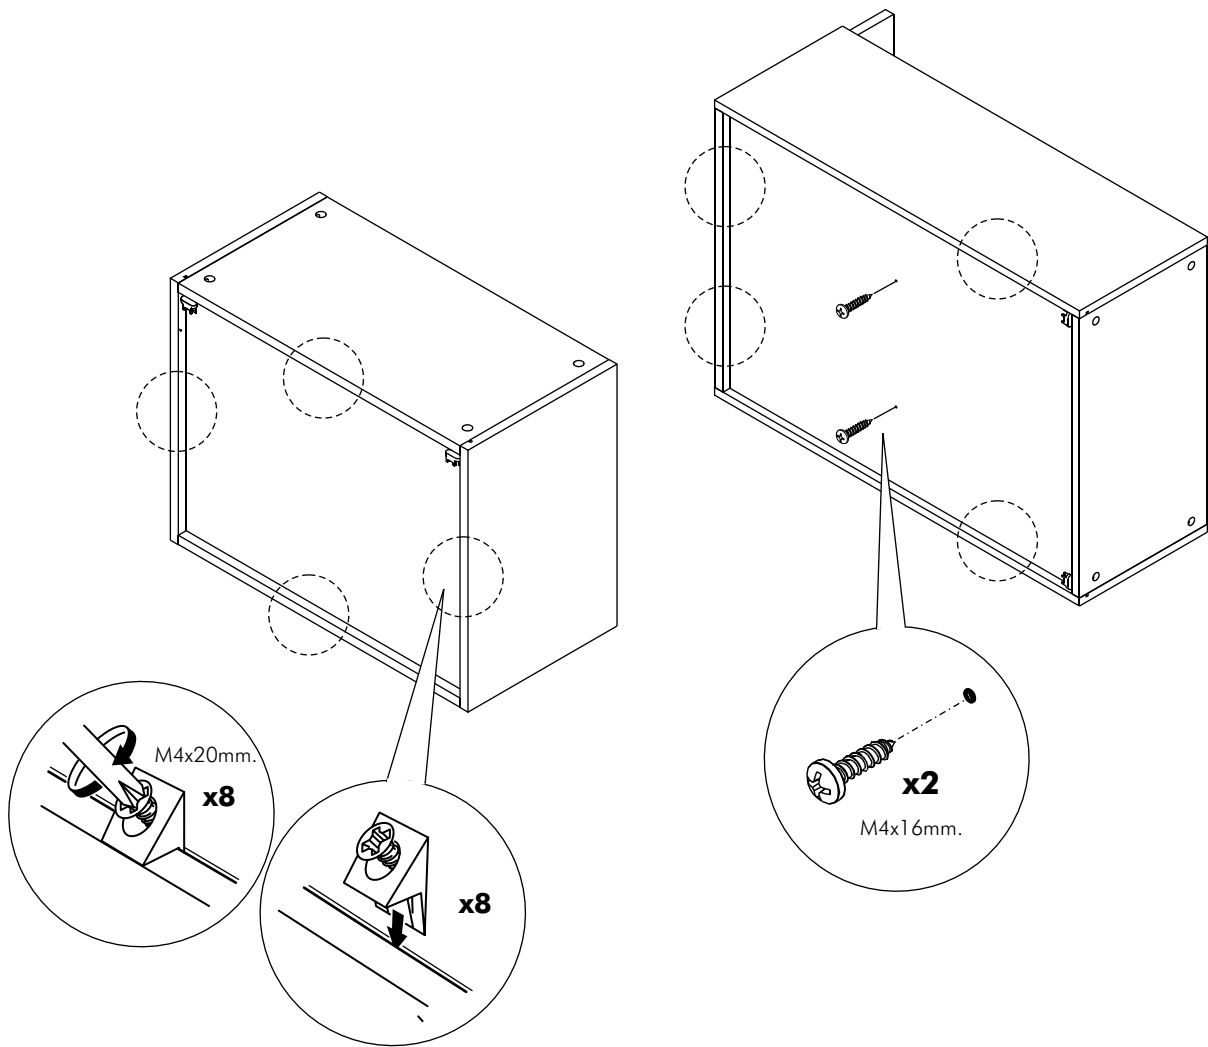


10.

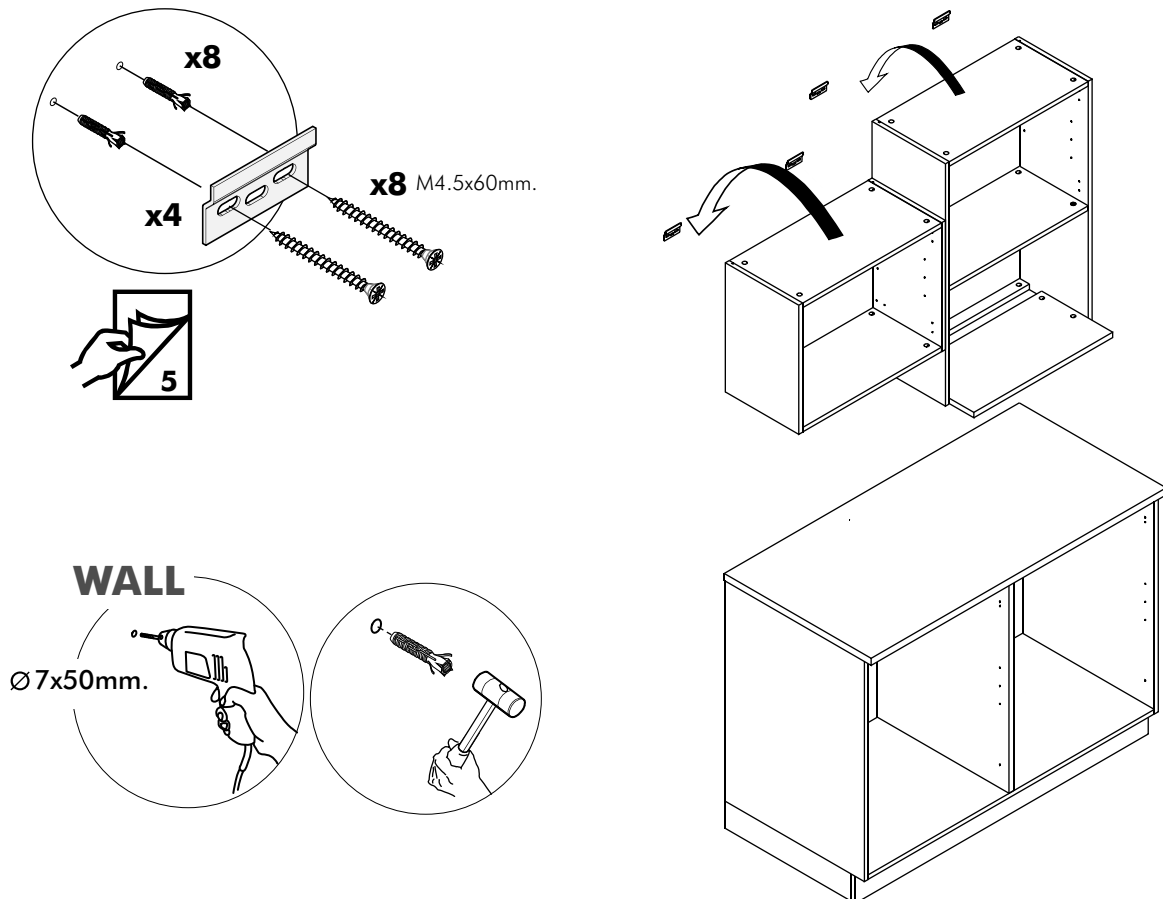


11.

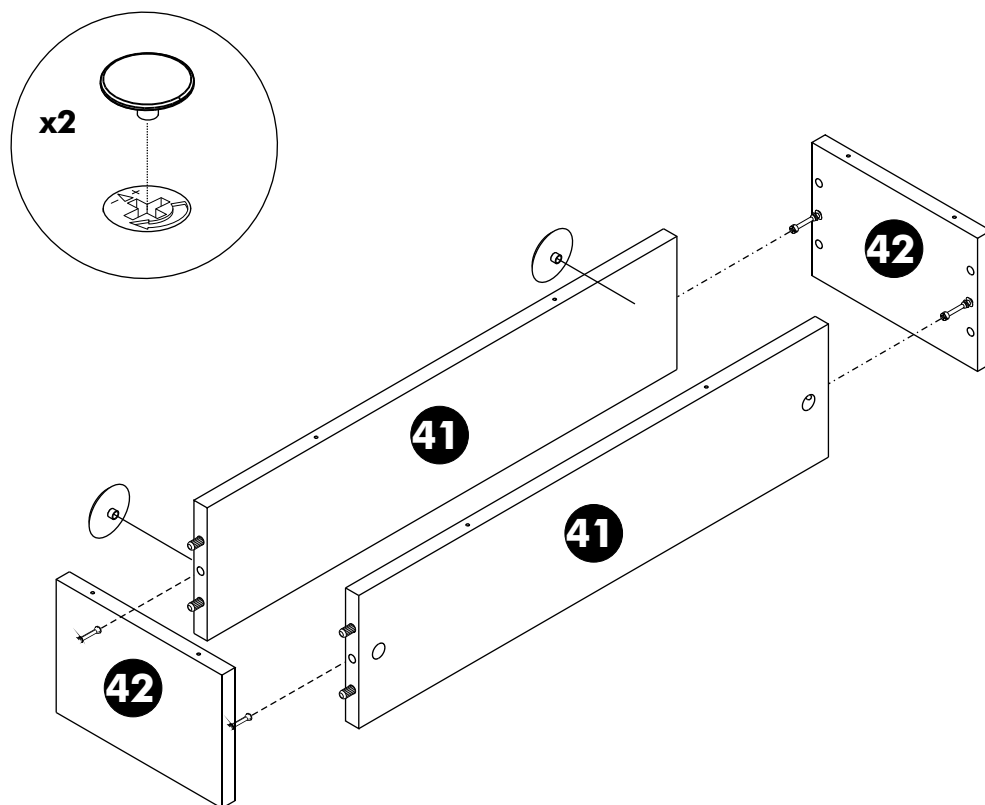


12.

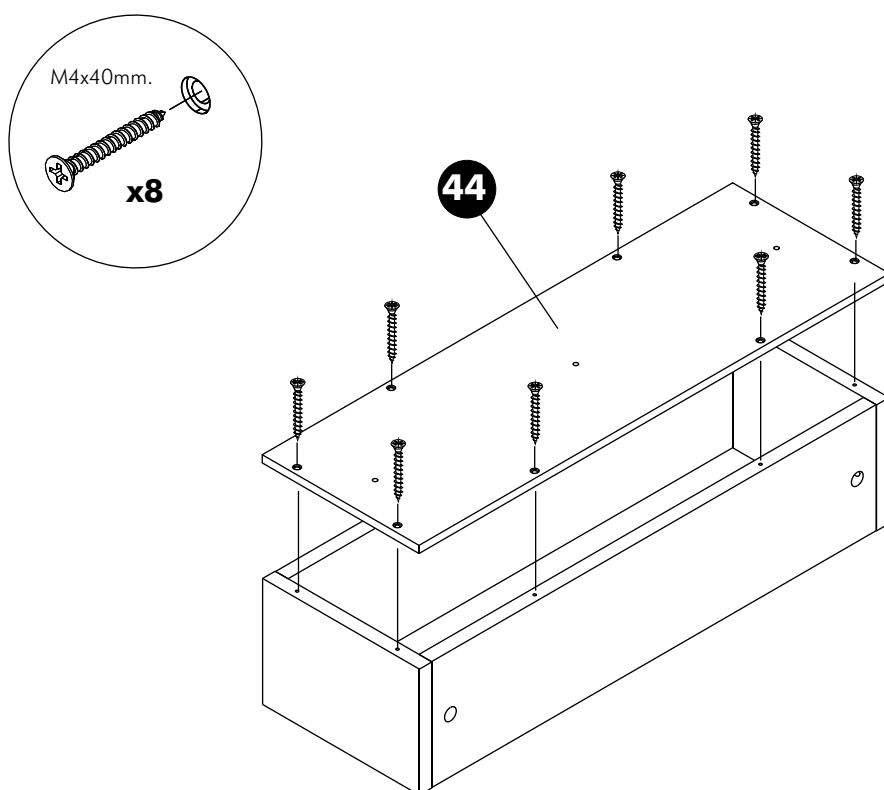

13.


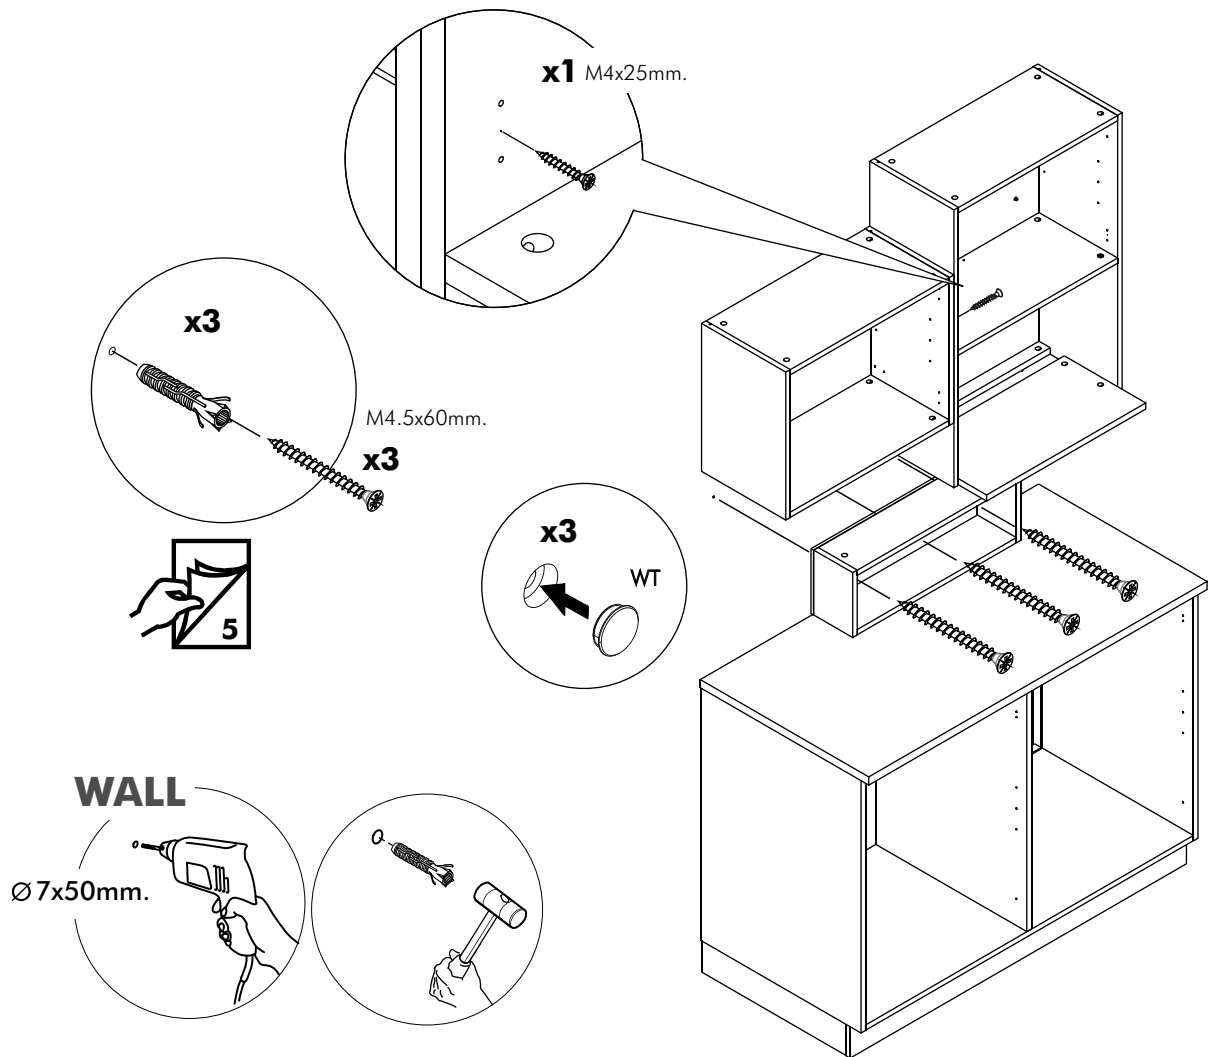


14.

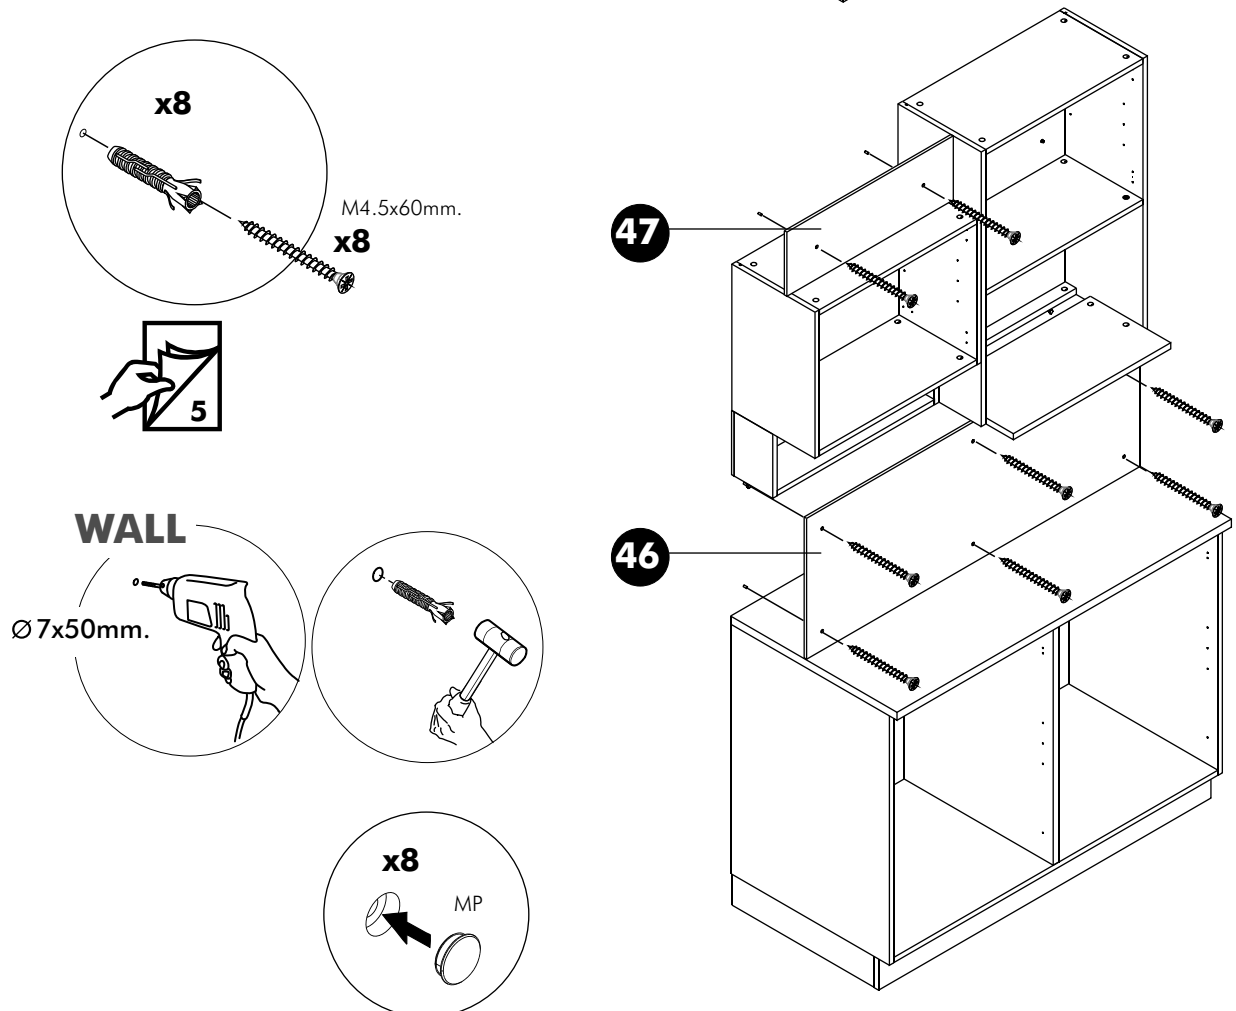


15.



x16

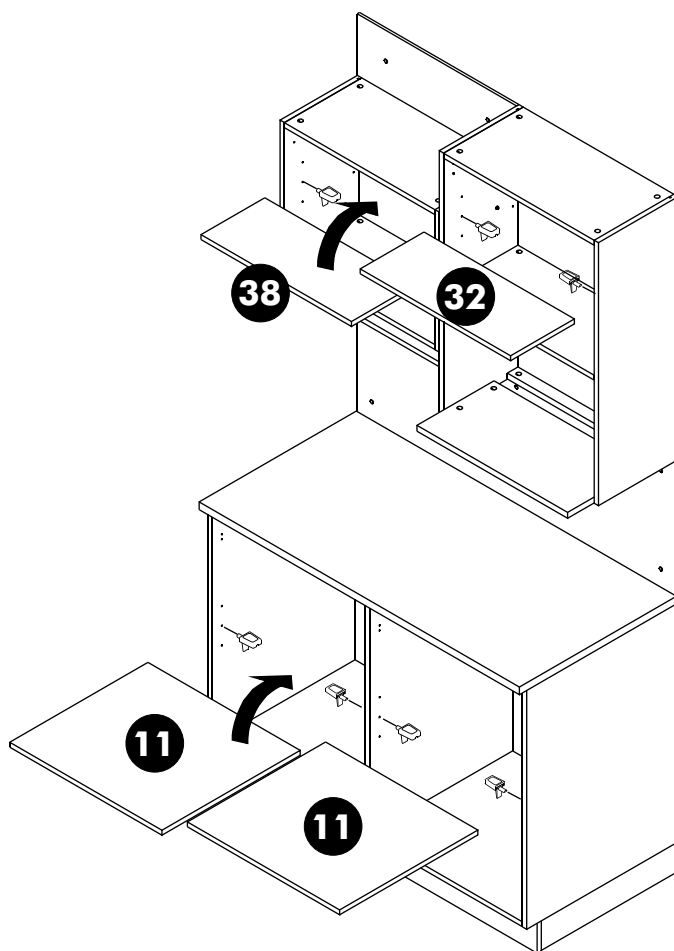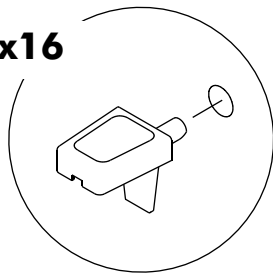

16.

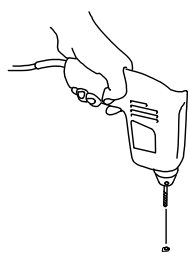


Ø5mm.

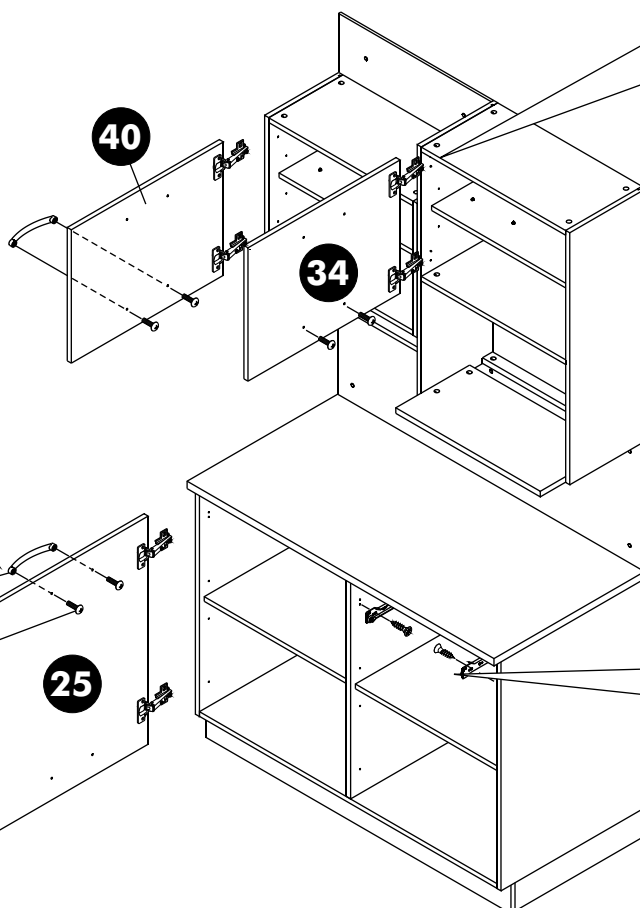

x12

M4x16mm.

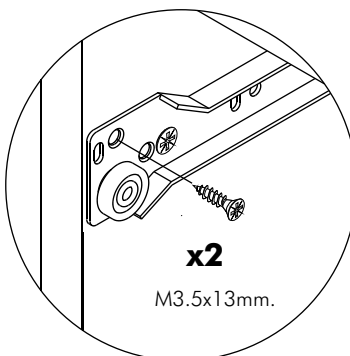

x2


M3.5x13mm.

x3

x6

M4x22mm.


25

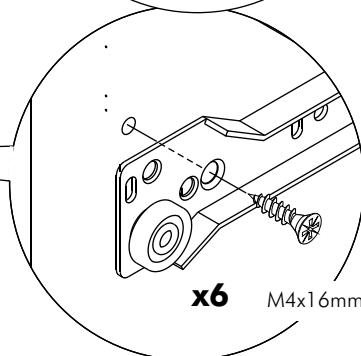

x6

M4x16mm.

17.

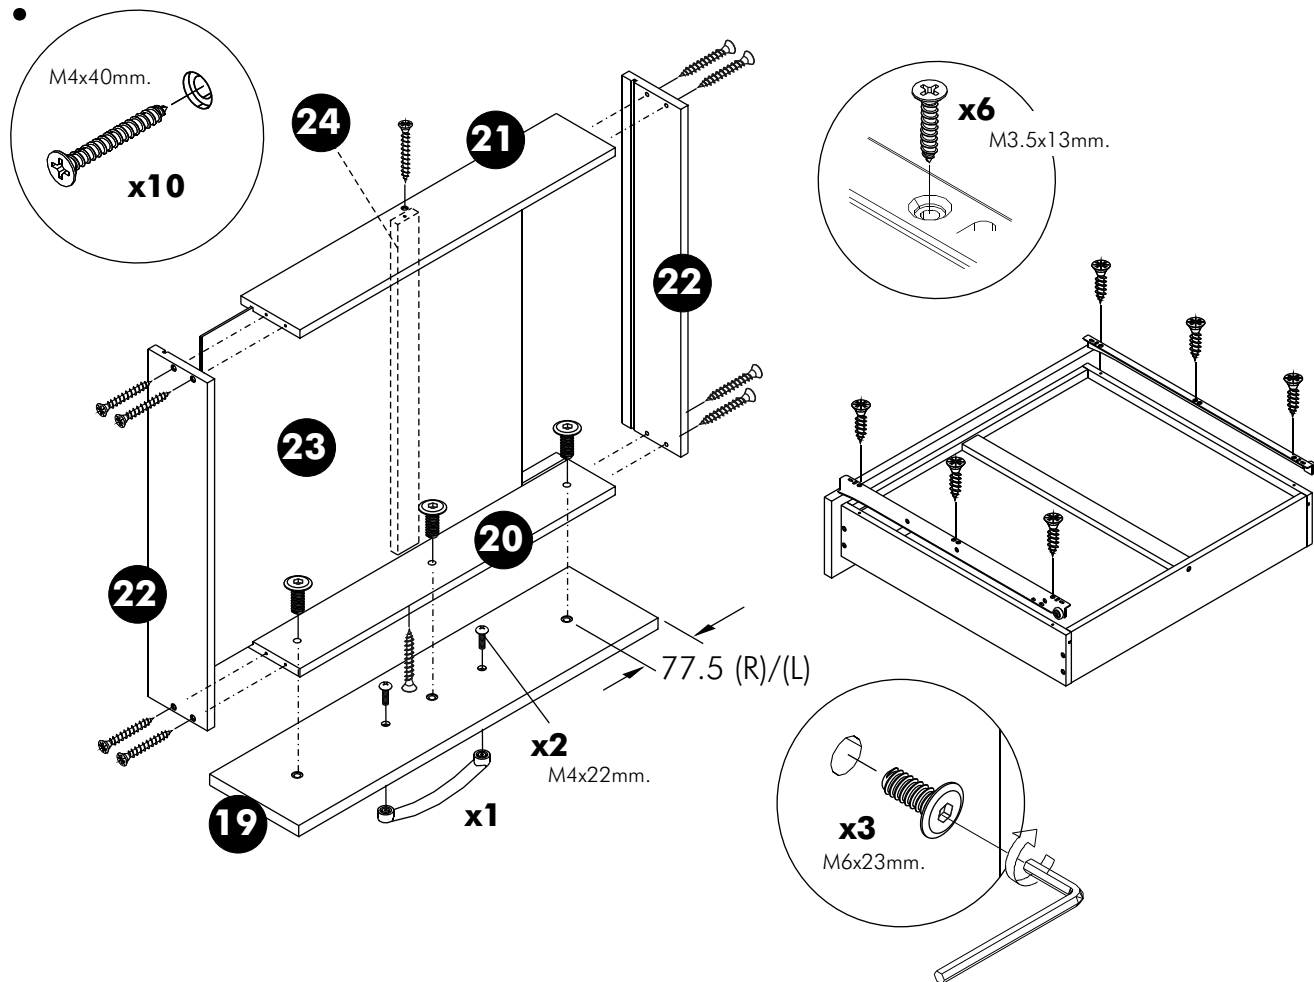

18.

