


MARYDEL

Dressing table

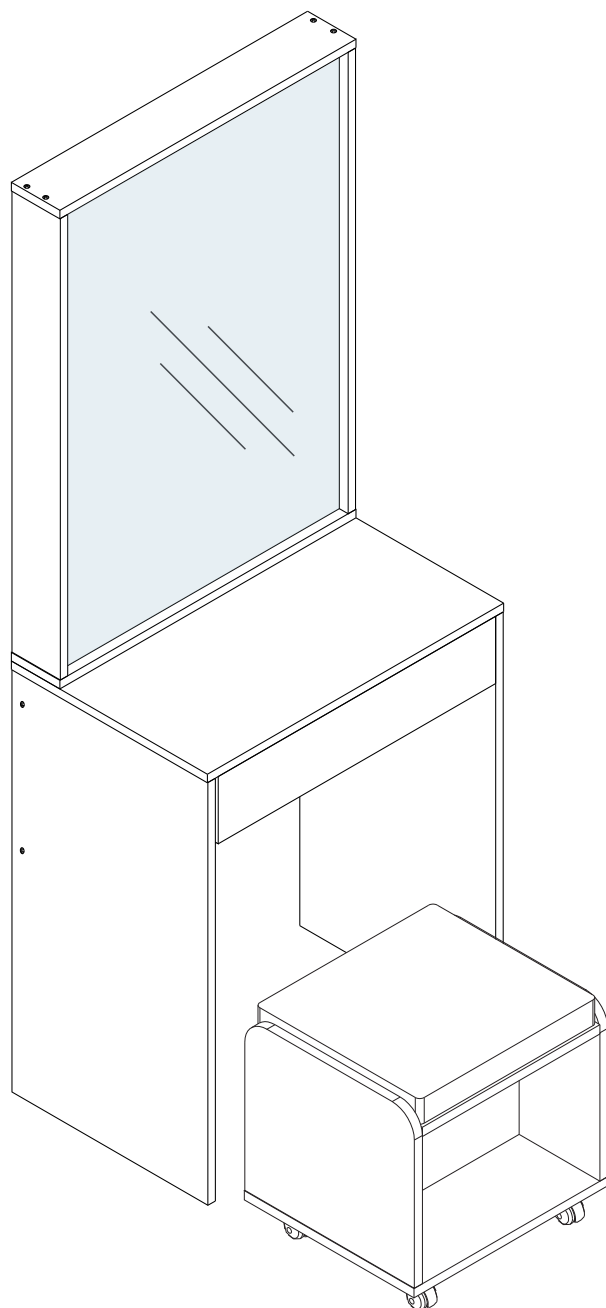

CONNECT SYSTEM

1

2

(Connecting bolts)

3

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

↑
CORRECT

WRONG

M3.5x13mm.

1

28mm.

Use these holes

2

Use these holes

EQ

EQ

1 Pc.

≤ 190mm.

40mm.

40mm.

EQ

EQ

2 Pcs.

≥ 191-850mm.

100mm.

100mm.

EQ

EQ

3 Pcs.

> 850-2000mm.

100mm.

100mm.

EQ

EQ

4 Pcs.

> 2001mm.

100mm.

100mm.

OUT

IN

M4x16mm.

40mm.

☹




✗

EQ



☺

✓


2

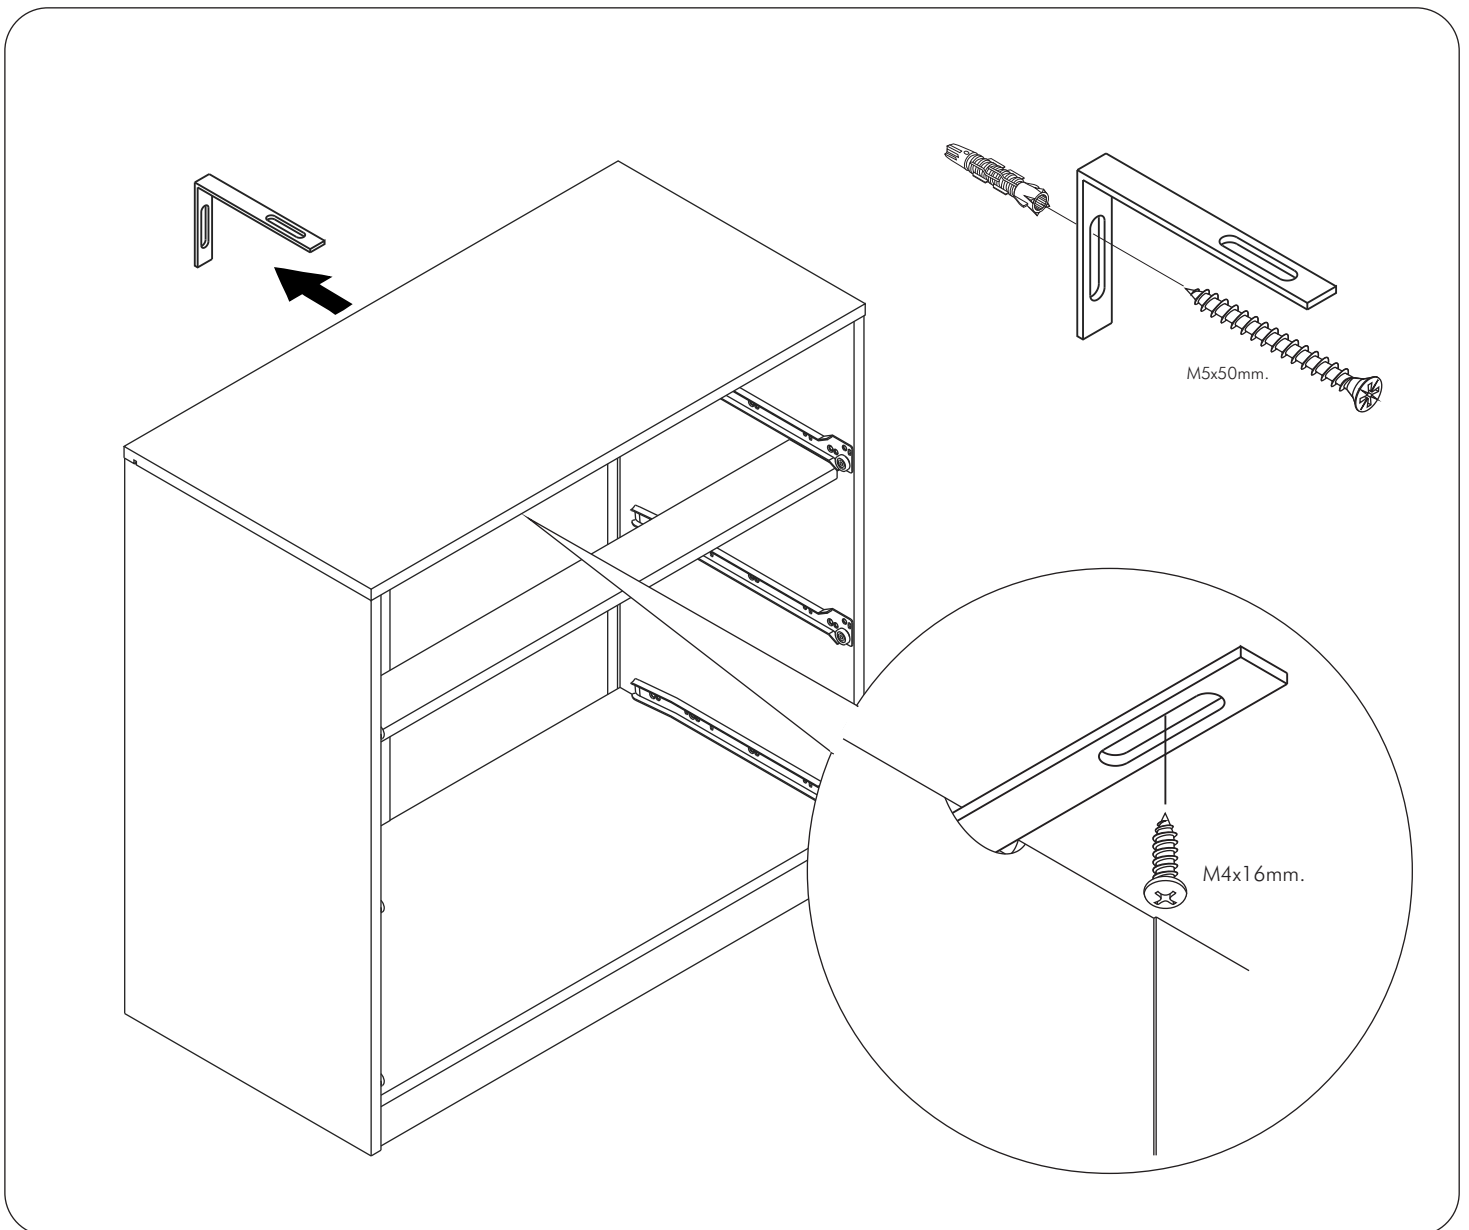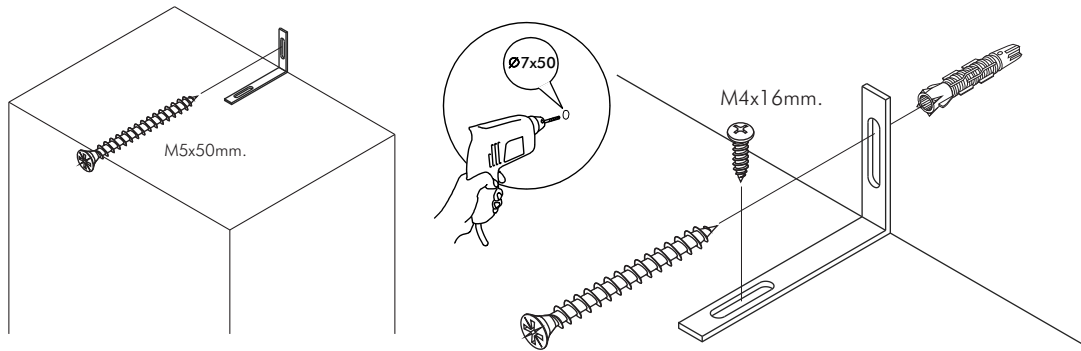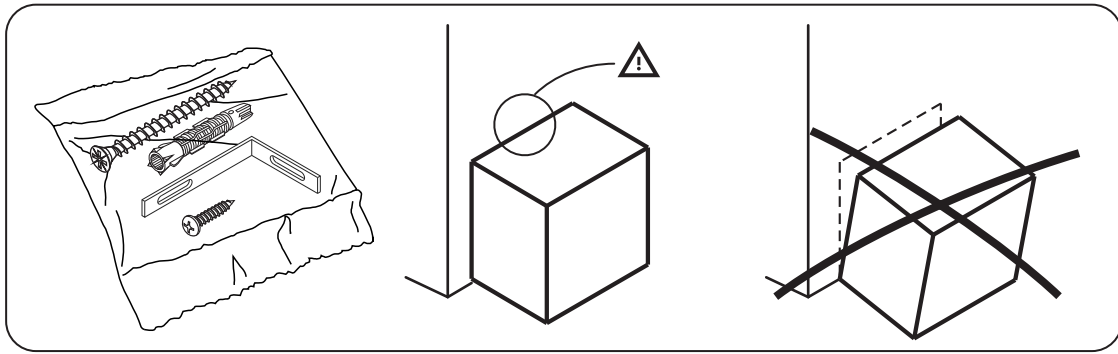


Mounted fall protection fittings

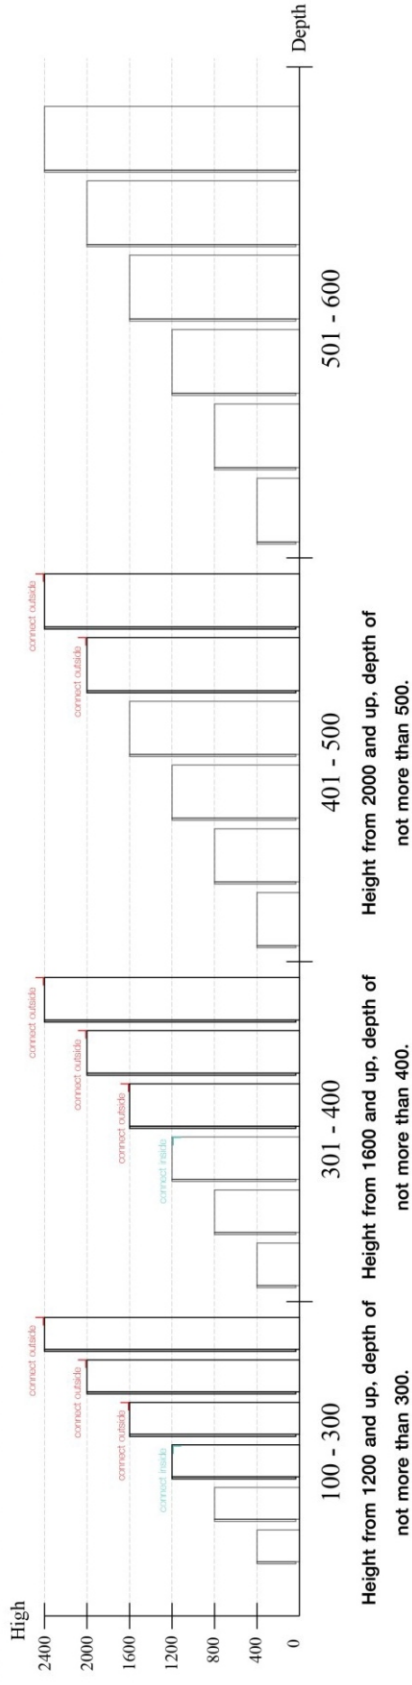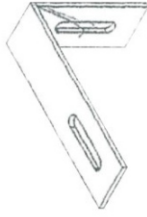

Category : Chest of drawers

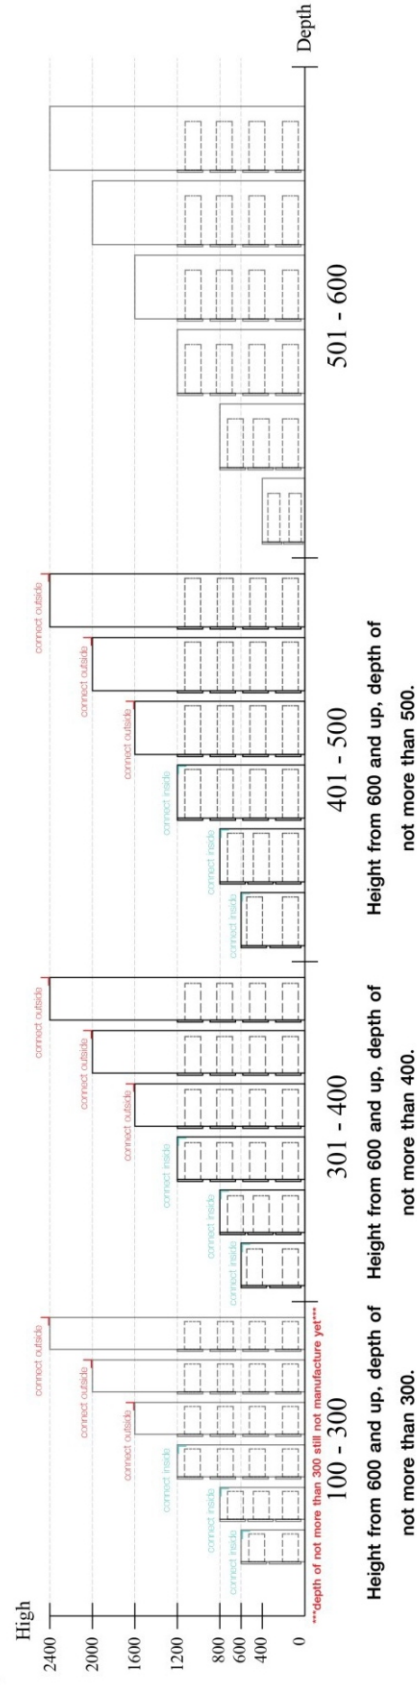


Category : Sliding door cabinet / Open cabinet

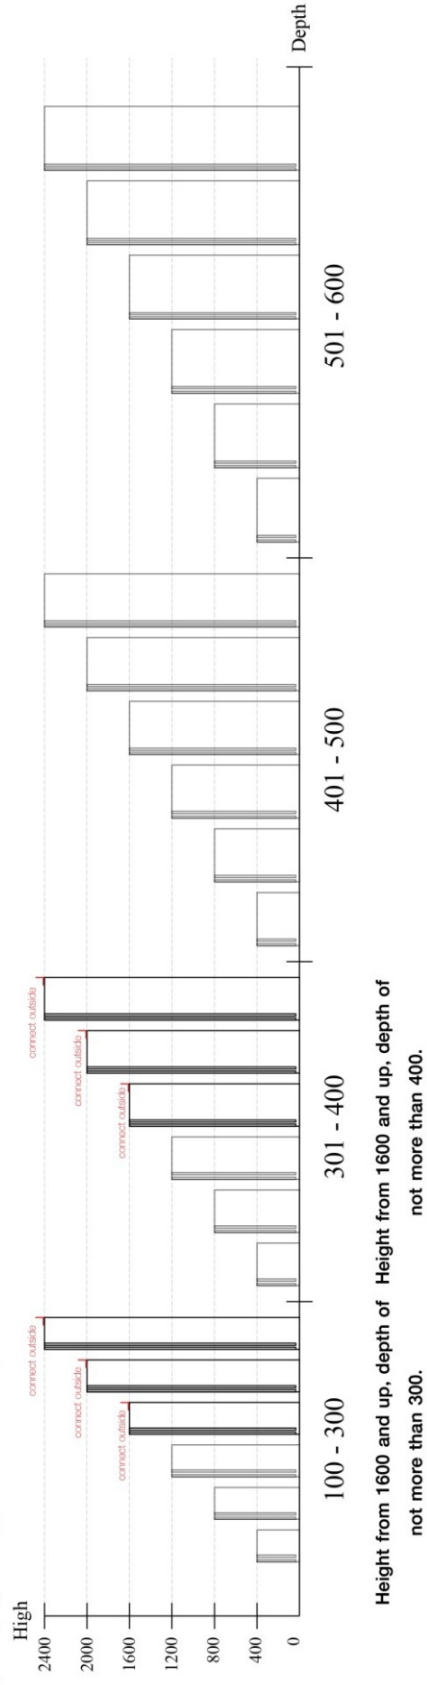

HARDWARE


-BODY SET



x 8




x 8




8x35mm.

x 24




M4x25mm.

x 3



M4x25mm.

x 3




x 4



M4x16mm.

x 16

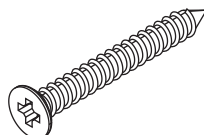


M4x40mm.

x 21




M3.5x13mm.

x 16

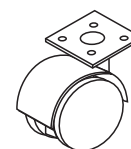

x 1 SET

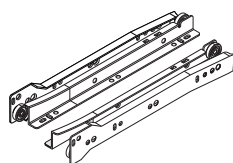

x 1



M6x23mm.

x 2



x 1




M3.5x13mm.

x 14



x 11

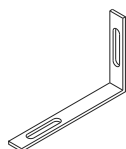


x 1



M4x16mm.

x 1




x 1



M5x50mm.

x 1




x 2


ASSEMBLY

-BODY SET


1.

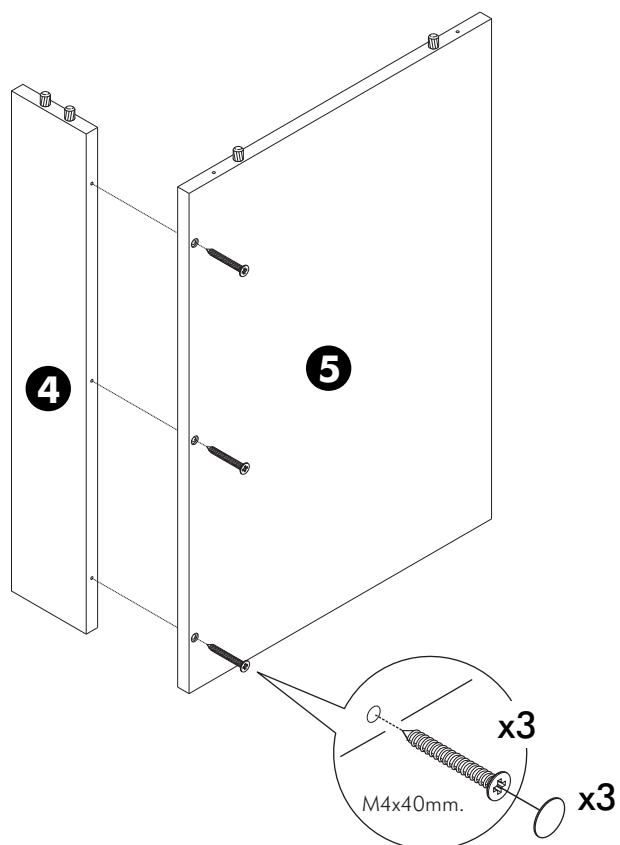


2.

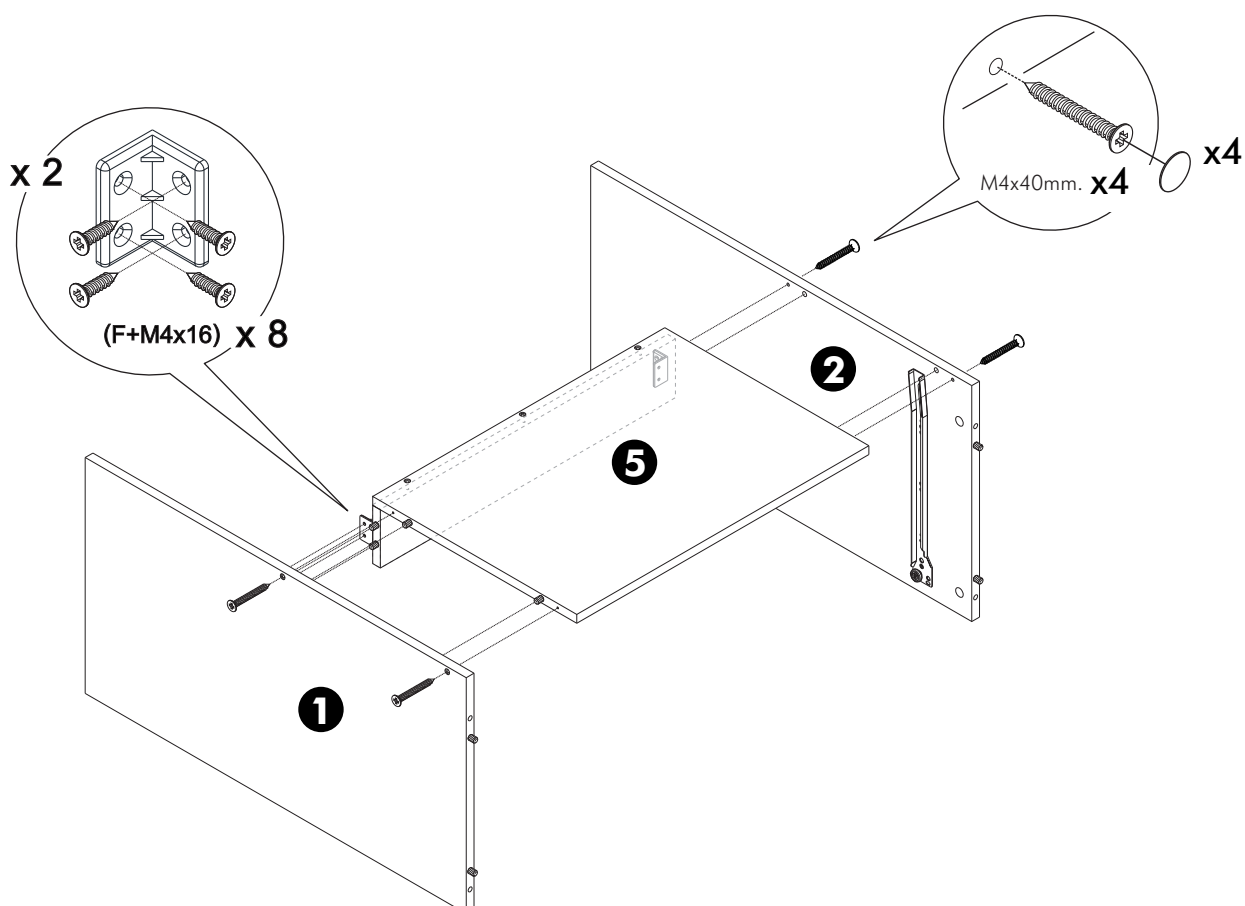


3.

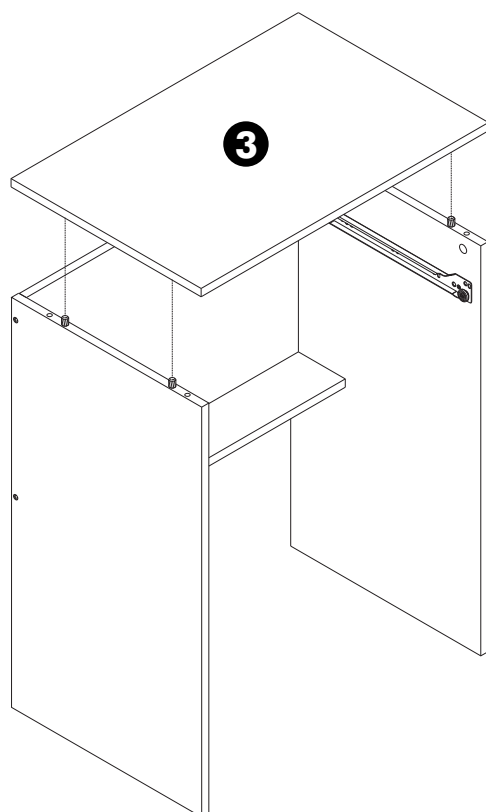


4.

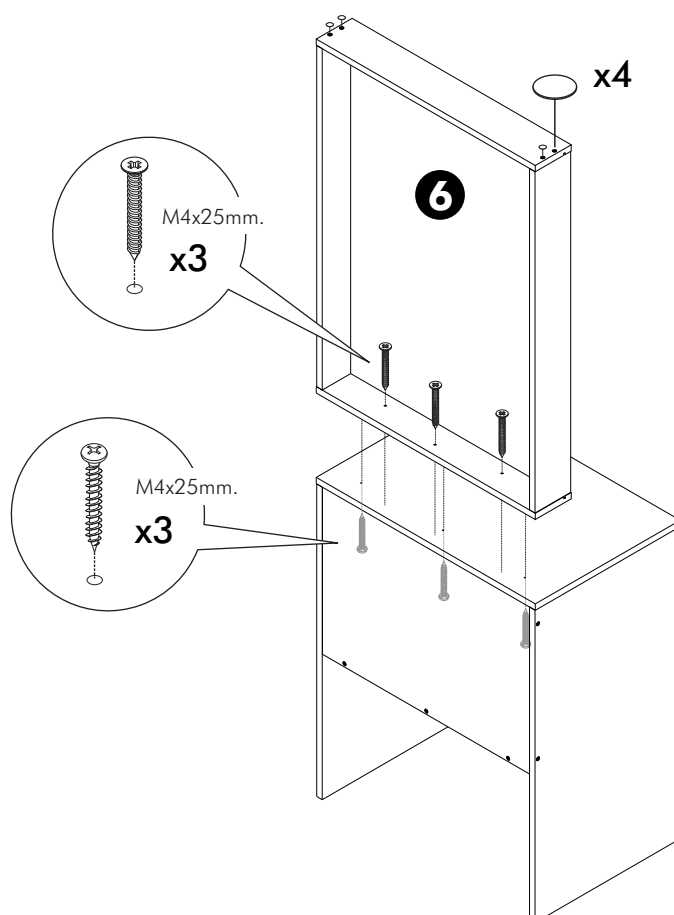


5.

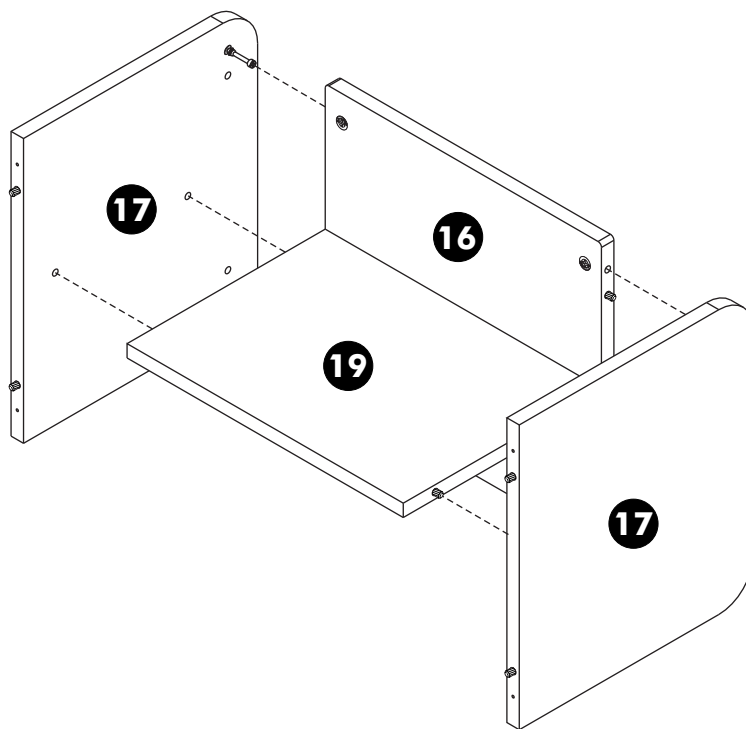


6.

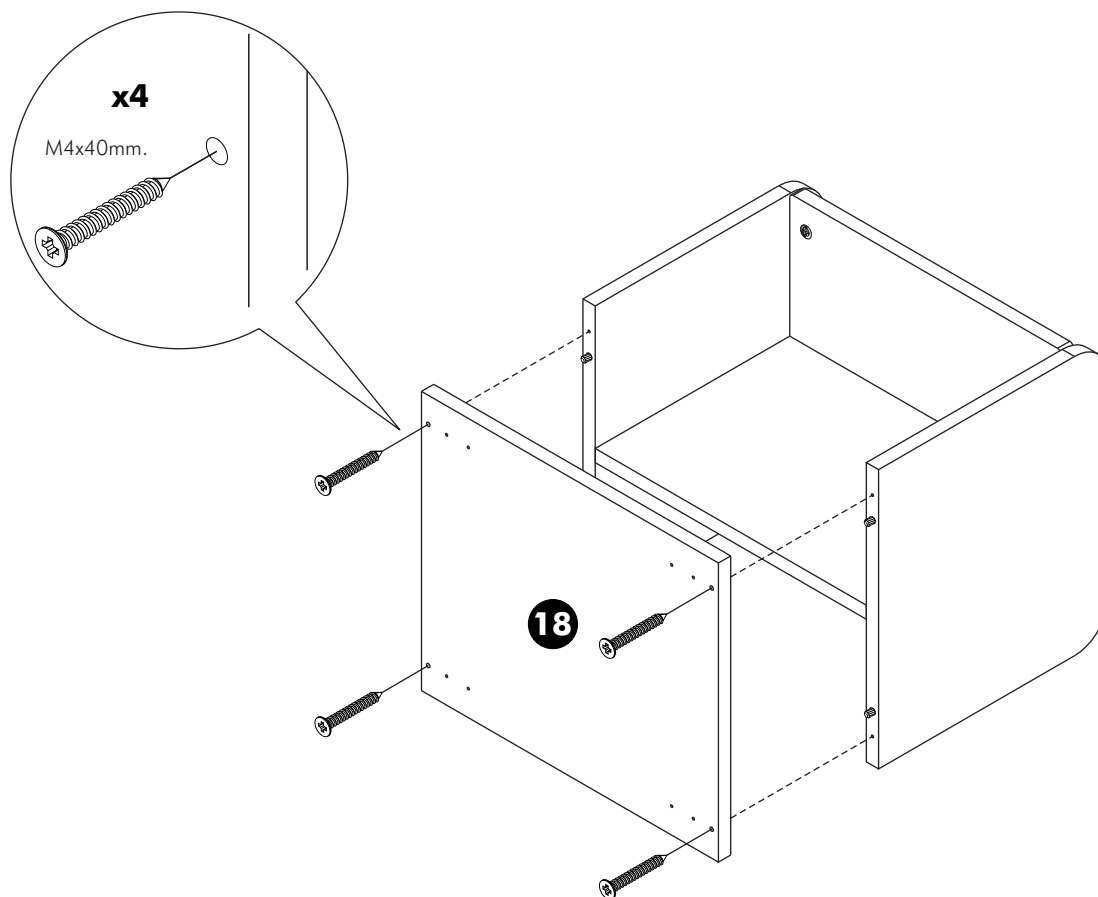


7.

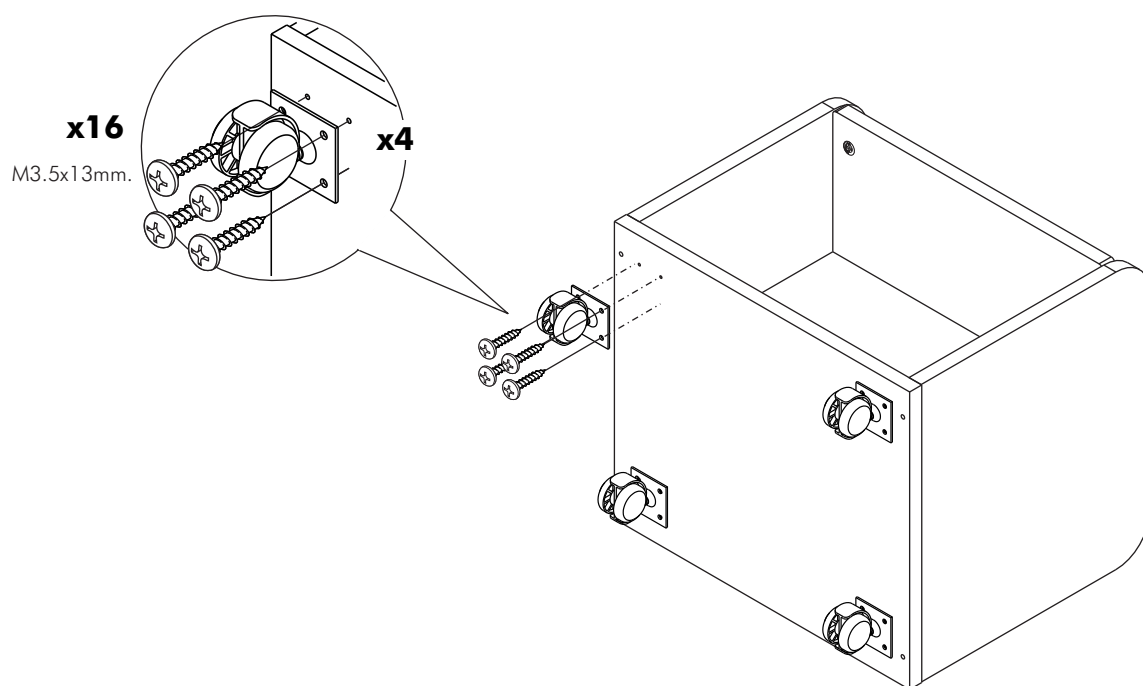

8.

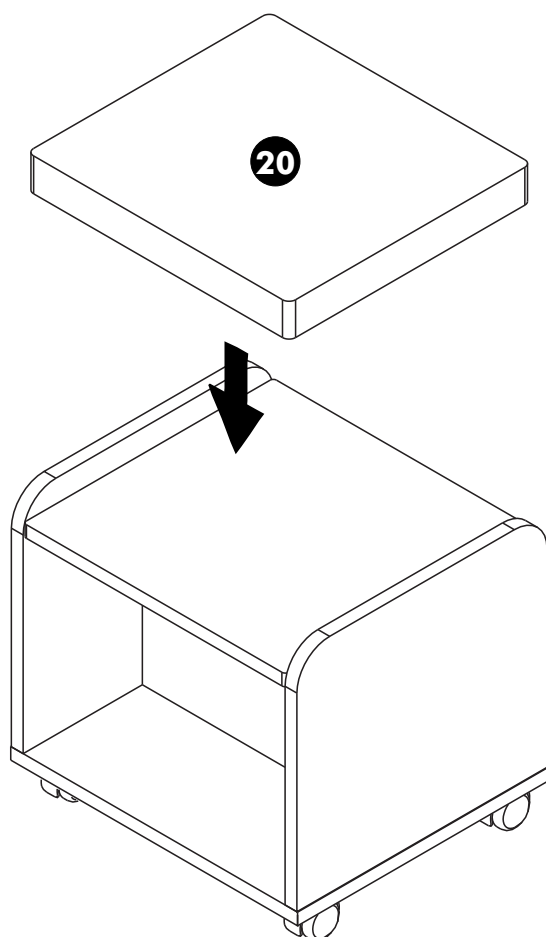

9.

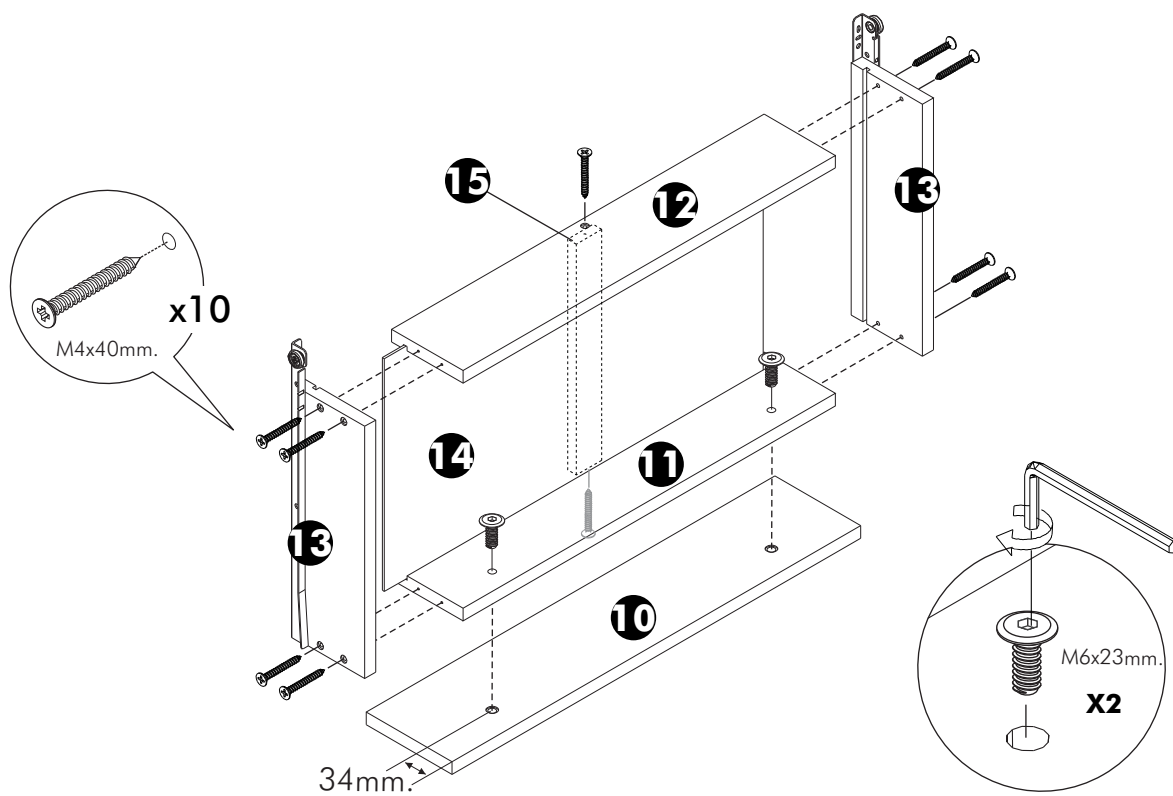

10.

