



CHAMP M02

BED 6 ft.

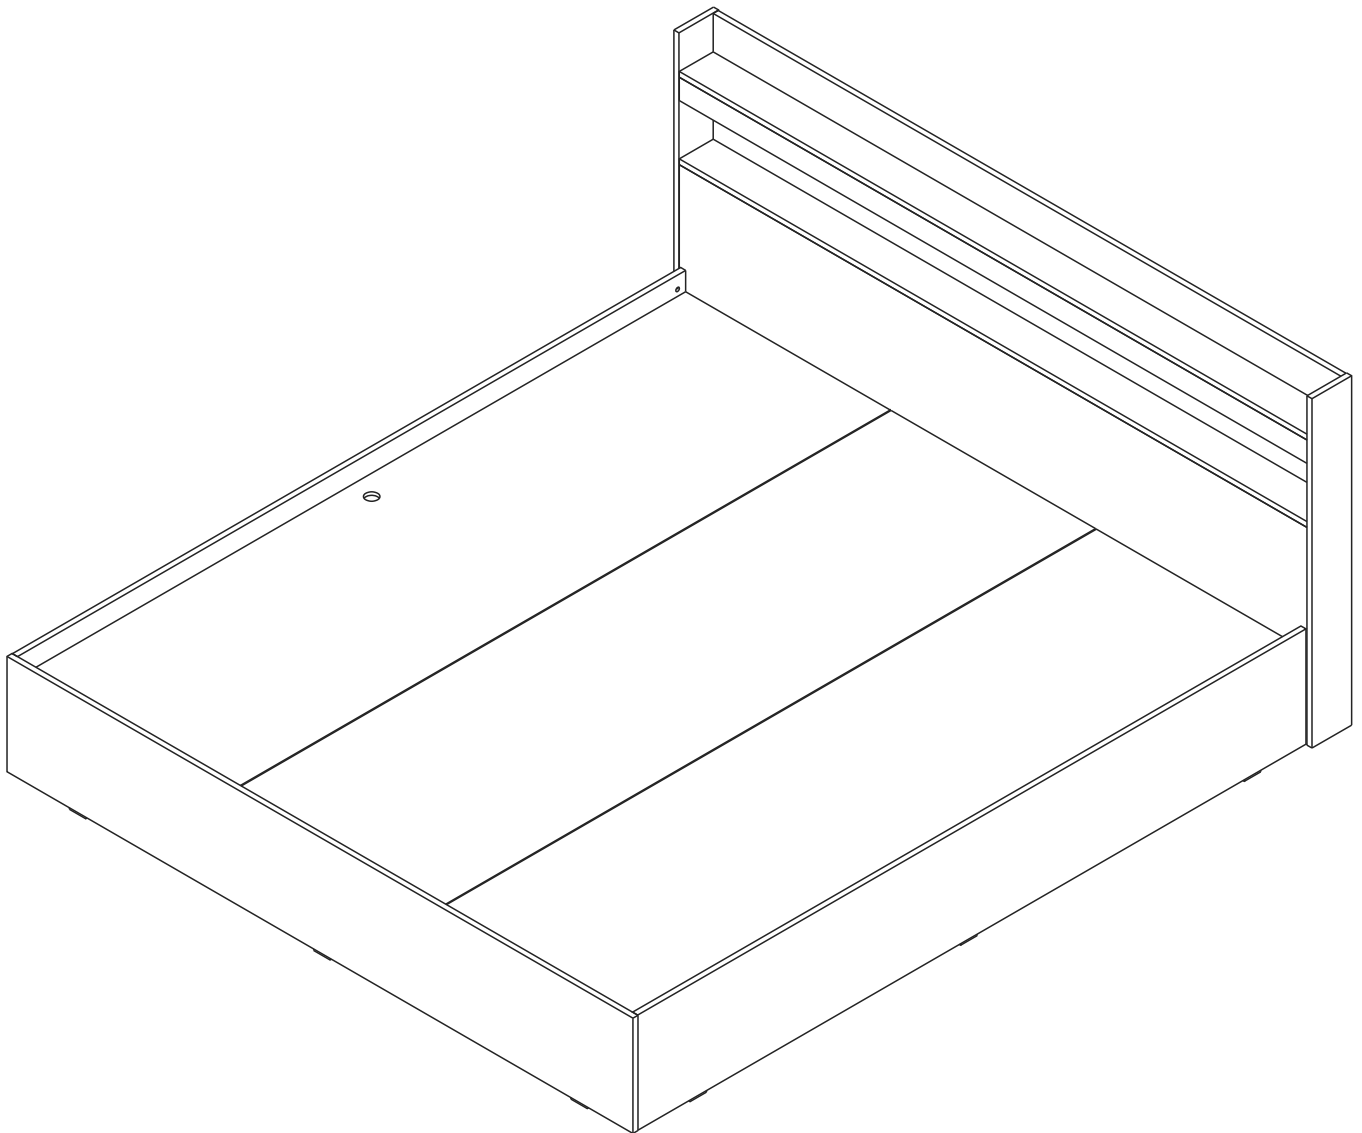


CONNECT SYSTEM


1

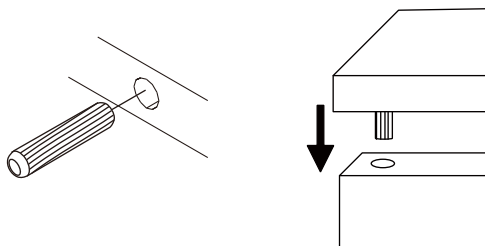








2



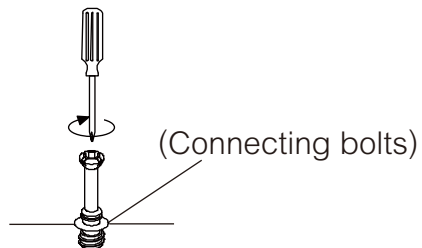


3

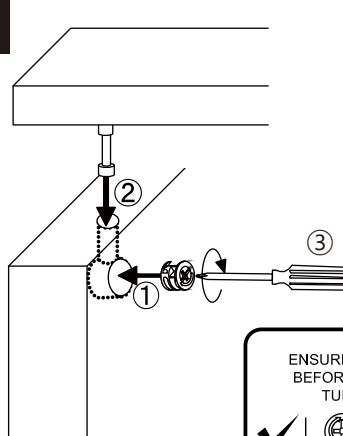


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

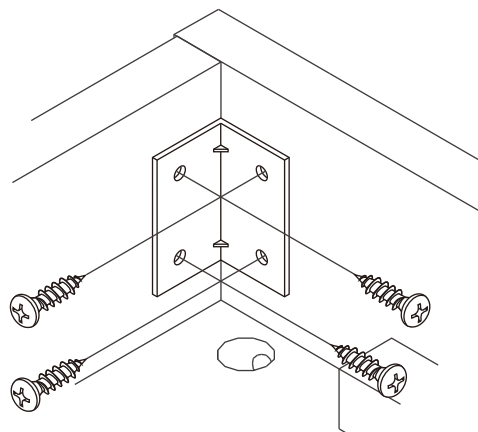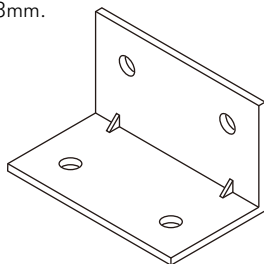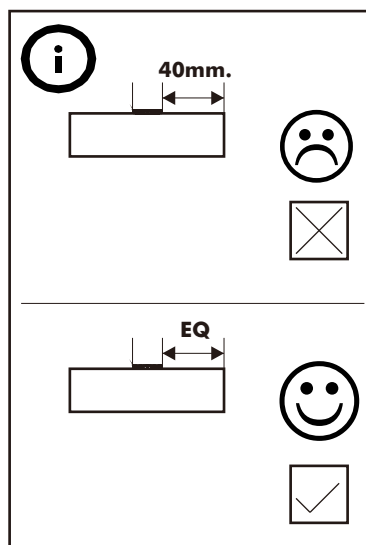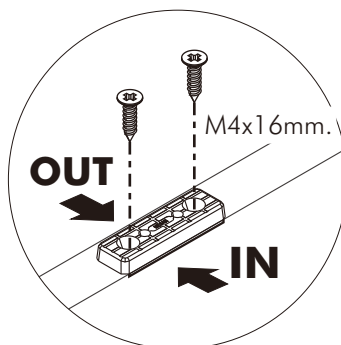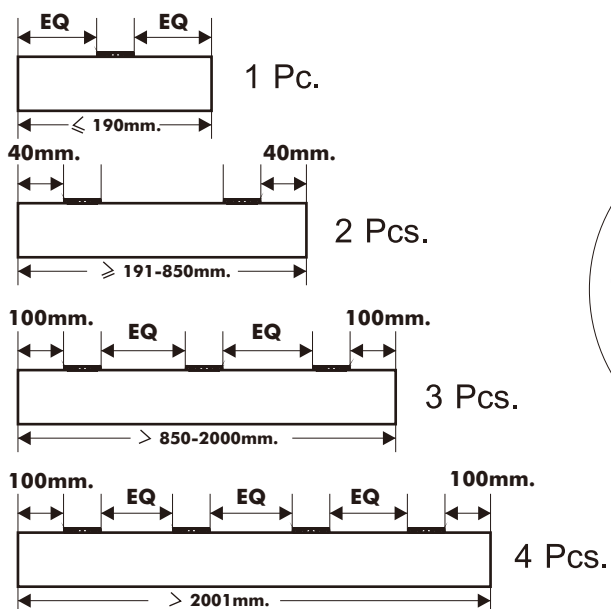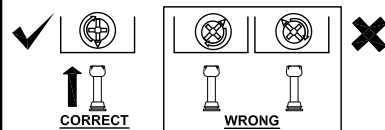

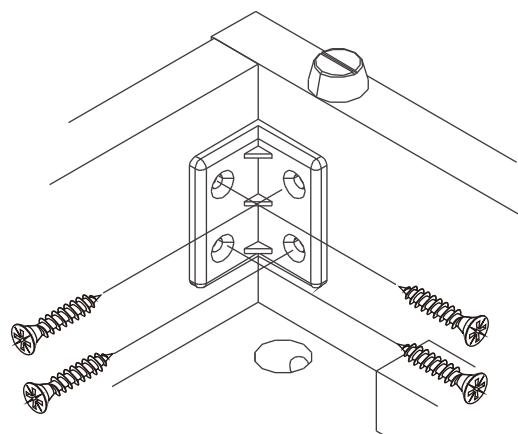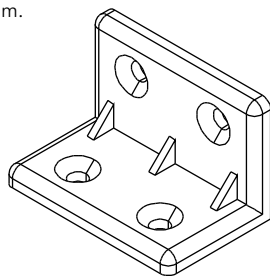

HARDWARE

-BODY SET




x 4




16mm.

x 4




#8x35

x 32




#8x50

x 3



x 27

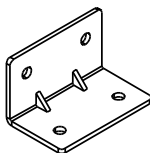


x 8




No.1

x 3

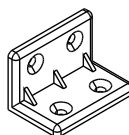

x 24




x 4




M4x30mm.

x 30

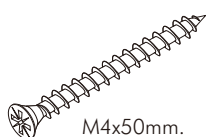


M4x50mm.

x 8



M4x30mm.

x 24

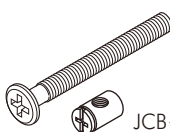

JCB+M6x60

x 4



M4x13mm.

x 32




M4x16mm.

x 3



M4x16mm.

x 166

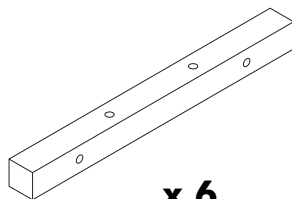


x 6


ASSEMBLY

-BODY SET


1.

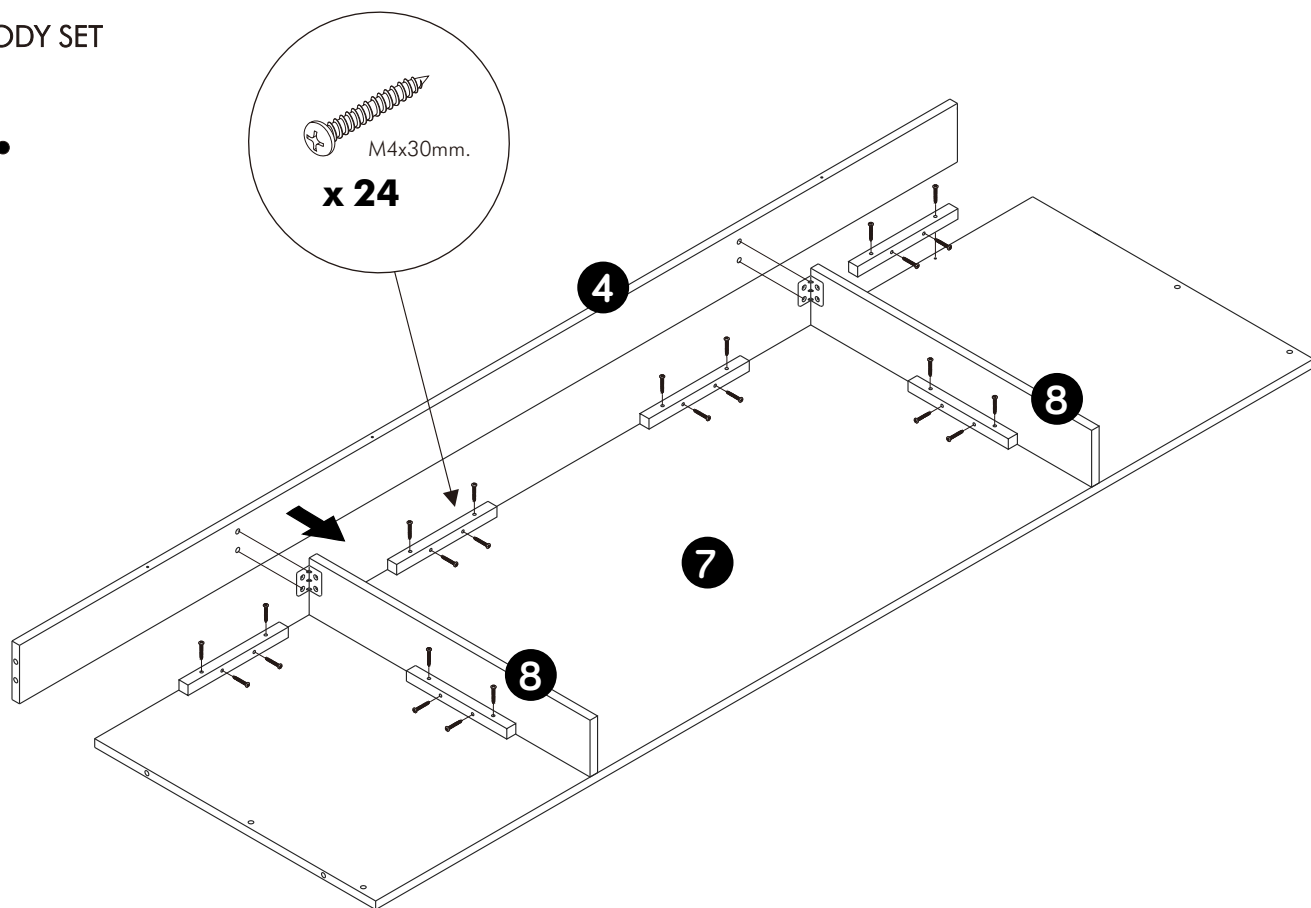


2.

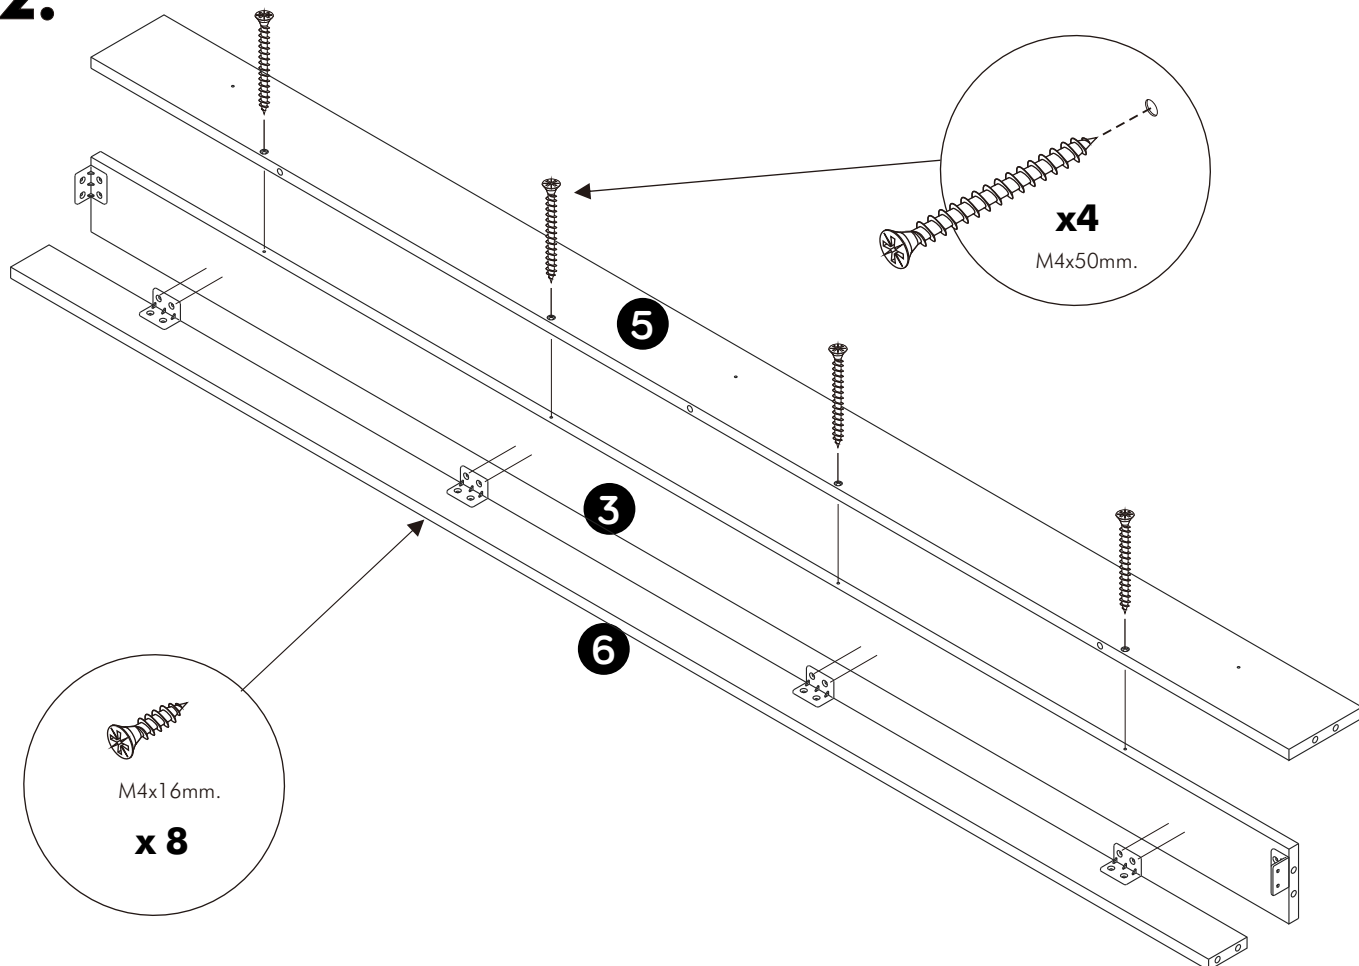


3.

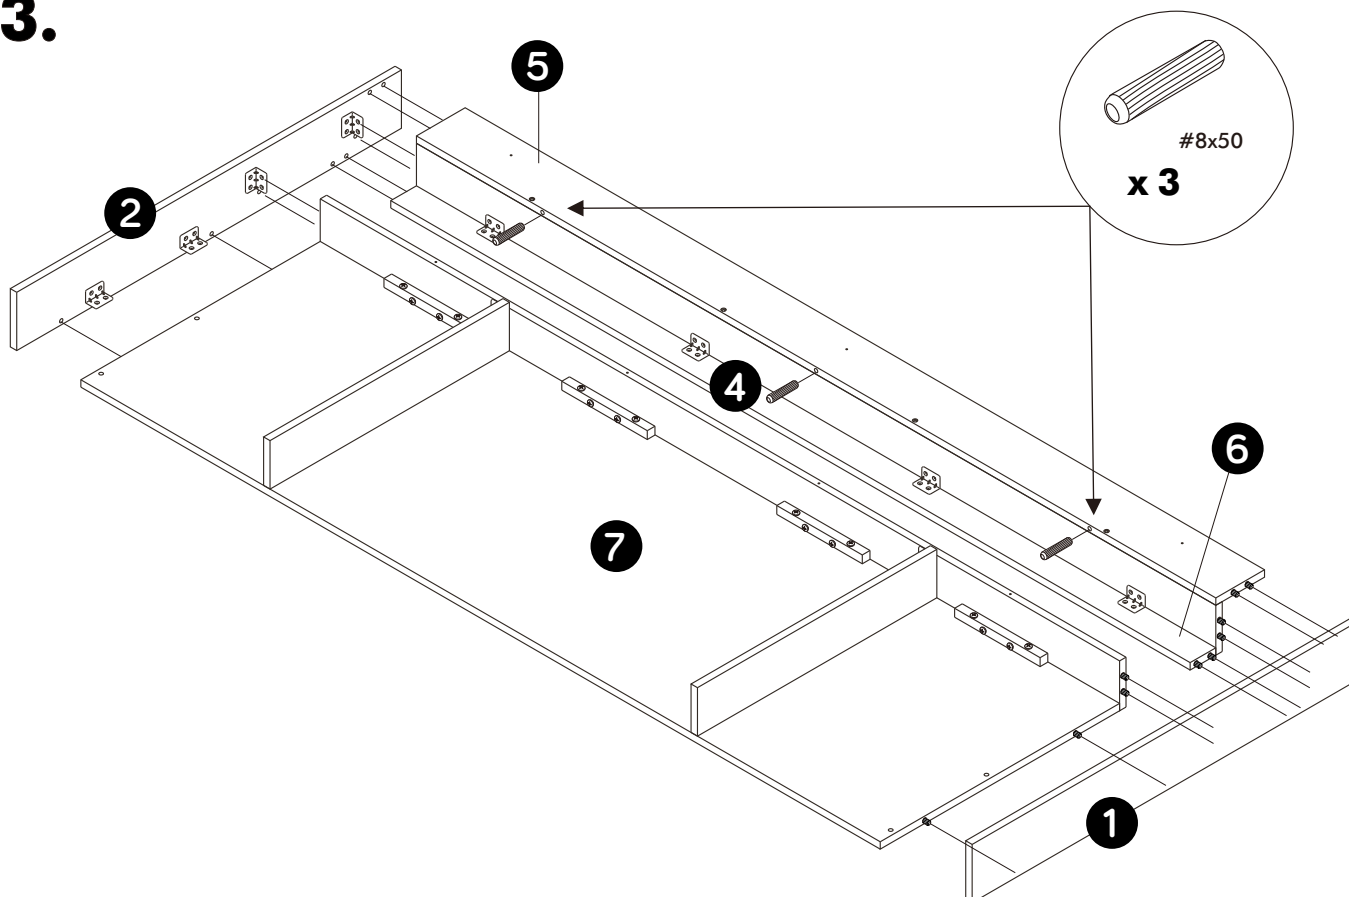


4.

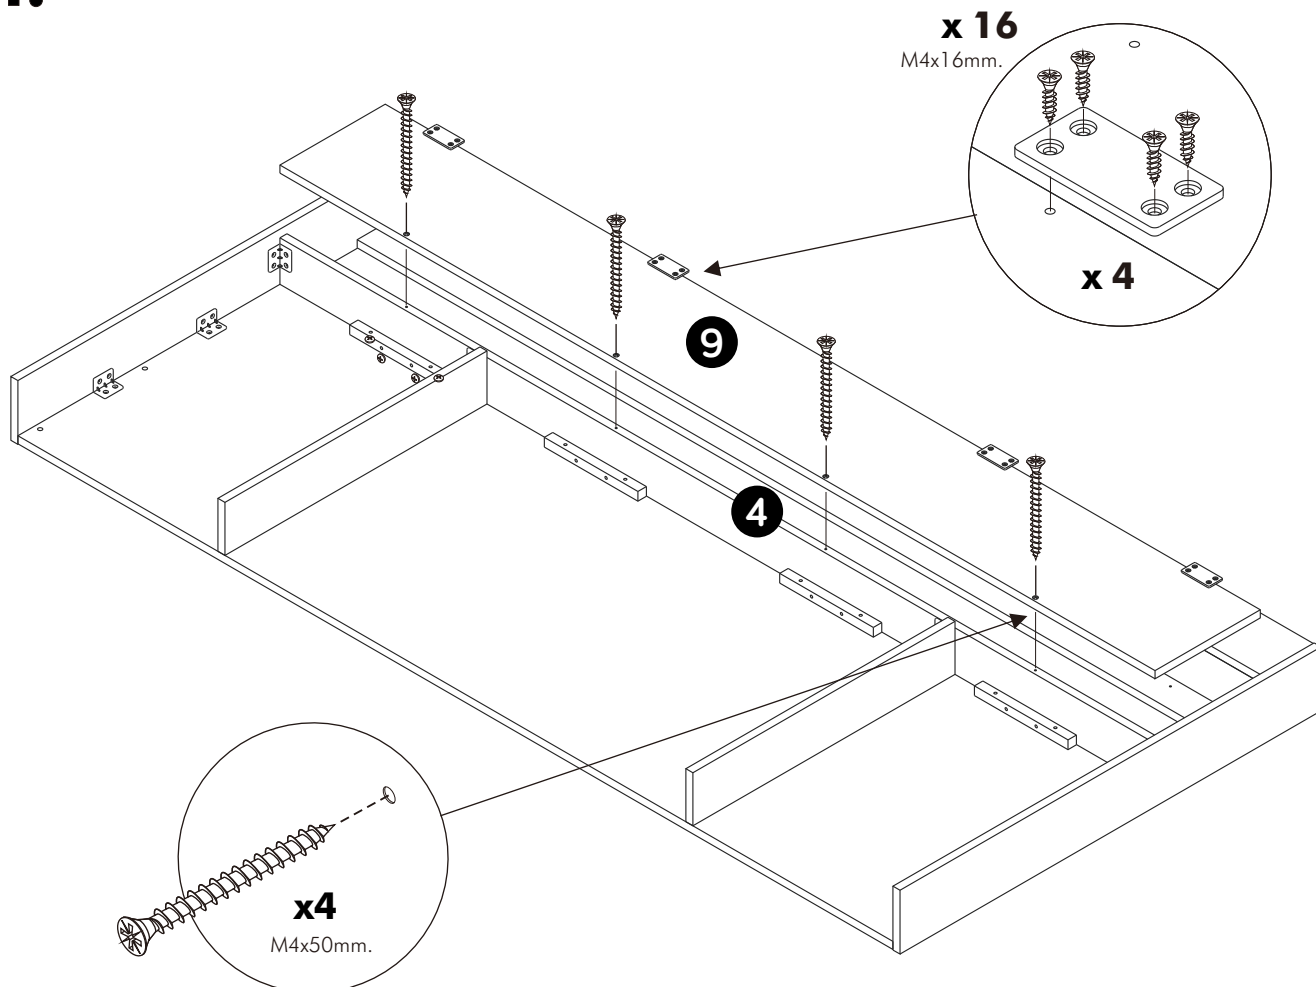


5.

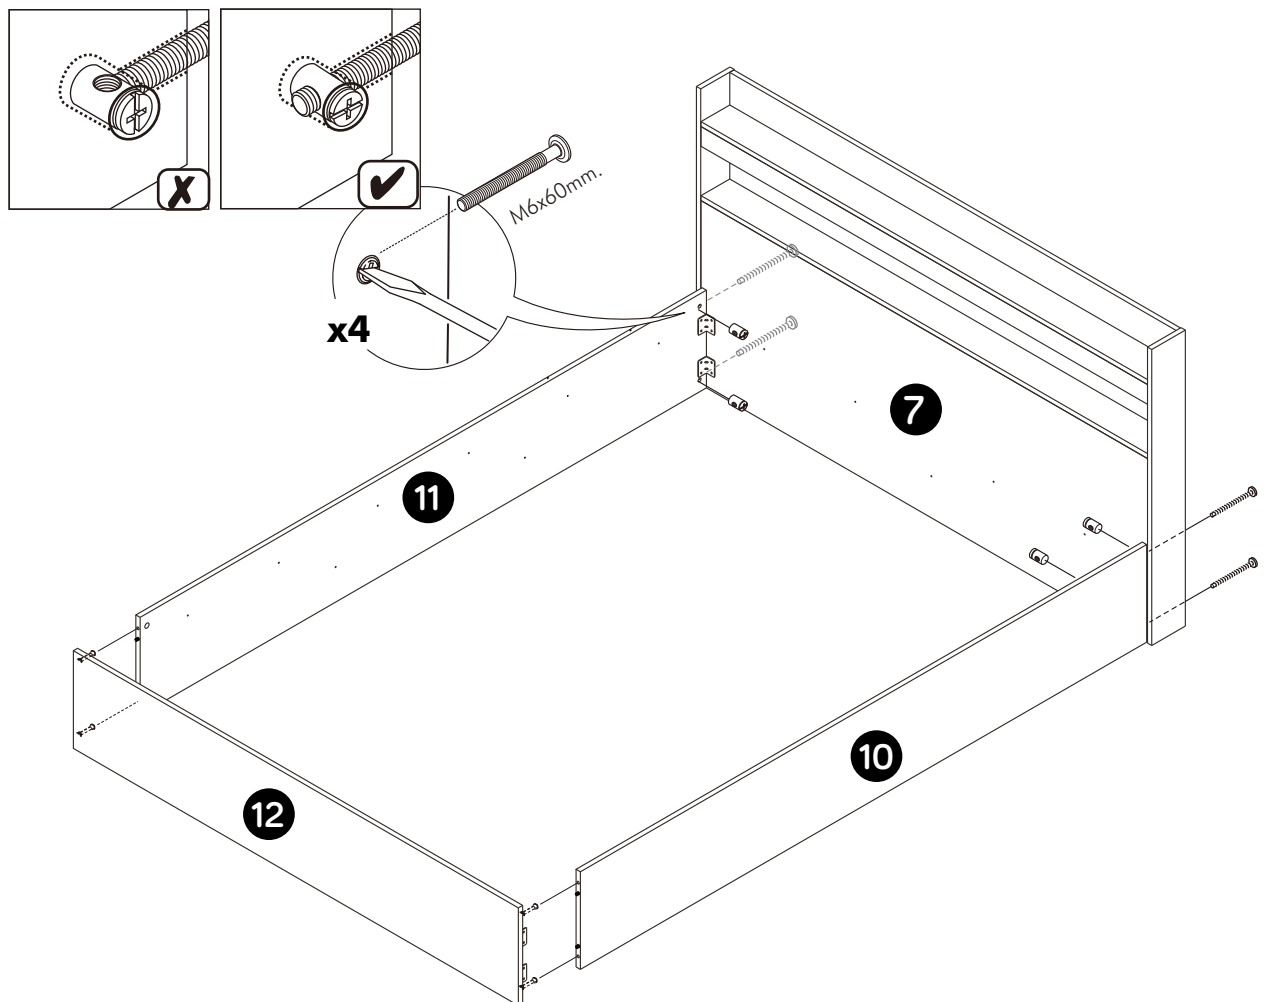


6.

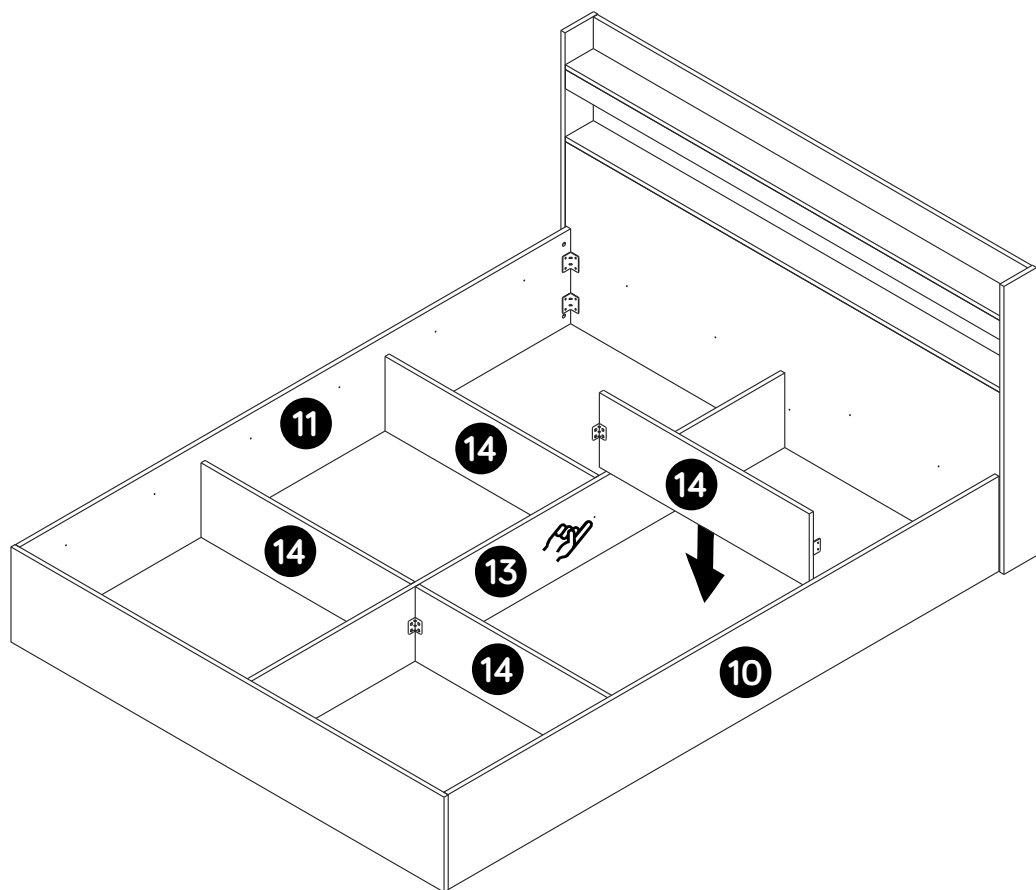

7.

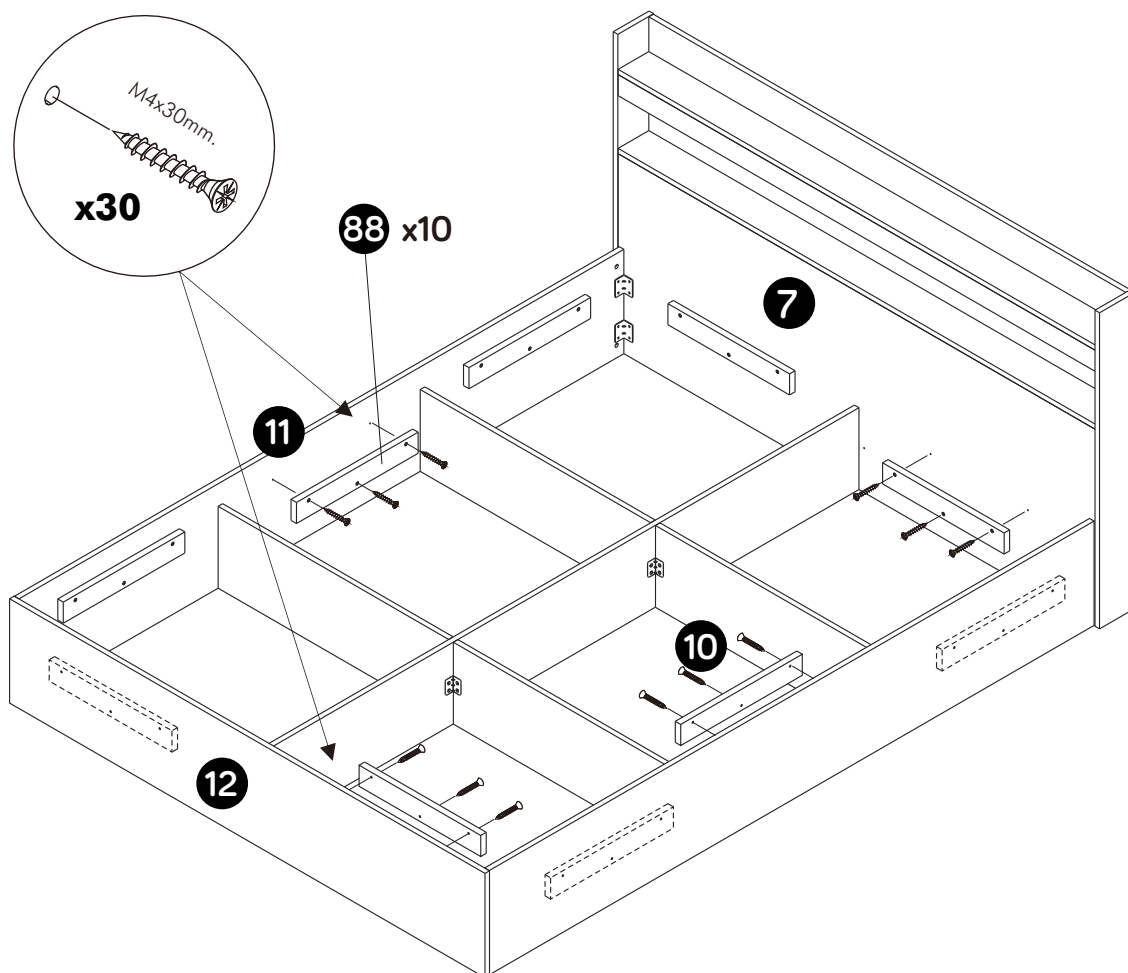

8.

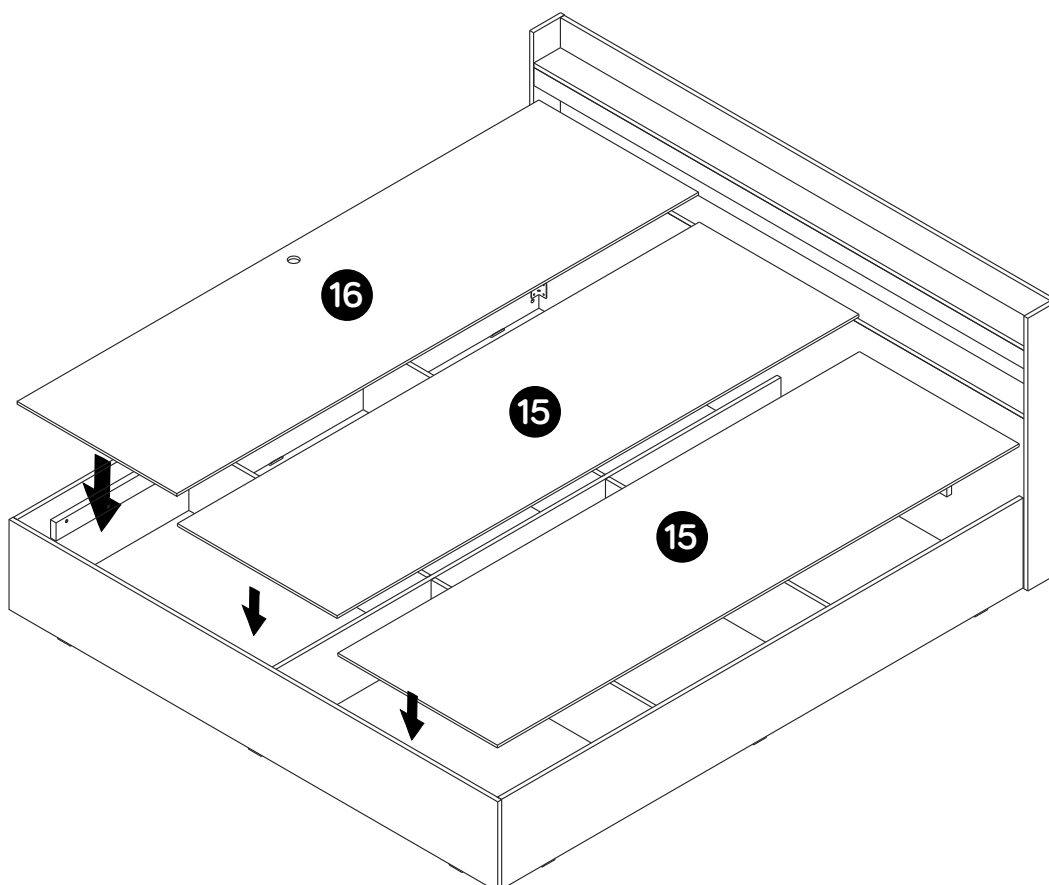

9.

