


# MAZZIMO-P

Dressing table

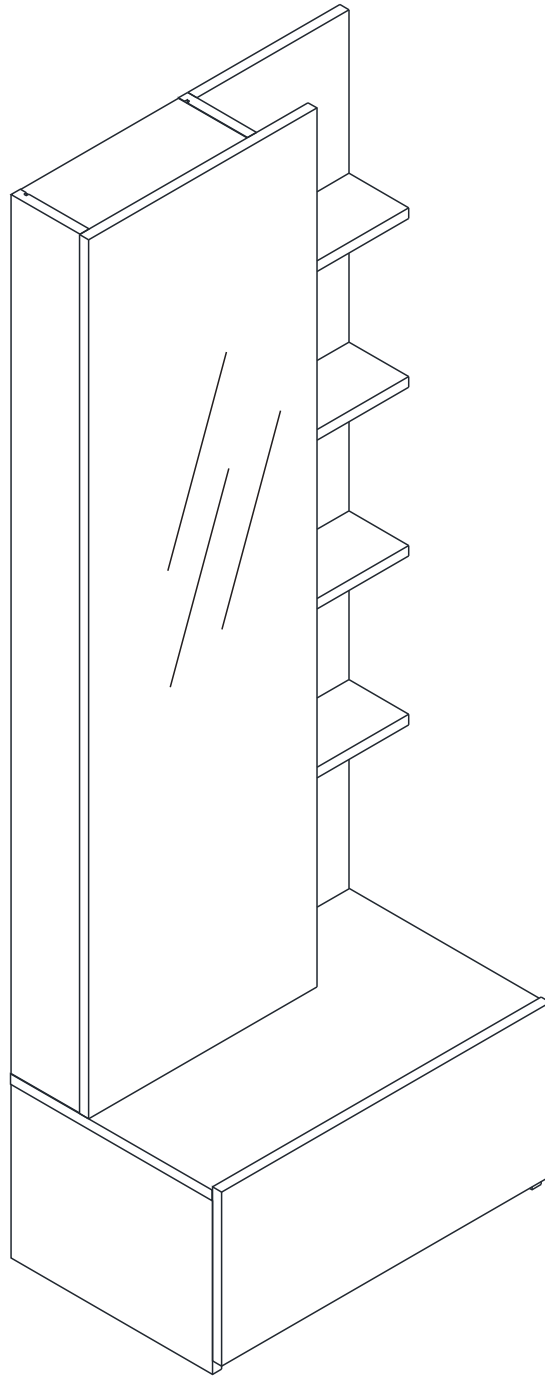

# CONNECT SYSTEM

**1**

**2**

(Connecting bolts)

**3**

**WHEN FITTING CAMS**  
 ENSURE STARTING POSITION IS CORRECT  
 BEFORE YOU INSERT CONNECTING BOLT  
 TURN CLOCKWISE UNTIL SECURE

✓

↑  
CORRECT

✗

WRONG

M4x16mm.

**OUT**      **IN**

**i**

40mm.

☹

✗

EQ

☺

✓

M3.5x13mm.

**1**



Use these holes

**2**



Use these holes






M4x16mm.

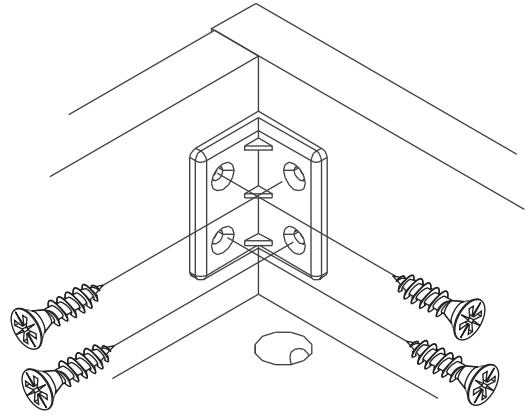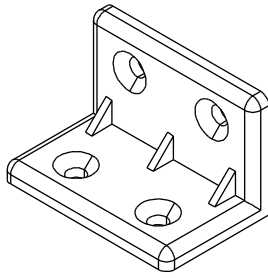

M3.5x20mm.

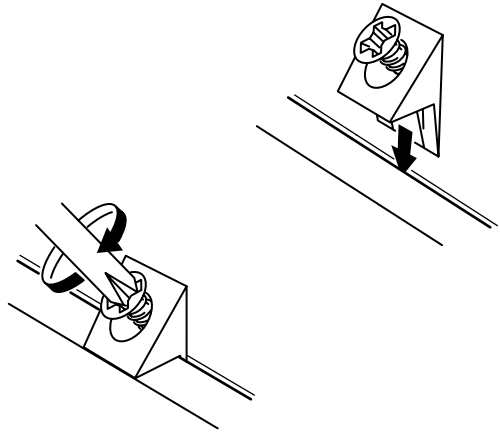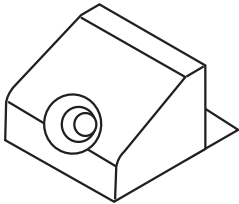

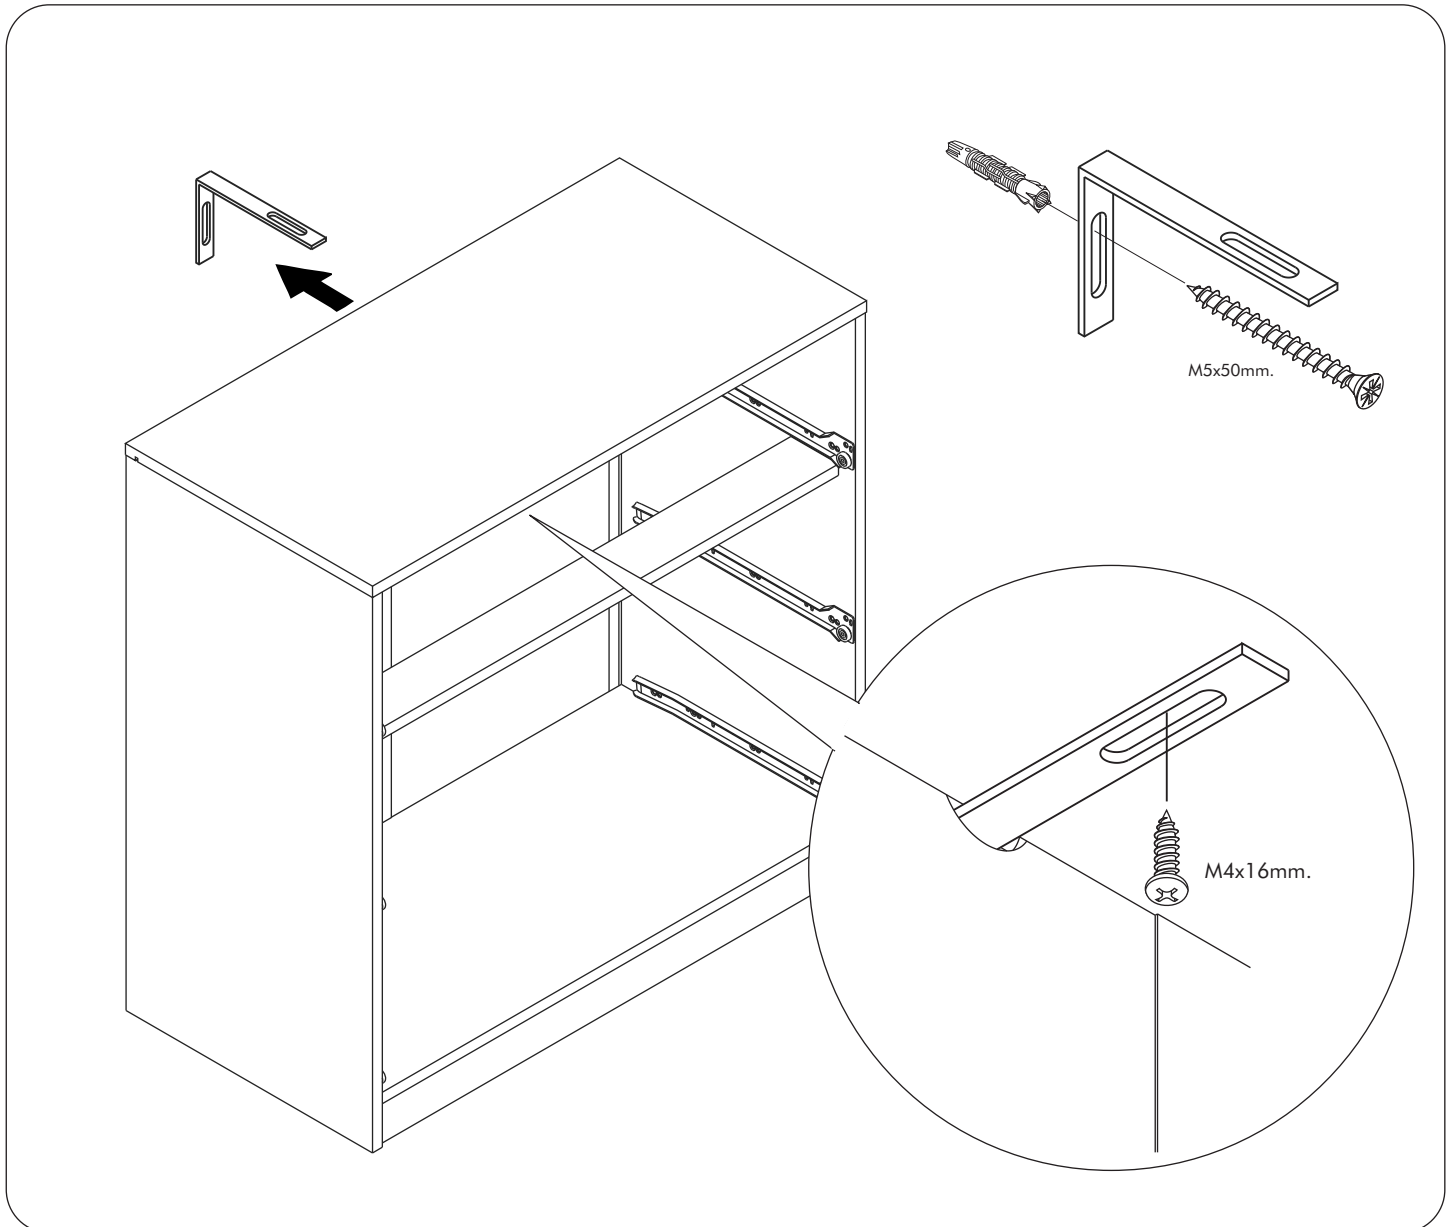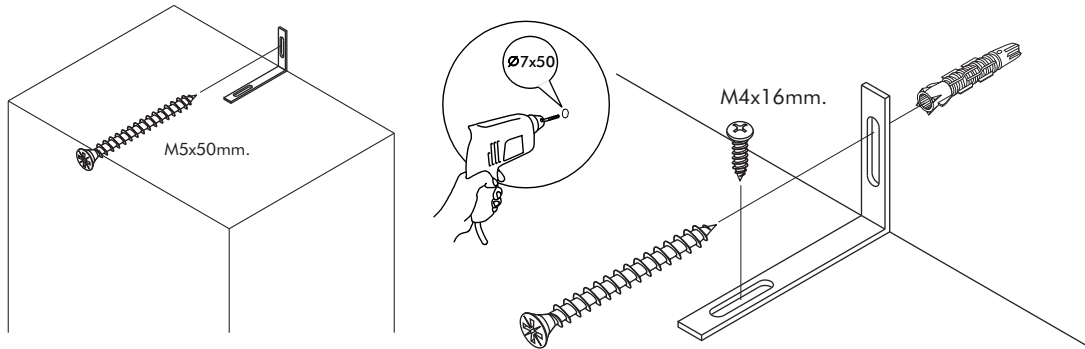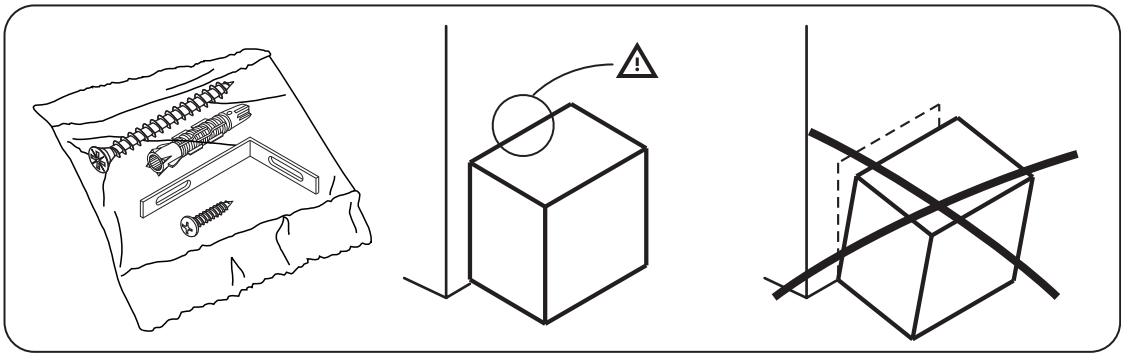


# HARDWARE

## -BODY SET




**x 32**

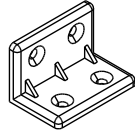


**x 25**



**x 8**

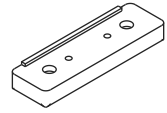

**x 8**

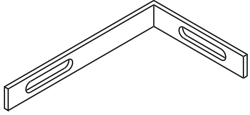


**x 1**




**x 8**




**x 116**

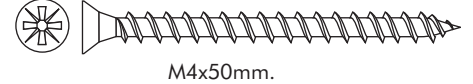


**x 23**

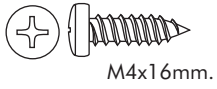

**x 4**

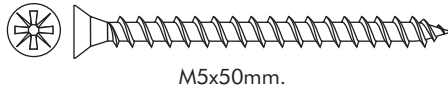


**x 1**

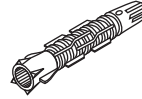


**x 1**


## -DRAWER SET

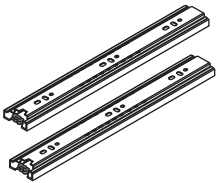

**x 1**

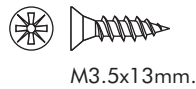





**x 12**

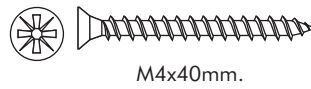

**x 10**




**x 4**

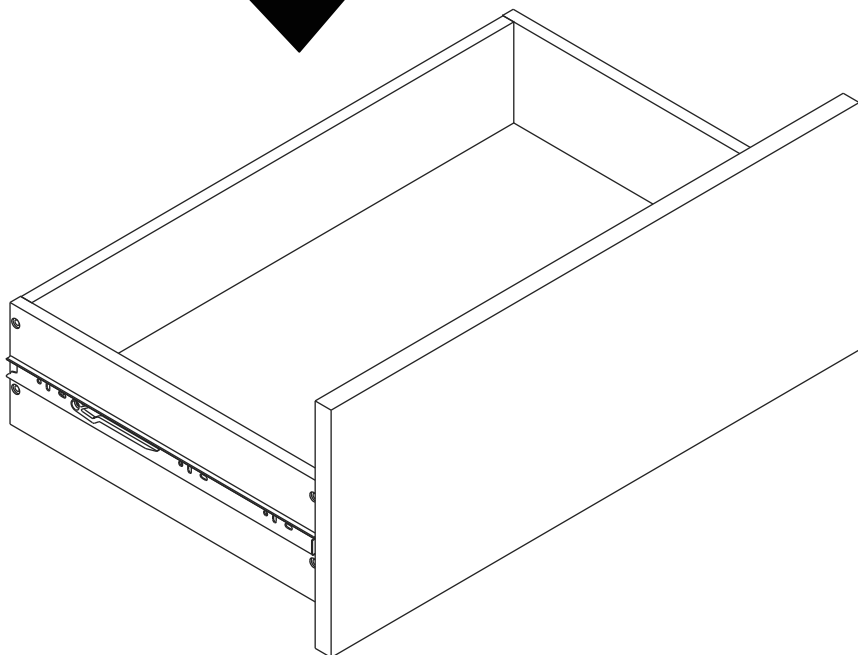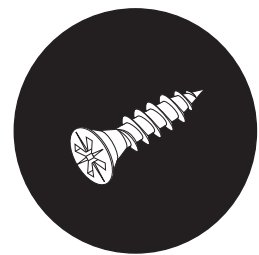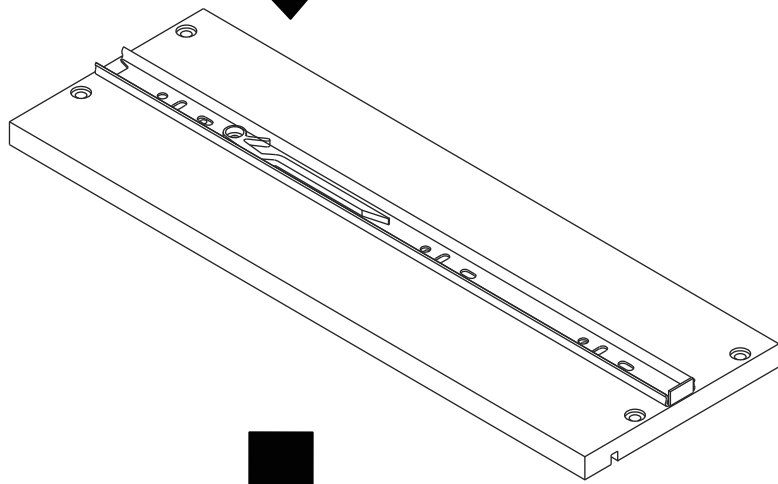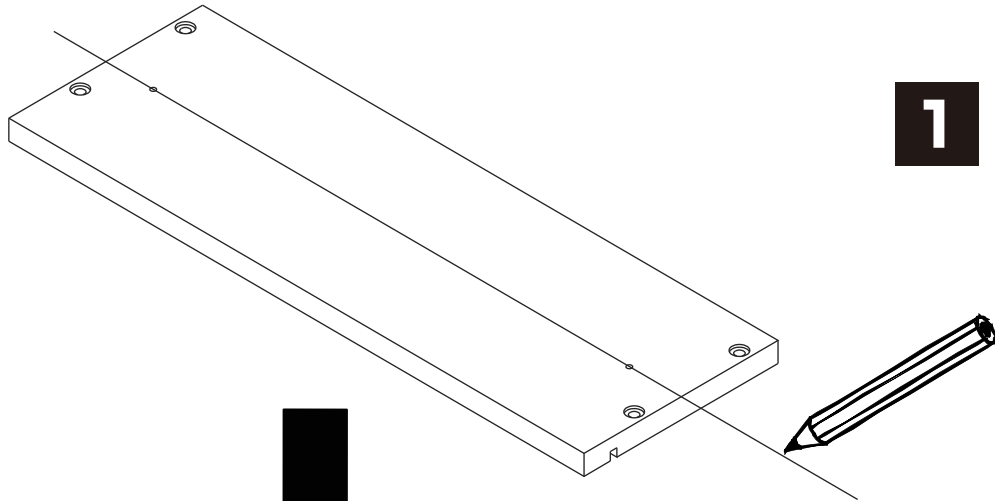


# ASSEMBLY

-BODY SET


1.

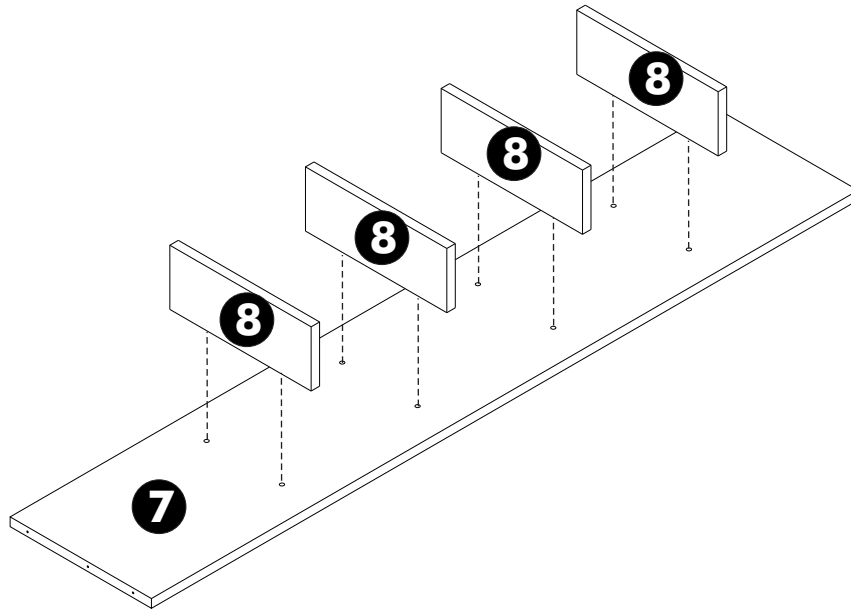


2.

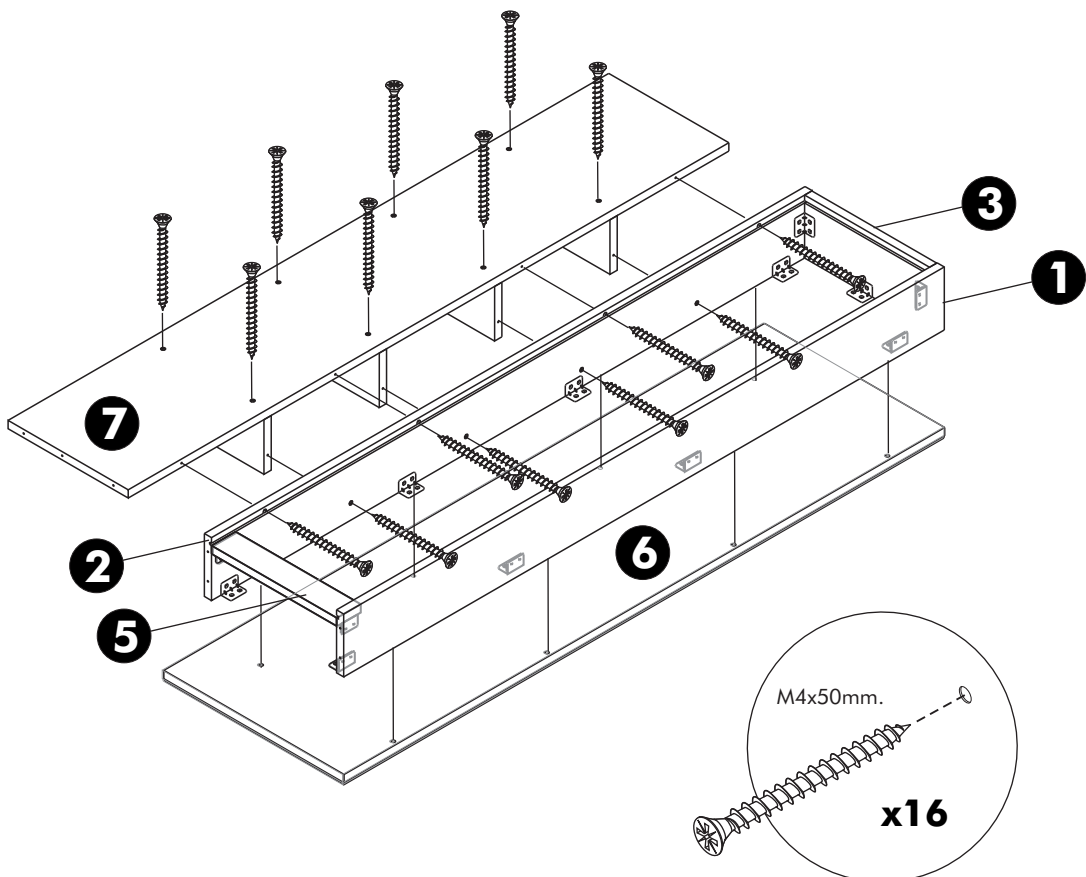


**3.**

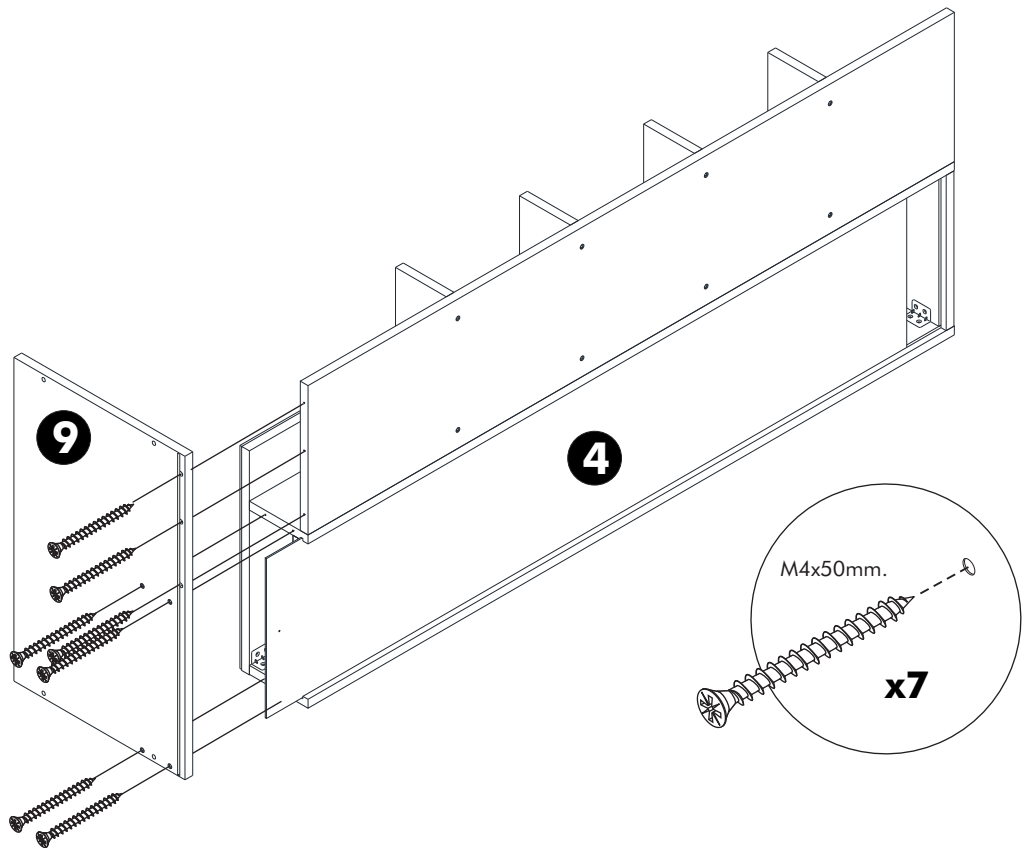


**4.**

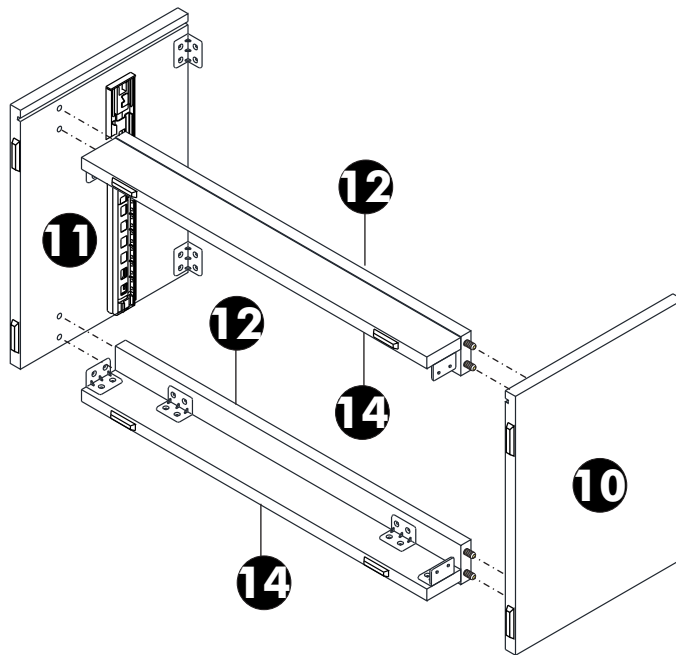

**5.**

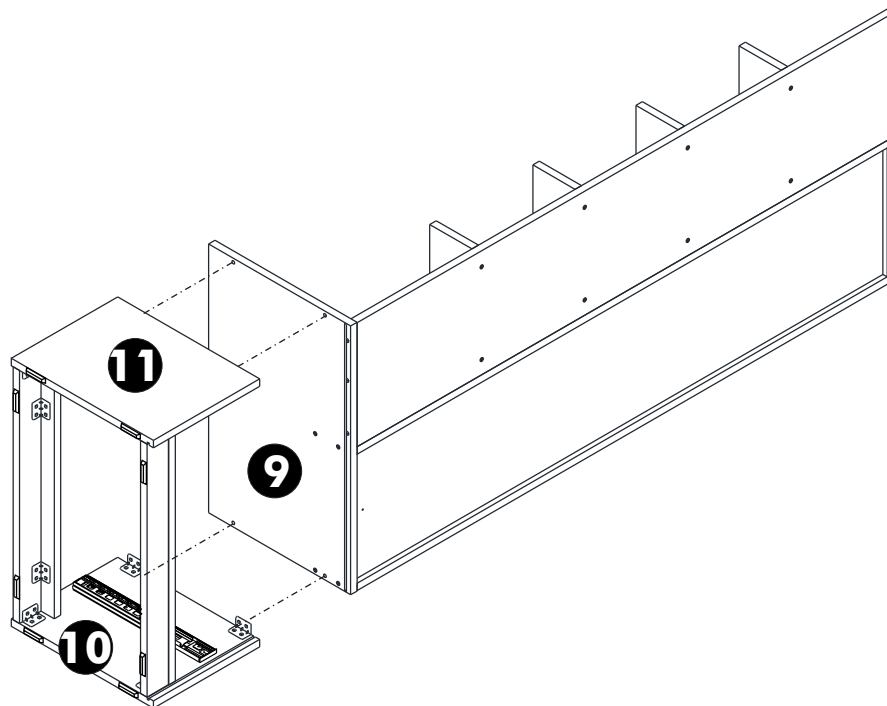


**6.**

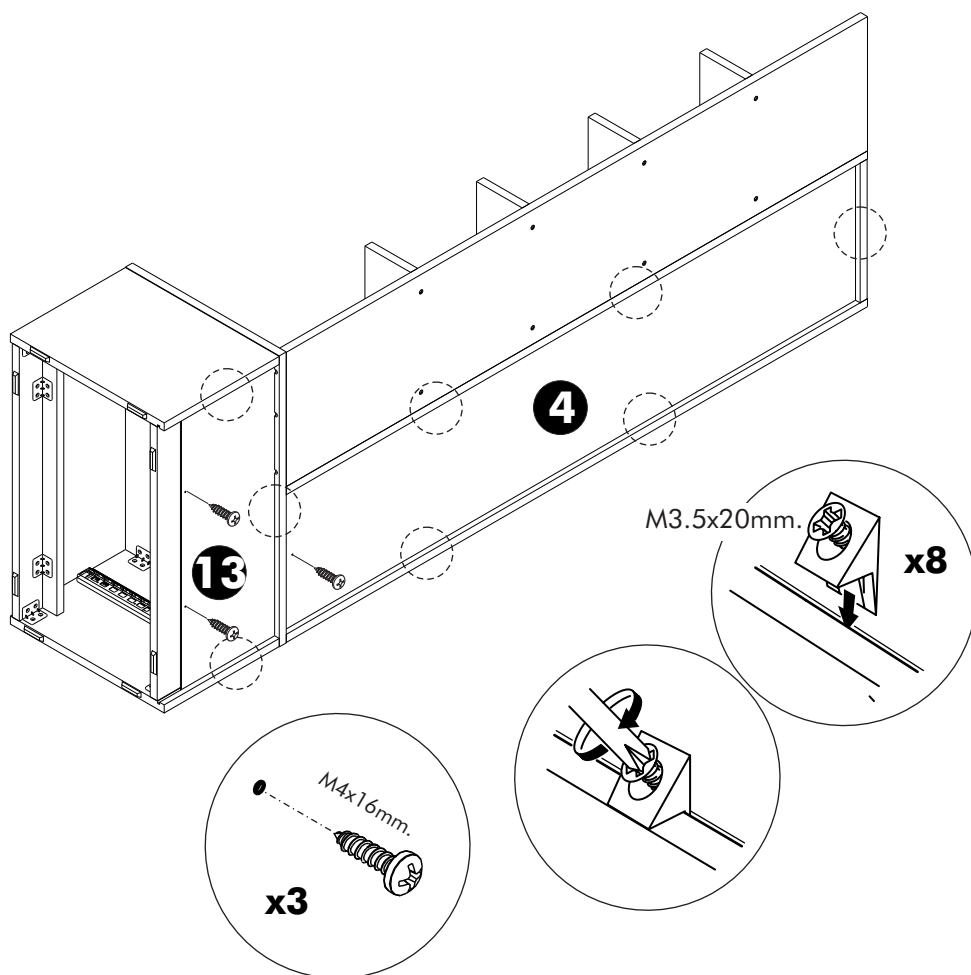


# 7. ASSEMBLY

-DRAWER SET

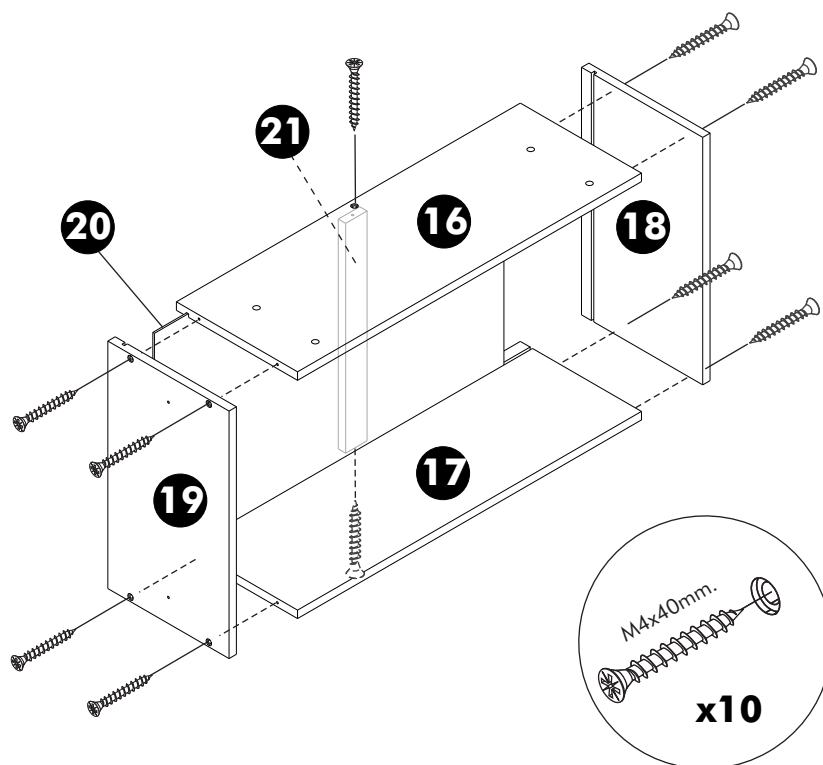

# 8.

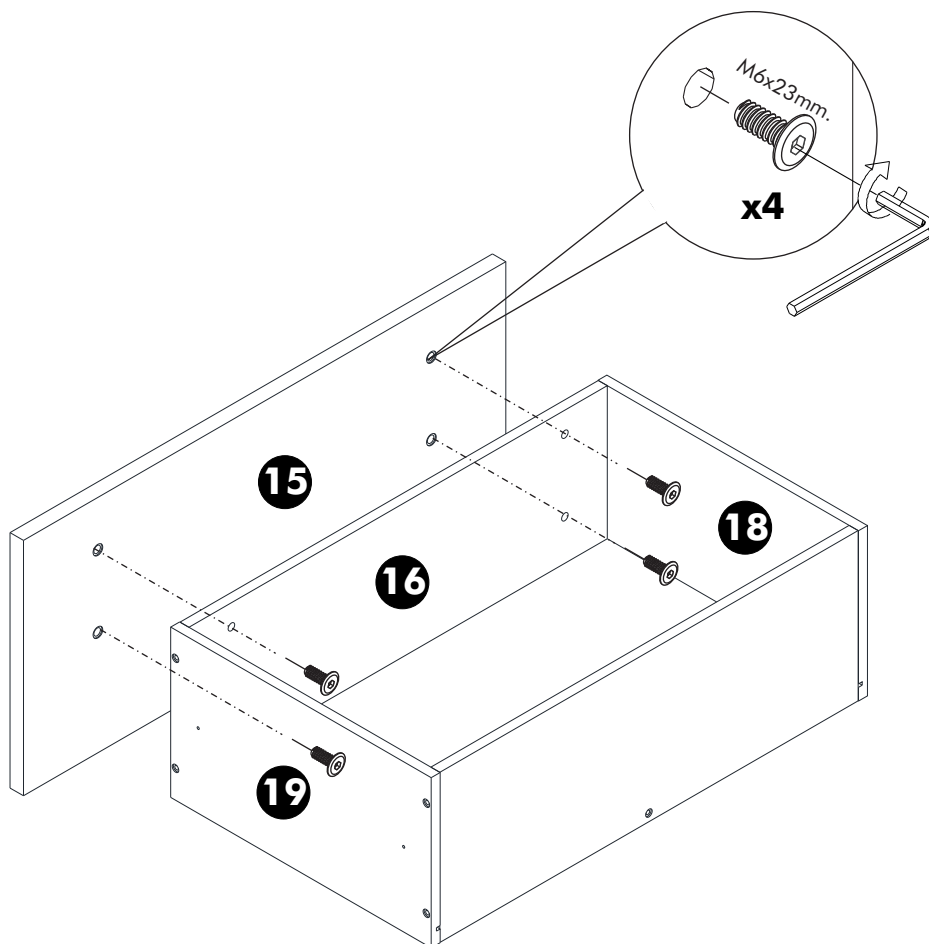

9.

