


CASABLANCA

BED 5 ft.

BED 6 ft.

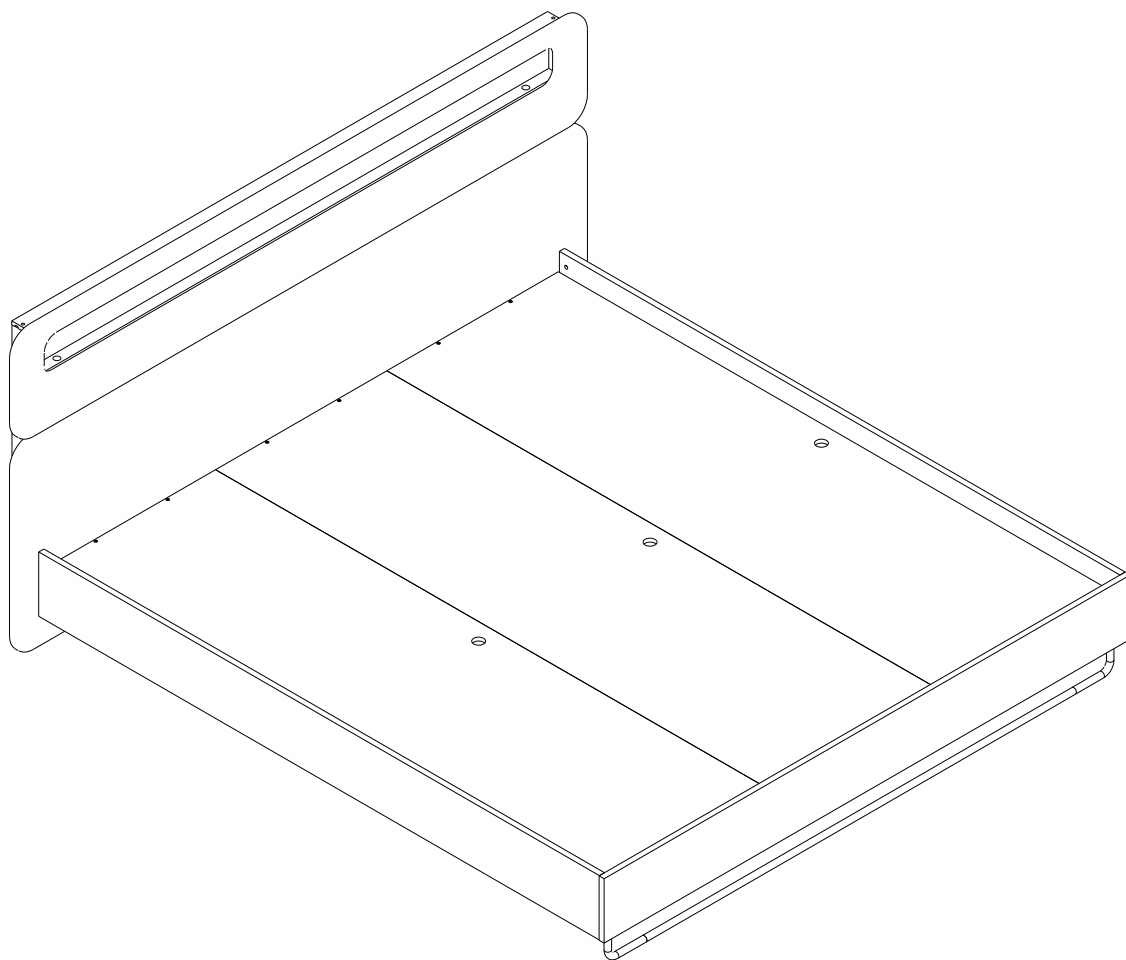

CONNECT SYSTEM

1

3

2

(Connecting bolts)

WHEN FITTING CAMS
 ENSURE STARTING POSITION IS CORRECT
 BEFORE YOU INSERT CONNECTING BOLT
 TURN CLOCKWISE UNTIL SECURE

✓				✗
↑	CORRECT	WRONG		

M4x16mm.

i

40mm.

☹

✗

EQ

☺



✓

M6x45mm.

M6


M6

M4x16mm.

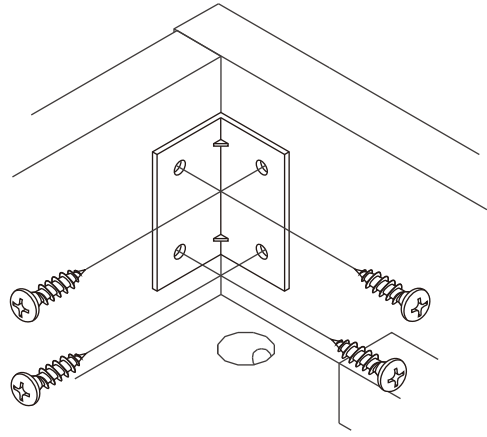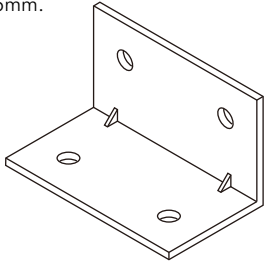

HARDWARE


-BODY SET



x 4




x 4




#8x35
x 4



M4x16mm.
x 27

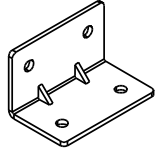

x 2




x 4



#M6
x 4




#M6
x 4




TF+M6x45
x 4



M4x16mm.
x 8




M4x30mm.
x 48

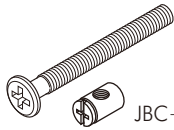

JBC+M6x60
x 6



No.1
x 3



#TFL4 M8x50
x 4



#M8
x 4



#M8
x 4




M4x13mm.
x 6


ASSEMBLY

-BODY SET


1.

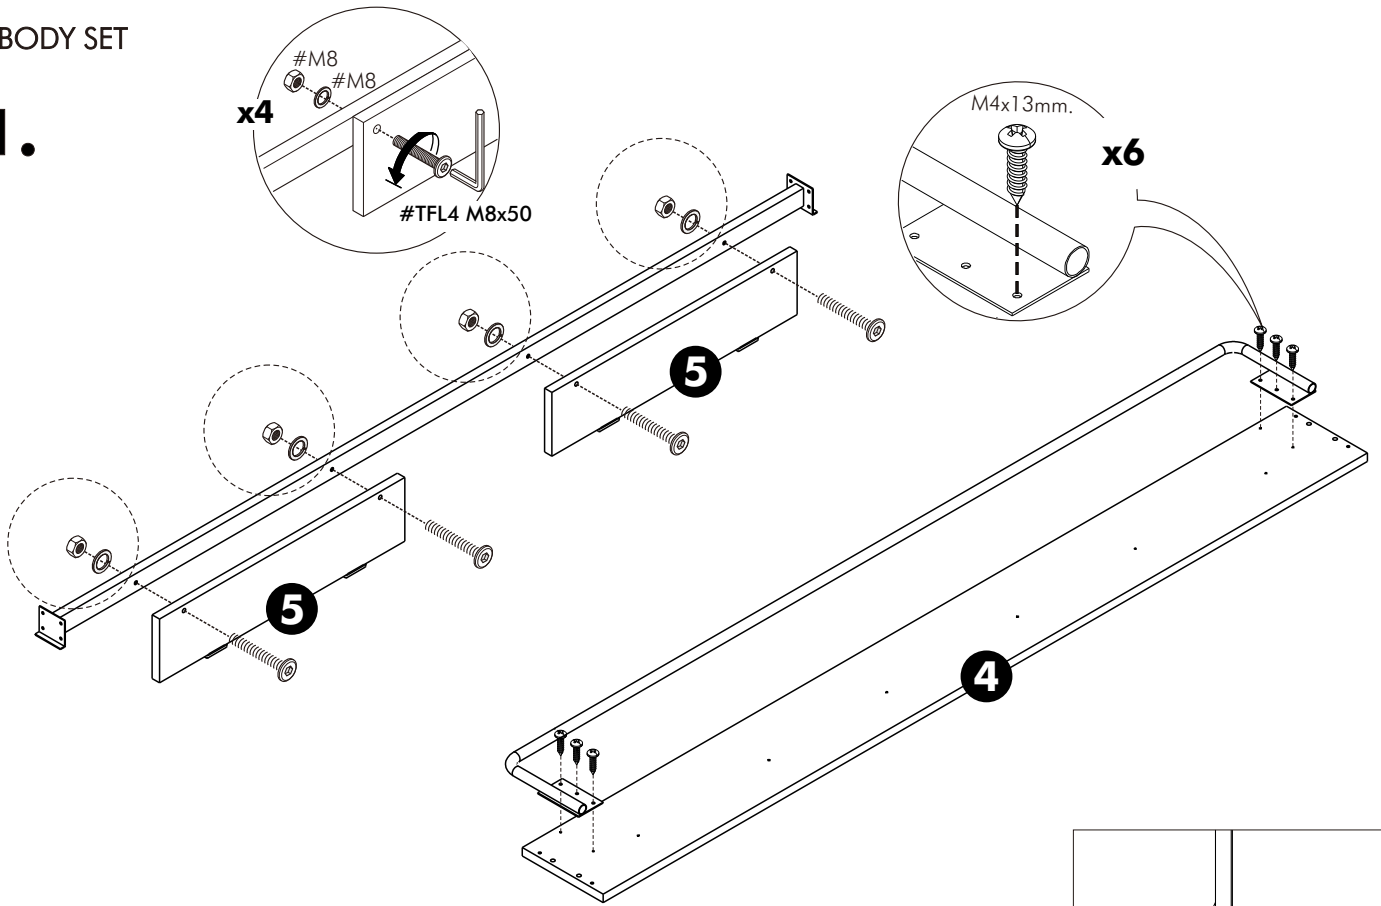


2.

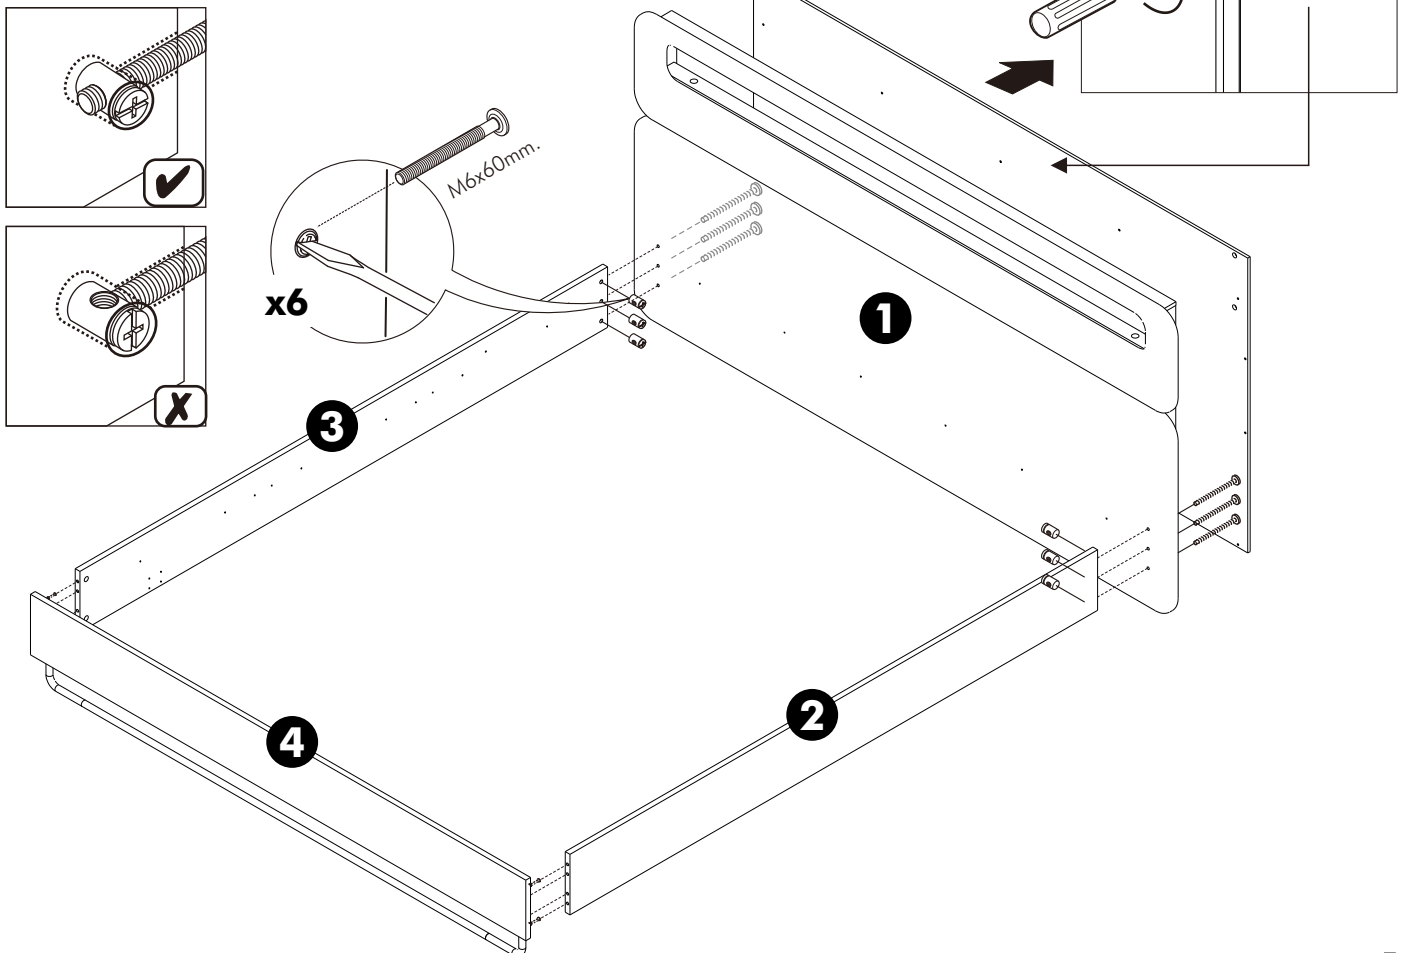


3.

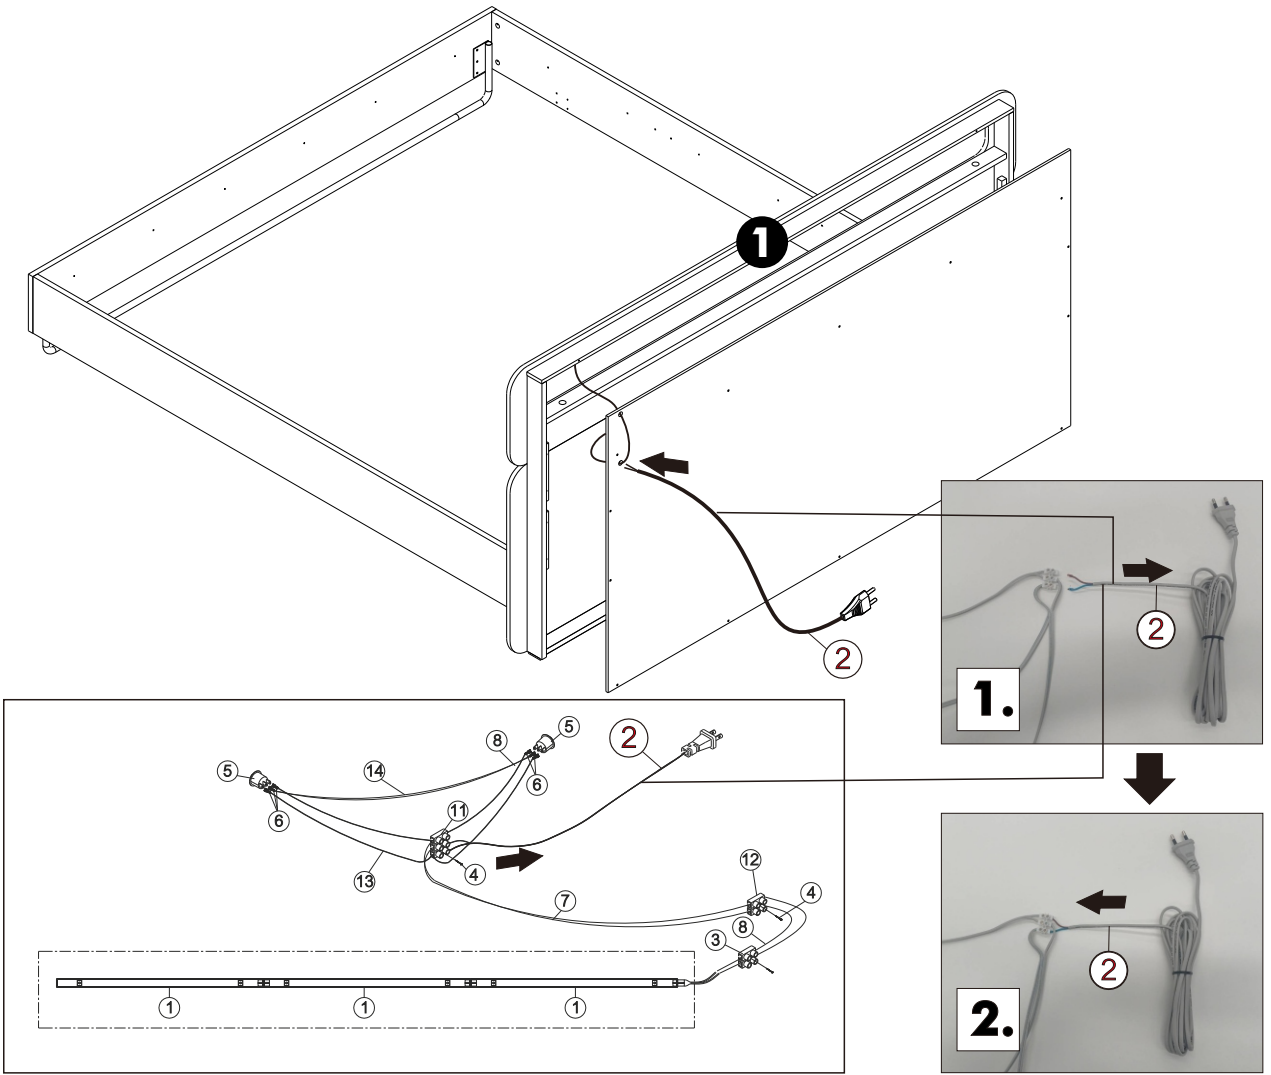


4.

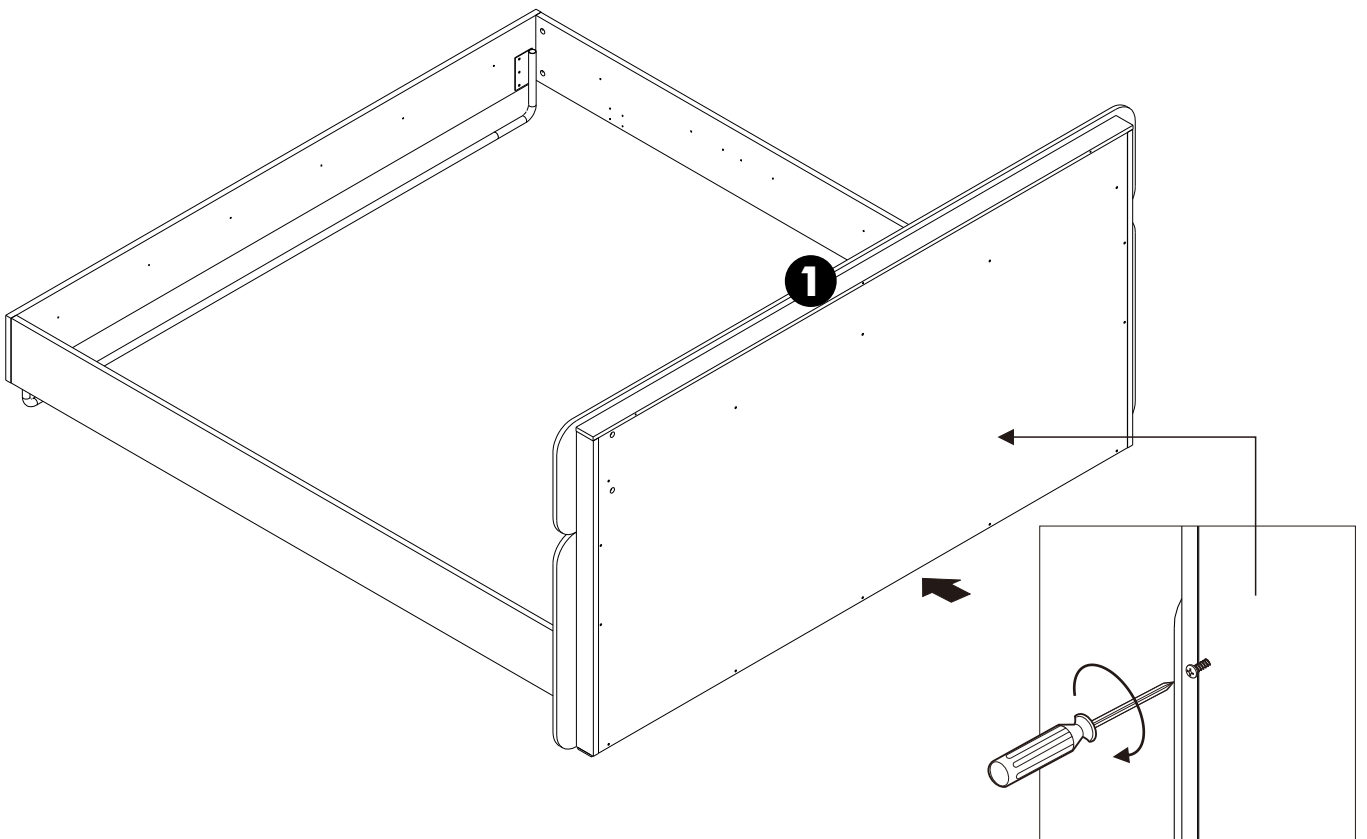

5.

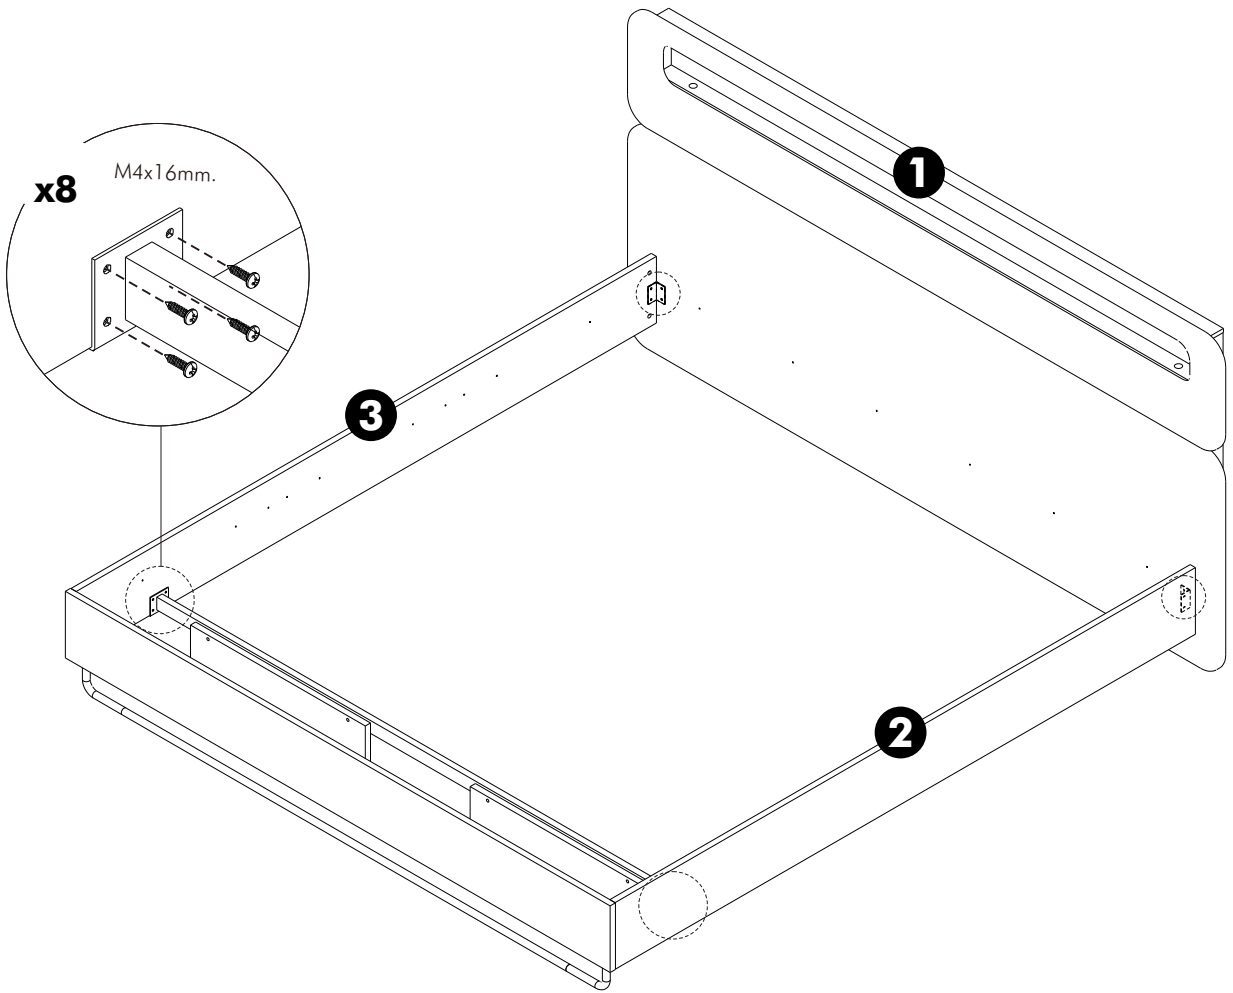

6.

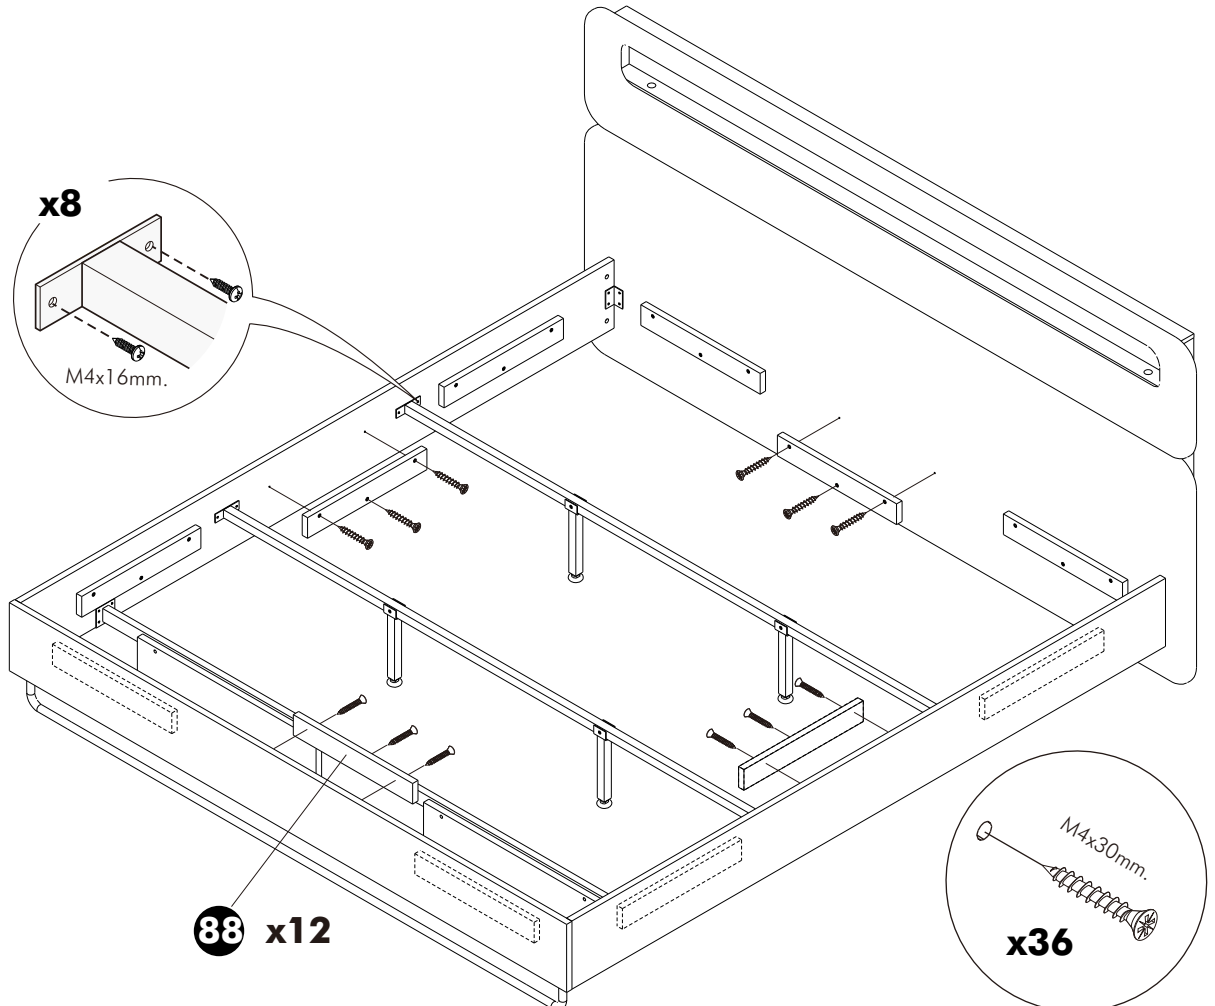

7.

