



DOLCE

BED 6 ft.

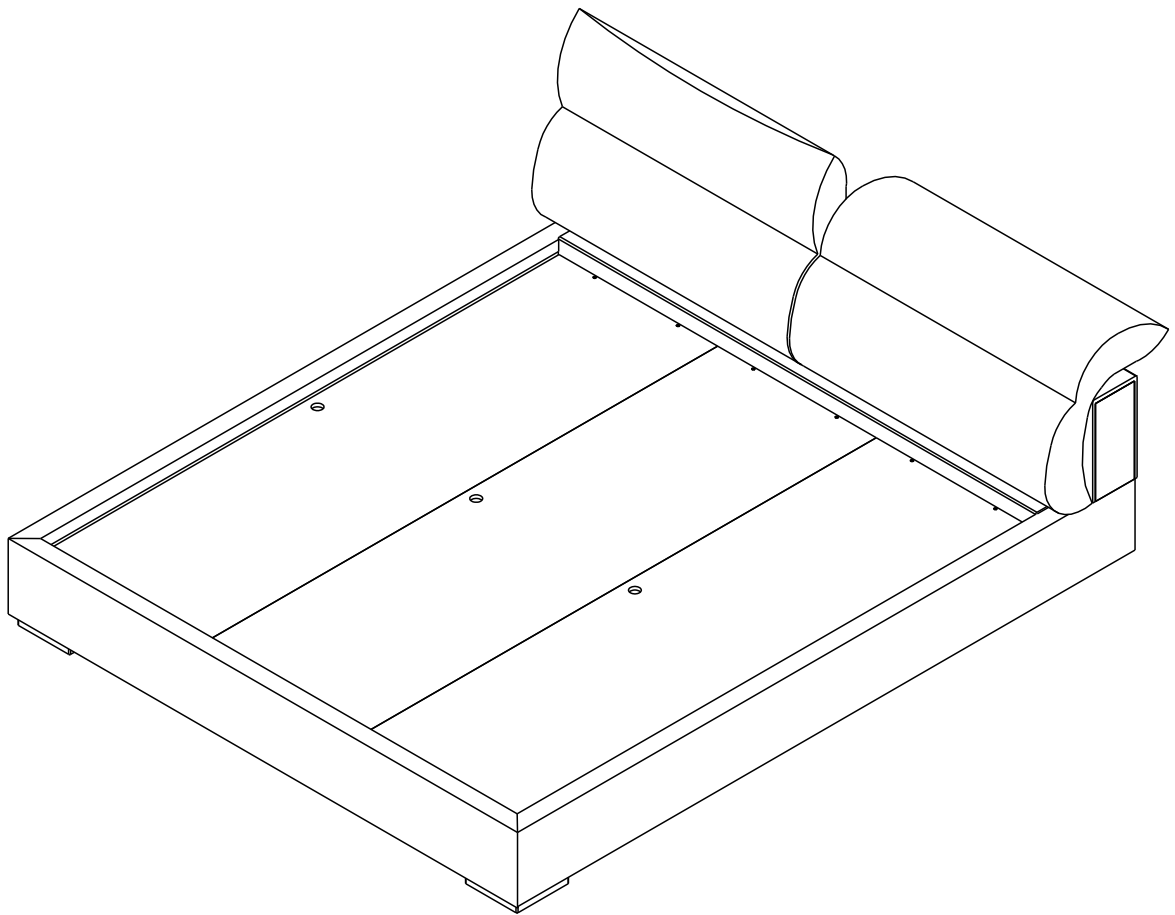


CONNECT SYSTEM


1

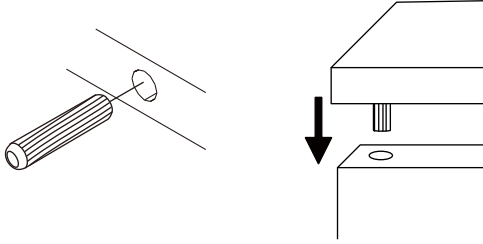

2

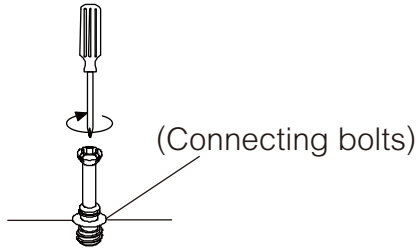

3

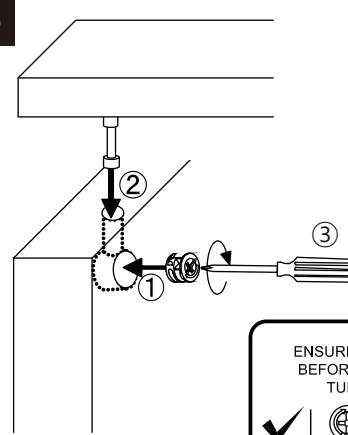

WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE



CORRECT

WRONG




M6x40mm.





#ID.7 mm.



M6

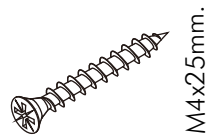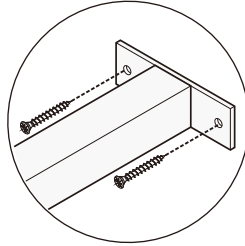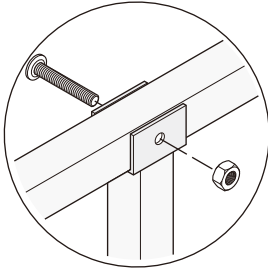


M4x25mm.

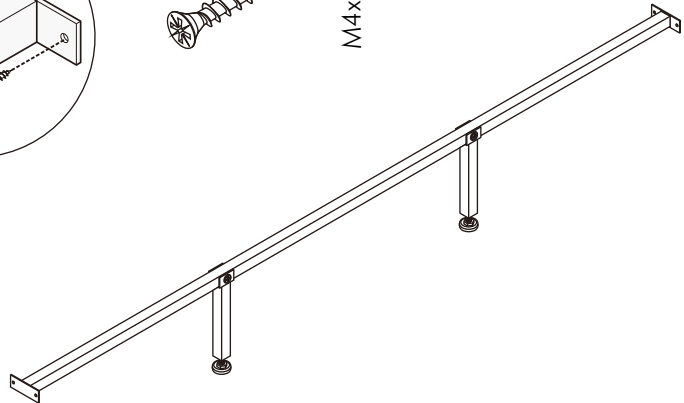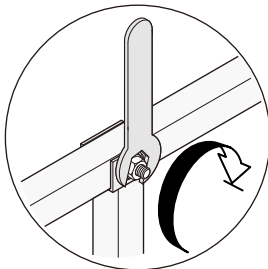


HARDWARE


-BODY SET



x 4

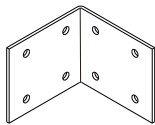

x 4

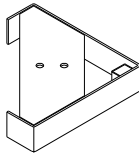

x 2



ID8.4mm.

x 20



#M6

x 4



ID 7mm.

x 4




TF+M6x40

x 4




P+M8x20mm.

x 20



M4x35mm.

x 36




M4x25mm.

x 40


ASSEMBLY

-BODY SET


1.

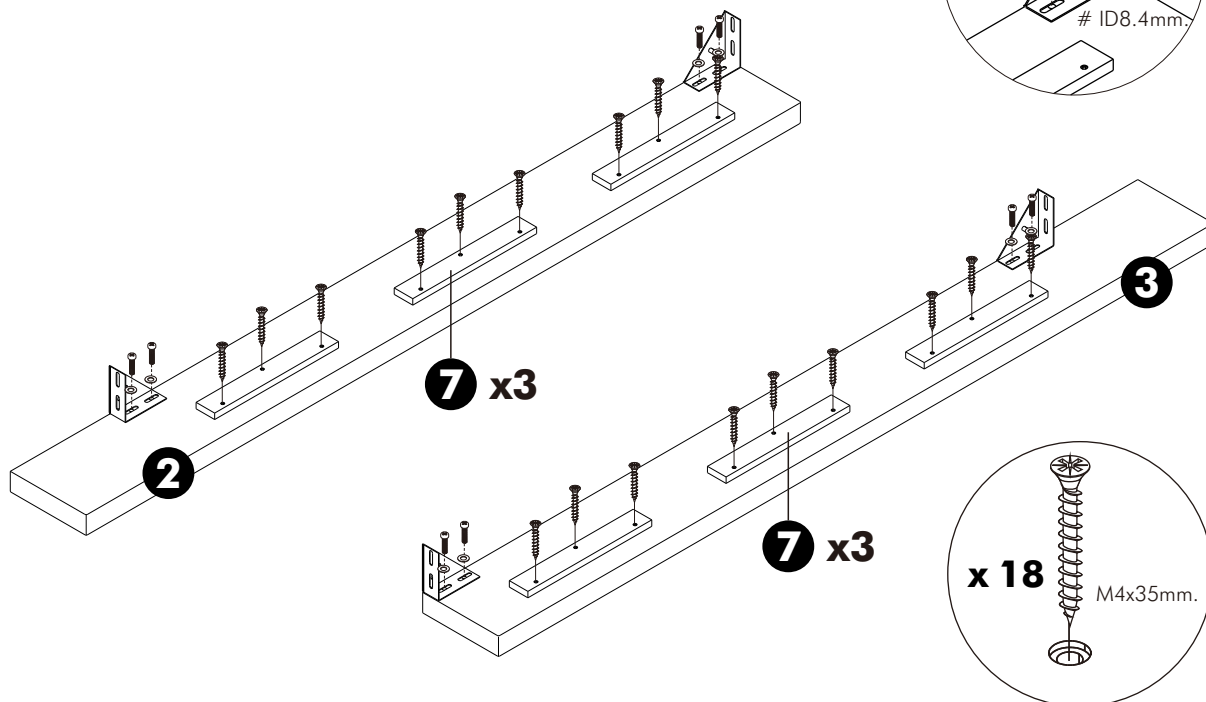


2.

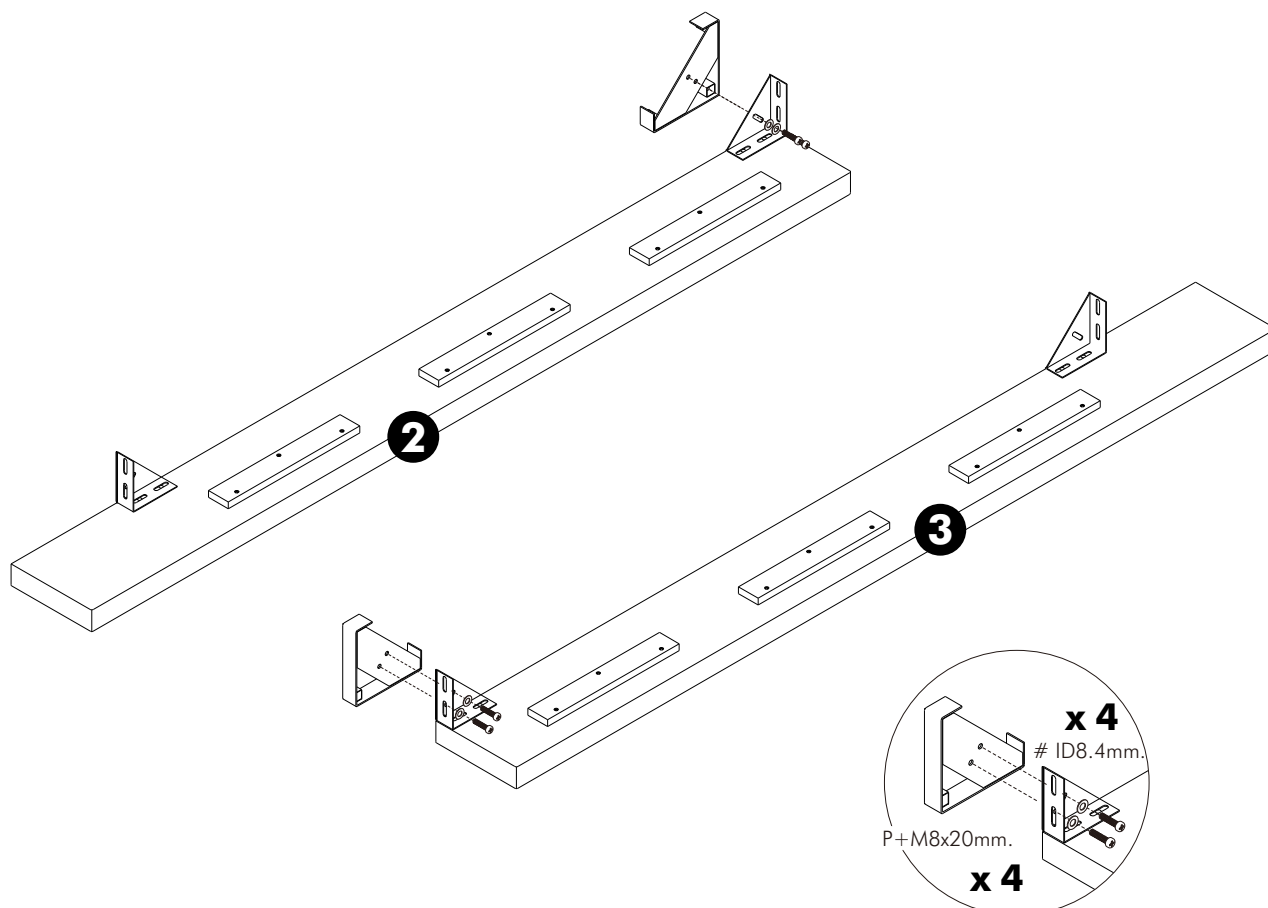


3.

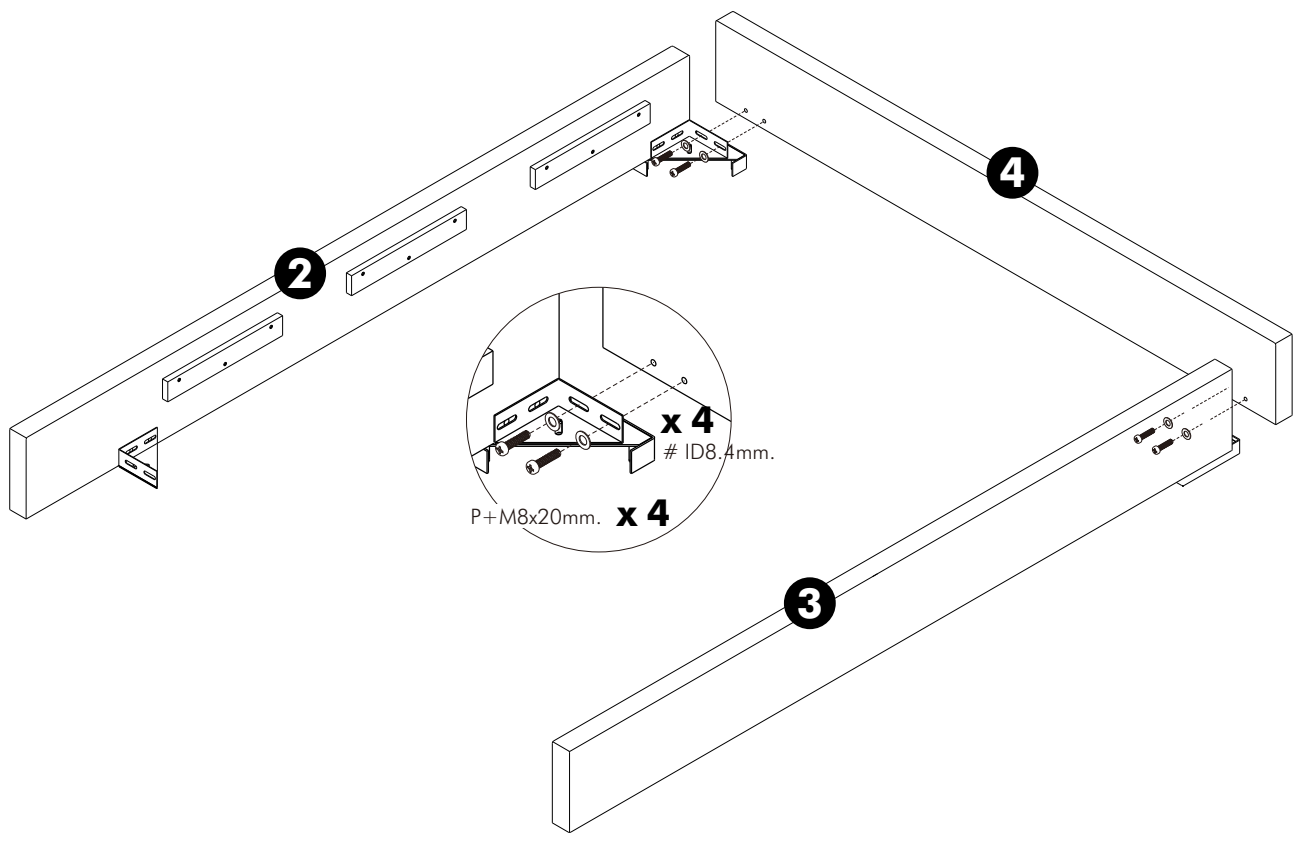


4.

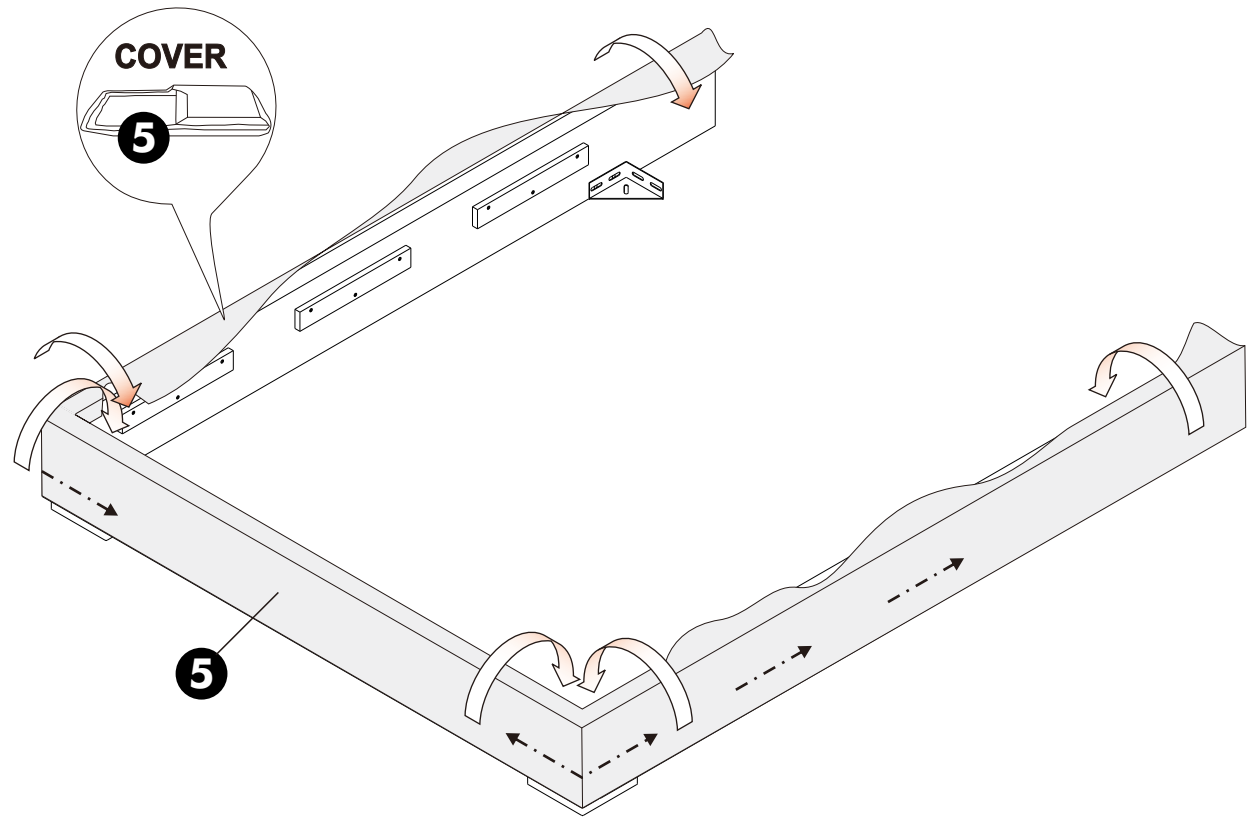


5.

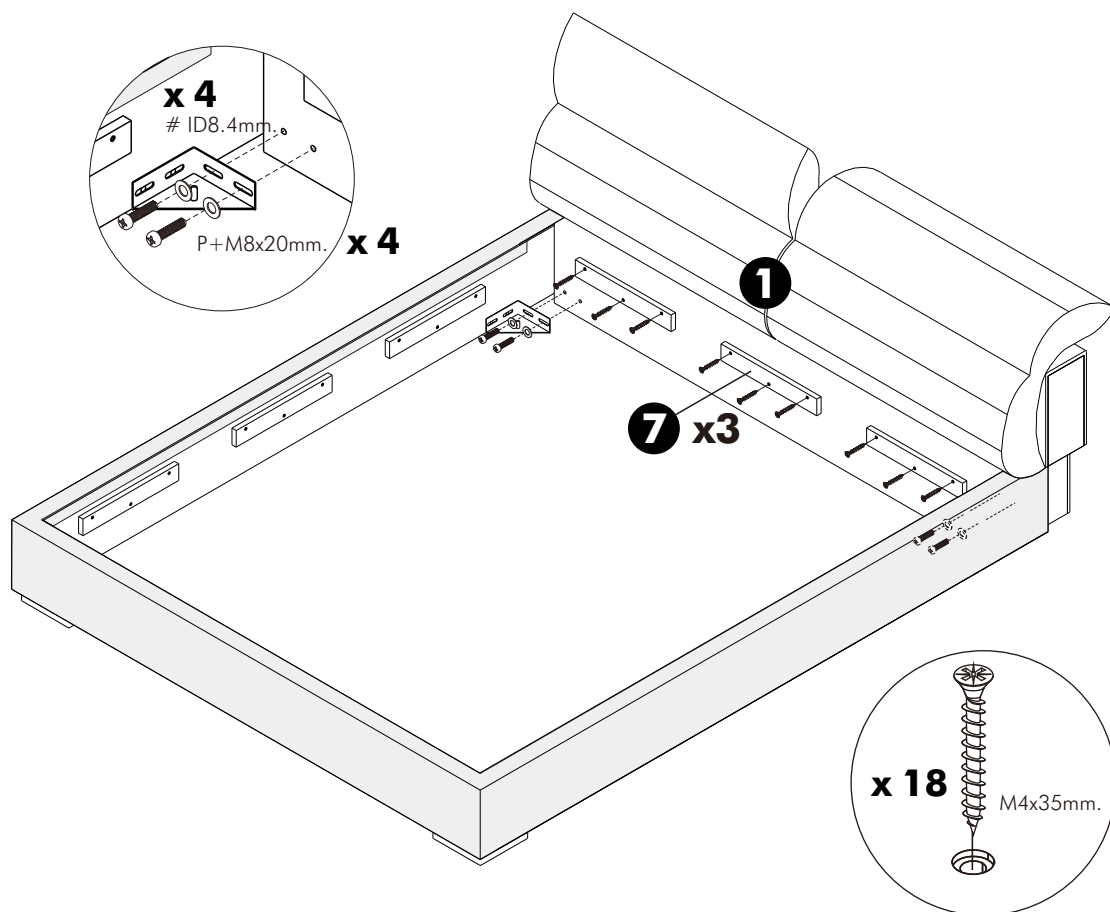

6.

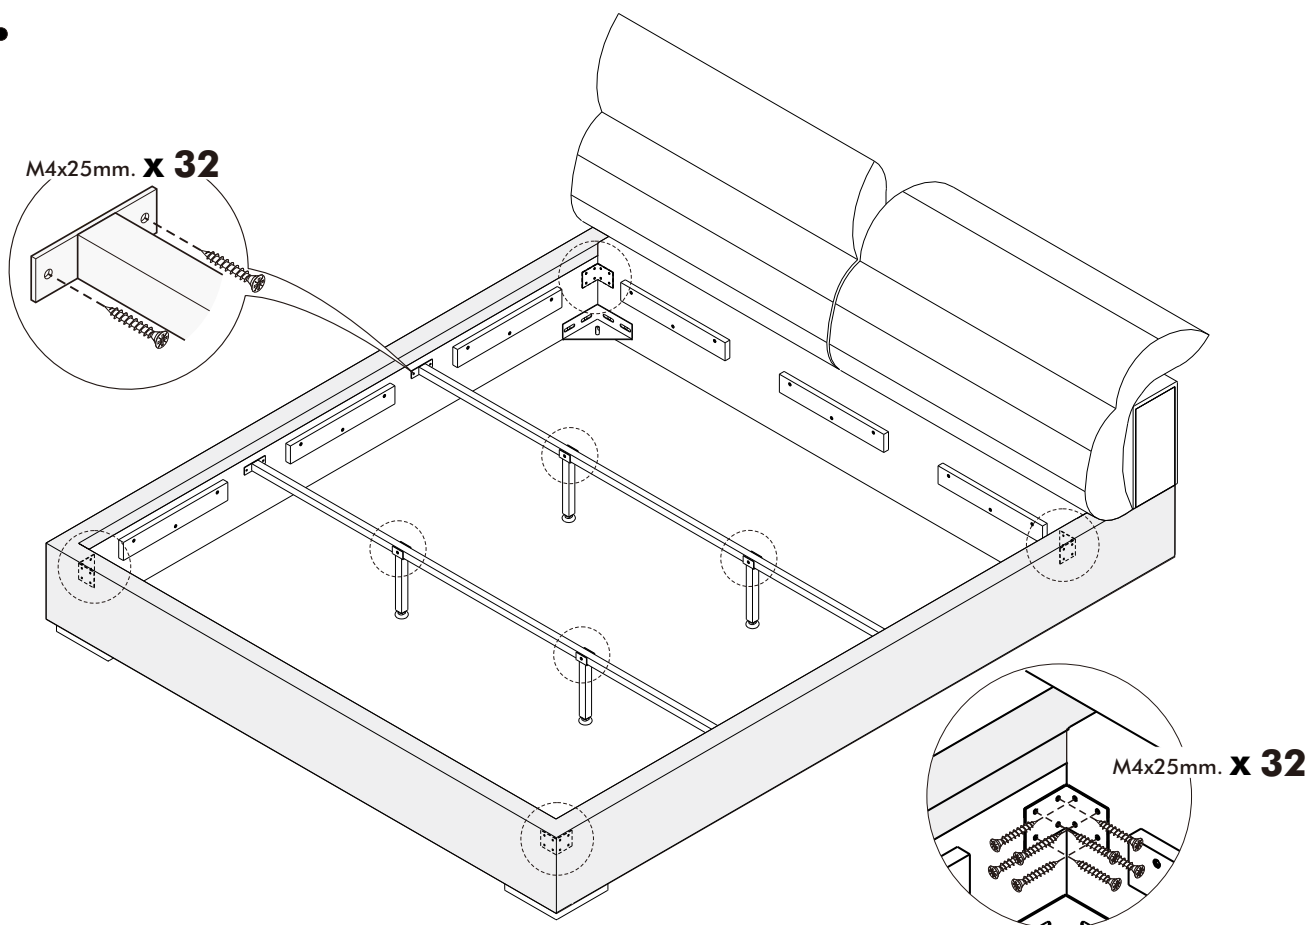

7.

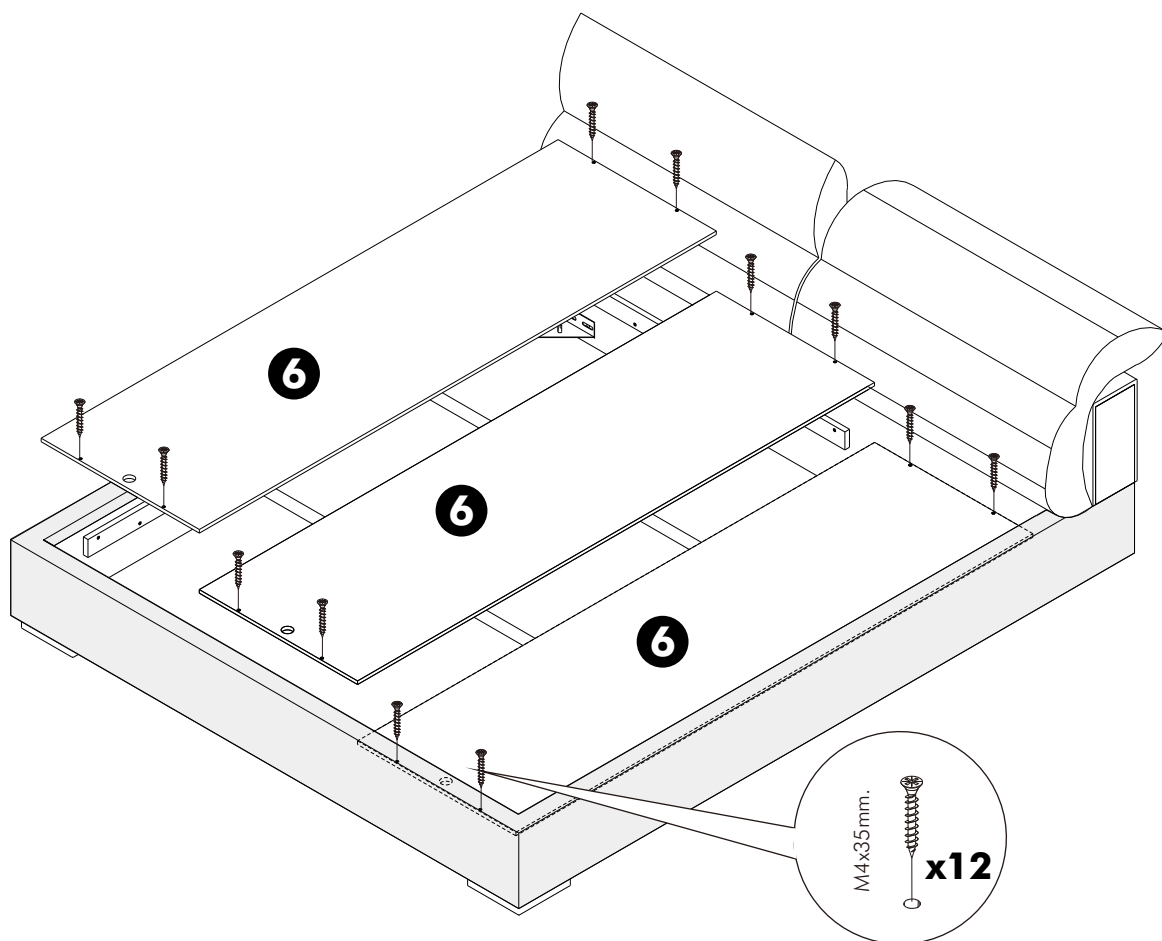

8.

