


VELO

BED 6 ft.

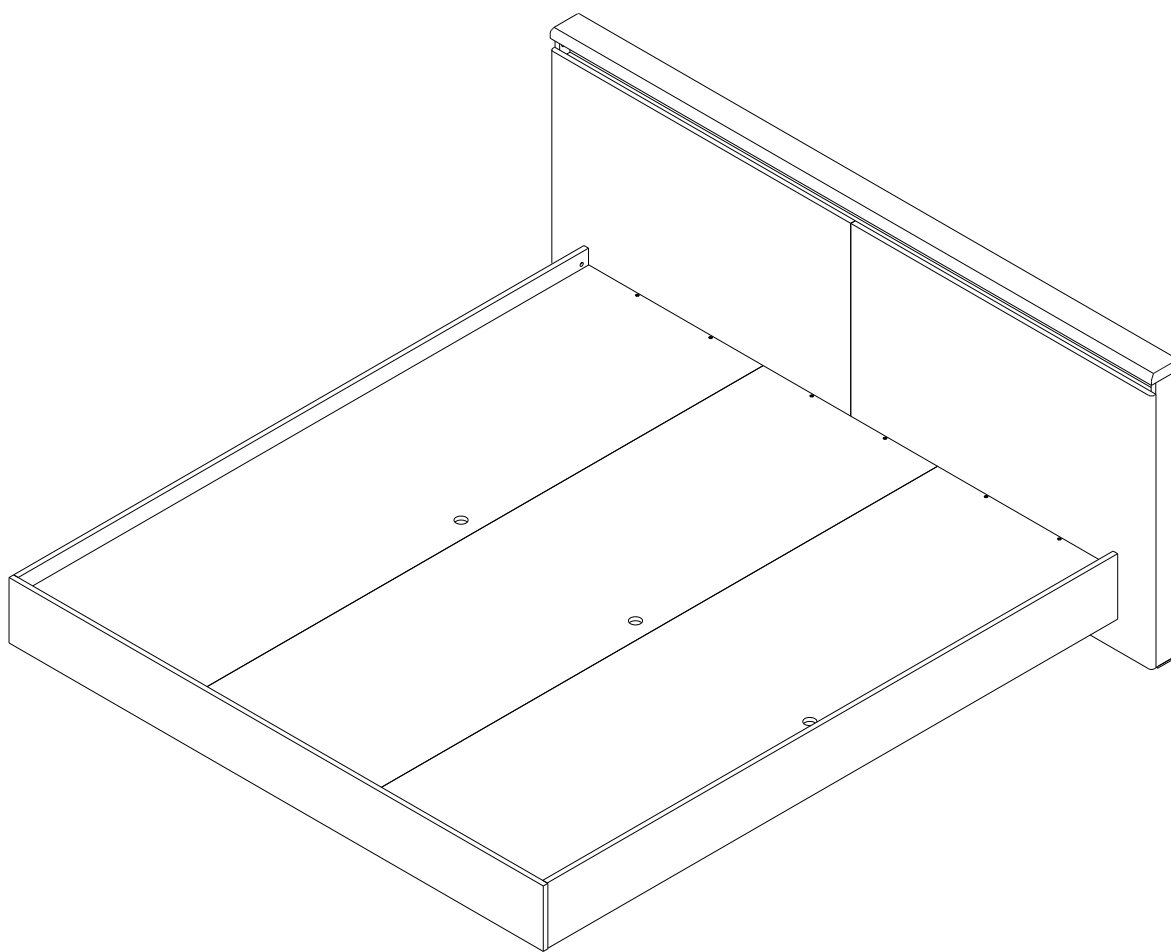

CONNECT SYSTEM

1

3

2

(Connecting bolts)

WHEN FITTING CAMS
 ENSURE STARTING POSITION IS CORRECT
 BEFORE YOU INSERT CONNECTING BOLT
 TURN CLOCKWISE UNTIL SECURE

✓				✗
↑				
CORRECT		WRONG		

M4x16mm.

i

40mm.


EQ



M6x45mm.


M6




M6

M4x16mm.

 P+M4x16mm.

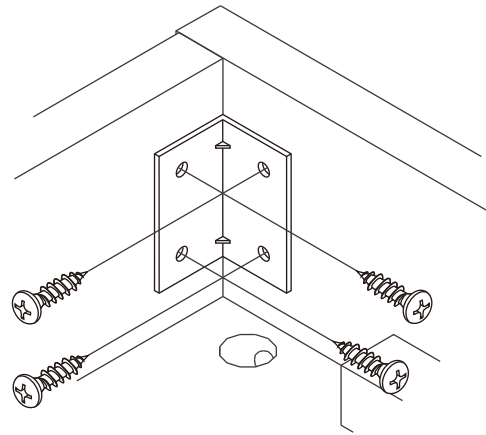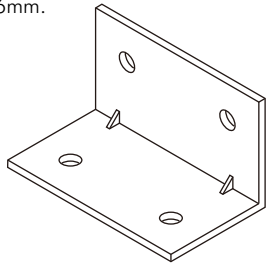


 M4x16mm.

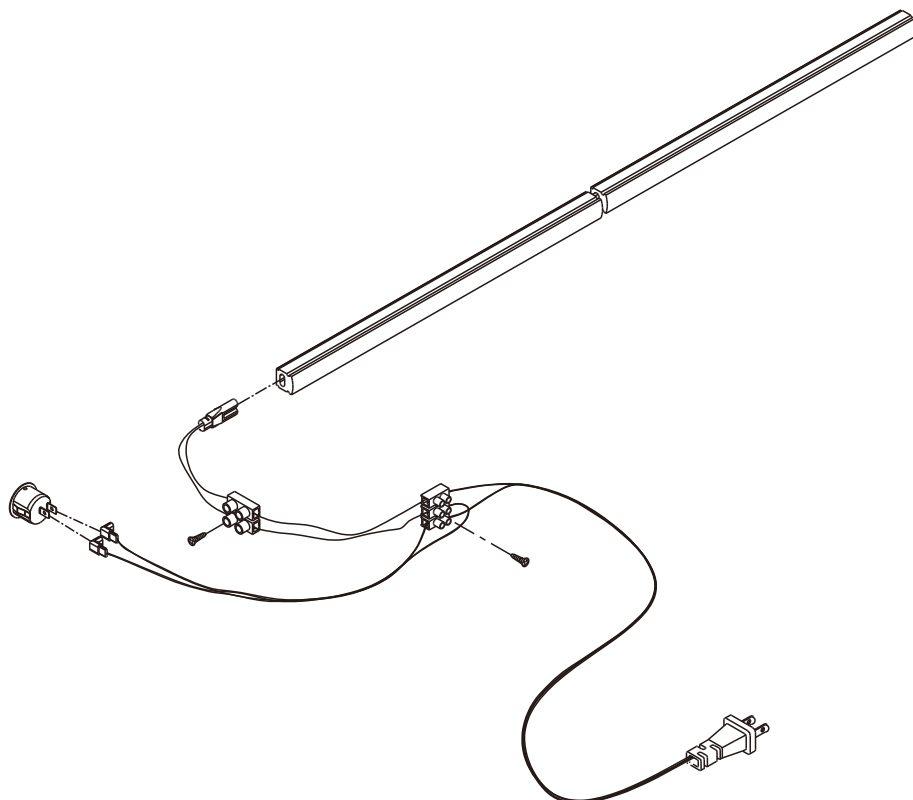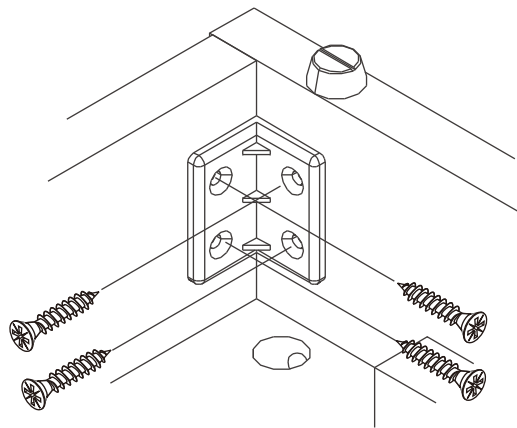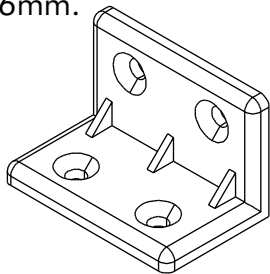

HARDWARE


-BODY SET



x 4




x 4




#8x35
x 8



M4x16mm.
x 35

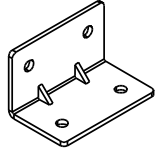

x 4




x 4



#M6
x 4



#M6
x 4




TF+M6x45
x 4



M4x16mm.
x 32




M4x30mm.
x 56

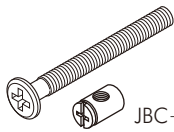

JBC+M6x60
x 6



No.1
x 3



#TFL4 M8x50
x 4



#M8
x 4




#M8
x 4



M4x13mm.
x 6




x 2



x 6

-LAMP SET

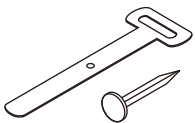

x 15/15




5x3/4"mm.
x 2



x 1



x 1

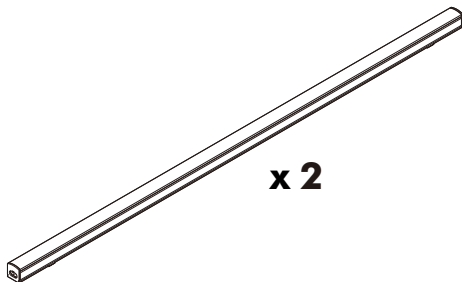


x 2


ASSEMBLY

-BODY SET


1.

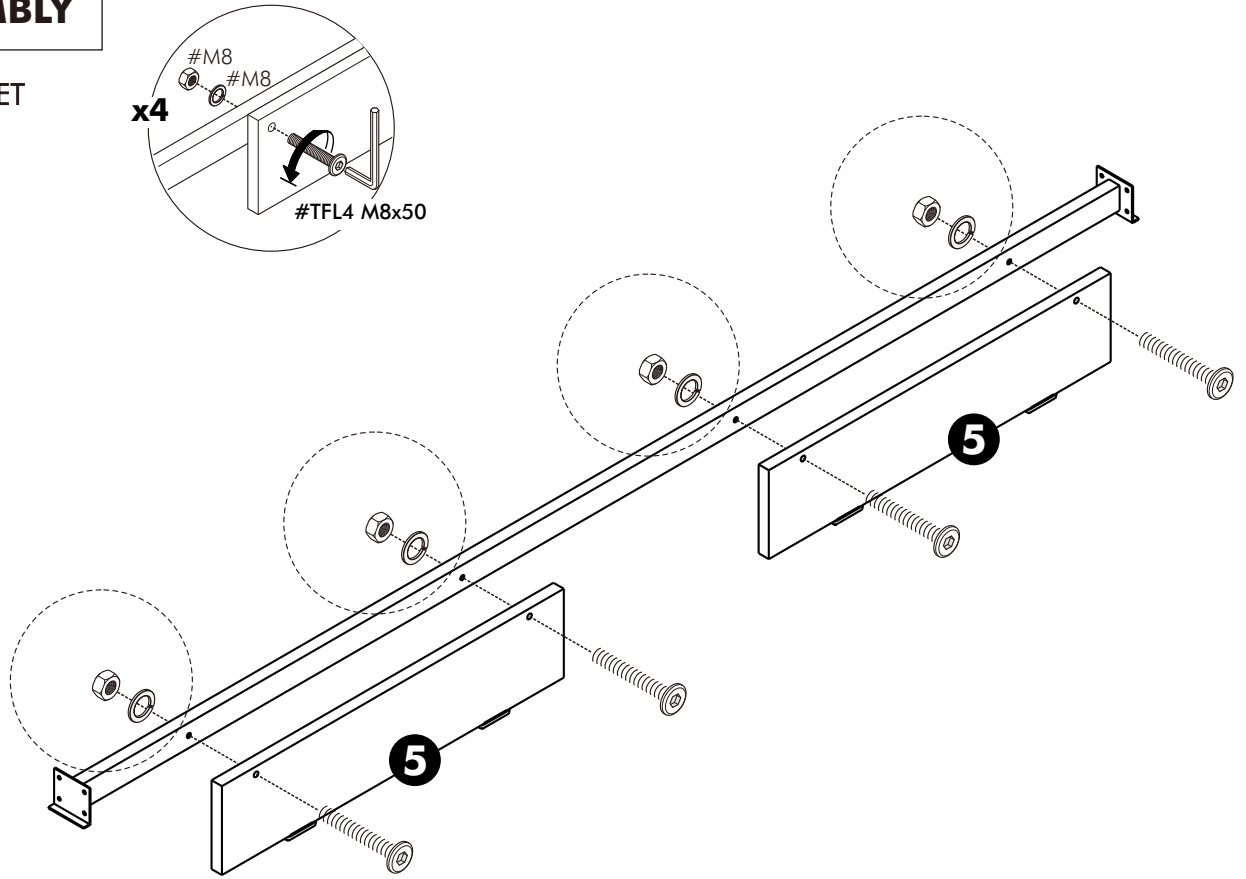


2.

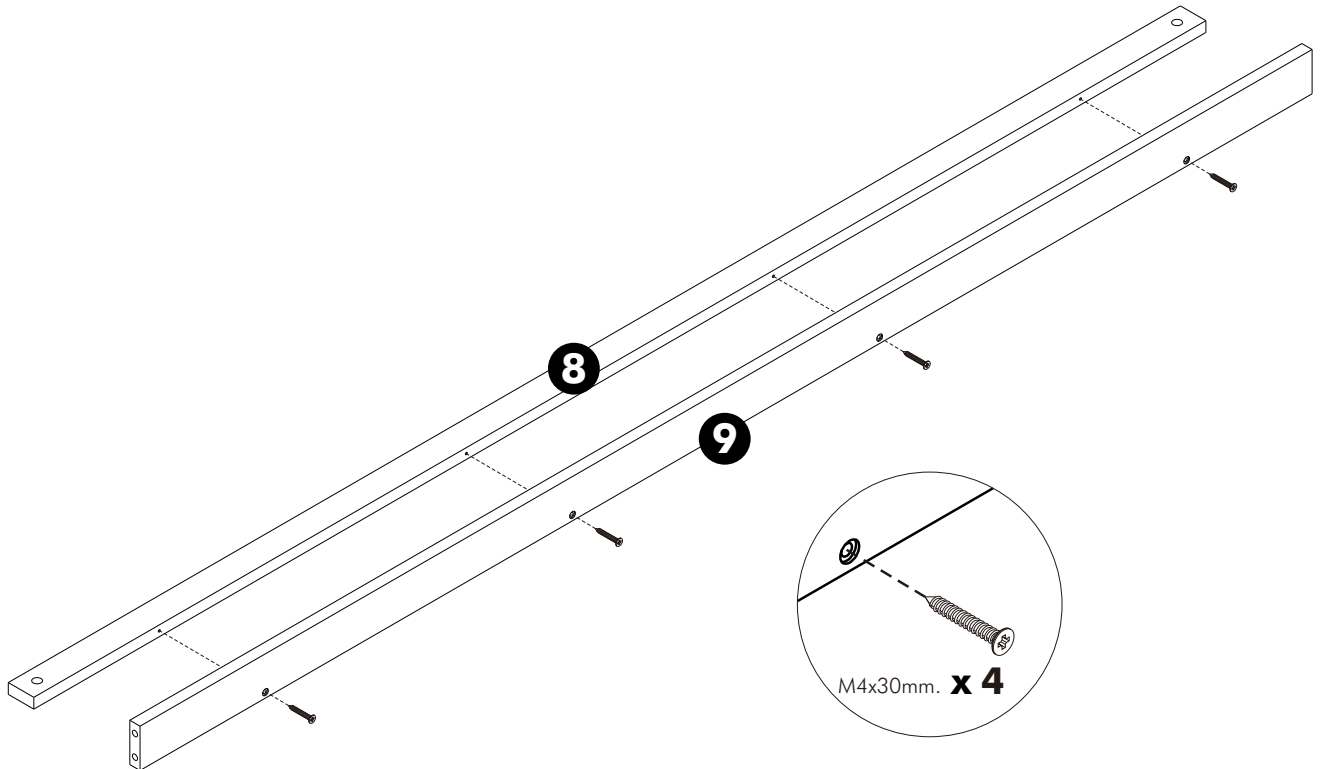


3.

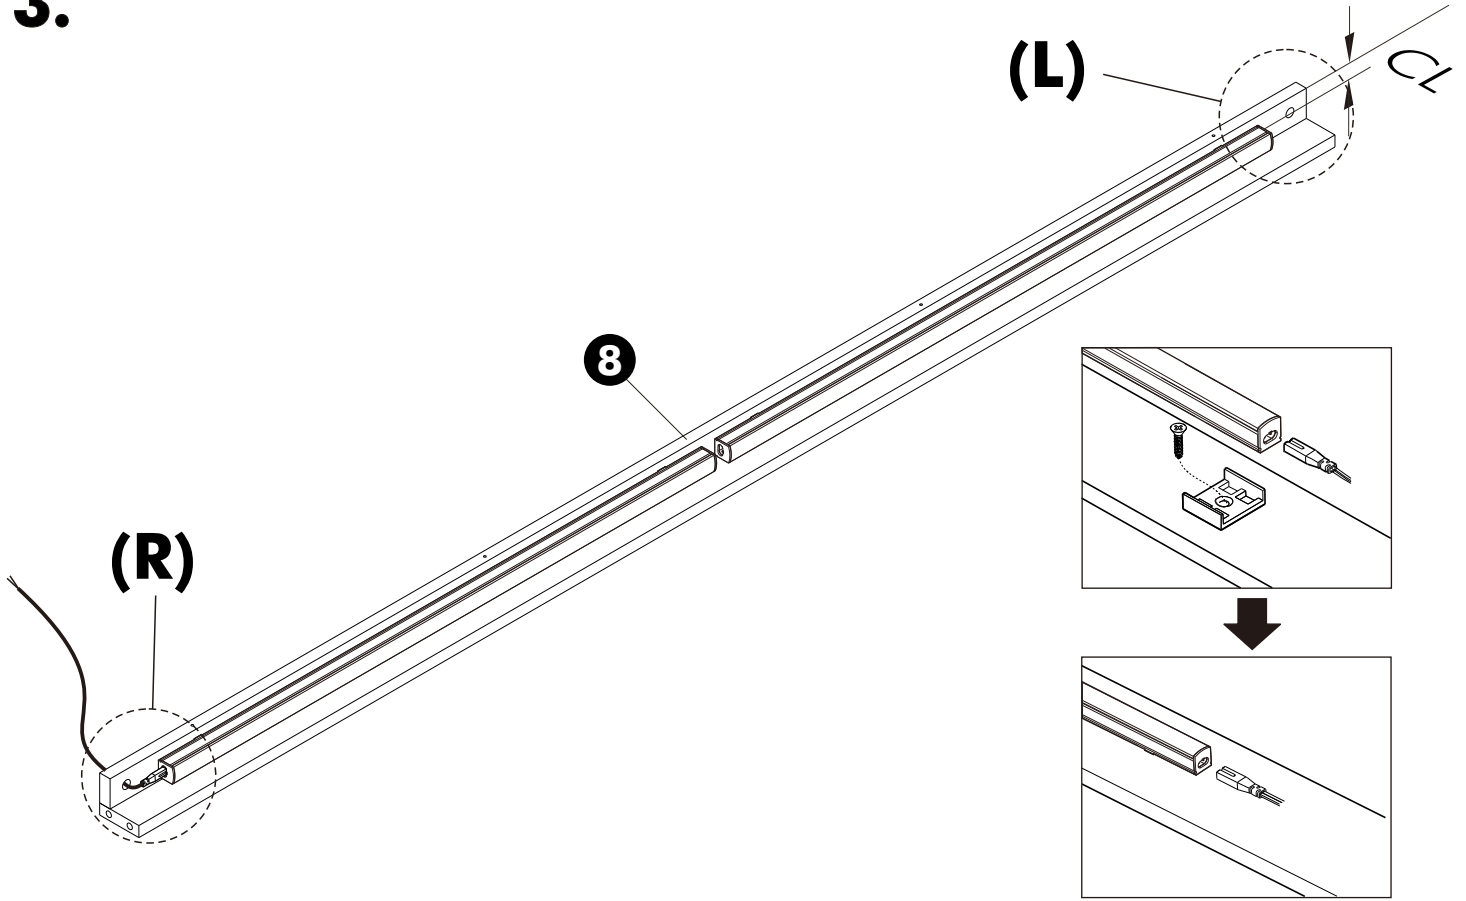


4.

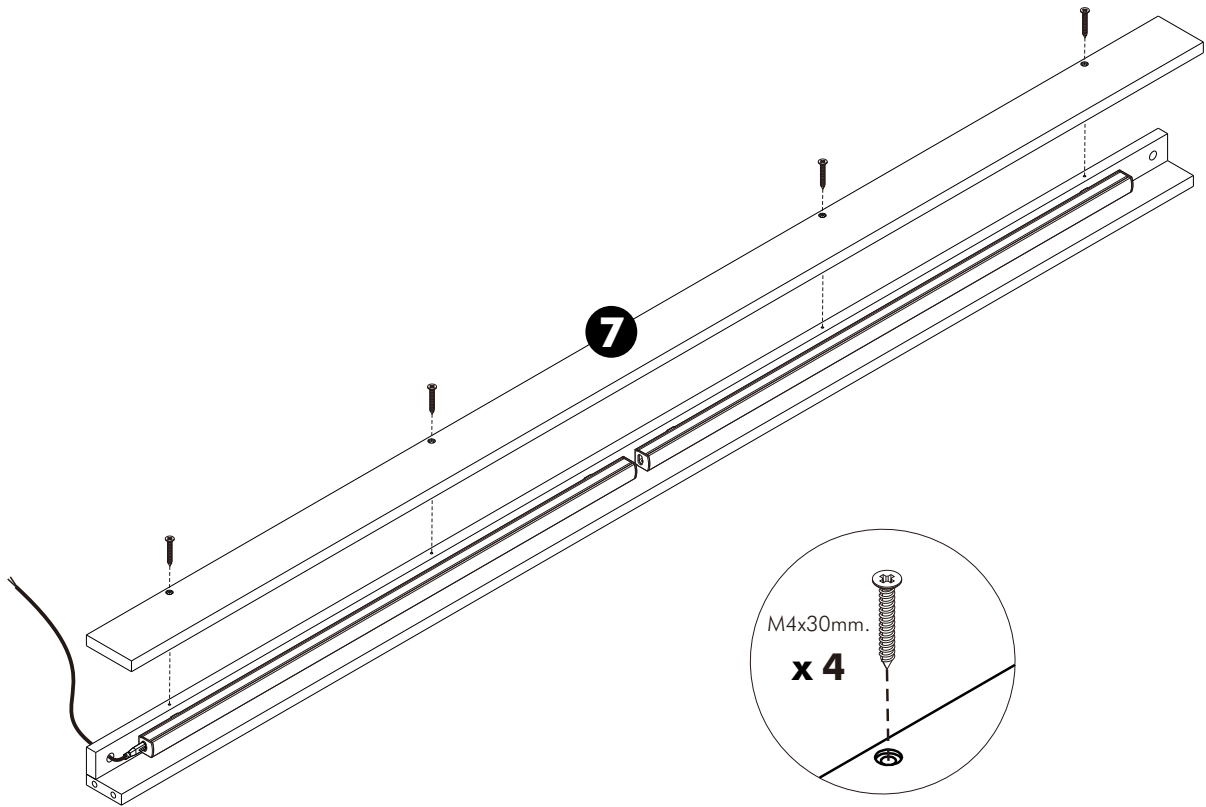


5.

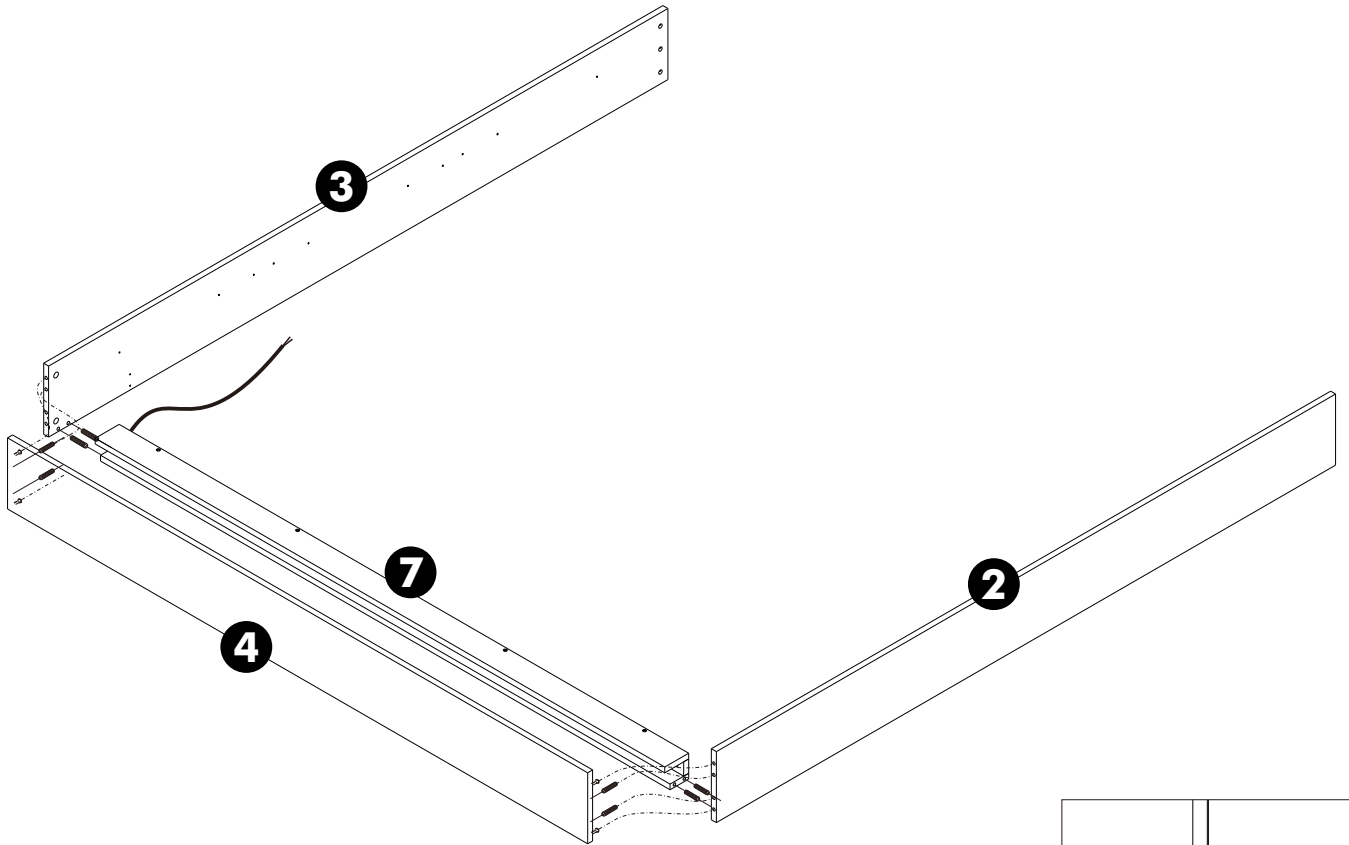


6.

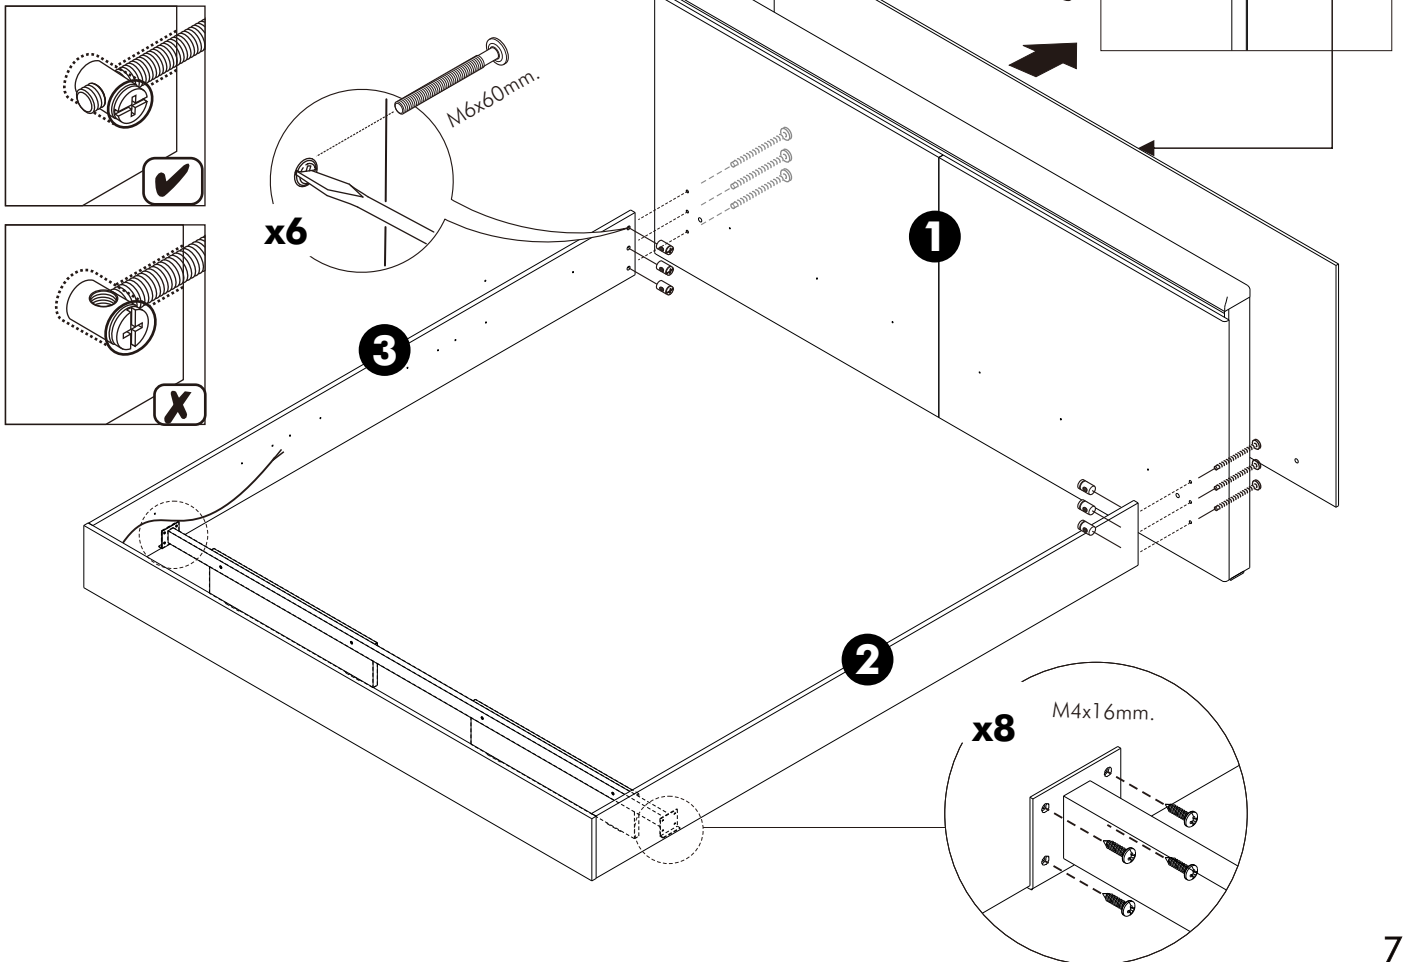


7.

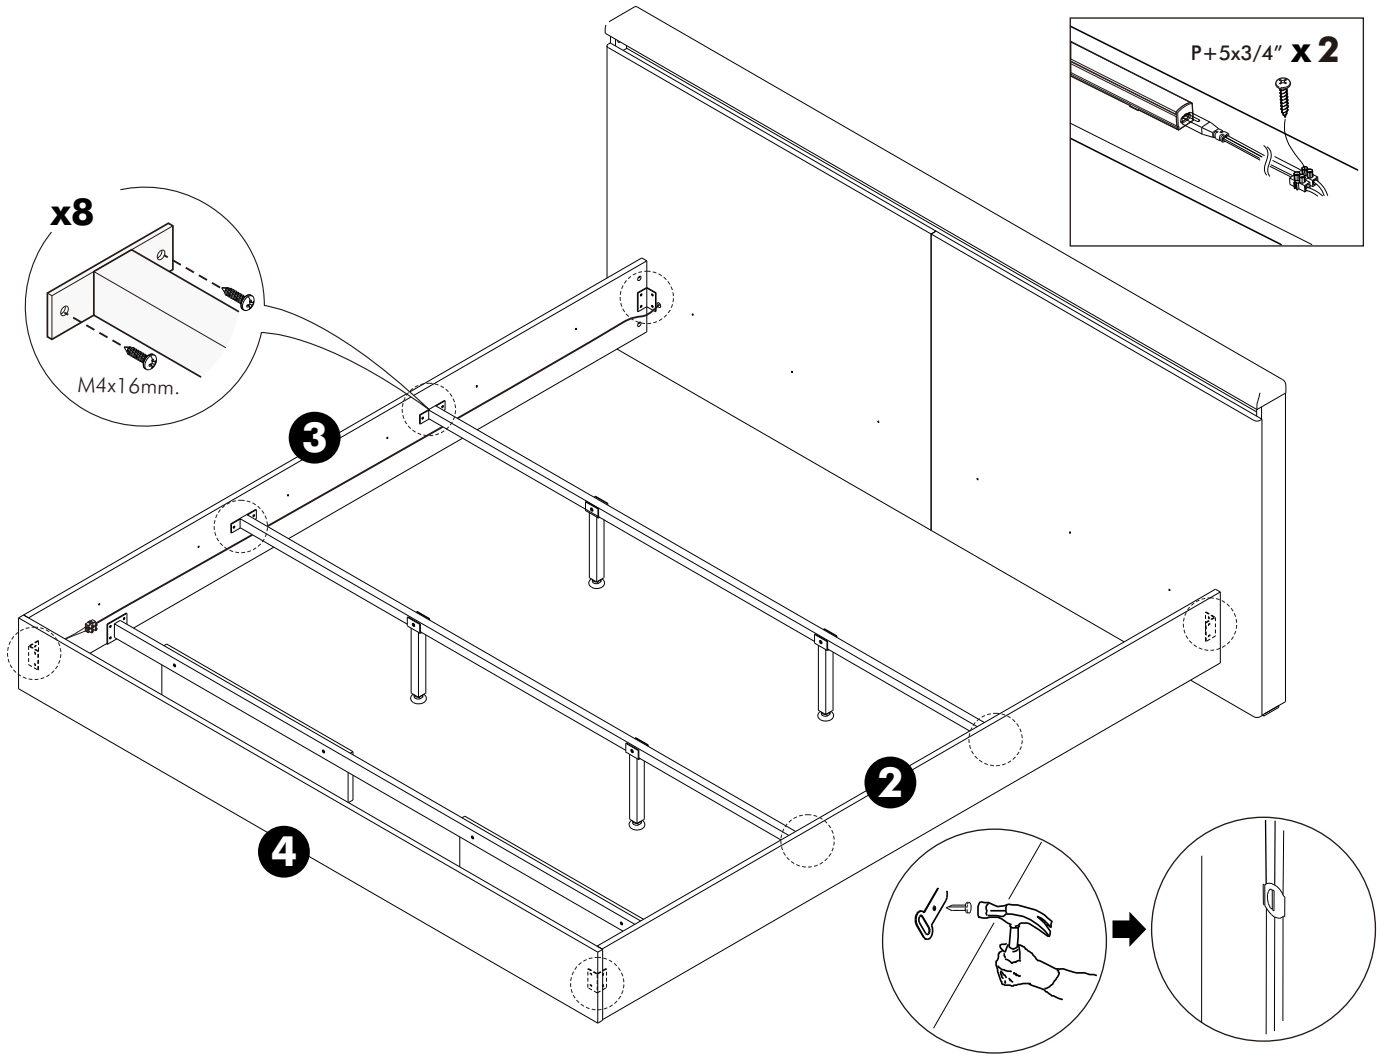

8.

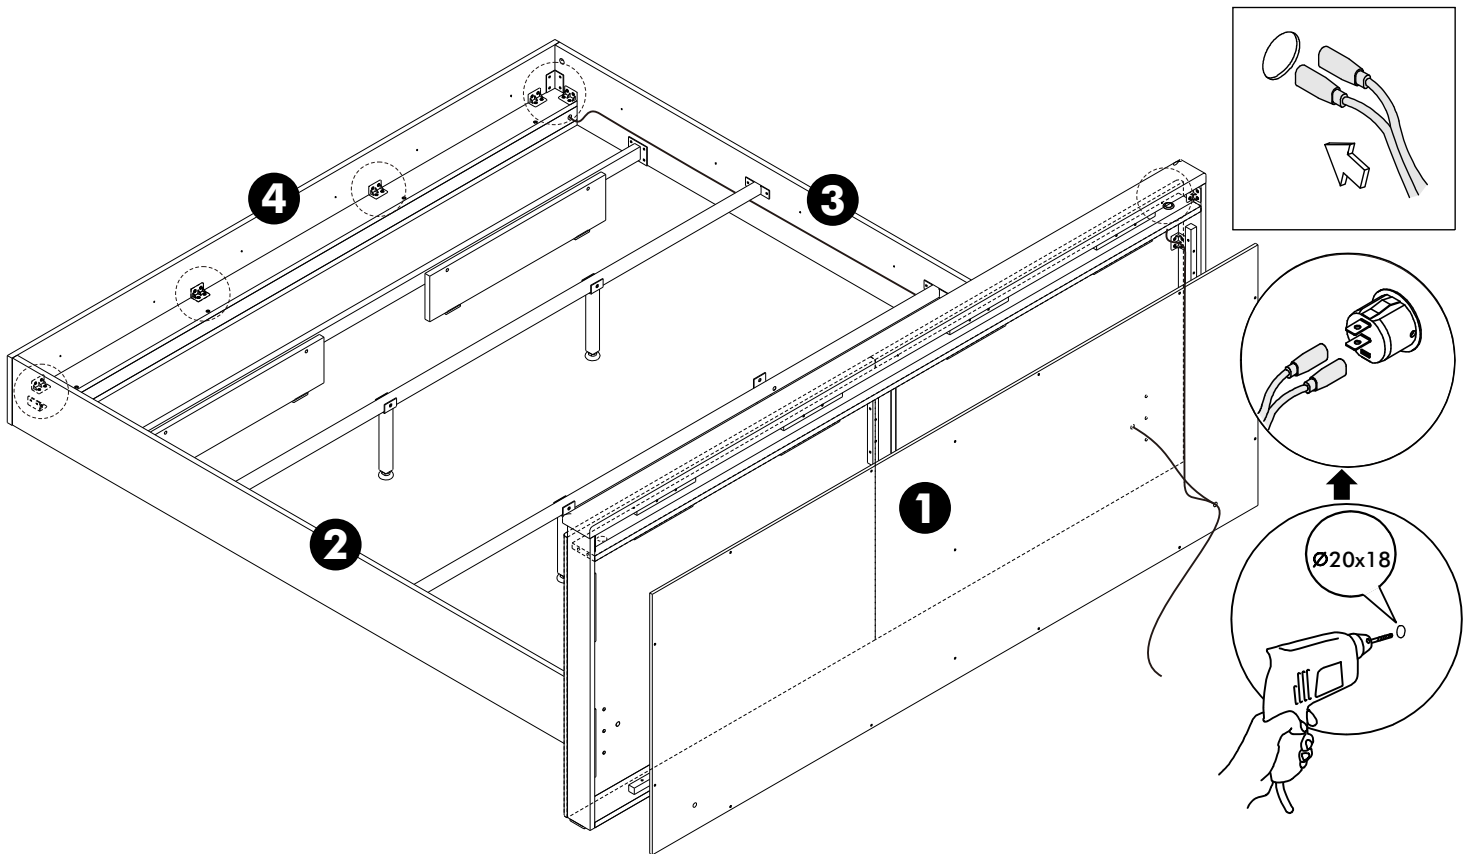

9.

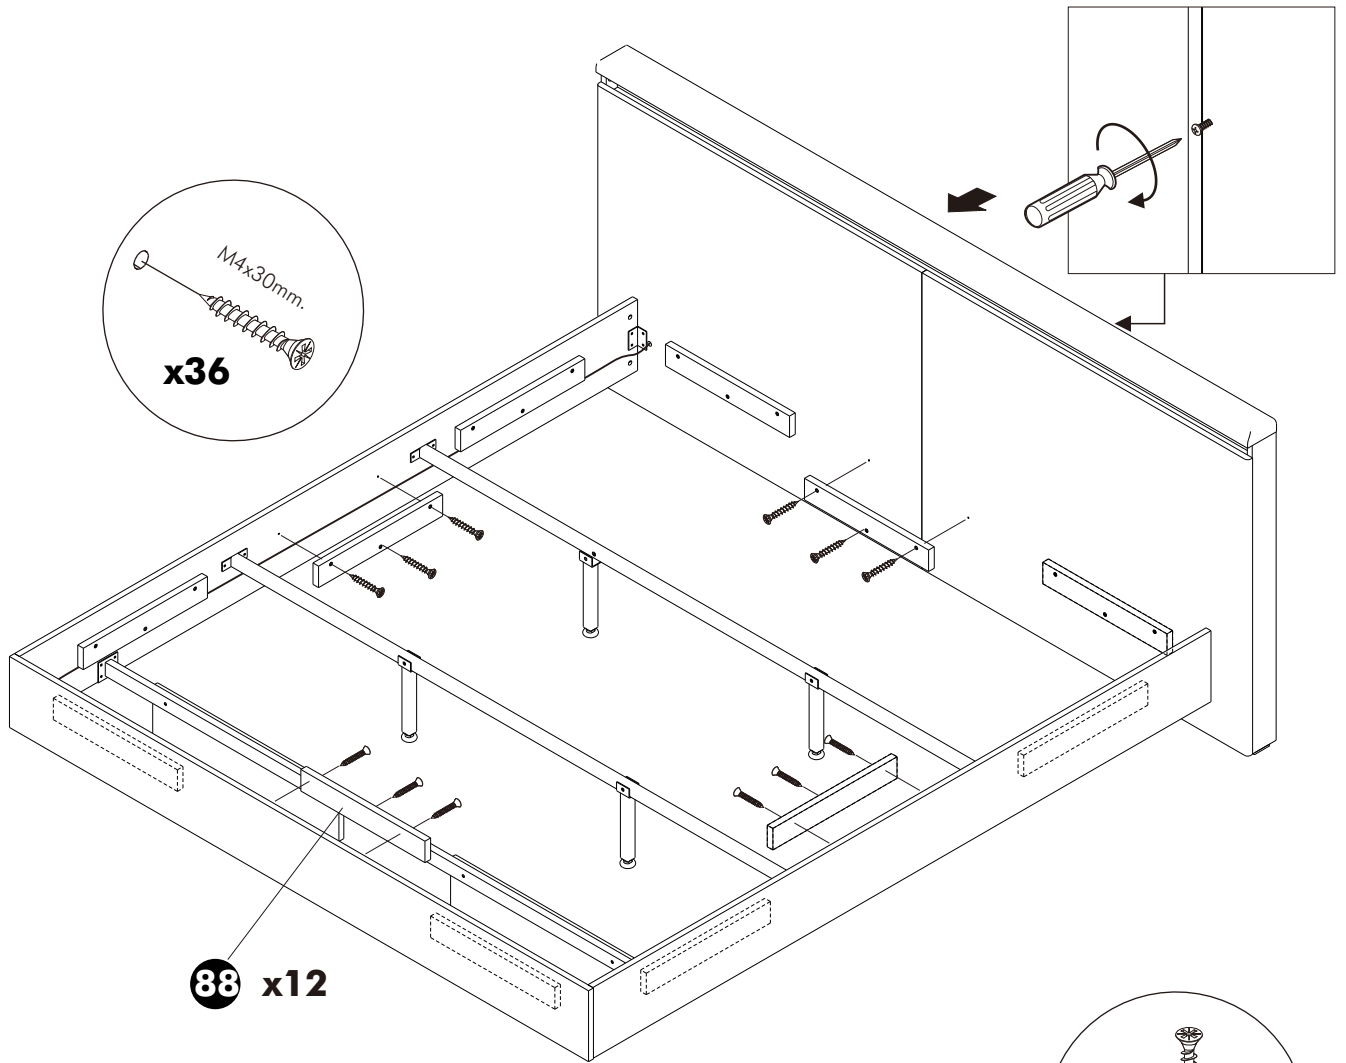

10.

